

Analysis of a Composite Blade Using a Multiple Model Method

This model is based on the Structural Mechanics Module Application Library model Vibrations of an Impeller. The model herein, however, uses a simplified standalone blade geometry, but the boundary conditions and loading are taken from the original model. The model compares three commonly used methods for the analysis of laminated composite shells:

- I An equivalent single layer theory, using first-order shear deformation theory (ESL-FSDT)
- 2 A layerwise elasticity theory
- **3** Multiple model methods

The ESL theory reduces a 3D continuum to an equivalent 2D description, thereby reducing the size and computational time involved in solving a problem. The first-order shear deformation theory (FSDT) is implemented in the Linear Elastic Material, Layered feature in the Shell interface.

The layerwise elasticity theory is implemented in the Layered Shell interface. The theory considers a composite as a 3D continuum, giving more accurate resolution of stresses and strains, particularly in the through-thickness direction.

The ESL and layerwise theories each have advantages and disadvantages, in terms of solution accuracy and solution time, for different types of problems. By judiciously combining the use of the two theories in a single model, it is possible to obtain high accuracy results, at a low computational cost. The approach of combining the theories in this way is called a multiple model method, or a global-local analysis. For more details regarding multiple model methods, see Ref. 1.

Model Definition

In this model, you will perform an eigenfrequency analysis and a frequency-domain analysis of a composite blade, using the three modeling approaches discussed previously:

- Equivalent single layer theory
- Layerwise theory
- Multiple model method, in which the ESL and layerwise theories are combined in the through-thickness direction of the composite.

Geometry and Boundary Conditions

The geometry of the blade is shown in Figure 1. The boundary conditions and loading are:

- The short end of the blade is fixed.
- A load is pressure excitation applied on face of the blade. The load is entered as a normal component of the boundary load using the expression

$$F_n = -p_0 \exp[-jm \operatorname{atan}(Y/X)]$$

using the magnitude of $p_0 = 10^4$ Pa and azimuthal mode number m = 3. The excitation frequency is 10 Hz.

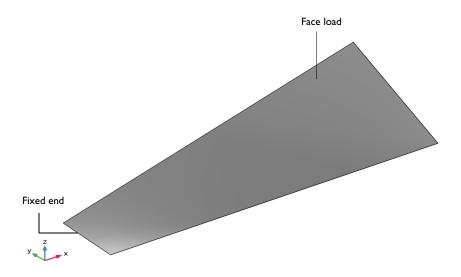


Figure 1: Geometry of the blade, with boundary conditions and loading.

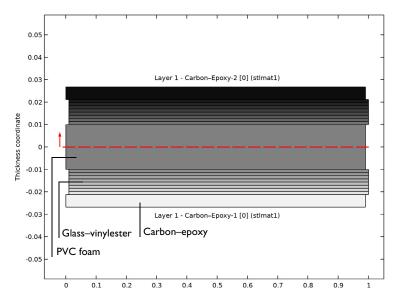


Figure 2: Through-thickness view of the laminate.

LAMINATE MATERIAL PROPERTIES

The composite blade is a sandwich structure consisting of three different material types: carbon–epoxy (outer layer), glass–vinylester, and PVC foam (core), as shown in Figure 2. The stacking sequence is shown in Figure 3. The material properties of the different laminae are taken from the model Stress and Modal Analysis of a Wind Turbine Composite Blade, also in the Composite Materials Module Application Library.

Carbon-Epoxy Layer

The outer layer of the sandwich structure is a single carbon–epoxy layer with a thickness of 5.6 mm, oriented at 0 degrees to the principal axis. The density of the layer is 1560 kg/ m³. The transversely isotropic material properties are given in Table 1.

TABLE I: MATERIAL PROPERTIES OF THE SINGLE CARBON-EPOXY LAYER.

Material property	Value
{E ₁₁ ,E ₂₂ }	{139,9}(GPa)
G_{12}	5.5(GPa)
$\{v_{12}, v_{23}\}$	{0.32,0.32}

Glass-Vinylester Laminate

The next layer of the sandwich structure is a glass-vinylester laminate. The density of the laminate is 1890 kg/m³. The transversely isotropic material properties are given in Table 2.

TABLE 2: MATERIAL PROPERTIES OF THE GLASS-VINYLESTER LAMINA.

Material property	Value
{E ₁₁ ,E ₂₂ }	{41,9}(GPa)
G_{12}	4.1(GPa)
$\{v_{12}, v_{23}\}$	{0.3,0.3}

This laminate is made of eight layers, each of 1.4 mm thickness, with the stacking sequence shown in Table 3.

TABLE 3: FIBER ORIENTATION IN THE GLASS-VINYLESTER LAMINATE.

Layer number	Fiber orientation
1	0
2	45
3	- 45
4	90
5	90
6	-45
7	45
8	0

PVC Foam

The core material of the sandwich structure is a PVC foam of thickness 2 cm. The density of the material is 200 kg/m³. The values of Young's modulus and Poisson's ratio are 250 MPa and 0.35, respectively.

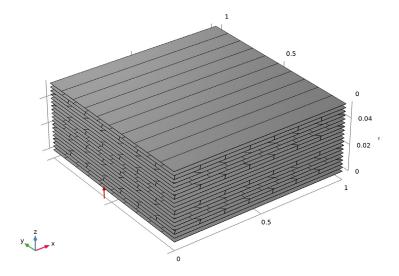


Figure 3: Stacking sequence for the laminate showing the fiber orientation of each layer, from bottom to top.

FINITE ELEMENT MESH

Composites modeled with the Layered Shell or Shell interfaces are discretized at two levels. The in-plane discretization in done in a standard fashion in the Mesh node in the Model Builder tree. The out-of-plane (thickness) discretization is controlled in the Layered Material node. A triangular mesh is used in the plane, as shown in Figure 4. The discretization in the laminate thickness direction (given as a number of elements) is shown in Table 4.

TABLE 4: MESH ELEMENTS IN THICKNESS DIRECTION.

Material	Total thickness (mm)	Mesh Elements
Carbon-Epoxy	11.2	8
Glass-Vinylester	22.4	16
PVC foam	20	10

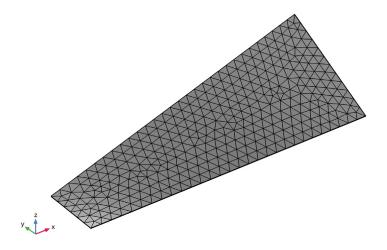


Figure 4: The mesh in the base selection.

Results and Discussion

The layerwise theory uses three dimensional kinematics, and has the capacity to predict stresses and strains to high accuracy. The results from using this theory are therefore used as a benchmark. The results from using the ESL theory and the multiple model method are compared with the layerwise theory predictions.

EIGENFREQUENCY ANALYSIS

The first six eigenmodes, using the multiple model method, are shown in Figure 5. The eigenmodes using the layerwise and ESL theories are essentially indistinguishable from the multiple model method eigenmodes, and they are not shown here. However the computed eigenfrequencies differ between the different modeling approaches. The corresponding six eigenfrequencies are shown in Table 5.

TABLE 5: COMPARISON OF EIGENFREQUENCIES.

Multiple model method (Hz)	Layerwise (Hz)	ESL (Hz)
13.013	13.015	13.648
35.337	35.353	44.476
49.806	49.853	59.455

TABLE 5: COMPARISON OF EIGENFREQUENCIES.

Multiple model method (Hz)	Layerwise (Hz)	ESL (Hz)
101	101.02	113.22
137.75	137.83	178.63
181.23	181.49	265.15

It is evident that the computationally less expensive predictions from the multiple model method are in very close agreement with the layerwise values. Predictions using the ESL theory deviate significantly, likely owing to the fact that while the ESL theory is computationally inexpensive, it is less accurate for thick to moderately thick shells. This underscores the computational merit of a multiple model method, in which thicker parts of a sandwich structure are modeled using a layerwise theory, and thinner parts are modeled using the ESL theory. A performance comparison is shown in Table 6.


TABLE 6: PERFORMANCE COMPARISON FOR THE EIGENFREOUENCY STUDIES.

Comparison	Multiple model method	Layerwise	ESL
Number of DOFs	167700	269100	7800
Solution time (s)	32	62	13
Relative solution time	0.51	I	0.21

FREQUENCY-DOMAIN ANALYSIS

The von Mises peak stress distribution for each modeling approach is presented in Figure 6. The figure shows that the stress response from the multiple model method closely matches the layerwise case, both in distribution and in peak value. The figure also shows that the stress distribution using the ESL theory differs significantly, and most notably, the peak value is very different.

The frequency-domain results in terms of displacements are presented in Figure 7 for each modeling approach. Again, the multiple model method approach produces results that are in close agreement with the results from the layerwise theory, while the ESL theory fails to accurately predict the displacement distribution and peak value (30% difference in peak value).

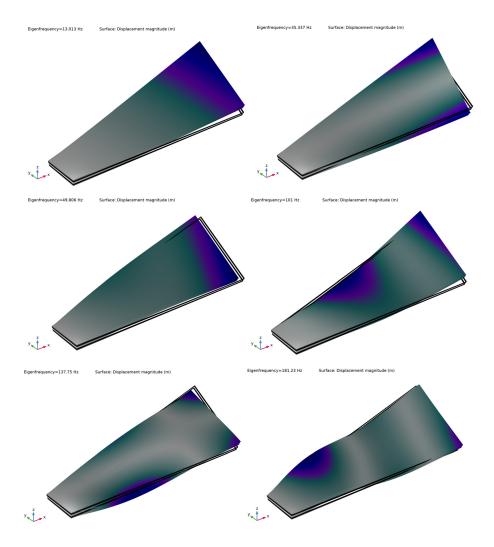

 $Figure \ 5: The \ first \ six \ mode \ shapes \ and \ corresponding \ eigenfrequencies \ of \ the \ composite \ blade, \\ using \ the \ multiple \ model \ method.$

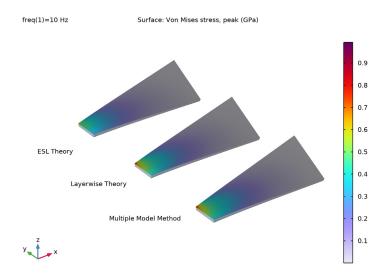


Figure 6: Peak von Mises stress distribution in the composite blade.

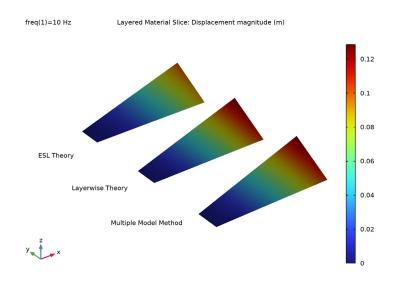


Figure 7: Displacement in the top layer of the composite blade.

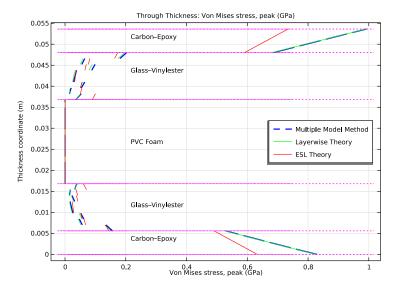


Figure 8: Through-thickness stress variation in von Mises peak stress at a particular location.

Figure 8 shows the distribution of peak von Mises stress in the through-thickness direction at a particular location. The results using the multiple model method and the layerwise theory are in close agreement, while the ESL theory produces significantly different results. This is expected, as the ESL theory is incapable of accurately computing interlaminar shear stresses in thick composites.

The performance of three methods with frequency-domain study is shown in Table 7.

TABLE 7: PERFORMANCE COMPARISON FOR THE FREQUENCY-DOMAIN STUDIES.

Comparison	Multiple model method	Layerwise	ESL
Number of DOFs	167700	269100	7800
Solution time (s)	26	50	15
Relative solution time	0.52	I	0.3

Notes About the COMSOL Implementation

To model composites you can use two approaches: You can use either the Layered Shell
interface, that uses the layerwise theory, or the Linear Elastic Material, Layered node in
the Shell interface, that uses the Equivalent Single Layer (ESL) theory.

- The multiple model method combines the aforementioned modeling approaches, and in order to combine the Layered Shell and Shell interfaces in the thickness direction, a Layered Shell-Shell Connection multiphysics coupling must be used. You must also use the Layered Material Stack node for the through-thickness coupling between the interfaces.
- In a situation where Layered Shell and Shell interfaces are coupled in-plane, you must use a Layered Shell-Structural Transition multiphysics coupling. Here, the same Single Layer Material, Layered Material Link or Layered Material Stack node must be used in both interfaces. This modeling approach is also a multiple model method.
- It is not advised to use the Layered Shell interface for discontinuous layers, as it can create problems in fold-line constraints. No fold-lines exist in the present model, however, so the Layered Shell interface can be used to model the PVC foam and the carbon-epoxy layers.

Reference

1. J.N. Reddy, Mechanics of Laminated Composite Plates and Shells: Theory and Analysis, Second Edition, CRC Press, 2004.

Application Library path: Composite_Materials_Module/Tutorials/ composite blade multiple model method

Modeling Instructions

From the File menu, choose New.

NFW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select Structural Mechanics>Layered Shell (Ishell).
- 3 Click Add.
- 4 In the Select Physics tree, select Structural Mechanics>Shell (shell).
- 5 Click Add.
- 6 Click Study.

- 7 In the Select Study tree, select General Studies>Eigenfrequency.
- 8 Click M Done.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
th	1.4[mm]	0.0014 m	Layer thickness
thc	2[cm]	0.02 m	Core thickness
mn	3	3	Azimuthal mode number
p0	1e4[Pa]	10000 Pa	Load magnitude

Material: Carbon-Epoxy

- I In the Model Builder window, under Global Definitions right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Material: Carbon-Epoxy in the Label text field.

Layered Material: CE-[0]

- I Right-click Materials and choose Layered Material.
- 2 In the Settings window for Layered Material, type Layered Material: CE-[0] in the Label text field.
- 3 Locate the Layer Definition section. In the table, enter the following settings:

Layer	Material	Rotation (deg)	Thickness	Mesh elements
Layer 1	Material: Carbon- Epoxy (mat1)	0.0	th*4	4

Material: Glass-Vinylester

- I Right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Material: Glass-Vinylester in the Label text field.

Layered Material: GV-[0/45/-45/90]_s

I Right-click Materials and choose Layered Material.

- 2 In the Settings window for Layered Material, type Layered Material: GV-[0/45/-45/ 90]_s in the Label text field.
- **3** Locate the **Layer Definition** section. In the table, enter the following settings:

Layer	Material	Rotation (deg)	Thickness	Mesh elements
Layer 1	Material: Glass- Vinylester (mat2)	0.0	th	1

4 Click + Add.

Add six additional layers so that the material has a total of eight layers.

5 In the table, enter the following settings:

Layer	Material	Rotation (deg)	Thickness	Mesh elements
Layer 2	Material: Glass- Vinylester (mat2)	45	th	1
Layer 3	Material: Glass- Vinylester (mat2)	-45	th	1
Layer 4	Material: Glass- Vinylester (mat2)	90	th	1
Layer 5	Material: Glass- Vinylester (mat2)	90	th	1
Layer 6	Material: Glass- Vinylester (mat2)	-45	th	1
Layer 7	Material: Glass- Vinylester (mat2)	45	th	1
Layer 8	Material: Glass- Vinylester (mat2)	0	th	1

- 6 Click to expand the Preview Plot Settings section. In the Thickness-to-width ratio text field, type 0.6.
- 7 Locate the Layer Definition section. Click Layer Stack Preview in the upper-right corner of the section.

Material: PVC Foam

- I Right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Material: PVC Foam in the Label text field.

Layered Material: PF-[0]

I Right-click Materials and choose Layered Material.

- 2 In the Settings window for Layered Material, type Layered Material: PF-[0] in the Label text field.
- 3 Locate the Layer Definition section. In the table, enter the following settings:

Layer	Material	Rotation (deg)	Thickness	Mesh elements
Layer 1	Material: PVC Foam (mat3)	0.0	thc	10

GEOMETRY I

Work Plane I (wbl)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose zy-plane.

Work Plane I (wb I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wbl)>Line Segment I (Isl)

- I In the Work Plane toolbar, click More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- 5 In the yw text field, type 0.4.

Extrude | (ext|)

- I In the Model Builder window, right-click Geometry I and choose Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- **3** In the table, enter the following settings:

Distances (m)

- 4 Select the Reverse direction check box.
- **5** Click to expand the **Scales** section. In the table, enter the following settings:

Scales xw	Scales yw
1	2

6 Click to expand the **Twist Angles** section. In the table, enter the following settings:

```
Twist angles (deg)
30
```

- 7 Click Build All Objects.
- 8 Click the **Zoom Extents** button in the **Graphics** toolbar.
- **9** Click the **Show Grid** button in the **Graphics** toolbar.

DEFINITIONS

Boundary System I (sys1)

- I In the Model Builder window, expand the Component I (compl)>Definitions node, then click Boundary System I (sysI).
- 2 In the Settings window for Boundary System, locate the Settings section.
- 3 Find the Coordinate names subsection. From the Axis list, choose x.

MATERIALS

The laminate is modeled using a Layered Material Stack node. Multiple layered material links are added to demonstrate the multiple model method.

Layered Material Stack 1 (stlmat1)

In the Model Builder window, under Component I (compl) right-click Materials and choose Layers>Layered Material Stack.

Carbon-Epoxy-I [0]

- I In the Settings window for Layered Material Link, type Carbon-Epoxy-1 [0] in the Label text field.
- 2 Right-click Carbon-Epoxy-I [0] and choose Duplicate.

Glass-Vinylester-1 [0/45/-45/90] s

- I In the Model Builder window, under Component I (compl)>Materials> Layered Material Stack I (stlmat1) click Carbon-Epoxy-I [0] I (stlmat1.stllmat2).
- 2 In the Settings window for Layered Material Link, type Glass-Vinylester-1 [0/45/-45/90] s in the Label text field.
- 3 Locate the Link Settings section. From the Material list, choose Layered Material: GV-[0/ 45/-45/90]_s (lmat2).
- 4 Right-click Glass-Vinylester-I [0/45/-45/90]_s and choose Duplicate.

PVC Foam [0]

- I In the Model Builder window, under Component I (compl)>Materials> Layered Material Stack I (stlmat1) click Glass-Vinylester-I [0/45/-45/90]_s I (stlmat1.stllmat3).
- 2 In the Settings window for Layered Material Link, type PVC Foam [0] in the Label text field.
- 3 Locate the Link Settings section. From the Material list, choose Layered Material: PF[0] (Imat3).
- 4 Right-click PVC Foam [0] and choose Duplicate.

Glass-Vinylester-2 [0/45/-45/90] s

- I In the Model Builder window, under Component I (compl)>Materials>
 Layered Material Stack I (stlmatl) click PVC Foam [0] I (stlmatl.stllmat4).
- 2 In the Settings window for Layered Material Link, type Glass-Vinylester-2 [0/45/-45/90] s in the Label text field.
- 3 Locate the Link Settings section. From the Material list, choose Layered Material: GV-[0/45/-45/90] s (lmat2).
- 4 Right-click Glass-Vinylester-2 [0/45/-45/90]_s and choose Duplicate.

Carbon-Epoxy-2 [0]

- I In the Model Builder window, under Component I (comp1)>Materials>
 Layered Material Stack I (stlmat1) click Glass-Vinylester-2 [0/45/-45/90]_s I (stlmat1.stllmat5).
- 2 In the Settings window for Layered Material Link, type Carbon-Epoxy-2 [0] in the Label text field.
- 3 Locate the Link Settings section. From the Material list, choose Layered Material: CE-[0] (Imat1).

Layered Material Stack I (stlmat I)

- I In the Model Builder window, click Layered Material Stack I (stlmat!).
- 2 In the Settings window for Layered Material Stack, click to expand the Preview Plot Settings section.
- 3 In the Thickness-to-width ratio text field, type 0.4.
- 4 Click Layer Cross-Section Preview in the upper-right corner of the Layered Material Settings section. From the menu, choose Layer Cross-Section Preview to enable the through-thickness view of the laminated material, as in Figure 2.

5 Click Layer Stack Preview in the upper-right corner of the Layered Material Settings section. From the menu, choose Layer Stack Preview to show the stacking sequence, including the fiber orientation, as in Figure 3.

You will now model the composite blade using the multiple model method. To this end, you will use one Layered Shell and two Shell interfaces.

LAYERED SHELL (MULTIPLE MODEL METHOD)

- I In the Model Builder window, under Component I (compl) click Layered Shell (Ishell).
- 2 In the Settings window for Layered Shell, type Layered Shell (Multiple Model Method) in the Label text field.

Add the material properties for the carbon-epoxy, the glass-vinylester, and the PVC

- 3 Locate the Shell Properties section. Clear the Use all layers check box.
- 4 Click Clear All.
- 5 In the Selection table, select the check boxes for Layer I Carbon-Epoxy-I [0], Layer I -PVC Foam [0], and Layer I - Carbon-Epoxy-2 [0].

Linear Elastic Material I

- I In the Model Builder window, under Component I (compl)> Layered Shell (Multiple Model Method) (Ishell) click Linear Elastic Material 1.
- 2 In the Settings window for Linear Elastic Material, locate the Linear Elastic Material section.
- 3 Select the Transversely isotropic check box.

Fixed Constraint 1

- I In the Physics toolbar, click Edges and choose Fixed Constraint.
- **2** Select Edge 1 only.
- 3 In the Settings window for Fixed Constraint, locate the Shell Properties section.
- 4 Select the Use all layers check box.

Face Load, Tob

- I In the Physics toolbar, click **Boundaries** and choose Face Load.
- 2 In the Settings window for Face Load, type Face Load, Top in the Label text field.
- 3 Select Boundary 1 only.
- 4 Locate the Interface Selection section. From the Apply to list, choose Top interface.

5 Locate the **Force** section. Specify the \mathbf{F}_A vector as

0	x
0	у
-p0*exp(-j*mn*atan2(Y,X))	z

6 Right-click Face Load, Top and choose Duplicate.

Face Load, Bottom

- I In the Model Builder window, under Component I (compl)>
 Layered Shell (Multiple Model Method) (Ishell) click Face Load, Top 1.
- 2 In the Settings window for Face Load, type Face Load, Bottom in the Label text field.
- 3 Locate the Interface Selection section. From the Apply to list, choose Bottom interface.

SHELL I (MULTIPLE MODEL METHOD)

- I In the Model Builder window, under Component I (compl) click Shell (shell).
- 2 In the Settings window for Shell, type Shell 1 (Multiple Model Method) in the Label text field.
- 3 Click the Show More Options button in the Model Builder toolbar.
- 4 In the **Show More Options** dialog box, in the tree, select the check box for the node **Physics>Advanced Physics Options**.
- 5 Click OK.
- 6 In the Settings window for Shell, click to expand the Advanced Settings section.
- 7 Clear the Use MITC interpolation check box.

Linear Elastic Material, Layered 1

- I In the Physics toolbar, click boundaries and choose Linear Elastic Material, Layered.
- 2 Select Boundary 1 only.
- 3 In the Settings window for Linear Elastic Material, Layered, locate the Shell Properties section.
- 4 Clear the Use all layers check box.
- 5 From the Stack member list, choose Glass-Vinylester-I [0/45/-45/90]_s (stlmat1.stllmat2).
- **6** Locate the **Linear Elastic Material** section. From the **Material symmetry** list, choose **Orthotropic**.
- 7 Select the Transversely isotropic check box.
- 8 Click to expand the Shear Correction Factor section. From the list, choose User defined.

Fixed Constraint I

- I In the Physics toolbar, click **Edges** and choose **Fixed Constraint**.
- **2** Select Edge 1 only.
- 3 In the Model Builder window, right-click Shell I (Multiple Model Method) (shell) and choose Copy.

COMPONENT I (COMPI)

In the Model Builder window, right-click Component I (compl) and choose Paste Shell.

SHELL 2 (MULTIPLE MODEL METHOD)

- I In the Messages from Paste dialog box, click OK.
- 2 In the Model Builder window, under Component I (compl) click Shell I (Multiple Model Method) I (shell2).
- 3 In the Settings window for Shell, type Shell 2 (Multiple Model Method) in the Label text field.

Linear Elastic Material, Layered 1

- I In the Model Builder window, expand the Component I (compl)> Shell 2 (Multiple Model Method) (shell2) node, then click Linear Elastic Material, Layered I.
- 2 In the Settings window for Linear Elastic Material, Layered, locate the Shell Properties section.
- 3 From the Stack member list, choose Glass-Vinylester-2 [0/45/-45/90]_s (stlmat1.stllmat4).

GLOBAL DEFINITIONS

Material: Carbon-Epoxy (mat I)

- I In the Model Builder window, under Global Definitions>Materials click Material: Carbon-Epoxy (matl).
- 2 In the Settings window for Material, locate the Material Contents section.
- **3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	{Evect1, Evect2}	{139e9, 9e9}	Pa	Transversely isotropic
Poisson's ratio	{nuvect1, nuvect2}	{0.32, 0.32}	I	Transversely isotropic

Property	Variable	Value	Unit	Property group
Shear modulus	GvectI	5.5e9	N/m²	Transversely isotropic
Density	rho	1560	kg/m³	Basic

Material: Glass-Vinylester (mat2)

- I In the Model Builder window, click Material: Glass-Vinylester (mat2).
- 2 In the Settings window for Material, locate the Material Contents section.
- **3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	{Evect1, Evect2}	{41e9, 9e9}	Pa	Transversely isotropic
Poisson's ratio	{nuvect1, nuvect2}	{0.3, 0.3}	I	Transversely isotropic
Shear modulus	GvectI	4.1e9	N/m²	Transversely isotropic
Density	rho	1890	kg/m³	Basic

Material: PVC Foam (mat3)

- I In the Model Builder window, click Material: PVC Foam (mat3).
- 2 In the Settings window for Material, locate the Material Contents section.
- **3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	{Evect1, Evect2}	{250e6, 250e6}	Pa	Transversely isotropic
Poisson's ratio	{nuvect1, nuvect2}	{0.35, 0.35}	I	Transversely isotropic
Shear modulus	GvectI	92.6e6	N/m²	Transversely isotropic
Density	rho	200	kg/m³	Basic

MULTIPHYSICS

Layered Shell-Shell Connection I (Issh1)

I In the Physics toolbar, click Multiphysics Couplings and choose Boundary> Layered Shell-Shell Connection.

2 Right-click Layered Shell-Shell Connection I (Issh1) and choose Duplicate.

Layered Shell-Shell Connection 2 (Issh2)

- I In the Model Builder window, click Layered Shell-Shell Connection 2 (Issh2).
- 2 In the Settings window for Layered Shell-Shell Connection, locate the Coupled Interfaces section.
- 3 From the Shell list, choose Shell 2 (Multiple Model Method) (shell2).

MESH I

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Sequence Type section.
- 3 From the list, choose User-controlled mesh.

Free Triangular 1

- I In the Model Builder window, under Component I (compl)>Mesh I click Free Triangular I.
- 2 In the Settings window for Free Triangular, locate the Boundary Selection section.
- 3 From the Selection list, choose All boundaries.

Size

- I In the Model Builder window, click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- 3 From the Predefined list, choose Extra fine.
- 4 Click III Build All.

STUDY: EIGENFREQUENCY (MULTIPLE MODEL METHOD)

Switch off the generation of default plots in every study. We will use customized plots for comparison purposes.

- I In the Model Builder window, click Study I.
- 2 In the Settings window for Study, type Study: Eigenfrequency (Multiple Model Method) in the Label text field.
- 3 Locate the Study Settings section. Clear the Generate default plots check box.
- 4 In the Home toolbar, click **Compute**.

RESULTS

Layered Material I

- I In the Model Builder window, expand the Results node.
- 2 Right-click Results>Datasets and choose More Datasets>Layered Material.

Mode Shape (Multiple Model Method)

- I In the Results toolbar, click **3D Plot Group**.
- 2 In the Settings window for 3D Plot Group, type Mode Shape (Multiple Model Method) in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Layered Material 1.
- 4 Locate the Color Legend section. Clear the Show legends check box.

Surface I

- I Right-click Mode Shape (Multiple Model Method) and choose Surface.
- 2 In the Settings window for Surface, locate the Coloring and Style section.
- 3 Click Change Color Table.
- 4 In the Color Table dialog box, select Aurora Aurora Australis in the tree.
- 5 Click OK.

Deformation I

Right-click Surface I and choose Deformation.

Surface I

In the Model Builder window, right-click Surface I and choose Duplicate.

Surface 2

- I In the Model Builder window, click Surface 2.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type shell.disp.
- 4 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 5 Click to expand the Inherit Style section. From the Plot list, choose Surface 1.

Deformation I

- I In the Model Builder window, expand the Surface 2 node, then click Deformation I.
- 2 In the Settings window for Deformation, locate the Expression section.
- 3 In the x-component text field, type u2.
- 4 In the y-component text field, type v2.

5 In the **z-component** text field, type w2.

Surface 2

In the Model Builder window, right-click Surface 2 and choose Duplicate.

Surface 3

- I In the Model Builder window, click Surface 3.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type shell2.disp.

Deformation I

- I In the Model Builder window, expand the Surface 3 node, then click Deformation I.
- 2 In the Settings window for Deformation, locate the Expression section.
- **3** In the **x-component** text field, type **u3**.
- 4 In the y-component text field, type v3.
- **5** In the **z-component** text field, type w3.

Mode Shape (Multiple Model Method)

- I In the Model Builder window, under Results click Mode Shape (Multiple Model Method).
- 2 In the Mode Shape (Multiple Model Method) toolbar, click **1** Plot.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies> Frequency Domain.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 2

Steb 1: Frequency Domain

- I In the Settings window for Frequency Domain, locate the Study Settings section.
- 2 In the Frequencies text field, type 10.
- 3 In the Model Builder window, click Study 2.
- 4 In the Settings window for Study, type Study: Frequency (Multiple Model Method) in the Label text field.

- 5 Locate the Study Settings section. Clear the Generate default plots check box.
- 6 In the Home toolbar, click **Compute**.

RESULTS

Layered Material 2

- I In the Results toolbar, click More Datasets and choose Layered Material.
- 2 In the Settings window for Layered Material, locate the Data section.
- 3 From the Dataset list, choose Study: Frequency (Multiple Model Method)/Solution 2 (sol2).

Mises Peak Stress

- I In the Results toolbar, click 3D Plot Group.
- 2 In the Settings window for 3D Plot Group, type Mises Peak Stress in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Layered Material 2.
- 4 Locate the Plot Settings section. Clear the Plot dataset edges check box.

Surface I

- I Right-click Mises Peak Stress and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type lshell.mises peak.
- 4 From the Unit list, choose GPa.
- 5 Locate the Coloring and Style section. Click Change Color Table.
- 6 In the Color Table dialog box, select Rainbow>Prism in the tree.
- 7 Click OK.

Deformation I

Right-click Surface I and choose Deformation.

Surface 1

In the Model Builder window, right-click Surface I and choose Duplicate.

Surface 2

- I In the Model Builder window, click Surface 2.
- 2 In the Settings window for Surface, locate the Title section.
- **3** From the **Title type** list, choose **None**.
- 4 Locate the Inherit Style section. From the Plot list, choose Surface 1.

Deformation I

- I In the Model Builder window, expand the Surface 2 node, then click Deformation I.
- 2 In the Settings window for Deformation, locate the Expression section.
- **3** In the **x-component** text field, type u2.
- 4 In the y-component text field, type v2.
- 5 In the **z-component** text field, type w2.

Surface 2

- I In the Model Builder window, click Surface 2.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type shell.mises_peak.
- 4 Right-click Surface 2 and choose Duplicate.

Deformation I

- I In the Model Builder window, expand the Results>Mises Peak Stress>Surface 3 node, then click **Deformation 1**.
- 2 In the Settings window for Deformation, locate the Expression section.
- **3** In the **x-component** text field, type u3.
- 4 In the y-component text field, type v3.
- **5** In the **z-component** text field, type w3.

Surface 3

- I In the Model Builder window, click Surface 3.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type shell2.mises peak.

Mises Peak Stress

- I In the Model Builder window, click Mises Peak Stress.
- 2 In the Mises Peak Stress toolbar, click Plot.

Displacement, Slice

- I In the Home toolbar, click Add Plot Group and choose 3D Plot Group.
- 2 In the Settings window for 3D Plot Group, type Displacement, Slice in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Study: Frequency (Multiple Model Method)/Solution 2 (sol2).
- **4** Locate the **Plot Settings** section. Clear the **Plot dataset edges** check box.

Layered Material Slice I

- I In the **Displacement, Slice** toolbar, click More **Plots** and choose Layered Material Slice.
- 2 In the Settings window for Layered Material Slice, locate the Through-Thickness Location section.
- 3 From the Location definition list, choose Relative.
- 4 In the Local z-coordinate [-1,1] text field, type 1.

Displacement, Slice

- I In the Model Builder window, click Displacement, Slice.
- 2 In the Displacement, Slice toolbar, click **Plot**.

You will now model the composite blade using the layerwise theory. To this end, you will use the Layered Shell interface.

LAYERED SHELL (MULTIPLE MODEL METHOD) (LSHELL)

In the Model Builder window, under Component I (compl) right-click Layered Shell (Multiple Model Method) (Ishell) and choose Copy.

COMPONENT I (COMPI)

In the Model Builder window, right-click Component I (compl) and choose Paste Layered Shell.

LAYERED SHELL (LAYERWISE THEORY)

- I In the Messages from Paste dialog box, click OK.
- 2 In the Model Builder window, under Component I (compl) click Layered Shell (Multiple Model Method) I (Ishell2).
- 3 In the Settings window for Layered Shell, type Layered Shell (Layerwise Theory) in the Label text field.
- 4 Locate the Shell Properties section. Select the Use all layers check box.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies> Eigenfrequency.
- 4 Click Add Study in the window toolbar.

5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 3

Step 1: Eigenfrequency

- I In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.
- **2** In the table, enter the following settings:

Physics interface	Solve for	Equation form
Layered Shell (Multiple Model Method) (Ishell)		Automatic (Stationary)
Shell I (Multiple Model Method) (shell)		Automatic (Stationary)
Shell 2 (Multiple Model Method) (shell2)		Automatic (Stationary)

3 In the table, enter the following settings:

Multiphysics couplings	Solve for	Equation form
Layered Shell-Shell Connection I (Issh1)		Automatic (Stationary)
Layered Shell-Shell Connection 2 (Issh2)		Automatic (Stationary)

- 4 In the Model Builder window, click Study 3.
- 5 In the Settings window for Study, type Study: Eigenfrequency (Layerwise Theory) in the Label text field.
- 6 Locate the Study Settings section. Clear the Generate default plots check box.
- 7 In the Home toolbar, click **Compute**.

RESULTS

Layered Material I

In the Model Builder window, under Results>Datasets right-click Layered Material I and choose **Duplicate**.

Layered Material 3

- I In the Model Builder window, click Layered Material 3.
- 2 In the Settings window for Layered Material, locate the Data section.

3 From the Dataset list, choose Study: Eigenfrequency (Layerwise Theory)/Solution 3 (sol3).

Mode Shape (Multiple Model Method)

In the Model Builder window, under Results right-click Mode Shape (Multiple Model Method) and choose Duplicate.

Mode Shape (Layerwise Theory)

- I In the Model Builder window, under Results click Mode Shape (Multiple Model Method) I.
- 2 In the Settings window for 3D Plot Group, type Mode Shape (Layerwise Theory) in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose None.
- 4 In the Model Builder window, expand the Mode Shape (Layerwise Theory) node.

Surface 2, Surface 3

- I In the Model Builder window, under Results>Mode Shape (Layerwise Theory), Ctrl-click to select Surface 2 and Surface 3.
- 2 Right-click and choose Delete.

Surface I

- I In the Model Builder window, under Results>Mode Shape (Layerwise Theory) click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type lshell2.disp.

Deformation I

- I In the Model Builder window, expand the Surface I node, then click Deformation I.
- 2 In the Settings window for Deformation, locate the Expression section.
- 3 In the x-component text field, type u4.
- 4 In the y-component text field, type v4.
- **5** In the **z-component** text field, type w4.

Mode Shape (Layerwise Theory)

- I In the Model Builder window, under Results click Mode Shape (Layerwise Theory).
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Dataset list, choose Layered Material 3.
- 4 Click the **Zoom Extents** button in the **Graphics** toolbar.
- 5 In the Mode Shape (Layerwise Theory) toolbar, click Plot.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- **2** Go to the **Add Study** window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies> Frequency Domain.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 4

Step 1: Frequency Domain

- I In the Settings window for Frequency Domain, locate the Study Settings section.
- 2 In the Frequencies text field, type 10.
- 3 Locate the Physics and Variables Selection section. In the table, enter the following settings:

Physics interface	Solve for	Equation form
Layered Shell (Multiple Model Method) (Ishell)		Automatic (Stationary)
Shell I (Multiple Model Method) (shell)		Automatic (Stationary)
Shell 2 (Multiple Model Method) (shell2)		Automatic (Stationary)

4 In the table, enter the following settings:

Multiphysics couplings	Solve for	Equation form
Layered Shell-Shell Connection I (Issh I)		Automatic (Stationary)
Layered Shell-Shell Connection 2 (lssh2)		Automatic (Stationary)

- 5 In the Model Builder window, click Study 4.
- 6 In the Settings window for Study, type Study: Frequency (Layerwise Theory) in the Label text field.
- 7 Locate the Study Settings section. Clear the Generate default plots check box.
- 8 In the Home toolbar, click **Compute**.

RESULTS

Layered Material 2

In the Model Builder window, under Results>Datasets right-click Layered Material 2 and choose Duplicate.

Layered Material 4

- I In the Model Builder window, click Layered Material 4.
- 2 In the Settings window for Layered Material, locate the Data section.
- 3 From the Dataset list, choose Study: Frequency (Layerwise Theory)/Solution 4 (sol4).

Mises Peak Stress

- I In the Model Builder window, under Results click Mises Peak Stress.
- 2 In the Settings window for 3D Plot Group, click to expand the Plot Array section.
- **3** Select the **Enable** check box.
- 4 From the Array axis list, choose y.
- 5 In the Relative padding text field, type 1.

Surface 2

- I In the Model Builder window, click Surface 2.
- 2 In the Settings window for Surface, click to expand the Plot Array section.
- **3** Select the **Manual indexing** check box.

Surface 3

- I In the Model Builder window, click Surface 3.
- 2 In the Settings window for Surface, locate the Plot Array section.
- **3** Select the **Manual indexing** check box.
- 4 Right-click Surface 3 and choose Duplicate.

Surface 4

- I In the Model Builder window, click Surface 4.
- 2 In the Settings window for Surface, locate the Data section.
- 3 From the Dataset list, choose Layered Material 4.
- 4 Locate the Expression section. In the Expression text field, type 1shell2.mises peak.
- **5** Locate the **Plot Array** section. In the **Index** text field, type 1.

Deformation I

I In the Model Builder window, expand the Surface 4 node, then click Deformation 1.

- 2 In the Settings window for Deformation, locate the Expression section.
- 3 In the x-component text field, type u4.
- **4** In the **y-component** text field, type v4.
- 5 In the **z-component** text field, type w4.

Mises Peak Stress

- I In the Model Builder window, under Results click Mises Peak Stress.
- 2 In the Mises Peak Stress toolbar, click Plot.

Displacement, Slice

- I In the Model Builder window, click Displacement, Slice.
- 2 In the Settings window for 3D Plot Group, locate the Plot Array section.
- **3** Select the **Enable** check box.
- 4 From the Array axis list, choose y.
- 5 In the Relative padding text field, type 1.

Layered Material Slice 1

In the Model Builder window, right-click Layered Material Slice I and choose Duplicate.

Layered Material Slice 2

- I In the Model Builder window, click Layered Material Slice 2.
- 2 In the Settings window for Layered Material Slice, locate the Data section.
- 3 From the Dataset list, choose Study: Frequency (Layerwise Theory)/Solution 4 (sol4).
- 4 Locate the Expression section. In the Expression text field, type 1shell2.disp.
- 5 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 6 Click to expand the Inherit Style section. From the Plot list, choose Layered Material Slice I.
- 7 In the Displacement, Slice toolbar, click **Plot**.

You will now model the composite blade using the equivalent single layer theory. To this end, you will use the Shell interface.

SHELL I (MULTIPLE MODEL METHOD) (SHELL)

In the Model Builder window, under Component I (compl) right-click Shell I (Multiple Model Method) (shell) and choose Copy.

COMPONENT I (COMPI)

In the Model Builder window, right-click Component I (compl) and choose Paste Shell.

SHELL (ESL THEORY)

- I In the Messages from Paste dialog box, click OK.
- 2 In the Model Builder window, under Component I (compl) click Shell I (Multiple Model Method) I (shell3).
- 3 In the Settings window for Shell, type Shell (ESL Theory) in the Label text field.

Linear Elastic Material, Layered 1

- I In the Model Builder window, expand the Component I (compl)>
 Shell (ESL Theory) (shell3) node, then click Linear Elastic Material, Layered I.
- 2 In the Settings window for Linear Elastic Material, Layered, locate the Shell Properties section.
- 3 Select the Use all layers check box.

Face Load, Top

- I In the Physics toolbar, click **Boundaries** and choose Face Load.
- 2 In the Settings window for Face Load, type Face Load, Top in the Label text field.
- **3** Select Boundary 1 only.
- 4 Locate the Through-Thickness Location section. From the list, choose Top surface.
- ${\bf 5}\;$ Locate the ${\bf Force}$ section. Specify the ${\bf F}_A$ vector as

0	x
0	у
-p0*exp(-j*mn*atan2(Y,X))	z

6 Right-click Face Load, Top and choose Duplicate.

Face Load, Bottom

- I In the Model Builder window, under Component I (compl)>Shell (ESL Theory) (shell3) click Face Load, Top 1.
- 2 In the Settings window for Face Load, type Face Load, Bottom in the Label text field.
- 3 Locate the Through-Thickness Location section. From the list, choose Bottom surface.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies> Eigenfrequency.

- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 5

Step 1: Eigenfrequency

- I In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.
- **2** In the table, enter the following settings:

Physics interface	Solve for	Equation form
Layered Shell (Multiple Model Method) (Ishell)		Automatic (Stationary)
Shell I (Multiple Model Method) (shell)		Automatic (Stationary)
Shell 2 (Multiple Model Method) (shell2)		Automatic (Stationary)
Layered Shell (Layerwise Theory) (Ishell2)		Automatic (Stationary)

3 In the table, enter the following settings:

Multiphysics couplings	Solve for	Equation form
Layered Shell-Shell Connection I (Issh I)		Automatic (Stationary)
Layered Shell-Shell Connection 2 (lssh2)		Automatic (Stationary)

- 4 In the Model Builder window, click Study 5.
- 5 In the Settings window for Study, type Study: Eigenfrequency (ESL Theory) in the Label text field.
- 6 Locate the Study Settings section. Clear the Generate default plots check box.
- 7 In the Home toolbar, click **Compute**.

RESULTS

Layered Material I

In the Model Builder window, under Results>Datasets right-click Layered Material I and choose **Duplicate**.

Layered Material 5

- I In the Model Builder window, click Layered Material 5.
- 2 In the Settings window for Layered Material, locate the Data section.
- 3 From the Dataset list, choose Study: Eigenfrequency (ESL Theory)/Solution 5 (sol5).

Mode Shape (Layerwise Theory)

In the Model Builder window, under Results right-click Mode Shape (Layerwise Theory) and choose Duplicate.

Mode Shape (ESL Theory)

- I In the Model Builder window, under Results click Mode Shape (Layerwise Theory) I.
- 2 In the Settings window for 3D Plot Group, type Mode Shape (ESL Theory) in the Label text field
- 3 Locate the Data section. From the Dataset list, choose None.

Surface I

- I In the Model Builder window, expand the Mode Shape (ESL Theory) node, then click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type shell3.disp.

Deformation I

- I In the Model Builder window, expand the Surface I node, then click Deformation I.
- 2 In the Settings window for Deformation, locate the Expression section.
- **3** In the **x-component** text field, type u5.
- 4 In the y-component text field, type v5.
- 5 In the **z-component** text field, type w5.

Mode Shape (ESL Theory)

- I In the Model Builder window, under Results click Mode Shape (ESL Theory).
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Dataset list, choose Layered Material 5.
- 4 Click the **Zoom Extents** button in the **Graphics** toolbar.

ADD STUDY

I In the Home toolbar, click Add Study to open the Add Study window.

- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies> Frequency Domain.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 6

Step 1: Frequency Domain

- I In the Settings window for Frequency Domain, locate the Study Settings section.
- 2 In the Frequencies text field, type 10.
- 3 Locate the Physics and Variables Selection section. In the table, enter the following settings:

Physics interface	Solve for	Equation form
Layered Shell (Multiple Model Method) (Ishell)		Automatic (Stationary)
Shell I (Multiple Model Method) (shell)		Automatic (Stationary)
Shell 2 (Multiple Model Method) (shell2)		Automatic (Stationary)
Layered Shell (Layerwise Theory) (Ishell2)		Automatic (Stationary)

4 In the table, enter the following settings:

Multiphysics couplings	Solve for	Equation form
Layered Shell-Shell Connection I (Issh1)		Automatic (Stationary)
Layered Shell-Shell Connection 2 (lssh2)		Automatic (Stationary)

- 5 In the Model Builder window, click Study 6.
- 6 In the Settings window for Study, type Study: Frequency (ESL Theory) in the Label text field.
- 7 Locate the Study Settings section. Clear the Generate default plots check box.
- 8 In the Home toolbar, click **Compute**.

RESULTS

Layered Material 4

In the Model Builder window, under Results>Datasets right-click Layered Material 4 and choose **Duplicate**.

Layered Material 6

- I In the Model Builder window, click Layered Material 6.
- 2 In the Settings window for Layered Material, locate the Data section.
- 3 From the Dataset list, choose Study: Frequency (ESL Theory)/Solution 6 (sol6).

Surface 4

In the Model Builder window, under Results>Mises Peak Stress right-click Surface 4 and choose **Duplicate**.

Surface 5

- I In the Model Builder window, click Surface 5.
- 2 In the Settings window for Surface, locate the Data section.
- 3 From the Dataset list, choose Layered Material 6.
- 4 Locate the Expression section. In the Expression text field, type shell3.mises_peak.
- 5 Locate the Plot Array section. In the Index text field, type 2.

Deformation I

- I In the Model Builder window, expand the Surface 5 node, then click Deformation I.
- 2 In the Settings window for Deformation, locate the Expression section.
- **3** In the **x-component** text field, type u5.
- 4 In the y-component text field, type v5.
- **5** In the **z-component** text field, type w5.

Mises Peak Stress

In the Model Builder window, under Results click Mises Peak Stress.

Table Annotation I

- I In the Mises Peak Stress toolbar, click More Plots and choose Table Annotation.
- 2 In the Settings window for Table Annotation, locate the Data section.
- 3 From the Source list, choose Local table.

4 In the table, enter the following settings:

x-coordinate	y-coordinate	z-coordinate	Annotation
-0.8	0.5	0	Multiple Model Method
-0.8	1.6	0	Layerwise Theory
-0.8	2.7	0	ESL Theory

- 5 Locate the Coloring and Style section. Clear the Show point check box.
- 6 From the Anchor point list, choose Lower middle.
- 7 In the Mises Peak Stress toolbar, click Plot.

Layered Material Slice 2

In the Model Builder window, under Results>Displacement, Slice right-click **Layered Material Slice 2** and choose **Duplicate**.

Layered Material Slice 3

- I In the Model Builder window, click Layered Material Slice 3.
- 2 In the Settings window for Layered Material Slice, locate the Data section.
- 3 From the Dataset list, choose Study: Frequency (ESL Theory)/Solution 6 (sol6).
- 4 Locate the Expression section. In the Expression text field, type shell3.disp.
- 5 In the Displacement, Slice toolbar, click Plot.

Table Annotation I

In the Model Builder window, under Results>Mises Peak Stress right-click Table Annotation 1 and choose Copy.

Displacement, Slice

In the Model Builder window, under Results right-click Displacement, Slice and choose Paste Table Annotation

Table Annotation I

- I In the Model Builder window, click Table Annotation I.
- 2 In the Displacement, Slice toolbar, click Plot.

Mises Peak Stress, Through Thickness

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Mises Peak Stress, Through Thickness in the Label text field.

- 3 Locate the Data section. From the Dataset list, choose Study: Frequency (Multiple Model Method)/Solution 2 (sol2).
- 4 Locate the Legend section. From the Position list, choose Middle right.

Through Thickness 1

- I In the Mises Peak Stress, Through Thickness toolbar, click More Plots and choose Through Thickness.
- 2 Select Point 2 only.
- 3 In the Settings window for Through Thickness, locate the x-Axis Data section.
- 4 In the Expression text field, type lshell.mises peak.
- 5 From the Unit list, choose GPa.
- 6 Locate the y-Axis Data section. Find the Interface positions subsection. From the Show interface positions list, choose Interfaces between layered materials.
- 7 Click to expand the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.
- 8 From the Color list, choose Blue.
- **9** From the Width list, choose **2**.
- 10 Click to expand the Legends section. Select the Show legends check box.
- II From the Legends list, choose Manual.
- **12** In the table, enter the following settings:

Legends

Multiple Model Method

13 Right-click Through Thickness I and choose Duplicate.

Through Thickness 2

- I In the Model Builder window, click Through Thickness 2.
- 2 In the Settings window for Through Thickness, locate the x-Axis Data section.
- 3 In the Expression text field, type shell.mises_peak.
- 4 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- **5** Locate the **Legends** section. Clear the **Show legends** check box.
- 6 Right-click Through Thickness 2 and choose Duplicate.

Through Thickness 3

I In the Model Builder window, click Through Thickness 3.

- 2 In the Settings window for Through Thickness, locate the x-Axis Data section.
- 3 In the Expression text field, type shell2.mises peak.

Through Thickness I

In the Model Builder window, right-click Through Thickness I and choose Duplicate.

Through Thickness 4

- I In the Model Builder window, click Through Thickness 4.
- 2 In the Settings window for Through Thickness, locate the Data section.
- 3 From the Dataset list, choose Study: Frequency (Layerwise Theory)/Solution 4 (sol4).
- 4 Locate the x-Axis Data section. In the Expression text field, type 1she112.mises_peak.
- **5** Locate the **Title** section. From the **Title type** list, choose **None**.
- 6 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose Solid.
- 7 From the Color list, choose Green.
- **8** From the **Width** list, choose **I**.
- **9** Locate the **Legends** section. In the table, enter the following settings:

Legends Layerwise Theory

10 Right-click **Through Thickness 4** and choose **Duplicate**.

Through Thickness 5

- I In the Model Builder window, click Through Thickness 5.
- 2 In the Settings window for Through Thickness, locate the Data section.
- 3 From the Dataset list, choose Study: Frequency (ESL Theory)/Solution 6 (sol6).
- 4 Locate the x-Axis Data section. In the Expression text field, type shell3.mises_peak.
- 5 Locate the Coloring and Style section. From the Color list, choose Red.
- **6** Locate the **Legends** section. In the table, enter the following settings:

Legends ESL Theory

Mises Peak Stress, Through Thickness

In the Model Builder window, click Mises Peak Stress, Through Thickness.

Table Annotation I

- I In the Mises Peak Stress, Through Thickness toolbar, click \to More Plots and choose Table Annotation.
- 2 In the Settings window for Table Annotation, locate the Data section.
- 3 From the Source list, choose Local table.
- **4** In the table, enter the following settings:

x-coordinate	y-coordinate	Annotation
0.2	0.005	Carbon-Epoxy
0.2	0.013	Glass-Vinylester
0.2	0.028	PVC Foam
0.2	0.045	Glass-Vinylester
0.2	0.053	Carbon-Epoxy

- 5 Locate the Coloring and Style section. Clear the Show point check box.

Maximum Mises Peak Stress Comparison

- I In the Results toolbar, click Evaluation Group.
- 2 In the Settings window for Evaluation Group, type Maximum Mises Peak Stress Comparison in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Layered Material 2.
- 4 Click to expand the Format section. From the Include parameters list, choose Off.

Volume Maximum I

- I Right-click Maximum Mises Peak Stress Comparison and choose Maximum> Volume Maximum.
- 2 In the Settings window for Volume Maximum, locate the Expressions section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
lshell.mises_peak	GPa	Von Mises stress, peak

4 Right-click Volume Maximum I and choose Duplicate.

Volume Maximum 2

- I In the Model Builder window, click Volume Maximum 2.
- 2 In the Settings window for Volume Maximum, locate the Data section.

- 3 From the Dataset list, choose Layered Material 4.
- **4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
lshell2.mises_peak	GPa	Von Mises stress, peak

5 Right-click Volume Maximum 2 and choose Duplicate.

Volume Maximum 3

- I In the Model Builder window, click Volume Maximum 3.
- 2 In the Settings window for Volume Maximum, locate the Data section.
- 3 From the Dataset list, choose Layered Material 6.
- **4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
shell3.mises_peak	GPa	Von Mises stress, peak

5 In the Maximum Mises Peak Stress Comparison toolbar, click **Evaluate**.

Maximum Displacement Comparison

- I In the Results toolbar, click Evaluation Group.
- 2 In the Settings window for Evaluation Group, type Maximum Displacement Comparison in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Layered Material 2.
- 4 Locate the Format section. From the Include parameters list, choose Off.

Volume Maximum 1

- I Right-click Maximum Displacement Comparison and choose Maximum>Volume Maximum.
- 2 In the Settings window for Volume Maximum, locate the Expressions section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
lshell.disp	m	Displacement magnitude

4 Right-click Volume Maximum I and choose Duplicate.

Volume Maximum 2

- I In the Model Builder window, click Volume Maximum 2.
- 2 In the Settings window for Volume Maximum, locate the Data section.

- 3 From the Dataset list, choose Layered Material 4.
- **4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
lshell2.disp	m	Displacement magnitude

5 Right-click Volume Maximum 2 and choose Duplicate.

Volume Maximum 3

- I In the Model Builder window, click Volume Maximum 3.
- 2 In the Settings window for Volume Maximum, locate the Data section.
- 3 From the Dataset list, choose Layered Material 6.
- **4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
shell3.disp	m	Displacement magnitude

5 In the Maximum Displacement Comparison toolbar, click **= Evaluate**.

Eigenfrequency Comparison

- I In the Results toolbar, click Evaluation Group.
- 2 In the Settings window for Evaluation Group, type Eigenfrequency Comparison in the **Label** text field.
- 3 Locate the Format section. From the Include parameters list, choose Off.

Global Evaluation 1

- I Right-click Eigenfrequency Comparison and choose Global Evaluation.
- 2 In the Settings window for Global Evaluation, locate the Expressions section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
freq	Hz	Frequency

4 Right-click Global Evaluation I and choose Duplicate.

Global Evaluation 2

- I In the Model Builder window, click Global Evaluation 2.
- 2 In the Settings window for Global Evaluation, locate the Data section.
- 3 From the Dataset list, choose Study: Eigenfrequency (Layerwise Theory)/Solution 3 (sol3).

4 Right-click Global Evaluation 2 and choose Duplicate.

Global Evaluation 3

- I In the Model Builder window, click Global Evaluation 3.
- 2 In the Settings window for Global Evaluation, locate the Data section.
- 3 From the Dataset list, choose Study: Eigenfrequency (ESL Theory)/Solution 5 (sol5).
- 4 In the Eigenfrequency Comparison toolbar, click **=** Evaluate. In the first two studies, disable the newly added physics interfaces so that the studies can be run as originally configured.

STUDY: EIGENFREQUENCY (MULTIPLE MODEL METHOD)

Steb 1: Eigenfrequency

- I In the Model Builder window, under Study: Eigenfrequency (Multiple Model Method) click Step 1: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.
- **3** In the table, enter the following settings:

Physics interface	Solve for	Equation form
Layered Shell (Layerwise Theory) (Ishell2)		Automatic (Stationary)
Shell (ESL Theory) (shell3)		Automatic (Stationary)

STUDY: FREQUENCY (MULTIPLE MODEL METHOD)

Step 1: Frequency Domain

- I In the Model Builder window, under Study: Frequency (Multiple Model Method) click Step 1: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Physics and Variables Selection section.
- **3** In the table, enter the following settings:

Physics interface	Solve for	Equation form
Layered Shell (Layerwise Theory) (Ishell2)		Automatic (Stationary)
Shell (ESL Theory) (shell3)		Automatic (Stationary)

STUDY: EIGENFREQUENCY (LAYERWISE THEORY)

Step 1: Eigenfrequency

- I In the Model Builder window, under Study: Eigenfrequency (Layerwise Theory) click Step 1: Eigenfrequency.
- 2 In the Settings window for Eigenfrequency, locate the Physics and Variables Selection section.
- **3** In the table, enter the following settings:

Physics interface	Solve for	Equation form
Shell (ESL Theory) (shell3)		Automatic (Stationary)

STUDY: FREQUENCY (LAYERWISE THEORY)

Step 1: Frequency Domain

- I In the Model Builder window, under Study: Frequency (Layerwise Theory) click Step 1: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Physics and Variables Selection section.
- **3** In the table, enter the following settings:

Physics interface	Solve for	Equation form
Shell (ESL Theory) (shell3)		Automatic (Stationary)