

# Tunnel Excavation

This example studies the behavior of soil during a tunnel excavation. The surface settlement and the width of the plastic region around the tunnel are important parameters required to predict the reinforcements needed during the excavation. This verification model is adapted from Ref. 1 and Ref. 2.

In situ stresses are computed in two steps. In a first study the stress state of the soil before excavation is computed. In the second study the elastoplastic behavior after soil removal is investigated. This requires incorporation of the stress response calculated in the first study. The soil removal is modeled using the **Activation** feature in the linear elastic material model.

In order to speed up the calculation the soil is considered to be elastic in the first step, and only in the second step, the Drucker-Prager soil plasticity model is added. The example is solved in 2D with plane strain conditions.

# Model Definition

The geometry consists of a soil layer that is 45 m deep and 90 m wide. A tunnel of 10 m in diameter is placed at the symmetry axis, 20 m below the surface. A bed rock, 45 m below the surface, constrains the displacement in the vertical direction, and a roller boundary is used to model the infinite extension of the soil in the lateral direction.

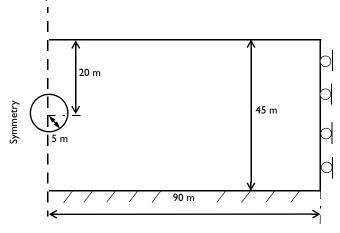


Figure 1: Dimensions and boundary conditions for the tunnel excavation model.

#### SOIL PROPERTIES

The soil properties are adapted from Ref. 2.

- Young's modulus, E = 12 MPa and Poisson's ratio v = 0.495.
- Cohesion c = 130 kPa and angle of internal friction  $\phi = 30^{\circ}$ .
- Use the Drucker-Prager criterion and match the material parameters to the Mohr-Coulomb criterion.

#### CONSTRAINTS AND LOADS

- At the lower boundary, fix the displacement with a fixed constraint.
- Use a symmetry condition at the left boundary, and roller condition at the right boundary.
- Add a **Gravity** node to account for gravity effects.

# Results and Discussion

Figure 2 shows the stress distribution due to gravity. The roller and symmetry boundaries create a linear vertical variation of the stress.

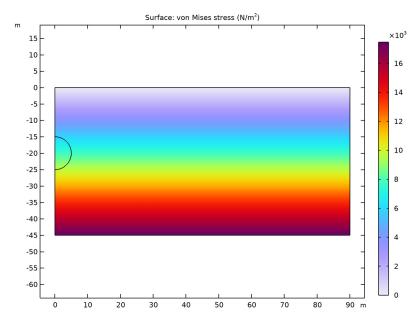
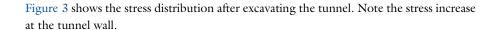


Figure 2: von Mises stress in the soil layer before excavation.



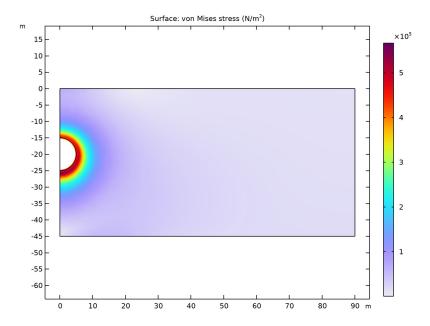


Figure 3: von Mises stress in the soil layer after excavation.

In the second step, besides removing the tunnel domain, a soil plasticity feature is included. In Figure 4, the region that experiences plastic deformation is shown.

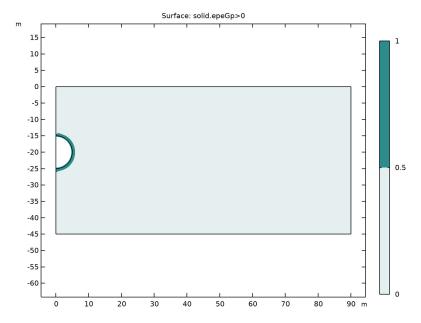


Figure 4: Plastic deformations occur near close to the tunnel wall.

The horizontal displacement and the settlement of the top surface due to the excavation is shown in Figure 5 and Figure 6.

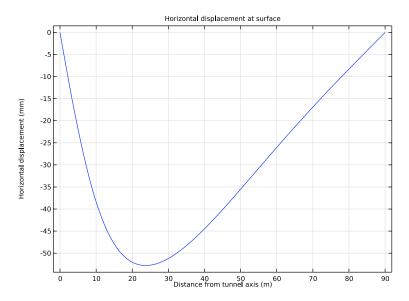


Figure 5: The horizontal displacement at the top surface.

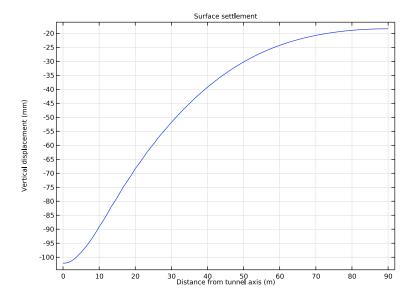


Figure 6: The surface settlement.

# References

- 1. D. Potts and L. Zdravkovic, Finite Element Analysis in Geotechnical Engineering, Thomas Telford Publishing, 2001.
- 2. H. Schweiger, "Results from Numerical Benchmark Exercises in Geotechnics," Proc. 5th European Conference on Numerical Methods in Geotechnical Engineering, pp. 305-314, 2002.

Application Library path: Geomechanics Module/Soil/tunnel excavation

# Modeling Instructions

From the File menu, choose New.

In the New window, click Model Wizard.

#### MODEL WIZARD

- I In the Model Wizard window, click 20.
- 2 In the Select Physics tree, select Structural Mechanics>Solid Mechanics (solid).
- 3 Click Add.
- 4 Click Study.
- 5 In the Select Study tree, select General Studies>Stationary.
- 6 Click Mone.

#### **GEOMETRY I**

Rectangle I (rI)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 90.
- 4 In the **Height** text field, type 45.
- 5 Locate the **Position** section. In the y text field, type -45.
- 6 Click | Build Selected.

#### Circle I (c1)

- I In the Geometry toolbar, click Circle.
- 2 In the Settings window for Circle, locate the Size and Shape section.
- 3 In the Radius text field, type 5.
- 4 In the Sector angle text field, type 180.
- **5** Locate the **Position** section. In the **y** text field, type -20.
- 6 Locate the Rotation Angle section. In the Rotation text field, type 270.
- 7 Click | Build Selected.

#### Form Union (fin)

- I In the Model Builder window, click Form Union (fin).
- 2 In the Settings window for Form Union/Assembly, click | Build Selected.

Use the full geometry and a linear elastic material in the first step.

# SOLID MECHANICS (SOLID)

Linear Elastic Material I

Since the Poisson's ratio is close to 0.5, use a mixed formulation to avoid locking effects.

- I In the Model Builder window, under Component I (compl)>Solid Mechanics (solid) click Linear Elastic Material I.
- 2 In the Settings window for Linear Elastic Material, locate the Linear Elastic Material section.
- 3 From the Use mixed formulation list, choose Pressure formulation.

# Symmetry I

- I In the Physics toolbar, click Boundaries and choose Symmetry.
- 2 Select Boundaries 1 and 3-5 only.

#### Fixed Constraint I

- I In the Physics toolbar, click Boundaries and choose Fixed Constraint.
- 2 Select Boundary 2 only.

#### Roller I

- I In the Physics toolbar, click Boundaries and choose Roller.
- **2** Select Boundary 7 only.

#### Gravity I

In the Physics toolbar, click A Global and choose Gravity.

Linear Elastic Material I

In the Model Builder window, click Linear Elastic Material 1.

### Soil Plasticity 1

- I In the Physics toolbar, click Attributes and choose Soil Plasticity.
- 2 In the Settings window for Soil Plasticity, locate the Soil Plasticity section.
- 3 Select the Match to Mohr-Coulomb criterion check box.

Add an Initial Stress and Strain node and enable it only in the second study in order to get in situ stresses due to gravity.

Linear Elastic Material I

In the Model Builder window, click Linear Elastic Material 1.

Initial Stress and Strain I

- I In the Physics toolbar, click Attributes and choose Initial Stress and Strain.
- 2 In the Settings window for Initial Stress and Strain, locate the Initial Stress and Strain section.
- **3** In the  $S_0$  table, enter the following settings:

withsol('sol1', solid.sx)	<pre>withsol('sol1', solid.sxy)</pre>	<pre>withsol('sol1', solid.sxz)</pre>
withsol('soll', solid.sxy)	<pre>withsol('sol1', solid.sy)</pre>	<pre>withsol('sol1', solid.syz)</pre>
withsol('soll', solid.sxz)	withsol('sol1', solid.syz)	<pre>withsol('sol1', solid.sz)</pre>

Add an **Activation** node to the linear elastic material in order to model the soil removal. The activation expression set to zero in order to deactivate the material. The elastic stiffness of the soil material is multiplied by activation scale factor.

Linear Elastic Material I

In the Model Builder window, click Linear Elastic Material I.

#### Activation I

- I In the Physics toolbar, click Attributes and choose Activation.
- 2 Select Domain 2 only.
- 3 In the Settings window for Activation, locate the Activation section.

4 In the Activation scale factor text field, type 1e-9.

#### MATERIALS

Material I (mat I)

- I In the Model Builder window, under Component I (comp I) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, locate the Material Contents section.
- **3** In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	E	12[MPa]	Pa	Young's modulus and Poisson's ratio
Poisson's ratio	nu	0.495	I	Young's modulus and Poisson's ratio
Density	rho	2000	kg/m³	Basic
Cohesion	cohesion	130[kPa]	Pa	Mohr-Coulomb
Angle of internal friction	internalphi	30[deg]	rad	Mohr-Coulomb

#### MESH I

Free Triangular I

In the Mesh toolbar, click Free Triangular.




#### Size

- I In the Model Builder window, click Size.
- 2 In the Settings window for Size, locate the Element Size section.
- 3 From the Predefined list, choose Finer.

#### Distribution I

- I In the Model Builder window, right-click Free Triangular I and choose Distribution.
- **2** Select Boundaries 8 and 9 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 In the Number of elements text field, type 12.

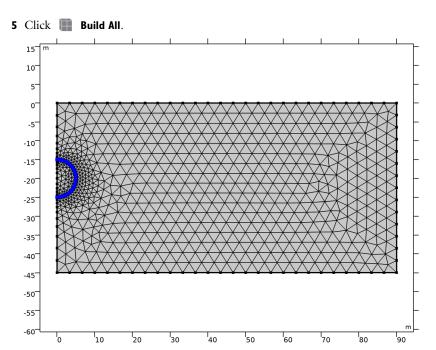

Use two stationary studies. The first one is used to compute the in situ stresses. The second study is used to compute the elastoplastic deformation due to the excavation of the tunnel.

#### STUDY: BEFORE EXCAVATION

- I In the Model Builder window, click Study I.
- 2 In the Settings window for Study, type Study: Before Excavation in the Label text field.

#### Step 1: Stationary

- I In the Model Builder window, under Study: Before Excavation click Step 1: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 Select the Modify model configuration for study step check box.
- 4 In the tree, select Component I (compl)>Solid Mechanics (solid)> Linear Elastic Material I>Soil Plasticity I, Component I (compl)>Solid Mechanics (solid)> Linear Elastic Material I>Initial Stress and Strain I, and Component I (compl)> Solid Mechanics (solid)>Linear Elastic Material I>Activation I.
- 5 Click ODisable.

#### ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- **2** Go to the **Add Study** window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

#### STUDY: AFTER EXCAVATION

- I In the Model Builder window, click Study 2.
- 2 In the Settings window for Study, type Study: After Excavation in the Label text field.

#### STUDY: BEFORE EXCAVATION

In the **Home** toolbar, click **Compute**.

#### STUDY: AFTER EXCAVATION

Click **Compute**.

#### RESULTS

Stress: Before Excavation

- I In the Model Builder window, under Results click Stress (solid).
- 2 In the Settings window for 2D Plot Group, type Stress: Before Excavation in the Label text field.

#### Surface I

In the Model Builder window, expand the Stress: Before Excavation node.

#### Deformation

- I In the Model Builder window, expand the Surface I node, then click Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 1.
- 4 In the Stress: Before Excavation toolbar, click  **Plot**.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

The second default plot shows the von Mises stress in the soil after the tunnel excavation.

Stress: After Excavation

- I In the Model Builder window, expand the Results>Stress (solid) I node, then click Stress (solid) 1.
- 2 In the Settings window for 2D Plot Group, type Stress: After Excavation in the Label text field.

#### Deformation

- I In the Model Builder window, expand the Results>Stress: After Excavation>Surface I node, then click **Deformation**.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 1.

#### Filter I

- I In the Model Builder window, click Filter I.
- 2 In the Settings window for Filter, locate the Element Selection section.
- 3 From the Element nodes to fulfill expression list, choose All.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

#### ADD PREDEFINED PLOT

- I In the Home toolbar, click Add Predefined Plot to open the Add Predefined Plot window.
- 2 Go to the Add Predefined Plot window.
- 3 In the tree, select Study: After Excavation/Solution 2 (sol2)>Solid Mechanics> Equivalent Plastic Strain (solid).
- 4 Click Add Plot in the window toolbar.
- 5 In the Home toolbar, click Add Predefined Plot to close the Add Predefined Plot window.

#### RESULTS

Plastic Region: After Excavation

In the Settings window for 2D Plot Group, type Plastic Region: After Excavation in the Label text field.

#### Surface 1

I In the Model Builder window, expand the Plastic Region: After Excavation node, then click Surface 1.

- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type solid.epeGp>0. This is a boolean expression which is 1 in the plastic region and 0 elsewhere.
- 4 Clear the **Description** check box.
- 5 Locate the Coloring and Style section. In the Number of bands text field, type 2.

#### Deformation I

- I Right-click Surface I and choose Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 1.
- 4 In the Plastic Region: After Excavation toolbar, click Plot.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

#### Plastic Region: After Excavation

- I In the Model Builder window, under Results click Plastic Region: After Excavation.
- 2 In the Settings window for 2D Plot Group, click to expand the Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 Select Domain 1 only.
- 5 In the Plastic Region: After Excavation toolbar, click Plot.

#### Horizontal Displacement: After Excavation

- I In the Home toolbar, click <a> Add Plot Group</a> and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Horizontal Displacement: After Excavation in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Study: After Excavation/ Solution 2 (sol2).
- 4 Click to expand the Title section. From the Title type list, choose Manual.
- 5 In the **Title** text area, type Horizontal displacement at surface.
- 6 Locate the Plot Settings section.
- 7 Select the x-axis label check box. In the associated text field, type Distance from tunnel axis (m).
- 8 Select the y-axis label check box. In the associated text field, type Horizontal displacement (mm).

#### Line Graph 1

I Right-click Horizontal Displacement: After Excavation and choose Line Graph.

- 2 Select Boundary 6 only.
- 3 In the Settings window for Line Graph, locate the y-Axis Data section.
- **4** In the **Expression** text field, type u.
- **5** From the **Unit** list, choose **mm**.
- 6 In the Horizontal Displacement: After Excavation toolbar, click **Tool** Plot.

Horizontal Displacement: After Excavation

In the Model Builder window, right-click Horizontal Displacement: After Excavation and choose **Duplicate**.

Vertical Displacement: After Excavation

- I In the Model Builder window, under Results click Horizontal Displacement: After Excavation 1.
- 2 In the Settings window for ID Plot Group, type Vertical Displacement: After Excavation in the Label text field.
- **3** Locate the **Title** section. In the **Title** text area, type **Surface settlement**.
- 4 Locate the Plot Settings section. In the y-axis label text field, type Vertical displacement (mm).

Line Graph 1

- I In the Model Builder window, expand the Vertical Displacement: After Excavation node, then click Line Graph 1.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type v.
- 4 In the Vertical Displacement: After Excavation toolbar, click Plot.