

Monopile with Dissolving Sacrificial Anodes

Introduction

A monopile foundation is a large-diameter structural element that can be used to support, for instance, an off-shore windmill.

This application exemplifies how the cathodic protection of a monopile decreases over time as the sacrificial anodes dissolve. The example includes secondary current distribution electrode kinetics on the protected steel structure, defining simultaneous metal dissolution and oxygen reduction (mixed potential).

By including a lumped resistance in the model between the upper structure and the lower steel pipe foundation, it is seen that the corrosion protection of the lower part is worsened.

Model Definition

The monopile geometry consists of an upper part ("the transition piece") with a coated steel surface and a lower uncoated steel pipe. Both parts are based on slightly conical cylinders, and the upper part also features a smaller ladder and a platform. Around the monopile, arrays of sacrificial anodes are placed. The surrounding ocean (salt water) and sea bed (mud) are defined as cylinders. Symmetry is used to halve the problem size. The geometry is shown in Figure 1.

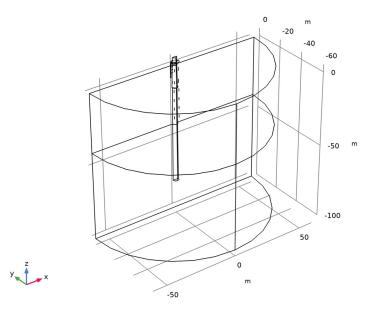


Figure 1: Model geometry.

The monopile steel surface is defined using Electrode Surfaces nodes, including simultaneous oxygen reduction and steel oxidation. Tafel kinetics is used for defining the steel oxidation reaction, and different kinetic parameters are used for the coated transition piece and the uncoated lower pipe. The oxygen reduction kinetics is defined using a limiting current density, which has a lower value on the mud-covered surface.

The sacrificial anodes are drawn as edges in the geometry and modeled using Sacrificial Edge Anode nodes. As the anodes are dissolved the radius of the anodes are lowered, and when the terminal radius is reached the anodes are shut off.

The model is solved using a Time-dependent study for a time period of twelve years. Two cases are investigated. In the first case the whole monopile is grounded. In the second case the transition piece is grounded and the lower pipe is assumed to be connected to the transition piece through a lumped resistance.

Figure 2 shows the steel surface potential at the beginning of the simulation. A higher potential indicates a more oxidative (corrosive) environment. The mud-covered part of the monopile is exposed to the highest potentials.

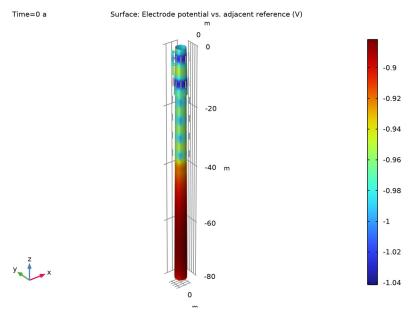


Figure 2: Steel surface potential at the beginning of the simulation.

Figure 3 and the close-up in Figure 4 depicts the potential at the end of the simulation. Compared to the situation at t = 0, the potentials are generally higher, especially for the lower part. Figure 4 also shows that the anodes facing the lower part of the monopile have been consumed at a higher rate.

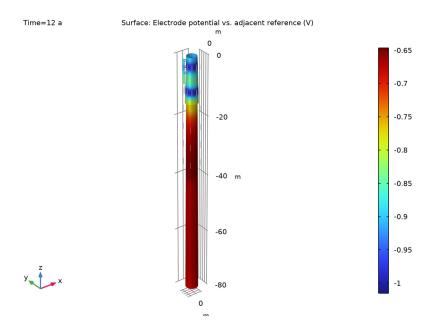


Figure 3: Steel surface potential at the end of the simulation.

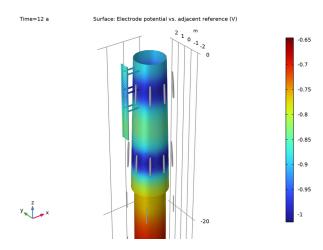


Figure 4: Steel surface potential at the end of the simulation (close-up).

Figure 5 and Figure 6 show the steel oxidation current density (that is, the corrosion rate), at the beginning and end of the simulation, respectively. The corrosion rate increases approximately three orders of magnitudes as a result of the dissolution of the anodes.

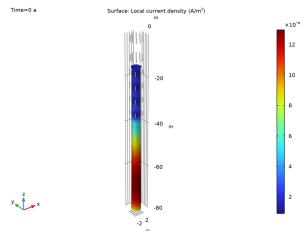


Figure 5: Steel oxidation current density at the beginning of the simulation.

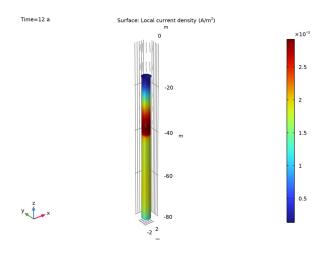


Figure 6: Steel oxidation current density at the end of the simulation.

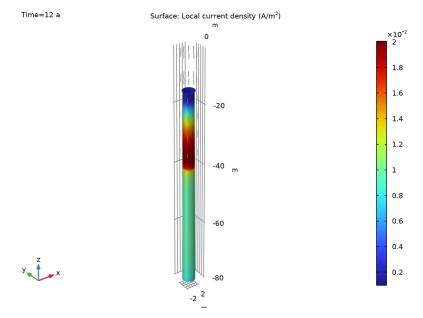


Figure 7: Steel oxidation current density at the end of the simulation when introducing a lumped resistance between the transition piece and the lower part of the monopile.

Figure 7 shows the steel oxidation current densities at the end of the simulation for the second case when a lumped resistance between the lower and upper part of the monopile has been introduced. The corrosion rate for the lower part is generally higher compared to Figure 6.

Application Library path: Corrosion_Module/Cathodic_Protection/monopile

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 In the Select Physics tree, select Electrochemistry>Cathodic Protection (cp).
- 3 Click Add.
- 4 Click 🗪 Study.
- 5 In the Select Study tree, select General Studies>Time Dependent.
- 6 Click **Done**.

GLOBAL DEFINITIONS

Parameters 1


- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click **Load from File**.
- **4** Browse to the model's Application Libraries folder and double-click the file monopile_parameters.txt.

GEOMETRY I

The model geometry is available as a parameterized geometry sequence in a separate MPH-file. If you want to build it from scratch, follow the instructions in the section Appendix — Geometry Modeling Instructions. Otherwise load it from file with the following steps.

- I In the Geometry toolbar, click Insert Sequence and choose Insert Sequence.
- **2** Browse to the model's Application Libraries folder and double-click the file monopile_geom_sequence.mph.
- 3 In the Geometry toolbar, click **Build All**.
- 4 Click the **Toom Extents** button in the **Graphics** toolbar.
- 5 Click the Wireframe Rendering button in the Graphics toolbar.

6 In the Model Builder window, under Component I (compl) click Geometry I.

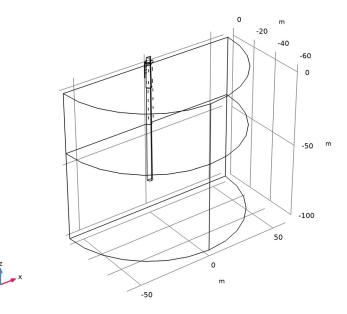

MATERIALS

Load the Seawater electrolyte material from the Corrosion Material Library as follows:

ADD MATERIAL

- I In the Home toolbar, click **‡ Add Material** to open the **Add Material** window.
- 2 Go to the Add Material window.
- 3 In the tree, select Corrosion>Electrolytes>Seawater.
- 4 Right-click and choose Add to Component 1 (comp1).

 The Seawater entry contains salinity and temperature-dependent conductivity data. The

The **Seawater** entry contains salinity and temperature-dependent conductivity data. The temperature will be taken from the **Default Model Inputs** that you will define later. The salinity is set to a constant value of 3.5%, but may be altered on the **Seawater** node itself.

5 In the Home toolbar, click **4 Add Material** to close the **Add Material** window.

MATERIALS

Seawater (mat1)

- I In the Settings window for Material, locate the Geometric Entity Selection section.
- 2 Click Clear Selection.

3 Select Domain 2 only.

Mud

- I In the Model Builder window, right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Mud in the Label text field.
- **3** Select Domain 1 only.
- **4** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Electrolyte conductivity	sigmal_iso; sigmalii = sigmal_iso, sigmalij = 0	sigma_mud	S/m	Electrolyte conductivity

GLOBAL DEFINITIONS

Default Model Inputs

Set up the temperature value used in the model.

- I In the Model Builder window, under Global Definitions click Default Model Inputs.
- 2 In the Settings window for Default Model Inputs, locate the Browse Model Inputs section.
- 3 In the tree, select General>Temperature (K) minput.T.
- 4 Find the Expression for remaining selection subsection. In the Temperature text field, type Τ.

DEFINITIONS

Tob

- I In the **Definitions** toolbar, click **Cylinder**.
- 2 In the Settings window for Cylinder, type Top in the Label text field.
- **3** Locate the **Geometric Entity Level** section. From the **Level** list, choose **Boundary**.
- 4 Locate the Size and Shape section. In the Outer radius text field, type 10.
- **5** In the **Top distance** text field, type **0.1**.
- 6 In the Bottom distance text field, type -20.1.
- 7 Locate the Output Entities section. From the Include entity if list, choose Entity inside cylinder.
- **8** Right-click **Top** and choose **Duplicate**.

Middle

- I In the Model Builder window, under Component I (compl)>Definitions>Selections click
 Top I.
- 2 In the Settings window for Cylinder, type Middle in the Label text field.
- 3 Locate the Size and Shape section. In the Top distance text field, type 0.
- 4 In the Bottom distance text field, type -40.
- **5** Locate the **Position** section. In the **z** text field, type -15.
- 6 Right-click Middle and choose Duplicate.

Bottom

- I In the Model Builder window, under Component I (compl)>Definitions>Selections click Middle I.
- 2 In the Settings window for Cylinder, type Bottom in the Label text field.
- 3 Locate the Size and Shape section. In the Bottom distance text field, type -60.
- 4 Locate the **Position** section. In the **z** text field, type -30.

Middle and Bottom

- I In the **Definitions** toolbar, click **Union**.
- 2 In the Settings window for Union, locate the Geometric Entity Level section.
- 3 From the Level list, choose Boundary.
- 4 In the Label text field, type Middle and Bottom.
- **5** Locate the **Input Entities** section. Under **Selections to add**, click + **Add**.
- 6 In the Add dialog box, in the Selections to add list, choose Middle and Bottom.
- 7 Click OK.

CATHODIC PROTECTION (CP)

- I In the Model Builder window, under Component I (compl) click Cathodic Protection (cp).
- 2 In the Settings window for Cathodic Protection, locate the Domain Selection section.
- 3 In the list, select 3.
- 4 Click Remove from Selection.
- **5** Select Domains 1 and 2 only.

Protected Metal Surface - Coated Steel

In the Physics toolbar, click **Boundaries** and choose Protected Metal Surface.

- 2 In the Settings window for Protected Metal Surface, type Protected Metal Surface -Coated Steel in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Top.
- **4** Locate the **Oxygen Reduction Current Density** section. In the i_{O2} text field, type ilim_02.

Electrode Surface - Uncoated Steel

- I In the Physics toolbar, click **Boundaries** and choose **Electrode Surface**.
- 2 In the Settings window for Electrode Surface, type Electrode Surface Uncoated Steel in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Middle and Bottom

Electrode Reaction I - Steel Oxidation

- I In the Model Builder window, click Electrode Reaction I.
- 2 In the Settings window for Electrode Reaction, type Electrode Reaction 1 Steel Oxidation in the Label text field.
- **3** Locate the **Equilibrium Potential** section. In the $E_{\rm eq}$ text field, type Eeq_Fe.
- 4 Locate the **Electrode Kinetics** section. From the **Kinetics expression type** list, choose Anodic Tafel equation.
- **5** In the i_0 text field, type i0_Fe.
- **6** In the A_a text field, type A_Fe.

Electrode Surface - Uncoated Steel

In the Model Builder window, click Electrode Surface - Uncoated Steel.

Electrode Reaction 2 - Oxygen Reduction (Sea)

- I In the Physics toolbar, click 🦳 Attributes and choose Electrode Reaction.
- 2 In the Settings window for Electrode Reaction, type Electrode Reaction 2 Oxygen Reduction (Sea) in the Label text field.
- 3 Locate the Boundary Selection section. Click Clear Selection.
- 4 From the Selection list, choose Middle.
- **5** Locate the **Electrode Kinetics** section. From the $i_{loc.expr}$ list, choose **User defined**. In the associated text field, type ilim 02.
- 6 Right-click Electrode Reaction 2 Oxygen Reduction (Sea) and choose Duplicate.

Electrode Reaction 3 - Oxygen Reduction (Mud)

- I In the Model Builder window, under Component I (compl)>Cathodic Protection (cp)> Electrode Surface Uncoated Steel click Electrode Reaction 2 Oxygen Reduction (Sea) 1.
- 2 In the Settings window for Electrode Reaction, type Electrode Reaction 3 Oxygen Reduction (Mud) in the Label text field.
- 3 Locate the Boundary Selection section. From the Selection list, choose Bottom.
- **4** Locate the **Electrode Kinetics** section. In the $i_{loc.expr}$ text field, type ilim_02_mud.

Sacrificial Edge Anode 1

- I In the Physics toolbar, click Edges and choose Sacrificial Edge Anode.
- 2 In the Settings window for Sacrificial Edge Anode, locate the Edge Selection section.
- 3 From the Selection list, choose Anodes.
- **4** Locate the **Sacrificial Anode Properties** section. In the Q_0 text field, type AnodeCap.
- **5** In the r_0 text field, type R0.
- **6** In the $r_{\rm end}$ text field, type Rf.

Electrode Reaction I

- I In the Model Builder window, click Electrode Reaction I.
- 2 In the Settings window for Electrode Reaction, locate the Equilibrium Potential section.
- 3 In the $E_{\rm eq}$ text field, type Eeq_AlZn.

Symmetry I

- I In the Physics toolbar, click **Boundaries** and choose Symmetry.
- 2 Select Boundaries 2, 4, and 266 only.

Initial Values 1

- I In the Model Builder window, click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- **3** In the *phil* text field, type Eeq AlZn.

MESH I

In the Model Builder window, under Component I (compl) right-click Mesh I and choose Edit Physics-Induced Sequence.


Size

- I In the Model Builder window, under Component I (compl)>Mesh I click Size.
- 2 In the Settings window for Size, locate the Element Size section.

- **3** Click the **Custom** button.
- 4 Locate the Element Size Parameters section. In the Minimum element size text field, type
- 5 In the Curvature factor text field, type 0.4.

Size 1

- I In the Model Builder window, right-click Free Tetrahedral I and choose Size.
- 2 In the Settings window for Size, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Edge.
- 4 From the Selection list, choose Anodes.
- 5 Locate the Element Size section. From the Predefined list, choose Extremely fine.
- **6** Click the **Custom** button.
- 7 Locate the Element Size Parameters section.
- 8 Select the Maximum element size check box. In the associated text field, type 0.1.
- 9 Click III Build All.

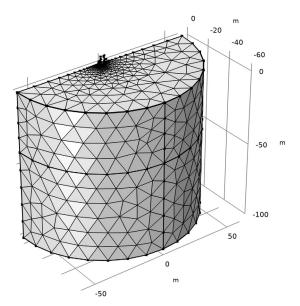



STUDY I

Step 1: Time Dependent

- I In the Model Builder window, under Study I click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- 3 From the Time unit list, choose a.
- 4 In the Output times text field, type range (0, 1, 12).
- 5 In the Model Builder window, click Study 1.
- 6 In the Settings window for Study, locate the Study Settings section.
- 7 Clear the Generate default plots check box.
- 8 In the Home toolbar, click **Compute**.

RESULTS

Mirror 3D I

- I In the Model Builder window, expand the Results node.
- 2 Right-click Results>Datasets and choose More 3D Datasets>Mirror 3D.
- 3 In the Settings window for Mirror 3D, locate the Plane Data section.
- 4 From the Plane list, choose ZX-planes.

Steel Electrode Potential

- I In the Results toolbar, click **3D Plot Group**.
- 2 In the Settings window for 3D Plot Group, type Steel Electrode Potential in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Mirror 3D 1.
- 4 Locate the Plot Settings section. Clear the Plot dataset edges check box.

Surface I

- I Right-click Steel Electrode Potential and choose Surface.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 1 (comp1)> Cathodic Protection>cp.Evsref Electrode potential vs. adjacent reference V.
- 3 In the Steel Electrode Potential toolbar, click Plot.

Line 1

- I In the Model Builder window, right-click Steel Electrode Potential and choose Line.
- 2 In the Settings window for Line, locate the Expression section.

- **3** In the **Expression** text field, type 1.
- 4 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 5 Locate the Coloring and Style section. From the Line type list, choose Tube.
- 6 In the Tube radius expression text field, type cp.redge.
- 7 Select the Radius scale factor check box.
- 8 From the Coloring list, choose Uniform.
- 9 From the Color list, choose Gray.

Steel Electrode Potential

- I Click the **Zoom Extents** button in the **Graphics** toolbar.
- 2 In the Model Builder window, click Steel Electrode Potential.
- 3 In the Settings window for 3D Plot Group, locate the Data section.
- 4 From the Time (a) list, choose 0.
- 5 In the Steel Electrode Potential toolbar, click Plot. The Electrode Potential vs. Adjacent reference at time t = 0 a should look like Figure 2.
- 6 From the Time (a) list, choose 12.
- 7 In the Steel Electrode Potential toolbar, click **Plot**. The Electrode Potential vs. Adjacent reference at time t = 12 a should look like Figure 3.
- 8 Right-click Steel Electrode Potential and choose Duplicate.

Iron Dissolution Current Density

- I In the Model Builder window, under Results click Steel Electrode Potential I.
- 2 In the Settings window for 3D Plot Group, type Iron Dissolution Current Density in the Label text field.

Surface 1

- I In the Model Builder window, expand the Iron Dissolution Current Density node, then click Surface 1.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Cathodic Protection>Electrode kinetics>cp.iloc_erl - Local current density - A/m2.
- 4 Click the **Zoom Extents** button in the **Graphics** toolbar.

Iron Dissolution Current Density

- I In the Model Builder window, click Iron Dissolution Current Density.
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Time (a) list, choose 0.
- 4 In the Iron Dissolution Current Density toolbar, click Plot.

 The local current density at time t = 0 a should look like Figure 5.
- 5 From the Time (a) list, choose 12.
- **6** In the Iron Dissolution Current Density toolbar, click **Plot**.

The local current density at time t = 12 a should look like Figure 6.

CATHODIC PROTECTION (CP)

Electrode Surface - Uncoated Steel

- I In the Model Builder window, under Component I (compl)>Cathodic Protection (cp) click Electrode Surface - Uncoated Steel.
- 2 In the Settings window for Electrode Surface, locate the Electrode Phase Potential Condition section.
- 3 From the Electrode phase potential condition list, choose External short.
- **4** In the R text field, type R_Tp .

STUDY I

In the **Home** toolbar, click **Compute**.

RESULTS

Iron Dissolution Current Density

- I In the Model Builder window, under Results click Iron Dissolution Current Density.
- 2 In the Iron Dissolution Current Density toolbar, click **Plot**.

The local current density after introducing external short at time t = 12 a should look like Figure 7.

Appendix — Geometry Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click **3D**.
- 2 Click M Done.

GEOMETRY I

Cone I (cone I)

- I In the **Geometry** toolbar, click **Cone**.
- 2 In the Settings window for Cone, locate the Size and Shape section.
- 3 In the Bottom radius text field, type 2.
- 4 In the Height text field, type 80.
- 5 In the **Top radius** text field, type 1.6.
- **6** Locate the **Position** section. In the **z** text field, type -80.
- 7 Click **Build Selected**.
- 8 Click the Wireframe Rendering button in the Graphics toolbar.

Cone 2 (cone2)

- I In the Geometry toolbar, click Cone.
- 2 In the Settings window for Cone, locate the Size and Shape section.
- 3 In the Bottom radius text field, type 2.
- 4 In the Height text field, type 20.
- **5** In the **Top radius** text field, type 1.5.
- 6 Locate the Position section. In the z text field, type -15.
- 7 Click | Build Selected.

Work Plane I (wpl)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose xz-plane.
- 4 In the y-coordinate text field, type -0.4.

Work Plane I (wp I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wbl)>Quadratic Bézier I (qbl)

- I In the Work Plane toolbar, click * More Primitives and choose Quadratic Bézier.
- 2 In the Settings window for Quadratic Bézier, locate the Control Points section.

- 3 In row 1, set xw to 1.1.
- 4 In row 1, set yw to 3.5.
- **5** In row **2**, set **xw** to **3**.
- 6 In row 2, set yw to 3.5.
- 7 In row 3, set xw to 3.
- **8** In row **3**, set **yw** to **2**.

Work Plane I (wp I)>Line Segment I (ls I)

- I In the Work Plane toolbar, click * More Primitives and choose Line Segment.
- 2 In the Settings window for Line Segment, locate the Starting Point section.
- 3 From the Specify list, choose Coordinates.
- 4 Locate the **Endpoint** section. From the **Specify** list, choose **Coordinates**.
- **5** Locate the **Starting Point** section. In the **xw** text field, type **3**.
- 6 In the yw text field, type 2.
- 7 Locate the **Endpoint** section. In the **xw** text field, type 3.
- 8 In the yw text field, type -8.
- 9 In the Work Plane toolbar, click | Build All.
- 10 Click the **Zoom Extents** button in the **Graphics** toolbar.

Work Plane 2 (wp2)

- I In the Model Builder window, right-click Geometry I and choose Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 In the z-coordinate text field, type -8.

Work Plane 2 (wp2)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 2 (wp2)>Circle 1 (c1)

- I In the Work Plane toolbar, click Circle.
- 2 In the Settings window for Circle, locate the Size and Shape section.
- 3 In the Radius text field, type 0.1.
- 4 Locate the **Position** section. In the xw text field, type 3.
- 5 In the yw text field, type -0.4.
- 6 Click | Build Selected.

Sweep I (swel)

In the Model Builder window, right-click Geometry I and choose Sweep.

SELECTION LIST

- I In the Home toolbar, click Windows and choose Selection List.
- 2 Go to the Selection List window.
- 3 In the Domains tree, select wp2>1.
- 4 Click Add to Active Selection for Sweep I (swel) in the window toolbar.
- 5 In the Model Builder window, click Sweep I (swel).
- 6 In the Settings window for Sweep, locate the Spine Curve section.
- 7 Click to select the Activate Selection toggle button for Edges to follow.
- 8 Go to the Selection List window.
- 9 In the Domains tree, select wp1>1 and wp1>2.
- 10 Click Add to Active Selection for Sweep I (swel) in the window toolbar.
- II In the Settings window for Sweep, locate the Spine Curve section.
- 12 Select the Manual control of sweep direction check box.
- 13 Select the Reverse direction check box.
- 14 Locate the Keep Input section. Clear the Keep input objects check box.
- 15 Click | Build Selected.

GEOMETRY I

Copy I (copy I)

- I In the Geometry toolbar, click Transforms and choose Copy.
- 2 Select the object swel only.
- 3 In the Settings window for Copy, locate the Displacement section.
- 4 In the y text field, type 0.8.
- 5 Click | Build Selected.

Cylinder I (cyll)

- I In the Geometry toolbar, click Cylinder.
- 2 In the Settings window for Cylinder, locate the Size and Shape section.
- 3 In the Radius text field, type 2.8.
- 4 In the Height text field, type 0.1.

- 5 Locate the Position section. In the z text field, type 2.
- 6 Click Pauld Selected.

Block I (blk I)

- I In the Geometry toolbar, click Block.
- 2 In the Settings window for Block, locate the Size and Shape section.
- **3** In the **Width** text field, type **0.1**.
- 4 In the Depth text field, type 0.8.
- 5 In the Height text field, type 0.05.
- 6 Locate the Position section. In the x text field, type 2.95.
- 7 In the y text field, type -0.4.
- 8 In the z text field, type -8.
- 9 Click Pauld Selected.

Array I (arr1)

In the **Geometry** toolbar, click **Transforms** and choose **Array**.

SELECTION LIST

- I Go to the Selection List window.
- 2 In the Objects tree, select blk! (solid).
- 3 Click Add to Active Selection for Array I (arrI) in the window toolbar.
- 4 In the Settings window for Array, locate the Size section.
- 5 In the z size text field, type 50.
- 6 Locate the **Displacement** section. In the **z** text field, type 0.18.
- 7 Click Pauld Selected.

GEOMETRY I

Work Plane 3 (wp3)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane list, choose yz-plane.
- 4 In the x-coordinate text field, type 3.

Work Plane 3 (wp3)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane 3 (wp3)>Circle 1 (c1)

- I In the Work Plane toolbar, click (Circle.
- 2 In the Settings window for Circle, locate the Size and Shape section.
- 3 In the Radius text field, type 0.08.
- **4** Locate the **Position** section. In the **xw** text field, type -0.4.
- 5 In the yw text field, type -7.8.
- 6 Click Pauld Selected.

Work Plane 3 (wp3)>Array 1 (arr1)

In the Work Plane toolbar, click Transforms and choose Array.

SELECTION LIST

- I Go to the Selection List window.
- 2 In the Objects tree, select cl (solid).
- 3 Click Add to Active Selection for Array I (arrI) in the window toolbar.
- 4 In the Settings window for Array, locate the Size section.
- 5 In the xw size text field, type 2.
- **6** In the **yw size** text field, type 4.
- 7 Locate the **Displacement** section. In the xw text field, type 0.8.
- 8 In the yw text field, type 2.
- 9 Click | Build Selected.
- 10 Click the **Zoom Extents** button in the **Graphics** toolbar.

GEOMETRY I

Extrude I (extI)

- I In the Model Builder window, under Component I (compl) right-click Geometry I and choose Extrude.
- 2 In the Settings window for Extrude, locate the Distances section.
- **3** In the table, enter the following settings:

Distances (m) 3

- 4 Select the Reverse direction check box.
- 5 Click | Build Selected.

Move I (movI)

In the **Geometry** toolbar, click **Transforms** and choose **Move**.

SELECTION LIST

- I Go to the **Selection List** window.
- 2 In the Objects tree, select extl (solid).
- 3 Click Add to Active Selection for Move I (movI) in the window toolbar.
- 4 In the Settings window for Move, locate the Displacement section.
- 5 In the z text field, type 3.
- 6 Click | Build Selected.

GEOMETRY I

Union I (uni I)

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 In the Settings window for Union, locate the Union section.
- 3 Clear the **Keep interior boundaries** check box.

SELECTION LIST

- I Go to the **Selection List** window.
- 2 In the Objects tree, select cone2 (solid), swel (solid), copyl (solid), cyll (solid), Array 1> arr1(1,1,1) (solid), Array 1>arr1(1,1,2) (solid), Array 1>arr1(1,1,3) (solid), Array 1>arr1(1,1,3)
 - 1,4) (solid), Array I>arr1(1,1,5) (solid), Array I>arr1(1,1,6) (solid), Array I>arr1(1,1,
 - 7) (solid), Array 1>arr1(1,1,8) (solid), Array 1>arr1(1,1,9) (solid), Array 1>arr1(1,1,
 - 10) (solid), Array I>arr1(1,1,11) (solid), Array I>arr1(1,1,12) (solid), Array I>arr1(1,1,
 - 13) (solid), Array I>arr1(1,1,14) (solid), Array I>arr1(1,1,15) (solid), Array I>arr1(1,1,
 - 16) (solid), Array I>arr1(1,1,17) (solid), Array I>arr1(1,1,18) (solid), Array I>arr1(1,1,
 - 19) (solid), Array 1>arr1(1,1,20) (solid), Array 1>arr1(1,1,21) (solid), Array 1>arr1(1,1,
 - 22) (solid), Array 1>arr1(1,1,23) (solid), Array 1>arr1(1,1,24) (solid), Array 1>arr1(1,1,

 - 25) (solid), Array I>arr1(1,1,26) (solid), Array I>arr1(1,1,27) (solid), Array I>arr1(1,1,
 - 28) (solid), Array 1>arr1(1,1,29) (solid), Array 1>arr1(1,1,30) (solid), Array 1>arr1(1,1,
 - 31) (solid), Array I>arr1(1,1,32) (solid), Array I>arr1(1,1,33) (solid), Array I>arr1(1,1,
 - 34) (solid), Array I>arr1(1,1,35) (solid), Array I>arr1(1,1,36) (solid), Array I>arr1(1,1,
 - 37) (solid), Array 1>arr1(1,1,38) (solid), Array 1>arr1(1,1,39) (solid), Array 1>arr1(1,1,
 - 40) (solid), Array 1>arr1(1,1,41) (solid), Array 1>arr1(1,1,42) (solid), Array 1>arr1(1,1,
 - 43) (solid), Array I>arr1(1,1,44) (solid), Array I>arr1(1,1,45) (solid), Array I>arr1(1,1,

- 46) (solid), Array 1>arr1(1,1,47) (solid), Array 1>arr1(1,1,48) (solid), Array 1>arr1(1,1,
- 49) (solid), Array 1>arr1(1,1,50) (solid), and mov1 (solid).
- 3 Click Add to Active Selection for Union I (unil) in the window toolbar.
- 4 In the Model Builder window, click Union I (unil).
- 5 In the Settings window for Union, click **Parallel Selected**.

GEOMETRY I

Cylinder 2 (cyl2)

- I In the Geometry toolbar, click (Cylinder.
- 2 In the Settings window for Cylinder, locate the Size and Shape section.
- 3 In the Radius text field, type 60.
- 4 In the Height text field, type 100.
- **5** Locate the **Position** section. In the **z** text field, type -100.
- **6** Click to expand the **Layers** section. In the table, enter the following settings:

Layer name	Thickness (m)
Layer 1	60

- 7 Clear the Layers on side check box.
- 8 Select the Layers on bottom check box.
- 9 Click | Build Selected.

Block 2 (blk2)

- I In the Geometry toolbar, click **Block**.
- 2 In the Settings window for Block, locate the Size and Shape section.
- **3** In the **Width** text field, type 150.
- 4 In the **Depth** text field, type 75.
- 5 In the Height text field, type 300.
- **6** Locate the **Position** section. In the **x** text field, type -75.
- 7 In the y text field, type -75.
- 8 In the z text field, type -150.
- 9 Click **Build Selected**.

Difference I (dif1)

In the Geometry toolbar, click Booleans and Partitions and choose Difference.

SELECTION LIST

- I Go to the Selection List window.
- 2 In the Objects tree, select conel (solid), unil (solid), and cyl2 (solid).
- 3 Click Add to Active Selection for Difference I (dif1) in the window toolbar.
- 4 In the Settings window for Difference, locate the Difference section.
- **5** Click to select the **Activate Selection** toggle button for **Objects to subtract**.
- 6 Go to the Selection List window.
- 7 In the Objects tree, select blk2 (solid).
- 8 Click Add to Active Selection for Difference I (dif1) in the window toolbar.
- 9 In the Model Builder window, click Difference I (dif1).
- 10 In the Settings window for Difference, click | Build Selected.

GEOMETRY I

Delete Entities I (dell)

- I In the Model Builder window, under Component I (compl) right-click Geometry I and choose Delete Entities.
- 2 In the Settings window for Delete Entities, locate the Entities or Objects to Delete section.
- 3 From the Geometric entity level list, choose Domain.
- **4** On the object **difl**, select Domains 4–7 only.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
NanodeTp	10	10	Number of anodes around transition piece
NanodeMp	4	4	Number of anodes around monopile

GEOMETRY I

Polygon I (boll)

I In the Geometry toolbar, click \bigcirc More Primitives and choose Polygon.

- 2 In the Settings window for Polygon, locate the Coordinates section.
- **3** In the table, enter the following settings:

x (m)	y (m)	z (m)
-2.4	0	-4
-2.3	0	-2

- 4 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. Click New.
- 5 In the New Cumulative Selection dialog box, type AnodeTp in the Name text field.
- 6 Click OK.

Rotate I (rot1)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 In the Settings window for Rotate, locate the Input section.
- 3 From the Input objects list, choose AnodeTp.
- 4 Locate the Rotation section. In the Angle text field, type -range(180/NanodeTp,360/ NanodeTp, 180-180/NanodeTp).
- 5 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. From the Contribute to list, choose AnodeTp.
- 6 Click | Build Selected.

Copy 2 (copy2)

- I In the Geometry toolbar, click Transforms and choose Copy.
- 2 In the Settings window for Copy, locate the Input section.
- 3 Click the Paste Selection button for Input objects.
- 4 In the Paste Selection dialog box, type rot1(1) rot1(2) rot1(3) rot1(4) rot1(5) in the Selection text field.
- 5 Click OK.
- 6 Select the objects rot1(1), rot1(2), rot1(3), rot1(4), and rot1(5) only.
- 7 In the Settings window for Copy, locate the Displacement section.
- 8 In the z text field, type -8.
- 9 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. From the **Contribute to** list, choose **AnodeTp**.
- 10 Click | Build Selected.

Polygon 2 (pol2)

- I In the Geometry toolbar, click \bigoplus More Primitives and choose Polygon.
- 2 In the Settings window for Polygon, locate the Coordinates section.
- 3 From the Data source list, choose Vectors.
- 4 In the x text field, type 2.5.
- 5 In the y text field, type 0.
- 6 In the z text field, type -16 -18.
- 7 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. Click New.
- 8 In the New Cumulative Selection dialog box, type AnodeMp in the Name text field.
- 9 Click OK.

Array 2 (arr2)

- I In the **Geometry** toolbar, click **Transforms** and choose **Array**.
- 2 In the Settings window for Array, locate the Input section.
- 3 From the Input objects list, choose AnodeMp.
- 4 Locate the Size section. In the z size text field, type 4.
- **5** Locate the **Displacement** section. In the **z** text field, type -6.
- 6 Click | Build Selected.

Rotate 2 (rot2)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 In the Settings window for Rotate, locate the Input section.
- 3 Click the Paste Selection button for Input objects.
- 4 In the Paste Selection dialog box, type arr2(1,1,1) arr2(1,1,2) arr2(1,1,3) arr2(1,1,4) in the Selection text field.
- 5 Click OK.
- 6 Select the objects arr2(1,1,1), arr2(1,1,2), arr2(1,1,3), and arr2(1,1,4) only.
- 7 In the Settings window for Rotate, locate the Rotation section.
- 8 In the Angle text field, type range (180/NanodeMp, 360/NanodeMp, 180-180/NanodeMp).
- 9 Locate the Selections of Resulting Entities section. Find the Cumulative selection subsection. From the Contribute to list, choose AnodeMp.
- 10 Click | Build Selected.

Anodes

- I In the Geometry toolbar, click \(\frac{1}{2} \) Selections and choose Union Selection.
- 2 In the Settings window for Union Selection, type Anodes in the Label text field.
- 3 Locate the Geometric Entity Level section. From the Level list, choose Edge.
- **4** Locate the **Input Entities** section. Click + **Add**.
- 5 In the Add dialog box, in the Selections to add list, choose AnodeTp and AnodeMp.
- 6 Click OK.

Rotate 3 (rot3)

- I In the Geometry toolbar, click Transforms and choose Rotate.
- 2 In the Settings window for Rotate, locate the Input section.
- 3 Click the Paste Selection button for Input objects.
- 4 In the Paste Selection dialog box, type del1 rot1(1) rot1(2) rot1(3) rot1(4) rot1(5) copy2(1) copy2(2) copy2(3) copy2(4) copy2(5) del1 rot1(1) rot1(2) rot1(3) rot1(4) rot1(5) rot2(1) rot2(2) rot2(3) rot2(4) rot2(5) rot2(6) rot2(7) rot2(8) in the Selection text field.
- 5 Click OK.
- **6** Click in the **Graphics** window and then press Ctrl+A to select all objects.
- 7 In the Settings window for Rotate, locate the Rotation section.
- 8 In the Angle text field, type 180.
- 9 Click **P** Build Selected.