

Carbon Deposition in Heterogeneous Catalysis

Carbon deposition onto the surface of solid catalysts is commonly observed in hydrocarbon processing. Carbon deposits can affect both the activity of catalysts as well as the flow of gas through a catalyst bed.

This example investigates the thermal decomposition of methane into hydrogen and solid carbon with two models. In the first model, the isothermal process occurring in an ideal reactor is simulated with the Reaction Engineering interface. The influence of carbon deposition on catalyst activity is also considered. In the second model, the effect that the carbon deposits have on the porosity and the fluid flow is studied. The second simulation takes both time and space dependencies into account.

Model Definition

CHEMISTRY

Methane decomposes over a Ni/Al₂O₃ catalyst according to the overall chemical reaction

$$CH_4 \rightarrow C + 2H_2 \tag{1}$$

Under atmospheric pressure, the temperate ranging from 490 °C to 590 °C and a volume fraction of hydrogen between 0 and 40%, the following reaction rate expression has been reported in the literature (Ref. 1):

$$r = k \cdot \frac{P_{\text{CH}_4} - \frac{P_{\text{H}_2}^2}{K_p}}{(1 + k_{\text{H}} \sqrt{P_{\text{H}_2}})^2}$$
 (2)

where

$$k = k_0 \cdot \exp\left(20.492 - \frac{1.042 \cdot 10^5 \text{ J/mol}}{R_g T}\right)$$
 (3)

$$k_{\rm H} = \exp \left(\frac{1.632 \cdot 10^5 \text{ J/mol}}{R_{\rm g} T} - 22.426 \right)$$

and

$$K_{\rm p} = 5.088 \cdot 10^5 \cdot \exp\left(-\frac{9.12 \cdot 10^4 \,\text{J/(mol)}}{R_{\rm g}T}\right)$$

The constant k_0 in Equation 3 is $2.31 \cdot 10^{-5}$ mol/(m³·s), supposing the amount of catalyst being 1 g/m³. The unit for pressure in Equation 2 is bar.

IDEAL REACTOR MODEL

This model treats the isothermal decomposition of methane (Figure 2) in a perfectly mixed batch reactor with constant volume. The species mass balances are summarized by

$$\frac{dc_i}{dt} = R_i$$

The rate term, R_i (SI unit: mol/(m³·s)) for each species, takes into account the reaction stoichiometry coefficients, v_i , the reaction rate reported in Equation 2, r mol/(m³·s), and the catalyst activity, a:

$$R_i = v_i r a$$

The mass balances of the reacting species are then

$$\frac{dc_{CH_4}}{dt} = -ra$$

$$\frac{dc_C}{dt} = ra$$

$$\frac{dc_{H_2}}{dt} = 2ra$$

The time dependence of the catalytic activity is expressed by

$$\frac{da}{dt} = -k_a r^2 c_C a$$

where

$$k_a = k_{a0} \cdot \exp\left(\frac{1.356 \cdot 10^5 \text{ J/mol}}{R_g T} - 32.007\right)$$

where k_{a0} is $8.324 \cdot 10^6 \, (\text{m}^3/\text{mol})^3 \cdot \text{s}$. Solving the mass balances provides the evolution of the species concentrations over time. The fact that carbon is in the solid phase is taken into

account by removing its effect on gas phase physical properties. The pressure in the reactor is a function of only the methane and hydrogen concentrations:

$$P = R_{g}T(c_{CH_{s}} + c_{H_{s}})$$

SPACE- AND TIME-DEPENDENT MODEL

The second model takes fluid flow, mass transport, heat transfer, and the chemical reaction into account. It is created by the Generate Space-Dependent Model feature available in the Reaction Engineering interface.

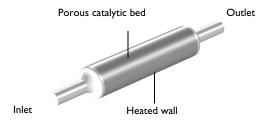


Figure 1: Methane enters from the left and reacts in the porous catalytic bed. The wall of the bed is heated.

EOUATIONS

The space-dependent model solves coupled momentum, mass, and energy balances together with a void fraction balance. The fluid flow is laminar, the concentrations high (no solvent is present), and porous media with variable porosity exist within the reactor. Additionally, the impact of heating is studied. The following physics interfaces are used in this example:

- Chemistry
- Transport of Concentrated Species
- · Heat Transfer in Porous Media
- Laminar flow
- · Domain ODEs and PDEs

The Domain ODEs and PDEs interface solves a balance for the void fraction, or porosity, of the bed given by

$$\frac{d\varepsilon}{dt} = -k_{\text{por}} \cdot \frac{\varepsilon r M_C}{\rho_{\text{soot}}}$$

where $k_{\rm por}$ is a constant, M_C (kg/mol) is the carbon molar weight, and $\rho_{\rm soot}$ (kg/m³) is the deposited carbon density. This equation can be implemented in the Domain ODEs and DAEs interface, resulting in a porosity distribution across the catalytic bed as a function of time. The initial porosity of the bed is assumed to be $\varepsilon = 0.4$.

The porosity is related to the permeability of the porous domain by (Ref. 2)

$$\kappa = \kappa_0 \left(\frac{\varepsilon}{\varepsilon_0}\right)^{3.55}$$

The reactor geometry (see Figure 1) is set up in 2D axisymmetry in the model as the angular gradients are negligible.

Results and Discussion

IDEAL REACTOR MODEL

Figure 2 shows the concentration transients of methane, hydrogen, and deposited carbon as methane decomposes over a Ni/Al₂O₃ catalyst. Both the composition with and without catalyst deactivation are displayed. From the change in concentrations with time, the reaction rate with constant catalyst activity is shown to be larger than when catalyst deactivation is accounted for.

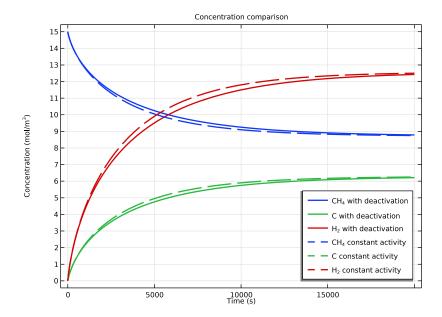


Figure 2: Concentration transients of methane decomposition over a Ni/Al $_2$ O $_3$ catalyst for two catalyst conditions: 1) deactivation; 2) constant activity.

Figure 3 shows the deactivation of catalyst during methane decomposition. The activity of catalyst decreases rapidly at the early stage of reaction, then decreases slowly.

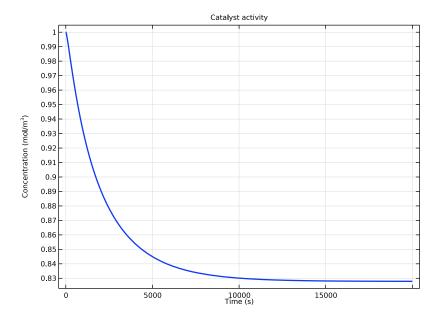


Figure 3: Change of catalyst activity with reacting time.

SPACE- AND TIME-DEPENDENT MODEL

Figure 4 shows the velocity profile (surface) and pressure difference (contour) in the reactor at the end of the simulation. The flow velocity of gas is slower within the porous catalytic bed. The figure also displays a pressure drop across the bed.

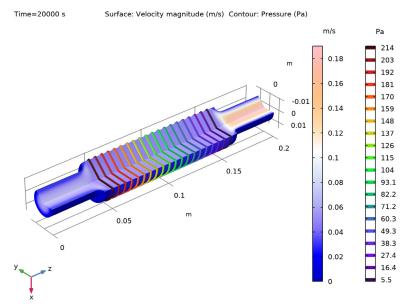


Figure 4: Velocity flow field and pressure drop within the porous catalyst bed after 20,000 s. Surface plot displays the velocity (SI unit: m/s) and contour plot the pressure (SI unit: Pa).

Figure 5 shows the temperature distribution after 50 s and 500 s. It takes approximately 300 s for the bed to heat up to the same temperature as the walls (850 K).

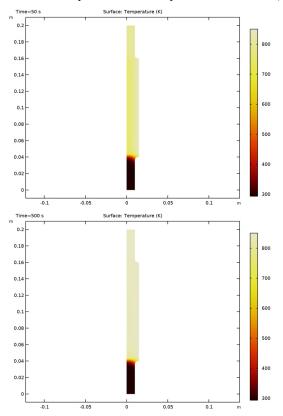


Figure 5: Temperature distribution within the reactor after 50 s and 500 s.

Figure 6 shows a comparison of the concentration distributions for methane at 50 s and 500 s. The concentration of methane decreases more rapidly as soon as the bed is sufficiently heated (Figure 5).

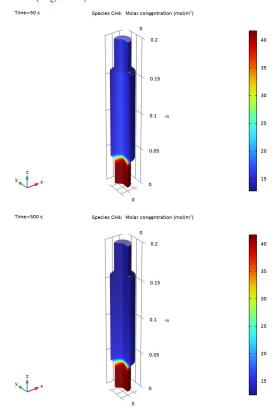


Figure 6: Concentration distribution of methane within the reactor at 50 s and 500 s.

The concentration distribution of methane and hydrogen is displayed along the centerline of the porous catalyst bed in Figure 7. The figure shows in detail that the production of hydrogen varies with time and heating.

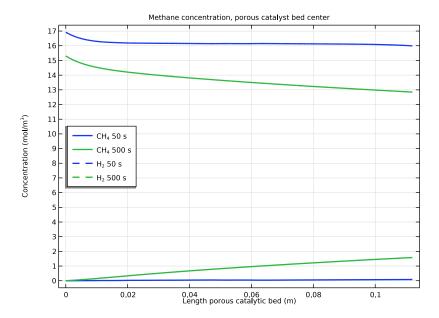


Figure 7: Concentration distribution of CH_4 and H_2 along the center of the porous catalyst bed at 50 s and 500 s.

Figure 8 illustrates that the porosity varies within the bed at 20,000 s and that the pores may become completely clogged near the bed inlet with time.

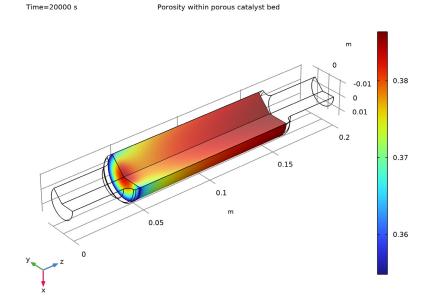


Figure 8: Porosity distribution within the porous catalyst bed at 4,000 s.

References

- 1. S.G. Zavarukhin and G.G. Kuvshinov, "The kinetic model of formation of nanofibrous carbon from CH₄-H₂ mixture over a high-loaded nickel catalyst with consideration for the catalyst deactivation", J. Appl. Catal. A, vol. 272, pp. 219-227, 2004.
- 2. E.A. Borisova and P.M. Adler, "Deposition in porous media and clogging on the field scale", Phys. Rev. E, vol. 71, p. 016311-1, 2005.

Application Library path: Chemical_Reaction_Engineering_Module/ Reactors_with_Porous_Catalysts/carbon_deposition

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click 0D.
- 2 In the Select Physics tree, select Chemical Species Transport>Reaction Engineering (re).
- 3 Click Add.
- 4 Click 🔵 Study.
- 5 In the Select Study tree, select General Studies>Time Dependent.
- 6 Click M Done.

REACTION ENGINEERING (RE)

Reaction 1

- I In the Model Builder window, under Component I (compl) right-click Reaction Engineering (re) and choose Reaction.
- 2 In the Settings window for Reaction, locate the Reaction Formula section.
- 3 In the Formula text field, type CH4=>C+2H2.

Species 1

Add an individual species representing the catalyst activity.

- I In the Reaction Engineering toolbar, click 📩 Species.
- 2 In the Settings window for Species, locate the Name section.
- **3** In the text field, type a.

When a new species is created a mass balance equation is set up along with it. Note that you can remove the effect of catalyst activity from your model by selecting the **Lock concentration/activity** check box. This removes the species mass balance and sets the concentration of the species to the value entered in the **Initial Values** node.

GLOBAL DEFINITIONS

Load the model parameters from a text file.

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.

4 Browse to the model's Application Libraries folder and double-click the file carbon deposition parameters.txt.

DEFINITIONS

Load the model variables from a text file.

Variables 1

- I In the Model Builder window, under Component I (compl) right-click Definitions and choose Variables.
- 2 In the Settings window for Variables, locate the Variables section.
- 3 Click Load from File.
- 4 Browse to the model's Application Libraries folder and double-click the file carbon_deposition_variables.txt.

For the k variable definition above, it is assumed that there is $1 [g/m^3]$ catalyst.

REACTION ENGINEERING (RE)

1: CH4 => C + 2 H2

- I In the Model Builder window, under Component I (compl)>Reaction Engineering (re) click 1: CH4 => C + 2 H2.
- 2 In the Settings window for Reaction, locate the Reaction Rate section.
- **3** From the list, choose **User defined**.
- 4 In the r_i text field, type re.c_a*k*(P_CH4-P_H2^2/Kp)/(1+kH*sqrt(P_H2))^2.

Additional Source 1

- I In the Reaction Engineering toolbar, click 🕹 Additional Source.
- 2 In the Settings window for Additional Source, locate the Additional Rate Expression section.
- **3** In the **Volumetric species** table, enter the following settings:

Species	Additional rate expression (mol/(m^3*s))
a	-ka*re.r_1^2*re.c_C*re.c_a

Initial Values 1

- I In the Model Builder window, click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Volumetric Species Initial Values section.

3 In the table, enter the following settings:

Species	Concentration (mol/m^3)
С	0
CH4	c_CH4in
H2	c_H2in
a	1

- 4 In the Model Builder window, click Reaction Engineering (re).
- 5 In the Settings window for Reaction Engineering, locate the Energy Balance section.
- **6** In the *T* text field, type 850[K].
- 7 Locate the Mixture Properties section. From the Reactor pressure list, choose User defined.
- **8** In the p text field, type R_const*re.T*(re.c_CH4+re.c_H2).

STUDY I

Step 1: Time Dependent

- I In the Model Builder window, under Study I click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- 3 In the Output times text field, type range (0,500,20000).
- 4 In the Home toolbar, click **Compute**.

STUDY I

Solution I (soll)

- I In the Model Builder window, expand the Study I>Solver Configurations node.
- 2 Right-click Solution I (soll) and choose Solution>Copy.

With catalyst deactivation

- I In the Model Builder window, under Study I>Solver Configurations click Solution I Copy I (sol2).
- 2 In the Settings window for Solution, type With catalyst deactivation in the Label text field.

RESULTS

Catalyst Activity (re)

I In the Model Builder window, under Results click Concentration (re).

- 2 In the Settings window for ID Plot Group, locate the Data section.
- 3 From the Dataset list, choose Study I/With catalyst deactivation (sol2).
- 4 In the Label text field, type Catalyst Activity (re).
- 5 Click to expand the **Title** section. From the **Title type** list, choose **Manual**.
- 6 In the **Title** text area, type Catalyst activity.

Global I

- I In the Model Builder window, expand the Catalyst Activity (re) node, then click Global I.
- 2 In the Settings window for Global, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Reaction Engineering>re.c_a - Concentration - mol/m3.
- 3 Click to expand the Coloring and Style section. From the Width list, choose 2.
- 4 Click to expand the **Legends** section. Clear the **Show legends** check box.
- 5 In the Catalyst Activity (re) toolbar, click **Plot**.

Now study the reaction when the catalyst activity is held constant (initial value).

REACTION ENGINEERING (RE)

Species: a

- I In the Model Builder window, under Component I (compl)>Reaction Engineering (re) click Species: a.
- 2 In the Settings window for Species, click to expand the Constant Concentration/Activity section.
- 3 Select the Keep concentration/activity constant check box.

STUDY I

In the **Home** toolbar, click **Compute**.

Solution I (soll)

In the Model Builder window, under Study I>Solver Configurations right-click Solution I (soll) and choose Solution>Copy.

Constant catalyst activity

- I In the Model Builder window, under Study I>Solver Configurations click Solution I -Copy I (sol3).
- 2 In the Settings window for Solution, type Constant catalyst activity in the Label text field.

RESULTS

Compare the concentrations between locked (constant catalyst activity) and unlocked (with catalyst deactivation) species a.

Concentration Comparison (re)

- I In the Model Builder window, under Results click Concentration (re).
- 2 In the Settings window for ID Plot Group, type Concentration Comparison (re) in the Label text field.
- 3 Locate the Title section. From the Title type list, choose Manual.
- 4 In the **Title** text area, type Concentration comparison.
- 5 Locate the Legend section. From the Position list, choose Lower right.

With catalyst deactivation

- I In the Model Builder window, expand the Concentration Comparison (re) node, then click Global I.
- 2 In the Settings window for Global, type With catalyst deactivation in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Study 1/ With catalyst deactivation (sol2).
- 4 Locate the Coloring and Style section. From the Width list, choose 2.
- 5 Locate the Legends section. From the Legends list, choose Manual.
- **6** In the table, enter the following settings:

Legends
CH ₄ with deactivation
C with deactivation
H ₂ with deactivation

7 Right-click With catalyst deactivation and choose Duplicate.

Constant catalyst activity

- I In the Model Builder window, under Results>Concentration Comparison (re) click With catalyst deactivation 1.
- 2 In the **Settings** window for **Global**, type Constant catalyst activity in the **Label** text field.
- 3 Locate the Data section. From the Dataset list, choose Study 1/ Constant catalyst activity (sol3).

- 4 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.
- 5 From the Color list, choose Cycle (reset).
- **6** Locate the **Legends** section. In the table, enter the following settings:

Legends CH₄ constant activity C constant activity H₂ constant activity

7 In the Concentration Comparison (re) toolbar, click Plot.

Create a time- and space-dependent model from the Reaction Engineering interface. All solid species should be locked before this is done.

REACTION ENGINEERING (RE)

Species: C

- I In the Model Builder window, under Component I (compl)>Reaction Engineering (re) click Species: C.
- 2 In the Settings window for Species, locate the Constant Concentration/Activity section.
- 3 Select the Keep concentration/activity constant check box.

Generate Space-Dependent Model I

- I In the Reaction Engineering toolbar, click Generate Space-Dependent Model.
- 2 In the Settings window for Generate Space-Dependent Model, locate the **Component Settings** section.
- 3 From the Component to use list, choose 2Daxi: New.
- 4 Locate the Physics Interfaces section. Find the Chemical species transport subsection. From the list, choose Transport of Concentrated Species: New.
- **5** Find the **Heat transfer** subsection. From the list, choose Heat Transfer in Porous Media: New.
- 6 Find the Fluid flow subsection. From the list, choose Laminar Flow: New.
- 7 Locate the Space-Dependent Model Generation section. Click Create/Refresh.

DEFINITIONS (COMP2)

Add variables for the Chemistry node which are similar to those used in the Reaction **Engineering** interface.

١./				~
Vα	ria	hΙ	29	_/

- I In the Model Builder window, expand the Component 2 (comp2) node.
- 2 Right-click Component 2 (comp2)>Definitions and choose Variables.
- 3 In the Settings window for Variables, locate the Variables section.
- 4 Click Load from File.
- **5** Browse to the model's Application Libraries folder and double-click the file carbon_deposition_2D_variables.txt.

In order to get significant carbon deposition, the amount of catalyst is increased to 300 [g/m^3]. The k value is 300 times as that in 0D.

GEOMETRY I (2DAXI)

Rectangle I (rI)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 0.01.
- 4 In the Height text field, type 0.04.

Rectangle 2 (r2)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 0.015.
- 4 In the Height text field, type 0.12.
- **5** Locate the **Position** section. In the **z** text field, type **0.04**.

Rectangle 3 (r3)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 0.01.
- 4 In the Height text field, type 0.04.
- **5** Locate the **Position** section. In the **z** text field, type **0.16**.
- 6 Click Build All Objects.

Fillet I (fill)

- I In the Geometry toolbar, click Fillet.
- **2** On the object **r2**, select Points 2 and 3 only.

- 3 In the Settings window for Fillet, locate the Radius section.
- 4 In the Radius text field, type 0.001.
- 5 Click Build All Objects.

Union I (uni I)

- I In the Geometry toolbar, click Booleans and Partitions and choose Union.
- 2 Click in the **Graphics** window and then press Ctrl+A to select all objects.
- 3 In the Settings window for Union, locate the Union section.
- 4 Clear the Keep interior boundaries check box.
- 5 Click Build All Objects.

Fillet 2 (fil2)

- I In the **Geometry** toolbar, click **Fillet**.
- 2 On the object unil, select Points 6 and 7 only.
- 3 In the Settings window for Fillet, locate the Radius section.
- 4 In the Radius text field, type 0.004.

Rectangle 4 (r4)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 0.015.
- 4 In the **Height** text field, type 0.112.
- **5** Locate the **Position** section. In the **z** text field, type **0.044**.
- 6 Click Build All Objects.
- 7 Click the **Zoom Extents** button in the **Graphics** toolbar.

COMPONENT 2 (COMP2)

Add the **Domain ODE and DAE** interface for modeling of the porosity change in the porous domain.

ADD PHYSICS

- I In the Home toolbar, click open the Add Physics window.
- **2** Go to the **Add Physics** window.
- 3 In the tree, select Mathematics>ODE and DAE Interfaces>Domain ODEs and DAEs (dode).
- 4 Click Add to Component 2 in the window toolbar.
- 5 In the Home toolbar, click of Add Physics to close the Add Physics window.

POROSITY CHANGE

- I In the Settings window for Domain ODEs and DAEs, type Porosity Change in the Label text field.
- 2 Locate the Domain Selection section. Click Clear Selection.
- **3** Select Domain 2 only.
- 4 Locate the **Units** section. In the **Source term quantity** table, enter the following settings:

Source term quantity	Unit
Custom unit	1/s

- 5 Click to expand the Dependent Variables section. In the Field name (1) text field, type por.
- **6** In the **Dependent variables (1)** table, enter the following settings:

por

Distributed ODE I

- I In the Model Builder window, under Component 2 (comp2)>Porosity Change (dode) click Distributed ODE 1.
- 2 In the Settings window for Distributed ODE, locate the Source Term section.
- **3** In the *f* text field, type -por*chem.r_1*chem.M_C/rho_soot.

Initial Values 1

- I In the Model Builder window, click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- **3** In the *por* text field, type por0.

CHEMISTRY I (CHEM)

Species: CH4

- I In the Model Builder window, expand the Component 2 (comp2)>Chemistry I (chem) node, then click Species: CH4.
- 2 In the Settings window for Species, click to expand the Transport Expressions section.
- 3 From the Thermal conductivity list, choose User defined.
- **4** In the k text field, type kt CH4.
- 5 Click to expand the **Thermodynamic Expressions** section. From the list, choose **User defined**.

- **6** In the C_p text field, type Cp_CH4*chem.M_CH4.
- **7** In the h text field, type h_CH4.
- **8** In the s text field, type s CH4.

Species: H2

- I In the Model Builder window, click Species: H2.
- 2 In the Settings window for Species, locate the Transport Expressions section.
- 3 From the Thermal conductivity list, choose User defined.
- **4** In the k text field, type kt H2.
- 5 Locate the Thermodynamic Expressions section. From the list, choose User defined.
- **6** In the C_p text field, type $Cp_H2*chem.M_H2$.
- 7 In the h text field, type h H2.
- **8** In the s text field, type s H2.

Species: C

- I In the Model Builder window, click Species: C.
- 2 In the Settings window for Species, locate the Transport Expressions section.
- 3 From the Thermal conductivity list, choose User defined.
- **4** In the k text field, type kt C.
- 5 Locate the Thermodynamic Expressions section. From the list, choose User defined.
- **6** In the C_p text field, type $Cp_C^*chem.M_C$.
- **7** In the *h* text field, type h_C.
- **8** In the *s* text field, type s_C.

Species: a

- I In the Model Builder window, click Species: a.
- 2 In the Settings window for Species, locate the Chemical Formula section.
- 3 In the M text field, type M a.
- 4 Locate the Transport Expressions section. From the Thermal conductivity list, choose User defined.
- 5 In the k text field, type kt cat.

TRANSPORT OF CONCENTRATED SPECIES (TCS)

I In the Model Builder window, under Component 2 (comp2) click Transport of Concentrated Species (tcs).

- 2 In the Settings window for Transport of Concentrated Species, locate the Transport Mechanisms section.
- 3 Select the Mass transfer in porous media check box.

Transport Properties 1

- I In the Model Builder window, expand the Transport of Concentrated Species (tcs) node, then click Transport Properties I.
- 2 In the Settings window for Transport Properties, locate the Diffusion section.
- **3** In the table, enter the following settings:

Species I	Species 2	Diffusivity	Diffusion coefficient (m^2/s)
wCH4	wH2	User defined	D_CH4H2

Reaction Sources 1

- I In the Model Builder window, click Reaction Sources I.
- **2** Select Domains 1 and 3 only.
- 3 In the Settings window for Reaction Sources, locate the Domain Selection section.
- 4 Click Remove from Selection.
- **5** Select Domain 2 only.
- 6 Locate the Reacting Volume section. From the Reacting volume list, choose Pore volume.

Inflow I

- I In the Physics toolbar, click Boundaries and choose Inflow.
- 2 Select Boundary 2 only.
- 3 In the Settings window for Inflow, locate the Inflow section.
- **4** In the $\omega_{0 \text{ wH}2}$ text field, type 0.

Outflow I

- I In the **Physics** toolbar, click **Boundaries** and choose **Outflow**.
- 2 Select Boundary 9 only.

Porous Medium I

- I In the Physics toolbar, click **Domains** and choose Porous Medium.
- 2 Select Domain 2 only.

Fluid 1

- I In the Model Builder window, click Fluid I.
- 2 In the Settings window for Fluid, click to expand the Model Input section.

- 3 From the p_A list, choose Absolute pressure (spf).
- 4 Locate the Convection section. From the u list, choose Velocity field (spf).
- **5** Locate the **Diffusion** section. In the table, enter the following settings:

Species I	Species 2	Diffusivity	Diffusion coefficient (m^2/s)
wCH4	wH2	User defined	D_CH4H2

Porous Matrix I

- I In the Model Builder window, click Porous Matrix I.
- 2 In the Settings window for Porous Matrix, locate the Matrix Properties section.
- **3** In the ε_p text field, type por.

HEAT TRANSFER IN POROUS MEDIA I (HT)

Fluid 1

- I In the Model Builder window, expand the Component 2 (comp2)> Heat Transfer in Porous Media I (ht)>Porous Medium I node, then click Fluid I.
- 2 In the Settings window for Fluid, locate the Thermodynamics, Fluid section.
- 3 From the M_n list, choose Mean molar mass (chem).

Porous Matrix I

- I In the Model Builder window, click Porous Matrix I.
- 2 In the Settings window for Porous Matrix, locate the Matrix Properties section.
- **3** From the ϵ_p list, choose **User defined**. In the associated text field, type por.
- 4 From the Define list, choose Solid phase properties.
- 5 Locate the Heat Conduction, Porous Matrix section. From the $k_{\rm s}$ list, choose User defined. In the associated text field, type kt_cat.
- 6 Locate the Thermodynamics, Porous Matrix section. From the ρ_s list, choose User defined. In the associated text field, type rho cat.
- **7** From the $C_{
 m p,s}$ list, choose User defined. In the associated text field, type ${
 m Cp_cat.}$

Heat Source 1

- I In the Model Builder window, under Component 2 (comp2)> Heat Transfer in Porous Media I (ht) click Heat Source I.
- 2 Select Domain 2 only.
- 3 In the Settings window for Heat Source, locate the Heat Source section.
- **4** In the Q_0 text field, type chem.Qtot*por.

Temperature I

- I In the Physics toolbar, click Boundaries and choose Temperature.
- 2 Select Boundary 2 only.

Outflow I

- I In the Physics toolbar, click Boundaries and choose Outflow.
- **2** Select Boundary 9 only.

Temberature 2

- I In the Physics toolbar, click Boundaries and choose Temperature.
- 2 Select Boundary 13 only.
- 3 In the Settings window for Temperature, locate the Temperature section.
- **4** In the T_0 text field, type 850[K].

Fluid 1

- I In the Physics toolbar, click **Domains** and choose Fluid.
- **2** Select Domains 1 and 3 only.
- 3 In the Settings window for Fluid, locate the Heat Convection section.
- 4 From the **u** list, choose **Velocity field (spf)**.
- 5 Locate the **Heat Conduction, Fluid** section. From the k list, choose **Thermal conductivity (chem)**.
- 6 Locate the Thermodynamics, Fluid section. From the Fluid type list, choose Gas/Liquid.
- **7** From the ρ list, choose **Density (chem)**.
- 8 From the C_n list, choose Heat capacity at constant pressure (chem).
- **9** From the γ list, choose User defined.

LAMINAR FLOW I (SPF)

- I In the Model Builder window, under Component 2 (comp2) click Laminar Flow I (spf).
- 2 In the Settings window for Laminar Flow, locate the Physical Model section.
- 3 Select the Enable porous media domains check box.

Fluid Properties 1

- I In the Model Builder window, expand the Laminar Flow I (spf) node, then click Fluid Properties I.
- 2 In the Settings window for Fluid Properties, locate the Fluid Properties section.
- **3** From the ρ list, choose **Density (chem)**.

Porous Medium I

- I In the Physics toolbar, click **Domains** and choose Porous Medium.
- 2 Select Domain 2 only.

Fluid 1

- I In the Model Builder window, expand the Porous Medium I node, then click Fluid I.
- 2 In the Settings window for Fluid, locate the Fluid Properties section.
- **3** From the ρ list, choose **Density** (chem).
- **4** From the μ list, choose **Dynamic viscosity (chem)**.

Porous Matrix I

- I In the Model Builder window, click Porous Matrix I.
- 2 In the Settings window for Porous Matrix, locate the Matrix Properties section.
- **3** From the ε_p list, choose **User defined**. In the associated text field, type por.
- **4** From the κ list, choose **User defined**. In the associated text field, type kappa.

Inlet I

- I In the Physics toolbar, click Boundaries and choose Inlet.
- **2** Select Boundary 2 only.
- 3 In the Settings window for Inlet, locate the Boundary Condition section.
- 4 From the list, choose Fully developed flow.
- **5** Locate the **Fully Developed Flow** section. In the $U_{\rm av}$ text field, type u_in.

Outlet I

- I In the Physics toolbar, click Boundaries and choose Outlet.
- 2 Select Boundary 9 only.

Mass Source 1

- I In the Physics toolbar, click **Domains** and choose Mass Source.
- **2** Select Domain 2 only.
- 3 In the Settings window for Mass Source, locate the Mass Source section.
- **4** In the $Q_{
 m m}$ text field, type (chem.Rw_CH4+chem.Rw_H2)*por.

STUDY 2

Steb 1: Stationary

I In the Model Builder window, expand the Study 2 node, then click Step I: Stationary.

- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check boxes for Chemistry I (chem), Transport of Concentrated Species (tcs), Heat Transfer in Porous Media I (ht), and Porosity Change (dode).

Step 2: Time Dependent

- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- **3** In the **Output times** text field, type range(0,50,1000) range(2000,1000,20000).
- 4 Locate the Physics and Variables Selection section. In the table, clear the Solve for check box for Reaction Engineering (re).
- 5 In the Study toolbar, click **Compute**.

RESULTS

Temperature

- I In the Model Builder window, under Results click Temperature (htl).
- 2 In the Settings window for 2D Plot Group, type Temperature in the Label text field.
- 3 Locate the Data section. From the Time (s) list, choose 50.
- 4 Locate the Plot Settings section. Clear the Plot dataset edges check box.

Surface I

- I In the Model Builder window, expand the Temperature node, then click Surface I.
- 2 In the Settings window for Surface, locate the Coloring and Style section.
- 3 Click Change Color Table.
- 4 In the Color Table dialog box, select Thermal>ThermalDark in the tree.
- 5 Click OK.
- 6 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 2 (comp2)> Heat Transfer in Porous Media 1>Temperature>T - Temperature - K.

Adjust the view angle of the plot with the mouse.

Temperature

- I In the Model Builder window, click Temperature.
- 2 In the Temperature toolbar, click Plot.

- 3 Click the Zoom Extents button in the Graphics toolbar.
- 4 In the Settings window for 2D Plot Group, locate the Data section.
- **5** From the **Time (s)** list, choose **500**.
- **6** In the **Temperature** toolbar, click **Plot**.
- **7** Click the **Zoom Extents** button in the **Graphics** toolbar.

Concentration, CH4, 3D (tcs)

- I In the Model Builder window, click Concentration, CH4, 3D (tcs).
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Time (s) list, choose 50.
- 4 Click to expand the Title section. Locate the Plot Settings section. Clear the Plot dataset edges check box.
- 5 In the Concentration, CH4, 3D (tcs) toolbar, click Plot.
- 6 Click the Zoom Extents button in the Graphics toolbar.
- 7 Locate the Data section. From the Time (s) list, choose 500.
- 8 In the Concentration, CH4, 3D (tcs) toolbar, click Plot.
- 9 Click the **Zoom Extents** button in the **Graphics** toolbar.

Velocity, 3D (spfl)

- I In the Model Builder window, click Velocity, 3D (spfl).
- 2 In the Settings window for 3D Plot Group, locate the Plot Settings section.
- 3 Clear the Plot dataset edges check box.

Contour I

- I Right-click Velocity, 3D (spfI) and choose Contour.
- 2 In the Settings window for Contour, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component 2 (comp2)>Laminar Flow I> Velocity and pressure > p - Pressure - Pa.
- 3 Click to expand the **Title** section. Locate the **Coloring and Style** section. From the Contour type list, choose Tube.
- 4 Click Change Color Table.
- 5 In the Color Table dialog box, select Rainbow>Spectrum in the tree.
- 6 Click OK.

Surface

I In the Model Builder window, click Surface.

- 2 In the Settings window for Surface, locate the Coloring and Style section.
- 3 Click Change Color Table.
- 4 In the Color Table dialog box, select Aurora>Twilight in the tree.
- 5 Click OK.
- 6 In the Settings window for Surface, locate the Coloring and Style section.
- 7 From the Color table transformation list, choose Reverse.

Velocity, 3D (spf1)

- I In the Model Builder window, click Velocity, 3D (spfl).
- 2 In the Settings window for 3D Plot Group, locate the Color Legend section.
- 3 Select the **Show units** check box.
- 4 In the Velocity, 3D (spfl) toolbar, click Plot.
- 5 Click the Zoom Extents button in the Graphics toolbar.

Cut Line 3D I

- I In the Results toolbar, click Cut Line 3D.
- 2 In the Settings window for Cut Line 3D, locate the Line Data section.
- 3 In row **Point I**, set **z** to 0.044.
- 4 In row Point 2, set x to 0 and z to 0.156.

Concentration CH4. Porous Catalyst Bed Center

- I In the Results toolbar, click \sim ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Concentration CH4, Porous Catalyst Bed Center in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Cut Line 3D 1.
- 4 From the Time selection list, choose From list.
- 5 In the Times (s) list, choose 50 and 500.
- **6** Locate the **Title** section. From the **Title type** list, choose **Manual**.
- 7 In the Title text area, type Methane concentration, porous catalyst bed center.
- 8 Locate the Plot Settings section.
- 9 Select the x-axis label check box. In the associated text field, type Length porous catalytic bed (m).
- **10** Select the **y-axis label** check box. In the associated text field, type Concentration (mol/m³).
- II Locate the Legend section. From the Position list, choose Middle left.

Line Graph 1

- I Right-click Concentration CH4, Porous Catalyst Bed Center and choose Line Graph.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component 2 (comp2)> Transport of Concentrated Species Species wCH4>tcs.c_wCH4 - Molar concentration - mol/ m³.
- 3 Click to expand the Coloring and Style section. From the Width list, choose 2.
- 4 Click to expand the **Legends** section. Select the **Show legends** check box.
- 5 From the Legends list, choose Evaluated.
- 6 In the **Legend** text field, type CH₄ eval(t,s) s.
- 7 Right-click Line Graph I and choose Duplicate.

Line Graph 2

- I In the Model Builder window, click Line Graph 2.
- 2 In the Settings window for Line Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component 2 (comp2)> Transport of Concentrated Species>Species wH2>tcs.c_wH2 - Molar concentration - mol/ m³.
- 3 Locate the Coloring and Style section. Find the Line style subsection. From the Line list, choose Dashed.
- 4 From the Color list, choose Cycle (reset).
- 5 Locate the Legends section. In the Legend text field, type H₂ eval(t,s) s.
- 6 In the Concentration CH4, Porous Catalyst Bed Center toolbar, click Plot.

Porosity Distribution

- I In the Model Builder window, under Results click Porosity Change I.
- 2 In the Settings window for 3D Plot Group, type Porosity Distribution in the Label text field.
- 3 Locate the Title section. From the Title type list, choose Manual.
- 4 In the **Title** text area, type Porosity within porous catalyst bed.
- 5 In the Porosity Distribution toolbar, click Plot.
- 6 Click the **Zoom Extents** button in the **Graphics** toolbar.

For future use of **Study I**, turn off the interfaces associated with the space-dependent model.

STUDYI

Step 1: Time Dependent

- I In the Model Builder window, under Study I click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check boxes for Chemistry I (chem),
 Transport of Concentrated Species (tcs), Heat Transfer in Porous Media I (ht),
 Laminar Flow I (spf), and Porosity Change (dode).

The 2D plot group showing the porosity is not needed and can be deleted.

RESULTS

Porosity Change

In the Model Builder window, under Results right-click Porosity Change and choose Delete.