

Estimation of Corrosion Kinetics Parameters

A common challenge in corrosion modeling is to accurately describe the electrode kinetics as a function of electrode potential. This tutorial shows how to use the Parameter Estimation study node to perform electrode kinetics parameter estimations based on polarization data.

A zero-dimensional electrode polarization model is constructed using an anode Tafel expression for the metal dissolution reaction and a cathode Tafel expression for the oxygen reduction kinetics in combination with an oxygen reduction limiting current density.

Parameter estimation is performed using a global least-squares objective function based on three different sets of polarization data (Ref. 1) recorded for the following metals:

- 70-30 Cu-Ni alloy (SAE/ASTM UNS number CA7150)
- 90-10 Cu-Ni alloy (C70600)
- Ni-Al bronze (C95800)

The experimental data was recorded using potentiodynamic scans at 30 °C for fresh metals in a controlled sea water flow (8.0 ft/s) environment.

To run this tutorial you need the Optimization Module.

Model Definition

The metal dissolution reaction is described by an anodic Tafel expression according to:

$$i_{\text{Me}} = i_{0, \text{Me}} \times 10^{\eta_{\text{Me}}/A_{\text{Me}}}$$
 (1)

where $i_{0.\text{Me}} (A/m^2)$ is the exchange current density and $A_{\text{Me}} (V)$ is the anodic Tafel slope of the metal dissolution reaction, respectively. The overpotential of the metal dissolution reaction, $\eta_{Me}(V)$, is defined as:

$$\eta_{\text{Me}} = E - E_{\text{eq, Me}} \tag{2}$$

where $E_{\rm eq,\,Me}$ is the equilibrium potential of the metal dissolution reaction. Note that the choice of $E_{eq. Me}$ (which is generally unknown) is arbitrary in this model since the cathodic part of the metal dissolution reaction is neglected. $E_{\rm eq,Me}$ = 0 is used in this model.

For the oxygen reduction reaction, the following cathodic Tafel expression is used:

$$i_{O_2, \text{ kin}} = -i_{0, O_2} \times 10^{-\eta_{O_2}/A_{O_2}}$$
 (3)

where $i_{0,O2}(A/m2)$ is the exchange current density and A_{O2} (V) is the cathodic Tafel slope of the oxygen reduction reaction, respectively. The overpotential of the oxygen reduction reaction, η_{O2} (V), is defined as:

$$\eta_{\rm Me} = E - E_{\rm eq. O_o} \tag{4}$$

The equilibrium potential for oxygen reduction is defined to be dependent on the pH according to the Nernst equation:

$$E_{\text{eq, O}_2} = 1.23 \text{V} - \frac{RT}{4F} \ln \left(\frac{1}{0.21 \times 10^{-\text{pH}}} \right)$$
 (5)

where T (K) is the temperature. (But note that here also the actual choice of $E_{\rm eq,O2}$ is arbitrary). A pH of 7.7 is used in the model.

Furthermore, the current density of oxygen is assumed to be limited by diffusion, resulting in:

$$i_{O_2} = \frac{i_{O_2, \lim} i_{O_2, \lim}}{i_{O_2, \lim} + i_{O_2, \lim}}$$
 (6)

where $i_{\text{O2.lim}}$ (A/m²) is the limiting current density for oxygen reduction.

Finally, the total current density at the electrode surface, i_{loc} (A/m²), is:

$$i_{\text{loc}} = i_{\text{Me}} + i_{\text{O}_2} \tag{7}$$

Note that for low potentials one should also consider hydrogen evolution as an additional cathodic reaction. That reaction is however not included in this tutorial.

The model is formulated as a set of parametric expressions in 0D and the Parameter Estimation study node is used to create a least squares objective function used for optimization, based on the experimental data.

Results and Discussion

The experimental polarization curves for the 70-30 Cu-Ni alloy and the corresponding fitted model values are shown in Figure 1 and Figure 2, using a linear or a logarithmic scale for the current density values, respectively.

Figure 3 and Figure 4 show the polarization curves in logarithmic scale for the 90-10 Cu-Ni and the Ni-Al bronze. In all cases, the model seems to be able to capture the salient features of the polarization behavior.

Table 1 shows the fitted parameter values for the polarization data for the three different metals. The two Cu-Ni alloys exhibit fairly similar values, whereas the values for the Ni-Al bronze are more different. The limiting current density for oxygen reduction are similar for all cases. This is expected since the experiments where conducted for fresh metals in a controlled flow environment.

TABLE 1: OPTIMIZATION PARAMETERS AND CORRESPONDING ESTIMATED VALUES FOR THE THREE DIFFERENT ALLOYS.

Parameter	Unit	70-30 Cu-Ni	90-10 Cu-Ni	Ni-Al bronze
$A_{ m Me}$	mV	63	68	70
$A_{ m O2}$	mV	-170	-166	-125
$i_{0,\mathrm{Me}}$	A/m ²	10 ^{3.3}	10 ^{2.8}	10 ^{3.5}
$i_{0,\mathrm{O2}}$	A/m ²	10 ^{-7.1}	10 ^{-7.3}	10-10
$i_{ m O2,lim}$	A/m ²	-13	-15	-15

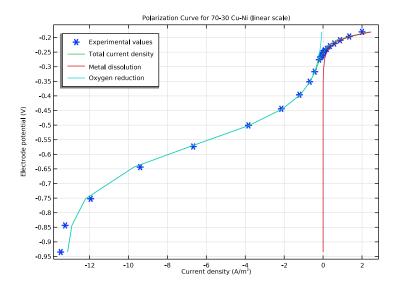


Figure 1: Polarization curve (linear scale) for the 70-30 Cu-Ni alloy.

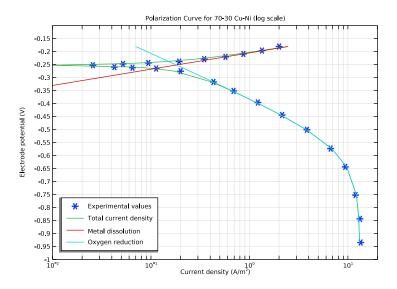


Figure 2: Polarization curve (log scale) for the 70-30 Cu-Ni alloy.

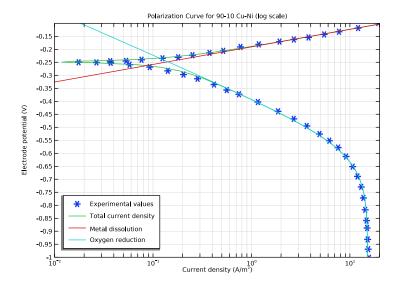


Figure 3: Polarization curve (log scale) for the 90-10 Cu-Ni alloy.

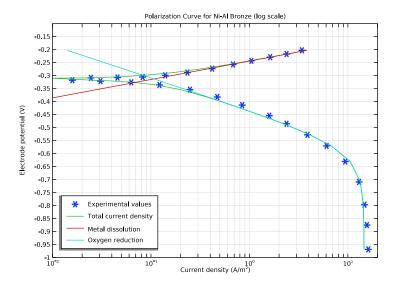


Figure 4: Polarization curve (log scale) for the Ni-Al bronze.

Reference

1. Atlas of Polarization Diagrams for Naval Materials in Seawater. Harvey P Hack. Carderock Division, Naval Surface Warfare Center, CARDIVNSWC-TR-61 -94/44, April 1995.

Application Library path: Corrosion_Module/General_Corrosion/ corrosion_parameter_estimation

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Blank Model.

ADD COMPONENT

In the **Home** toolbar, click \bigotimes **Add Component** and choose **OD**.

GLOBAL DEFINITIONS

Load the model parameters from a text file.

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click **Load from File**.
- **4** Browse to the model's Application Libraries folder and double-click the file corrosion_parameter_estimation_parameters.txt.

DEFINITIONS

Interpolation I (int I)

- I In the Home toolbar, click f(x) Functions and choose Local>Interpolation.
- 2 In the Settings window for Interpolation, locate the Definition section.
- 3 From the Data source list, choose File.
- 4 In the Filename text field, type 7030CuNi pol.csv.
- 5 Click | Import.
- 6 Right-click Interpolation I (intl) and choose Duplicate.

Interpolation 2 (int2)

- I In the Model Builder window, click Interpolation 2 (int2).
- 2 In the Settings window for Interpolation, locate the Definition section.
- 3 From the Data source list, choose File.
- 4 In the Filename text field, type 9010CuNi_pol.csv.
- 5 Click | Import.
- 6 Right-click Interpolation 2 (int2) and choose Duplicate.

Interpolation 3 (int3)

- I In the Model Builder window, click Interpolation 3 (int3).
- 2 In the Settings window for Interpolation, locate the Definition section.
- 3 From the Data source list, choose File.
- 4 In the Filename text field, type NiAlBronze_pol.csv.
- 5 Click | Import.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select Preset Studies for Selected Physics Interfaces>Stationary.
- 4 Click Add Study in the window toolbar three times.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

STUDY I

Use the Parameter Estimation study step to specify the polarization data (70-30 Cu-Ni) used by the optimization solver. The objective function will be created automatically by the study step.

Parameter Estimation

- I In the Study toolbar, click optimization and choose Parameter Estimation.
- 2 In the Settings window for Parameter Estimation, locate the Experimental Data section.
- 3 In the Filename text field, type 7030CuNi pol.csv.
- 4 Click Refresh.
- 5 Locate the Data Column Settings section. In the table, click to select the cell at row number 1 and column number 2.
- **6** From the drop-down list, choose **Parameter**.
- 7 From the Name list, choose E (Electrode potential).
- 8 In the table, click to select the cell at row number 2 and column number 3. In the text fields that appear below the table, enter the following values:
- **9** In the Model expression text field, type iloc.
- 10 In the Variable name text field, type iloc exp.
- II In the **Unit** text field, type A/m^2.
- 12 From the Scale list, choose Manual.
- 13 In the Scale value text field, type max(abs(comp1.int1(E)),1e-2).
- 14 Locate the Estimated Parameters section. Click + Add five times.

15 Row by row, select a parameter name in the first column and set the corresponding initial value and scale as follows:

Parameter name	Initial value	Scale
A_O2 (Cathodic tafel slope for oxygen reduction)	-200[mV]	0.1
A_Me (Anodic tafel slope for metal dissolution)	100[mV]	0.1
i_O2_lim (Limiting current density for oxygen reduction)	-15[A/m^2]	10
log10_i0_O2 (log10 of exchange current density for oxygen reduction)	- 9	1
log10_i0_Me (log10 of exchange current density for metal dissolution)	0	1

Since there is no need to constrain the optimization parameters (control variables) for this least-squares problem, the Levenberg–Marquardt method is suitable.

- 16 Locate the Parameter Estimation Method section. From the Method list, choose Levenberg-Marquardt.
- 17 Find the Solver settings subsection. From the Least-squares time/parameter method list, choose Merge within manual range.
- 18 In the Optimality tolerance text field, type 1e-4.

COMPONENT I (COMPI)

By adding global probes for the optimization parameters, one can monitor the progress of the optimization during the computation.

DEFINITIONS

Global Variable Probe I (var I)

- I In the Definitions toolbar, click Probes and choose Global Variable Probe.
- 2 In the Settings window for Global Variable Probe, locate the Expression section.
- **3** In the **Expression** text field, type A 02.

Global Variable Probe 2 (var2)

- I In the Definitions toolbar, click Probes and choose Global Variable Probe.
- 2 In the Settings window for Global Variable Probe, locate the Expression section.
- **3** In the **Expression** text field, type A_Me.

Global Variable Probe 3 (var3)

I In the **Definitions** toolbar, click Probes and choose Global Variable Probe.

- 2 In the Settings window for Global Variable Probe, locate the Expression section.
- **3** In the **Expression** text field, type log10 i0 02.

Global Variable Probe 4 (var4)

- I In the **Definitions** toolbar, click **Probes** and choose **Global Variable Probe**.
- 2 In the Settings window for Global Variable Probe, locate the Expression section.
- 3 In the Expression text field, type log10 i0 Me.

Global Variable Probe 5 (var5)

- I In the Definitions toolbar, click Probes and choose Global Variable Probe.
- 2 In the Settings window for Global Variable Probe, locate the Expression section.
- 3 In the Expression text field, type i 02 lim.

70-30 CU-NI

- I In the Model Builder window, click Study I.
- 2 In the Settings window for Study, type 70-30 Cu-Ni in the Label text field. The model is now ready for solving.
- 3 Locate the Study Settings section. Clear the Generate default plots check box.
- 4 In the Home toolbar, click **Compute**.

The last row of the probe table now shows the final values of the optimization parameters.

RESULTS

Create polarization plots as follows:

ID Plot Group 2

In the Home toolbar, click **Add Plot Group** and choose **ID Plot Group**.

Global I

- I Right-click ID Plot Group 2 and choose Global.
- 2 In the Settings window for Global, locate the y-Axis Data section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
E	V	Electrode potential

- 4 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- 5 In the Expression text field, type comp1.int1(E).

- **6** Click to expand the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **None**.
- 7 Find the Line markers subsection. From the Marker list, choose Cycle.
- 8 Click to expand the Legends section. From the Legends list, choose Manual.
- **9** In the table, enter the following settings:

Legends	
Experimental	values

Global 2

- I In the Model Builder window, right-click ID Plot Group 2 and choose Global.
- 2 In the Settings window for Global, locate the y-Axis Data section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
E	V	Electrode potential

- 4 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- **5** In the **Expression** text field, type iloc.
- 6 Locate the Legends section. From the Legends list, choose Manual.
- **7** In the table, enter the following settings:

Legends Total current density

- 8 In the ID Plot Group 2 toolbar, click Plot.
- **9** Right-click **Global 2** and choose **Duplicate**.

Global 3

- I In the Model Builder window, click Global 3.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type i Me.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends Metal dissolution

5 In the ID Plot Group 2 toolbar, click Plot.

6 Right-click Global 3 and choose Duplicate.

Global 4

- I In the Model Builder window, click Global 4.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type i 02.
- **4** Locate the **Legends** section. In the table, enter the following settings:

Legends Oxygen reduction

Polarization plot 70-30 Cu-Ni (linear scale)

- I In the Model Builder window, under Results click ID Plot Group 2.
- 2 In the Settings window for ID Plot Group, type Polarization plot 70-30 Cu-Ni (linear scale) in the Label text field.
- 3 Click to expand the Title section. From the Title type list, choose Manual.
- 4 In the Title text area, type Polarization Curve for 70-30 Cu-Ni (linear scale).
- 5 Locate the Plot Settings section.
- 6 Select the x-axis label check box. In the associated text field, type Current density (A/m < sup > 2 < / sup >).
- 7 Locate the Legend section. From the Position list, choose Upper left.
- 8 In the Polarization plot 70-30 Cu-Ni (linear scale) toolbar, click on Plot.
- 9 Right-click Polarization plot 70-30 Cu-Ni (linear scale) and choose Duplicate.

Polarization plot 70-30 Cu-Ni (log scale)

- I In the Model Builder window, under Results click Polarization plot 70-30 Cu-Ni (linear scale) I.
- 2 In the Settings window for ID Plot Group, type Polarization plot 70-30 Cu-Ni (log scale) in the Label text field.
- 3 Locate the Title section. In the Title text area, type Polarization Curve for 70-30 Cu-Ni (log scale).
- 4 Click the x-Axis Log Scale button in the Graphics toolbar.

Global I

For the log plot, only positive current densities can be plotted.

I In the Model Builder window, expand the Polarization plot 70-30 Cu-Ni (log scale) node, then click Global 1.

- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type abs(comp1.int1(E)).

Global 2

- I In the Model Builder window, click Global 2.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type abs(iloc).

Global 3

The metal dissolution currents are always positive, so there is no need to modify this expression.

Global 4

- I In the Model Builder window, click Global 4.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type abs(i_02).
- 4 In the Polarization plot 70-30 Cu-Ni (log scale) toolbar, click Plot.

Polarization plot 70-30 Cu-Ni (log scale)

- I In the Model Builder window, click Polarization plot 70-30 Cu-Ni (log scale).
- 2 In the Settings window for ID Plot Group, locate the Axis section.
- 3 Select the Manual axis limits check box.
- 4 In the x minimum text field, type 1e-2.
- 5 In the x maximum text field, type 20.
- 6 In the y minimum text field, type -1.
- 7 In the y maximum text field, type -0.1.
- 8 In the Polarization plot 70-30 Cu-Ni (log scale) toolbar, click **1** Plot.
- **9** Locate the Legend section. From the Position list, choose Lower left.
- 10 In the Polarization plot 70-30 Cu-Ni (log scale) toolbar, click **10** Plot.

Now perform the same optimization for a different dataset (90-10 Cu-Ni).

70-30 CU-NI

Parameter Estimation

In the Model Builder window, under 70-30 Cu-Ni right-click Parameter Estimation and choose Copy.

90-10 CU-NI

In the Model Builder window, right-click Study 2 and choose Paste Parameter Estimation.

- I In the Model Builder window, under Study 2 click Parameter Estimation.
- 2 In the Settings window for Parameter Estimation, locate the Experimental Data section.
- 3 In the Filename text field, type 9010CuNi pol.csv.
- 4 Click Refresh.
- 5 Locate the Data Column Settings section. In the table, click to select the cell at row number 2 and column number 3.
- **6** Modify the weight:
- 7 From the Scale list, choose Manual.
- 8 In the Scale value text field, type max(abs(comp1.int2(E)),1e-2).
- 9 In the Model Builder window, click Study 2.
- 10 In the Settings window for Study, type 90-10 Cu-Ni in the Label text field.
- II Locate the Study Settings section. Clear the Generate default plots check box.
- 12 In the Home toolbar, click **Compute**.

RESULTS

Polarization plot 70-30 Cu-Ni (linear scale)

In the Model Builder window, under Results right-click Polarization plot 70-30 Cu-Ni (linear scale) and choose Duplicate.

Polarization plot 90-10 Cu-Ni (linear scale)

- I In the Model Builder window, under Results click Polarization plot 70-30 Cu-Ni (linear scale) I.
- 2 In the Settings window for ID Plot Group, type Polarization plot 90-10 Cu-Ni (linear scale) in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose 90-10 Cu-Ni/Solution 2 (sol2).
- 4 Locate the Title section. In the Title text area, type Polarization Curve for 90-10 Cu-Ni (linear scale).

Global I

- I In the Model Builder window, expand the Polarization plot 90-10 Cu-Ni (linear scale) node, then click Global I.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type comp1.int2(E).

Polarization plot 70-30 Cu-Ni (log scale)

In the Model Builder window, under Results right-click Polarization plot 70-30 Cu-Ni (log scale) and choose Duplicate.

Polarization plot 90-10 Cu-Ni (log scale)

- I In the Model Builder window, under Results click Polarization plot 70-30 Cu-Ni (log scale) 1.
- 2 In the Settings window for ID Plot Group, type Polarization plot 90-10 Cu-Ni (log scale) in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose 90-10 Cu-Ni/Solution 2 (sol2).
- 4 Locate the **Title** section. In the **Title** text area, type Polarization Curve for 90-10 Cu-Ni (log scale).

Global I

- I In the Model Builder window, expand the Polarization plot 90-10 Cu-Ni (log scale) node, then click Global I.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type abs(comp1.int2(E)).
- **4** In the **Polarization plot 90-10 Cu-Ni (log scale)** toolbar, click **Plot**. Finally, also try the optimization on a polarization for a Ni-Al bronze.

70-30 CU-NI

Parameter Estimation

In the Model Builder window, under 70-30 Cu-Ni right-click Parameter Estimation and choose Copy.

NI-AL BRONZE

In the Model Builder window, right-click Study 3 and choose Paste Parameter Estimation.

- I In the Model Builder window, under Study 3 click Parameter Estimation.
- 2 In the Settings window for Parameter Estimation, locate the Experimental Data section.
- 3 In the Filename text field, type NiAlBronze pol.csv.
- 4 Click Refresh.
- **5** Locate the **Data Column Settings** section. In the table, click to select the cell at row number 2 and column number 3.
- 6 Again, change the weight:

- 7 From the Scale list, choose Manual.
- 8 In the Scale value text field, type max(abs(comp1.int3(E)),1e-2).
- 9 In the Model Builder window, click Study 3.
- 10 In the Settings window for Study, type Ni-Al Bronze in the Label text field.
- II Locate the **Study Settings** section. Clear the **Generate default plots** check box.
- 12 In the Home toolbar, click **Compute**.

RESULTS

Polarization plot 70-30 Cu-Ni (linear scale)

In the Model Builder window, under Results right-click Polarization plot 70-30 Cu-Ni (linear scale) and choose Duplicate.

Polarization plot Ni-Al (linear scale)

- I In the Model Builder window, under Results click Polarization plot 70-30 Cu-Ni (linear scale) 1.
- 2 In the Settings window for ID Plot Group, type Polarization plot Ni-Al (linear scale) in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Ni-Al Bronze/Solution 3 (sol3).
- 4 Locate the Title section. In the Title text area, type Polarization Curve for Ni-Al Bronze (linear scale).

Global I

- I In the Model Builder window, expand the Polarization plot Ni-Al (linear scale) node, then click Global I.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type comp1.int3(E).

Polarization plot 70-30 Cu-Ni (log scale)

In the Model Builder window, under Results right-click Polarization plot 70-30 Cu-Ni (log scale) and choose Duplicate.

Polarization plot Ni-Al (log scale)

- I In the Model Builder window, under Results click Polarization plot 70-30 Cu-Ni (log scale) 1.
- 2 In the Settings window for ID Plot Group, type Polarization plot Ni-Al (log scale) in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Ni-Al Bronze/Solution 3 (sol3).

4 Locate the **Title** section. In the **Title** text area, type Polarization Curve for Ni-Al Bronze (log scale).

Global I

- I In the Model Builder window, expand the Polarization plot Ni-Al (log scale) node, then click Global I.
- 2 In the Settings window for Global, locate the x-Axis Data section.
- 3 In the Expression text field, type abs(comp1.int3(E)).
- 4 In the Polarization plot Ni-Al (log scale) toolbar, click Plot.