

Lithium-Ion Battery with Multiple Intercalating Electrode Materials

Lithium-ion batteries can have multiple intercalating materials in both the positive and negative electrodes. For example, the negative electrode can have a mix of different forms of carbon. Similarly, the positive electrode can have a mix of active materials such as transition metal oxides, layered metal oxides, olivines, and so forth. These materials can have different design properties (such as volume fractions, particle sizes), thermodynamic properties (such as equilibrium potentials, maximum lithium concentrations), transport properties (such as solid diffusivities) and kinetic properties (such as intercalation reaction rate constants).

This model example demonstrates the Additional Porous Electrode Material feature in the Lithium-Ion Battery interface. The model describes a lithium-ion battery with two different intercalating materials in the positive electrode, whereas the negative electrode consists of one intercalating material only. The battery performance during discharge for different mixing fractions of the two intercalating materials in the positive electrode is studied. The geometry is in one dimension and the model is isothermal.

Model Definition

This example models the battery cross section in 1D, which implies that edge effects in the length and height of the battery are neglected. The example uses the following three domains:

- Negative graphite porous electrode (50 µm thick)
- Separator (50 µm thick)
- Positive blended NCA/LMO porous electrode (thickness depending on NCA:LMO ratio, see below)

Two active intercalating materials are considered in the positive electrode and the negative electrode consists of a single intercalating material. The model includes the following processes (Ref. 1).

- Electronic current conduction in the electrodes
- Ionic charge transport in the pores of the electrodes and separator
- Material transport in the electrolyte, allowing for the introduction of the effects of concentration on ionic conductivity and concentration overpotential, which in this case are obtained from experimental data

- Material transport within the spherical intercalating particles that form the electrodes
- Butler-Volmer electrode kinetics using experimentally measured discharge curves for the equilibrium potential of the intercalating materials in the electrodes.

For the porous electrodes, the effective electrolyte properties are calculated using the Bruggeman relation. Transport in the spherical particles is described using the Baker-Verbrugge diffusion model. This diffusion model considers the gradient of the chemical potential of the intercalating lithium as the driving force for diffusion, as opposed to considering the gradient of lithium concentration for dilute solution treatment (Fick's Law) of lithium transport in the active material particles. The diffusion equation is expressed in spherical coordinates for the material balance of lithium in the particles. Butler-Volmer electrode kinetics describes the local charge transfer current density in the electrodes. The Butler-Volmer expressions are introduced as source or sink terms in the charge balances and material balances.

MATERIAL PROPERTIES

The electrolyte consists of 1 M LiPF₆ salt in 1:1 EC:DEC (by weight) solvent. The two active materials in the positive electrode are NCA (Li_vNi_{0.80}Co_{0.15}Al_{0.15}O₂) and LMO (Li_vMn₂O₄ spinel). For the negative electrode, MCMB graphite (Li_vC₆) is used in the model. The material properties of the electrolyte and active materials are taken from the Material Library.

The equilibrium potentials of the positive electrode materials are shown in Figure 1

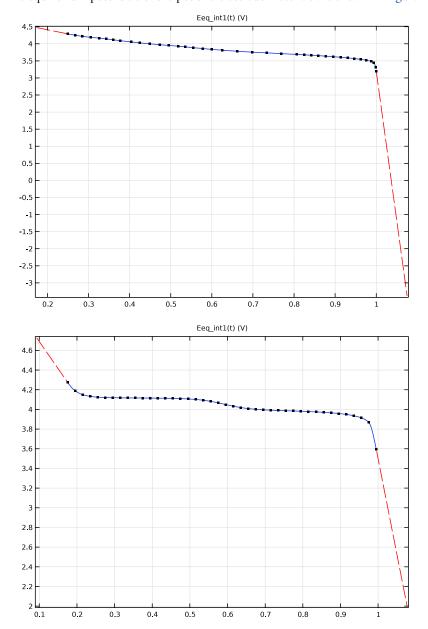


Figure 1: The equilibrium potentials of NCA (top) and LMO (bottom).

The x-axis data in Figure 1 depicts the lithiation level of the active material, which is calculated by dividing the concentration of lithium with the maximum concentration of lithium in the material (the host capacity).

ELECTRODE BALANCING

The thickness of the negative electrode is set to 50 µm, whereas the positive electrode thickness is set to vary with the relative volume fractions of LMO and NMC. The electrode balancing is based on the following criteria

- In order to avoid lithium plating during fast charging, the host capacity of the negative graphite electrode should be in excess so that an approximate lithiation level of 80% is reached at 100% cell state-of-charge (SOC).
- In order to avoid gassing and other harmful side reactions, the positive electrode potential is limited to about 4.1 V at 100% SOC, corresponding to lithiation levels of 30% and 19% for NCA and LMO, respectively (Figure 1).

Based on the host capacities ($c_{s,\,\rm max}$) and volume fractions (ε_{s}) of the electrode materials, the thickness of the positive electrode may now be computed as

$$L_{\rm pos} = \frac{0.8 \varepsilon_{s,\,\rm Gr} c_{s,\,\rm max,\rm Gr}}{(1-0.3) \varepsilon_{s,\,\rm NCA} c_{s,\,\rm max,\rm NCA} + (1-0.19) \varepsilon_{s,\,\rm LMO} c_{s,\,\rm max,\rm LMO}} L_{\rm neg}$$

Figure 2 shows the voltage profile for a 1:2 volume ratio of the two positive electrode materials at a constant current discharge of 1 C.

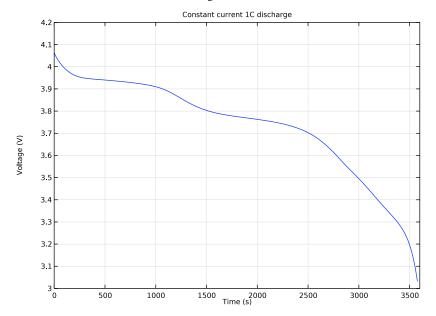


Figure 2: Discharge voltage profile at 1 C.

Figure 3 shows the lithium concentration at the surface of the active material particles in the positive electrode (at the positive electrode current collector end) during 1 C discharge. The variation of the surface concentration with time is different in the two

active materials. This is because of the different electrochemical properties of the two active materials.

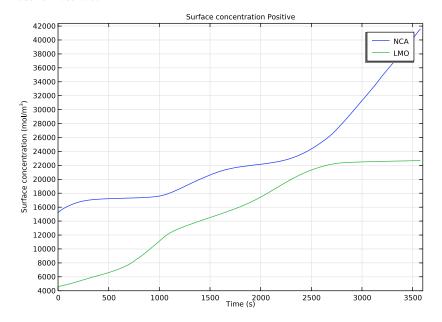


Figure 3: Surface concentration in the active material particles in the positive electrode during 1 C discharge.

Figure 4 shows the lithium concentration inside a particle at a particular position in the negative graphite electrode (at the center of the negative electrode) during 1 C discharge. The concentration profiles show characteristic ridges, thereby capturing the staging phenomenon seen in multiphase electrodes like graphite. The Baker-Verbrugge diffusion model accounts for the interactions of the lithium-ions within the solid phase through an activity correction term, and hence provides a realistic representation of the intercalation process.

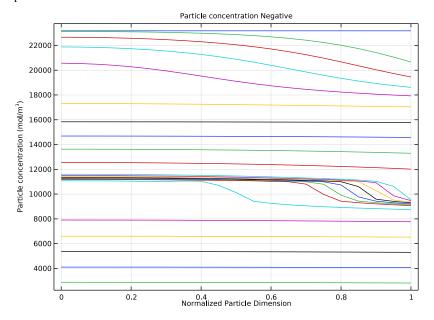


Figure 4: Concentration profiles inside a particle at a particular position in the negative electrode, at various times during 1 C discharge.

The voltage profiles during 1 C discharge for different volume mix fractions of the active materials in the positive electrode are shown in Figure 5. The shape of the discharge profile has a pronounced dependence on the mix fraction of the active materials in the electrode.

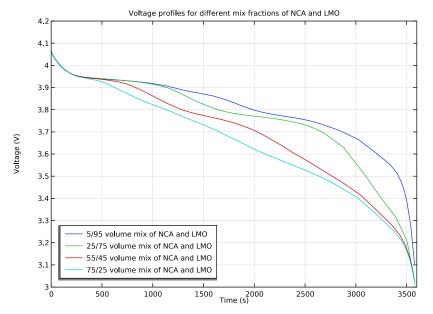


Figure 5: Voltage profiles during 1C discharge for different volume mix fractions of the active materials in the positive electrode.

Reference

1. P. Albertus, J. Christensen, and J. Newman, "Experiments on and Modeling of Multiple Active Materials in Positive Electrodes for Lithium-Ion Batteries," J. Electrochem. Soc., vol. 156, no. 7, pp. A606-A618, 2009.

Application Library path: Battery_Design_Module/Batteries,_Lithium-Ion/ li battery multiple materials 1d

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click ID.
- 2 In the Select Physics tree, select Electrochemistry>Batteries>Lithium-Ion Battery (liion).
- 3 Click Add.
- 4 Click Study.
- 5 In the Select Study tree, select Preset Studies for Selected Physics Interfaces> Time Dependent with Initialization.
- 6 Click M Done.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click Load from File.
- **4** Browse to the model's Application Libraries folder and double-click the file li battery multiple materials parameters.txt.

GEOMETRY I

The geometry contains three domains. Create the geometry by specifying the coordinates of the boundaries.

Interval I (iI)

- I In the Model Builder window, under Component I (compl) right-click Geometry I and choose Interval.
- 2 In the Settings window for Interval, locate the Interval section.
- 3 From the Specify list, choose Interval lengths.
- **4** In the table, enter the following settings:

| Lengths (m) | | |
|-------------|--|--|
| L_neg | | |
| L_sep | | |
| L_pos | | |

5 Click Pauld Selected.

MATERIALS

All materials are available in the Material Library. Note: In the Materials node, cEeqref denotes the maximum lithium concentration in the active material.

ADD MATERIAL

- I In the Home toolbar, click **‡ Add Material** to open the **Add Material** window.
- 2 Go to the Add Material window.
- 3 In the tree, select Battery>Electrolytes>LiPF6 in 1:1 EC:DEC (Liquid, Li-ion Battery).
- 4 Click Add to Component in the window toolbar.
- 5 In the tree, select Battery>Electrodes>Graphite, LixC6 MCMB (Negative, Li-ion Battery).
- **6** Click **Add to Component** in the window toolbar.
- 7 In the tree, select Battery>Electrodes>NCA, LiNi0.8Co0.15Al0.0502 (Positive, Liion Battery).
- **8** Click **Add to Component** in the window toolbar.
- 9 In the tree, select Battery>Electrodes>LMO, LiMn2O4 Spinel (Positive, Li-ion Battery).
- 10 Click Add to Component in the window toolbar.
- II In the Home toolbar, click **# Add Material** to close the **Add Material** window.


MATERIALS

NCA, LiNi0.8Co0.15Al0.05O2 (Positive, Li-ion Battery) (mat3)

In the Model Builder window, expand the NCA, LiNio.8Coo.15Alo.0502 (Positive, Liion Battery) (mat3) node.

Interpolation I (Eeg_intI, Eeg_inv)

I In the Model Builder window, expand the Component I (compl)>Materials>NCA, LiNi0.8Co0.15Al0.0502 (Positive, Li-ion Battery) (mat3)>Equilibrium potential (elpot) node, then click Interpolation I (Eeq_intI, Eeq_inv).

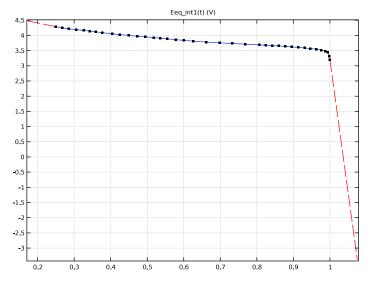


LMO, LiMn2O4 Spinel (Positive, Li-ion Battery) (mat4) In the Model Builder window, expand the LMO, LiMn2O4 Spinel (Positive, Liion Battery) (mat4) node.

Interpolation I (Eeq_int1, Eeq_inv)

I In the Model Builder window, expand the Component I (compl)>Materials>LMO, LiMn204 Spinel (Positive, Li-ion Battery) (mat4)>Equilibrium potential (elpot) node, then click Interpolation I (Eeq_intI, Eeq_inv).

2 In the Settings window for Interpolation, click Plot.

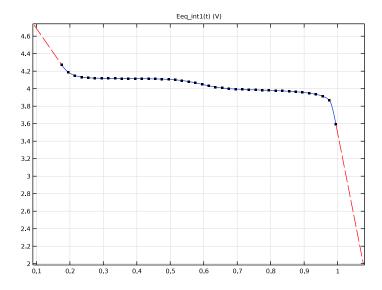

LITHIUM-ION BATTERY (LIION)

Set up the physics in the insertion electrodes. In this model, the Baker-Verbrugge diffusion model is used in the Particle Intercalation nodes. Note that the Baker-Verbrugge diffusivities are typically different from the Fickian diffusivity values. In this model, the intercalation diffusivities are simply set to the values available in the Material Library.

Separator I

- I In the Model Builder window, under Component I (compl)>Lithium-lon Battery (liion) click Separator I.
- 2 In the Settings window for Separator, locate the Porous Matrix Properties section.
- **3** In the ε_1 text field, type epsl_sep.
- 4 Locate the Effective Transport Parameter Correction section. From the Electrolyte conductivity list, choose User defined. In the f_1 text field, type eps1_sep^brug1_sep.
- 5 From the Diffusion list, choose User defined. In the $f_{\rm Dl}$ text field, type epsl_sep^brugl_sep.

Porous Electrode I

- I In the Physics toolbar, click Domains and choose Porous Electrode.
- **2** Select Domain 1 only.

- 3 In the Settings window for Porous Electrode, locate the Electrode Properties section.
- 4 In the σ_s text field, type sigmas_neg.
- 5 Locate the Porous Matrix Properties section. In the ϵ_s text field, type epss_neg. The liion.epss_neg variable is calculated automatically by the Initial Cell Charge Distribution node in order to balance the capacity of the negative electrode to that of the positive.
- **6** In the ε_1 text field, type epsl_neg.

Particle Intercalation 1

- I In the Model Builder window, click Particle Intercalation I.
- 2 In the Settings window for Particle Intercalation, locate the Material section.
- 3 From the Particle material list, choose Graphite, LixC6 MCMB (Negative, Liion Battery) (mat2).
- 4 Locate the Particle Transport Properties section. From the Species concentration transport model list, choose Baker-Verbrugge.
- **5** In the r_p text field, type rp_neg.
 - The concentration profiles inside a graphite electrode particle will be analyzed during postprocessing. Hence, it is useful to have a finer resolution along the particle dimension, by setting a linear distribution with 20 elements.
- 6 Click to expand the Particle Discretization section. From the Distribution list, choose Linear.
- 7 In the $N_{\rm el}$ text field, type 20.

Porous Electrode Reaction I

- I In the Model Builder window, click Porous Electrode Reaction I.
- 2 In the Settings window for Porous Electrode Reaction, locate the Material section.
- 3 From the Material list, choose Graphite, LixC6 MCMB (Negative, Li-ion Battery) (mat2).
- **4** Locate the **Electrode Kinetics** section. In the $i_{0,ref}(T)$ text field, type ioref_neg.

Porous Electrode 2

- I In the Physics toolbar, click **Domains** and choose **Porous Electrode**.
- 2 Select Domain 3 only.
- 3 In the Settings window for Porous Electrode, locate the Electrode Properties section.
- **4** In the σ_s text field, type sigmas_pos.
- **5** Locate the **Porous Matrix Properties** section. In the ε_s text field, type epss_pos_NCA.

- **6** In the ε_1 text field, type epsl_pos.
- 7 Locate the Effective Transport Parameter Correction section. From the Electrolyte conductivity list, choose User defined. In the f_1 text field, type eps1 pos^brug1 pos.
- **8** From the **Diffusion** list, choose **User defined**. In the $f_{\rm Dl}$ text field, type eps1 pos^brug1 pos.

Particle Intercalation I

- I In the Model Builder window, click Particle Intercalation I.
- 2 In the Settings window for Particle Intercalation, locate the Material section.
- 3 From the Particle material list, choose NCA, LiNi0.8Co0.15Al0.0502 (Positive, Liion Battery) (mat3).
- **4** Locate the **Particle Transport Properties** section. In the r_p text field, type rp_pos_NCA .
- 5 From the Species concentration transport model list, choose Baker-Verbrugge.

Porous Electrode Reaction I

- I In the Model Builder window, click Porous Electrode Reaction 1.
- 2 In the Settings window for Porous Electrode Reaction, locate the Material section.
- 3 From the Material list, choose NCA, LiNi0.8Co0.15Al0.0502 (Positive, Liion Battery) (mat3).
- **4** Locate the **Electrode Kinetics** section. In the $i_{0,ref}(T)$ text field, type i0ref_pos_NCA.

Additional Porous Electrode Material I

- In the Physics toolbar, click Domains and choose
 Additional Porous Electrode Material.
- 2 Select Domain 3 only.
- 3 In the Settings window for Additional Porous Electrode Material, locate the Volume Fraction section.
- **4** In the ε_s text field, type epss_pos_LMO.

Particle Intercalation 1

- I In the Model Builder window, click Particle Intercalation I.
- 2 In the Settings window for Particle Intercalation, locate the Material section.
- 3 From the Particle material list, choose LMO, LiMn2O4 Spinel (Positive, Liion Battery) (mat4).
- **4** Locate the **Particle Transport Properties** section. In the r_p text field, type rp_pos_LMO .

5 From the Species concentration transport model list, choose Baker-Verbrugge.

Porous Electrode Reaction 1

- I In the Model Builder window, click Porous Electrode Reaction I.
- 2 In the Settings window for Porous Electrode Reaction, locate the Material section.
- 3 From the Material list, choose LMO, LiMn2O4 Spinel (Positive, Li-ion Battery) (mat4).
- **4** Locate the **Electrode Kinetics** section. In the $i_{0,ref}(T)$ text field, type i0ref_pos_LMO.
- 5 In the Model Builder window, click Lithium-Ion Battery (liion).
- 6 In the Settings window for Lithium-Ion Battery, locate the Cell Settings section.
- 7 Select the Define cell state of charge (SOC) and initial charge inventory check box.

SOC and Initial Charge Distribution 1

- I In the Model Builder window, expand the Lithium-Ion Battery (liion) node, then click SOC and Initial Charge Distribution I.
- 2 In the Settings window for SOC and Initial Charge Distribution, locate the Initial Cell Charge Distribution section.
- **3** In the SOC_0 text field, type SOC_cello .
- 4 Locate the State-of-Charge Definition section. From the list, choose User defined. In the $E_{\rm cell}^{~0}\%SOC$ text field, type E_0_SOC.
- **5** In the $E_{\rm cell}^{100}\%SOC$ text field, type E_100_SOC.

Negative Electrode Selection I

- I In the Model Builder window, click Negative Electrode Selection 1.
- 2 Select Domain 1 only.

Positive Electrode Selection I

- I In the Model Builder window, click Positive Electrode Selection I.
- **2** Select Domain 3 only.

Electric Ground 1

- I In the Physics toolbar, click Boundaries and choose Electric Ground.
- 2 Select Boundary 1 only.

Electrode Current I

- I In the Physics toolbar, click Boundaries and choose Electrode Current.
- 2 Select Boundary 4 only.
- 3 In the Settings window for Electrode Current, locate the Electrode Current section.

4 In the $I_{\rm s.total}$ text field, type -liion.I_1C_cell.

GLOBAL DEFINITIONS

Default Model Inputs

Set up the temperature value used in the entire model.

- I In the Model Builder window, under Global Definitions click Default Model Inputs.
- 2 In the Settings window for Default Model Inputs, locate the Browse Model Inputs section.
- 3 In the tree, select General>Temperature (K) minput.T.
- 4 Find the Expression for remaining selection subsection. In the Temperature text field, type Т.

MESH I

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- **3** From the **Element size** list, choose **Fine**.
- 4 Click Build All.

DEFINITIONS (COMPI)

Using a boundary integration variable you can access the cell voltage at the end terminal during computation.

Integration | (intob|)

- I In the Definitions toolbar, click Nonlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, type EndTerminal in the Operator name text field.
- 3 Locate the Source Selection section. From the Geometric entity level list, choose Boundary.
- 4 Select Boundary 4 only.

STUDY I

Step 2: Time Dependent

- I In the Model Builder window, under Study I click Step 2: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- 3 In the Output times text field, type 0 3600.

Solution I (soll)

- I In the Study toolbar, click Show Default Solver.
 - Store the actual steps taken by the solver to make sure to capture any sudden steep voltage changes.
- 2 In the Model Builder window, expand the Solution I (soll) node, then click Time-Dependent Solver I.
- 3 In the Settings window for Time-Dependent Solver, locate the General section.
- 4 From the Times to store list, choose Steps taken by solver.
- 5 Right-click Study 1>Solver Configurations>Solution 1 (sol1)>Time-Dependent Solver 1 and choose Stop Condition.
- 6 In the Settings window for Stop Condition, locate the Stop Expressions section.
- 7 Click Add.
- **8** In the table, enter the following settings:

| Stop expression | Stop if | Active | Description |
|--|------------|--------|-------------------|
| <pre>comp1.EndTerminal(comp1.phis)< 3.0</pre> | True (>=I) | 1 | Stop expression 1 |

- 9 Locate the Output at Stop section. Clear the Add warning check box.
- 10 In the Model Builder window, click Study 1.
- II In the Settings window for Study, locate the Study Settings section.
- 12 Clear the Generate default plots check box.
- 13 In the Study toolbar, click **Compute**.

RESULTS

Reproduce the plots in the model documentation for 1C discharge, starting with the voltage profile (Figure 2).

Constant current IC discharge

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 Right-click ID Plot Group I and choose Rename.
- 3 In the Rename ID Plot Group dialog box, type Constant current 1C discharge in the New label text field.
- 4 Click OK.

Point Graph I

I Right-click Constant current IC discharge and choose Point Graph.

- 2 Select Boundary 4 only.
- 3 In the Settings window for Point Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Lithium-Ion Battery>phis - Electric potential - V.

Constant current IC discharge

- I In the Model Builder window, click Constant current IC discharge.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- **3** Select the **y-axis label** check box. In the associated text field, type Voltage (V).
- 4 Click to expand the **Title** section. From the **Title type** list, choose **Label**.
- 5 Locate the Axis section. Select the Manual axis limits check box.
- 6 In the x minimum text field, type 0.
- 7 In the x maximum text field, type 3600.
- 8 In the y minimum text field, type 3.0.
- 9 In the y maximum text field, type 4.2.
- 10 In the Constant current 1C discharge toolbar, click Plot.

Surface concentration Positive

The following steps are for plotting the surface concentration in each active material in the positive electrode during 1C discharge (Figure 3).

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 Right-click ID Plot Group 2 and choose Rename.
- 3 In the Rename ID Plot Group dialog box, type Surface concentration Positive in the New label text field.
- 4 Click OK.

Point Grabh 1

- I Right-click Surface concentration Positive and choose Point Graph.
- 2 Select Boundary 4 only.
- 3 In the Settings window for Point Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Lithium-Ion Battery>Particle intercalation>liion.cs_surface -Insertion particle concentration, surface - mol/m³.
- 4 Click to expand the **Legends** section. Select the **Show legends** check box.
- 5 From the Legends list, choose Manual.

6 In the table, enter the following settings:

Legends NCA

7 Right-click Point Graph I and choose Duplicate.

Point Graph 2

- I In the Model Builder window, click Point Graph 2.
- 2 In the Settings window for Point Graph, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)> Lithium-Ion Battery>Particle intercalation>liion.cs_surface_addml -Insertion particle surface concentration, Additional Porous Electrode Material I - mol/m3.
- **3** Locate the **Legends** section. In the table, enter the following settings:

| Legends | |
|---------|--|
| LMO | |

Surface concentration Positive

- I In the Model Builder window, click Surface concentration Positive.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- 3 Select the y-axis label check box. In the associated text field, type Surface concentration (mol/m³).
- 4 Locate the Title section. From the Title type list, choose Label.
- 5 Locate the Axis section. Select the Manual axis limits check box.
- **6** In the **x minimum** text field, type **0**.
- 7 In the x maximum text field, type 3600.
- **8** In the **y minimum** text field, type 4000.
- **9** In the Surface concentration Positive toolbar, click **Plot**.

Study I/Solution I (soll)

The following steps are for plotting the concentration profiles inside a particle at a particular position in the negative electrode, at various times during 1C discharge (Figure 4). To do this, create a Solution dataset that refers to the extra dimension that is set up by the Porous Electrode node corresponding to the negative electrode.

- I In the Model Builder window, expand the Results>Datasets node.
- 2 Right-click Results>Datasets>Study I/Solution I (soll) and choose Duplicate.

Study I/Solution I: xdim Negative

- I In the Model Builder window, under Results>Datasets click Study I/Solution I (3) (soll).
- 2 In the Settings window for Solution, type Study 1/Solution 1: xdim Negative in the Label text field.
- 3 Locate the Solution section. From the Component list, choose Extra Dimension from Particle Intercalation I (liion_pcel_pinl_xdim).

Particle concentration Negative

- I In the Home toolbar, click Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Particle concentration Negative in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Study I/ Solution 1: xdim Negative (soll).
- 4 From the Time selection list, choose Interpolated.
- 5 In the Times (s) text field, type range (0,200,2000) range (2030,30,2200) range (2300, 200, 3300).

Line Graph 1

- I Right-click Particle concentration Negative and choose Line Graph.
- **2** Select Domain 1 only.
 - The atxd1() operator is used to specify the x coordinate in the negative electrode of the battery geometry.
- 3 In the Settings window for Line Graph, locate the y-Axis Data section.
- 4 In the Expression text field, type atxd1(25e-6,liion.cs_pce1).

Particle concentration Negative

- I In the Model Builder window, click Particle concentration Negative.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- 3 Select the x-axis label check box. In the associated text field, type Normalized Particle Dimension.
- 4 Select the y-axis label check box. In the associated text field, type Particle concentration (mol/m³).
- **5** Locate the **Title** section. From the **Title type** list, choose **Label**.
- 6 In the Particle concentration Negative toolbar, click **Plot**.

ROOT

Now set up a parametric study for different mix fractions of active materials in the positive electrode.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- **2** Go to the **Add Study** window.
- 3 Find the Studies subsection. In the Select Study tree, select Preset Studies for Selected Physics Interfaces>Time Dependent with Initialization.
- 4 Click Add Study in the window toolbar.
- 5 In the Model Builder window, click the root node.
- 6 In the Home toolbar, click Add Study to close the Add Study window.

STUDY 2

Step 2: Time Dependent

- I In the Settings window for Time Dependent, locate the Study Settings section.
- 2 In the Output times text field, type 0 3600.

Parametric Sweep

- I In the Study toolbar, click Parametric Sweep.
- 2 In the Settings window for Parametric Sweep, locate the Study Settings section.
- 3 Click + Add.
- 4 In the table, enter the following settings:

| Parameter name | Parameter value list | Parameter unit |
|--|----------------------|----------------|
| fr_pos_NCA (Volume fraction of NCA in NCA/LMO mix) | 0.05 0.25 0.55 0.75 | |

Solution 3 (sol3)

- I In the Study toolbar, click Show Default Solver.
- 2 In the Model Builder window, expand the Solution 3 (sol3) node, then click Time-Dependent Solver I.
- 3 In the Settings window for Time-Dependent Solver, locate the General section.
- 4 From the Times to store list, choose Steps taken by solver. Store only every 3rd time step. This reduces the size of the stored solution and the size of model file.

- 5 In the Store every Nth step text field, type 3.
- 6 Right-click Study 2>Solver Configurations>Solution 3 (sol3)>Time-Dependent Solver I and choose Stop Condition.
- 7 In the Settings window for Stop Condition, locate the Stop Expressions section.
- 8 Click + Add.
- **9** In the table, enter the following settings:

| Stop expression | Stop if | Active | Description |
|--|------------|----------|-------------------|
| <pre>comp1.EndTerminal(comp1.phis)< 3.0</pre> | True (>=1) | V | Stop expression 1 |

- 10 Locate the Output at Stop section. Clear the Add warning check box.
- II In the Model Builder window, click Study 2.
- 12 In the Settings window for Study, locate the Study Settings section.
- **13** Clear the **Generate default plots** check box.
- 14 In the Study toolbar, click **Compute**.

RESULTS

You can plot the voltage profiles from the parametric study (Figure 5) by performing the following steps:

Voltage profiles (parametric)

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 Right-click ID Plot Group 4 and choose Rename.
- 3 In the Rename ID Plot Group dialog box, type Voltage profiles (parametric) in the New label text field.
- 4 Click OK.

Point Grabh I

- I Right-click Voltage profiles (parametric) and choose Point Graph.
- 2 In the Settings window for Point Graph, locate the Data section.
- 3 From the Dataset list, choose Study 2/Parametric Solutions I (sol5).
- 4 Select Boundary 4 only.
- 5 Click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose phis - Electric potential - V.
- **6** Locate the **Legends** section. Select the **Show legends** check box.

- 7 From the Legends list, choose Evaluated.
- 8 In the Legend text field, type eval(fr_pos_NCA*100)/eval((1-fr_pos_NCA)*100) volume mix of NCA and LMO.

Voltage profiles (parametric)

- I In the Model Builder window, click Voltage profiles (parametric).
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- **3** Select the **y-axis label** check box. In the associated text field, type **Voltage** (V).
- 4 Locate the Title section. From the Title type list, choose Manual.
- 5 In the Title text area, type Voltage profiles for different mix fractions of NCA and LMO.
- 6 Locate the Axis section. Select the Manual axis limits check box.
- 7 In the x minimum text field, type 0.
- 8 In the x maximum text field, type 3600.
- **9** In the **y minimum** text field, type **3.0**.
- 10 In the y maximum text field, type 4.2.
- II Locate the Legend section. From the Position list, choose Lower left.