

# Postbuckling Analysis Using an Incremental Arc Length Method

Buckling is a phenomenon that can cause sudden failure of a structure.

A linear buckling analysis predicts the critical buckling load. Such an analysis, however, does not give any information about what happens at loads higher than the critical load. Tracing the solution after the critical load is called a *postbuckling analysis*.

A linear buckling analysis also often overpredicts the load-carrying capacity of the structure.

In order to accurately determine the critical buckling load or predict the postbuckling behavior, you can use the nonlinear solver and ramp up the applied load to compute the structure deformation. The buckling load can then be based on when a certain, not acceptable, deformation is reached.

Once the critical buckling load has been reached, it can happen that the structure undergoes a sudden large deformation into a new stable configuration. This is known as a snap-through phenomenon. A snap-through process cannot be simulated using prescribed load in a standard nonlinear static solver because the problem becomes numerically singular. Physically speaking, it is a highly transient problem as the structure "jumps" from one state to another. For simple cases with a single point load, it is often possible to replace the point load with a prescribed displacement and then measure the reaction force instead.

For more general problems, the postbuckling solution must however be tracked using more sophisticated methods, as shown in this example

Figure 1 shows the variation of load versus the displacement for such a difficult case. It illustrates the possible computational problem by using either a load control (path A) or a displacement control (path B).

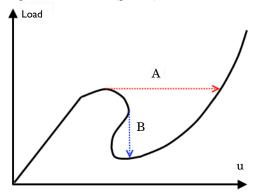


Figure 1: Load versus displacement in snap-through buckling.

The shell structure in this example has a behavior similar to this.

In this example, an incremental arc-length method combined with cubic extrapolation is used for postbuckling analysis of a hinged cylindrical panel subjected to a point load at its center. The results of this example can be compared with the similar Application Library example Postbuckling Analysis of a Hinged Cylindrical Shell which uses the global equation approach based on the monotonically increasing average displacement.

## Model Definition

The model studied here is a benchmark for a hinged cylindrical panel subjected to a point load at its center; see Ref. 1.

- The radius of the cylinder is R = 2.54 m and all edges have a length of 2L = 0.508 m. The angular span of the panel is thus 0.2 radians. The panel thickness is th = 6.35 mm.
- The straight edges are hinged.
- In the study the variation of the panel center vertical displacement with respect to the change of the applied load is of interest.

Due to the double symmetry, only one quarter of the geometry is modeled as shown in Figure 2. The blue lines show the symmetry edge conditions, while the red line shows the location of the hinged edge condition.

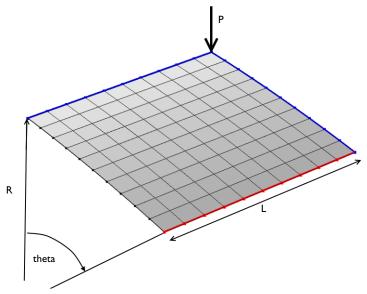


Figure 2: Problem description.

In general, you should be careful with using symmetry in buckling problems, because nonsymmetric solutions may exist.

## Arc Length Method

The incremental arc length with cubic extrapolation method used in this example is proposed in Ref. 2, and explained below. Let  $X^0, X^1, X^2, X^3$  be the last four converged solution vectors fulfilling equilibrium, where

$$\boldsymbol{X}^{i} = \left\{ u_{1}^{k}, ..., u_{n}^{k}, v_{1}^{k}, ..., v_{n}^{k}, w_{1}^{k}, ..., w_{n}^{k}, ax_{1}^{k}, ..., ax_{n}^{k}, ay_{1}^{k}, ..., ay_{n}^{k}, az_{-1}^{k}, ..., az_{-n}^{k}, p^{k} \right\}$$

and i is the index of the equilibrium step. An initial guess vector  $X^4$  for the next solution is given by the cubic extrapolation fit as

$$X^{4} = \sum_{i=0}^{3} \left( \prod_{j=0, j \neq i}^{3} \frac{y_{4} - y_{j}}{y_{i} - y_{j}} \right) X^{i}$$

where y is the arc length function. The previous arc length functions are given by  $y_0 = 0$ ,  $y_1 = A_1, y_2 = y_1 + A_2, y_3 = y_2 + A_3, y_4 = y_3 + \Delta A$ . Here, we choose  $\Delta A = A_3$ . The secant arc lengths in the parametric space  $A_i$  are given by the Euclidean norm of differences as

$$A_i = |X^i - X^{i-1}|$$

The vector  $X^4$  provides the load value for next iteration as well as the initial guess for the displacements. With this method, it is possible to trace the equilibrium path automatically, including the snap-through behavior.

The  $X^i$  vectors in this method contain a combination of displacements and load In order to avoid ill conditioning of the method, it is advisable to scale to load appropriately. In this example, a scale factor of  $10^{-5}$  is used for the load.

#### Results

In Figure 3 you can see the applied load as a function of the panel center displacement. The figure shows clearly a nonunique solution for a given applied load (between -400 N

to 600 N) or a given displacement (between 14.4 mm and 17 mm). The result matches the reference results computed using the global equation approach.

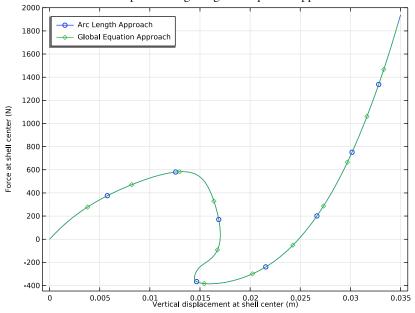


Figure 3: Applied load versus panel center displacement.

As shown in Table 1, the results agree well with the target data from Ref. 1.

TABLE I: COMPARISON BETWEEN TARGET AND COMPUTED DATA.

Applied Load (N)	` '   '		ncement Difference (%) uted (mm)	
155.1	1.846	1.853	0.37	
574.2	11.904	12.051	1.23	
485.I	15.501	15.564	0.29	
24.9	17.008	17.0285	0.12	
-300.3	14.520	14.535	0.10	
-381.3	16.961	16.784	1.04	
-1.8	24.824	24.818	0.02	
1469.4	33.388	33.343	0.13	

## Notes About the COMSOL Implementation

The main feature of this model is that a limit point instability occurs at the buckling load. Neither a load control, nor a point displacement control, would be able to track the jump between the stable solution paths (see Figure 1). To solve this type of problem one needs either of the approaches:

- Find a proper parameter that increases monotonically. Then, use a Global Equation node where the load is made a function of this monotonically increasing parameter. The Application Library example Postbuckling Analysis of a Hinged Cylindrical Shell demonstrates this approach.
- Use an arc length method. The current example demonstrate this approach, which is useful if you cannot find a suitable monotonically increasing control parameter.

The arc length method is not built-in, so you have to implement yourself, using a **Model Method**. The code used in this example is fairly general, so it should be possible to copy it into other models, and reuse it with no or small modifications.

## Reference

- 1. K.Y. Sze, X.H. Liua, and S.H. Lob, "Popular Benchmark Problems for Geometric Nonlinear Analysis of Shells," Finite Element in Analysis and Design, vol. 40, issue 11, pp. 1551-1569, 2004.
- 2. Y.K. Cheung, and S.H. Chen, "Application of the Incremental Harmonic Balance Method to Cubic Non-linearity Systems," Journal of Sound and Vibration, vol. 140, pp. 273-286, 1990.

Application Library path: Structural Mechanics Module/ Verification Examples/postbuckling shell arclength

## Modeling Instructions

#### ROOT

In this example you will start from an existing model in the Structural Mechanics Module.

#### APPLICATION LIBRARIES

I From the File menu, choose Application Libraries.

- 2 In the Application Libraries window, select Structural Mechanics Module> Verification Examples>postbuckling\_shell in the tree.
- 3 Click Open.

## COMPONENT I (COMPI)

Remove the **Postbuckling Study**, but before that copy the evaluation group to a table.

#### RESULTS

Evaluation Group: Force vs. Displacement

In the Model Builder window, expand the Component I (compl) node, then click Results> Evaluation Group: Force vs. Displacement.

Table: Reference Result

- I In the Evaluation Group: Force vs. Displacement toolbar, click Copy to Table.
- 2 In the Settings window for Table, type Table: Reference Result in the Label text field

#### POSTBUCKLING STUDY

In the Model Builder window, right-click Postbuckling Study and choose Delete.

Modify the parameter list.

## **GLOBAL DEFINITIONS**

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
р	0	0	Dimensionless load
p_scaleFactor	1E5[N]	IE5 N	Load scale factor
Р	p*p_scaleFactor	0 N	Total load

#### DEFINITIONS

Average I (aveop I)

- I In the Model Builder window, expand the Component I (compl)>Definitions node.
- 2 Right-click Component I (compl)>Definitions>Average I (aveopl) and choose Delete.

Delete the **Global Equation** node from the physics.

## SHELL (SHELL)

Global Equations 1

- I In the Model Builder window, expand the Component I (compl)>Shell (shell) node.
- 2 Right-click Component I (compl)>Shell (shell)>Global Equations I and choose Delete.

Create model methods to run the postbuckling study with the arc length method. Note that the method editor is only available in the Windows® version of the COMSOL Desktop.

#### APPLICATION BUILDER

In the **Home** toolbar, click A **Application Builder**.

#### METHODS

codeUtil

- I In the Home toolbar, click More Libraries and choose Utility Class.
- 2 Right-click utill and choose Rename.
- 3 In the Rename Utility Class dialog box, type codeUtil in the New name text field.
- 4 Click OK.
- 5 Right-click codeUtil and choose Edit.
- **6** Copy the following code into the **codeUtil** window:

```
//This utility creates the requested methods
//Method to remove autocreated model nodes
public static void removeAutoCreatedNodes() {
if (contains(model.study().tags(), "std in"))
model.study().remove("std in");
if (contains(model.study().tags(), "std c"))
model.study().remove("std c");
if (contains(model.study().tags(), "std p"))
model.study().remove("std p");
if (contains(model.sol().tags(), "sol 1"))
model.sol().remove("sol 1");
if (contains(model.sol().tags(), "sol 2"))
model.sol().remove("sol_2");
if (contains(model.sol().tags(), "sol 3"))
model.sol().remove("sol 3");
if (contains(model.sol().tags(), "sol 4"))
model.sol().remove("sol 4");
if (contains(model.result().dataset().tags(), "dset c"))
model.result().dataset().remove("dset c");
if (contains(model.result().evaluationGroup().tags(), "eg c"))
```

```
model.result().evaluationGroup().remove("eg c");
//Method to create a placeholder study for the initial guess
public static void createPlaceholderStudyForInitialGuess() {
Study study = model.study().create("std in");
String stdLabel = "Placeholder Study for Initial Guess";
boolean isLabelExists = false;
for (Study std : model.study()) {
if (std.label().equals(stdLabel))
isLabelExists = true:
if (!isLabelExists)
study.label(stdLabel);
study.create("stat_in", "Stationary");
study.feature("stat_in").set("geometricNonlinearity", true);
SolverSequence solin = model.sol().create("sol in");
solin.createAutoSequence("std in");
solin.attach("std in");
//Method to create a study for the postbuckling analysis
public static void createPostbucklingStudy() {
Study study = model.study().create("std c");
String stdLabel = "Postbuckling Study";
boolean isLabelExists = false;
for (Study std : model.study()) {
if (std.label().equals(stdLabel))
isLabelExists = true:
if (!isLabelExists)
study.label(stdLabel);
study.create("stat c", "Stationary");
study.feature("stat_c").set("geometricNonlinearity", true);
SolverSequence solc = model.sol().create("sol c");
solc.createAutoSequence("std c");
solc.attach("std c");
//Method to create a placeholder study for the parametric solution
public static void createPlaceholderStudyForParametricSolution() {
Study study = model.study().create("std p");
String stdLabel = "Placeholder Study for Parametric Solution";
boolean isLabelExists = false;
for (Study std : model.study()) {
if (std.label().equals(stdLabel))
isLabelExists = true;
if (!isLabelExists)
study.label(stdLabel);
study.create("stat_p", "Stationary");
SolverSequence solp = model.sol().create("sol p");
solp.createAutoSequence("std p");
solp.attach("std p");
StudyFeature studyFeature = model.study("std p").feature("stat p");
```

```
studyFeature.set("geometricNonlinearity", true);
 studyFeature.set("useparam", true);
studyFeature.setIndex("pname", "p", 0);
studyFeature.setIndex("plistarr", "1 2", 0);
studyFeature.setIndex("punit", "N", 0);
//Method to create an evaluation group
public static void createEvaluationGroup(String globalVariable) {
DatasetFeature dsetc = model.result().dataset().create("dset_c", "Solution");
dsetc.set("solution", "sol c");
EvaluationGroupFeature eg = model.result().evaluationGroup().create("eg c",
"EvaluationGroup");
eg.set("data", "dset_c");
eg.create("gev1", "EvalGlobal");
eg.feature("gev1").setIndex("expr", globalVariable, 0);
eg.set("includeparameters", false);
//Method for creating a stop condition in the solver
public static boolean stopCondition(double globalVariableMin, double
globalVariableMax) {
boolean stop = false;
EvaluationGroupFeature eg = model.result().evaluationGroup("eg c");
eg.run();
double[][] globalVariable = eg.getReal();
if (globalVariable[0][0] > globalVariableMax || globalVariable[0][0] <</pre>
globalVariableMin)
stop = true;
return stop;
```

#### **NEW METHOD**

- I In the Application Builder window, right-click Methods and choose New Method.
- 2 In the New Method dialog box, type postBucklingWithArclength in the Name text field.
- 3 Click OK.

postBucklingWithArclength

- I In the Application Builder window, under Methods click postBucklingWithArclength.
- **2** Copy the following code into the **postBucklingWithArclength** window:

```
clearDebugLog();
long startTime = timeStamp();
if (!contains(model.param().varnames(), p))
error("The load parameter with the given name does not exists in the parameter
list of the model, check the model.");

if (p.equals("") || deltap == 0 || numberOfIter == 0 || (isStopConditionGiven
&& globalVariable.equals("")))
```

```
error("The inputs assigned to the model method are either empty or zero, check
the model.");
if (isStopConditionGiven && globalVariableMin == globalVariableMax)
error("The lower and upper limits of the global variable in stop condition
should not be the same, check the model.");
model.param().set(p, "0");
//Remove the autocreated model nodes
codeUtil.removeAutoCreatedNodes():
//Create a placeholder study to store the intial guess
codeUtil.createPlaceholderStudyForInitialGuess();
//Create a postbuckling study
codeUtil.createPostbucklingStudy();
//Create a placeholder study to store the parametric solutions
codeUtil.createPlaceholderStudyForParametricSolution();
//Create an evaluation group for the evaluation of the stop condition
codeUtil.createEvaluationGroup(globalVariable);
//First iteration
model.sol("sol c").runAll();
model.sol("sol p").setU(1, model.sol("sol c").getU());
model.sol("sol c").copySolution("sol 1");
//Second iteration
model.param().set(p, toString(deltap));
model.sol("sol c").runAll();
model.sol("sol p").setU(2, model.sol("sol c").getU());
model.sol("sol_c").copySolution("sol_2");
//Third iteration
model.param().set(p, toString(2*deltap));
model.sol("sol c").runAll();
model.sol("sol p").setU(3, model.sol("sol c").getU());
model.sol("sol c").copySolution("sol 3");
//Fourth iteration
model.param().set(p, toString(3*deltap));
model.sol("sol c").runAll();
model.sol("sol p").setU(4, model.sol("sol c").getU());
model.sol("sol c").copySolution("sol 4");
//Next iterations by the arclength method
double[] parametricFull = new double[4+numberOfIter];
parametricFull[0] = 0;
parametricFull[1] = 1*deltap;
parametricFull[2] = 2*deltap;
parametricFull[3] = 3*deltap;
int pfinal = 4+numberOfIter;
model.study("std c").feature("stat c").set("useinitsol", true);
model.study("std c").feature("stat c").set("initmethod", "sol");
model.study("std_c").feature("stat_c").set("initstudy", "std_in");
model.study("std c").feature("stat c").set("initsol", "sol in");
int sizeOfSolution = pfinal;
//Arclength method
for (int ii = 4; ii < pfinal; ii++) {</pre>
double[] w 3 = remove(model.sol("sol 4").getU(), 0);
```

```
double[] w_2 = remove(model.sol("sol_3").getU(), 0);
double[] w_1 = remove(model.sol("sol_2").getU(), 0);
double[] w_0 = remove(model.sol("sol_1").getU(), 0);
double p_3 = parametricFull[ii-1];
double p 2 = parametricFull[ii-2];
double p_1 = parametricFull[ii-3];
double p_0 = parametricFull[ii-4];
double[] W_3 = append(w_3, p_3);
double[] W_2 = append(w_2, p_2);
double[] W_1 = append(w_1, p_1);
double[] W_0 = append(w_0, p_0);
double As3 = 0;
double As2 = 0;
double As1 = 0;
for (int i = 0; i < W 3.length; i++) {
As3 = As3+(W 3[i]-W 2[i])*(W 3[i]-W 2[i]);
As2 = As2+(W 2[i]-W 1[i])*(W 2[i]-W 1[i]);
As1 = As1+(W_1[i]-W_0[i])*(W_1[i]-W_0[i]);
double A3 = Math.sqrt(As3);
double A2 = Math.sqrt(As2);
double A1 = Math.sqrt(As1);
double deltaA = A3;
double yw0 = 0.0;
double yw1 = yw0+A1;
double yw2 = yw1+A2;
double yw3 = yw2+A3;
double yw4 = yw3+deltaA;
double t0 = ((yw4-yw1)/(yw0-yw1))*((yw4-yw2)/(yw0-yw2))*((yw4-yw3)/(yw0-yw3));
double t1 = ((yw4-yw0)/(yw1-yw0))*((yw4-yw2)/(yw1-yw2))*((yw4-yw3)/(yw1-yw3));
double t2 = ((yw4-yw0)/(yw2-yw0))*((yw4-yw1)/(yw2-yw1))*((yw4-yw3)/(yw2-yw3));
double t3 = ((yw4-yw0)/(yw3-yw0))*((yw4-yw1)/(yw3-yw1))*((yw4-yw2)/(yw3-yw2));
double[] w ini = new double[W 3.length];
for (int i = 0; i < W_3.length; i++) {</pre>
w_{ini[i]} = t0*W_0[i]+t1*W_1[i]+t2*W_2[i]+t3*W_3[i];
//Initial values
double[] W_ini = new double[w_ini.length-1];
for (int i = 0; i < w ini.length-1; i++) {
W_ini[i] = w_ini[i];
// {\tt Current\ value\ for\ the\ load}
double p_ini = w_ini[w_ini.length-1];
parametricFull[ii] = p_ini;
double[] W_ini_up = insert(W_ini, 1, 0);
//Setting up the initial guess
model.sol("sol_in").setU(W_ini_up);
model.sol("sol_in").createSolution();
//Load update
```

```
model.param().set(p, p ini);
   //Computing the current solution
   model.sol("sol c").runAll();
   //Creating a parametric solution based on the current solution
   model.sol("sol p").setU(ii+1, model.sol("sol c").getU());
   //Updating the four last converged iterations
   model.sol("sol 2").copySolution("sol 1");
   model.sol("sol 3").copySolution("sol 2");
   model.sol("sol 4").copySolution("sol 3");
   model.sol("sol c").copySolution("sol 4");
   //Debug log
   debugLog("Increment "+toString(ii));
   debugLog("The load is "+toString(p ini));
   //Evaluating the stop condition
   if (isStopConditionGiven) {
   if (codeUtil.stopCondition(globalVariableMin, globalVariableMax)) {
   debugLog("Stop condition fulfilled for load "+toString(p ini));
   pfinal = ii;
   sizeOfSolution = ii+1;
   }
  }
  double[] parametric = new double[sizeOfSolution];
  for (int ii = 0; ii < sizeOfSolution; ii++) {</pre>
   parametric[ii] = parametricFull[ii];
  model.sol("sol_p").setPVals(parametric);
  model.sol("sol_p").createSolution();
  if (contains(model.result().dataset().tags(), "dset c"))
   model.result().dataset().remove("dset c");
  long endTime = timeStamp();
  long totalTime = (endTime-startTime);
  String timeString = formattedTime(totalTime, "hr:min:sec");
  debugLog("The solution time is "+timeString);
3 In the Settings window for Method, locate the Inputs and Output section.
4 Find the Inputs subsection. Click + Add.
5 Click + Add.
6 Click + Add.
7 Click + Add.
8 Click + Add.
9 Click + Add.
10 Click + Add.
```

II In the table, enter the following settings:

Name	Туре	Default	Description	Unit
р	String		Dimensionless Load Parameter	
deltap	Double	0	Dimensionless Load Stepsize	
numberOfIter	Integer	0	Number of Iterations	
isStopConditionGive n	Boolean		Activate Stop Condition	
globalVariable	String		Global Variable in Stop Condition	
globalVariableMin	Double	0	Lower Limit of Global Variable	
globalVariableMax	Double	0	Upper Limit of Global Variable	

#### METHODS

In the **Home** toolbar, click **Model Builder** to switch to the main desktop.

Call the method postBucklingWithArclength in order to run it.

#### MODEL BUILDER

- I In the Home toolbar, click **Model Builder**.
- 2 Click Method Call and choose postBucklingWithArclength.

#### **GLOBAL DEFINITIONS**

Run Postbuckling Study with Arclength Method

- I In the Model Builder window, under Global Definitions click PostBucklingWithArclength I.
- 2 In the Settings window for Method Call, type Run Postbuckling Study with Arclength Method in the Label text field.
- 3 In the Tag text field, type postBucklingWithArclength. Before running the Run Postbuckling Study with Arclength Method, assign correct inputs to the method.
- 4 Locate the Inputs section. In the Dimensionless Load Parameter text field, type p.
- 5 In the Dimensionless Load Stepsize text field, type 0.0003.

- 6 In the Number of Iterations text field, type 200.
- 7 Select the Activate Stop Condition check box.
- 8 In the Global Variable in Stop Condition text field, type w center.
- 9 In the Upper Limit of Global Variable text field, type 0.035.
- 10 Click Run.

#### METHODS

postBucklingWithArclength

In the **Home** toolbar, click **Model Builder**.

#### RESULTS

#### Stress

- I In the Home toolbar, click Add Plot Group and choose 3D Plot Group.
- 2 In the Settings window for 3D Plot Group, type Stress in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Placeholder Study for Parametric Solution/Solution 3 (sol\_p).

#### Surface 1

- I Right-click Stress and choose Surface.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type shell.misesGp.
- 4 Locate the Coloring and Style section. Click Change Color Table.
- 5 In the Color Table dialog box, select Recently Used>Prism in the tree.
- 6 Click OK.

#### Deformation I

- I Right-click Surface I and choose Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 1.

#### Evaluation Group: Force vs. Displacement

- I In the Results toolbar, click Evaluation Group.
- 2 In the Settings window for Evaluation Group, type Evaluation Group: Force vs. Displacement in the Label text field.

3 Locate the Data section. From the Dataset list, choose Placeholder Study for Parametric Solution/Solution 3 (sol\_p).

Point Evaluation 1

- I Right-click Evaluation Group: Force vs. Displacement and choose Point Evaluation.
- **2** Select Point 4 only.
- 3 In the Settings window for Point Evaluation, locate the Expressions section.
- **4** In the table, enter the following settings:

Expression	Unit	Description
w_center	m	Vertical displacement at shell center
Р	N	Total load

Evaluation Group: Force vs. Displacement

- I In the Model Builder window, click Evaluation Group: Force vs. Displacement.
- 2 In the Settings window for Evaluation Group, click to expand the Format section.
- 3 From the Include parameters list, choose Off.
- 4 In the Evaluation Group: Force vs. Displacement toolbar, click **=** Evaluate.

Force vs. Displacement

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Force vs. Displacement in the Label text field.
- 3 Locate the Plot Settings section.
- 4 Select the **x-axis label** check box. In the associated text field, type Vertical displacement at shell center (m).
- 5 Select the **y-axis label** check box. In the associated text field, type Force at shell center (N).
- 6 Locate the Legend section. From the Position list, choose Upper left.

Table Graph 1

- I Right-click Force vs. Displacement and choose Table Graph.
- 2 In the Settings window for Table Graph, locate the Data section.
- 3 From the Source list, choose Evaluation group.
- 4 Locate the Coloring and Style section. Find the Line markers subsection. From the Marker list, choose Circle.
- **5** From the **Positioning** list, choose **Interpolated**.

- **6** Click to expand the **Legends** section. Select the **Show legends** check box.
- 7 From the Legends list, choose Manual.
- **8** In the table, enter the following settings:

# Legends Arc Length Approach

9 Right-click Table Graph I and choose Duplicate.

#### Table Graph 2

- I In the Model Builder window, click Table Graph 2.
- 2 In the Settings window for Table Graph, locate the Data section.
- **3** From the **Source** list, choose **Table**.
- 4 Locate the Coloring and Style section. Find the Line markers subsection. From the Marker list, choose Diamond.
- 5 In the Number text field, type 12.
- **6** Locate the **Legends** section. In the table, enter the following settings:

# Legends Global Equation Approach

7 In the Force vs. Displacement toolbar, click Plot.