

The Blasius Boundary Layer

The incompressible boundary layer on a flat plate in the absence of a pressure gradient is usually referred to as the Blasius boundary layer (Ref. 1). The steady, laminar boundary layer developing downstream of the leading edge eventually becomes unstable to Tollmien-Schlichting waves and finally transitions to a fully turbulent boundary layer. Due to its fundamental importance, this type of flow has become the subject of numerous studies on boundary-layer flow, stability, transition, and turbulence. This application considers the first section of the plate where the boundary layer remains steady and laminar and compares results from incompressible, two-dimensional, single-phase-flow simulations obtained in COMSOL Multiphysics to the Blasius similarity solution. The solutions converge ideally with respect to both mesh refinement and discretization order.

Model Definition

Consider a homogeneous free-stream flow with speed U₀ parallel to an infinitely thin, flat plate located along the positive x-axis. The flow is assumed to be steady, symmetric with respect to y, and homogeneous in the z direction. Due to friction, the flow adjacent to the plate is retarded and a thin boundary layer, where the velocity gradually grows from zero to the free-stream value, develops downstream of the leading edge (see Figure 1).

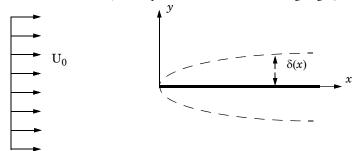


Figure 1: The boundary layer on a flat plate. $\delta(x)$ is the boundary-layer thickness, such that $u(x, \delta(x)) = U_0$

A reasonably accurate solution for the flow field can be found by considering the boundary-layer approximation to the steady, incompressible Navier-Stokes equations

$$u\frac{\partial u}{\partial x} + v\frac{\partial u}{\partial y} = v\frac{\partial^2 u}{\partial y^2} \tag{1}$$

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0 \tag{2}$$

Introducing a stream function,

$$u = \frac{\partial \Psi}{\partial y}, \quad v = -\frac{\partial \Psi}{\partial x}$$

and the similarity transformation,

$$\psi = \sqrt{\upsilon x \mathbf{U}_0} f(\eta), \quad \eta = \frac{y}{\sqrt{\upsilon x / \mathbf{U}_0}}$$

Equation 1 and Equation 2 reduce to the ODE

$$2f''' + ff'' = 0 \tag{3}$$

COMSOL solves Equation 3 on the interval $\eta \in [0, 10]$ with the boundary conditions

$$f(0) = 0, \quad f'(0) = 0$$
$$\lim_{\eta \to \infty} f'(\eta) = 1$$

by rewriting the equation as a system of two equations,

$$\begin{cases} f' = f_{\text{prime}} \\ f''_{\text{prime}} = -\frac{1}{2}ff'_{\text{prime}} \end{cases}$$

and implementing the system within the Coefficient Form PDE interface.

Using the Laminar Flow interface for single-phase flow, the model solves the steady, incompressible Navier-Stokes equation in a domain $(x, y) \in ([-1, 2.1], [0, 0.5])$ m with the leading edge of the plate located at x = 0 m. The working fluid is air at a temperature of T = 20 °C and $U_0 = 0.75$ m/s. The simulations uses discretizations with linear basis functions for velocity and pressure (P1+P1) on three different meshes.

Results and Discussion

Figure 2 shows the similarity solution $u/U_0 = f'(\eta)$. At $\eta = 4.99$, the deviation from the free-stream value is 1%. This value can be used to define the boundary-layer thickness,

$$\delta_{99}(x) = 4.99 \sqrt{\frac{vx}{U_0}}$$

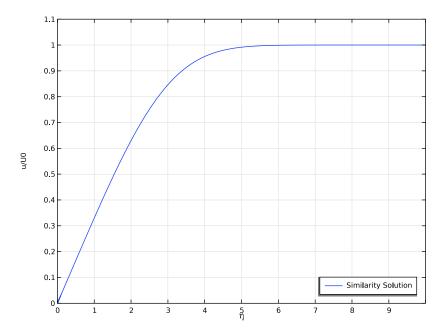


Figure 2: Similarity solution for the streamwise velocity component.

Figure 3 shows a comparison between the Blasius similarity solution and the results from the two-dimensional simulations at $x_E = 2$ m, corresponding to a Reynolds number of $Re_x = 1.0 \cdot 10^5$. Only the results from the P1+P1 simulation on the coarse mesh show a significant deviation from the similarity solution. To quantify differences in the results, define the following measure,

$$\varepsilon = \sqrt{\int_{0}^{\eta_{\infty}} \left(\frac{u}{U_{0}} - f'\right)^{2} d\eta}$$

Here, $\eta_{\infty} = 10$, for which the similarity solution has converged to its asymptotic value to within the numerical precision in the computations.

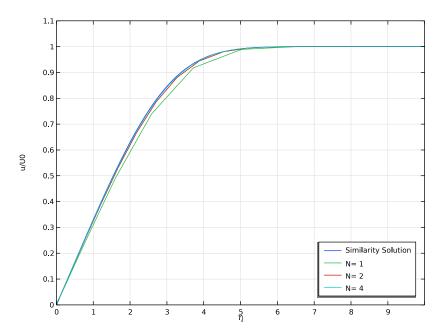


Figure 3: Comparison between the similarity solution and the two-dimensional simulations.

Table 1 displays deviations from the similarity solution together with the number of degrees of freedom (DOF) for the three simulations. The convergence is displayed in Figure 4 where the mesh size h is calculated as the maximum cell side in the mesh. The curve is close to straight line, which means that the model is in a mesh convergence regime; that is, the solution converges toward the correct solution when the mesh is refined.

TABLE I: DEVIATION FROM THE BLASIUS SOLUTION.

I/H	10	20	40
3	6.10·10 ⁻²	3.33·10 ⁻²	1.68·10 ⁻²
DOF	2016	7749	30375

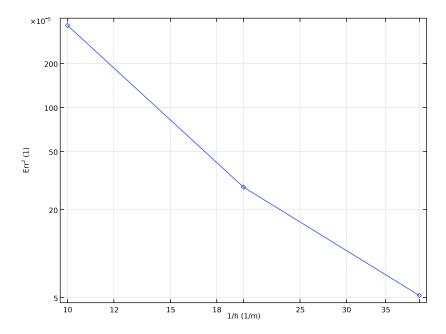


Figure 4: Convergence rate as a function of inverse maximum cell side.

Notes About the COMSOL Implementation

The relative tolerance is set to 10^{-4} in all the solvers to ensure that the equation systems become well converged. All meshes have monotonically increasing element sizes away from the plate, with distributions employing geometric sequences. A nonlocal coupling is set up to enable evaluation of the similarity solution in the two-dimensional model.

Reference

1. H. Blasius, "Grenzschichten in Flüssigkeiten mit kleiner Reibung," Z. Math. Phys., vol. 56, pp. 1-37, 1908 (English translation in NACA TM 1256).

Application Library path: COMSOL_Multiphysics/Fluid_Dynamics/ blasius boundary layer

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click ID.
- 2 In the Select Physics tree, select Mathematics>PDE Interfaces>Coefficient Form PDE (c).
- 3 Click Add.
- 4 In the Field name (1) text field, type f.
- 5 Click + Add Dependent Variable.
- **6** In the **Dependent variables (1)** table, enter the following settings:

fprime

- 7 Click Study.
- 8 In the Select Study tree, select General Studies>Stationary.
- 9 Click **Done**.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
U0	0.75[m/s]	0.75 m/s	Inlet velocity
nu	1.506137e-5[m^2/s]	1.5061E-5 m ² /s	Kinematic viscosity
хE	2[m]	2 m	Evaluation location
b0	nu/U0	2.0082E-5 m	B-L scale
N	1	1	Mesh refinement factor

GEOMETRY I

Interval I (iI)

- I In the Model Builder window, under Component I (compl) right-click Geometry I and choose Interval.
- 2 In the Settings window for Interval, locate the Interval section.
- **3** In the table, enter the following settings:

Coordinates (m)	
0	
10	

COEFFICIENT FORM PDE (C)

Coefficient Form PDE I

- I In the Model Builder window, under Component I (compl)>Coefficient Form PDE (c) click Coefficient Form PDE 1.
- 2 In the Settings window for Coefficient Form PDE, locate the Diffusion Coefficient section.
- **3** In the *c* text-field array, type **0** in the first column of the first row.
- 4 In the c text-field array, type -2 in the second column of the second row.
- **5** Locate the **Absorption Coefficient** section. In the a text-field array, type 1 in the second column of the first row.
- **6** Locate the **Source Term** section. In the f text-field array, type 0 on the first row.
- 7 In the f text-field array, type 0 on the second row.
- **8** Locate the **Damping or Mass Coefficient** section. In the d_a text-field array, type 0 in the first column of the first row.
- **9** In the d_a text-field array, type **0** in the second column of the second row.
- 10 Click to expand the Convection Coefficient section. In the β text-field array, type -1 in the first column of the first row.
- II In the β text-field array, type f in the second column of the second row.

Dirichlet Boundary Condition I

- I In the Physics toolbar, click Boundaries and choose Dirichlet Boundary Condition.
- **2** Select Boundary 1 only.

Dirichlet Boundary Condition 2

I In the Physics toolbar, click — Boundaries and choose Dirichlet Boundary Condition.

- 2 Click the **Zoom Extents** button in the **Graphics** toolbar.
- 3 Select Boundary 2 only.
- 4 In the Settings window for Dirichlet Boundary Condition, locate the **Dirichlet Boundary Condition** section.
- 5 Clear the Prescribed value of f check box.
- **6** In the r_2 text field, type 1.

MESH I

Edge I

- I In the Mesh toolbar, click A Edge.
- 2 In the Settings window for Edge, locate the Domain Selection section.
- 3 From the Geometric entity level list, choose Entire geometry.

Distribution I

- I Right-click **Edge I** and choose **Distribution**.
- 2 In the Settings window for Distribution, locate the Distribution section.
- 3 From the Distribution type list, choose Predefined.
- **4** In the **Number of elements** text field, type 10000.
- 5 In the Element ratio text field, type 100.
- 6 From the Growth rate list, choose Exponential.
- 7 Click **Build Selected**.

STUDY I

Solution I (soll)

- 2 In the Model Builder window, expand the Solution I (soll) node, then click Stationary Solver 1.
- 3 In the Settings window for Stationary Solver, locate the General section.
- 4 In the Relative tolerance text field, type 1e-6.
 - Allocate more memory than the default suggestion to avoid a warning message. The solver will automatically increase the allocation factor when needed, but changing it manually is more computationally efficient.
- 5 In the Model Builder window, expand the Study I>Solver Configurations> Solution I (soll)>Stationary Solver I node, then click Direct.

- 6 In the Settings window for Direct, locate the General section.
- 7 In the Memory allocation factor text field, type 1.5.
- 8 In the Study toolbar, click **Compute**.
- 9 In the Model Builder window, right-click Study I and choose Rename.
- 10 In the Rename Study dialog box, type Similarity Solution in the New label text field.
- II Click OK.

RESULTS

Line Graph 1

- I In the Model Builder window, expand the Coefficient Form PDE node, then click Line Graph 1.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type fprime.
- **4** Click to expand the **Legends** section. Select the **Show legends** check box.
- 5 From the Legends list, choose Manual.
- **6** In the table, enter the following settings:

Legends Similarity Solution

Coefficient Form PDE

- I In the Model Builder window, click Coefficient Form PDE.
- 2 In the Settings window for ID Plot Group, click to expand the Title section.
- 3 From the Title type list, choose None.
- **4** Locate the **Plot Settings** section.
- **5** Select the **x-axis label** check box. In the associated text field, type \eta.
- 6 Select the y-axis label check box. In the associated text field, type u/U0.
- 7 Locate the Axis section. Select the Manual axis limits check box.
- **8** In the **x minimum** text field, type **0**.
- 9 In the x maximum text field, type 10.
- **10** In the **y minimum** text field, type 0.
- II In the y maximum text field, type 1.1.
- 12 Locate the Legend section. From the Position list, choose Lower right.

13 In the Coefficient Form PDE toolbar, click Plot.

DEFINITIONS

Set up a nonlocal coupling to be able to evaluate the similarity solution in the upcoming 2D model.

General Extrusion I (genext1)

- I In the Model Builder window, expand the Component I (compl)>Definitions node.
- 2 Right-click Definitions and choose Nonlocal Couplings>General Extrusion.
- **3** Select Domain 1 only.
- 4 In the Settings window for General Extrusion, locate the Destination Map section.
- 5 In the x-expression text field, type root.y/sqrt(b0*root.x).

ADD COMPONENT

In the Model Builder window, right-click the root node and choose Add Component>2D.

ADD PHYSICS

- I In the Home toolbar, click open the Add Physics window.
- 2 Go to the Add Physics window.
- 3 In the tree, select Fluid Flow>Single-Phase Flow>Laminar Flow (spf).
- **4** Find the **Physics interfaces in study** subsection. In the table, clear the **Solve** check box for Similarity Solution.
- **5** Click **Add to Component 2** in the window toolbar.
- 6 In the Home toolbar, click Add Physics to close the Add Physics window.

ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- **2** Go to the **Add Study** window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Click Add Study in the window toolbar.
- 5 In the Model Builder window, click the root node.
- 6 In the Home toolbar, click Add Study to close the Add Study window.

GEOMETRY 2

In the Model Builder window, under Component 2 (comp2) click Geometry 2.

Rectangle I (rI)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 3.1.
- 4 In the Height text field, type 0.5.
- 5 Locate the **Position** section. In the x text field, type -1.
- 6 In the Geometry toolbar, click **Build All**.

Point I (pt I)

- I In the Geometry toolbar, click · Point.
- 2 Click iii Build All.

Point 2 (pt2)

- I In the **Geometry** toolbar, click •
- 2 In the Settings window for Point, locate the Point section.
- **3** In the **y** text field, type 0.5.
- 4 In the Geometry toolbar, click **Build All**.

ADD MATERIAL

- I In the Home toolbar, click **‡ Add Material** to open the **Add Material** window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Air.
- 4 Click Add to Component in the window toolbar.
- 5 In the Home toolbar, click 👯 Add Material to close the Add Material window.

LAMINAR FLOW (SPF)

In the Model Builder window, under Component 2 (comp2) click Laminar Flow (spf).

Inlet 1

- I In the Physics toolbar, click Boundaries and choose Inlet.
- 2 Select Boundary 1 only.
- 3 In the Settings window for Inlet, locate the Velocity section.
- **4** In the U_0 text field, type U0.

Open Boundary I

I In the Physics toolbar, click — Boundaries and choose Open Boundary.

2 Select Boundaries 3 and 5 only.

Outlet 1

- I In the Physics toolbar, click Boundaries and choose Outlet.
- 2 Select Boundary 6 only.

Symmetry I

- I In the Physics toolbar, click Boundaries and choose Symmetry.
- 2 Select Boundary 2 only.

MESH 2

Mapped I

In the Mesh toolbar, click Mapped.

Distribution 1

- I Right-click Mapped I and choose Distribution.
- **2** Select Boundaries 4 and 5 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 In the Number of elements text field, type 21*N.

Distribution 2

- I In the Model Builder window, right-click Mapped I and choose Distribution.
- **2** Select Boundaries 2 and 3 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 In the Number of elements text field, type 10*N.

Distribution 3

- I Right-click Mapped I and choose Distribution.
- 2 Select Boundaries 1 and 6 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 From the Distribution type list, choose Predefined.
- 5 In the Number of elements text field, type 20*N.
- 6 In the Element ratio text field, type 15.
- 7 From the Growth rate list, choose Exponential.
- 8 Click | Build Selected.

STUDY 2

Parametric Sweep

- I In the Study toolbar, click Parametric Sweep.
- 2 In the Settings window for Parametric Sweep, locate the Study Settings section.
- 3 Click + Add.
- **4** In the table, enter the following settings:

Parameter name	Parameter value list
N (Mesh refinement factor)	1 2 4

Step 1: Stationary

- I In the Model Builder window, click Step I: Stationary.
- 2 In the Settings window for Stationary, click to expand the Values of Dependent Variables section.
- 3 Find the Values of variables not solved for subsection. From the Settings list, choose User controlled.
- 4 From the Method list, choose Solution.
- 5 From the Study list, choose Similarity Solution, Stationary.

Solution 2 (sol2)

- 2 In the Model Builder window, expand the Solution 2 (sol2) node, then click Stationary Solver 1.
- 3 In the Settings window for Stationary Solver, locate the General section.
- 4 In the Relative tolerance text field, type 1e-5.
- 5 In the Model Builder window, expand the Study 2>Solver Configurations> Solution 2 (sol2)>Stationary Solver I node, then click Fully Coupled I.
- 6 In the Settings window for Fully Coupled, click to expand the Method and Termination section.
- 7 In the Maximum number of iterations text field, type 50.
- 8 In the Study toolbar, click **Compute**.

RESULTS

Cut Line 2D I

I In the Results toolbar, click Cut Line 2D.

- 2 In the Settings window for Cut Line 2D, locate the Data section.
- 3 From the Dataset list, choose Study 2/Parametric Solutions I (5) (sol3).
- 4 Locate the Line Data section. In row Point 1, set x to xE.
- 5 In row Point 2, set x to xE and y to 10*sqrt(b0*xE).

Line Graph 1

In the Model Builder window, under Results>Coefficient Form PDE right-click Line Graph I and choose **Duplicate**.

Line Graph 2

- I In the Model Builder window, click Line Graph 2.
- 2 In the Settings window for Line Graph, locate the y-Axis Data section.
- 3 In the Expression text field, type u/U0.
- 4 Locate the Data section. From the Dataset list, choose Cut Line 2D 1.
- 5 Locate the x-Axis Data section. In the Expression text field, type y/sqrt(b0*x).
- **6** Locate the **Legends** section. From the **Legends** list, choose **Automatic**.
- 7 Find the Prefix and suffix subsection. In the Prefix text field, type N= .
- **8** In the Coefficient Form PDE toolbar, click **Plot**.

Line Integration 1

- I In the Results toolbar, click 8.85 More Derived Values and choose Integration> Line Integration.
- 2 In the Settings window for Line Integration, locate the Data section.
- 3 From the Dataset list, choose Cut Line 2D 1.
- 4 Locate the Expressions section. Click Clear Table.
- **5** In the table, enter the following settings:

Expression	Unit	Description
<pre>(u/U0-comp1.genext1(fprime))^2/sqrt(b0*x)</pre>	1	Err^2

6 Click **= Evaluate**.

Surface Minimum 1

- I In the Model Builder window, right-click Derived Values and choose Minimum> Surface Minimum.
- 2 Select Domain 1 only.
- 3 In the Settings window for Surface Minimum, locate the Expressions section.

4 In the table, enter the following settings:

Expression	Unit
1/h	1/m

- 5 Locate the Data section. From the Dataset list, choose Study 2/ Parametric Solutions I (5) (sol3).
- 6 Click the arrow next to the Evaluate button and choose Table I Line Integration I ((u/ U0-compl.genextl(fprime))^2/sqrt(b0*x)).

TABLE I

- I Go to the Table I window.
- 2 Click Table Graph in the window toolbar.

RESULTS

Table Graph 1

- I In the Model Builder window, under Results>ID Plot Group 5 click Table Graph 1.
- 2 In the Settings window for Table Graph, locate the Data section.
- 3 From the x-axis data list, choose I/h (I/m).
- 4 From the Plot columns list, choose Manual.
- 5 In the Columns list, select Err^2 (1).
- 6 Locate the Coloring and Style section. Find the Line markers subsection. From the Marker list, choose Diamond.
- 7 Click the y-Axis Log Scale button in the Graphics toolbar.
- 8 Click the x-Axis Log Scale button in the Graphics toolbar.