

Dielectric Barrier Discharge

This model simulates electrical breakdown in an atmospheric pressure gas. Because electrical breakdown is a complicated process, a 1D model is considered. To highlight the physics of the breakdown process, this example uses a simple argon chemistry, which keeps the number of species and reactions to a minimum.

Model Definition

The operating principle for a dielectric barrier discharge is as follows: there is a small gap filled with a gas between two dielectric plates. The gap between the two dielectric plates is typically less than one millimeter. On one of the dielectric plates, a sinusoidal voltage is applied. The other plate is electrically grounded. As the voltage applied to the top plate increases, a stronger electric field forms in the gap between the plates. Any free electrons in the gap¹ are accelerated, and if the electric field is strong enough they may acquire enough energy to cause ionization. This can lead to a cascade effect where the number of electrons in the gap increases exponentially on a nanosecond time scale. Electrons created via electron impact ionization rush toward one of the dielectric plates, in the opposite direction to the electric field. An equal number of ions are also generated during electron impact ionization (electrons and ions must be created in equal pairs to preserve the overall charge balance). The ions rush toward the opposite dielectric plate in the same direction as the electric field. As a result, surface charge with opposite sign accumulates on both dielectric plates. This causes the electric field to become shielded from the gas filled gap. In fact, the electric field across the gap cannot exceed the breakdown electric field, which is highly dependent on the gas. The breakdown electric field is also a function of the surface properties of the dielectric material. Surface charge accumulation temporarily terminates the discharge until the field reverses direction and the process repeats in the opposing direction.

Modeling dielectric barrier discharges in more than one dimension is, of course possible, but the results can be difficult to interpret due to the amount of competing physics in the problem. In this simple model the problem is reduced to 1D by assuming the dielectric gap is much smaller than the diameter of the plates. It also makes it possible to quickly gain some insight into the characteristics of the discharge without excessive computation time.

^{1.} There are typically around 1,000,000 m⁻³ free electrons in air at sea level.

The geometry for a typical dielectric barrier discharge is shown in Figure 1. The dielectric plates may be up to 15 cm in diameter; the dielectric and gap thickness are typically less than 1 millimeter.

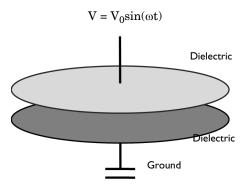


Figure 1: Graphic illustration of a typical dielectric barrier discharge.

The electron density and mean electron energy are computed by solving a pair of drift-diffusion equations for the electron density and mean electron energy. For detailed information on electron transport, see *Theory for the Drift Diffusion Interface* in the *Plasma Module User's Guide*.

$$\frac{\partial}{\partial t}(n_e) + \nabla \cdot [-n_e(\boldsymbol{\mu}_e \bullet \mathbf{E}) - \mathbf{D}_e \bullet \nabla n_e] = R_e$$

$$\frac{\partial}{\partial t}(n_{\varepsilon}) + \nabla \cdot [-\,n_{\varepsilon}(\boldsymbol{\mu}_{\varepsilon} \bullet \mathbf{E}) - \mathbf{D}_{\varepsilon} \bullet \nabla n_{\varepsilon}] + \mathbf{E} \cdot \boldsymbol{\Gamma}_{e} \, = \, \boldsymbol{R}_{\varepsilon}$$

The electron source R_e and the energy loss due to inelastic collisions R_{ϵ} are defined later. The electron diffusivity, energy mobility, and energy diffusivity are computed from the electron mobility using:

$$\mathbf{D}_{e} = \mu_{e} T_{e}, \mu_{\varepsilon} = \left(\frac{5}{3}\right) \mu_{e}, \mathbf{D}_{\varepsilon} = \mu_{\varepsilon} T_{e}$$

The source coefficients in the above equations are determined by the plasma chemistry using rate coefficients. In the case of rate coefficients, the electron source term is given by:

$$R_e = \sum_{j=1}^{M} x_j k_j N_n n_e$$

where x_i is the mole fraction of the target species for reaction j, k_i is the rate coefficient for reaction j (SI unit: m^3/s), and N_n is the total neutral number density (SI unit: $1/m^3$). The electron energy loss is obtained by summing the collisional energy loss over all reactions:

$$R_{\varepsilon} = \sum_{j=1}^{P} x_{j} k_{j} N_{n} n_{e} \Delta \varepsilon_{j}$$

where $\Delta \varepsilon_j$ is the energy loss from reaction j (SI unit: V). The rate coefficients can be computed from cross section data by the following integral:

$$k_k = \gamma \int_0^\infty \varepsilon \sigma_k(\varepsilon) f(\varepsilon) d\varepsilon$$

where $\gamma = (2q/m_e)^{1/2}$ (SI unit: $C^{1/2}/kg^{1/2}$), m_e is the electron mass (SI unit: kg), ε is energy (SI unit: V), σ_k is the collision cross section (SI unit: m²), and f is the electron energy distribution function.

For nonelectron species, the following equation is solved for the mass fraction of each species. For detailed information on the transport of the nonelectron species, see *Theory* for the Heavy Species Transport Interface in the Plasma Module User's Guide.

$$\rho \frac{\partial}{\partial t}(w_k) + \rho(\mathbf{u} \cdot \nabla)w_k = \nabla \cdot \mathbf{j}_k + R_k$$

The electrostatic field is computed using the following equation:

$$-\nabla \cdot \varepsilon_0 \varepsilon_r \nabla V = \rho$$

The space charge density ρ is automatically computed based on the plasma chemistry specified in the model using the formula:

$$\rho = q \left(\sum_{k=1}^{N} Z_k n_k - n_e \right)$$

For detailed information about electrostatics see Theory for the Electrostatics Interface in the Plasma Module User's Guide.

BOUNDARY CONDITIONS

Electrons are lost to the wall due to random motion within a few mean free paths of the wall and gained due to secondary emission effects, resulting in the following boundary condition for the electron flux:

$$\mathbf{n} \cdot \Gamma_e = \left(\frac{1}{2} \mathbf{v}_{e, \, \text{th}} n_e\right) - \sum_p \gamma_p (\Gamma_p \cdot \mathbf{n}) \tag{1}$$

and the electron energy flux:

$$\mathbf{n} \cdot \Gamma_{\varepsilon} = \left(\frac{5}{6} \mathbf{v}_{e, \, \text{th}} n_{\varepsilon}\right) - \sum_{p} \varepsilon_{p} \gamma_{p} (\Gamma_{p} \cdot \mathbf{n}) \tag{2}$$

The second term on the right-hand side of Equation 1 is the gain of electrons due to secondary emission effects, γ_p being the secondary emission coefficient. The second term in Equation 2 is the secondary emission energy flux, ε_p being the mean energy of the secondary electrons. For the heavy species, ions are lost to the wall due to surface reactions and the fact that the electric field is directed toward the wall:

$$\mathbf{n} \cdot \mathbf{j}_k = M_w R_k + M_w c_k Z \mu_k (\mathbf{E} \cdot \mathbf{n}) [Z_k \mu_k (\mathbf{E} \cdot \mathbf{n}) > 0]$$

Surface charge accumulation is added to the dielectric surfaces that are adjacent to the gap where the plasma forms by way of the following boundary condition:

$$\boldsymbol{n}\cdot(\boldsymbol{D}_1-\boldsymbol{D}_2) = \rho_s$$

where ρ_s is the surface charge density, which is computed by solving the following distributed ODE on the surfaces:

$$\frac{d\rho_{\rm s}}{dt} = \mathbf{n} \cdot \mathbf{J}_i + \mathbf{n} \cdot \mathbf{J}_e$$

where $\mathbf{n} \cdot \mathbf{J}_i$ is the normal component of the total ion current density at the wall, and $\mathbf{n} \cdot \mathbf{J}_e$ is the normal component of the total electron current density at the wall.

The discharge is driven by a sinusoidal electric potential applied to the exterior boundary of one of the dielectric plates:

$$V = V_0 \sin(\omega t)$$

where the applied peak voltage, V_0 is 750 V and the angular frequency, the RF frequency being 50 kHz. The exterior boundary of the other dielectric plate is grounded.

PLASMA CHEMISTRY

Argon is an attractive gas to use in a benchmark problem since only a handful of reactions and a few species need to be considered. The list of chemical reactions considered is as follows (electron impact cross section are obtained from Ref. 1):

TABLE 1: TABLE OF COLLISIONS AND REACTIONS MODELED.

REACTION	FORMULA	ТҮРЕ	$\Delta\epsilon(eV)$
1	e+Ar=>e+Ar	Elastic	0
2	e+Ar=>e+Ars	Excitation	11.5
3	e+Ars=>e+Ar	Superelastic	-11.5
4	e+Ar=>2e+Ar+	Ionization	15.8
5	e+Ars=>2e+Ar+	Ionization	4.24
6	Ars+Ars=>e+Ar+Ar+	Penning ionization	-
7	Ars+Ar=>Ar+Ar	Metastable quenching	-

Initially a small number of seed electrons are present. These are necessary in order to initiate the discharge on the first RF cycle. In addition to the volumetric reactions, the following surface reactions are implemented:

TABLE 2: TABLE OF SURFACE REACTIONS.

REACTION	FORMULA	STICKING COEFFICIENT
I	Ars=>Ar	1
2	Ar+=>Ar	I

When the ions reach the wall they are assumed to change back to neutral argon atoms and donate their charge to the wall.

Results and Discussion

It is more convenient to analyze the results of this one-dimensional problem by extruding the solution into two dimensions. The extra dimension represents time. In COMSOL Multiphysics this is accomplished by adding a *Parametric Extrusion 1D* dataset. The surface plot is convenient because you can immediately see how the variables of interest evolve over time.

The mass fraction of excited argon atoms is plotted in Figure 2. The excited species have a much longer lifetime in the gap than the electrons or ions. This is because the primary mechanism for destruction of excited argon species is de-excitation upon contact with the wall. The excited argon atoms can only reach the wall via diffusion whereas the electrons and ions reach the wall very rapidly due to migration. It is also apparent from Figure 2 that the discharge reaches a periodic steady state solution after only two RF cycles.

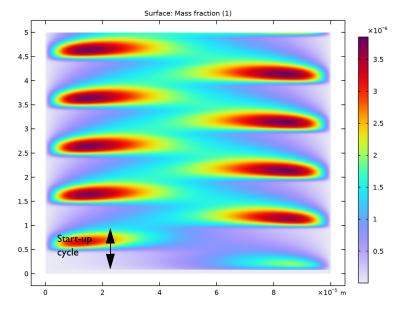


Figure 2: Mass fraction of excited argon.

The electric potential is plotted in Figure 3. The voltage is relatively uniform across the discharge gap. This can be seen more clearly by examining the electric field in Figure 4. There is a much stronger electric field in the dielectric materials than in the gap. This is because the surface charge which accumulates on the dielectric surfaces tends to shield out the electric field.

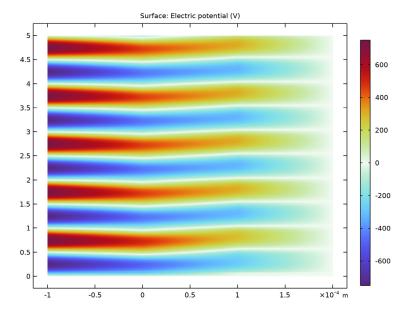


Figure 3: Electric potential (x-axis) versus time (y-axis).

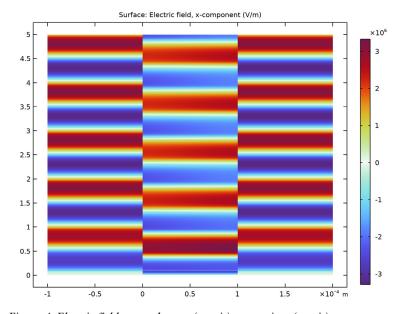


Figure 4: Electric field across the gap (x-axis) versus time (y-axis).

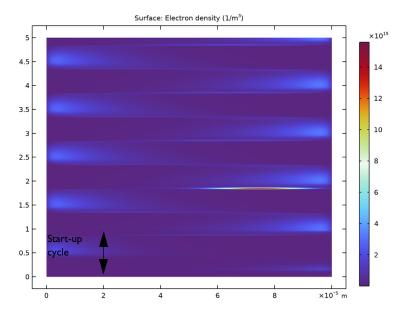


Figure 5: Extruded plot of the electron density.

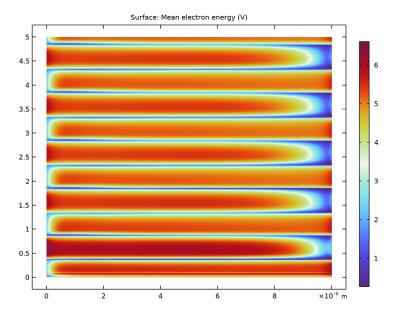


Figure 6: Extruded plot of the mean electron energy.

Implicit in the equations solved for the number of charged particles and electrostatic potential is that the total electrical current is conserved. Mathematically, this means that:

$$\nabla \cdot \mathbf{J} = -\frac{\partial \rho}{\partial t} \approx 0$$

where **J** is the total plasma current density (SI unit: A/m^2), and ρ is the space charge density (SI unit: C/m³). Since electrons and ions are created in equal pairs the time derivative of the space charge density should be approximately zero. For this 1D model, this means the total current density must be constant across the gap at any snapshot in time. In Figure 7, the current density due to electrons (left) and ions (right) is plotted. The current density is not symmetric because of the different secondary emission coefficients used on the dielectric surfaces.

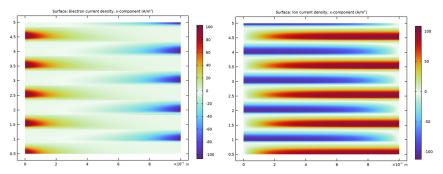


Figure 7: Plot of the electron current density (left) and the ion current density (right) in the discharge, excluding the first RF cycle.

The total plasma current density is plotted in Figure 8. As expected, the total current density is constant across the gap at any point in time.

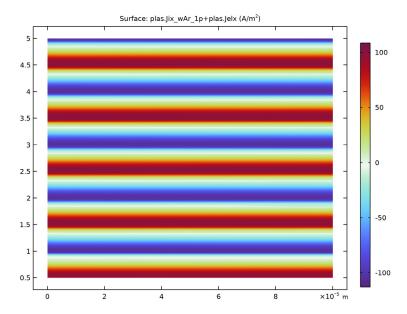


Figure 8: Plot of the total plasma current density (sum of the electron and ion current density), excluding the first RF cycle. Conservation of charge requires that the total current density be constant across the gap at any point in time.

The total current at the grounded electrode is plotted in Figure 9. In the absence of the plasma, the current would be a perfect cosine wave. However, the presence of the plasma and flow of charged particles leads to a nonsinusoidal current waveform. The instantaneously absorbed power in the plasma is plotted in Figure 10. Time averaging this over 1 RF cycle yields the power absorbed by the plasma. The power is around 16.7 W on one half cycle and 17.7 W on the other half cycle. The difference is because the secondary emission coefficients are different on the upper and lower plates.

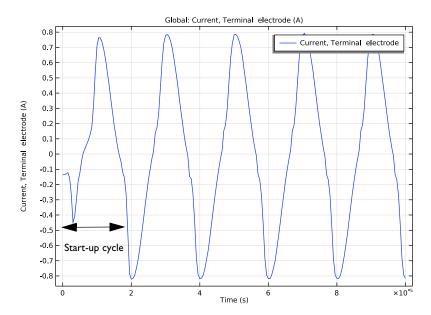


Figure 9: Plot of the total discharge current versus time.

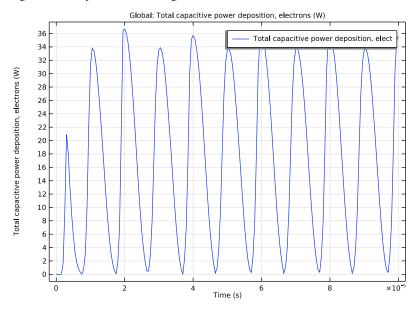


Figure 10: Plot of power versus time for the dielectric barrier discharge.

1. Phelps database, www.lxcat.net, retrieved 2017.

Application Library path: Plasma Module/Direct Current Discharges/ argon_dbd_1d

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click ID.
- 2 In the Select Physics tree, select Plasma>Plasma (plas).
- 3 Click Add.
- 4 Click Study.
- 5 In the Select Study tree, select General Studies>Time Dependent.
- 6 Click **Done**.

GEOMETRY I

You start by defining the geometry for the problem. This model has a simple 1D geometry consisting of 3 domains. Two dielectric domains and a gap where the plasma forms.

Interval I (iI)

- I In the Model Builder window, under Component I (compl) right-click Geometry I and choose Interval.
- 2 In the Settings window for Interval, locate the Interval section.
- 3 From the Specify list, choose Interval lengths.
- 4 In the Left endpoint text field, type -1e-4.

5 In the table, enter the following settings:

Lengths (m)		
1e-4		
1e-4		
1e-4		

6 Click **Build All Objects**.

Add some parameters for the plate dimensions and excitation frequency.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
f0	50e3[Hz]	50000 Hz	RF Frequency
wO	2*pi*f0	3.1416E5 Hz	Angular frequency
dplate	0.1[m]	0.1 m	Plate diameter
As	0.25*pi*dplate^2	0.007854 m²	Plate area

DEFINITIONS

Variables 1

- I In the Home toolbar, click **a= Variables** and choose **Local Variables**.
- 2 In the Settings window for Variables, locate the Variables section.
- **3** In the table, enter the following settings:

Name	Expression	Unit	Description
Vrf	-750[V]*sin(w0*t)	٧	Applied voltage

Now add the charge conservation to the dielectric materials. This means that only a charge conservation equation is solved in the dielectric material and all the plasma components are solved for in the gap between the dielectrics.

PLASMA (PLAS)

Charge Conservation I

- I In the Model Builder window, under Component I (compl) right-click Plasma (plas) and choose the domain setting Electrostatics>Charge Conservation.
- **2** Select Domains 1 and 3 only.

Load in the argon cross sections from file. They form the basis of the plasma chemistry under investigation.

Cross Section Import 1

- I In the Physics toolbar, click **Solution** Global and choose Cross Section Import.
- 2 In the Settings window for Cross Section Import, locate the Cross Section Import section.
- 3 Click **Browse**.
- **4** Browse to the model's Application Libraries folder and double-click the file Ar xsecs.txt.
- 5 Click | Import.
- 6 In the Model Builder window, click Plasma (plas).
- 7 In the Settings window for Plasma, locate the Cross-Section Area section.
- **8** In the *A* text field, type As.
- **9** Locate the Plasma Properties section. Select the Use reduced electron transport properties check box.

Reaction 1

- I In the Physics toolbar, click Domains and choose Reaction.
- 2 In the Settings window for Reaction, locate the Reaction Formula section.
- 3 In the Formula text field, type Ars+Ars=>e+Ar+Ar+.
- **4** Locate the **Reaction Parameters** section. In the k^{f} text field, type 3.3734e8.

Reaction 2

- I In the **Physics** toolbar, click **Domains** and choose **Reaction**.
- 2 In the Settings window for Reaction, locate the Reaction Formula section.
- 3 In the Formula text field, type Ars+Ar=>Ar+Ar.
- **4** Locate the **Reaction Parameters** section. In the k^{f} text field, type 1807.

Species: Ar

- I In the Model Builder window, click Species: Ar.
- 2 In the Settings window for Species, locate the Species Formula section.

- 3 Select the From mass constraint check box.
- 4 Locate the General Parameters section. From the Preset species data list, choose Ar.

Species: Ars

- I In the Model Builder window, click Species: Ars.
- 2 In the Settings window for Species, locate the General Parameters section.
- 3 In the x_0 text field, type 1e-11.
- 4 From the Preset species data list, choose Ar.

Now let the initial number density of argon ions be the same as the initial number of electrons. This forces the plasma to be initially charge neutral.

Species: Ar+

- I In the Model Builder window, click Species: Ar+.
- 2 In the Settings window for Species, locate the Species Formula section.
- 3 Select the Initial value from electroneutrality constraint check box.
- 4 Locate the General Parameters section. From the Preset species data list, choose Ar.

Plasma Model I

- I In the Model Builder window, click Plasma Model I.
- 2 In the Settings window for Plasma Model, locate the Electron Density and Energy section.
- 3 From the Electron transport properties list, choose From electron impact reactions.
- **4** Locate the **Model Inputs** section. In the T text field, type 400[K].

The initial number density of seed electrons is very small, only one million free electrons per cubic meter. This corresponds to a near zero conductivity. So, the gap is truly acting as an insulator initially.

Initial Values 1

- I In the Model Builder window, click Initial Values I.
- 2 In the Settings window for Initial Values, locate the Initial Values section.
- **3** In the $n_{e,0}$ text field, type 1e6.
- **4** In the ε_0 text field, type 5.

Secondary emission of electrons is important when studying discharge curves from DBDs. In this example you add a higher secondary emission coefficient on the left wall.

Surface Reaction 1

- I In the Physics toolbar, click Boundaries and choose Surface Reaction.
- 2 Select Boundary 2 only.

- 3 In the Settings window for Surface Reaction, locate the Reaction Formula section.
- 4 In the Formula text field, type Ar+=>Ar.
- **5** Locate the **Secondary Emission Parameters** section. In the γ_i text field, type 0.01.
- **6** In the ε_i text field, type 2.5.

Surface Reaction 2

- I In the Physics toolbar, click Boundaries and choose Surface Reaction.
- 2 Select Boundary 3 only.
- 3 In the Settings window for Surface Reaction, locate the Reaction Formula section.
- 4 In the Formula text field, type Ar+=>Ar.
- **5** Locate the **Secondary Emission Parameters** section. In the γ_i text field, type 1E-6.
- **6** In the ε_i text field, type 2.5.

Surface Reaction 3

- I In the Physics toolbar, click Boundaries and choose Surface Reaction.
- **2** Select Boundaries 2 and 3 only.
- 3 In the Settings window for Surface Reaction, locate the Reaction Formula section.
- 4 In the Formula text field, type Ars=>Ar.

Wall I

- I In the Physics toolbar, click Boundaries and choose Wall.
- **2** Select Boundaries 2 and 3 only.

Surface charge will begin to accumulate when the gas begins to break down. This will cause the electric field to be shielded in the gap. This is the phenomena responsible for terminating the discharge and also the reason why the breakdown voltage cannot be exceeded across the gap. COMSOL automatically computes the amount of surface charge accumulation when the feature is added to the model. The surface charge accumulation is computed by integration the electron and ion fluxes to the wall.

Surface Charge Accumulation 1

- In the Physics toolbar, click Boundaries and choose Surface Charge Accumulation.
- **2** Select Boundaries 2 and 3 only.

Ground 1

- I In the Physics toolbar, click Boundaries and choose Ground.
- 2 Select Boundary 4 only.

Terminal I

- I In the Physics toolbar, click Boundaries and choose Terminal.
- 2 Select Boundary 1 only.
- 3 In the Settings window for Terminal, locate the Terminal section.
- 4 In the Terminal name text field, type electrode.
- **5** In the V_0 text field, type Vrf.

Now assign the relative permittivity to the dielectric material and the air gap where the plasma forms.

MATERIALS

Dielectric I

- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Dielectric 1 in the Label text field.
- **3** Select Domains 1 and 3 only.
- **4** Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	10	I	Basic

MESH I

There must be sufficient mesh density to resolve the sharp gradients in the electron and ion density in the gap. Therefore you specify that there are 200 elements across the width of the gap.

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- 3 From the Element size list, choose Extremely fine.

Edge 1

In the Mesh toolbar, click A Edge.

Distribution I

I Right-click Edge I and choose Distribution.

- 2 In the Settings window for Distribution, locate the Domain Selection section.
- 3 Click Clear Selection.
- 4 Select Domain 2 only.
- **5** Locate the **Distribution** section. From the **Distribution** type list, choose **Predefined**.
- 6 In the Number of elements text field, type 200.
- 7 In the Element ratio text field, type 5.
- 8 From the Growth rate list, choose Exponential.
- **9** Select the **Symmetric distribution** check box.
- 10 Click III Build All.

STUDY I

Step 1: Time Dependent

- I In the Model Builder window, under Study I click Step I: Time Dependent.
- 2 In the Settings window for Time Dependent, locate the Study Settings section.
- 3 Click Range.
- 4 In the Range dialog box, choose Number of values from the Entry method list.
- 5 In the Stop text field, type 1e-4.
- 6 In the Number of values text field, type 201.
- 7 Click Replace.
- 8 In the Home toolbar, click **Compute**.

RESULTS

Parametric Extrusion ID I

- I In the Results toolbar, click More Datasets and choose Parametric Extrusion ID.
- 2 In the Settings window for Parametric Extrusion ID, locate the Settings section.
- 3 Clear the Separate levels check box.
- 4 In the Level scale factor text field, type 50e3.

Now create a new parametric dataset, which ignores the first startup RF cycle so the current density can be visualized later.

Parametric Extrusion ID 2

- I Right-click Parametric Extrusion ID I and choose Duplicate.
- 2 In the Settings window for Parametric Extrusion ID, locate the Data section.

3 From the Time selection list, choose From list. In the Times (s) list, choose IE-5 through IE-4.

Excited Argon Mass Fraction

- I In the Results toolbar, click **2D Plot Group**.
- 2 In the Settings window for 2D Plot Group, type Excited Argon Mass Fraction in the Label text field.

Surface I

- I Right-click Excited Argon Mass Fraction and choose Surface.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Plasma> Mass fractions>plas.wArs - Mass fraction - 1.
- 4 Click the **Zoom Extents** button in the **Graphics** toolbar.

Electric Potential

- I In the Model Builder window, right-click Excited Argon Mass Fraction and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Electric Potential in the Label text field.

Surface I

- I In the Model Builder window, expand the Electric Potential node, then click Surface I.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Plasma>Electric> V - Electric potential - V.
- 3 Locate the Coloring and Style section. Click Change Color Table.
- 4 In the Color Table dialog box, select Rainbow>Dipole in the tree.
- 5 Click OK.
- 6 In the Electric Potential toolbar, click **Plot**.
- 7 Click To Plot.
- 8 Click the **Zoom Extents** button in the **Graphics** toolbar.

Electric Field

- I In the Model Builder window, right-click Electric Potential and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Electric Field in the Label text field.

Surface I

- I In the Model Builder window, expand the Electric Field node, then click Surface I.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Plasma>Electric> Electric field - V/m>plas.Ex - Electric field, x-component.
- 3 In the Electric Field toolbar, click Plot.
- 4 Click Plot.
- **5** Click the **Zoom Extents** button in the **Graphics** toolbar.

Electron Density

- I In the Model Builder window, right-click Electric Field and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Electron Density in the Label text field.

Surface I

- I In the Model Builder window, expand the Electron Density node, then click Surface I.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Plasma> Electron density>plas.ne - Electron density - I/m3.
- 3 In the Electron Density toolbar, click **Plot**.
- 4 Click To Plot.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

Mean Electron Energy

- I In the Model Builder window, right-click Electron Density and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Mean Electron Energy in the Label text field.

Surface I

- I In the Model Builder window, expand the Mean Electron Energy node, then click Surface 1.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Plasma> Electron energy density>plas.ebar - Mean electron energy - V.
- 3 In the Mean Electron Energy toolbar, click Plot.
- 4 Click Tolling Plot.
- **5** Click the **Zoom Extents** button in the **Graphics** toolbar.

Electron Current Density

- I In the Model Builder window, right-click Mean Electron Energy and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Electron Current Density in the Label text field.
- 3 Locate the Data section. From the Dataset list, choose Parametric Extrusion 1D 2.

Surface I

- I In the Model Builder window, expand the Electron Current Density node, then click Surface I.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Plasma>Current> Electron current density - A/m²>plas.Jelx - Electron current density, x-component.
- 3 Locate the Coloring and Style section. Click Change Color Table.
- 4 In the Color Table dialog box, select Rainbow>Dipole in the tree.
- 5 Click OK.
- 6 In the Electron Current Density toolbar, click **Plot**.
- 7 Click Plot.
- 8 Click the **Zoom Extents** button in the **Graphics** toolbar.

Argon Ion Current Density

- I In the Model Builder window, right-click Electron Current Density and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Argon Ion Current Density in the Label text field.

Surface 1

- I In the Model Builder window, expand the Argon Ion Current Density node, then click Surface 1.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Plasma>Species> Species wAr_Ip>lon current density - A/m2>plas.lix_wAr_Ip - lon current density, xcomponent.
- 3 In the Argon Ion Current Density toolbar, click **1** Plot.
- 4 Click Tolling Plot.
- 5 Click the **Zoom Extents** button in the **Graphics** toolbar.

Total Conduction Current Density

I In the Model Builder window, right-click Argon Ion Current Density and choose Duplicate.

2 In the Settings window for 2D Plot Group, type Total Conduction Current Density in the Label text field.

Surface 1

- I In the Model Builder window, expand the Total Conduction Current Density node, then click Surface 1.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 In the Expression text field, type plas.Jix_wAr_1p+plas.Jelx.
- 4 In the Total Conduction Current Density toolbar, click **Plot**.
- 5 Click Plot.
- **6** Click the **Zoom Extents** button in the **Graphics** toolbar.

Terminal Current

- I In the Home toolbar, click In Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Terminal Current in the Label text field.

Global I

- I Right-click **Terminal Current** and choose **Global**.
- 2 In the Settings window for Global, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Plasma> plas.I_electrode - Current, Terminal electrode - A.
- 3 In the Terminal Current toolbar, click **Plot**.

Total Power Deposition

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Total Power Deposition in the Label text field.

Global I

- I Right-click Total Power Deposition and choose Global.
- 2 In the Settings window for Global, click Replace Expression in the upper-right corner of the y-Axis Data section. From the menu, choose Component I (compl)>Plasma> Power and collisions>plas.Pcap_tot - Total capacitive power deposition, electrons - W.
- 3 In the Total Power Deposition toolbar, click Plot.

Global Evaluation 1

I In the Results toolbar, click (8.5) Global Evaluation.

Use the timeavg operator to compute the time averaged power deposition for cycles 2-10.

- 2 In the Settings window for Global Evaluation, locate the Data section.
- 3 From the Time selection list, choose Last.
- **4** Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
timeavg(1e-5,2e-5,plas.Pcap_tot,'nointerp')	W	Cycle 2
<pre>timeavg(2e-5,3e-5,plas.Pcap_tot,'nointerp')</pre>	W	Cycle 3
<pre>timeavg(3e-5,4e-5,plas.Pcap_tot,'nointerp')</pre>	W	Cycle 4
timeavg(4e-5,5e-5,plas.Pcap_tot,'nointerp')	W	Cycle 5
<pre>timeavg(5e-5,6e-5,plas.Pcap_tot,'nointerp')</pre>	W	Cycle 6
<pre>timeavg(6e-5,7e-5,plas.Pcap_tot,'nointerp')</pre>	W	Cycle 7
timeavg(7e-5,8e-5,plas.Pcap_tot,'nointerp')	W	Cycle 8
<pre>timeavg(8e-5,9e-5,plas.Pcap_tot,'nointerp')</pre>	W	Cycle 9
<pre>timeavg(9e-5,10e-5,plas.Pcap_tot,'nointerp')</pre>	W	Cycle 10

As you can see, the average power deposited to the plasma remains the same for each cycle after only 3 RF cycles. The power is around 16.7 W on one half cycle and 17.7 W on the other half cycle. The difference is due to the fact that the secondary emission coefficients are different on the upper and lower plates.

5 Click **= Evaluate**.