CS-UY 2214 — E20 Manual

Jeff Epstein, Ratan Dey

Contents

1	Intr	roduction	2
2	2.1 2.2 2.3 2.4 2.5 2.6	Registers	2 2 4 8 9 10
3	Inst	truction set	11
	3.1	Instructions with three register arguments	11
		3.1.1 add \$regDst, \$regSrcA, \$regSrcB	11
		3.1.2 sub \$regSrcA, \$regSrcB	12
		3.1.3 or \$regDst, \$regSrcA, \$regSrcB	12
		3.1.4 and \$regDst, \$regSrcA, \$regSrcB	12
		3.1.5 slt \$regDst, \$regSrcA, \$regSrcB	12
		3.1.6 jr \$reg	13
	3.2	Instructions with two register arguments	13
		3.2.1 slti \$regDst, \$regSrc, imm	13
		3.2.2 lw \$regDst, imm(\$regAddr)	13
		3.2.3 sw \$regSrc, imm(\$regAddr)	13
		3.2.4 jeq \$regA, \$regB, imm	14
		3.2.5 addi \$regDst, \$regSrc, imm	14
	3.3	Instructions with no register arguments	14
		3.3.1 j imm	14
		3.3.2 jal imm	15
	3.4	Pseudo-instructions	15
		3.4.1 movi \$reg, imm	15
		3.4.2 nop	15
		3.4.3 halt	15
	3.5	Assembler directives	15
		3.5.1 .fill imm	16
	3.6	Undefined bit patterns	16
4	Har	rdware implementation	16
	4.1		16
	4.2	Multicycle version	18

5	Exa	umples	21
	5.1	Math	21
	5.2	Loops	22
	5.3	Subroutines	22
	5 4	Variables	2.3

1 Introduction

This manual covers the architecture of the E20 processor and its instruction set. The E20's architecture is more powerful than the E15, and its assembly language is more expressive. The encoding of its machine language is also more complicated, so we will introduce a program, called an *assembler*, to convert its assembly language into machine language, which can be directly interpreted by the processor.

2 Architecture

2.1 Registers

The E20 processor has eight numbered 16-bit registers. By convention, in E20 assembly language, we write each register name with a dollar sign, so the registers are \$0 through \$7. However, register \$0 is special, because its value is always zero and cannot be changed. Attempting to change the value of register \$0 is valid, but will not produce any effect: the register is immutable. Therefore, we have only seven mutable registers that can actually be used as registers, \$1 through \$7. The initial value of all registers is zero.

In addition, the E20 processor has a 16-bit program counter register, which cannot be accessed directly through the usual instructions. The program counter stores the memory address of the currently-executing instruction. The initial value of the program counter register is zero. After each non-jump instruction, the program counter is incremented. A jump instruction may adjust the program counter.

2.2 Instructions

Syntax Each instruction in E20 assembly language consists of an opcode, as well as zero, one, two, or three arguments. Opcodes are not case-sensitive. Numeric arguments are expressed in decimal. At least one space is required between the opcode and the first argument. Arguments are separated by commas. Optional spaces may occur around the comma. A maximum of one instruction may appear on a single line.

Any opcode may optionally be prefixed by any number of label declarations, each consisting of a label name followed by a colon. At least one space is required between a label declaration and any subsequent label declaration or opcode on the same line. A label name is a non-empty sequence of letters, digits, and underscores; the first character may not be a digit. Labels may appear either on the same line as an instruction, or on a line by themselves. A label declaration may also appear on a line after the last instruction of a program. Label names are not case-sensitive.

Comments begin with a hash mark (#) and continue to the end of the line. Blank lines are ignored.



There are three kinds of arguments:

• register argument — an integer 0...7 prefixed with dollar sign. For example, \$4

- immediate argument may consist of a positive decimal integer, such as 34; a negative decimal integer, such as -4 (expressed in 2's complement); or a label name, such as loc2
- memory reference a combination of an immediate argument and a register argument, with the latter contained in parentheses. For example, O(\$2) or array(\$0)

Examples The add instruction takes three register arguments: a destination register and two source registers, as follows:

```
add $1, $2, $3  # add the value of $2 and the value of $3, store sum into $1
```

The addi instruction takes a destination register, a source register, and an immediate value, as follows. Note that the third argument is an immediate value, not a register:

```
addi $1, $2, 3  # add the value of $2 and 3, store sum into $1
```

Due to the special property that register \$0 always has value zero, we can use the same opcode to store an immediate value into a register. Below, we add the immediate value to the value of register \$0, so the sum will always equal the immediate value:

```
addi $1, $0, 3  # store 3 into $1
```

The j instruction takes an immediate argument, and jumps to the memory address indicated. The address may be expressed numerically or with a label:

The lw instruction has one register argument and one memory reference argument. It will calculate a pointer given by the memory reference argument, and read the value stored at that memory address, storing it into the given register. Each memory reference argument has two parts: an immediate value (specified as a number or as a label) and a parenthesized register name. The memory address to be accessed is calculated by adding the immediate value and the value stored in the register:

```
lw $4, 0($3)
                        # the memory reference is O($3). Here,
                        # the immediate part is zero, and the
                        # register is $3. Therefore, the address
                        # to be read is equal to the value of
                        # register $3, plus zero. The value at that
                        # memory location will be stored into
                        # register $4
lw $4, foo($0)
                        # the memory reference is foo($0). Here, the
                        # immediate part is foo, a label. The register
                        # part is $0, which we know has the value 0.
                        # Therefore, the address to be read is equal
                        # to the value of foo, plus zero. The value
                        # at that memory location will be stored into
                        # register $4
lw $4, foo($3)
                        # the memory reference is foo($3). Here, the
                        # immediate part is foo, a label. The register
                        # part is $3. Therefore, the address to be read
                        # is equal to the value of foo, plus the value
                        # of register $3. The value at that memory location
                        # will be stored into register $4.
```

Further examples of instructions are given below, as well as in the provided example programs.

Common errors The format of the addi instruction specifies the following fields:

- opcode 3 bits
- source register 3 bits
- destination register 3 bits
- immediate 7 bits

This means that the immediate value must be expressed as a signed 7-bit number, in the range of -64...63. Any value outside of that range is not expressible in the allocated number of bits, and therefore the assembler must reject it. A similar restriction exists for other instructions that take an immediate field, such as jeq and slti.

A consequence of the above stipulation is that it's impossible to directly set all bits of a register at once, with a single addi instruction. For that, we would need to use lw to read a stored value from memory.

2.3 Memory

The E20 processor has 8192 16-bit cells of memory. Initially, the program is loaded into memory, starting at address zero. The program counter is initially zero, so execution begins at the first instruction of the program. Memory cells that do not initially contain program instructions are initially set to zero.

The 8192 cells of memory are addressed using 13-bit addresses. When accessing a memory cell via a pointer (either through the program counter, or with the 1w and sw opcodes), the 3 most significant bits of the pointer are ignored. Therefore, an instruction accessing memory via a pointer value 43222 (1010100011010110₂) refers to the same address as a pointer value 2262 (0000100011010110₂). Similarly, the instruction to be executed will be determined by the least significant 13 bits of the program counter.

E20 assembly language allows the use of *labels*. A label is a symbol that represents a known memory address. A label's name is a sequence of characters obeying the following rules: the first character may be a letter or an underscore; subsequent characters may be a letter, an underscore, or a digit; there must be at least one character. Label names are not case-sensitive.

A label may be declared in your assembly code by giving its name followed by a colon, preceding any instruction (including normal instructions, pseudo-instruction, and directives). Multiple labels may be declared at a single instruction, one after another. The value of the label will be the address of the instruction that it precedes. If the label precedes no instruction, the value of the label will be the address that a subsequent instruction would occupy. A label's name may be used as the imm field of any instruction, assuming that the value of the label can be expressed in the number of bits allocated to that field. A label's declaration need not precede its use.

Labels make it easier to write E20 assembly language programs. Instead of referring to addresses numerically, which will change as we add or remove instructions in the development of our program, we can refer to addresses by name, which the assembly will convert to the appropriate numeric address. Labels can denote the address of an instruction (which can serve as the target of a jump instruction) or the address of a data location (which can serve as the target of load/store word instruction).

Here's an example program, with assembly language on the left, and the corresponding machine code on the right:


```
first_label:
    movi $1, 1
    j first_label
    j second_label
second_label:
    movi $2, 2
```

```
ram[0] = 16'b0010000010000001;
ram[1] = 16'b0100000000000000;
ram[2] = 16'b010000000000011;
ram[3] = 16'b0010000100000010;
```

In the above program, the label first_label is declared before the instruction at address 0, therefore its value is zero. The second_label is declared before the instruction at address 3, so its value is 3. The instruction j first_label refers to first_label, so the immediate field of that instruction contains the value of that label. Similarly, the instruction j second_label has an immediate field containing the value of that label. In the above listing, the color of the labels matches to the color of the corresponding bits.

Memory can be read and written using the lw and sw instructions, respectively.


The lw (load word) instruction will read a memory cell, copying its value into a register:

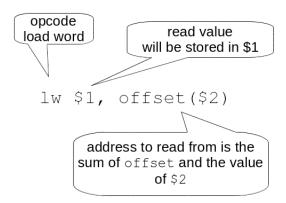

- The first argument of lw is the register to copy the value into.
- The second argument of lw has two parts:
 - an immediate field, which can be a number or a label, and
 - a register field.

The immediate will be summed with the value of the register, giving the memory address to read from.

The sw (store word) instruction will write to a memory cell, copying a value from a register:

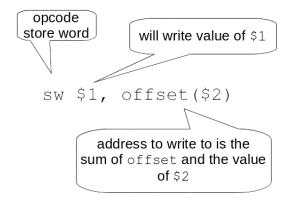

- The first argument of sw is the register holding the value to be copied to be memory.
- The second argument of sw has two parts:
 - an immediate field, which can be a number or a label, and

- a register field.

The immediate will be summed with the value of the register, giving the memory address to write to.

Here's an example:

```
lw $2, myvariable($0)
movi $3, 1
lw $4, myvariable($3)

myvariable:
    .fill 42
    .fill 97
ram[0] = 16'b10000001100000011;
ram[1] = 16'b001000011100000011;
ram[2] = 16'b1000111000000011;
ram[3] = 16'b0000000000101010;
ram[4] = 16'b00000000001100001;
```

In the above program, the instruction at address 0 calculates the memory address myvariable + \$0, which is equal to myvariable. The value of the label myvariable is 3, because the label is declared at the instruction at memory address 3. Therefore, the first 1w reads the value at that address, which is 42, and loads it into register \$2. Then, in the instruction at address 2, we calculate the memory address myvariable + \$3, which is myvariable + 1, which is 4. The value at memory address 4 is is 97, which is loaded into register \$4.

Variables We can use labels, lw, and sw to provide variables to our program. Consider the following:

```
beginning:
    lw $1, mycounter($0)
    addi $1, $1, 1
    sw $1, mycounter($0)
    j beginning
mycounter:
    .fill 0
ram[0] = 16'b1000000010000100;
ram[1] = 16'b001001001001000001;
ram[2] = 16'b1010000010001000;
ram[3] = 16'b01000000000000000;
ram[4] = 16'b0000000000000000;
```

In the above program, mycounter is a label with the value 4, referring to a memory address initialized to the value 0. In each iteration of the loop, the value from that address is read, incremented, and stored back into memory. The register \$1 is used only temporarily. This approach to storing data is convenient, because although we have relatively few registers, we have access to a large number of memory addresses.

Arrays The numeric relationship of memory addresses to each other allows us to loop through a sequence

of adjacent memory addresses, effectively treating them as an array. For example:

```
movi $1, 0
    movi $3, 0
loop:
    lw $2, myarray($1)
    add $3, $3, $2
    addi $1, $1, 1
    jeq $2, $0, done
    j loop
done:
    halt
myarray:
    .fill 5
    .fill 3
    .fill 20
    .fill 4
    .fill 5
    .fill 0
```

```
ram[0] = 16'b001000010000000;
ram[1] = 16'b0010000110000000;

ram[2] = 16'b10000101000010000;
ram[3] = 16'b0000110100110000;
ram[4] = 16'b00100100100000001;
ram[5] = 16'b1100100000000001;
ram[6] = 16'b0100000000000011;
ram[7] = 16'b010000000000011;
ram[9] = 16'b00000000000011;
ram[10] = 16'b0000000000000100;
ram[11] = 16'b00000000000000100;
ram[12] = 16'b000000000000000000000;
```

In the above program, myarray identifies the address of the beginning of an array of numbers, which is really just a sequence of memory locations. The program uses \$1 to store an index into the array, starting at zero, and incrementing it thereafter. A value from the array is read by the instruction at address 2. The loop will then sum each consecutive array element into a running total in \$3, before continuing to the next array element. When it finds an array element whose value is zero, the loop ends. Thus, this program sums all element in the array, and the final value of \$3 will be 37.

Halting As in the E15, the end of the program is expressed by entering a tight loop. We use the halt pseudo-instruction for this purpose, which is implemented as a jump to itself. That is, the halt instruction is equivalent to the following:

```
endofprogram: j endofprogram
```

Common errors Although a label may be declared before or after its use, it is an error to refer to a label that has not been declared at all in the program. For example, the following program cannot be assembled:

It is an error to declare the same label more than once in a program. On the other hand, it is not an error to declare a label that is never referred to.

Jumps E20 has several jump opcodes:

- j jump, with a 13-bit destination address
- jal jump and link, with a 13-bit destination address
- jr jump to register, with a register containing a 16-bit destination address
- jeq jump if equal, with a 7-bit relative destination address

In the case of jr, the register argument provides a 16-bit address, which is loaded into the program counter.

In the case of j and jal, the instruction format provides only a 13-bit destination address. The provided 13 bits will be copied into the least-significant 13 bits of the program counter, and the remaining 3 bits of the program counter will be set to zero.

In the case of jeq, the instruction format provides only a 7-bit relative destination address, which is interpreted as a signed 2's complement number, sign-extended¹, and added to the 16-bit address of the subsequent instruction; this sum is stored into the program counter. This means that using only this instruction, it is impossible to jump to a location more than $2^{7-1} - 1 = 0111111_2 = 63_{10}$ cells ahead of the current program counter, or more than $-2^{7-1} = 1000000_2 = -64_{10}$ behind it.

In E20 assembly language, it is an error to provide a immediate value, either numerically or by label, that exceeds the allowed number of bits for the immediate field of the given instruction. For example, j 9000 cannot be assembled, since 9000 cannot be expressed as a 13-bit unsigned integer. Similarly, jeq \$0, \$0, 90 cannot be assembled if it is located at address 0, since 90 - 0 - 1 = 89 cannot be expressed as a 7-bit 2's complement integer.

 $^{^{1}}$ To sign-extend is to increase the number of bits of a 2's complement number, in such a way that does not change the value it represents. The most-significant bit of the number, which represents the sign (negative or non-negative) of the value, must be reproduced into new bits positions. For example, consider a 4-bit 2's complement number, $1011_{2} = -5_{10}$. If we sign-extend this to an 8-bit number, it will become 11111011_{2} .

In this case, we need to sign-extend the 7-bit address to 16 bits, because the result must be added to a signed 16-bit number.

2.4 Comparison

E20 supports equality comparison and less-than comparison.

Equality Equality comparison is achieved with the jeq instruction. Its arguments are two registers, and an immediate value that indicates a memory location. If the values of its two register arguments are equal, then the program will jump to the given address. Otherwise, the program will proceed to the subsequent instruction. For example, consider the following program:

The above E20 assembly program might be expressed roughly using the following Python code:

```
if Reg1 == 0:
    Reg1 += 2
else:
    Reg1 += 1
```

Note that the j instruction is necessary. In contrast, consider the following program, identical except for the omission of the j instruction:

```
jeq $1, $0, they_are_equal  # if $1 is 0, go to they_are_equal
addi $1, $1, 1  # we execute this only when $1 is not 0
they_are_equal:
   addi $1, $1, 2  # we execute this regardless
done:
   # end of program
```

This version would be expressed with the following Python code:

```
if Reg1 != 0:
Reg1 += 1
Reg1 += 2
```

Less-than Less-than comparison is achieved with the slt or slti instructions, in conjunction with jeq. The slt or slti instructions will set a given register to 1 if its second argument is less than its third argument, and to 0 otherwise. Then, we can use jeq to check the value of the given register. For example:

The above E20 assembly program might be expressed roughly using the following Python code:

```
if Reg2 < Reg3:
    Reg2 += 1
else:
    Reg2 += 2</pre>
```

Note that slt and slti perform unsigned comparison. That is, both comparands are assumed to be non-negative binary numbers.

Less-than-or-equals We can combine the above approaches to provide less-than-or-equals comparison. First we compare for equality, then for less-than.

```
jeq $2, $3, less_or_equal
                                    # jump if $2 and $3 are equal, otherwise fallthrough
    slt $1, $2, $3
                                    # $1 will be set to 1 if $2 < $3
    jeq $1, $0, not_less_or_equal
                                   # if $1 is now 0, we know $2 > $3
less_or_equal:
    addi $2, $2, 1
                                    # we execute this only when $2 \le $3
                                     avoid fall-through to next instruction
    j done
not_less_or_equal:
    addi $2, $2, 2
                                     we execute this only when $2 > $3
done:
                                     end of program
```

2.5 Subroutines

The jal and jr instructions can be used together to achieve *subroutines*, a flow control mechanism that allows execution to return to an early point of code, and can be invoked from multiple places within a program. A subroutine is therefore like a function, but does not necessarily encompass the parameters and return values that functions usually entail.

Before we discuss how subroutines work in E20, consider the following C++ code:

```
int x = 0;
 2
    int y = 0;
 3
 4
    void sub1() {
 5
        x++;
 6
        y--;
 7
   }
 8
9
    void main() {
10
        sub1();
11
        sub1();
12 }
```

In the above code, execution starts at line 10. The subroutine sub1 is invoked, which does stuff in lines 5 and 6, and execution then returns to line 11. At line 11, the subroutine is invoked again, lines 5 and 6 are executed again, and execution returns to line 12, whereupon the program ends.

The subtlety of such code is the mechanism by which these invocations and returns are implemented. How does **sub1** know where to return to when it finishes, particularly when it returns to a different place each time?

On most architectures, this feat is accomplished by storing the address of the subsequent instruction at the time of a subroutine's invocation. Then, when the subroutine has finished, it copies that stored address into the program counter. This approach is used by the E20 processor.

- The jal (jump and link) instruction is similar to the ordinary jump instruction (j), with the key difference that in addition to storing the immediate value into the program counter, jal will store the address of the subsequent instruction into \$7.
- The jr (jump to register) instruction copies the address in the given register into the program counter. Therefore the instruction jr \$7 will jump to the address in the register \$7, where it was previously stored by jal.

Below is a direct E20 translation of the above C++ program. Note that we use jal sub1 to invoke the subroutine, and jr \$7 to return from it.

```
main:
    jal sub1
                          # invoke subroutine
    jal sub1
                          # invoke subroutine again
    halt
                          # end program
sub1:
    lw $1, x($0)
                           # x++
    addi $1, $1, 1
    sw $1, x($0)
    lw $1, y($0)
                           # y--
    addi $1, $1, -1
    sw $1, y($0)
    jr $7
                          # return from subroutine
x:
    .fill 0
у:
    .fill 0
```

Common errors A limitation of subroutines on E20 is that the value of \$7 must be preserved for the duration of the subroutine. If the subroutine modifies \$7, then the jr instruction may return to an unintended location.

A corollary of the above limitation is that a subroutine cannot call another subroutine. Since the jal instruction modifies \$7, this makes recursion awkward on E20.

Both of these limitation have workarounds. For example, a subroutine could save the value of \$7 into another register or into memory. It would then be free to manipulate \$7, including by invoking other subroutines, as long as it restores the original value of \$7 before it returns.

2.6 E15 vs E20

The E20 processor can be considered a more powerful version of the E15. Although they have many features in common and their instruction sets are similar, the E20 expands some capabilities.

	E15	E20
registers	four 4-bit registers	seven 16-bit registers
memory	16 12-bit cells of read-only in-	8192 16-bit cells of instruction/-
	struction memory	data memory
instruction format	all instructions have 4-bit opcode	three formats:
	field, two 2-bit register fields, and 4-bit immediate field	 3-bit opcode field, three 3-bit register fields, 4-bit immediate field 3-bit opcode field, two 3-bit register fields, 7-bit immediate field 3-bit opcode field, 13-bit immediate field

3 Instruction set

Here we discuss the instructions that form the E20 instruction set. We categorize the instructions by their format, which is based on the number of register arguments. The format determines how many bits are allocated to each argument.

In addition to instructions proper, we discuss *pseudo-instructions*, which are assembly mnemonics that are translated to another instruction. Finally, we cover *assembler directives*, which change the behavior of the assembler but do not correspond to any specific instruction.

In the following subsections, we give the following information about each instruction:

- the instruction name and syntax The header of each subsection gives the assembly language syntax.
- the instruction format Within each 16-bit instruction, we show which bits must have which values.
- the informal behavior We give a brief prose description of the behavior of the instruction when executed.
- the formal behavior We use a symbolic notation to express the behavior of the instruction. Here, we use the following symbols:
 - <-: indicates that the location on the left will be updated with the value on the right
 - \$reg (and variants, such as \$regA, \$regSrc, etc): the instruction's register argument
 - imm: the instruction's immediate argument
 - R: the processor's register file, indexed by the name of a register, 0...7
 - Mem: the processor's memory, indexed by a memory address
 - pc: the program counter

Unless otherwise specified, all instructions increment the program counter.

3.1 Instructions with three register arguments

3.1.1 add \$regDst, \$regSrcA, \$regSrcB

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits	S		3 bits			3 bits			3 bits			4 b	its	
	000		r	egSrc	A	ľ	regSrcI	3	:	regDst	t		000	00	

Example: add \$1, \$0, \$5

Adds the value of registers \$regSrcA and \$regSrcB, storing the sum in \$regDst.

Symbolically: R[regDst] <- R[regSrcA] + R[regSrcB]

3.1.2 sub \$regDst, \$regSrcA, \$regSrcB

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits	3		3 bits			3 bits			3 bits			4 b	its	
000 re				egSrc.	4	r	egSrcI	В		regDst			000)1	

Mnemonic: Subtract

Example: sub \$1, \$0, \$5

Subtracts the value of register \$regSrcB from \$regSrcA, storing the difference in \$regDst.

Symbolically: R[regDst] <- R[regSrcA] - R[regSrcB]</pre>

3.1.3 or \$regDst, \$regSrcA, \$regSrcB

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits	3		3 bits			3 bits			3 bits			4 b	its	
	000		r	egSrc	4	r	egSrcI	3	1	regDst	-		001	10	

Example: or \$1, \$0, \$5

Calculates the bitwise OR of the value of registers \$regSrcA and \$regSrcB, storing the result in \$regDst.

Symbolically: R[regDst] <- R[regSrcA] | R[regSrcB]</pre>

3.1.4 and \$regDst, \$regSrcA, \$regSrcB

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
3 bits				3 bits			3 bits			3 bits			4 b	its	
000			r	egSrc	A	r	egSrcI	3		regDst	;		00	11	

Example: and \$1, \$2, \$5

Calculates the bitwise AND of the value of registers regSrcA and regSrcB, storing the result in regDst.

Symbolically: R[regDst] <- R[regSrcA] & R[regSrcB]

3.1.5 slt \$regDst, \$regSrcA, \$regSrcB

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits	S		3 bits			3 bits			3 bits			4 b	its	
000			r	egSrc	A	r	egSrcl	В	1	regDst	;		010	00	

Mnemonic: Set if less than Example: slt \$1, \$2, \$5

Compares the value of regSrcA with regSrcB, setting regDst to 1 if regSrcA is less than regSrcB, and to 0 otherwise.

The comparison performed is unsigned, meaning that the two operands are treated as unsigned 16-bit integers, not 2's complement integers. Therefore, 0x0000 < 0xFFFF.

Symbolically: R[regDst] <- (R[regSrcA] < R[regSrcB]) ? 1 : 0

3.1.6 jr \$reg

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits			3 bits			3 bits			3 bits			4 b	its	
	000			reg			000			000			100	00	

Mnemonic: Jump to register

Example: jr \$1

Jumps unconditionally to the memory address in \$reg.

The jump destination is expressed as an absolute address. All 16 bits of the value of \$reg are stored into the program counter.

Symbolically: pc <- R[reg]

3.2 Instructions with two register arguments

3.2.1 slti \$regDst, \$regSrc, imm

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits	3		3 bits			3 bits				,	7 bits			
	111			regSrc	;		regDst	5				imm			

Mnemonic: Set if less than, immediate Example: slti \$1, \$2, some_label

Example: slti \$1, \$2, 30

Compares the value of \$regSrc with sign-extended imm, setting \$regDst to 1 if \$regSrc is less than imm, and to 0 otherwise.

The comparison performed is unsigned, meaning that the two operands are treated as unsigned 16-bit integers, not 2's complement integers. Therefore, 0x0000 < 0xFFFF. This is true even though the argument is expressed as a 7-bit signed number.

Symbolically: R[regDst] <- (R[regSrc] < imm) ? 1 : 0

3.2.2 lw \$regDst, imm(\$regAddr)

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits	S		3 bits			3 bits				,	7 bits			
	100	r	egAdc	lr		regDst	t				imm				

Mnemonic: Load word

Example: lw \$1, some_label(\$2)

Example: lw \$1, 5(\$2) Example: lw \$1, -1(\$2)

Calculates a memory pointer by summing the signed number imm and the value \$regAddr, and loads the value from that address, storing it in \$regDst.

The memory address is interpreted as an absolute address. The least significant 13 bits of the value of \$regAddr + imm are used to index into memory.

Symbolically: R[regDst] <- Mem[R[regAddr] + imm]</pre>

3.2.3 sw \$regSrc, imm(\$regAddr)

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits	3		3 bits			3 bits				,	7 bits			
	101			egAdd	lr		regSrc	;				imm			

Mnemonic: Store word

Example: sw \$1, some_label(\$2)

Example: sw \$1, 5(\$2) Example: sw \$1, -1(\$2)

Calculates a memory pointer by summing the signed number imm and the value \$regAddr, and stores the value in \$regSrc to that memory address.

The memory address is interpreted as an absolute address. The least significant 13 bits of the value of \$regAddr + imm are used to index into memory.

Symbolically: Mem[R[regAddr] + imm] <- R[regSrc]

3.2.4 jeq \$regA, \$regB, imm

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits		3 bits			3 bits			7 bits						
110			regA		regB			rel_imm							

where $rel_imm = imm - pc - 1$

Mnemonic: Jump if equal

Example: jeq \$1, \$0, some_label

Example: jeq \$2, \$3, 23 (jumps to address 23)

Compares the value of \$regA with \$regB. If the values are equal, jumps to the memory address identified by the address imm, which is encoded as the signed number rel_imm.

The jump destination, imm, is encoded as a relative address, rel_imm. That is, when a jump is performed, the value rel_imm is sign-extended and added to the successor value of the program counter. Therefore, the actual address that will be jumped to is equal to the current program counter plus one plus the immediate value. This means that when encoding a jeq instruction to machine code, the field in the least significant seven bits must be the difference between the desired destination and one plus the program counter.

Symbolically: pc <- (R[regA] == R[regB]) ? pc+1+rel_imm : pc+1

3.2.5 addi \$regDst, \$regSrc, imm

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
3 bits		3 bits			3 bits			7 bits							
001		regSrc				regDst	-	imm							

Mnemonic: Add immediate

Example: addi \$1, \$0, some label

Example: addi \$2, \$2, -5

Adds the value of register \$regSrc and the signed number imm, storing the sum in \$regDst.

Symbolically: R[regDst] <- R[regSrc] + imm

3.3 Instructions with no register arguments

3.3.1 j imm

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits			13 bits											
	010								$_{ m imm}$						

Mnemonic: Jump

Example: j some_label

Example: j 42

Jumps unconditionally to the memory address imm.

The jump destination is expressed as a non-negative absolute address. All 13 bits of imm are stored into the program counter, while the most significant 3 bits of the program counter will be set to zero.

Symbolically: pc <- imm

3.3.2 jal imm

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3 bits			13 bits											
	011			imm											

Mnemonic: Jump and link Example: jal some_label

Example: jal 42

Stores the memory address of the next instruction in sequence in register \$7, then jumps unconditionally to the memory address imm.

The jump destination is expressed as a non-negative absolute address. All 13 bits of imm are stored into the program counter, while the most significant 3 bits of the program counter will be set to zero.

Symbolically: R[7] <- pc+1; pc <- imm

3.4 Pseudo-instructions

Pseudo-instructions, unlike proper instructions, do not have their own unique encoding in machine language. Instead, pseudo-instructions are a shorthand form of expressing more complicated assembly instructions. The assembler will translate a pseudo-instruction into an actual instruction, which will then be assembled normally.

3.4.1 movi \$reg, imm

Mnemonic: Move immediate Example: movi \$2, 55

Example: movi \$7, some_label

Copies the value imm to the register \$reg.

The movi \$reg, imm instruction is translated by the assembler as addi \$reg, \$0, imm.

3.4.2 nop

Mnemonic: No operation

Performs no operation, other than incrementing the program counter.

The nop instruction is translated by the assembler as add \$0, \$0, \$0.

3.4.3 halt

Performs no operation at all. The program counter is not incremented, resulting in an infinite loop. By convention, represents the end of the program.

The halt instruction is translated by the assembler as an unconditional jump (j) to the current memory location.

3.5 Assembler directives

Directives are not processor instructions, but rather commands to the assembler itself.

3.5.1 .fill imm

Example: .fill some_label Example: .fill 42

Inserts a 16-bit immediate value directly into memory at the current location. This directive instructs the assembler to put a number into the place where an instruction would normally be. The immediate value may be specified numerically (positive, negative, or zero) or with a label.

3.6 Undefined bit patterns


Any bit pattern not covered by any of the previous sections is not valid machine code and its interpretation is undefined.

4 Hardware implementation

4.1 Single-cycle version

Here we present details of the hardware implementation of the single-cycle version of the E20 processor. In this version, each instruction executes in its entirety in one clock cycle.

Circuit diagram In the following diagram, thick lines represent 16-bit wires. Dotted lines represent control signals. Round dots indicate a wire intersection.

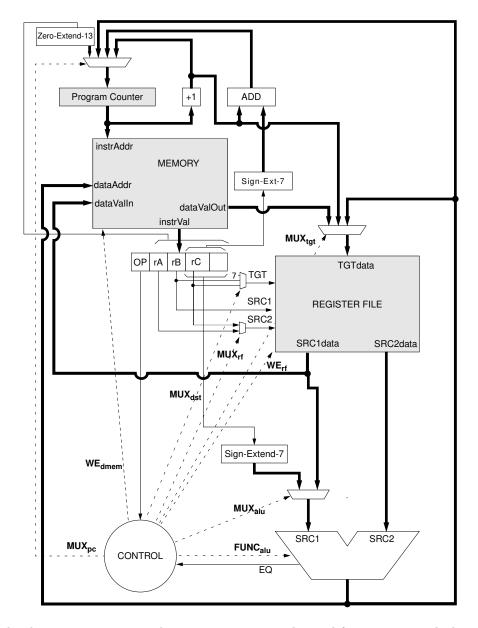

Every cycle, the program counter selects an instruction to be read from memory, which is passed to the control module. The control module acts as a decoder, which, on the basis of the current instruction, sets all of the control signals appropriately, and all of the control and data lines are set up. Then the new values are stored in memory, the register file, and the program counter register.

Control signals The control signals are set based on the basis of only the opcode and the EQ wire from the ALU. The EQ wire will be 1 when the result of the ALU operation is zero, and 0 otherwise.

The control signals are as follows:

 $FUNC_{alu}$ This wire directs the ALU which operation to perform. MUX_{alu} This wire directs a mux to select one of two inputs to the ALU: either from a register, or a sign-extended value from the immediate field. MUX_{pc} This 2-bit wire directs a mux to select one of four signals as the next value of the program counter: the ALU output, the increment of the current program counter, the zero-extended 13-bit immediate field, or the sum of the immediate field and the increment of the current program counter. MUX_{rf} This wire directs a mux to select one of two register selectors as input to the read input of the register file. $\mathrm{MUX}_{\mathrm{tgt}}$ This 2-bit wire directs a mux to select one of three signals as input to the write selector of the register file: the incremented program counter, the ALU output, or the data memory output. MUX_{dst} This 2-bit wire directs a mux to select one of three possible register selectors indicating where to write the result of the instruction: the second register field, the third register field, or the literal 7. This wire enables or disables the write port of the register file. If the signal is 1, the WE_{rf} register file will write the value of TGTdata to register TGT. Otherwise, writing is blocked.

This wire enables or disables the write port of memory. If the signal is 1, memory will

write the value of dataValIn at address dataAddr. Otherwise, writing is blocked.

The control wires can carry the following concrete values with the indicated meaning:


Control signal	Values
$\mathrm{FUNC}_{\mathrm{alu}}$	0 = add
	1 = subtract
	2 = and
	3 = or
	4 = slt
MUX _{alu}	0 = register
	1 = immediate
MUX_{pc}	0 = ALU
	1 = pc + 1
	2 = pc + 1 + imm
	3 = 13-bit immediate
MUX_{rf}	0 = rA
	1 = rC
MUX_{tgt}	0 = ALU
	1 = pc + 1
	2 = dmem
MUX_{dst}	0 = rB
	1 = rC
	2 = literal 7
WE_{rf}	0 = disable
	1 = enable
WE_{dmem}	0 = disable
	1 = enable

4.2 Multicycle version

 WE_{dmem}

Here we present details of the hardware implementation of the multicycle version of the E20 processor. In this version, each instruction executes in more than one clock cycle.

Circuit diagram In the following diagram, thick lines represent 16-bit wires. Dotted lines represent control signals. The control unit, shown to the right, has implicit connection to many components, including all the multiplexors, but for simplicity the actual wires are not shown.

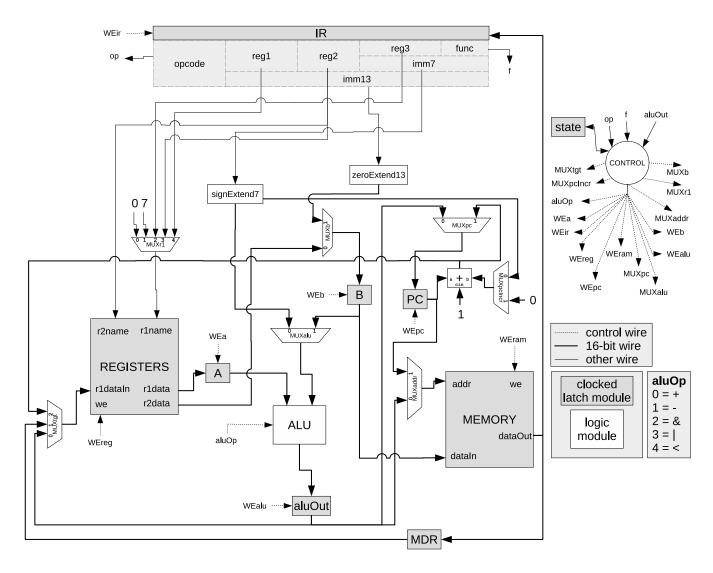


In addition to the architectural registers \$0...\$7, this version of the processor has several microarchitectural registers that are not accessible to the programmer:

- IR the instruction register store the current instruction.
- A and B these registers temporarily hold the input to the ALU before the EXEC stage.
- alu0ut this register stores the output of the ALU after the EXEC stage.
- MDR the memory data register stores output from the memory unit between the MEM and WB stage.
- state stores the current state of execution. Used exclusively by the control unit.


High-level state diagram In the following diagram, we show the relationship between the states of the multicycle processor. Execution of all instructions begins at state 0. Transitions to subsequent states, shown by arrows, are predicated by the opcode. After executing the last stage of each instruction, the program counter is advanced and execution resumes at state 0.

Within the box for each state are shown the symbolic micro-instructions necessary to complete that stage. The advancement of the state for the subsequent clock cycle is implicit. Similar to the notation used in section 3, the micro-instructions indicate storage operations using the left arrow (<-), memory access using M[...] and architectural register access using R[...].

The terms to the right side show which execution stage each state belongs to.

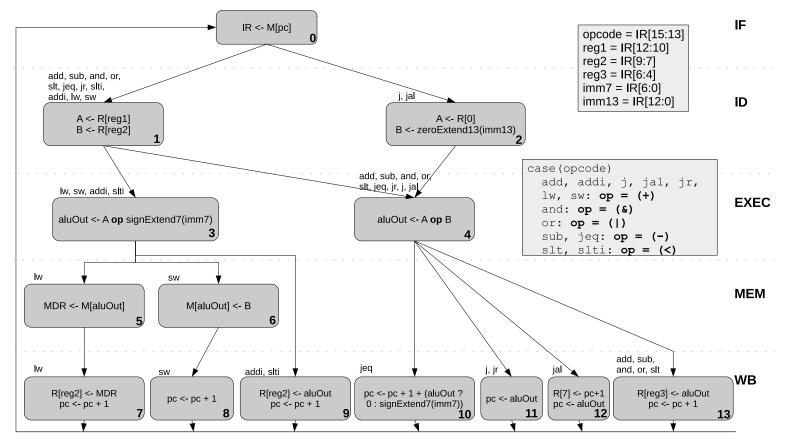

Low-level state diagram The low-level state diagram is similar to the high-level diagram shown above, however instead of showing symbolic micro-instructions, each state shows the exact control signals necessary to complete that stage.

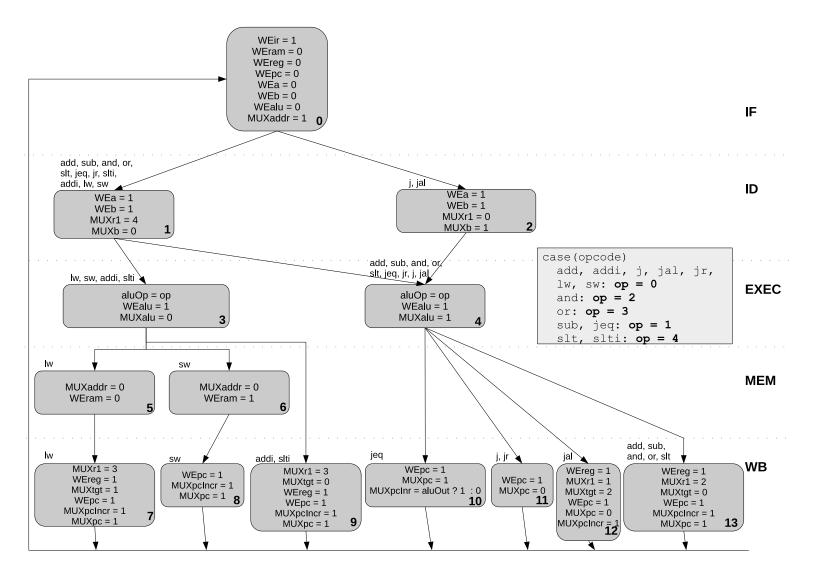

5 Examples

Here are some examples of E20 assembly language programs. Further examples, including the machine code translation, is available on Classes.

5.1 Math

```
# add, addi, and sub work as you expect, except
# they take three arguments. The first argument
# is the destination, the other two are the
# sources.
# There is no subi. Instead you have to use addi
# with a negative immediate.
addi $1, $0, 5  # $1 := 5
addi $2, $1, -2  # $2 := $1 + (-2)
add $3, $1, $2  # $3 := $1 + $2
```

```
# Notice that $0 is special, because it is always
# zero. So using $0 as a source lets us effectively
# do a movi, as in the first instruction below.
addi $4, $0, 55  # $4 := 55
sub $5, $4, $1  # $5 := $4 - $1

# We also have bitwise operators AND and OR.
# (but not ori and andi). As above, the first
# operand is the destination register.
or $6, $2, $5
and $7, $2, $5
halt # end the program with an infinite loop
```

5.2 Loops

```
# A simple loop, counting down from 10
# Here, we introduce a pseudo-instruction as a synonym
# for addi. Specifically:
                   <===>
      movi $1, 10
                            addi $1, $0, 10
# In other words, movi is really adding zero to the
# immediate and storing the result in $1.
# We also introduce jeq, which compares its first two
# arguments and conditionally jumps to the label in
# the third.
   movi $1, 10
                        # Initialize counter to 10
beginning:
    jeq $1, $0, done # if $1 == $0, go to done
                     # Decrement $1
    addi $1, $1, -1
    j beginning
                       # go to top of loop
done:
                       # we've finished
   halt
```

5.3 Subroutines

```
# Example of simple subroutine. At the jal
# instruction, we call subroutine proc.
# It store a value in $3, then returns.
# Upon return, we go back to the address
# after the subroutine invocation. Thus,
# the addi instructions will be executed
# in the following order:
# X1, X2, X3

addi $1, $0, 1  # X1: assign 1 to $1
    jal proc
    addi $2, $0, 2  # X3: assign 2 to $2
    halt
```

```
proc:
   addi $3, $0, 3  # X2: assign 3 to $3
   jr $7
```

5.4 Variables

```
# Examples of variables in memory.
# var1 is a label identifying a memory address
# containing 30, and var2 is a label identifying
# a memory address containing 5. We load the value
# at var1 into $1, and the value at var2 into $2.
# Then we AND them into $3, and OR them into $4.
# Then we store $3 into var3.
   lw $1, var1($0)
                      # read from address var1 + 0
   lw $2, var2($0)
                     # read from address var2 + 0
   and $3, $1, $2
                     # AND the values together
   or $4, $1, $2
                      # then OR them together
   sw $3, var3($0)
                     # write the AND result into memory
                      # program ends
   halt
var1:
                      # declare a label
    .fill 30
                      # insert the value 30 into memory here
var2:
   .fill 5
var3:
   .fill 0
```