# Netzwerke und Schaltungen 1

# Contents

Coulomb's Law	4
Das elektrostatische Feld	4
Das elektrostastische Potential	4
Elektrische Fluss (Flux)	5
Gauss'sche Gesetz	6
Line Charge	6
Infinite Charged Plane	6
Leitenden Koerper (Macroscopic Level)	7
Dielectrics	7
Dipoles	8
Permittivity	8
Dielectric Boundary Conditions	9
Capacitance	
Capacitor Networks	10
Real-world capacitors	
Energy stored by capacitor	
Current	
Current Density	
Resistance	
Specific Resistivity ( $\rho_R$ ) & Conductivity ( $\kappa$ )	
Ohm's Law	
Real-world Resistors	14
Conductor Boundary Conditions	
Normal:	
Tangential:	15
Power	
Network Analysis	16
Kirchhoff's Circuit Laws	16
Resistor Networks	
Voltage Divider	
Measuring Resistance	
Real Power Sources	
Load Power	
Network Analysis Techniques	
Thevenin's / Norton's Equivalents	
Y- $\Delta$ Transform	
Superposition Principle	20
Linear System of Equations	20
Current Carrying Mediums	21
Vacuum	21
Space Charge	22
Gases	
Liquids	23
Faraday's Law of Electrolysis	23
Semiconductors	24

p-n Junction	24
p-n Junction	25
Magnetic Dipoles	25
Magnetic Fields	26
Magnetic Flux	
Gauss's Magnetism Law	26
Ørsted's / Ampere's Circuital Law	27
Biot-Savart Law	27
Infinitely Long Wire	28
Toroid	
Solenoid	28
Lorentz Force Law	29
Magnetomotive Force	30
Magnetic Torque	30
Magnetisation	
Relativistic Magnetism	30
Maxwell's Equations	31

Charge polarity is completely arbitrary; it is only important to stay consistent. The same applies to magnetic poles, which were so defined based on the Earth's magnetic field (however this flips occaisonally too...).



WE WERE GOING TO USE THE TIME MACHINE TO PREVENT THE ROBOT APOCALYPSE, BUT THE GUY WHO BUILT IT WAS AN ELECTRICAL ENGINEER.

Conventional current is assumed unless stated otherwise.

# **Fundamental Laws of Electromagnetism:**

Maxwell's Equations and the Lorentz Force law are the only fundamental laws of electromagnetism, which work for all materials and at quantum scale. Coulomb's law was discovered through experiment and can be derived from Gauss's law, and Ohm's law does not hold true for all materials.

Nonetheless they are very useful in practice and certainly worth studying.

# **Surface / Volume Integration nudge factors:**

Cylindrical coordinate system: r

*Spherical coordinate system:*  $r^2 \sin(\vartheta)$  (where  $\vartheta$  is the angle from the z axis)

#### Coulomb's Law

$$\overrightarrow{F_2} = \frac{Q_1 Q_2 \overrightarrow{e_{12}}}{4\pi\varepsilon |\overrightarrow{r_{12}}|^2}$$

 $\varepsilon$  is often replaced with  $\varepsilon_0$  as calculations are assumed to take place in a vacuum.

### Das elektrostatische Feld

- Distance is from centre of point charge
- A positive test charge of 1C is used to plot electric fields this means a positive charge has arrows away from it
- Unit vector is always  $\frac{\vec{r}_{12}}{|r|} = \vec{e}_{12}$
- Electric field lines cannot be closed loops with a constant direction this would lead to perpetual motion (see electric potential closed integral)

Feld - die eigenschaften eines Raums, die eine Wirkung auf andere Ladungsstoffen haben Homogene Feld - Field with the same strength and direction in all points. In reality it exists only when zooming in on a small area. Antonym: inhomogene / ortsabhaengige Feld.

$$\vec{E} = \frac{\vec{F}}{Q_2}$$

Um die Kraft in einer gewisse Punkt im Raum zu finden, man muss die Ladung mit dem Feld an diesem Punkt multiplizieren.

Any point in a field always has a unique direction. The electric field at the equidistant point between two like charges is 0 as they cancel each other out.

Quantitative - Numbers based

Qualitative - Interpretation based

A cluster of like charges behaves like a point charge with the sum of their charges on the macroscopic scale. Opposite charge clusters (ex. Dipole) lead to no field around them on a large scale.

# Das elektrostastische Potential

Electrostatic potential energy of a particle as it moves from  $P_0 \to P_1$ :

$$\vec{F} = \vec{E}Q$$
 
$$W_e = -\int_{P_0}^{P_1} \vec{F} \cdot d\vec{s} = -Q \int_{P_0}^{P_1} \vec{E} \cdot d\vec{s}$$

The work done by the electric field as a positive test charge moves towards another positive is negative, as external energy is needed in order to overcome the repulsive force. The potential energy of the test charge increases due to the incoming energy, so  $W_e$  is made positive.

 $\phi$  - Closed integral, when a line begins and ends at the same point in space.

Provided the speed as the charge moves through the field tends towards 0 (to minimize the arising electromagnetic field):

$$\oint_C \vec{E} \cdot d\vec{s} = 0$$

Electrostatic potential is the electrostatic potential energy of a particle at a point in an electric field.

$$\varphi = \frac{W_e}{Q}$$

A reference potential (ground) must always be defined, often the Earth's surface / an infinitely far away point is taken as  $\varphi_e=0$ . In a circuit, the negative terminal is often used.

Taking  $r_1$  as an infinitely far away point with potential 0, the electrostatic potential in the space surrounding a point charge Q as a scalar is:

$$\begin{split} \varphi(P_0) &= 0 \\ \varphi(r) &= -\int_{P_0}^r \vec{E} \cdot \vec{ds} \end{split}$$

Electrostatic potential is positive in a positive electric field.

The change in electrostatic potential does not depend on the path taken through the field, only the start and end point.

$$W_e = -Q \int_{P_0}^{P_1} ec{E} \cdot ec{ds} = Q \left[ arphi_{e(P_1)} - arphi_{e(P_0)} 
ight]$$

*Voltage* (*U*) - Difference between two potentials with the same reference potential.

$$U_{12}=\varphi(P_1)-\varphi(P_2)=\int_{P_*}^{P_2} \vec{E}\cdot d\vec{s}$$

A multimeter can only measure voltage between conductors (and not with for example the air as a reference point) as it relies on a small current to make the measurement. LTD: Revisit capacitive coupling

# Elektrische Fluss (Flux)

*Electric Displacement Field (aka Flux Density)*: An imaginary field that describes the effect of a charge on space, independent of if it's through a vacuum, dielectric or conductor.

$$ec{D} = arepsilon ec{E}$$
 Point charge  $= ec{e_r} rac{Q}{4\pi r^2}$ 

*Elektrische Fluss* ( $\Psi$ ) - Total flux density flowing through a surface. Considering a charge Q inside a sphere with radius r:

<sup>&</sup>lt;sup>1</sup>Derivation in Elektrotechnik, Albach 1.8.1

$$r = constant$$

Nudge factor needed for spherical coordinate system

$$\begin{split} &= \int_0^{2\pi} \int_0^\pi r^2 \sin(\vartheta) \varepsilon_0 \overline{E(r,\vartheta,\varphi)} \cdot d\vartheta d\varphi \\ &= \frac{\varepsilon_0 Q r^2}{4\pi \varepsilon_0 r^2} \int_0^{2\pi} \int_0^\pi \sin(\vartheta) \vec{e_r} \cdot d\vartheta d\varphi \\ \vec{e_r} \cdot d\vartheta d\varphi \text{ is 1, as they are always parallel.} \end{split}$$

$$\begin{split} &= \frac{Q}{4\pi} \int_0^{2\pi} (-\cos(\pi)) - (-\cos(0)) d\varphi = \frac{Q}{4\pi} \int_0^{2\pi} 2d\varphi \\ &= \frac{Q}{4\pi} ((4\pi) - (0)) = \frac{4\pi Q}{4\pi} = Q \end{split}$$

# Gauss'sche Gesetz

The above derived relationship is known as Gauss's law:

$$\Psi_E \coloneqq \oiint \vec{E} \cdot d\vec{A} = \frac{Q}{\varepsilon_0}$$

$$\Psi_D \coloneqq \oiint \vec{D} \cdot d\vec{A} = Q$$

The total electric flux density through an arbitrary closed surface (electric flux) is equal to the charge enclosed inside, regardless of the charges position / area of the surface.

This law is one of Maxwell's equations and can be used in reverse with infinitely small symmetric Gaussian surfaces to calculate the electric field around certain charge distributions, for example, the electric field at the surface of any point on a charged plane.<sup>2</sup>

# Line Charge

The electric field at distance r from a line charge with uniform charge distribution  $\lambda$  can be calculated using either the integral of contributions to the field by small sections of the line, or far simpler using a cylinder and Gauss's law:

$$\overrightarrow{E(r)} = \frac{\lambda}{2\pi\varepsilon r}$$

# **Infinite Charged Plane**

As derived using Gauss's law, the electric field around an infinitely large charged plane with surface charge density  $\sigma$  is:

$$\vec{E} = \frac{\sigma}{2\varepsilon}$$

This is the same regardless of distance from the plane, as when moving further away, more area contributes to the superposed field.

The direction of the field is perpendicular to the surface of the plane.

<sup>&</sup>lt;sup>2</sup>See *Electricity and Magnetism | Purcell* for some great derivations of electric fields by various charge distributions.

When two charged planes with equal and opposite charge densities are parallel to one another (capacitor), the field behind each one is cancelled due to their superposing opposite fields. The electric field between the two planes is twice as strong:

$$\vec{E} = \frac{\sigma}{\varepsilon}$$

If they have an equal charge distribution, the electric field between plates of a capacitor is homogenous. This results in the potential difference between them:

$$U = Ed = \frac{\sigma d}{\varepsilon}$$

If an isolated, conductive plate is brought in between them, the total distance between the plates throughout which a test charge is under the influence of an electric field decreases by the thickness of the conductive plate. This results in a lower potential difference between the plates.

# Leitenden Koerper (Macroscopic Level)

The electric lines are always perpendicular to the surface of a conductor, as any tangential component of the field redistributes charges to prevent this.

The electric field inside a conductor is always 0, as the free charges repel each other and arrange themselves on the surface, of which the superposed electric fields at any point in the conductor are 0. The same applies if the conductor is brought into an external electric field.

The electrostatic potential inside a conductor is constant and equal to the surface, otherwise work would have to be done to move to the surface, which is not the case. Another way of thinking about it, is that energy was required to move a test charge into the conductor from infinitely far away.

The negative charge on the surface of a conductor arises from a **surplus of electrons**. Positive charge arises due to lack of electrons - a **surplus of holes**. Protons do not move throughout the conductor.

Influenzierten Ladungen - The separation of charges influenced by an electric field.

*Faraday Cage* - A hollow, conductive, closed volume. In an external electric field, the free charges are influenced so that the electric field inside the cage (the walls of the cage and the hollow inside it) is cancelled out. This phenomenon is very useful for electromagnetic shielding. A conductive hollow volume with gaps also reduces the inner field vastly, although it is not perfect.

#### **Dielectrics**

*Dielectric* - An electric insulator that can be polarised by an electric field. Regular "insulators" tend to have a low degree of polarisation.

Although dielectrics do not contain free charges, they still experience a small degree of polarisation at the atomic level, as the cloud of electrons surrounding the nucleus is distorted in the direction of the applied electric field.

When a dielectric is placed between two plates, there is still a (macroscopic) electric field throughout the dielectric (albeit lower than through a perfect insulator, as the dipoles generate fields in the opposite direction). This results in a lower potential difference between the plates, although still higher than if it were a conductor.

# **Dipoles**


Dipole - A phenonmenon when opposite electric charges / magnetic poles are separated. Examples of electric dipoles are ions under the influence of an external electric field or certain molecules, such as  $H_2O$  which are permanent dipoles due to their asymmetric structure.

*Electric Dipole Moment* - for a dipole with charge Q on the positive end and vector  $\vec{d}$  from the main negative point to the main positive point, the electric dipole moment is:

$$\vec{p} = Q\vec{d}$$

It can be thought of as a measure of a systems polarity. A higher dipole moment means the system experiences a greater torque when an external homogenous electric field is applied.

When a material containing dipoles is in an external electric field, the dipoles align in the same direction, resulting in an overall polarization of the material (essentially a larger dipole). Temperature has a large effect on this, as the random movements of particles disrupt the perfect alignment encouraged by the electric field.



The overall polarization of a dielectric with volume V is:

$$\vec{P} = \frac{\sum_{i=1}^{n} \overrightarrow{p_n}}{V}$$

This the  $\vec{E}$  field arising in the opposite direction due to polarization, thus weakening the net electrical field.

A polarized conductor / dielectric with a net 0 charge in a non-homogeonous field, such as near a point charge will usually have a resultant force, for example a dipole near a point charge (regardless of polarity) will experience a stronger attractive force and the dipole will have a resultant force towards the point charge.

# **Permittivity**

*Absolute Permittivity /Dielectric Constant* - A measure of the electric polarizability of a material, ie. the capacity of it to oppose / how well it stores energy from an external electric field through polarisation. Higher for conductors / dielectrics than insulators.

$$\varepsilon=\varepsilon_r\varepsilon_0$$

Permittivity of free space -  $\varepsilon_0 = 8.85418782 \times 10^{-12}$ 

Relative Permittivity -  $\varepsilon_r$  (sometimes  $\kappa$ ) - The ratio of a material's permittivity  $\varepsilon$  to the permittivity of free space  $\varepsilon_0$ . The permittivity of air is very close to that of a vacuum  $\varepsilon_0$ , hence its relative permittivity is nearly 1.

$$\varepsilon_r = \frac{\varepsilon}{\varepsilon_0}$$

The higher the permittivity of a medium, the more it's electric field is reduced due to polarisation. Electric field strength is inversely linearly proportional to the permittivity, as seen in Coulomb's law (but not for all materials, for example ferroelectric crystals).

LTD: Revisit after Purcell

Taking place in a medium with permittivity  $\varepsilon$ :

The difference in the E field before and after polarisation:

$$\vec{P} = \vec{D} - \vec{E}$$
$$= \varepsilon \vec{E} - \vec{E}$$

Therefore the resulting electric displacement field (field only due to charges, polarization) is equal to the permittivity of the space x (electric field after polarization + the change in electric field due to polarization):

$$\begin{split} \vec{D} &= \varepsilon_0 \overline{E_{\text{if it happened in vacuum}}} = \varepsilon_0 \Big( \vec{E} + \vec{P} \Big) = \varepsilon \Big( \vec{E} - \left( \varepsilon \vec{E} - \varepsilon_0 \vec{E} \right) \Big) \\ &= \varepsilon \Big( \vec{E} (1 - \varepsilon) + \varepsilon_0 \vec{E} \Big) \end{split}$$

LTD: This is flawed

$$=\varepsilon(1-\varepsilon)\vec{E}+\varepsilon\varepsilon_0\vec{E}$$

Where E is the net electric field after polarisation

# **Dielectric Boundary Conditions**

The electric field strength changes as it passes through the border of two different dielectric materials. However, it can be broken down into the normal and tangential components in order to calculate the resulting field:

As an external electric field pases through the boundary of dielectrics with absolute permittivity  $\varepsilon_1$  and  $\varepsilon_2$ :

$$\varepsilon_1 E_{n1} = \varepsilon_2 E_{n2}$$
 
$$E_{t1} = E_{t2}$$

The normal component is derived using Gauss's law and an infinitely thin cylinder at the boundary. LTD: Revisit tangential proof after learning Faraday's law https://ximera.osu.edu/electromagnetics/electromagnetics/electrostatics/digInElectricFieldBoundaryConditions

Supposing the external field enters at angle  $\alpha_1$  to the normal and leaves with angle  $\alpha_2$ , the fields at the boundary can be expressed as:

$$\begin{split} \tan\alpha_1 &= \frac{E_{t1}}{E_{n1}} \\ \tan\alpha_2 &= \frac{E_{t2}}{E_{n2}} \\ \frac{\tan\alpha_1}{\tan\alpha_2} &= \frac{\frac{E_{t1}}{E_{n1}}}{\frac{E_{t2}}{E_{n2}}} = \frac{E_{n2}}{E_{n1}} = \frac{\varepsilon_1}{\varepsilon_2} \end{split}$$

# Capacitance

Considering the equation for the potential difference between two equally and oppositely charged plates of a capacitor, each with charge Q and area A:

$$U = Ed = \frac{\sigma d}{\varepsilon} = \frac{Qd}{\varepsilon A}$$

$$Q = CU, \text{ where } C = \frac{\varepsilon A}{d}$$

$$C = \frac{Q}{U}$$

Q is directly proportional to U regardless of the geometry of the capacitor. The constant of propertionality C is called the capacitance of such an arrangement and has the unit F Farad, ie. the ability of a body to store electrical charge. Formally defined:

$$C = rac{arepsilon \oiint_A ec{E} \cdot dec{A}}{\int_S ec{E} \cdot dec{s}}$$

LTD: Compute capacitance of arbitrary systems in physics simulator

### **Spherical Capacitor**

Considering two spherical shells, the inner with radius a and outer with radius b, each with an equal and opposite charge Q. The capacitance of such a body is:

$$\begin{split} C &= \frac{Q}{U} = \frac{Q}{\int_a^b \vec{E} dr} \\ &= \frac{Q4\pi\varepsilon}{Q\int_a^b \frac{1}{r^2} dr} = \frac{4\pi\varepsilon}{\frac{b-a}{ab}} \\ &= \frac{4\pi\varepsilon ab}{b-a} \end{split}$$

# **Capacitor Networks**

Large capacitor networks can be broken down into a single capacitor using the following rules:

	Parallel	Series
Total Capacitance	$\sum_{i=1}^{n} C_n$	$\left(\sum_{i=1}^n C_n^{-1}\right)^{-1}$
Derivation	All capacitors in parallel have the same voltage across them. Therefore an equivalent single capacitor would have capacitance: $\frac{Q_{\text{total}}}{V} = \sum_{i=1}^n C_i$	The total voltage dropped across the series of capacitors is equal to the voltage between the first and last terminal. Due to the conservation of charge, no new charge can be brought in between the inner capacitors: $U_{\text{total}} = \sum_{i=1}^n U_i = \sum_{i=1}^n \frac{Q}{C_i}$ $ \therefore \frac{1}{C_{\text{total}}} = \sum_{i=1}^n \frac{1}{C_i} $

# **Real-world capacitors**

A capacitor consisting of two plates would need to be extremely large to be of any practical use. In real life, various forms of layered capacitors are used.<sup>3</sup>

In general, their capacitance can be calculated by identifying the number of individual plate capacitors they form between layers and summing their capacitance (they are essentially connected in parallel). The capacitance around the edges of layers is negligible.

*Variable capacitor* - A layered capacitor, who's overlapping area can be adjusted mechanically. Capacitance can be expressed in terms of an angle, depending on its construction.

Film capacitor - This is essentially a plate capacitor wrapped into a cylinder. Its capacitance can be calculated in the same fashion as a plate capacitor, but **multiplied by 2**, as both sides of the conductor contribute to the capacitance.

 $<sup>^{3}\</sup>mbox{See}$  chapter 1.19 of Elektrotechnik, Albach

# Energy stored by capacitor

The energy stored by a capacitance C with voltage U across it's terminals is:

$$W_e = \frac{1}{2}CU^2$$

This is derived by integrating a differential equation of the change in energy as a function of the change in charge whilst the capacitor is connected to a constant voltage source (and is therefore independent of the geometry of the capacitor):

$$\begin{split} dW_e &= Udq = \frac{1}{C}qdq \\ W_e &= \frac{1}{C}\int_0^Q qdq = \frac{1}{2}\frac{Q^2}{C} \\ &= \frac{1}{2}CU^2 \end{split}$$

The stored energy can also be expressed in terms of fields (with energy density  $Jm^{-3}$ ) through the following equation (LTD: Revisit after reading Purcell):

$$w_e = \frac{1}{2} \vec{E} \cdot \vec{D}$$

#### Current

The net rate of flow of positive charge through a surface (**A** mperes). In conventional current, holes flow from higher to lower potential, although the electrons actually flow from low to high potential.

$$I(t) = \frac{dQ}{dt}$$

Convection current - Current caused by the transport of charges.

# **Current Density**

A field containing current that is flowing per unit area at a point in space. It can be expressed in terms of volume charge density  $\rho$  and velocity of the charges  $\vec{v}$ :

$$\vec{J} = \rho \vec{v}$$

It has the same polarity regardless of if the flow of electrons or holes is being considered, as in that case the charges will be moving in opposite directions.

The total current flowing through an area can be calculated with the help of a surface integral:

$$I = \iint_A \vec{J} \cdot d\vec{A}$$

# Resistance

As electrons in a conductor are accelerated in the same direction by an external electric field, they bump into stationary nuclei in the lattice, causing them to decelerate and scatter. The resulting average velocity of electrons (hence the negative sign) at a point is called the **drift velocity** and is directly proportional to the electric field. The constant of proportionality  $\mu$  is called **electron mobility (Beweglichkeit)**:

$$\vec{v_e} = -\mu_e \vec{E}$$

Assuming a homogenous, parallel E field (for example between a capacitor's plates):

$$V = \int_0^l \vec{E} ds$$

$$\therefore \vec{v_e} = -\mu_e \frac{V}{l}$$

# Specific Resistivity ( $\rho_R$ ) & Conductivity ( $\kappa$ )

These are two fundamental properties of a material which are reciprocals of each other. They describe how well a material resists / conducts electricity:

$$\rho_R = \frac{1}{\kappa}$$

	Resistivity	Conductivity
Symbol	$ ho_R$ $\kappa$	
Units	$\Omega m$ Ohm meters	$Sm^{-1}$ Siemens per meter

For a metal with n electrons per unit volume,  $\rho = -en$ . The current density can be expressed in terms of the specific conductivity  $\kappa$  as:

$$\vec{J} = -ne\vec{v} = ne\mu_e \vec{E} = \kappa \vec{E}$$

Resistivity is heavily dependant on temperature and pressure. A higher temperature results in nuclei oscillating around their equilibrium faster and thus increasing resistivity. On the other hand, the resistivity of semiconductors generally decreases with increasing temperature, as the oscillations free more electrons from the individual atoms. A factor  $\alpha$  is often used to calculate the resistivity with temperature taken into account:

$$\begin{split} \rho_{R(T_{\rm old},T_{\rm new})} &= \rho_{R~{\rm T~old}} (1 + \alpha \Delta T) \\ \text{where } \Delta T &= T_{\rm new} - T_{\rm old} \end{split}$$

This is of course only accurate within a specific range of temperatures. A better approximation can sometimes be calculated with a 2nd factor  $\beta$ :

$$\rho_{R(T_{\rm old},T_{\rm new})} = \rho_{R~{\rm T~old}} \Big( 1 + \alpha \Delta T + \beta (\Delta T)^2 \Big)$$

Alloys usually have worse conductivity than pure metals due to their irregular atomic structure.

# Ohm's Law

In differential form:

$$\vec{J} = \kappa \vec{E}$$

Considering a cylinder with length l, homogenous conductivity  $\kappa$  and cross sectional area A lying orthogonal to a homogenous electric field caused by electrodes with constant potentials  $\varphi_1$  and  $\varphi_2$  which continuously provides charges / holes. By integrating the fields in this equation we can derive the most fundamental equation in electronics.

The current through any cross-section in the cylinder is:

$$I = \iint_A \vec{J} \cdot d\vec{A} = J_x A$$
  $J_x = \frac{I}{A}$ 

Thus we can express the electric field through the cylinder as:

$$E_x = \frac{1}{\kappa} J_x = \frac{I}{\kappa A}$$

The potential difference between the ends of the cylinder is:

$$U_{12}=arphi_1-arphi_2=\int_0^l ec{E}ec{ds}=E_x l=rac{Il}{\kappa A}$$

Resistance of the cylinder (and therefore most wires) can be expressed in terms of resistivity (and thus  $\kappa$ ) as:

$$R = \frac{\rho_R l}{A} = \frac{l}{\kappa A}$$

And thus:

$$U_{12}=IR\blacksquare$$

In summary:

$$R = \frac{U}{I} = \frac{\int_{s} \vec{E} \vec{ds}}{\kappa \not \Leftrightarrow \vec{E} \vec{dA}}$$

*Aside:* Since the resistance is directly proportional to the resistivity of the material, the temperature change formulas can be applied in exactly the same way.

Sometimes the conductance of a component is expressed as:

$$G = \frac{1}{R}$$

The resistance of a hollow sphere with radius a for the first shell and b at the second shell, which are separated by a material with specific resistivity  $\rho_R$  is:

$$R = \frac{\rho_R(b-a)}{4\pi ab}$$

### **Real-world Resistors**

Manufacturers usually produce series of resistors with certain tolerances, so that there are no gaps between the maximum / minimum allowed resistance in their catalogue. This ensures that no resistors are wasted and each can be sorted into a value, then marked with the corresponding key (coloured rings for through-hole, number codes on SMD resistors).

*Thin Film* - A thin film of carbon / metal is applied onto a ceramic or glass base, then coated with plastic to prevent damage. This is the typical through-hole resistor that comes to mind and is the most common technology for SMD resistors, however it is not the most precise / power tolerant. Sometimes parts of the film are etched away to reduce cross-sectional area of the conductor and increase resistance.

*Wirewound* - A thin wire is wound around a ceramic core, usually in a zig-zag manner to reduce parastic inductance. These are very precise and suitable for high-power applications, but are typically not available in SMD form.

*Metal Strip* - This is simply a strip of metal / alloy (depending on desired resistance), usually resulting in a very low ohmic value. They are often used as shunts for measuring current.

Potentiometer - Variable resistor adjusted by moving a physical contact.

*Thermistor* - These are used in all kinds of temperature measurement circuits. They are made from semiconductors and are usually NTC (negative temperature coefficient), meaning their resistance decreases by a reliable amount as temperature increases, although PTC thermistors are also available.

VDR (Voltage dependent resistor) - These are used to protect against voltage surges.

LDR - Light dependent resistor.

# **Conductor Boundary Conditions**

As a constant current passes through the boundary of two different conductors with specific conductivity  $\kappa_1$  and  $\kappa_2$ , we can analyse the change in normal and tangential components of the current density and electrical (caused by the voltage source) fields. Let us once again consider an infinitely small cylinder at the boundary.

#### Normal:

The normal current density must of course stay constant, otherwise charges are being generated / dissapearing:

$$\overrightarrow{J_{n1}} = \overrightarrow{J_{n2}}$$

Due to the change in conductivity, the normal component of the electric field must have changed:

$$\kappa_1 \overrightarrow{E_{n1}} = \kappa_2 \overrightarrow{E_{n2}}$$

### **Tangential:**


The tangential electric field must be the same to obey the conservation of energy as a test charge is moved through a closed loop over the boundary:

$$\overrightarrow{E_{t1}} = \overrightarrow{E_{t2}}$$

Hence due to the relationship  $\vec{J} = \kappa \vec{E}$ , the tangential current densities are:

$$\frac{J_{t1}}{J_{t2}} = \frac{\kappa_1}{\kappa_2}$$

This make intuitive sense when considering the following arrangement ( $\sigma = \kappa$ ):

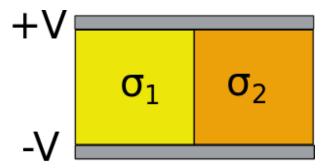

Thus:

$$\frac{\tan(\alpha_1)}{\tan(\alpha_2)} = \frac{E_{n2}}{E_{n1}} = \frac{J_{t1}}{J_{t2}} = \frac{\kappa_1}{\kappa_2}$$

The angle of "refraction" can be thought as caused by a "change in speed" intuitively (marching band analogy).

LTD: Confirm after reading Purcell The stronger electric field through the material with lower conductivity makes intuitive sense, as it would have a corresponding higher permittivity.

At the boundary with an insulator, current obviously cannot flow into it. This results in only the tangential current density being substantial. The electrical field therefore also stays in the wire. LTD: Simulate electric field staying within a wire.

LTD: Interesting paper to revisit https://www.ifi.unicamp.br/~assis/Found-Phys-V29-p729-753(1999). pdf

TODO: Surface charges in a wire, where is the electric field actually coming from?

# **Power**

The work done on a set of charges Q as they traveled through a potential difference U is:

$$W_e = UQ$$

Therefore power can be expressed as:

$$P(t) = \frac{dW_e}{dt} \Rightarrow UI$$
$$= I^2R = \frac{U^2}{R}$$

Power density is often a more useful value rather than the entire power lost to a component:

$$p_V = \frac{\Delta P}{\Delta V} = \vec{E} \cdot \vec{J}$$

# **Network Analysis**

When designing real world circuits, analysing them in terms of fields is usually cumbersome. Hence we rely on manufacturers providing accurate values for components and with the help of some abstractions, most circuits are designed with the integral values of Voltage, Resistance, Current, Capacitance etc.

Potential Difference and Current are scalar values represented by arrows in circuit diagrams, which point in the direction of the electric field (hence conventional current).

*Ideal Voltage Source* - Maintains a constant voltage between its terminals, current depends on the connected load. Vertical straight line in circuit symbol

*Ideal Current Source* - Maintains a constant current through the circuit, terminal voltage depends on the connected load. Horizontal straight line in circuit symbol

### Kirchhoff's Circuit Laws

Gustav Kirchhoff's discovered two laws that make analysing circuits possible without measuring every individual component.

1. The sum of currents entering a node in a circuit is equal to the current leaving that node:

$$\sum_{\text{Node}} I = 0$$

2. The directed sum of the potential differences around any closed loop (Masche) is zero:

$$\sum_{\text{Loop}} V = 0$$

This are due to the work done integral in a closed path and current density integral of a closed surface being 0 because of conservation of energy / charge.

#### **Resistor Networks**

Considering that the voltage across resistors **in series** is the sum of their individual voltage drops, the total resistance is simply the sum:

$$R_{\text{total}} = \sum_{i=1}^{n} R_i$$

The voltage across each path **in parallel** is the same but the total current is the sum of currents through each path. The total resistance is the reciprocal of the sum of reciprocals

$$R_{\text{total}} = \frac{1}{\sum_{i=1}^{n} \frac{1}{R_i}}$$

The total resistance of two resistors in parallel is therefore:

$$R_{\rm total} = \frac{R_1 R_2}{R_1 + R_2}$$

It is always smaller than the smallest resistance in a path, which makes intuitive sense as the charge carriers have more possible paths through that section of the circuit.

Conductivity is the reciprocal of resistance, hence:

$$G_{ ext{total}} = \sum_{i=1}^{n} G_i$$

### Voltage Divider

$$V_{\rm out} = V_{\rm in} \frac{R_2}{R_1 + R_2}$$

The ratio of voltages is the same as the ratio of resistances:

$$\frac{U_1}{U_2} = \frac{R_1}{R_2}$$


Wheatstone Bridge - Circuit used for accurately measuring resistance using 2 Potential dividers in parallel, of which 3 of the resistances are known, and a voltmeter in between is used to determine how imbalanced the divided voltage is.

When a load is connected to a voltage divider, it is effectively in parallel with the 2nd resistor and thus reduces the voltage at V\_OUT. Furthermore, there are very high power losses, which is why voltage dividers are usually used for measuring resistances rather than as voltage regulators (where switching supplies / OPAMPs excel).

### **Measuring Resistance**

When measuring circuits, voltmeters ideally have an infinitely high resistance and ammeters should have a resistance as close to 0 as possible. If the resistance of a measuring device is known, the error can be corrected or alternatively a more suitable resistance can be chosen for the expected voltage to prevent damaging the meter without massively affecting the measurement.

Regardless, it is best that the ammeter is included in the parallel path of the target resistor, so that its erroring resistance only exists in the denominator and leads to a smaller error than if it were connected outside of the voltmeters connection:

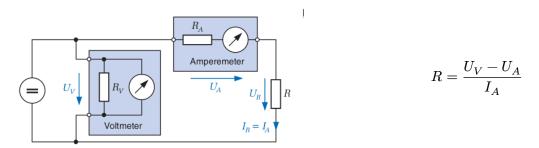

### **Real Power Sources**

Real world voltage and current sources cannot simply continue to output high power without losses. These losses can be modelled with an internal resistance  $R_i$ , over which voltage / current is lost.

*Real Voltage Source* - The internal resistance is modelled **in series** with the EMF source, meaning that the higher the current pulled by the load, the more power is lost internally; therefore a voltage source should ideally be used with low currents.

*Real Current Source* - Internal resistance is modelled **in parallel** (if it were in series the current source would simply increase the voltage accordingly to reach its target current) with the EMF source. The load should ideally have a low resistance, so the majority of the current flows through the parallel load path.

Voltage / Current sources can be converted between one another such that they have the same open terminal voltage and short circuit current - their behaviour is then identical.


Batteries connected in parallel can charge one another - they only discharge at the same rate if their internal resistances are identical.

#### **Load Power**

The **maximum (useful) power at the load** is transferred when the load and internal resistance are **the same**. This can be expressed as:

$$P_{L \max} = \frac{U_0^2}{4R_i}$$

The normalized load power (efficiency) against normalized current graph looks like this:

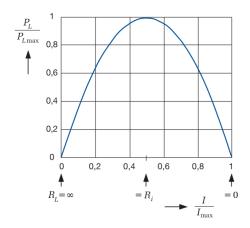

**Efficiency**, on the other hand, varies depending on the power source, as mentioned previously in the "optimal manner" in which they should be operated. It can be expressed as follows:

$$\eta = \frac{P_L}{P_{\mathrm{total}}} = \frac{\frac{R_L}{R_i}}{1 + \frac{R_L}{R_i}} \cdot 100\% = \left(1 - \frac{I}{I_{\mathrm{max}}}\right) \cdot 100\%$$

Due to this, power transmission systems use voltage in the kV range to minimise the current and therefore reduce energy losses.

# **Network Analysis Techniques**

Various techniques may be employed to analyse more complicated circuits, either manually or by a computer.

### Thevenin's / Norton's Equivalents

"Set to zero"

- Voltage Source: Replace with a short circuit and the internal resistance if applicable; no voltage can be lost over an ideal short circuit
- Current Source: Replace with open terminals or the internal resistance in series with the original terminals, no current can flow through open terminals


*Thevenin's / Helmholtz's Theorem* - Any linear circuit between two terminals can be replaced with a single resistor and voltage source in series. The voltage can be calculated as the voltage between the two target terminals when no load is connected, the resistance is the resistance between the two terminals after setting every voltage / current source in between to zero.

*Norton's Theorem* - It can be replaced by a single current source and resistor in parallel. The current can be found by shorting the target terminals and the resistance is calculated in the same process as the Thevenin equivalent.

These techniques can be used fundamentally to convert between a voltage and current source.

### Y- $\Delta$ Transform

Complicated resistor networks can be simplified with help of the so called Y- $\Delta$  Transform.

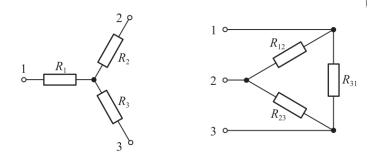

Durch entsprechende Vertauschung der Indizes erhalten wir die Zusammenhänge

$$R_{1} = \frac{R_{31}R_{12}}{R_{12} + R_{23} + R_{31}}, \qquad R_{2} = \frac{R_{12}R_{23}}{R_{12} + R_{23} + R_{31}}, \qquad R_{3} = \frac{R_{23}R_{31}}{R_{12} + R_{23} + R_{31}}$$
(3.59)

für die Umwandlung der Dreieckschaltung in die Sternschaltung. Die Auflösung der Gleichungen (3.57) nach den Widerständen der Dreieckschaltung liefert die Zusammenhänge

$$R_{12} = \frac{R_1 R_2 + R_2 R_3 + R_3 R_1}{R_3}, \quad R_{23} = \frac{R_1 R_2 + R_2 R_3 + R_3 R_1}{R_1}, \quad R_{31} = \frac{R_1 R_2 + R_2 R_3 + R_3 R_1}{R_2}$$
 (3.60)

für die Umwandlung der Sternschaltung in die Dreieckschaltung. Formuliert man diese Gleichungen für die Leitwerte um, dann ist der Aufbau der Gleichungen analog zu den Beziehungen (3.59)

$$G_{12} = \frac{G_1 G_2}{G_1 + G_2 + G_3}, \quad G_{23} = \frac{G_2 G_3}{G_1 + G_2 + G_3}, \quad G_{31} = \frac{G_3 G_1}{G_1 + G_2 + G_3}.$$
 (3.61)

# **Superposition Principle**

Like many natural phenomena, voltage and current in a linear circuit can be determined by superposing (summing) the individual contributions of each power source over a particular branch. This is not applicable to power, which is a quadratic equation when expressed only in terms of current / voltage.

- 1. Choose the power source to analyse and set all other power sources to zero as in the Thevenin equivalent.
- 2. Express voltage / current of the target branch(es) in terms of the power source's voltage / current.
- 3. Analyze all remaining power sources' contributions and sum them all together to calculate the total voltage / current across the branch.

### **Linear System of Equations**

Thanks to Ohm's law, we can reduce the number of unknowns across a component to 1 (resistance is a constant of proportionality) as current and voltage can be determined from one another.

*Branch* - Components connected in series between two nodes. These also have 1 unknown (either current or voltage) as they share the same current.

This leads to a general method for finding voltage and current in a linear circuit using a linear system of equations, which can be solved efficiently by computers with methods covered in linear algebra.

A circuit with z branches needs at least z linearly independent equations to solve the unknowns, which can be found using Kirchoff's circuit laws.

- 1. The circuit must firstly be redrawn without components, rather a connection of branches (which may contain several components in series) and nodes.
- 2. A direction must be chosen for current flow and voltage drops. This can often be predicted correctly but is not an issue if incorrect, as a negative value will simply be calculated. It **must** however be used **consistently**.
- 3. For a circuit containing k nodes, k-1 linearly independent equations can be found where the current is equal to 0 (Kirchhoff's current law).
- 4. The remaining z k 1 equations can be found using the voltage drops around a loop (equal to 0). Linearly independent equations can be ensured by "excluding" a particular branch after an equation for it has been included, forcing a new branch to be included to assemble the next equation.
- 5. The voltage drop equations can then be expressed in terms of resistance (as coefficients) and current, leading to a square, regular system of equations ready to be solved!

# **Current Carrying Mediums**

Leading from the definition of electrostatic potential, 1 Coulomb of charge accelerated by a voltage drop of 1V through a vacuum (0 resistance) gains 1 Joule of energy. Although this is the standard unit for energy, it is unconvenient when working with individual particles.

Electronvolt - A unit of energy useful for systems at the atomic scale. 1 eV is the kinetic energy gained by an electron accelerated by a potential difference of 1V through a vacuum. It is equal to  $e \cdot 1J = 1.602... \times 10^{-19}$  Joules.

Anion - Negatively charged particle

Cation - Positively charged particle

Anode - Attracts anions; positively charged

Cathode - Attracts cations; negatively charged

#### Vacuum

Charges can be accelerated through a vacuum by applying an electric field. Considering two oppositely charged plates connected to a voltage source U at distance d between each other with a vacuum as the dielectric (simple capacitor), the electric field between the plates is homogenous:

$$\vec{E} = \frac{U}{d}$$

Of course, electrons cannot simply leave the negatively charged plate unless field, thermionic or photoelectric emission occurs (see fundamentals/physics). However, assuming a freed electron starts at the negative plate, the constant acceleration in the direction of the positive plate it experiences is: is:

$$a = \frac{eU}{m_0 d}$$

Its velocity at any point in time is simply v=at, the displacement is:

$$s = \int_0^t v dt = \frac{eUt^2}{2m_0 d}$$

The velocity at any displacement s is:

$$v(s) = \sqrt{2U \frac{e}{m_0} \frac{s}{d}}$$

Small potential differences can already lead to huge velocities so the increase in relativistic mass must be accounted for:

$$\begin{split} m &= \gamma m_0 \\ &= \frac{m_0}{\sqrt{1-\frac{v^2}{c^2}}} \end{split}$$

# **Space Charge**


When considering the flow of a continuous current through a vacuum (or other dielectrics where this effect is most noticable), many electrons slowly start to be accelerated near the surface of the cathode. This "cloud" of electrons slightly reduces the resulting electric field at the surface from which they left, slowing down the emission of more electrons and thus the current, making this a significant issue for vacuum tubes and particle accelerators.

This can however be overcome by a high enough voltage, which accelerates the cloud away allowing more current to flow. This non linear relationship can be expressed as (Child's Law):

$$I = \frac{4}{9} \frac{\varepsilon_0 A}{d} \sqrt{\frac{2e}{m_0}} U^{\frac{3}{2}}$$

#### **TODO:** Derivation

Unless extremely high voltages are applied, field emission doesn't take place. Other emission mechanisms, such as thermionic emissions, lead to a relatively constant rate of emission and therefore "maximum" current called the saturation current.

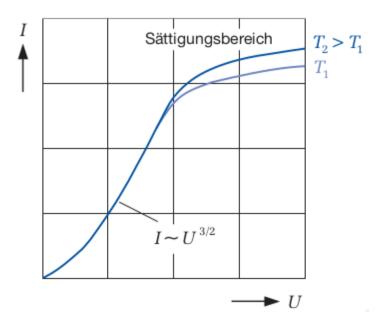

If the voltage is applied in the opposite polarity (and the emission mechanism stays the same), no current can flow (unless the voltage is high enough for field emission to take place). This is the working principle of a vacuum tube as a diode (Fleming valve).

#### Gases

A gas between electrodes can act as a resistance and / or additional charge carriers (ionised gas molecules).

*Electrical Breakdown* - When a material, which is usually non-conductive, becomes conductive under the influence of an electrical field or an intense electromagnetic wave.

In the case of gases, an electric field itself can cause already existing ions in the gas to further ionise other atoms through collisions cascading to create plasma (a fundamental state of matter, containing a large portion of ions), which is extremely conductive. This is called electrical arcing. In air this occurs around a voltage of  $3kVmm^{-1}$ .

Usually we want to avoid arcing, as it causes damage to electrodes and wastes energy. However, this phenomenon is useful in welding and electrical discharge machining.

*Selbständigen Leitung* - Electrical breakdown occurs and a gas becomes conductive, only caused by the electrical field itself.

*Unselbständigen Leitung* - Electrical breakdown caused by external light / heat or ions are introduced by a radioactive source. This can often lead to a maximal saturation current.

Whilst the electrical field and current are directly proportional, this is known as Ohmic conductance. This is however often not the case in gases, for example when a current leads to an increase in heat and subsequently collisions = resistance. Alternatively this can lead to more ionising collisions and increased conductivity.

# Liquids

Pure water contains no ions and is therefore a perfect insulator, sometimes used directly on top of electronics for cooling purposes.

*Electrolytic Dissocation* - Adding ions such as salt (NaCl) to water to make it more conductive, creating a good electrolyte.

The unit Ampere was defined in terms of the amount of silver transported during a period of electrolysis with specific chemicals in the past.

#### Faraday's Law of Electrolysis

Mole - The base unit for amount. 1 mole is defined as the number of atoms in 12 grams of Carbon 12 - the most stable and abundant isotope; this amounts to  $6.022 \times 10^{23}$  atoms, also known as Avogadro's constant  $N_A$ .

Molar Mass - The relative mass per mole of a substance which can be found in the periodic table. This value can be summed for finding the molar mass of molecules, for example  $16+2\times 1\approx 18M$  is the molar mass of water. The mass can then be found by multiplying by the molar mass constant  $M_u\approx 1\times 10^{-3}~{\rm kg~mol^{-1}}$ . Therefore water has the mass  $18\times M_u\approx 18~{\rm grams~mol^{-1}}$ .

Faraday expressed the mass of ions with relative charge z and molar mass  $M_r$  deposited / liberated at a cathode / anode during electrolysis as the following equation:

$$m \propto Q$$
 
$$m = \frac{M_r M_u}{ze} Q = \frac{M_r M_u}{ze} It$$

 $A_r u = M_r M_u$  if question given in these units

Where the constant of proportionality is called the *electrochemical equivalent* and is characteristic for a given substance.

This can be rearranged to compare the mass of ions exchanged when their charges are equal (often the case in electrolysis):

$$\frac{m_1 z_1}{M_{r1}} = \frac{m_2 z_2}{M_{r2}}$$

Electrolytes are usually ohmic in nature and the current for an electrolyte with cation / anion volume density  $\eta$  can be expressed as:


$$I = \eta z e A \big( \big| v_+ \big| + |v_-| \big)$$

This can be used to derive the resistance and conductivity as well.

Temperature usually has a negative coefficient to resistance, unlike in metals.

#### Semiconductors

Semiconductors like silicon are arranged in a crystaline structure, due to their even number of valence electrons (usually 4):

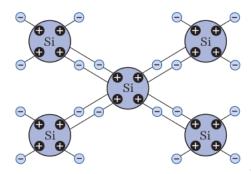

Due to this structure, valence electrons in semiconductors effectively belong to two atoms at once.

*Conduction Band* - Electrons can be excited to a higher conduction band where they are free to move throughout the material and conduct electricity.

*Band Gap* - The range of energy between the valence band and conduction band in different materials. This varies and determines a materials conductivity. In electrical conductors this gap does not exist and the valence electrons are always in the conduction band, in conductors it is relatively small and they can be influenced to become better conductors / insulators, for example through temperature.

*Rekombination* - When a hole is filled by an electron. This occurs at a relatively constant rate in semiconductors which can be controlled by temperature.

*Donators* - Atoms with 5 valence electrons, used to n-dope a semiconductor and increase the number of negative conductors. Examples: Arsenic, Antimony, Phosphor

*Acceptors* - Atoms with 3 valence electrons, used to p-dope a semiconductor and increase the number of holes. Examples: Gallium, Indium, Aluminium


*Majority Conductor* - Either holes or electrons, which is mainly responsible for carrying electric current in a doped semiconductor.

### p-n Junction


When these two doped regions are connected, excess electrons cross the border to fill holes, resulting in a steady state called the depletion region. This however also leads to two opposite

charge distributions at the border due to the remaining donators / acceptors, which in most semicondctors has a voltage of 0.8V between them (threshold voltage).

When a voltage source greater than the threshold voltage is connected to the diode with the positive terminal to the p-type end, the depletion region is overcome and current flows.

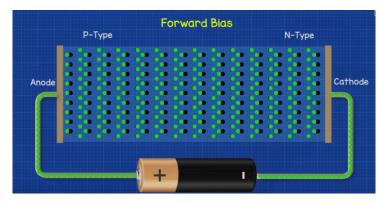

The opposite of this is known as reverse bias and leads to no current flow:

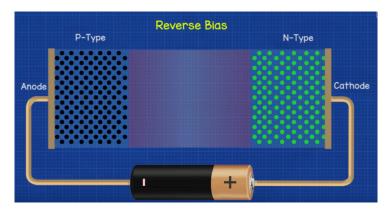

This is the working principle of diodes. High enough voltages can lead to electrical breakdown and destruction of the diode.

# Magnetism

The magnetic properties of certain iron ores (permanent magnets) were already noticed long before the electrostatic force. Historically magnets have been used for:

- Compasses for navigation purposes due to the Earth's magnetic field
- Extracting shards of metal in medical treatments

Ferromagnetism - Certain metals are affected by magnetic fields and have the capability to become magnetised. TODO: Why, magnetic dipoles arising from electron spin? LTD: Mention other types of magnetism

# **Magnetic Dipoles**


Every permanent magnet must have a north and south pole - if it is cut a new pair of poles simply forms. Like poles repel and opposite poles attract, just like charges.

However unlike charge, a monopole has never been observed and the possibility of its existence is uncertain (theoretical physics).

Magnetic fields can be observed using ferromagnetic shavings or a compass, which are also magnetic dipoles and therefore align themselves tangentially along field lines. This also implies that

they slightly affect the magnetic field itself, meaning smaller shavings are more accurate for visualizing the field. Ferrofluid is a good alternative.

By convention, magnetic field lines around dipoles point from north to south:

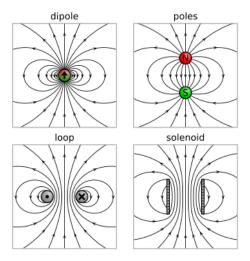

# **Magnetic Fields**

Just like the  $\vec{E}$  and  $\vec{D}$  field in electrostatics, there are two magnetic vector fields used in calculations:

	Magnetic Field Strength	Magnetic Flux Density
Symbol	$ec{H}$	$ec{B}$
Units	$\frac{A}{m}$	Tesla, $\frac{N}{Am}$
Intuition		Used in the Lorentz Force Law to calculate the force arising on charges moving through the space in which the field is present.

The two fields are related between another through:

$$\vec{B} = \mu_0 \vec{H}$$

# **Magnetic Flux**

This is the total magnetic flux density through a surface:

$$\Phi = \iint_{\varLambda} \vec{B} \cdot d\vec{A}$$

Its unit is Weber (Wb) and it will be useful later in Faraday's Law of Induction.

# Gauss's Magnetism Law


The magnetic flux through a closed (Gaussian) surface is 0:

Intuitively, it says that magnetic monopoles do not exist. This is one of Maxwell's Equations. TODO:

- magnetic permeability of vacuum
- How do electric and magnetic fields propogate through space? how are  $\mu_0\varepsilon_0$  linked?

# Ørsted's / Ampere's Circuital Law

In 1820 Hans Christian Ørsted discovered that a wire carrying an electric current induces a magnetic field around it. The direction of this field can be remembered using the right hand curl rule, where the fingertips represent the arrow heads:



This magnetic field:

- Lies in a plane perpendicular to the direction of the current
- Its strength is directly proportional to the magnitude of the current
- It's inversely proportional to the distance from the current

This phenomenon sparked a great deal of interest; Andre-Marie Ampere formulated the following fundamental law mathematically describing the magnetic field around the net enclosed current, known as his circuital law:

$$\oint_C \vec{B} \cdot d\vec{s} = \mu_0 \iint_S \vec{J} d\vec{S}$$
$$= \mu_0 I$$

- This applies to any closed curve, not just a circle
- The surface in question is the one binded by the closed curve
- The direction of the curve integral is determined by the above mentioned right hand rule.

TODO: Maxwell-Ampere law, what problems does it solve?


Durchflutung  $(\Theta)$  - Name for the sum of current flowing through a surface in Albach's book

### **Biot-Savart Law**

Although Ampere's Circuital Law provides us with a fundamental law, it is not very useful in practice unless certain symmetries arise. Biot and Savart determined the following formula for calculating the magnetic flux density at any arbitrary position vector  $\vec{r}$  around a current carrying wire:

$$\vec{B}(\vec{r}) = \frac{\mu_0}{4\pi} \int_C \frac{Id\vec{\ell} \times r'}{\left|\vec{r'}\right|^3}$$

Where  $d\vec{l}$  is a displacement vector along the wire and  $\vec{r'}$  is the vector from the current point in the wire to the point where flux density is being calculated.

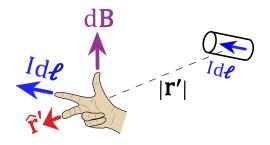

LTD: Is it possible to go directly from Ampere's Law to this? with the assumption that the curve is a perfect circle?

### **Infinitely Long Wire**


For a straight, infinitely long wire, this becomes the following field strength in cylindrical coordinates with the z axis lying along the wire:

$$\vec{B}(\rho) = \frac{\vec{e_{\varphi}}\mu_0 I}{2\pi\rho}$$

Where  $\rho$  is the distance from the center of the wire.


In case the magnetic field inside the wire (with radius a) is needed the following can be used:

$$\vec{B}(\rho) = \frac{\vec{e_{\varphi}}\mu_0 I \rho}{2\pi a^2}$$

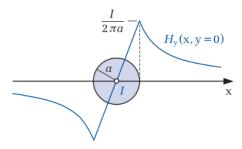

Note: The derivation of this is a good exercise, it can either be derived from symmetry and Ampere's law or directly from Biot-Savart's Law - do not forget the cylindrical coordinate "nudge" factor!

#### **Toroid**

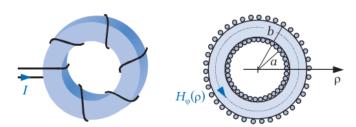


Considering a loop inside the toroid, the total current flowing through the surface enclosed by this curve for N windings is NI, therefore:

$$\begin{split} \int_0^{2\pi} \vec{e_{\varphi}} \vec{H}(\rho) \cdot \rho d\vec{\varphi} &= NI \\ 2\pi \rho \vec{H}(\rho) &= NI \\ \vec{H}(\rho) &= \frac{\vec{e_{\rho}} NI}{2\pi \rho} \end{split}$$

Outside of the toroid (either inside or outside the loop) the total current through a surface  $\Theta = 0$ , therefore the magnetic field is mostly 0. The small height of the toroid leads to a negligible magnetic stray field.

### Solenoid

A solenoid behaves like a dipole, making it useful for creating magnetic dipoles on demand:

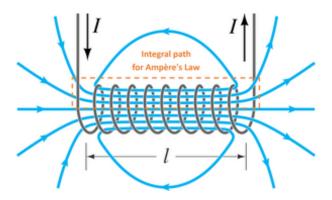

The homogenous magnetic field inside a solenoid is with length l is:

$$\vec{H} = \vec{e_x} \frac{NI}{l}$$


#### **Lorentz Force Law**

The total force acting on a particle with charge q moving with velocity v through a magnetic / electric field is:

$$\vec{F} = q \left( \vec{E} + \vec{v} \times \vec{B} \right)$$

This was first implied by Maxwell, then expanded by Oliver Heaviside and Lorentz. This is considered to be of equal importance as Maxwell's equations, as it links the electrostatic and magnetic fields.

Now I will consider the force due to the magnetic field alone  $\vec{F}=q\vec{v}\times\vec{B}$  (electrostatics already covered earlier) which only affects moving charges (because they themselves also generate a surrounding magnetic field). The resulting direction can be calculated using Fleming's left hand rule (mnemonic FBI):

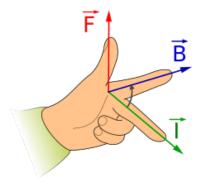

The law can be expressed in terms of current in a wire of length l:

$$\vec{F} = q\vec{v} \times \vec{B}$$
$$= \vec{I}l \times \vec{B}$$

The net force on a curved wire / varying current can be calculated by using an integral:

$$\vec{F} = \int_C Id\vec{l} \times \vec{B}(\vec{r})$$

This can be used to for example calculate that the net force on a current loop perpendicular to a magnetic field is 0, it's "stretched outwards" equally at every point.

By using the sin cross product identity, the scalar form of the law is:

$$F = BIl\sin(\theta)$$

Where  $\theta$  is the angle between the magnetic field lines and the direction of the current.

TODO:

• principle of how analog ammeters work

TODO: Why does the circular field get pushed up in a homogenous field? Explain bivector field and pseudovectors, why the magnetic lines make sense Reference answer: "The real reason is that the magnetic field is not a vector quantity. It's better thought of as a 'bivector': an oriented plane instead of an oriented line. From this perspective, the magnetic field does not point along a line, but rather curls around in planes, which makes the resulting force make much more sense.

However, people are more used to dealing with vectors, and in 3 dimensions there's only one vector perpendicular to a given plane, so you can always replace bivectors with 'pseudovectors' like what is done with the angular momentum and the magnetic field in 3d.

Once you want to consider more general situations, or have a less clunky mathematical picture though, then you can't just talk about vectors and the way the magnetic field is treated must change. Relativistic physics often forces people into this, but you don't need to invoke relativity to want to use a better mathematical formalism.

When one moves to relativistic physics, then one discovers that both the electric field and the magnetic field are bivectors, but the electric field spans a plane with one spatial and one temporal direction, whereas the magnetic field spans two spatial directions. The fact that space and time can be 'rotated' into eachother in relativistic physics typically leads us to abandon treating these as separate objects and instead talking about the Faraday tensor F which contains both the electric and magnetic fields in one object. "

TODO: How current carrying wires next to each other behave, include diagram, Ampere's force law

#### **Magnetomotive Force**

Just like electric potential difference, the force and work done on a hypothetical test North monopole by a magnetic field can be defined as:

$$\mathcal{F} = \int_{P1}^{P2} \vec{H} d\vec{s}$$

Magnetic potential is defined analogous to absolute electric potential with some point as a zero reference.

### **Magnetic Torque**

TODO: Torque on dipoles

# Magnetisation

# Relativistic Magnetism

TODO: Causes for magnetism: special relativity + electrostatic force / magnetic dipole momements

LTD: Faraday Tensor LTD: Derive Biot-Savart Law from Lorentz Transformation, Lorentz Force and Coulomb's Law

# **Maxwell's Equations**

Overview, differential form, curl, divergence etc, attempt to understand and derive notation + convert between integral and differential forms

https://www.youtube.com/watch?v=rB83DpBJQsE

Link to EM waves

Faraday's Law of Induction is coming soon :D