






octok elect	ronics	
Sheet: /		
File: Tuareg.	sch	
Title: Tua	reg	
Size: A2	Date:	Rev: 0.1
KiCad E.D.A. kicad 5.1.2-f72e74a84ubuntu18.04.1		ld: 1/8
10	11	<del></del>

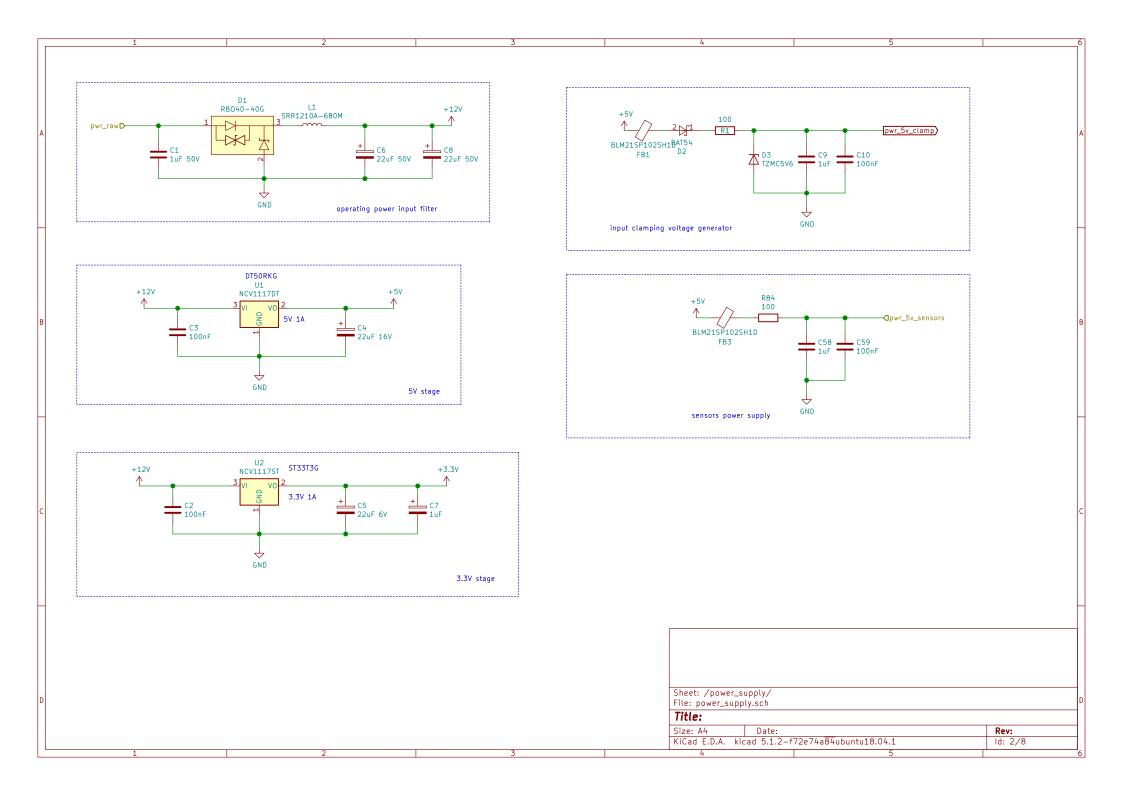


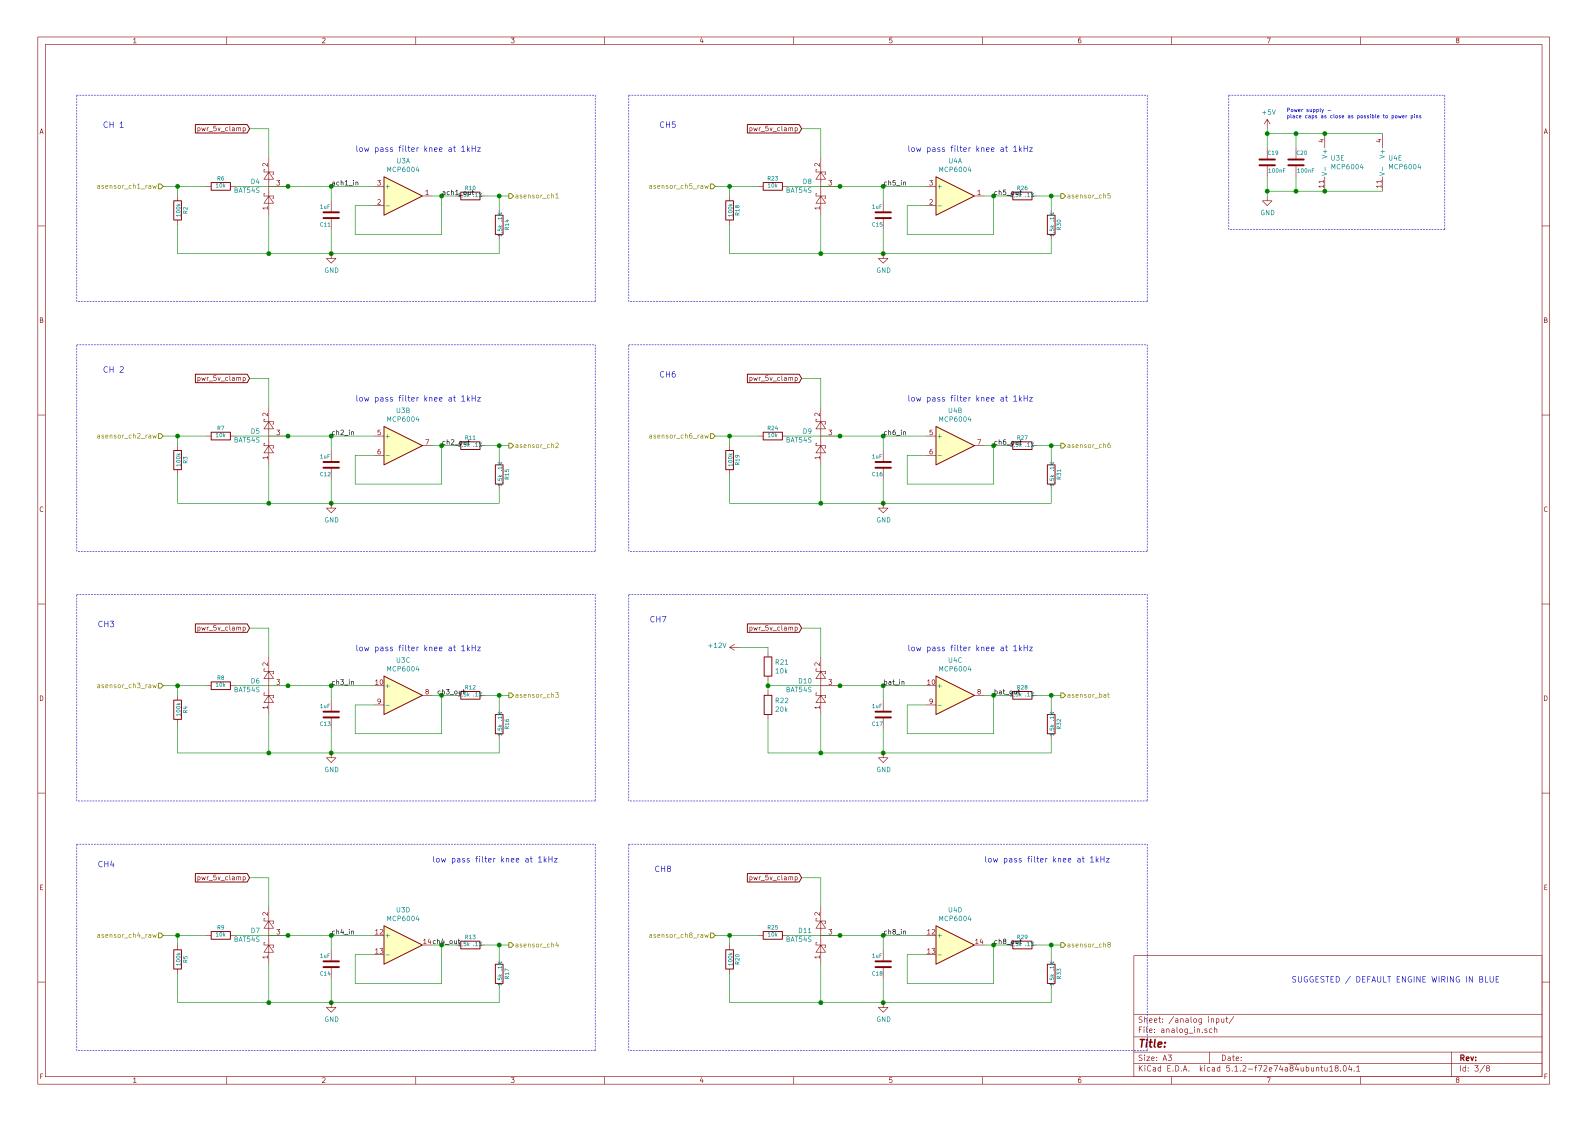


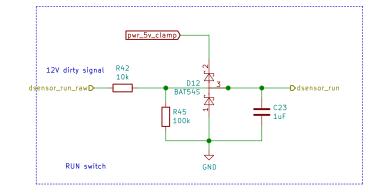


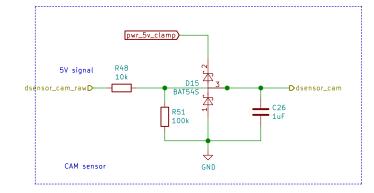


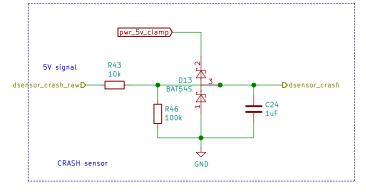


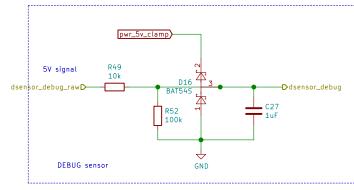


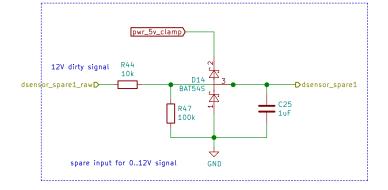


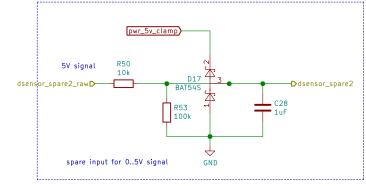

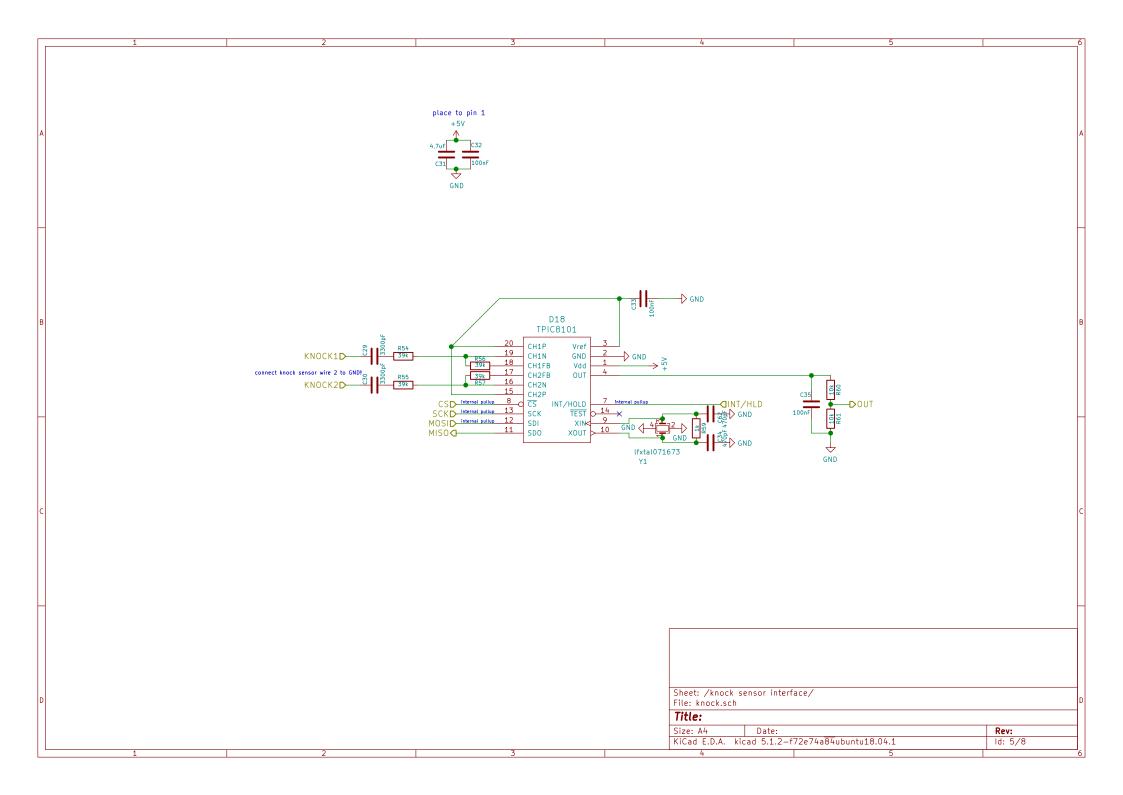


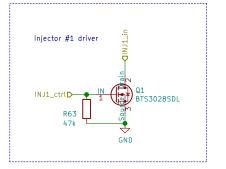


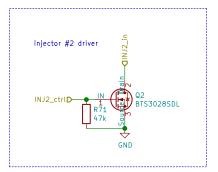


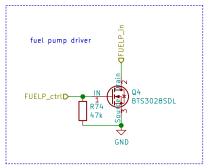


use parallel connections for high current connenctions!

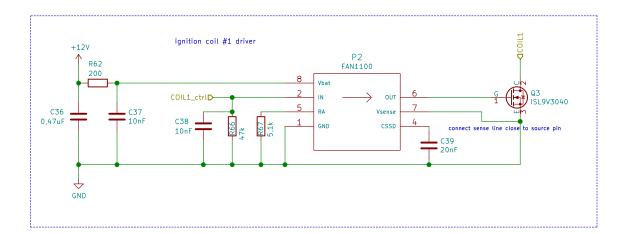

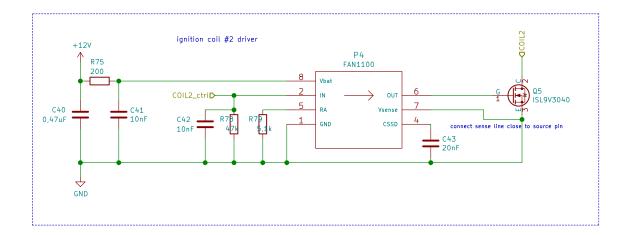

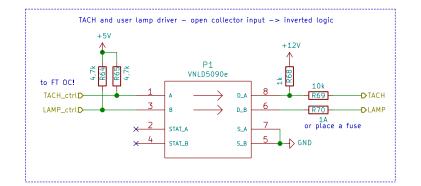

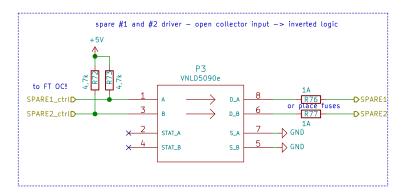

 Sheet: /actuators/


 File: actuators.sch


 Title:


 Size: A3
 Date:
 Rev:


 KiCad E.D.A. kicad 5.1.2-f72e74a84ubuntu18.04.1
 Id: 6/8


TODO: get sensor supply voltage tracking

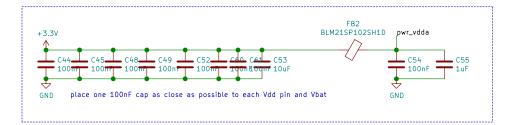

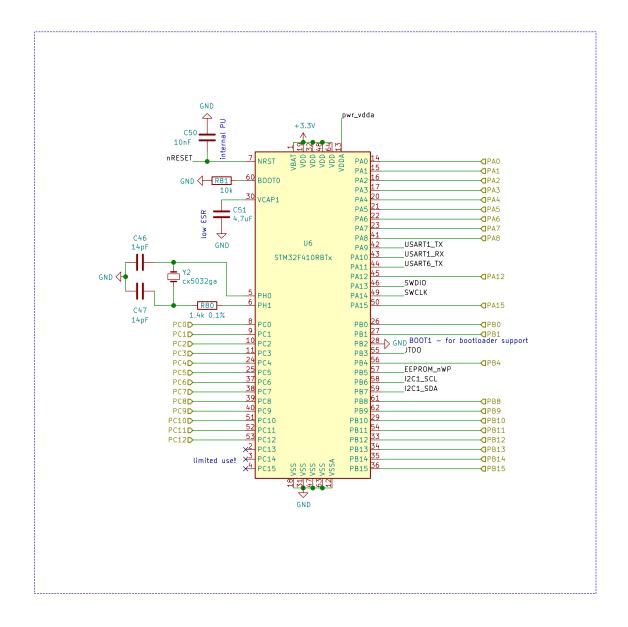

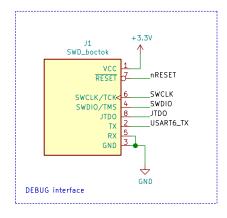

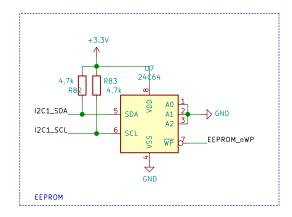

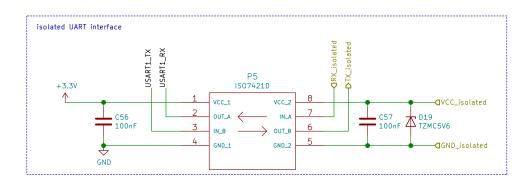

Sheet: /cpu/		
File: cpu.sch		
Title:		
Size: A3	Date:	Rev:
KiCad E.D.A. ki	cad 5.1.2-f72e74a84ubuntu18.04.1	ld: 7/8
	7	8

