

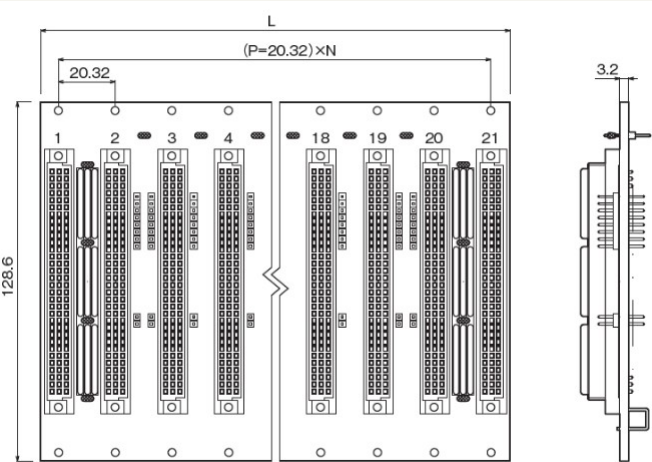
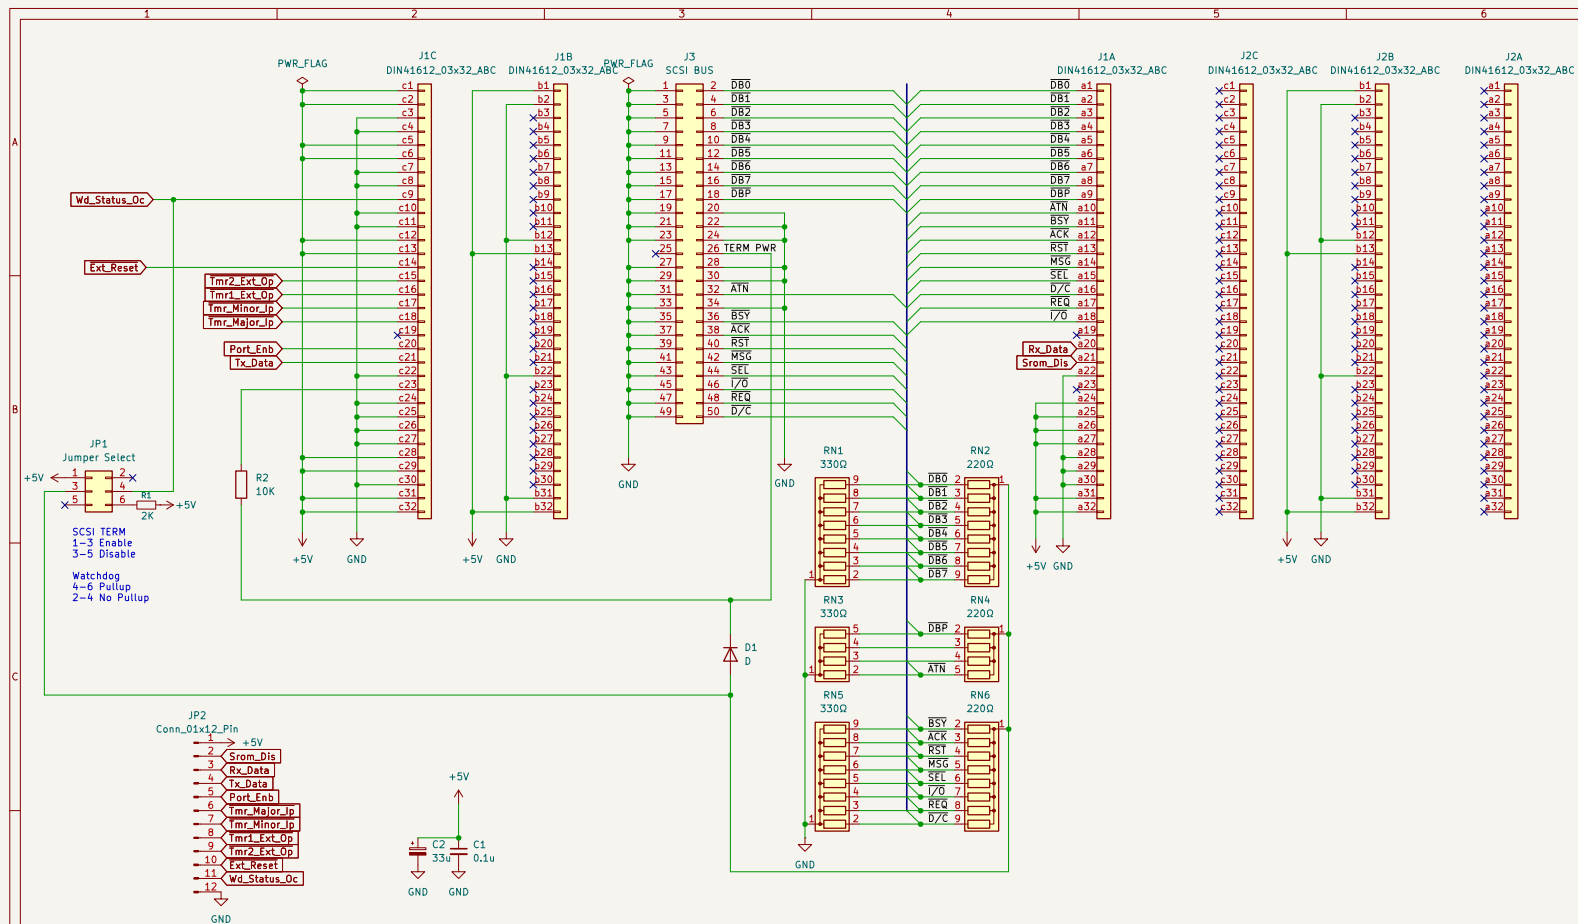


Figure 2-6 Breakout Module Jumpers

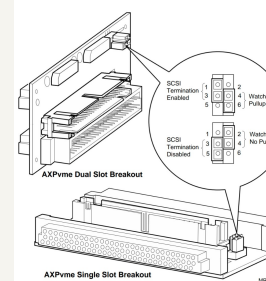


Figure 2-7 Connecting the SCSI Cable to the AXPvme Dual-Slot Breakout Module


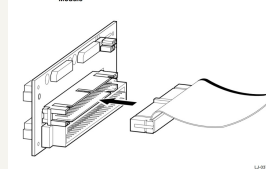


Figure 2-9 Installing the AXPvme Dual-Slot Breakout Module

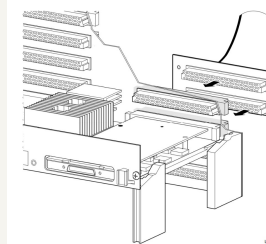

[SCSI commands]

- (Pin No. : Signal name@#)
- 1 : 3 : 5 : 7 : 9 : 11 : 13 : 15 : 17 : 19 : 20 : 21 : 22 : 23 : 24 : 27 : 28 : 29 : 30 : 31 : 33 : 34 : 35 : 37 : 39 : 41 : 42 : 45 : 47 : 49 : GND (Ground)
 - 2 : /DB0 (Data bus bit 0)
 - 4 : /DB1 (Data bus bit 1)
 - 6 : /DB2 (Data bus bit 2)
 - 8 : /DB3 (Data bus bit 3)
 - 10 : /DB4 (Data bus bit 4)
 - 12 : /DB5 (Data bus bit 5)
 - 14 : /DB6 (Data bus bit 6)
 - 16 : /DB7 (Data bus bit 7)
 - 18 : /DBP (Data bus parity)
 - 25 : nc (Not connected)
 - 26 : TERM PWR (Terminator power)
 - 32 : ATN (Attention indicator)
 - 36 : BSY (Busy signal)
 - 38 : ACK (Acknowledge)
 - 40 : RST (SCSI bus reset)
 - 42 : MSG (Message phase)
 - 44 : /SEL (SCSI select)
 - 46 : /IO (SCSI input/output)
 - 48 : /REQ (Access request)
 - 50 : /C/D (Control signals or data on the SCSI bus)

for DEC AXPvme230

kanpapa.com

Sheet: /

File: VME_axpvm230_p2_dual.kicad_sch

Title: AXPvme Double-Slot Breakout Module

Size: A3

Date: 2026-07-11

Rev: 0.1

KiCad E.D.A. 10.0.3

Id: 1/1