


Tutorial AIM-Spice MacOS

1. Descarcarea AIM-Spice varianta Windows:

<http://www.aimspice.com/>

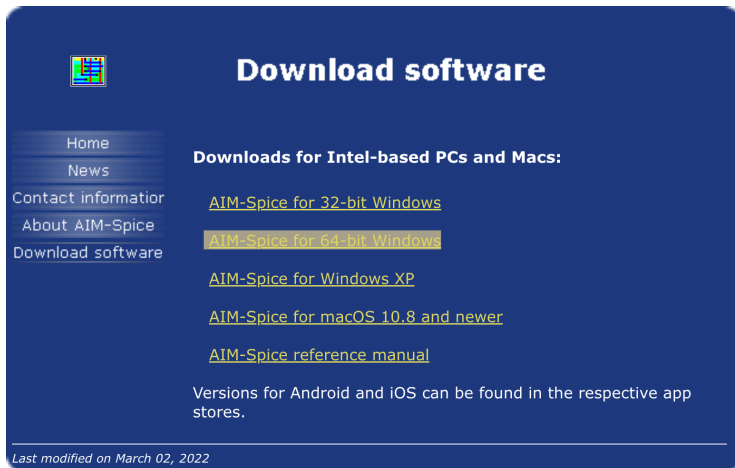

2. Dezarhivarea lui AIM-Spice:


Dati dublu click pe fisierul zip din folderul Downloads sau unde l-ati descarcat.


>		aimspice.windows.64bit.2020.07.22	34,9 MB	Folder
		aimspice.windows.64bit.2020.07.22.zip	33,6 MB	ZIP archive

3. Descarcarea si instalarea Porting Kit:


<https://www.portingkit.com/>

Descarcati varianta DMG.

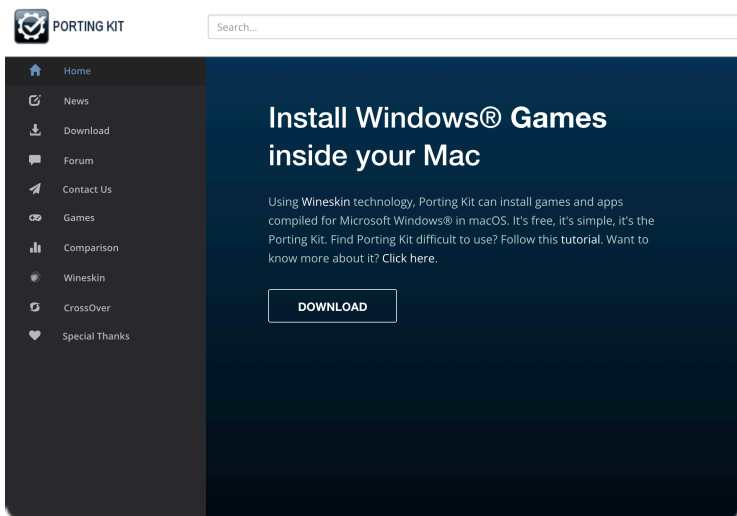

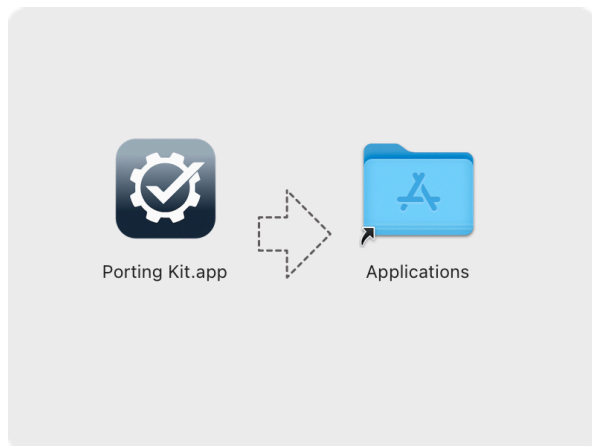


Mutati Porting Kitul in Applications folder

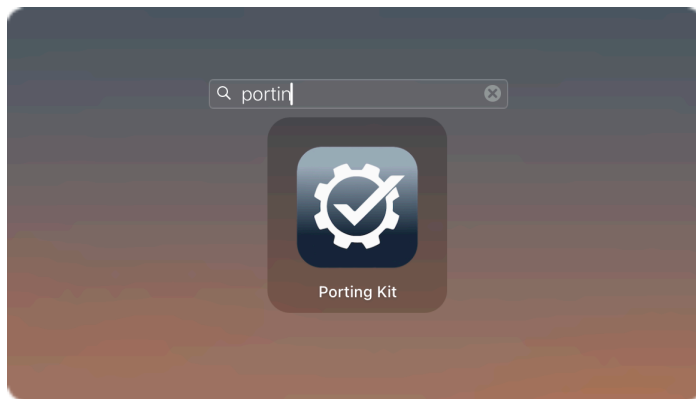


Dati launch la program din Launchpad sau Spotlight

4. Importarea AIM-Spice in Porting Kit:

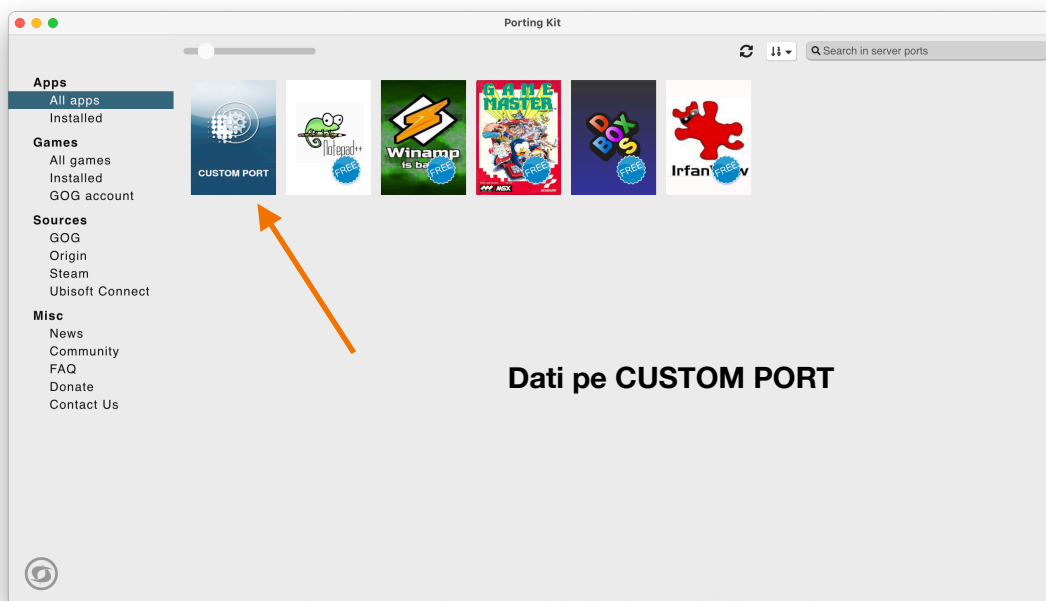




Dati pe CUSTOM PORT

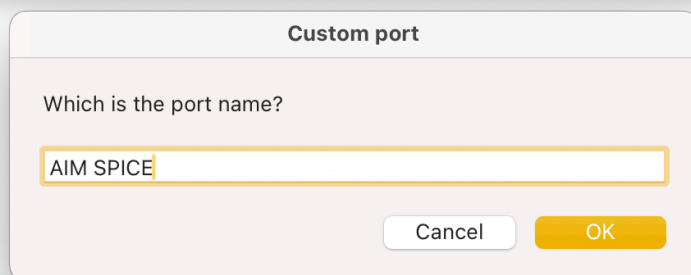

Puneti numele "AIM Spice"



In wizzardul care apare, dati next si lasati default ca in screenshot la Advanced Settings:

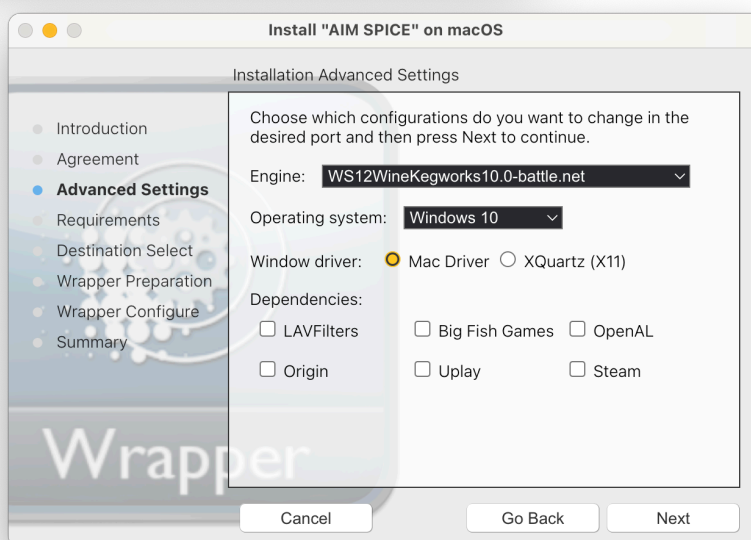

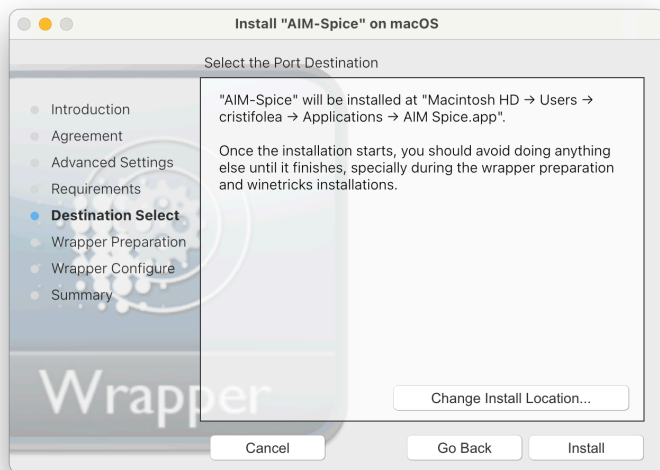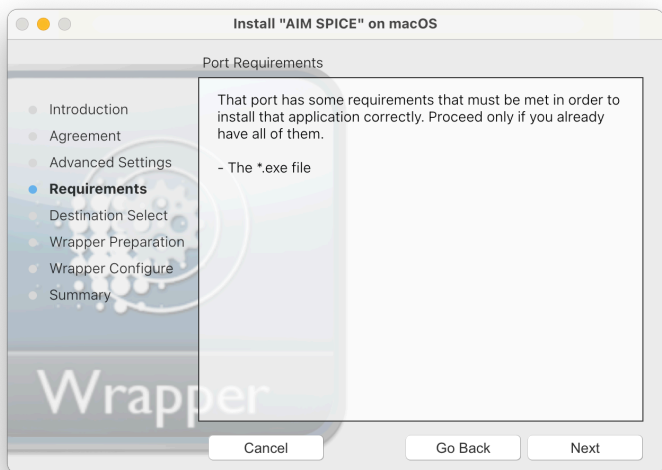



Dati next la ambele

La wrapper preparation, alegeti setup.exe din fisierul unzipped de la 2.

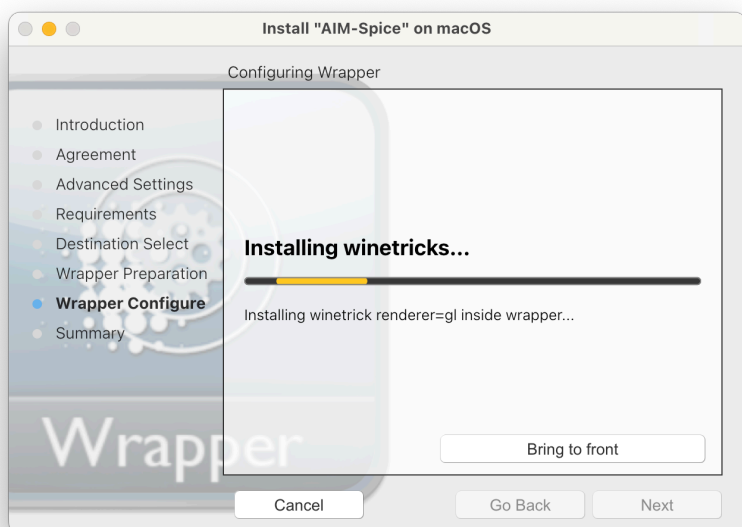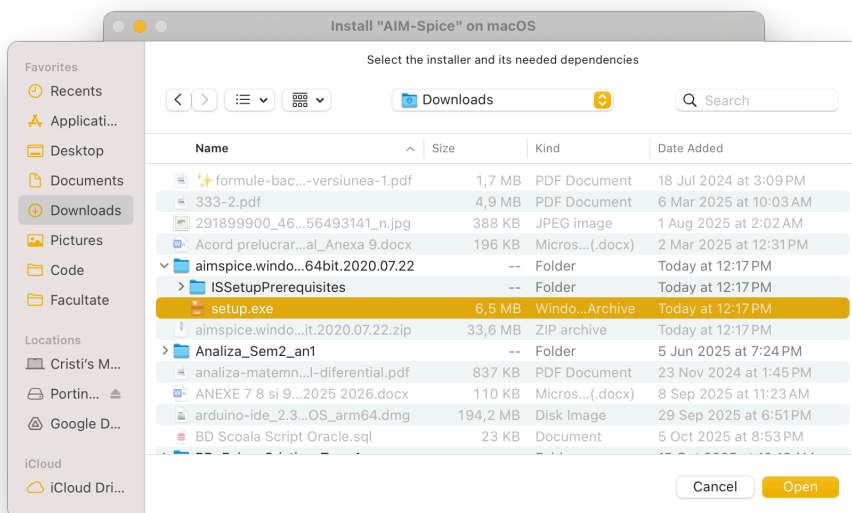



Poate dura cateva minute

In interfata asta, dati install normal.
Aceste doua packageuri vor da eroare, dar continuati fiindca nu avem nevoie de ele

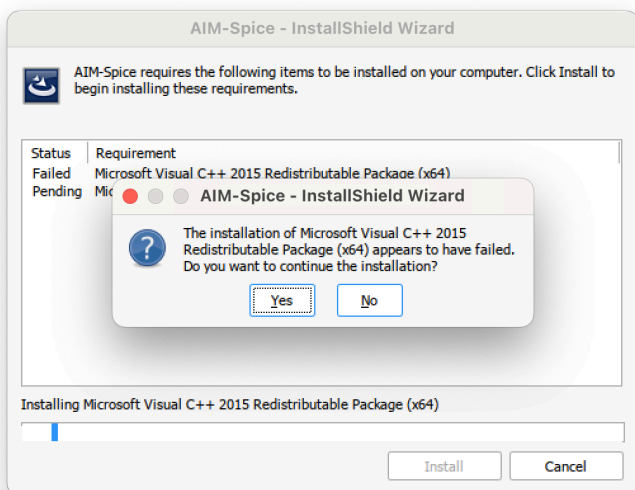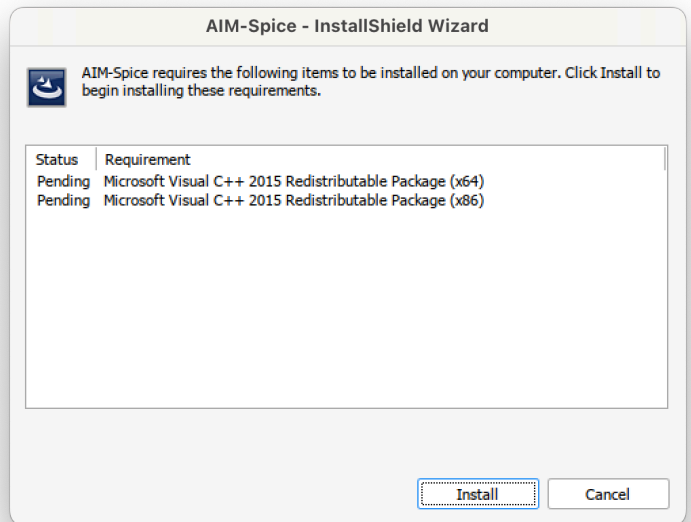



Aici dati "Yes" la ambele

Dati Next la toate.

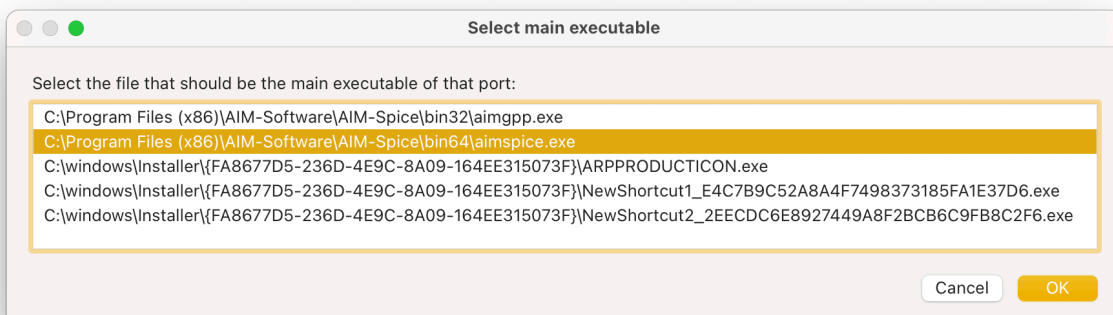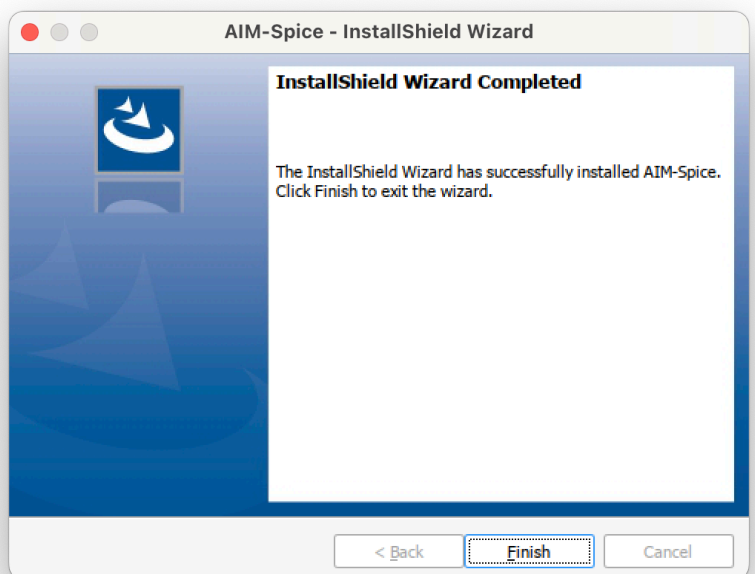

Alegeti ca in screenshot


Alegeti sa vedeti locul instalarii

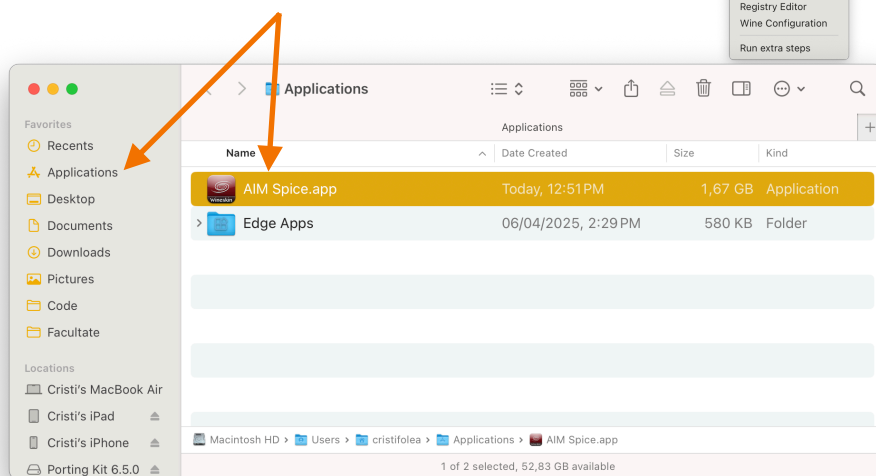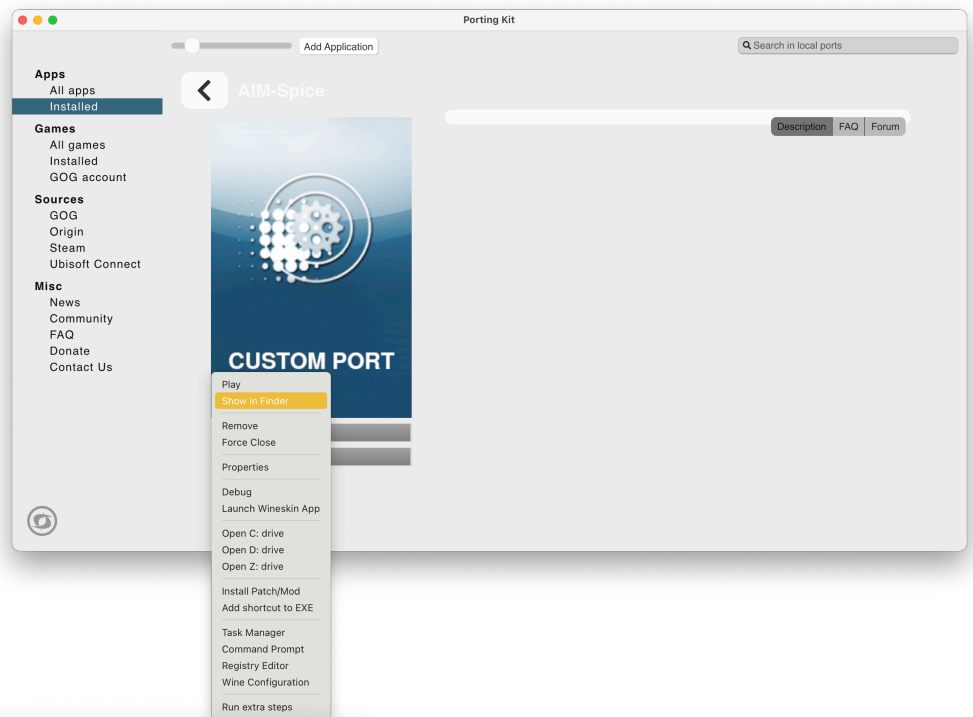

Mutati AIM Spice in Application folder din stanga

5. Configurarea AIM Spice:

Dati launch la AIM Spice din Launchpad sau Spotlight folosind cmd+space

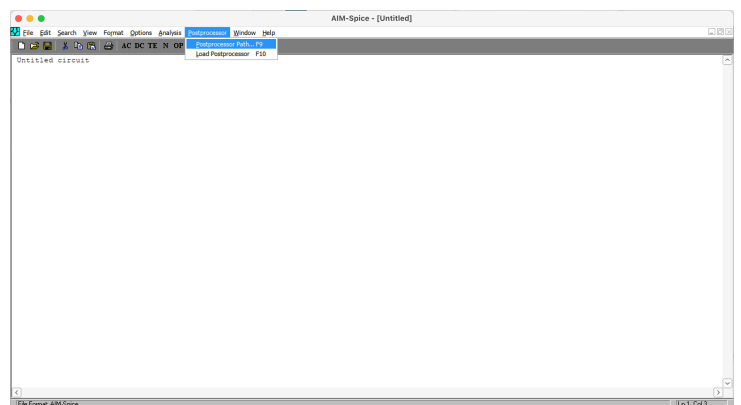

Postprocessor Path... F9
Load Postprocessor F10

La menu bar, la postprocessor, dati postprocessor path

**Schimbati in loc de bin64 sa fie
bin32**

