



Power Supply

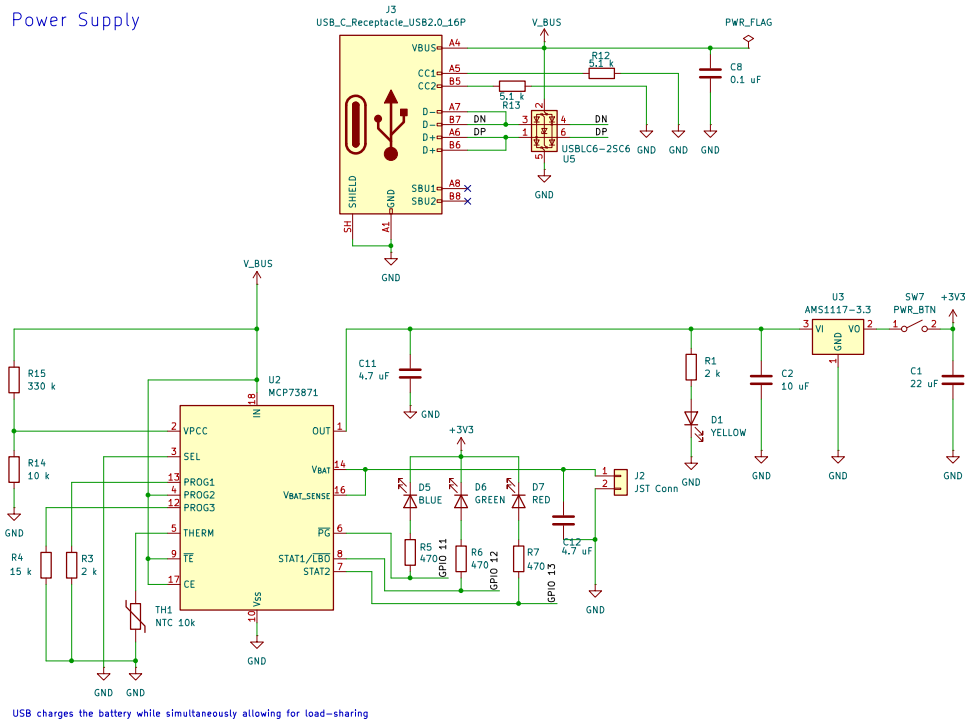


USB charges the battery while simultaneously allowing for load-sharing


Tempo Adjuster




Time Signature Toggler





Volume Adjuster




Pause/Play Switch

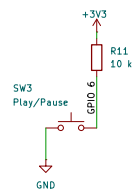


ESP32 S3

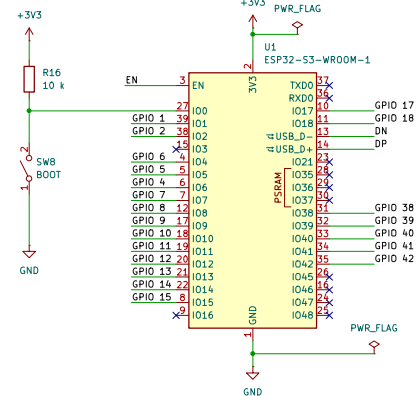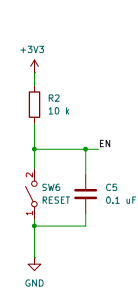


Speaker

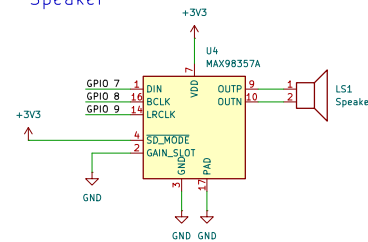

TFT Display

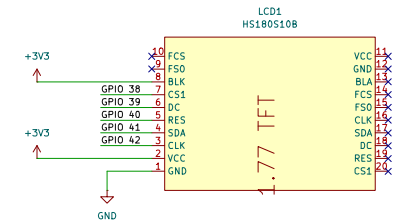

connect to one side only
not using fent chip



from: <https://docs.rs-online.com/fe1b/0900766b80d77771a.pdf>

Board Status	STAT 1 (TRD (GREEN))	STAT 2 (RED)	BC (BLUE)
Shutdown	OFF	OFF	OFF
No Input Power	OFF	OFF	OFF
Charging	ON	OFF	ON
Charge Complete	OFF	ON	ON
Temp/Timer Fault	ON	ON	ON
Low Battery	ON	OFF	OFF
No Battery Present	OFF	OFF	ON

V_BAT = 1S 3.7V LIPO battery
V_BUS = 5V from USB
V_SYS = 3.3 V for ESP32
V_INT = 5V from MCP73871 (eventually changes to +3V3 at LDO)

Sheet: /
File: Metronome.kicad_sch
Title:
Size: A3 Date: Rev:
KiCad E.D.A. 10.0.1 Id: 1/1