


New Split Charging Unit Wiring Installation




Isolate the 12V battery

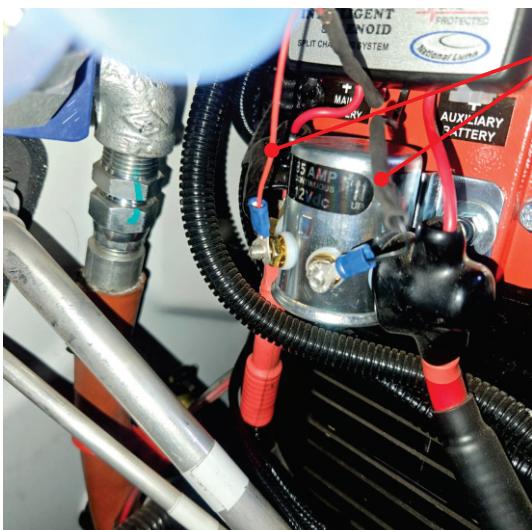


Remove smart intelligent positive and negative wires from split charging body solenoid and isolate positive and negative wires.



Remove plastic dash panel next to the hour meter.

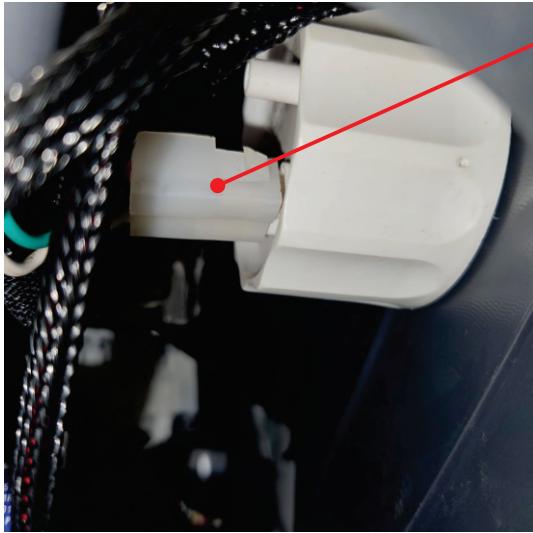


Locate hour meter power connecter.

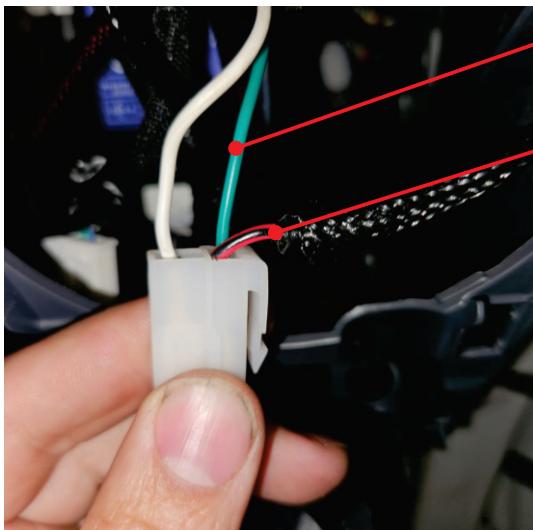


12V Positive wire

Connect new body solenoid positive wire (supplied in kit) to the hour meters positive wire.

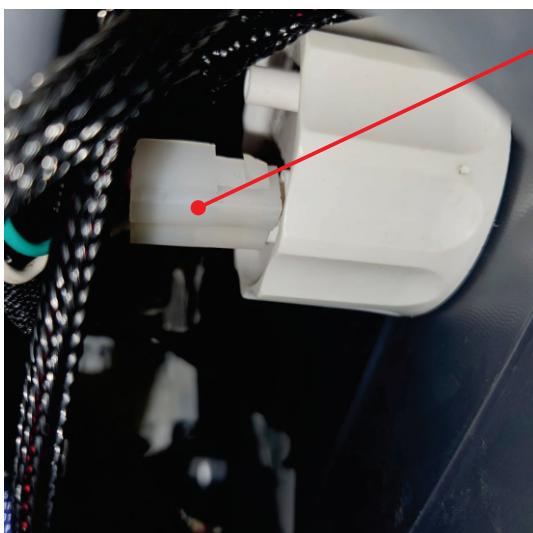

Reconnect hour meter.

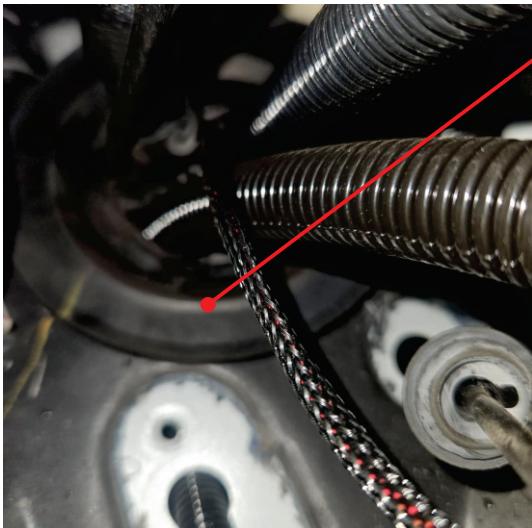


Root new body solenoid positive wire through vehicle rubber grommet, located underneath the dash board.



Replace dash plastic cover.



Connect new body solenoid positive wire to body solenoid.

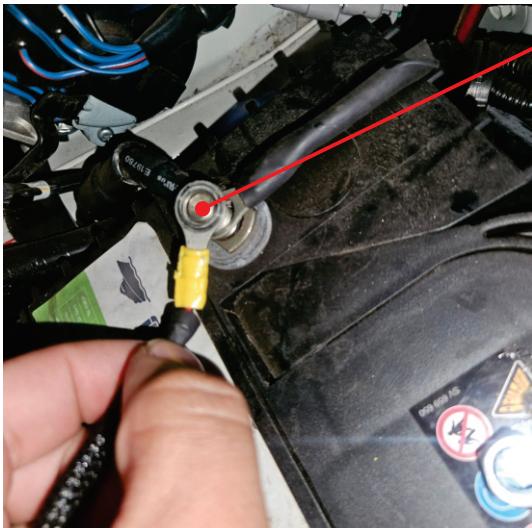

Connect body solenoid negative wire (supplied in kit) to auxiliary battery negative terminal.



Connect body solenoid negative wire to body solenoid.

NB: Ensure all wires are neatly strapped and away from any moving parts and any heat sources.