

QUICK REFERENCE GUIDE


T35u &
T35u-RW

GETTING STARTED

Confirm that the bridge is off before beginning.

1. Connect either a IDE source drive **1**, or a SATA source drive **2** **3** to the T35u/T35u-RW
2. Connect the bridge to the host computer using the host USB port **4**
3. Connect the power supply to the bridge's DC In **5**
4. Press the power button  and begin operation

TABLEAU FORENSIC SATA/IDE BRIDGE

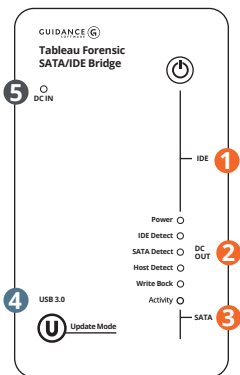

Before you remove the connected SATA/IDE drive or power down the T35u/T35u-RW, safely eject or unmount the device on your host computer

CONNECTION RECOMMENDATIONS

For SATA Drive

Use a Tableau SATA Drive Power cable [TC5-8-R2] & SATA Data cable [TC3-8]

For IDE Drive

Use a Tableau IDE Drive Power cable [TC2-8-R2] & IDE Data cable [TC6-8]

**For additional SATA and IDE connection options, reference Cable & Power Supply Compatibility Chart*

For the Host Connection


Use a Tableau USB 3.0 cable [TC-USB3]

For Power (DC In)


Use a Tableau power supply [TP5 or TP2]

DIP SWITCH SETTINGS

1 Locate breakaway plastic & remove

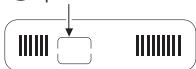

2 Adjust DIP switches for intended use

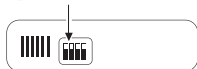

SWITCH 1	ON = Read/Write 
	OFF = Read-Only

SWITCH 2	ON = Hide Write Errors
	OFF = Report Write Errors

SWITCH 3	ON = Hide Write Protect
	OFF = Report Write Protect

SWITCH 4	No Function
-----------------	-------------

**Default setting is OFF for all switches, except for switch 1 on the T35u-RW*

DEDICATED READ/WRITE OPERATION

The T35u-RW is identical to the T35u, except that the T35u-RW is pre-configured for read/write operation. The yellow-case highlights the fact that it is a read/write device to help eliminate the potential for misuse during forensic investigations.

FIRMWARE UPDATES

Update Mode Button – To place the T35u into firmware update mode, hold the update button down when powering on the device.

Guidance Software releases free firmware updates for Tableau products through the Tableau Firmware Update (TFU) utility. Reference the TFU webpage for more information:

www.guidancesoftware.com/tableau/tfu



For additional product information, visit:
www.guidancesoftware.com/tableau

For support:

Toll Free **+1 (866) 973-6577**

Main **+1 (626) 229-9191**

tableausupport@guid.com