
SCHLETTER The Solar Mounting Group

CompactVario

In addition to the following mounting instructions, additional information may be found for individual components and systems at www.schletter.us. Brochures, checklists, installation videos and additional contact information can be found on this site.

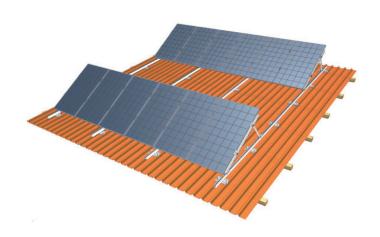

System Overview


Due to the roof pitch on classic trapezoidal sheet metal roofs, it is recommendable to elevate the modules according to the optimum irradiation angle of the sun. In order to optimize module performance as well as provide proper load distribution a combination of flat roof attachments, module beams, and elevation triangles are installed, resulting in the CompactVario system. By selecting CompactVario, the system is individually tailored to the site installation.

The following mounting suggestions apply for a trapezoidal sheet metal roof inclined to the south with a substructure (purlins) at a right angle. In the following example the framed modules are elevated with sufficient module distances and desired inclination with shade considerations incorporated. In this example, the Schletter CompactVario system is combined with Schletter's FixT™ trapezoidal sheet metal attachment component.





Installing the FixT

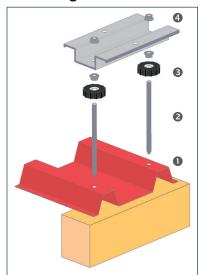

FixT on wooden purlins

OPre-drill attachment locations

Top of corrugationwooden purlinswith hanger bolts M12 12mm8.5mm / 0.33"with hanger bolts M10 10mm7.0mm / 0.28"with hanger bolts M8 8mm5.6mm / 0.22"

2 Insert hanger bolts

3 Fasten by hand tightening the sealing gaskets with integrated flange nut.

Besides the usual FixT-sealing attachment which is used for corrugation top widths starting from 20mm, an EPDM – sealing rubber for corrugation tops up to 20 mm is available.




from about 20 mm (3/4")

FixT-sealing attachment EPDM-sealing

20 mm or less

Place Fix T and screw upper flange nut

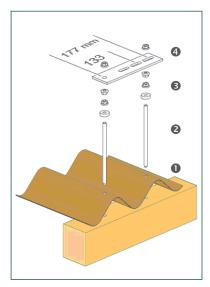

Double corrugated roof set on wooden purlins

Pre-drill attachment locations

Top of corrugationwooden purlinswith hanger bolts M12 14mm8.5mm / 0.33"with hanger bolts M10 13mm7.0mm / 0.28"with hanger bolts M8 8mm5.6mm / 0.22"


2 Insert hanger bolts

Stighten sealing gasket with flange nut. Sealing rubber must be lightly pressed.



EPDM-sealing

Apply mounting plate according to the corrugation top distance and screw it with the flange nuts

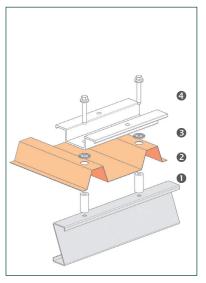

FixT on steel purlins

Pre-drill attachment locations

Top of corrugation steel purlins
Size of distance tube up to 4mm 6.8mm / 0.26"
(20 or 16 mm customize) up to 11mm 7.0mm / 0.27"
from about 11mm 7.2mm / 0.28"

2 Insert distance tube

Place distance-tube-sized sealing gaskets onto the trapezoidal sheet – view from above:






20 mm

16 mm

Apply hat section and fix it using M8 screws.


Screw up to the stop.
Sealing washer has to be slightly pressed.

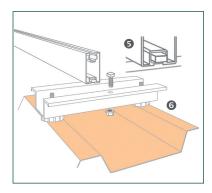


⑤Insert square head screw M10x25 in the provided groove of the bearing rail and arrange it according to the holes of the cap profile

3 Arrange the rails, if necessary lengthen them with connectors and screw them with flange nut M10

Besides the direct screwing at the holes of the cap profile, the bearing profiles can also be clamped (440157-40) in a variable manner at the sides. This makes an optimum alignment and maximum yields possible.

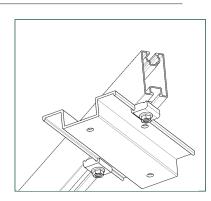

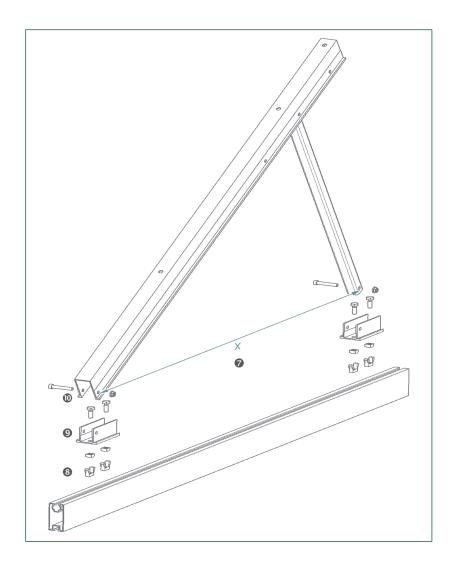

O Determine attachment locations for supports as per structural drawings.

Measurement X with support series 07:

by On Sh


Jgefr/,1k ; 743 k k - 2,03% Jgefr/,3k ; /14. k k - 3% NpniŇ /,3k ; /14. k k - 3%

③Insert click component with square nut M10 accordingly

© Fasten metal fittings with hexagon screws M10x20

0 Unfold supports and mount them by means of socket head screws M8 and self-locking nut M8.

Screw all support bolts in a dead stop orientated manner — maximum of 5Nm

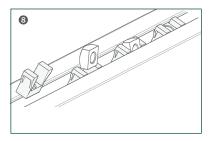


To For rail mounting place the square head M10 screw in the groove in the and tighten securly at the holes of the support with flange M10 nut.


₱ For module mounting insert the Klick™ components in the upper grooves of the bearing beams followed by square M8 nuts. The green-colored Klick components slide into rail groove, securing M8 for ease of installation.

Tighten modules with the middle and end clamps using socket head screws (M8 and snap ring). Rapid Clamps are presassembled for quick snap-in installation. See Rapid Clamp installation guide for additional details.

Attachment Components

In combination with Schletter's numerous attachment components, individual solutions can be created.

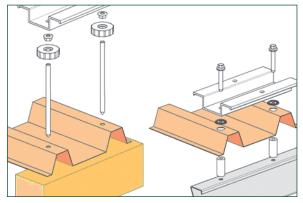


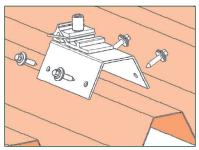

Fix2000™KlickTop™


FixT size 3 with wooden purlins

FixT size 3 with steel purlins

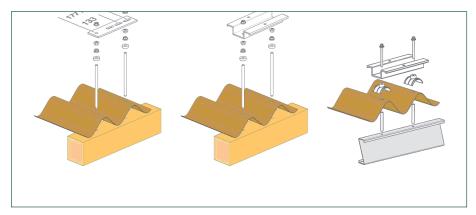

Double corrugated roof set FixE size 3 with wooden purlins

FixE size 3 with steel purlins

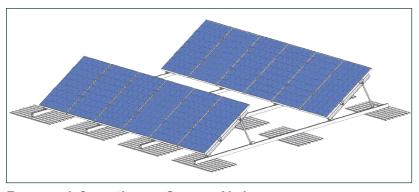

Shown to the right, the CompactVario System in combination with SolRack makes an easy-to-install system on flat roofts. Contact your Schletter representative for more mounting solutions.

For more information on CompactVario, please contact us at:

Schletter Inc.

1001 Commerce Center Drive

Shelby, NC 28150 Call: (888) 608 - 0234 Fax: (704) 595 - 4210 info.us@schletter-group.com Schletter Canada Inc. 3181 Devon Drive Windsor, ON N8X 4L3 Call: (519) 946 - 3800

Fax: (519) 946 - 3805

mail.canada@schletter-group.com