
LoopSight — Checkerboard for Water Turbidity Screening

Print at 100% — Do NOT use Fit to page / Shrink to fit — A4, 300 dpi recommended — Black should be solid, white clean

HOW TO USE: 1) Print this page. 2) Place behind/under a clear glass. 3) Photograph the pattern THROUGH water — see capture sheet for two lightings per sample.

Tip: Tape to cardboard for stiffness. Keep glass ~2–3 cm in front of paper. Frame tightly on glass + pattern, no faces needed.

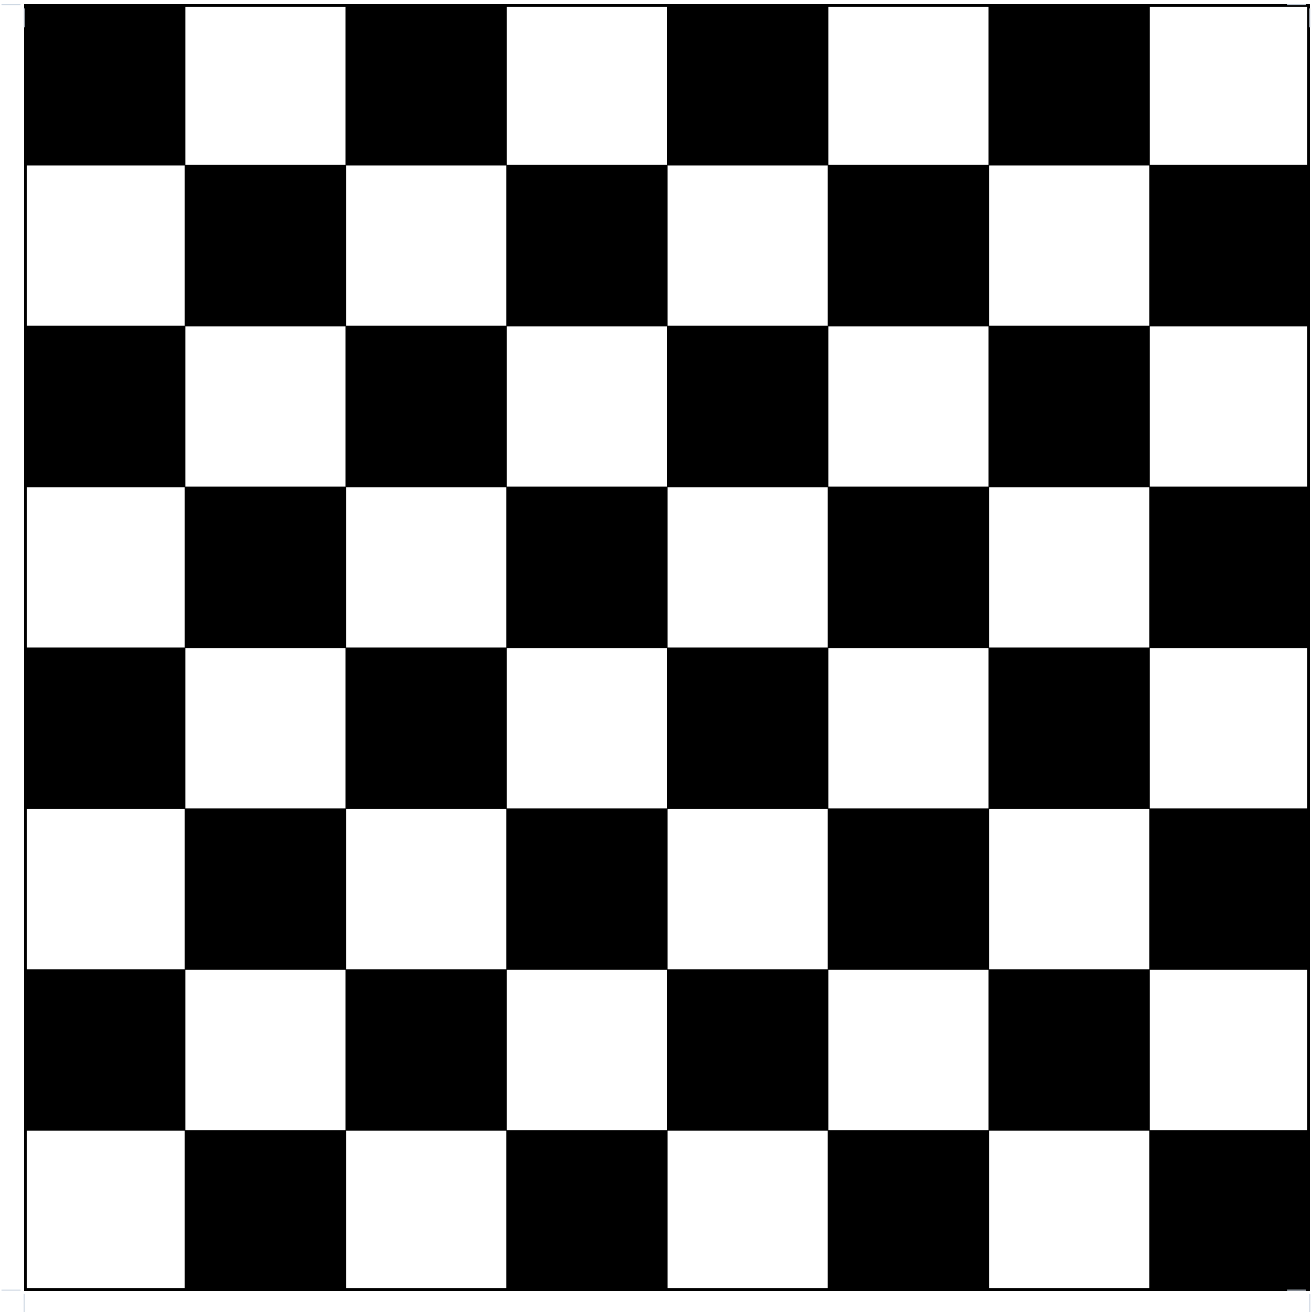

Inner corners: 7×7 (8×8 squares) — detectable via cv2.findChessboardCorners 7×7 / 7×5 / 6×4. Outer border for cutting. If printer lightens blacks, increase contrast in print dialog.