


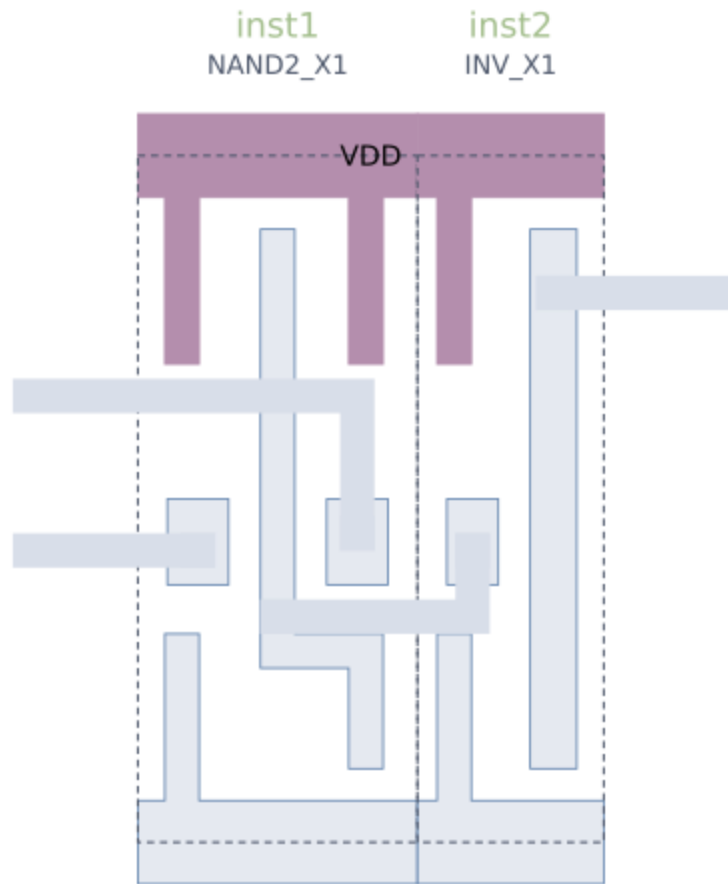

Highlighted net: VDD

```
# design.def
SPECIALNETS 2 ;
- VDD ( inst1 VDD ) ( inst2 VDD ) ← power connectivity
+ USE POWER
+ ROUTED metal1 340 ← explicit wire width
  ( 0 2800 ) ( 1900 2800 ) ;
- VSS ( inst1 VSS ) ( inst2 VSS )
+ USE GROUND
+ ROUTED metal1 340
  ( 0 0 ) ( 1900 0 ) ;
END SPECIALNETS
```