

University of British Columbia ELEC291/ELEC292

Lab 4: Capacitance Meter and Photo Electric Heart Rate Monitor

Dr. Jesús Calviño-Fraga P.Eng.
Department of Electrical and Computer Engineering, UBC
Office: KAIS 3024

E-mail: jesusc@ece.ubc.ca Phone: (604)-827-5387

February 17, 2023

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without a convigint written permission from the convigint owner.

Objectives

- Lab 4 requirements for ELEC291 and ELEC292.
- The 555 timer.
- · Heart rate monitor circuit.
- · Testing the EFM8 board.
- Attach an LCD to the EFM8 board.
- · Read capacitors.
- C programming language:
 - Example: Measure frequency.
 - Example: Measure period.

ELEC291/ELEC292 Lab 4

Lab 4

- Two different labs depending on what course you are taking:
 - ELEC291: 555 timer/capacitance meter.
 - ELEC292: Heart Rate Monitor.
- You can work with a partner: only one circuit and code for two students. You can also work by yourself!
- If either you or your lab partner is register in ELEC292, then both of you do the ELEC292 lab.

ELEC291/ELEC292 Lab 4

3


© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.


ELEC291 Lab


- 555 Timer:
 - a) Build a 555 timer using discrete parts.
 - b) Use a 555 timer to measure capacitance:
 - Range: 1nF to 1 μ F.
 - Display value using LCD.
 - Program EFM8 board using C language.


ELEC291/ELEC292 Lab 4

4

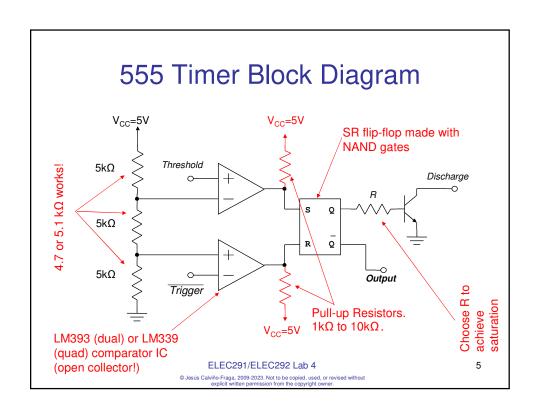

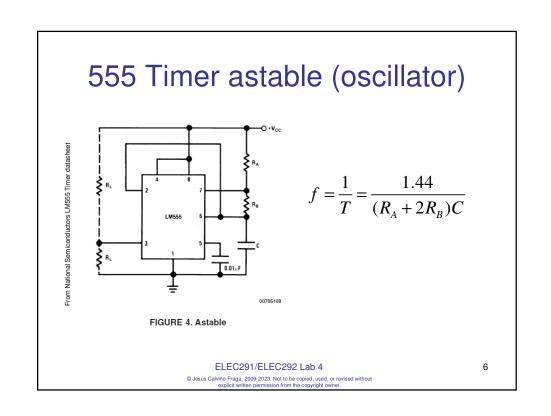

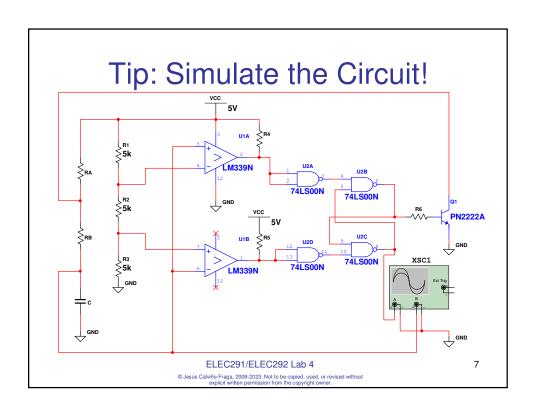

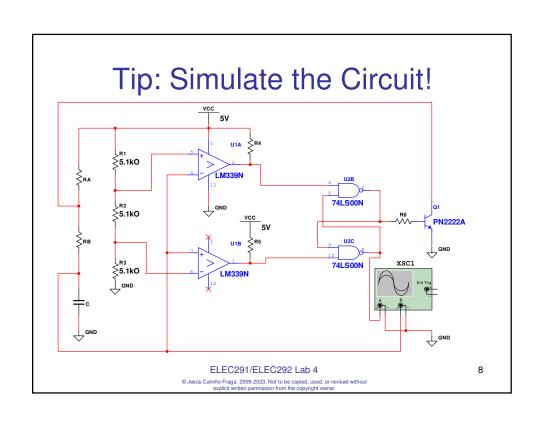

Multisim

NI Multisim. Download from:

http://courses.ece.ubc.ca/281/2020/NI Circuit Design Suite 14 1 Education.exe

The serial number assigned to UBC students is M71X71786

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

ELEC292 Lab


- Design, build, program, and test a microcontroller-based photoelectric heart rate monitor:
 - Build a photo-sensor finger-clip. Kit will be distributed in the lab. Instructions posted in Connect.
 - Assemble an amplifier/filter circuit.
 - Measure heart rate (BPM) and display using LCD.
 - Program EFM8 board using C language.

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

10

Finger Clip: before

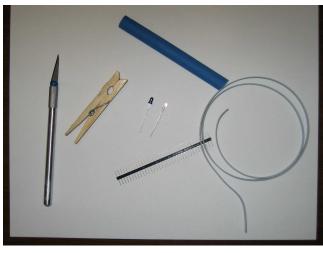

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.


11

Finger Clip: after



ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

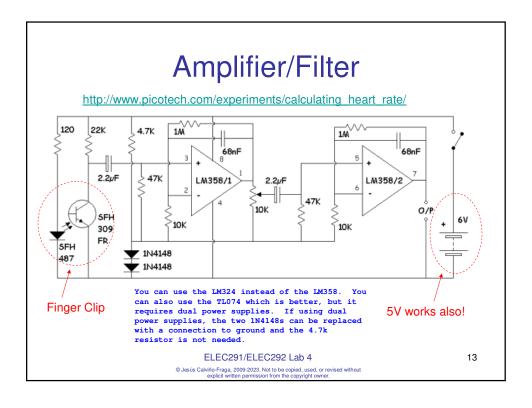


Testing The EFM8 Board

- · Testing program available in Connect.
- · Make the following connections:
 - P0.0 and P0.1
 - P0.2 and P0.3
 - P3.7 and P0.6
 - P3.3 and P0.7
 - P3.2 and P1.0
 - P3.1 and P1.1
 - P3.0 and P1.2
 - P2.6 and P1.3
 - P2.5 and P1.4
 - P2.4 and P1.5
 - P2.3 and P1.6
 - P2.2 and P1.7
 - P2.1 and P2.0
- · Attach a resistor + LED to pin P2.1.
- Open PuTTY, run the test program:

ELEC291/ELEC292 Lab 4


14

Testing The EFM8 Board BUTY (COM12115200.8a.1x) FEM8 board autotest P0.1, P0.0, P0.3, P0.2, P0.6, P3.7, P0.7, P3.3, P1.0, P3.2, P1.1, P3.1, P1.2 FAILED (SHORT) EFM8 board autotest P0.1, P0.0, P0.3, P0.2, P0.6, P3.7, P0.7, P3.3, P1.0, P3.2, P1.1, P3.1, P1.2, P3.0, P1.3, P2.6, P1.4, P2.5, P1.5, P2.4, P1.6, P2.3, P1.7, P2.2, P2.0, P2.1, Success! ELEC291/ELEC292 Lab 4 © Jesús Calviño-Fraga. 2009-2023. Not to be copied, used, or revised without explicit writer permission from the Copyright conver.

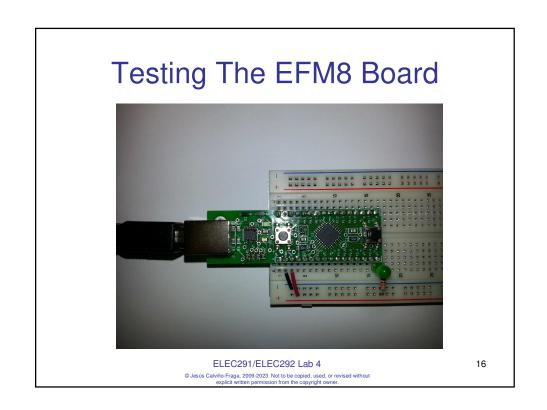

Testing The EFM8 Board


After testing the circuit, remove the 'test' wires from the breadboard!

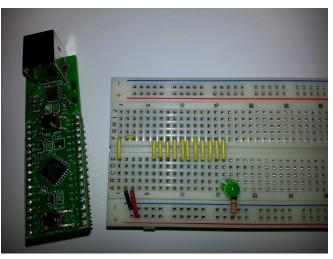

ELEC291/ELEC292 Lab

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

Attaching LCD to EFM8 board

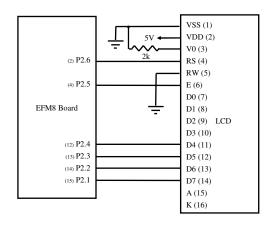

- Example configures LCD in 4-bit mode.
 Saves pins and wires!
- Standard Hitachi HD44780 controller
- Pin assignments arbitrary, but source code must match wiring
- •Pins 7, 8, 9, 10, 15, 16 not connected.

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

18

Attaching LCD to EFM8 board



ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

Attaching LCD to EFM8 board

 Example provided EFM8_LCD_4bit.c: Configures and uses a Hitachi compatible LCD in 4-bit mode.

Pins used in the example:

```
#define LCD_RS P2_6
// #define LCD_RW Px_x // Not used in this code. Connect to GND
#define LCD_E P2_5
#define LCD_D4 P2_4
#define LCD_D5 P2_3
#define LCD_D6 P2_2
#define LCD_D7 P2_1
```

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

20

Capacitor Types

- Ceramic. Small values, small size, good price, good tolerance (lowest around ±1%)
- Electrolytic. Large value, high tolerance (±10% minimum), don't age well, big size, very temperature sensitive.
- Tantalum. Large value, low voltage, small size, expensive, lowest tolerance around ±5%.
- Mica. Best capacitors ever! Lowest tolerance around ±0.5%. Very small values. VERY expensive, around 4\$ each!
- Polyester Film. Wide range values, inexpensive, good tolerance, price depends on tolerance and voltage rating
- · Glass.


ELEC291/ELEC292 Lab 4

21

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

How to read Capacitor Codes

- Large capacitors have their values printed on them, for example 10μF, 50V, 85C.
- Most small capacitors use a three number code system:



ELEC291/ELEC292 Lab 4

22

How to read Capacitor Codes

• Tolerance is indicated by a letter after the value:

E	± 0.5%			
F	± 1%			
G	± 2%			
Н	± 3%			
J	± 5%			
K	± 10%			
М	± 20%			
N	± 30%			
Р	+100% ,-0%			
Z	+80%, -20%			

If tolerance is not indicated assume it is 'Z': +80%, -20%.

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

How to read Capacitor Codes

- Examples:
 - 103J
 - $10 \times 10^3 \pm 5\% = 0.01 \mu F \pm 5\%$
 - -681
 - $68 \times 10^{1} + 80\%$, -20% = 680 pF + 80%, -20%
 - -104Z
 - $10 \times 10^4 + 80\%$, $-20\% = 0.1 \mu F + 80\%$, -20%
 - 224M
 - $22 \times 10^4 \pm 20\% = 0.22 \mu F \pm 20\%$
 - 473K
 - $47 \times 10^3 \pm 10\% = 47 \text{nF} \pm 10\%$

ELEC291/ELEC292 Lab 4


© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

8051's Timers/Counters

- The original 8051 had only two timers/counters: 0 and 1.
- Newer 8051 microcontrollers (like the AT89LP51RB2) usually have:
 - 1. The 8051 timers/counters: timers 0 and 1
 - 2. The 8052 timer/counter: timer 2
 - 3. The Programmable Counter Array (PCA)
- The EFM8LB1 has 6 Timers / Counters + 5-channel PCA!

ELEC291/ELEC292 Lab 4

25

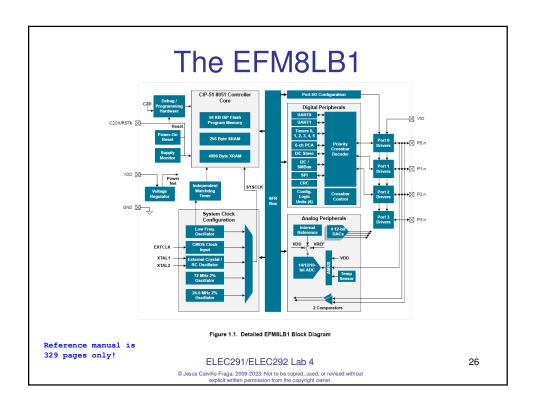

TMOD timer/counter mode control register (Address 89H)

	Tim	er 1		Timer 0			
GATE	C/T*	M1	MO	GATE	C/T*	M1	MO

Bit	Name GATE C/T*		Description			
7 & 3			1: uses either INT0 or INT1 pins to enable/disable the timer/counter			
6 & 2			0: timer; 1: counter (pins T0 and T1)			
All the	M1	M0				
other pins!	0	0	13-bit timer/counter			
	0	1	16-bit timer/counter			
	1	0	8-bit auto-reload timer/counter			
	1	1	Special mode			

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.


TCON: timer/counter control register. (Address 88H)


TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0
		_	_	l	l	_	_

Bit	Name	Description		
7	TF1	Timer 1 overflow flag.		
6	TR1	Timer 1 run control.		
5	TF0	Timer 0 overflow flag.		
4	TR0	Timer 0 run control.		
3	IE1	Interrupt 1 flag.		
2	IT1	Interrupt 1 type control bit.		
1	IE0	Interrupt 0 flag.		
0	IT0	Interrupt 0 type control bit.		

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

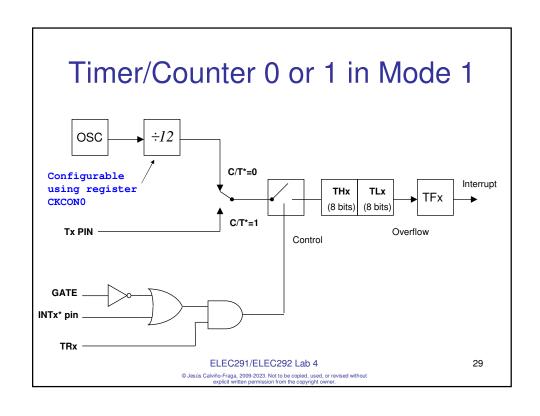

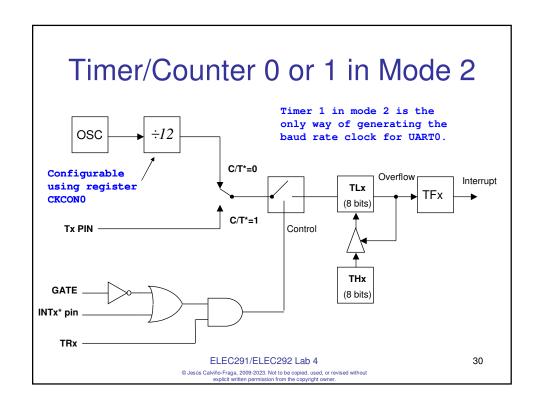


Using a Counter to Measure Frequency

- By definition "frequency" in Hz is the number of pulses in one second, so:
 - 1) Set up the counter to count pulses in one of the pins in the microcontroller.
 - 2) Reset the counter to zero.
 - 3) Enable the counter.
 - 4) Wait one second.
 - 5) Disable the counter. The counter register (THx, TLx) has the frequency in Hz!

ELEC291/ELEC292 Lab 4

31

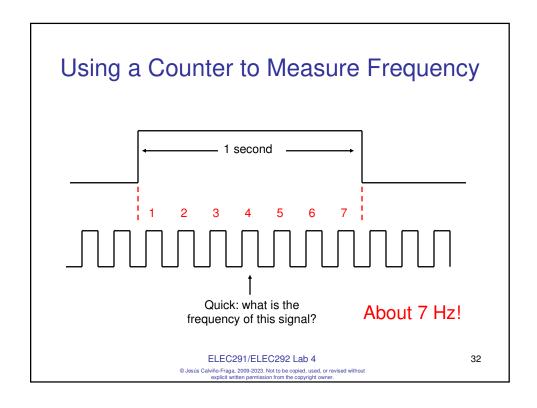

FreqEFM8.c


· Available on Canvas

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

33

Testing FreqEFM8.c with Lab **Function Generator** 5Vo: 5V out pin Ideally, 0V to 5V only M1N4148 1kΩ P0.0 EFM8 Function board Generator 1N4148 **GND** Common A voltage limiter will prevent over-voltages that will damage your board! ELEC291/ELEC292 Lab 4 34 © Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

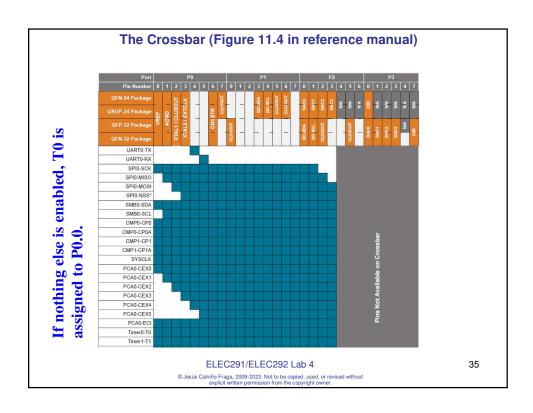

Measure Period Using a Timer in the 8051

- We can measure the period of a wave in integer numbers of the timer clock period. Some math may be required!
- Works quite well for slow signals.
- Measuring period could be way faster than measuring frequency.

ELEC291/ELEC292 Lab 4

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

Measure Period Using a Timer in the 8051

- To measure period we have to:
 - 1) Set up the timer.
 - 2) Connect the signal to be measured to <u>any</u> available pin. Also, set the pin as input.
 - 3) Reset the timer to zero.
 - 4) Wait for the input signal to transition from zero to one.
 - 5) Start the timer.
 - 6) Wait for the input signal to transition from zero to one.
 - 7) Stop the timer! The timer SFRs (THx, TLx) have the period in timer-input-period units!

ELEC291/ELEC292 Lab 4

37

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

Measure Period Using a Timer in the 8051 Start counting here Signal to be measured Clock periods counted by the timer Signal period is about 35 timer periods. For a EFM8 board (@72MHz), the period of the signal would be approximately T=(35/72E6)*12=5.8333µs

Maximum measurable period?

65535*12/72MHz=10.92ms

To measure bigger periods, we need to keep count of the timer overflow.

(Of course, you could also work with a slower clock, for Example 12 MHz) $\,$

ELEC291/ELEC292 Lab 4

39

© Jesús Calviño-Fraga, 2009-2023. Not to be copied, used, or revised without explicit written permission from the copyright owner.

PeriodEFM8.c

• Available on Canvas

ELEC291/ELEC292 Lab 4

40