


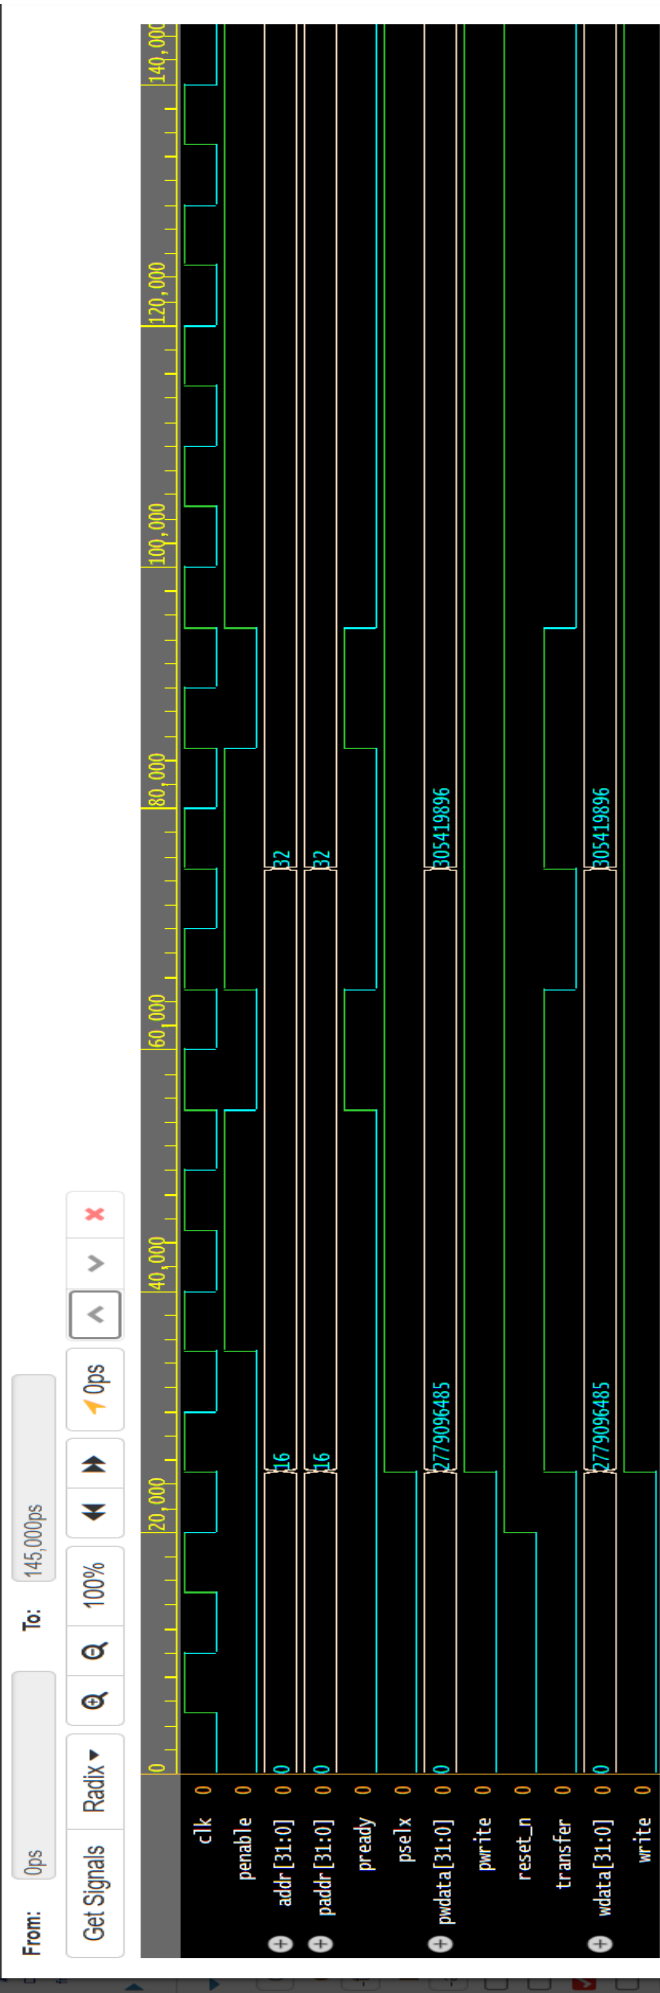

Note: To revert to EPWave opening in a new browser window, set that option on your profile page.

testbench.sv

design.sv

Log

Share

[2026-06-11 14:13:34 UTC] xrun -Q -unbuffered '-timescale' '1ns/1ns' '-sysv' '-access' '+rw' design.sv testbench.sv

TOOL: xrun 25.03-s001: Started on Jun 11, 2026 at 10:13:35 EDT

xrun: 25.03-s001: (c) Copyright 1995-2025 Cadence Design Systems, Inc.

Top level design units:

apb_master_tb

Loading snapshot worklib.apb_master_tb:sv Done

xcelium> source /xcelium25.03/tools/xcelium/files/xmsimrc

xcelium> run

T=0 | STATE Signals: PSEL=0 PENABLE=0 PREADY=0 ADDR=00000000 WDATA=00000000

T=25000 | STATE Signals: PSEL=1 PENABLE=0 PREADY=0 ADDR=00000010 WDATA=a5a5a5a5

T=35000 | STATE Signals: PSEL=1 PENABLE=1 PREADY=0 ADDR=00000010 WDATA=a5a5a5a5

T=55000 | STATE Signals: PSEL=1 PENABLE=0 PREADY=1 ADDR=00000010 WDATA=a5a5a5a5

T=65000 | STATE Signals: PSEL=1 PENABLE=1 PREADY=0 ADDR=00000010 WDATA=a5a5a5a5

T=75000 | STATE Signals: PSEL=1 PENABLE=1 PREADY=0 ADDR=00000020 WDATA=12345678

T=85000 | STATE Signals: PSEL=1 PENABLE=0 PREADY=1 ADDR=00000020 WDATA=12345678

T=95000 | STATE Signals: PSEL=1 PENABLE=1 PREADY=0 ADDR=00000020 WDATA=12345678

Simulation complete via \$finish(1) at time 145 NS + 0

./testbench.sv:108 \$finish;

xcelium> exit

TOOL: xrun 25.03-s001: Exiting on Jun 11, 2026 at 10:13:36 EDT (total: 00:00:01)

Done