Important Dimensionless Numbers

Keerthi Vasan M Chemical Engineering Graduate (2020) kvasan166@gmail.com Tamil Nadu, INDIA

1. Schmidt number (Sc): Sc gives the relative ease of momentum and mass transport in a flow system and it is the mass transfer analogue of Prandtl number (Pr). It relates the thickness of the momentum and diffusion boundary layers.

$$Sc = \frac{\text{Momentum diffusivity } (\nu)}{\text{Mass diffusivity } (D)} = \frac{\binom{\mu}{\rho}}{D} = \frac{\mu}{\rho D}$$

D - Diffusivity of the system (m²/s), ρ - Density (kg/m³), μ - Dynamic viscosity of the fluid (Pa s).

2. **Prandtl number (Pr)**: Pr gives the relative ease of momentum and energy transport in a flow system. It is more frequently used in heat transfer calculations. It relates the thickness of the momentum and thermal boundary layers. If Pr < 1, heat diffuses quickly or thermal boundary layer is much thicker when compared to velocity/momentum boundary layer. Generally for gases $Pr \simeq 0.1$ and for liquid metals $Pr \simeq 0.01$ to 0.04.

$$\Pr = \frac{\text{Momentum diffusivity }(\nu)}{\text{Thermal diffusivity }(\alpha)} = \frac{\binom{\mu}{\rho}}{\binom{k}{\rho C_P}} = \frac{C_P \ \mu}{k}$$

 ρ - Density (kg/m³), μ - Dynamic viscosity of the fluid (Pa s), k - Thermal conductivity (W/m K), C_P - Specific heat capacity (J/kg K).

3. Lewis number (Le): Le is used to characterize a flow system where simultaneous heat and mass transfer occurs. For a air-water vapour system, Le = 1. Which results in the Lewis relation (used to prove that Wet Bult Temperature (T_{WBT}) is equal to Adiabatic Saturation Temperature (T_{as})).

$$Le = \frac{Sc}{Pr} = \frac{Thermal diffusivity (\alpha)}{Mass diffusivity (D)} = \frac{\left(\frac{k}{\rho C_P}\right)}{D} = \frac{k}{\rho D C_P}$$

Lewis relation derivation for air-water vapour system: Chilton - Colburn Analogy gives

$$\underbrace{\frac{f_F}{2}}_{j_M} = \underbrace{\frac{k_C \operatorname{Sc}^{2/3}}{v}}_{j_D} = \underbrace{\frac{h \operatorname{Pr}^{2/3}}{G C_P}}_{j_H} \tag{1}$$

Le = 1 implies, Pr = Sc. Therefore equation (1) gives, $\frac{k_C}{v} = \frac{h}{G C_P}$. Now by doing the following substitution $\rho = c M_B$, $k_y = k_c c$, $C_p = C_s$ and $k_Y = M_B k_y$, we get Lewis relation

as
$$\left| \frac{h}{k_Y C_s} = 1 \right|$$

 ρ - Density (g/m³), k - Thermal conductivity (W/m K), C_P - Specific heat capacity (J/kg K), f_F - Fanning friction factor, k_C - Mass transfer co-efficient for concentration driving force, v - fluid velocity (m/s), h - Convective heat transfer co-efficient (W/m² K), G - Mass velocity in kg/m²s (= ρ v), C_s - Humid heat of the air-water vapour system, M_B - Molecular weight of dry air (= 29 g/mol), c - Concentration of vapour in the mixture (mol/m³), k_y - Mass transfer co-efficient for mole fraction driving force, k_Y - Mass transfer co-efficient for absolute humidity driving force.

1

4. **Peclet number (Pe)**: Pe is used in convective heat transfer calculations. It is the ratio of thermal energy convected to the fluid to the thermal energy conducted within the fluid. In practical applications, Pe is very high. Sometimes, Pe is also known as Bodenstein number (Bo).

$$Pe = \frac{\text{Heat transport by convection}}{\text{Heat transport by conduction}} = Re \ Pr = \left(\frac{\rho \ v \ L}{\mu}\right) \left(\frac{\nu}{\alpha}\right) = \frac{L \ v}{\alpha}$$

Similarly mass transfer analogue of Pe is defined as

$$Pe = \frac{\text{Mass transport by convection}}{\text{Mass transport by conduction}} = \text{Re Sc} = \left(\frac{\rho \ v \ L}{\mu}\right) \left(\frac{\mu}{\rho \ D}\right) = \frac{L \ v}{D}$$

Dispersion number is defined as $\frac{1}{Pe}$. Dispersion number is a important dimensionless number which measures the extend of axial dispersion in a chemical reactor.

| Reactor | Nature of reactor | Dispersion/ Diffusion coefficient (D) | Pe or Dispersion number |
|---------------|-----------------------|--|--|
| Ideal CSTR | Infinite axial mixing | Very high D | $Pe = 0$ (or) Dispersion number $= \infty$ |
| Ideal PFR | Zero axial mixing | Very low D or zero D | $Pe = \infty$ (or) Dispersion number = 0 |

- ρ Density (g/m³), v Fluid velocity (m/s), L Characteristic length of the system (m), μ Dynamic viscosity of the fluid (Pa s), ν Momentum diffusivity (m²/s), α Thermal diffusivity (m²/s), D Diffusivity of the system (m²/s) / Dispersion co-efficient.
- 5. Nusselt number (Nu): It is defined as a ratio of convective heat flux to conductive heat flux in a fluid boundary layer. Nu represents the enhancement of heat transfer through a fluid layer as a result of convection relative to conduction across the same fluid layer.

$$Nu = \frac{\text{Convective heat flux}}{\text{Conductive heat flux (Fourier's law)}} = \frac{h \triangle T}{\left(\frac{k \triangle T}{L}\right)} = \frac{h L}{k}$$

$$Nu = \begin{cases} 1, & \text{Heat transfer across the fluid layer is by pure conduction} \\ 1-10, & \text{Laminar flow} \\ 100-1000, & \text{More active convection or Turbulent flow} \end{cases}$$

- h Convective heat transfer co-efficient (W/m² K), T Temperature (K), k Thermal conductivity (W/m K), L Characteristic length of the system (m).
- 6. **Sherwood number (Sh)**: It is the mass transfer analogue of Nusselt number (Nu). It is defined as

$$\mathrm{Sh} = \frac{\mathrm{Convective\ mass\ flux}}{\mathrm{Conductive\ mass\ flux\ (Fick's\ law)}} = \frac{k_c\ \triangle C}{\left(\frac{D\ \triangle C}{L}\right)} = \frac{k_c\ L}{D}$$

- k_c Mass transfer co-efficient for concentration driving force, D Diffusivity of the system (m²/s), L Characteristic length of the system (m).
- 7. **Biot number (Bi)**: It is similar to Nusselt number (Nu) but it is for a solid body. Whereas, Nu is for a fluid layer. It arises in the transient heat conduction calculations, particulary in lumped heat capacitance model.

$$Bi = \frac{Convective heat flux}{Conductive heat flux (Fourier's law)} = \frac{Internal conductive resistance}{Surface convective resistance} = \frac{\left(\frac{L}{k}\right)}{\left(\frac{1}{h}\right)} = \frac{h L}{k}$$

- If Bi < 0.1, then internal conductive resistance is zero which makes the system a perfect lumped heat capacitance system. There won't be any resistance for heat flow on the body. So, temperature is uniform through out the body.
- If Bi < 1, then the system can be considered as a approximate lumped heat capacitance system.
- If Bi > 1, then internal conductive resistance is significant. So, temperature distribution is non-uniform across the body and the calculations become complex.

Important fact: Ratio of Nusselt number to Biot number gives,

$$\frac{\text{Nu}}{\text{Bi}} = \frac{\left(\frac{h\ L}{k}\right)_{\text{fluid}}}{\left(\frac{h\ L}{k}\right)_{\text{solid}}} = \frac{k_{\text{solid}}}{k_{\text{fluid}}} = \frac{R_{\text{fluid}}}{R_{\text{solid}}} = \frac{\text{Conductive resistance of fluid}}{\text{Conductive resistance of solid}}$$

h - Convective heat transfer co-efficient (W/m² K), T - Temperature (K), k - Thermal conductivity (W/m K), L - Characteristic length of the system (m).

8. Fourier number (Fo): It arises in the unsteady state heat conduction calculations. Mainly in the lumped heat capacitance systems (from the term $(hAt/\rho CV)$).

$$\underbrace{\frac{hAt}{\rho CV}}_{AL} = \underbrace{\frac{ht}{\rho CL^2}}_{AL} = \left(\frac{hL}{k}\right) \left(\frac{kt}{\rho CL^2}\right) = Bi \left(\frac{\alpha t}{L^2}\right) = Bi Fo$$

h - Convective heat transfer co-efficient (W/m² K), A - Cross sectional area of the body (m²), t - Time (s), ρ - Density of the body (g/m³), C - Specific heat capacity of the body (J/ mol K), V - Volume of the body (m³), L - Characteristic length of the system (m), k - Thermal conductivity (W/m K), Bi - Biot number, α - Thermal diffusivity (m²/s).

9. **Stanton number (St)**: St is generally used in the forced convective heat transfer calculations and in heat, mass and momentum transfer analogies like Reynolds analogy, Chilton - Colburn analogy, etc. It is defined as a ratio of heat transferred to a fluid to the heat capacity of the fluid. The stanton number arises in the consideration of geometeric similarity of the momentum boundary layer, where it can be used to express a relationship between the shear force at the wall (due to viscous drag) and the total heat transfer at the wall (due to thermal diffusivity).

$$\mathrm{St} = \frac{\mathrm{Heat\ transfered\ to\ a\ fluid}}{\mathrm{Thermal\ capacity\ of\ the\ fluid}} = \frac{\mathrm{Nu}}{\mathrm{Re\ Pr}} = \frac{h}{\rho\ v\ C_P} = \frac{h}{G\ C_P}$$

Similarly mass transfer analogue of St is defined as

$$St = \frac{Sh}{Re Sc} = \frac{\left(\frac{k_c L}{D}\right)}{\left(\frac{\rho v L}{\mu}\right)\left(\frac{\mu}{\rho D}\right)} = \frac{k_c}{v}$$

Nu - Nusselt number, Re - Reynolds number, Pr - Prandtl number, Sh - Sherwood number, Sc - Schmidt number, h - Convective heat transfer co-efficient (W/m² K), ρ - Density (g/m³), v - Fluid velocity (m/s), C_P - Specific heat capacity (J/kg K), G - Mass velocity in kg/m² s (= ρ v), k_c - Mass transfer co-efficient for concentration driving force, L - Characteristic length of the system (m), D - Diffusivity of the system (m²/s), μ - Dynamic viscosity of the fluid (Pa s).


10. **Damkohler number (Da)**: It is used to relate the chemical reaction rate to the transport phenomena rate occurring in a system. For a general n^{th} order chemical reaction $A \longrightarrow B$, Da is defined as

$$Da = \frac{\text{Rate of consumption of A by reaction}}{\text{Rate of transport of A by convection}} = \frac{-r_A V}{F_{A0}} = \frac{kC_{A0}^n V}{\nu_0 C_{A0}} = kC_{A0}^{n-1} \tau$$

Therefore for a 1st order chemical reaction, $\boxed{\mathrm{Da} = k \ \tau}$

 $-r_A$ - Rate of consumption of A in the reaction (mol/m³ s), V - Volume of the reaction mixture (m³), F_{A0} - Molar flow rate of A (mol/s), k - First order rate constant (s⁻¹), C_{A0} - Initial concentration of A (mol/m³), ν_0 - Initial volumeteric flow rate (m³/s), τ -Space/residence time (s) (= $\frac{V}{\nu_0}$).

11. **Dean number (De)**: It is used in the study of flow and heat transfer in coiled tube/pipes and channels.

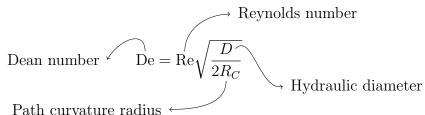

12. Reynolds number (Re): Boundary layer separation occurs when Re > 1 and the flow decelerates due to separation.

Re =
$$\frac{\text{Interial force}}{\text{Viscous force}} = \frac{\frac{u}{t}}{\tau A} = \frac{\dot{\mu}u}{\tau A} = \frac{\rho A u^2}{\mu(\frac{u}{L})A} = \frac{\rho u L}{\mu} = \frac{u L}{\nu}$$

a - Acceleration (m/s²), τ - Shear stress (Pa), A - Area (m²)

m - Mass (g), a - Acceleration (m/s²), τ - Shear stress (Pa), A - Area (m²), u - Velocity (m/s), t - Time (s), μ - Dynamic viscosity (Pa s), L - Characteristic length of the system (m), ρ - Density (g/m³), Q - Volumetric flow rate (m³/s), ν - Kinematic viscosity (m²/s).

13. Froude number (Fr):

$$\operatorname{Fr} = \sqrt{\frac{\operatorname{Interial force}}{\operatorname{Gravity force}}} = \sqrt{\frac{\rho \ A \ u^2}{m \ g}} = \sqrt{\frac{\rho \ A \ u^2}{\rho \ A \ L \ g}} = \frac{u}{\sqrt{Lg}}$$

$$\rho \ V \ \simeq \rho \ L^3 \simeq \rho \ AL$$

m - Mass (g), A - Area (m^2), u - Velocity (m/s), L - Characteristic length of the system (m), ρ - Density (g/m³), g - Acceleration due to gravity (m/s²).

14. Euler number (Eu):

• Ruark number Ru =
$$\sqrt{\frac{\text{Interial force}}{\text{Pressure force}}} = \sqrt{\frac{\rho A u^2}{\triangle P A}} = u\sqrt{\frac{\rho}{\triangle P}}$$

• Euler number =
$$\frac{1}{\text{Ru}} = \frac{1}{u} \sqrt{\frac{\triangle P}{\rho}}$$
. For frictionless flow, Eu = 1.

• Euler number (Eu) is called Cavitation number (Ca) when $\triangle P = P - P^v$.

 P^{v} - vapour pressure (Pa), A - Area (m²), u - Velocity (m/s), ρ - Density (g/m³).

15. Weber number (We):

We =
$$\sqrt{\frac{\text{Inertial force}}{\text{Surface tension force}}} = \sqrt{\left(\frac{\rho A u^2}{\sigma L}\right)} = u\sqrt{\frac{\rho L}{\sigma}}$$

 ρ - Density (g/m³), A - Area (m²), u - Velocity (m/s), σ - Surface tension (N/m), L -Characteristic length of the system (m).

4

16. Mach number (Ma):

$$Ma = \sqrt{\frac{Inertial force}{Elastic force}} = \sqrt{\frac{\rho A u^2}{kA}} = u \sqrt{\frac{\rho}{k}} = \frac{u}{C}$$

 ρ - Density (g/m³), A - Area (m²), u - Velocity (m/s), k - Elastic stress, C - Velocity of the sound in the fluid (m/s) (= $\sqrt{\frac{k}{\rho}}$).

17. **Grashof number (Gr)**: Gr is used in the free/natural convection calculations to classify the flow (flow classification is done based on the value of the term "GrPr"). Gr has the same functionality as the Reynolds number (Re). Grashof number (Gr) is defined as

$$Gr = \frac{\text{Buoyancy force}}{\text{Viscous force}} = \frac{F_b}{F_n}$$
 (2)

Since in natural convections, we need to consider changes in density of the fluid which results in fluid motion. To account those density changes, we consider Thermal coefficient of expansion (β) .

$$\beta = \frac{1}{V} \left(\frac{dV}{dT} \right)_{P} = \rho \frac{d(\frac{1}{\rho})}{dT} = -\frac{1}{\rho} \frac{d\rho}{dT} = -\frac{d(\ln \rho)}{dT}$$

$$\rightarrow \text{Molar density (mol/m}^{3})$$
(3)

$$\Rightarrow \int_{\rho_0}^{\rho} d(\ln \rho) = -\int_{T_0}^{T} \beta \ dT \tag{4}$$

$$\Rightarrow \rho = \rho_0 (1 - \beta (T - T_0)) = \rho_0 (1 - \beta \Delta T)$$
(5)

For a ideal gas, $PV = nRT \Rightarrow \rho = \frac{P}{RT} \Rightarrow \beta = \frac{1}{T}$. Buoyancy force term of the equation (2) is given by

$$F_b = m_f g = (\rho_o - \rho) V_f g \tag{6}$$

Substituting ρ from equation (5) in equation (6), we get

$$F_b = (\rho_0 \beta \triangle T)(AL)g \tag{7}$$

Viscous force $F_v = \mu(\frac{u}{L})A$. From dimensional analysis, we get viscous force = interial force.

Therefore,
$$\mu(\frac{u}{L})A = \rho A u^2 \Rightarrow u = \frac{u}{L\rho}$$
 (8)

Substituting u from equation (8) into F_v expression, we get

$$F_v = \mu(\frac{u}{L})A \Rightarrow F_v = \frac{\mu^2 A}{L^2 \rho} \tag{9}$$

From equations (7), (9) and (2), we get

$$Gr = \frac{(\rho_0 \beta \triangle T)(AL)g}{\left(\frac{\mu^2 A}{L^2 \rho}\right)} = \frac{\rho^2 L^3 g \beta \triangle T}{\mu^2}$$
(10)

• Property values $(C_P, \mu, \beta, \rho, etc.)$ are measured at film temperature $T_f = \frac{T_s + T_0}{2}$.

- Important relationship for natural and forced convection obtained by dimensional analysis includes,
 - Natural convection: Nu = f(Gr, Pr)
 - Forced convection: Nu = f(Re, Pr) or St = f(Re, Pr)
- In a combined forced and natural convection process,

$$\frac{Gr}{Re^2} = \begin{cases} > 1, & \text{Natural convection dominates} \\ 1, & \text{Both convection are comparable} \\ < 1, & \text{Forced convection dominates} \end{cases}$$

T - Temperature (K), T_0 - Free stream temperature (K), ρ_0 - Bulk fluid density (g/m³), ρ - Fluid density inside heated air (g/m³), P - Pressure (Pa), V - Volume (m³), n - Number of moles (moles), R - Universal gas constant (J/mol K), T - Temperature (K), m_f - Mass of fluid (g), g - Acceleration due to gravity (m/s²), V_f - Volume of fluid (m³), A - Area (m²), L - Characteristic length of the system (m), μ - Dynamic viscosity of the fluid (Pa s), u - Fluid velocity (m/s), C_P - Specific heat capacity (J/kg K), T_f - Film temperature (K), T_s - Surface/wall temperature (K), Nu - Nusselt number, Pr - Prandtl number, St - Stanton number, Re - Reynolds number.

18. Rayleigh number (Ra):

$$\operatorname{Ra} = \operatorname{GrPr} = \frac{\operatorname{Buoyancy \ force}}{\operatorname{Viscous \ force}} \times \underbrace{\frac{\operatorname{Momentum \ diffusivity}}{\operatorname{Heat \ diffusivity}}}_{\left(\frac{1}{\operatorname{Heat \ diffusion \ rate}}\right) = \frac{\rho^2 L^3 g \beta \triangle T C_P}{\mu k}}$$

- Property values $(C_P, \mu, \beta, \rho, etc.)$ are measured at film temperature $T_f = \frac{T_s + T_0}{2}$.
- $\bullet\,$ Ra (= GrPr) is used in the free convection calculations to classify the flow.

 ρ - Density (g/m³), β - Thermal coefficient of expansion (K⁻¹), T - Temperature (K), g - Acceleration due to gravity (m/s²), L - Characteristic length of the system (m), μ - Dynamic viscosity of the fluid (Pa s), C_P - Specific heat capacity (J/kg K), T_f - Film temperature (K), T_s - Surface/wall temperature (K), T_0 - Free stream temperature (K), t_0 - Thermal conductivity (W/m K), Gr - Grashof number, Pr - Prandtl number.

19. **Graetz number (Gz)**: It is used to characterize fluid flow in a pipe under laminar flow conditions and also it correlates thermally developing flow.

$$Gz = \frac{Thermal\ capacity}{Convective\ heat\ flux} = \left(\frac{D_H}{L}\right)RePr = \left(\frac{D_H}{L}\right)Pe$$

Similarly mass transfer analogue of Gz is defined as

$$Gz = \left(\frac{D_H}{L}\right) ReSc$$

 D_H - Hydraulic diameter (m), L - Characteristic length of the system (m), Re - Reynolds number, Pr - Prandtl number, Sc - Schmidt number, Pe - Peclet number.

20. **Knudsen number (Kn)**: It is defined as the ratio of the molecular mean free path length to a representative physical length scale. This length scale could be, for example, the radius of a body in a fluid.

$$\mathrm{Kn} = \frac{\mathrm{Molecular\ mean\ free\ path}}{\mathrm{Characteristic\ length\ of\ the\ system}} = \frac{\lambda}{L}$$

• If Kn \geq 10, Knudsen diffusion happens. Knudsen diffusivity $(D_k) = \frac{DV}{3} = 48.5 D \sqrt{\frac{T}{M}}$ Knudsen diffusion flux can be found by replacing ' D_{AB} ' by ' D_k ' in the fick's law of diffusion.

$$D_k \neq f(P)$$

= $f(Pore diameter, molecular velocity)$
= $f(Pore diameter, Temperature, Molecular weight)$

- Kn $\leq \frac{1}{100}$, Molecular (or) Fick's diffusion happens.
- If $10 \le \text{Kn} \le \frac{1}{100}$, Transition region diffusion happens.

 λ - Molecular mean free path (m) $\bigg(=\frac{\mu}{\rho}\sqrt{\frac{\pi m}{2k_BT}}\bigg),\,L$ - Characteristic length of the system (m), μ - Dynamic viscosity of the fluid (Pa s), ρ - Density (g/m³), m - Molecular mass (g), k_B - Boltzmann constant (J/K), T - Thermodynamic temperature (K), D - Pore diameter (m), D_{AB} - Diffusion coefficient (m²/s), P - Pressure (Pa),

Important Correlations Using Dimensionless Numbers

1. Dittus-Boelter equation:

Dittus-Boelter equation for turbulent flow inside a circular cross sectional area pipe is

$$Nu = 0.023 \text{ Re}^{0.8} \text{ Pr}^n$$
 (11)

$$\Rightarrow \frac{hd}{k} = 0.023 \left(\frac{\rho \bar{v}d}{\mu}\right)^{0.8} \left(\frac{C_P \mu}{k}\right)^n \tag{12}$$

Where,
$$n = \begin{cases} 0.4, & \text{Fluid heated} \\ 0.3, & \text{Fluid cooled} \end{cases}$$

Similarly mass transfer analogue of Dittus-Boelter equation is Sh = 0.023 Re^{0.8} Scⁿ. Validity checks to use the Dittus-Boelter equation are $\frac{L}{d} > 60$, 0.6 < Pr < 100, and $2500 < \text{Re} < 1.25 \times 10^6$.

Constant average velocity
$$(\bar{v})$$
:

From equation (12) we get,
$$hd \propto d^{0.8} \Rightarrow h \propto d^{-0.2}$$
Constant mass flow rate (\dot{m}) :
In equation (12), replace \bar{v} by $\frac{Q}{A} \Rightarrow \bar{v} \propto \frac{1}{d^2}$.
We get,
$$hd \propto (\bar{v}d)^{0.8} \Rightarrow hd \propto (\frac{d}{d^2})^{0.8} \Rightarrow h \propto d^{-1.8}$$

Nu - Nusselt number, Re - Reynolds number, Pr - Prandtl number, Sh - Sherwood number, Sc - Schmidt number, h - Convective heat transfer co-efficient (W/m 2 K), d - Diameter (m), k - Thermal conductivity (W/m K), ρ - Density (g/m 3), \bar{v} - Average velocity (m/s), μ - Dynamic viscosity of the fluid (Pa s), C_P - Specific heat capacity (J/kg K), L - Characteristic length of the system (m), Q - Volumetric flowrate (m 3 /s), A - Area (m 2).

2. Sieder-Tate equation :

Sieder-Tate equation for turbulent flow inside a circular cross sectional area pipe is

Nu = 0.027 Re^{0.8} Pr^(1/3)
$$\left(\frac{\mu_b}{\mu_w}\right)^{0.14}$$
 (13)

$$\Rightarrow \frac{hd}{k} = 0.027 \left(\frac{\rho \bar{v}d}{\mu}\right)^{0.8} \left(\frac{C_P \mu}{k}\right)^{(1/3)} \left(\frac{\mu_b}{\mu_w}\right)^{0.14} \Rightarrow \boxed{h \propto d^{-0.2}}$$
(14)

Validity checks to use the Sieder-Tate equation are $\frac{L}{d} \ge 60$, 0.7 < Pr < 16700, and Re ≥ 10000 . Sieder-Tate equation for laminar flow inside a circular cross sectional area pipe is

$$Nu = \left[(RePr) \left(\frac{d}{L} \right) \right]^{(1/3)} \left(\frac{\mu_b}{\mu_w} \right)^{0.14}$$
 (15)

Nu - Nusselt number, Re - Reynolds number, Pr - Prandtl number, h - Convective heat transfer co-efficient (W/m² K), d - Diameter (m), k - Thermal conductivity (W/m K), ρ - Density (g/m³), \bar{v} - Average velocity (m/s), μ - Dynamic viscosity of the fluid (Pa s), C_P - Specific heat capacity (J/kg K), L - Characteristic length of the system (m), μ_b - Dynamic viscosity of the fluid at bulk temperature (Pa s), μ_w - Dynamic viscosity of the fluid at wall temperature (Pa s).

3. Liquids metals (Hg, Na, Lead Bismuth alloy, etc):

- High α liquid metals can be used where high heat removal is to be achieved (e.g :- Coolants in a nuclear reactors).
- Since for liquid metals $\alpha >> \nu$, $\Pr \simeq 0.01$ to 0.04.
- Nu = f(Pe).

 α - Thermal diffusivity (m²/s), Hg - Mercury, Na - Sodium, ν - Momentum diffusivity (m²/s), Pr - Prandtl number, Nu - Nusselt number, Pe - Peclet number.

4. Mass transfer in "liquids" flowing past single sphere

$$Sh = \frac{k_C d}{D_{AB}} = 2 + 0.95 \text{ Re}^{(1/2)} \text{ Sc}^{(1/3)}$$

When sphere is placed in a still fluid, Re= 0. So, Sh = 2

Sh - Sherwood number, k_C - Mass transfer co-efficient for concentration driving force, d - Diameter (m), D_{AB} - Diffusivity of the system (m²/s), Re - Reynolds number, Sc - Schmidt number.

5. For a convective mass transport over (external flow) a flat plate under laminar condition

$$Sh = 0.664 \text{ Re}^{(1/2)} \text{ Sc}^{(1/3)} \text{ and local } Sh_x = \frac{Sh}{2}$$

Sh - Sherwood number, Re - Reynolds number, Sc - Schmidt number.