


Modification CPU09RAM card for UPS backup.

Drill 4 holes 0.9 mm.
Remove some ground layer on both sides.
Cut the +5 Volt trace.

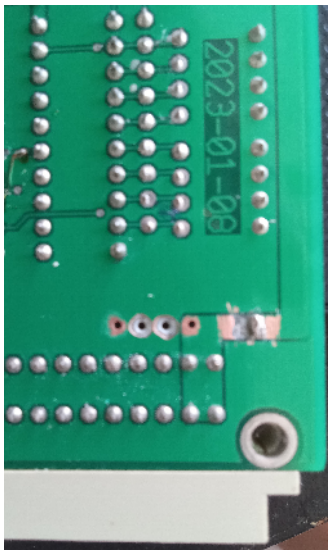


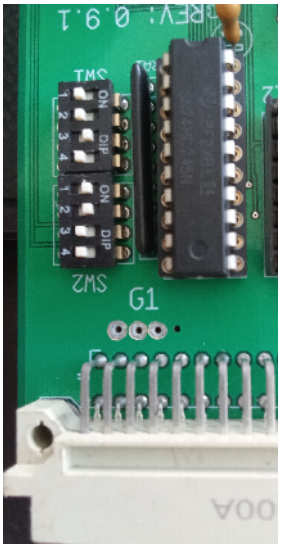

Place the KF2510A-4pin male header.

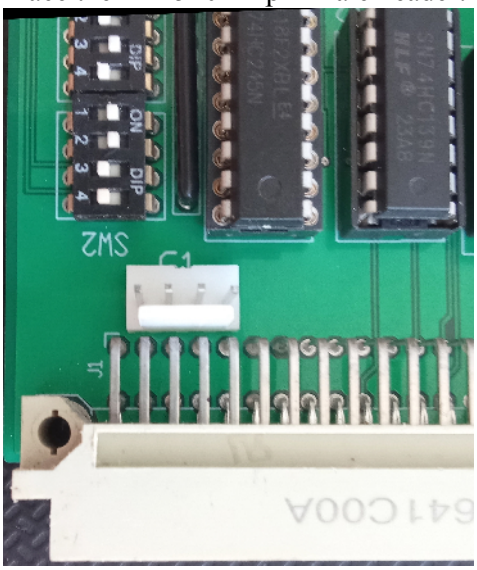

Place the SS12 + 1N5817 diode and the wire.

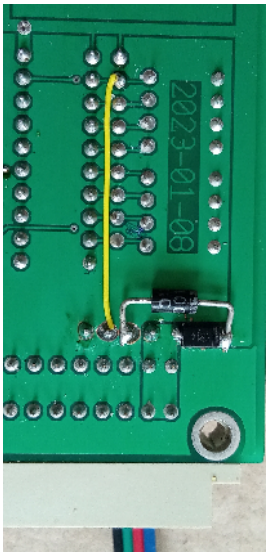

All done.
You can use the card now with or with the power backup.

Connector pins: 1 = VCC system
2 = VCC card
3 = Power failure
4 = ground

The backup voltage modification has been fully tested with a 16MHz CPU09CMI running FLEX and works without data loss or corruption.
This modification will also work flawlessly under UniFLEX.

CdeJ