

This mount is HD + SD35VC0



< Fix M2.5x10 with M2.5 nut
Philips Bolt Washer Head screw

< Fix M2.5x10 with M2.5 nut
Philips Bolt Washer Head screw

^ 2x M3x6

Philips Bolt Washer Head screws

^ 2x M3x6 countersunk screws



^ spacer

^ spacer



< M2.5 nut

< M2.5 nut

- HD: 2x M3x6 Philips Bolt Washer Head screws 2x M3x6 countersunk screw
4x rubber O-ring spacer 4.4x2mm
- SD35VC0: 2x M2.5x10 4x M2.5 nut

This mount is HD + CF-IDE44.V.H0



Fix the CF-IDE44.V.H0 with


- ^ ^ 2x M1.6x10
 | 2mm spacer
 | 2x M1.6 nut
 ^ 2x M2.5x10 + M2.5 flat washer
 2mm spacer
 2x M2.5 nut

For the M1.6 you can use M2.0x10 and M2*3*3.5 Brass heat insert nut.



Fix the drive with 4 Philips Bolt Washer Head screws M3x6 use 2mm spacers.
Fix the GC100 with 2 Philips Bolt Washer Head screws M2.5x10 + M2.5 nut,
use 4mm spacers under the board.

This mount is ST307 + TF35VA0

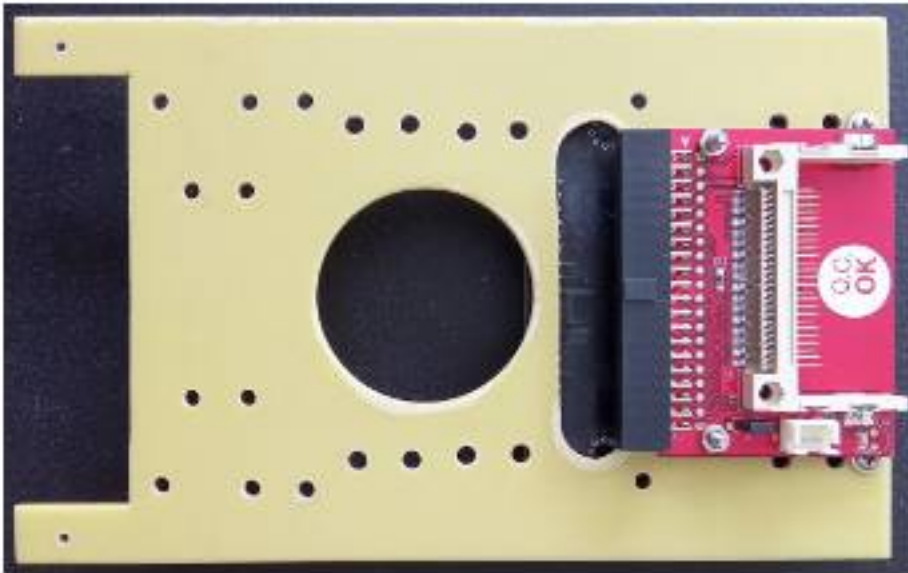

Fix the ST307 with

^ 2x M2.5x10
2mm spacers or M2.5 nuts
2x M2.5 nut



Fix the TF35VA0 with

^ 2x M2.5x10
2mm spacers or M2.5 nuts
2x M2.5 nut