

The 1e mount is a 2.5" HDD + 2.5" HDD Adapter



There are 2 positions for the drive, on each side of the board.



Fix the drive with 4 Philips Bolt Washer Head screws, M3x6

The 2e mount is a 2.5" HDD + GC100



Drill hole 3mm >

Connector hole >



^ replace the connector ^


There are 2 positions for the drive, on each side of the board.



Fix the drive with 4 Philips Bolt Washer Head screws, M3x6


Fix the GC100 with 2 Philips Bolt Washer Head screws, M2.5x10 + M2.5 nut,
use piece GRP board as spacer under the board.

The 3e mount is a SD + SD35VC0

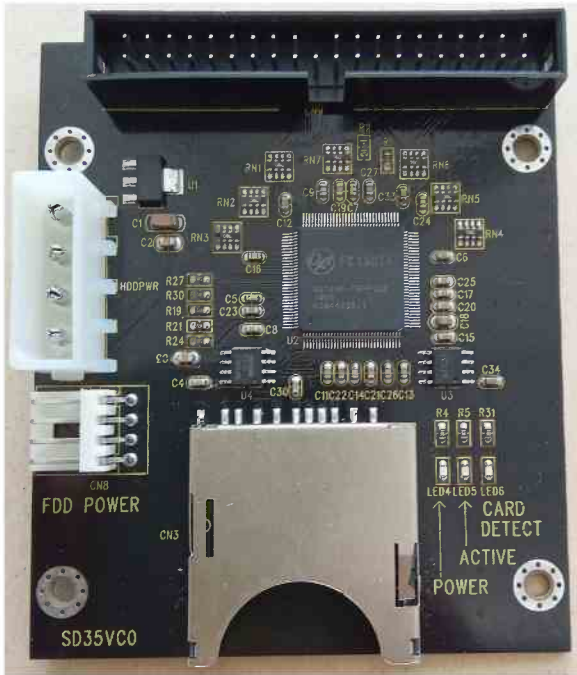

Remove connector >

Cut pins 1mm >

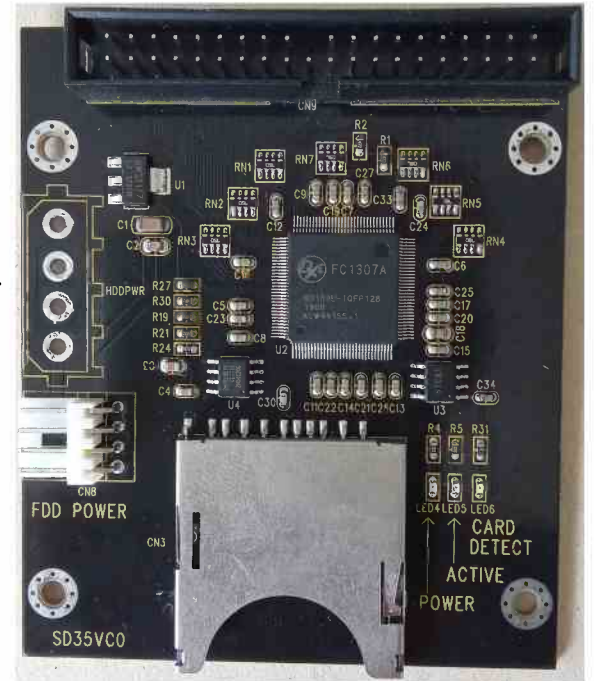

There are 2 positions for the SD35VC0, on each side of the board.




2e position use only the 2 front screw.

Fix the SD35VC0 with 4 Philips Bolt Washer Head screws, M2.5x10 + M2.5 nut, use 1.4mm fiber rings as spacer under the board.

The 4e mount is a CF + ST307



ST307 can be on each side of the board.

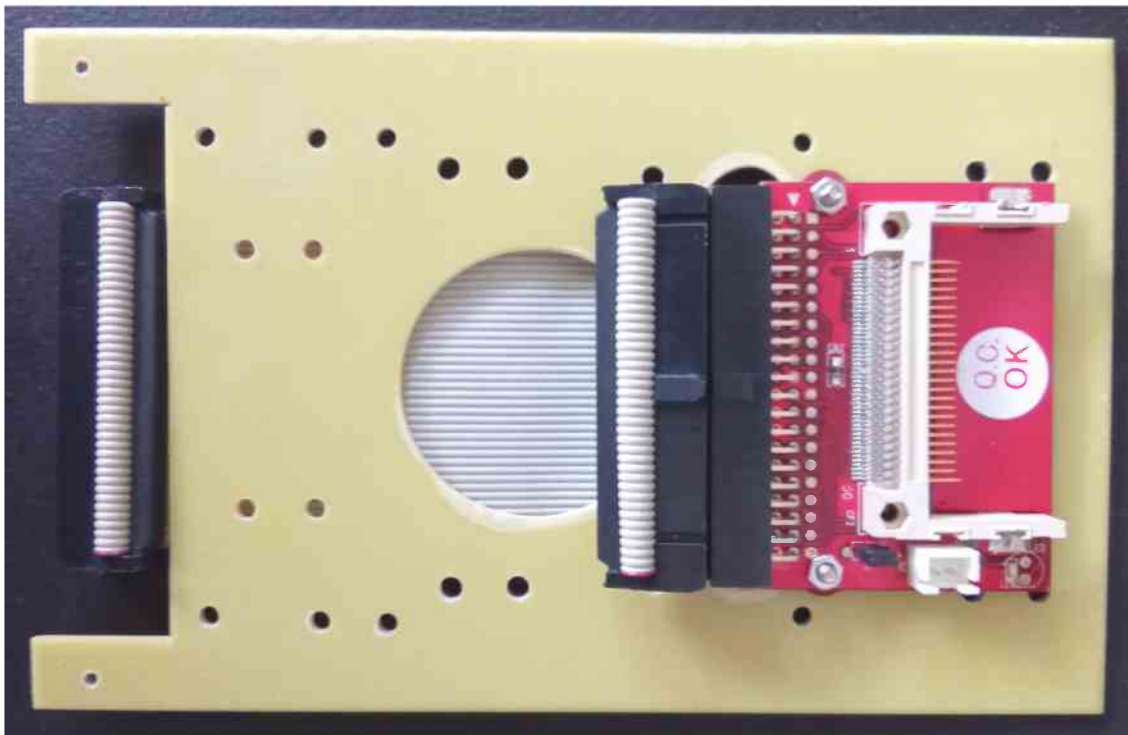

Fix the ST307 with 2 Philips Bolt Washer Head screws, M2.5x10 + M2.5 nut, use 1.4mm fiber rings as spacer under the board.

The 5e mount is a CF + CF-IDE44.V.H0



to be continued as parts arrive

The 6e mount is a CF + CF-IDE40.V.E0



to be continued as parts arrive