



附着 Anchorages

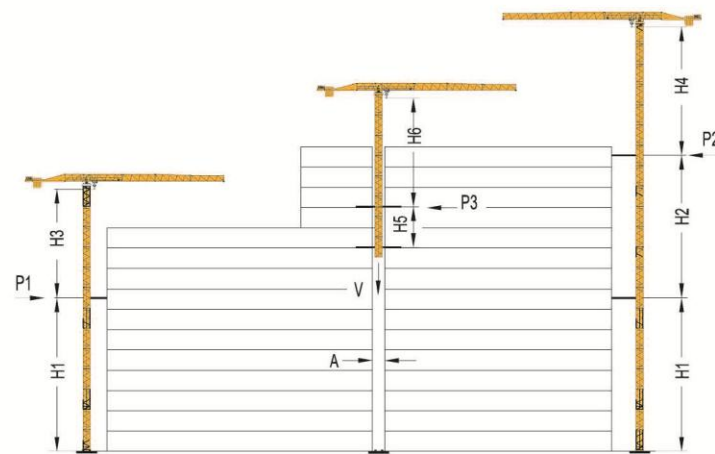


塔身 Mast	m	TG12		TG16	
		工作状态 Working t	非工作状态 Off Working t	工作状态 Working t	非工作状态 Off Working t
H1	25,6	—	—	33,0	—
H2	15,0	—	—	24,0	—
H3	17,9	—	—	35,0	—
H4	17,9	—	—	35,0	—
H5	14,0	—	—	16,0	—
H6	16,7	—	—	35,0	—
P1	—	7,9	10,1	8,6	127,7
P2	—	8,3	10,5	9,4	136,3
P3	—	5,5	7,4	7,6	121,6
V	—	41,7	33,7	48,7	40,7
A	1,5	—	—	2,2	—
B	1,35	—	—	1,8	—

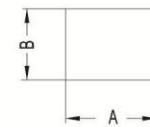

机构性能 Mechanisms

机构特性 Mechanisms specification										kW		
起升 Hoisting		m/min	56,8	28,0	5,0	28,0	14,8	2,5	410m	24/24/4,5	可选择 Options! winch	
		t	2,0	4,0	4,0	4,0	8,0	8,0				
		m/min	80,0		40,0	40,0		20,0		450m		30
		t	2,0		4,0	4,0		8,0				
变幅 Trolleying		m/min	0-58							75Nm		
回转 Slewing		r/min	0,64							75Nm x 2		
行走 Travelling		m/min	22 / 11							3,4/1,7 x 2		
 电源 Power Supply					380V 50Hz / 440V 60Hz							
KVA 供电容量 Necessary Electric Power					43kVA / 50kVA							

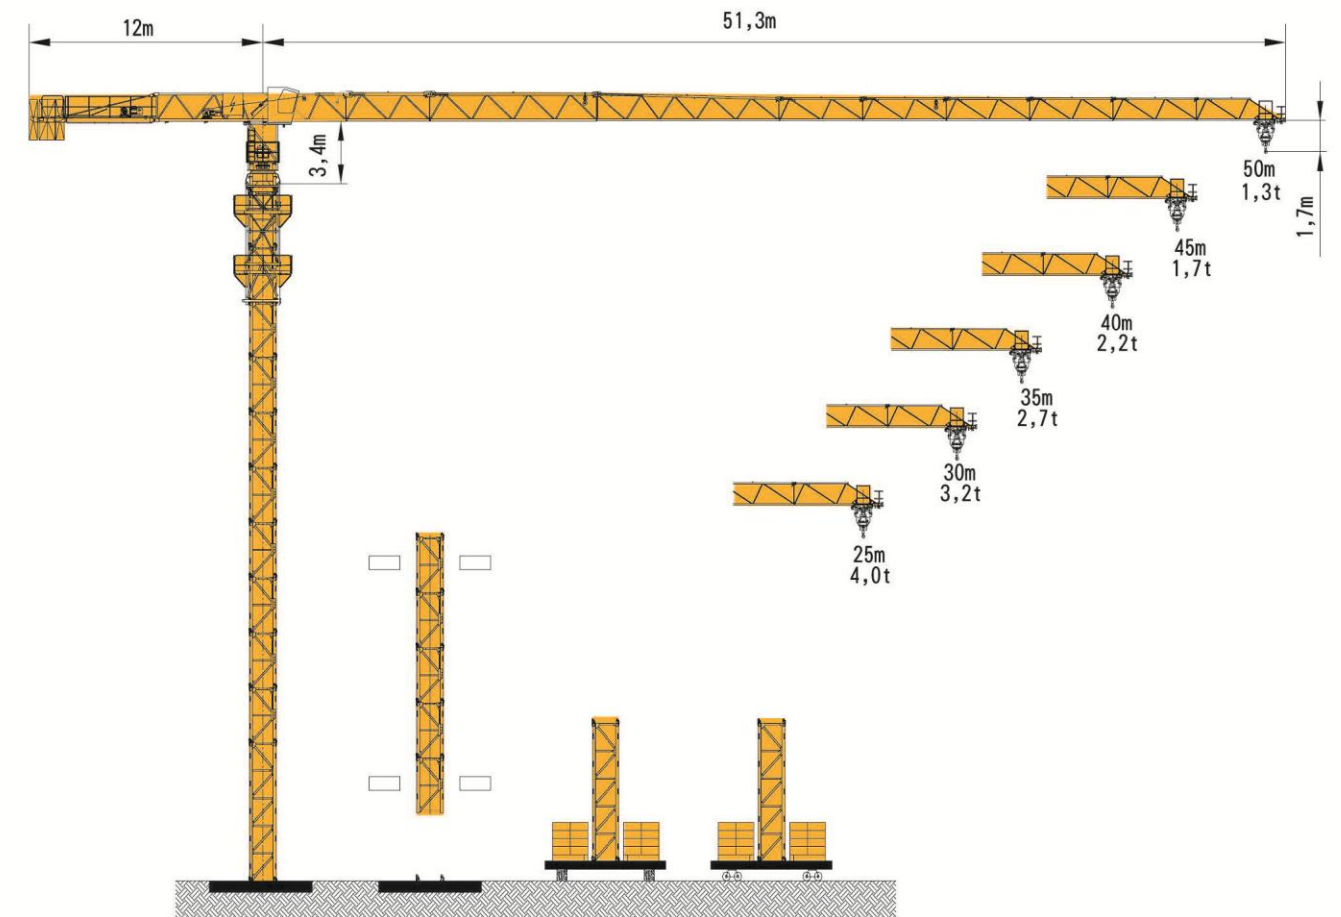

沈阳宝泉商贸有限公司

地址: 辽宁省沈阳市大东区东北大马路264号, 509-511室

电话: 0086-24-26210512

传真: 0086-415-3165597

邮箱: bqswgs@163.com

网址: <http://www.bq-sy.com>

SHENYANG BAOQUAN BUSINESS CO., LTD

ADD: ROOM NO.509-511, NO.264 DONGBEI DAMALU ROAD, DADONG DISTRICT, SHENYANG CHINA


Tel: 0086-24-26210512

Fax: 0086-415-3165597

E-mail: bqswgs@163.com

Url: <http://www.bq-sy.com>


起重臂 Jib

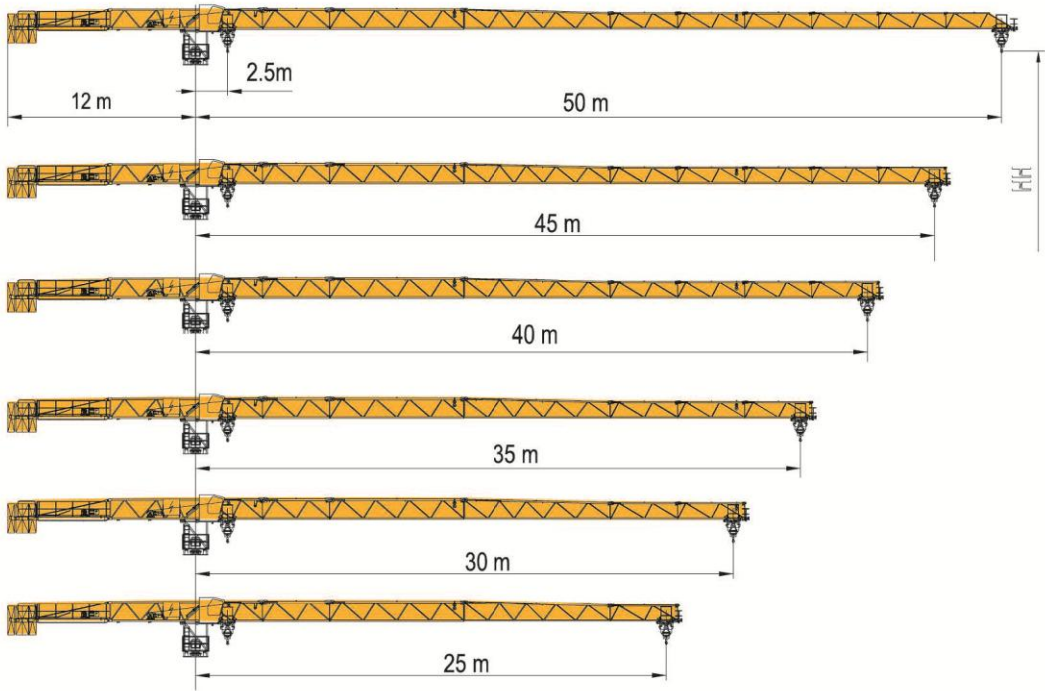

载荷特性 Load Diagrams

	2,5	10,3	13	15	18	18,3	18,9	20	23	25	30	35	40	45	50	
50m	2,5	4,00	4,00	4,00	4,00	4,00	4,00	3,74	3,18	2,88	2,41	2,19	1,72	1,50	1,30	t
45m	2,5	11,9	13	15	18	20	21,5	22	23	25	30	35	40	45		m
40m	2,5	12,9	13	15	18	20	23	23,4	24,1	25	30	35	40			t
35m	2,5	13,4	15	18	20	23	23,8	24,9	25	30	35					t
30m	2,5	13,3	15	18	20	23	23,6	24,7	25	30						t
25m	2,5	13,4	15	18	20	23	25									t

塔身 Tower

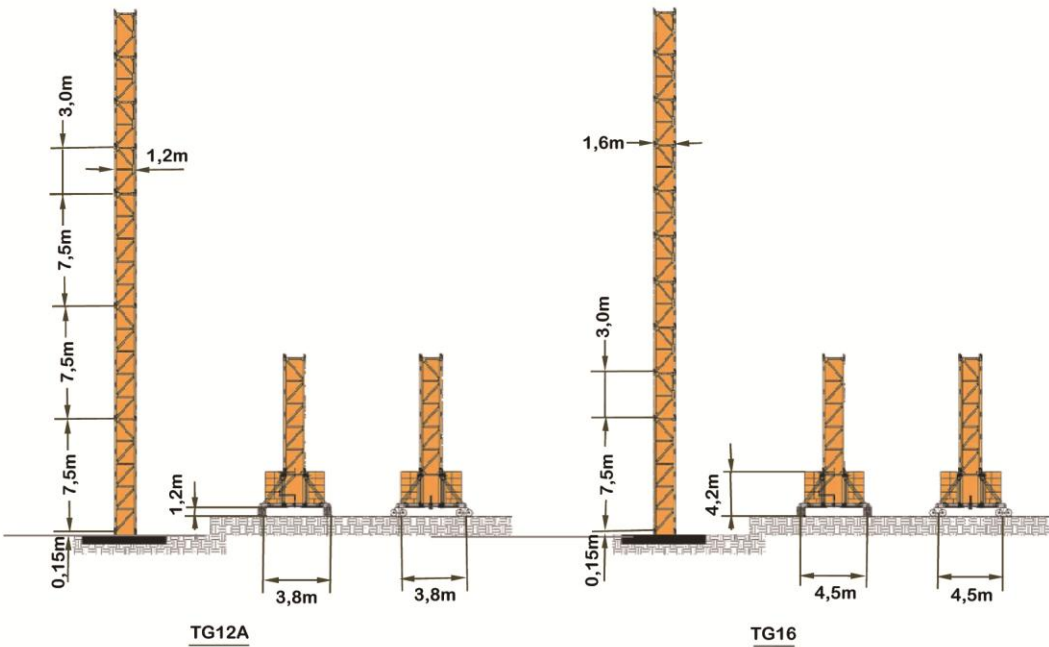

固定式 Stationary type		臂架长度 Boom					
塔身 Mast	臂架长度 Boom						
No.	HH (m)	25	30	35	40	45	50
1	9,6	●	●	●	●	●	●
2	17,1	●	●	●	●	●	●
3	24,6	●	●	●	●	●	●
4	27,6	●	●	●	●	●	●
5	30,6	●	●	●	●	●	●
6	33,6	●	●	●	●	●	●

压重式或行走式 Travelling type		臂架长度 Boom					
塔身 Mast	臂架长度 Boom						
No.	HH (m)	25	30	35	40	45	50
1	9,5	●	●	●	●	●	●
2	17,0	●	●	●	●	●	●
3	24,5	●	●	●	●	●	●
4	27,5	●	●	●	●	●	●
5	30,5	●	●	●	●	●	●
6	33,5	●	●	●	●	●	●

固定式 Stationary type		臂架长度 Boom					
塔身 Mast	臂架长度 Boom						
No.	HH (m)	25	30	35	40	45	50
1	9,6	●	●	●	●	●	●
2	12,6	●	●	●	●	●	●
3	15,6	●	●	●	●	●	●
4	18,6	●	●	●	●	●	●
...	...	●	●	●	●	●	●
12	42,6	●	●	●	●	●	●
13	45,6	●	●	●	●	●	●
14	48,6	●	●	●	●	●	●
15	51,6	●	●	●	●	●	●

压重式或行走式 Travelling type		臂架长度 Boom					
塔身 Mast	臂架长度 Boom						
No.	HH (m)	25	30	35	40	45	50
1	9,5	●	●	●	●	●	●
2	12,5	●	●	●	●	●	●
3	15,5	●	●	●	●	●	●
4	18,5	●	●	●	●	●	●
...	...	●	●	●	●	●	●
12	42,5	●	●	●	●	●	●
13	45,5	●	●	●	●	●	●
14	48,5	●	●	●	●	●	●
15	51,5	●	●	●	●	●	●