



HikCentral Professional Video WebSDK

Developer Guide

Legal Information

© 2019 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

This Document (hereinafter referred to be “the Document”) is the property of Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as “Hikvision”), and it cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise expressly stated herein, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Document, any information contained herein.

LEGAL DISCLAIMER

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE DOCUMENT IS PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. IN NO EVENT WILL HIKVISION BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), OR OTHERWISE, IN CONNECTION WITH THE USE OF THE DOCUMENT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

Contents

Chapter 1 Overview	1
1.1 Introduction	1
1.2 Runtime Environment	1
1.3 Components and Constraints	1
1.4 Terms and Definitions	2
1.5 Update History	2
Chapter 2 Getting Started	3
Chapter 3 API Reference	5
3.1 JS_StartService	5
3.2 JS_Disconnect	5
3.3 JS_CreateWnd	6
3.4 JS_Resize	7
3.5 JS_CuttingPartWindow	7
3.6 JS_RepairPartWindow	8
3.7 JS_HideWnd	9
3.8 JS_ShowWnd	9
3.9 JS_DestroyWnd	9
3.10 JS_WakeUp	10
3.11 JS_RequestInterface	10
3.12 JS_SetWindowControlCallback	11
Chapter 4 Function Identifiers	13
4.1 init	13
4.2 uninit	14
4.3 startPreview	15
4.4 stopAllPreview	16
4.5 startPlayback	17

4.6 stopAllPlayback	18
Appendix A. Appendixes	19
A.1 Dependencies between OpenAPI and Web Plug-in	19
A.2 Sample Code of Starting Live View via Web Plug-in	19
A.3 UI Control List of Web Plug-in	22
A.4 VideoWebSDK Error Codes	23
A.5 FAQ	24
A.5.1 Does one web page support loading multiple plug-ins?	24
A.5.2 How to hide the part of plug-in window that exceeds the web page?	24
A.5.3 Why can't I play the clipped videos?	25
A.5.4 Why can't the plug-in window display but it is available to display the window of demo?	25
A.5.5 Why can't the plug-in window move when scrolling the web page?	25
A.5.6 Why does the blue shadow appear and the window flash when quickly clicking the region outside the plug-in window?	25
A.5.7 Why incorrect APPKey, APPSecret, IP address, and port No. can still initialize successfully?	26
A.5.8 Why is the time on the video image earlier than the video search time?	26
A.5.9 Why is there no effect after enabling 3D positioning?	26

Chapter 1 Overview

1.1 Introduction

The HikCentral Professional Video WebSDK provides a plug-in running on web browser to implement several video functions, such as live view and playback.

1.2 Runtime Environment

Operating System

Microsoft® Windows 7 (32/64-bit) and Windows 10 (32/64-bit)

Web Browser

Internet Explorer® with Version 10 (32-bit) and 11 (32/64-bit)

Google Chrome® with Version 45.0 or Above (32/64-bit)

Mozilla Firefox® with Version 52.0 or Above (32/64-bit)

1.3 Components and Constraints

Components

Component Name	Description
HCVideoSDKWebControl.exe	Installation package of video web plug-in.
demo_window_integration_preview.html	Live view demo.
demo_window_integration_playback.html	Playback demo.
jquery-3.3.1.min.js	Jquery library file.
jsWebControl-1.0.0.min.js	JS file for interacting with the video web plug-in.

Constraints

- For the touch screen with Windows operating system, we do not recommend to install and run the web plug-in.
- Currently, this web plug-in can only be used in the window with the DIV tag. It does not support iFrame mode or pop-up web page.
- For Internet Explorer®, up to 6 plug-in services can be started.
- On a web page, only one window instance is supported.

1.4 Terms and Definitions

Term	Description
DIV Window	Window with DIV tag provided by the web browser.
Plug-in Window	Window provided by the wen plug-in, and it is the sub window of DIV window. Its size varies with the change of DIV window size.
Plug-in Service	Service for managing the interactions among plug-in window, DIV window, and front-end. This service is installed when running the plug-in installation package (HCVideoSDKWebControlService.exe).
Display Window	Window for playing videos.

1.5 Update History

Summary of Changes in Version 1.0.0_Sept., 2019

New document.

Chapter 2 Getting Started

Before You Start

Make sure you have installed the web plug-in (default installation path is **C:\Program Files\HCVideoSDKWebControl**).

Steps

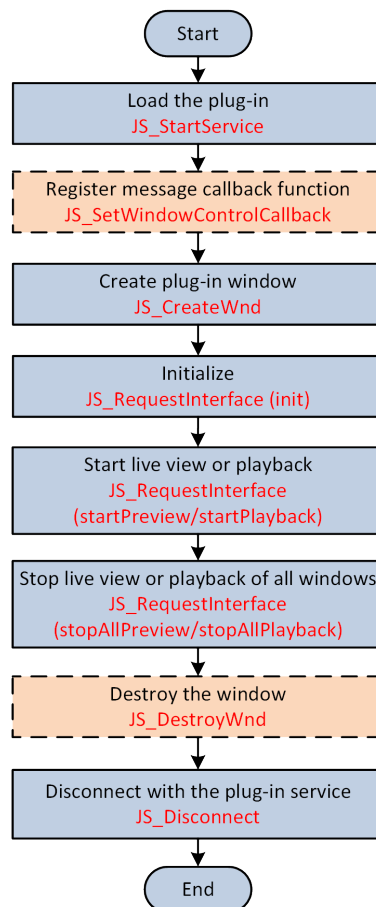


Figure 2-1 Main API Calling Flow

1. Call **JS_StartService** to load the plug-in.
2. **Optional:** Call **JS_SetWindowControlCallback** to register message callback function.
3. Call **JS_CreateWnd** to create a plug-in window.
4. Call **JS_RequestInterface** with the function identifier **init** to initialize the plug-in.
5. Call **JS_RequestInterface** with the function identifier **startPreview** or **startPlayback** to start live view or playback.
6. Call **JS_RequestInterface** with the function identifier **stopAllPreview** or **stopAllPlayback** to stop the live view or playback of all windows.
7. **Optional:** Call **JS_DestroyWnd** to destroy the window.



Note

This API is only for special use, such as when you want to start and stop playing video at any time. And it can deinitialize the plug-in.

8. Call ***JS_Disconnect*** to disconnect with the plug-in service.
-



Note

After calling this API, the window will automatically be destroyed and it can deinitialize the plug-in.

Chapter 3 API Reference

3.1 JS_StartService

Start the plug-in service.

Prerequisite

The plug-in has been created.

API Definition

```
JS_StartService(  
  szType,  
  options  
)
```

Parameters

Parameter Name	Required or Optional	Description
[IN] szType	Required	Service type, set it to "window"
[IN] options	Optional	Set it to "{dllPath: \"./WebInterLayer.dll\"}"

Return Value

Promise object.

Example

Sample Code of Starting Plug-in Service

```
oWebControl.JS_StartService("window", {  
  // oWebControl is the WebControl object  
  dllPath: \"./WebInterLayer.dll\"  
}).then(function(){  
  // Service is started  
},function(){  
  // Starting service failed  
});
```

3.2 JS_Disconnect

Disconnect the plug-in service.

Prerequisite

The plug-in service has been started.

API Definition

```
JS_StartService(  
)
```

Return Value

Promise object.

Example

Sample Code of Disconnecting Plug-in Service

```
oWebControl.JS_Disconnect(  
// oWebControl is the WebControl object  
) .then(function(){  
// The plug-in service is disconnected  
},function(){  
// Disconnecting the plug-in service failed  
});
```

3.3 JS_CreateWnd

Create plug-in window.

Prerequisite

The plug-in service has been started.

API Definition

```
JS_CreateWnd(  
  szId,  
  iWidth,  
  iHeight,  
  options  
)
```

Parameters

Parameter Name	Required or Optional	Description
[IN] szId	Required	Plug-in's parent window ID
[IN] iWidth	Required	Window width
[IN] iHeight	Required	Window height
[IN] options	Optional	Reserved.

Return Value

Promise object.

Example

Sample Code of Creating Plug-In Window

```
oWebControl.JS_CreateWnd("playWnd", 600, 400
// oWebControl is the WebControl object
).then(function(){
// The plug-in window is created
},function(){
// Creating plug-in window failed
});
```

3.4 JS_Resize

Adjust the size and position of the plug-in window.

API Definition

```
JS_Resize(
  iWidth,
  iHeight
)
```

Parameters

Parameter Name	Required or Optional	Description
[IN] iWidth	Required	DIV window width
[IN] iHeight	Required	DIV window height

Example

Sample Code of Adjusting Size and Position of Plug-In Window

```
oWebControl.JS_Resize(700, 500);
// oWebControl is the WebControl object
```

3.5 JS_CuttingPartWindow

Cut a part of the plug-in window.

Prerequisite

The plug-in window has been created.

API Definition

```
JS_CuttingPartWindow(
  iLeft,
  iTop
```

```

        iWidth,
        iHeight
    )

```

Parameters

Parameter Name	Required or Optional	Description
[IN] iLeft	Required	Left margin of the plug-in window
[IN] iTop	Required	Top margin of the plug-in window
[IN] iWidth	Required	Width to be cut
[IN] iHeight	Required	Height to be cut

Example

Sample Code of Cutting a Part of Plug-In Window

```

oWebControl.JS_CuttingPartWindow(0, 0, 100, 100);
// oWebControl is the WebControl object

```

3.6 JS_RepairPartWindow

Restore the cut part of the plug-in window.

API Definition

```

JS_RepairPartWindow(
    iLeft,
    iTop,
    iWidth,
    iHeight
)

```

Parameters

Parameter Name	Required or Optional	Description
[IN] iLeft	Required	Restore the cut left margin of the plug-in window.
[IN] iTop	Required	Restore the cut top margin of the plug-in window.
[IN] iWidth	Required	Restore the cut width of the plug-in window.
[IN] iHeight	Required	Restore the cut height of the plug-in window.

Example

Sample Code of Restoring Cut Part of Plug-In Window

```
oWebControl.JS_RepairPartWindow(0, 0, 100, 100);  
// oWebControl is the WebControl object
```

3.7 JS_HideWnd

Hide the plug-in window.

Prerequisite

The plug-in window has been created.

API Definition

```
JS_HideWnd()
```

Example

Sample Code of Hiding Plug-In Window

```
oWebControl.JS_HideWnd();  
// oWebControl is the WebControl object
```

3.8 JS_ShowWnd

Show the plug-in window.

Prerequisite

The plug-in window has been created.

API Definition

```
JS_ShowWnd()
```

Example

Sample Code of Showing Plug-In Window

```
oWebControl.JS_ShowWnd();  
// oWebControl is the WebControl object
```

3.9 JS_DestroyWnd

Destroy the plug-in window when you don't need to play a video.

API Definition

```
JS_DestroyWnd()
```

Return Value

Promise object

Example

Sample Code of Destroying Plug-In Window

```
oWebControl.JS_DestroyWnd(  
// oWebControl is the WebControl object  
) .then(function(){  
// The plug-in window is destroyed  
},function(){  
// Destroying the plug-in window failed  
});
```

3.10 JS_WakeUp

Wake up the plug-in service.

Prerequisite

The plug-in has been installed.

API Definition

```
JS_WakeUp(  
  szProtocal  
)
```

Parameters

Parameter Name	Required or Optional	Description
[IN] szProtocal	Required	Wake up protocol registered when installing the plug-in. This parameter should be set to "HCVideoSDKWebControl://".

Example

Sample Code of Waking Up Plug-in Service

```
WebControl.JS_WakeUp("HCVideoSDKWebControl://")
```

3.11 JS_RequestInterface

A common request API to implement different functions via different function identifiers.

Request Parameter

Parameter	Data Type	Required/ Optional	Description
funcName	string	Required	Function identifier, refer to <i>Function Identifiers</i> for details.
argument	string	Optional	Parameters in the function identifier, which vary with different function identifiers, refer to <i>Function Identifiers</i> for details. It can be deleted if there is no parameter.

Request Example

```
{
  funcName: "init",
  argument: JSON.stringify({
    appkey: appkey,
    secret: secret,
    ip: ip,
    playMode: 1,
    port: port,
    snapDir: snapDir,
    layout: layout
  })
}
```

Response Parameters

Parameter	Data Type	Required/ Optional	Description
errorCode	int	Required	Error codes: 0-succeeded, 1-failed
errorModule	int	Required	Error modules: 0-succeeded, other values-failed
responseMsg	string	Optional	Error description

3.12 JS_SetWindowControlCallback

Register message callback function.

Calling Sample Code

```
//Register callback function for window control
function setCallbacks() {
```

```
oWebControl.JS_SetWindowControlCallback({  
//oWebControl is a WebControl instance of jsWebControl-1.0.0.min.js  
  cbIntegrationCallBack: cbIntegrationCallBack  
});  
}  
// Call back message  
function cbIntegrationCallBack(oData) {  
  showCBInfo(JSON.stringify(oData.responseMsg));  
}
```


Chapter 4 Function Identifiers

4.1 init

Initialize the web plug-in before calling any other function identifiers.

Request Parameters

Parameter	Data Type	Required/ Optional	Description
appkey	string	Required	APPKey provided by OpenAPI gateway
secret	string	Required	APPSecret provided by OpenAPI gateway
ip	string	Required	IP address of OpenAPI gateway
port	int	Required	Port No. of OpenAPI gateway. If HTTPS is enabled, the default port No. is 443; otherwise, the default port No. is 80.
playMode	int	Optional	Initial playing mode: 0-live view (default), 1-playback, other value-error.
snapDir	string	Optional	Saving path of captured picture. The default saving path is C:\Users\Public\HCVideoSDKWebControl\Capture , the default picture format is JPG, and the default naming rule is "snap_{camera name}_{captured time}.jpg", e.g., "snap_IPCamera 90_20190917112721.jpg".
layout	string	Optional	Window division mode, the available modes are 1×1, 2×2, 3×3, and 4×4, and the default mode is 2×2.

Request Example

```
{
  funcName: "init",
  argument: "{
    appkey: "afsgnhmj34567dgh",
    secret: "vgkk3g0jaoj0igoigj",
```

```
ip: "10.33.31.4",
port: 9016,
playMode: 0,
snapDir: "D:\\SnapDir",
layout: "2x2"
}"
}
```

Response Parameters

Parameter	Data Type	Required/ Optional	Description
errorCode	int	Required	Error codes: 0-succeeded, 1-failed
errorModule	int	Required	Error modules: 0-succeeded, other values-failed
responseMsg	string	Optional	Error description

Response Example

```
{
  "errorCode":0,
  "errorModule":0,
  "responseMsg":"Succeeded."
}
```

4.2 uninit

Deinitialize the plug-in.

Request Example

```
{
  funcName: "uninit"
}
```

Response Parameters

Parameter	Data Type	Required/ Optional	Description
errorCode	int	Required	Error codes: 0-succeeded, 1-failed
errorModule	int	Required	Error modules: 0-succeeded, other values-failed
responseMsg	string	Optional	Error description

Response Example

```
{
  "errorCode":0,
  "errorModule":0,
  "responseMsg":"Succeeded."
}
```

4.3 startPreview

Start live view.

Request Parameters

Parameter	Data Type	Required/ Optional	Description
cameraIndexCode	string	Required	Camera ID
streamMode	int	Optional	Stream types: 0-main stream (default), 1-sub-stream, other values-error.
transMode	int	Optional	Transfer protocol types: 0-UDP, 1-TCP (default), other values-error.
gpuMode	int	Optional	Whether to enable GPU hardware decoding: 0-no (default), 1-yes, other values-error. It is not recommended to enable hardware decoding.

Request Example

```
{
  funcName:"startPreview",
  argument:"{
    cameraIndexCode: "afsgnhmj34567dgh",
    streamMode:0,
    transMode:1,
    gpuMode: 0
  }"
}
```

Response Parameters

Parameter	Data Type	Required/ Optional	Description
errorCode	int	Required	Error codes: 0-succeeded, 1-failed
errorModule	int	Required	Error modules: 0-succeeded, other values-failed
responseMsg	string	Optional	Error description

Response Example

```
{
  "errorCode":0,
  "errorModule":0,
  "responseMsg":"Succeeded."
}
```

4.4 stopAllPreview

Stop live view of all display windows.

Request Example

```
{
  funcName:"stopAllPreview"
}
```

Response Parameters

Parameter	Data Type	Required/ Optional	Description
errorCode	int	Required	Error codes: 0-succeeded, 1-failed
errorModule	int	Required	Error modules: 0-succeeded, other values-failed
responseMsg	string	Optional	Error description

Response Example

```
{
  "errorCode":0,
  "errorModule":0,
  "responseMsg":"Succeeded."
}
```

4.5 startPlayback

Start playback.

Request Parameters

Parameter	Data Type	Required/ Optional	Description
cameraIndexCode	string	Required	Camera ID
startTimeStamp	string	Required	Playback start timestamp, unit: second.
endTimeStamp	string	Required	Playback end timestamp, unit: second.
recordLocation	int	Optional	Video storage locations: 0-central storage (default), 1-device storage, other values-error.
transMode	int	Optional	Transfer protocol types: 0-UDP, 1-TCP (default), other values-error. The devices connected via ISUP only support getting stream based on TCP.
gpuMode	int	Optional	Whether to enable hardware decoding: 0-no (default), 1-yes, other values-error. It is not recommended to enable hardware decoding.

Request Example

```
{
  funcName: "startPlayback",
  argument: "{
    cameraIndexCode: "afsgnhmj34567dgh",
    startTimeStamp: "10237898985",
    endTimeStamp: "10237899985",
    recordLocation: 0,
    transMode: 1,
    gpuMode: 0
  }"
}
```

Response Parameters

Parameter	Data Type	Required/ Optional	Description
errorCode	int	Required	Error codes: 0-succeeded, 1-failed
errorModule	int	Required	Error modules: 0-succeeded, other values-failed
responseMsg	string	Optional	Error description

Response Example

```
{
  "errorCode":0,
  "errorModule":0,
  "responseMsg":"Succeeded."
}
```

4.6 stopAllPlayback

Stop all playback.

Request Example

```
{
  funcName:"stopAllPlayback"
}
```

Response Parameters

Parameter	Data Type	Required/ Optional	Description
errorCode	int	Required	Error codes: 0-succeeded, 1-failed
errorModule	int	Required	Error modules: 0-succeeded, other values-failed
responseMsg	string	Optional	Error description

Response Example

```
{
  "errorCode":0,
  "errorModule":0,
  "responseMsg":"Succeeded."
}
```

Appendix A. Appendixes

A.1 Dependencies between OpenAPI and Web Plug-in

OpenAPI Name	Function of Video Web Plug-in
Get camera information by No.	Live view and playback
Get information of a resource	Live view and playback (search for resource information to get access protocol type)
Get live view stream URL of camera	Live view
Control PTZ by camera No.	Live view
Search for two-way audio URL	Live view
Perform 3D positioning	Live view
Get playback stream URL of camera	Playback

A.2 Sample Code of Starting Live View via Web Plug-in

The following contents show the sample code of starting live view via the web plug-in. For more details, refer to `demo_window_simple_preview.html`.

Reference JS File

```
<script src="jquery-3.3.1.min.js"></script>
<script src="jsWebControl-1.0.0.min.js"></script>
```

Create WebControl Instance

```
var oWebControl = new WebControl({ // Create WebControl instance
  szPluginContainer: "playWnd", // DIV window identifier
  iServicePortStart: 17010, // Start port No.
  iServicePortEnd: 17019, // End port No.
  // CLSID of calling ActiveX control via Internet Explorer 10
  szClassId: " DD55D830-A127-49bd-944C-36AF7CCB245A ",
  cbConnectSuccess: function () {
    // WebControl instance is created
  },
  cbConnectError: function () {
    // Creating WebControl instance failed
  },
  cbConnectClose: function (bNormalClose) {
    // Callback function of plug-in disconnection. bNormalClose's values: "false"-abnormal disconnection, "true"-normal disconnection
  }
});
```

```
}  
});
```

Start Plug-In

```
oWebControl =new WebControl({ // Create WebControl instance  
  szPluginContainer:"playWnd", // DIV window identifier  
  iServicePortStart: 17010, // Start port No.  
  iServicePortEnd: 17019, // End port No.  
  // CLSID of calling ActiveX control via Internet Explorer 10  
  szClassId:" DD55D830-A127-49bd-944C-36AF7CCB245A ",  
  cbConnectSuccess:function(){ //WebControl instance created  
  // Start plug-in service  
    oWebControl.JS_StartService("window",{  
      dllPath:"./WebInterLayer.dll"  
    }).then(function(){ //Plug-in service started  
  //Register message callback function  
    oWebControl.JS_SetWindowControlCallback({  
      cbIntegrationCallBack: cbIntegrationCallBack  
    });  
  //Create display window and set its width and height  
    oWebControl.JS_CreateWnd("playWnd", 90, 600).then(function(){  
      init(); // Initialize after creating playing instance  
    });  
  },function(){ // Creating plug-in service failed  
  });  
},  
cbConnectError:function(){ //Creating WebControl instance failed  
  oWebControl = null;  
  $("#playWnd").html("Starting plug-in... Please wait.");  
  // Execute the error function when the program is not started, and you can call JS_WakeUp to start the  
  program  
    WebControl.JS_WakeUp("HCVideoSDKWebControl://");  
    initCount++;  
    if(initCount < 3){  
      setTimeout(function(){  
        initPlugin();  
      },3000)  
    }else{  
      $("#playWnd").html("Starting plug-in failed. Please check the installation of the plug-in.");  
    }  
  },  
  cbConnectClose:function(bNormalClose){ // bNormalClose's values: "false"-abnormal disconnection, "true"-normal  
  disconnection  
    console.log("cbConnectClose");  
    oWebControl = null;  
  }  
});
```


Enable Event Listening

```
$(window).resize(callback){ // Resize window
  if(oWebControl != null){
    oWebControl.JS_Resize(900, 600); // Redraw plug-in window
    setWndCutting(); // Hide or show the part of the plug-in window that is outside the web page
  }
};
$(window).scroll(callback){ //Scroll events
  if(oWebControl != null){
    oWebControl.JS_Resize(900, 600); //Redraw the plug-in window
    setWndCutting(); //Hide or show the part of the plug-in window that is outside the web page
  }
};
```

Initialize Plug-In

```
var appkey = "21349144"; // Required, appkey provided by OpenAPI gateway
var secret = "DuyWn2H7Qb7jB9rPArth"; // Required, "DuyWn2H7Qb7jB9rPArth" is a secret provided by OpenAPI gateway
var ip = "10.19.132.75"; // Required, IP address of OpenAPI gateway
var playMode = 0; // Required, initial playing mode: 0-live view, 1-playback
var port = 443; // Required, port No. of OpenAPI gateway. If HTTPS is enabled, the default port No. is 443
var snapDir = "D:\\SnapDir"; // Optional, saving path of captured picture
var layout = "1x1"; // Required, window layout
oWebControl.JS_RequestInterface({
  funcName:"init",
  argument:JSON.stringify({
    appkey: appkey,
    secret: secret,
    ip: ip,
    playMode: playMode,
    port: port,
    snapDir: snapDir,
    layout: layout
  })
});
```

Start Live View

```
var cameraIndexCode = $("#cameraIndexCode ").val();
var streamMode = +$("#streamMode").val();
var transMode = +$("#transMode").val();
var gpuMode = +$("#gpuMode").val();
if (!cameraIndexCode ) {
  showCBInfo(msgObj.cameraNoIsEmpty, 'error');
  return
}
oWebControl.JS_RequestInterface({
  funcName: "startPreview",
  argument: JSON.stringify({
```

```
cameraIndexCode : cameraIndexCode ,
streamMode: streamMode,
transMode: transMode,
gpuMode: gpuMode
})
}).then(function (oData) {
  showCBInfo(JSON.stringify(oData ? oData.responseMsg : ''));
});
```

Disconnect with Plug-In Service

```
if(oWebControl != null){oWebControl.JS_HideWnd();// Hide the plug-in window to avoid it disappearing behind the
web page
  oWebControl.JS_Disconnect().then(function(){//The plug-in service is disconnected
  },
  function(){ //Disconnecting with plug-in service failed
  });
}
```

A.3 UI Control List of Web Plug-in

The following table shows the UI controls in live view and playback page of the web plug-in.

Control Name	Description
Camera Name	Click to display the camera name on the video or hide the name during live view and playback.
Stop Playing	Click to stop playing during live view and playback.
Audio	Turn on or off audio during live view or playback. The function is valid only when the stream is the composite stream (including video and audio).
Capture Picture	Capture a picture on the current display window during live view or playback.
Digital Zoom	Zoom in or out the live view or playback image. The function is not supported by panoramic cameras.
Stream Information	Show or hide stream information, which includes camera name, frame rate, resolution, stream type, encoding format, container format, and so on.
PTZ Control	Perform panning, tilting, and zooming operations of cameras. The function should be supported by devices.
Main/Sub-stream Switch	Switch the stream type between main stream and sub-stream for live view.

Control Name	Description
Instant Playback	Not support
Clip	Clip a video segment during playback. It's recommended to play video files via the Hikvision player.
Video Download	Download videos during playback.
Close All	Close all live view or playback windows.
Window Division	Switch window division modes during live view or playback.
Full Screen	Display the live view or playback image in full screen mode. Press Esc to exit from the full-screen mode.
Playback Speed	Slow/fast forward playback.
Single Frame Forward	The function is not supported during reverse playback.
Single Frame Backward	The function should be supported by devices.
Playback/Pause	Start or pause playing during playback, or switch to normal playback during reverse playback.
Reverse Playback/Pause	Start or pause playing during reverse playback, or switch to reverse playback during normal playback.
Accurate Positioning	Set the accurate time point of the video file to start playing the video.

A.4 VideoWebSDK Error Codes

Table A-1 Module Errors

Error Name	Error Code	Description
ERROR_MODULE_COMMON_SUCCESS	0	Succeeded.
ERROT_MODULE_SYSTEM_SERVER	1	System service module error.
ERROT_MODULE_OPENAPI_SERVER	2	OpenAPI service module error.
ERROT_MODULE_PLAY_CONTROL	3	Playing control module error.
ERROT_MODULE_UI_CONTROL	4	Interface control module error.
ERROT_MODULE_WINDOW_CONTROL	5	Window control module error.
ERROR_MODULE_WEBINTERLAYER	6	Web plug-in module error.

Table A-2 Other Errors

Error Name	Error Code	Description
ERROR_CODE_SUCCESS	0	Succeeded.
ERROR_CODE_PARAM_ERROR	1	Incorrect parameter.
ERROR_CODE_DLLLOAD_ERROR	2	Loading dynamic link library failed.
ERROR_CODE_INIT_ERROR	3	Initializing resources failed.
ERRO_CODE_OPENAPI_ERROR	1000	API request failed.
ERROR_CODE_OPENAPI_UNSTART	1001	OpenAPI service is disabled.
ERROR_CODE_LOGIN_ERROR	1002	Login failed.
ERROR_CODE_GETDATA_ERROR	1003	Getting data timed out.
ERRO_CODE_OPENAPI_ERROR	1004	Other errors.
WINDOW_VALID_WND_ERROR	3000	Invalid window handle.
WINDOW_CREATE_WND_ERROR	5000	Creating window failed.
WINDOW_FIND_PARENT_ERROR	5001	Searching for parent window failed.

A.5 FAQ

A.5.1 Does one web page support loading multiple plug-ins?

Question

Does one web page support loading multiple plug-ins?

Answer

No, it doesn't support.

A.5.2 How to hide the part of plug-in window that exceeds the web page?

Question

How to hide the part of plug-in window that exceeds the web page?

Answer

Please refer to ***Enable Event Listening*** for details.

A.5.3 Why can't I play the clipped videos?

Question

Why can't I play the clipped videos?

Answer

For the video files of Hikvision devices, you must play them via the Hikvision player or VLC.

A.5.4 Why can't the plug-in window display but it is available to display the window of demo?

Question

Why can't the plug-in window display but it is available to display the window of demo?

Answer

The width and height of the window configured when creating a WebControl instance (**Create WebControl Instance**) are different with those configured by **JS_Resize** (**Enable Event Listening**).

A.5.5 Why can't the plug-in window move when scrolling the web page?

Question

Why can't the plug-in window move when scrolling the web page?

Answer

You should call **JS_Resize** to adjust the size and position of the plug-in window.

A.5.6 Why does the blue shadow appear and the window flash when quickly clicking the region outside the plug-in window?

Question

Why does the blue shadow appear and the window flash when quickly clicking the region outside the plug-in window?

Answer

It is caused by the browser and you can try to cancel the text background color of the browser.

A.5.7 Why incorrect APPKey, APPSecret, IP address, and port No. can still initialize successfully?

Question

Why incorrect APPKey, APPSecret, IP address, and port No. can still initialize successfully?

Answer

The APPKey, APPSecret, IP address, and port No. will not be verified during initialization. They will be verified only when sending HTTP request.

A.5.8 Why is the time on the video image earlier than the video search time?

Question

Why is the time on the video image earlier than the video search time?

Answer

The time of the device (such as storage devices, cameras) is inconsistent with that of HikCentral Professional. Please synchronize the time on the HikCentral Professional.

A.5.9 Why is there no effect after enabling 3D positioning?

Question

Why is there no effect after enabling 3D positioning?

Answer

Please check whether the device supports this function.



See Far, Go Further