

TĪWESDÆG

TWO DECKS, CROSSED

USER GUIDE · VERSION 1.0 · MAC

K.ODK

Two decks, crossed

Tīwesdæg reads two sound files as **oscillators**. A short window is read over and over — its length is the pitch. Move the window and the pitch moves.

The two decks are wired into each other. Each is cut to 0 and 1; each cut clocks a **register** and pushes the other in, and the registers' stepped voltages go back across to the speed, the place and the window. The pattern never settles, and never wanders off at random. Two struck peaks ring on each cut; two pianos play on the squares from a score; six effects follow, with a sequence.

Too much to read? Skip it. Click the preset numbers on the right one after another. Then open any sound into DECK 1 — a voice, a room, a record — and turn TRIG and PEAK 1 / PEAK 2 slowly.

In your DAW

The app, the AU (AUv3) and the VST3 are the same instrument. In your DAW you'll find **Tīwesdæg** under *k.odk*; it plays on its own. As an audio effect, **Tīwesdæg FX** crosses what comes in with a deck of its own (see page 9).


Installing

1. Open **Tīwesdæg.pkg** and follow the installer. You can choose: **Standalone + AU**, and/or **VST3**.
2. Open **Tīwesdæg** once from Applications — this registers the AUv3.
3. In your DAW, rescan plug-ins. Tīwesdæg is under **k.odk**.

Standalone + AU	The Tīwesdæg app in /Applications, with its Audio Unit (AUv3) inside — the instrument and the effect (Tīwesdæg FX). Logic, GarageBand, Live and other AU hosts list them under *k.odk*.
VST3	In /Library/Audio/Plug-Ins/VST3 — Live, Bitwig, Reaper, Cubase …
The app	Plays on its own through the output chosen in the Mac's Sound settings.

Requires macOS 12 or later · Apple silicon and Intel.

Patch, control, mix

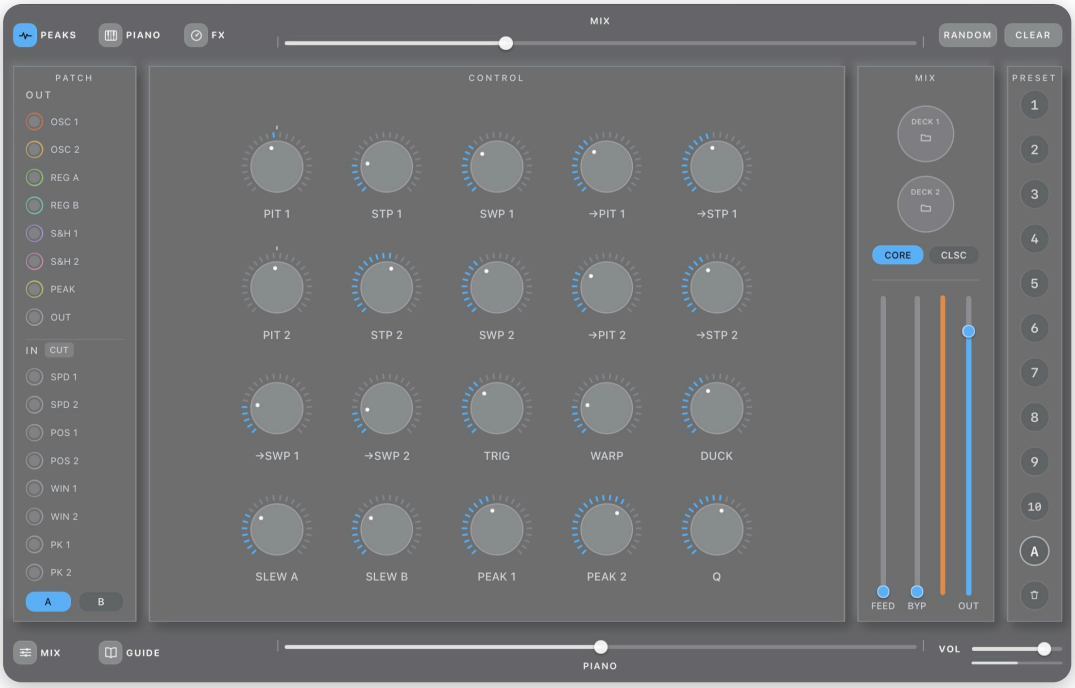

PEAKS **PIANO** **FX**	The panels: the two peaks · two pianos and the score · six effects and their sequence. **Done** or Esc closes them.
RANDOM **CLEAR**	The twenty knobs to new places (GLIDE, in FX, is how slowly) · everything back to the start: the files let go, every knob and cable as at first.
MIX **GUIDE**	The decks and the desk · a short guide.
The sliders	MIX above: how much of the peaks. PIANO below: how loud the pianos. VOL: the output, its meter under it.

Twenty knobs

PIT · STP · SWP	With no file, a deck plays two bare triangles bending each other: pitch, step and sweep.
SPD · WIN · PLC	With a file: how fast the head runs, how long the window is, where it sits.
→ knobs	→PIT 1, →STP 2 …: how much the other side's register moves it.
TRIG	How wide the cut is — and the ceiling on how fast the registers turn.
WARP · CROSS	How much each side presses the other down (WARP while both are oscillators, CROSS with files).
DUCK	How fast.
SLEW A · B	How smooth the registers' steps are.
PEAK 1 · PEAK 2 · Q	The two resonant peaks.

Patch

OUT	OSC 1 · 2 (the decks), REG A · B (the registers as stepped voltages), S&H 1 · 2, PEAK, OUT (the whole sound).
IN	SPD 1 · 2, POS 1 · 2, WIN 1 · 2, PK 1 · 2.
A cable	Click an OUT, then an IN. CUT, then an IN: gone. One cable per input — loops are the point.
A · B	LOOP A / B close the registers into a ring, so the pattern keeps coming round.

Mix and presets


DECK 1 · DECK 2	Open a file into a deck.
CORE · CLSC	The decks as they are now · the earlier sound, each deck reading its band.
FEED · BYP · OUT	The sound back into the cut · the sound passing by the peaks · the level (the orange bar shows it).
PRESET 1 … 10 · A	Click to go back, hold to keep; the bin, then a number, empties it. The letter steps through eight banks.

Two struck peaks




PEAKS	Two resonant peaks, struck on each cut.
FREQ	FREQ 1, FREQ 2, Q, MIX.
LOOP	FEED, BYPASS · TRACK (how far the registers move the peaks) · PING (how hard they are struck).
REGISTER	SLEW A, SLEW B, LOOP A / LOOP B, and the bits as they turn.
CV	Above every panel: click REG A … OSC 2, then the small circle at the end of a slider. Click it again: deeper, then out. CUT takes it out.

A score from the sound

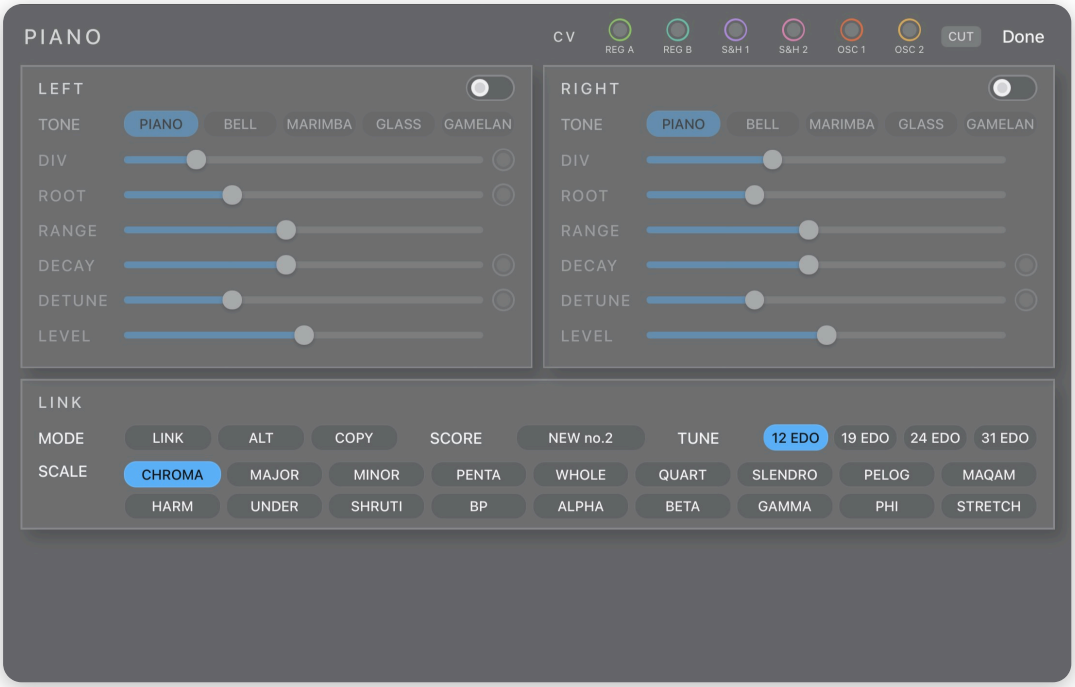

LEFT · RIGHT	Two pianos, each with its switch. They strike when the cut has fired DIV times, so the tempo comes out of the sound.
TONE	PIANO, BELL, MARIMBA, GLASS, GAMELAN.
DIV · ROOT · RANGE · DECAY · DETUNE · LEVEL	How often · the lowest note · how wide · how long · how far off · how loud.
MODE	LINK: both alike · ALT: one after the other · COPY: the left to the right.
SCORE	NEW makes another score. A seed is turned, never dice: the same number, the same score.
TUNE · SCALE	12, 19, 24 or 31 equal steps · which are used. ALPHA, BETA, GAMMA, BP, PHI, STRETCH never come back at the octave.

Six boxes and a sequence

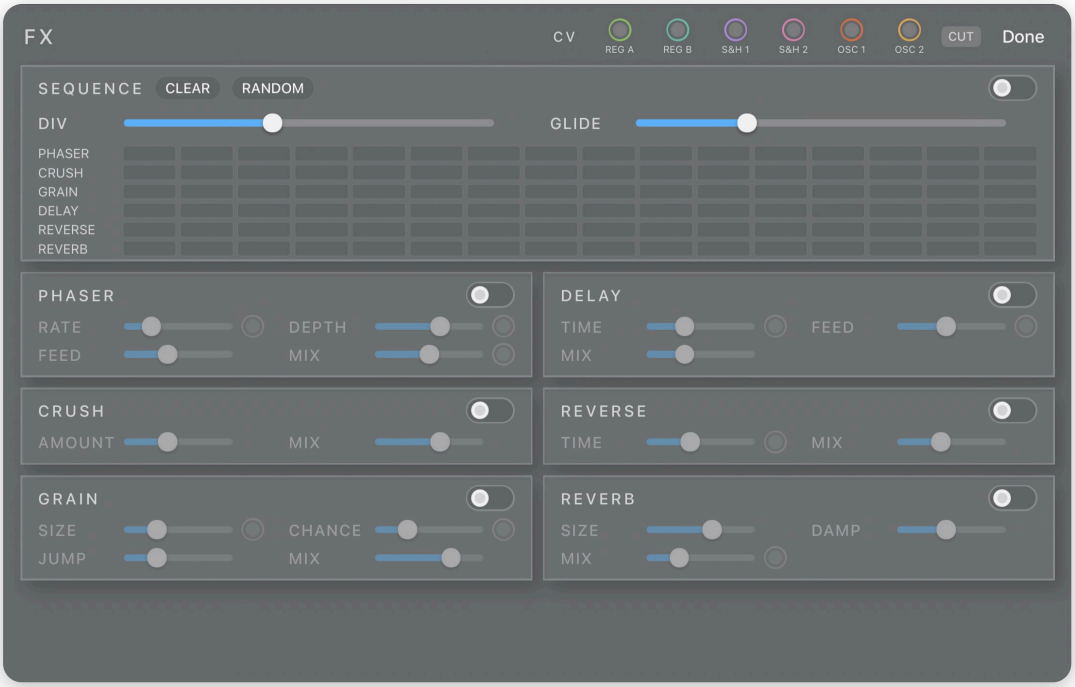

SEQUENCE	Sixteen steps by six boxes; a step every DIV squares, and on each only the lit ones play. Its switch. CLEAR, RANDOM (new values each step). GLIDE: how slowly RANDOM's knobs arrive.
PHASER	RATE, DEPTH, FEED, MIX.
CRUSH	AMOUNT, MIX.
GRAIN	SIZE, CHANCE, JUMP, MIX.
DELAY	TIME, FEED, MIX.
REVERSE	A delay read backwards: TIME, MIX.
REVERB	SIZE, DAMP, MIX.

The decks and the desk



MIXER	OSC 1, OSC 2, MIX (the peaks), PIANO, OUT.
COMP · LIMITER	AMOUNT, SPEED · THRESH, RELEASE. Each with its switch; the limiter is the last thing the sound passes.
SOURCE	OPEN a file into the deck (up to two minutes; the song keeps it), then OSC or FILE — its bare oscillators or its file.
WARP · RUNG	On OSC: how far the two triangles bend each other · RUNG ties the steps to the registers.
On FILE	POSITION (click or drag on the wave), RANGE, PLAY · LOOP · SWEEP · ALL, GAIN, SPEED (¼ ½ 1 2 4).

Tīwesdæg FX, and a few ways in

On an audio track, deck 1 of **Tīwesdæg FX** is what comes in (GAIN is its level) and deck 2 its partner — oscillators or a file. They cut and cross each other as two decks do: the registers, the peaks, the pianos and the effects all follow. While nothing comes in, it is quiet.

A first sound	Open a voice into DECK 1, leave DECK 2 on its oscillators, raise TRIG until the registers start to turn.
Feedback	Patch OUT into SPD 1: the sound runs its own speed.
Rings	PEAKS › PING up, Q high, then move PEAK 1 slowly.
Tunes	PIANO › LEFT on, MARIMBA, SCALE PELOG, DIV low.
Steps	FX › SEQUENCE on, RANDOM, a few boxes lit.
In a DAW	The host sees eight knobs for automation: SPD 1 · 2, WIN 1 · 2, PEAK 1, Q, FEED and MIX.

Credits

Tīwesdæg — k.odk (Kei Odaka)
Support · keiodak.github.io/privacy/tiwesdaeg-support.html · kodk.dev@gmail.com

Requires macOS 12 or later · Apple silicon and Intel.