



Guidance of **B-form System**

Wall & Column Formwork



This is framed modular formwork system


It is composed by Formwork panel and Accessories.

Formwork Panel: Steel frame riveted 12mm plywood

Steel frame: Q235B (GB/T700-2007)

Plywood: High quality hardwood or Eucalyptus film faced construction plywood with 12mm.

Permitted concrete pressure: 90 kN/m²

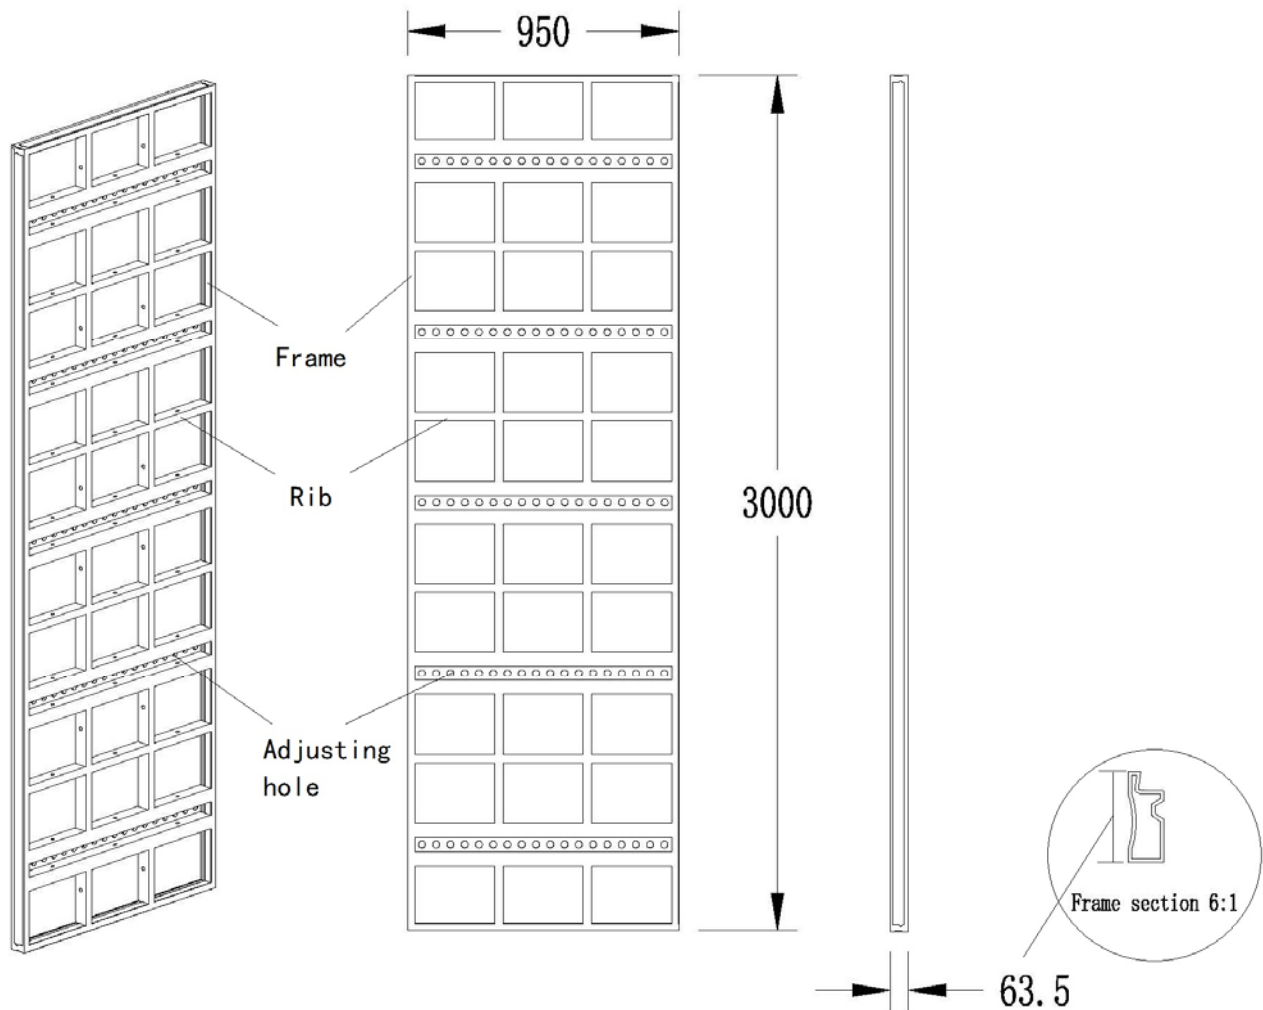

外框: Frame 内格 : Rib 调节孔 : Adjusting hole

The distance of adjusting hole is 50mm. It is minimum adjust increment.


Seal off the unused holes in the formwork sheet of the Universal panels with plugs R 20.



Our design though is SIMPLE IS BEST, Only 9 regular size formwork panel:

3000x1200; 3000x950; 3000x600; 1200x1200; 1200x950; 1200x600;


600x1200; 600x950; 600x600; (As following drawing)

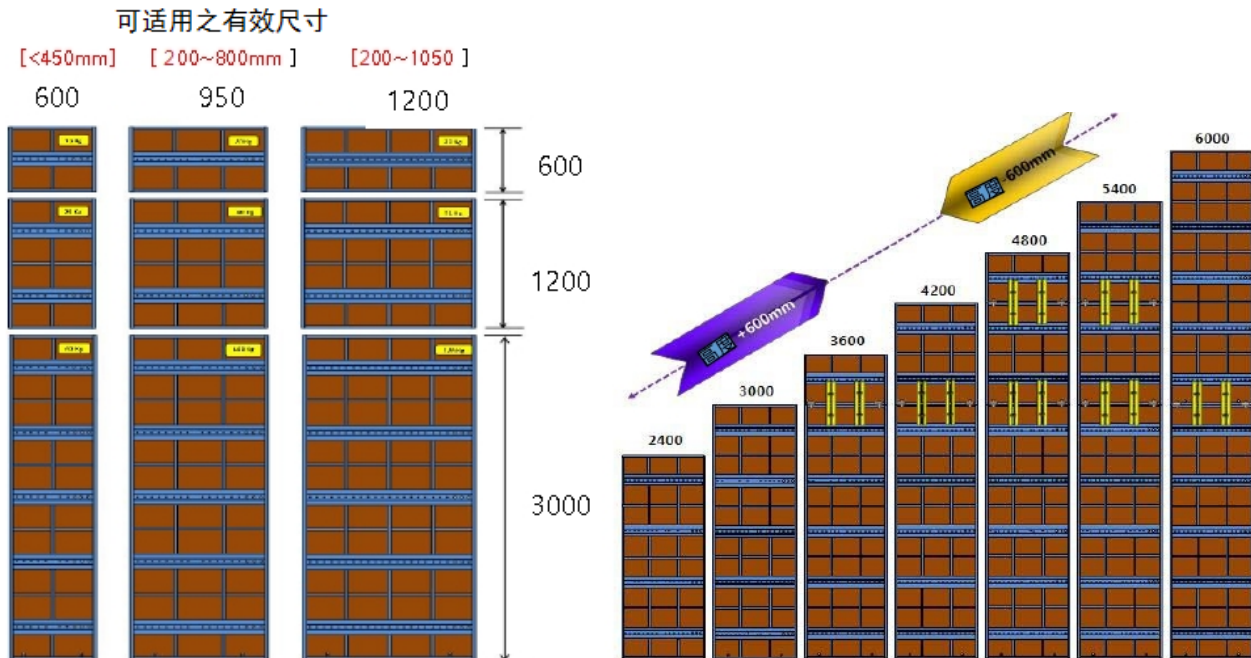




Notice: The max working width of one single panel should be less 150mm than panel's width.

The panel can be jointed to any height and width to fit actual requirement in jobsite.

The column dimension adjust method: (Section of column)

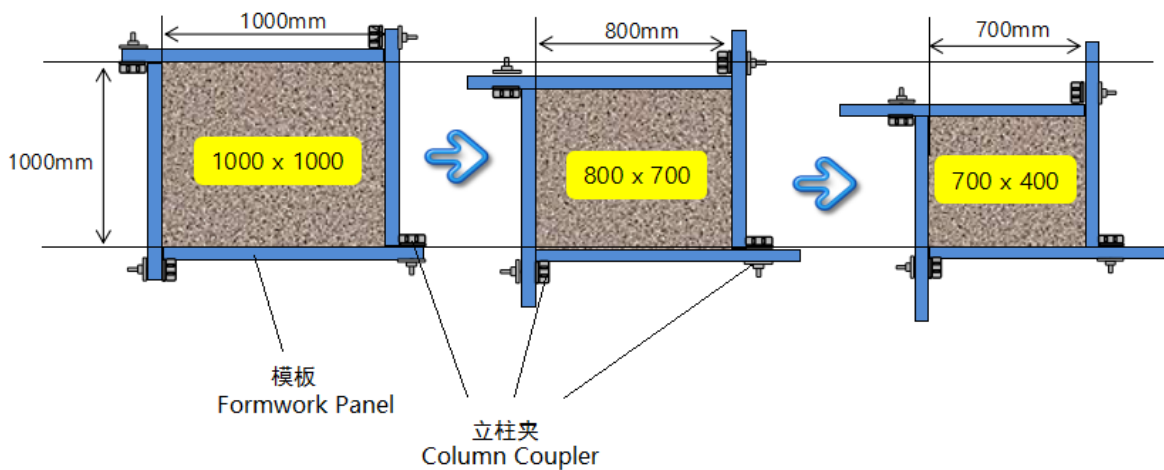


Shear wall solution

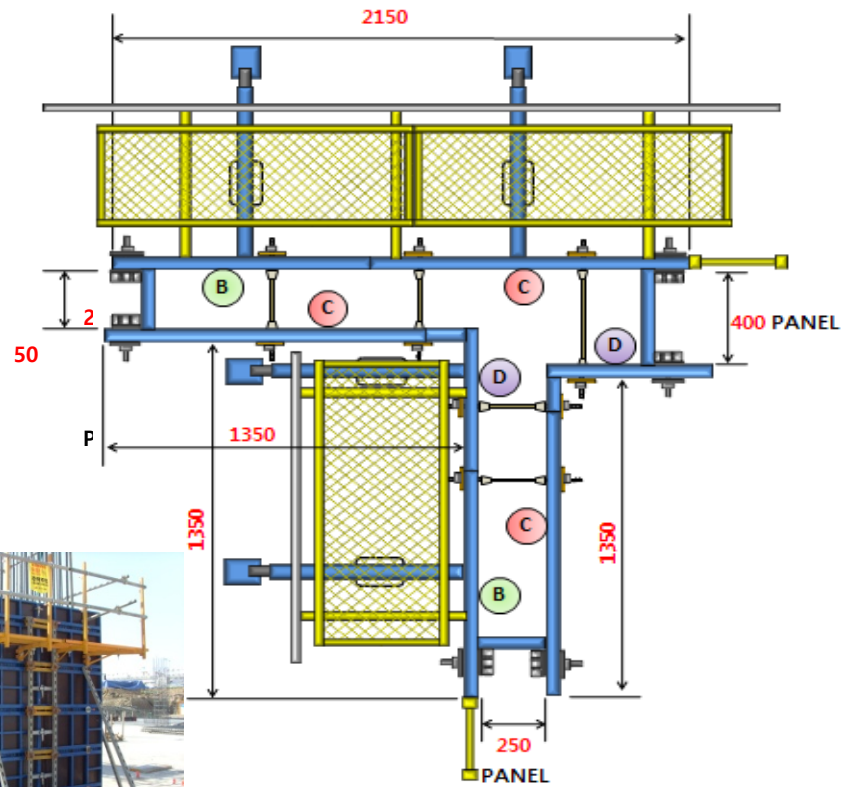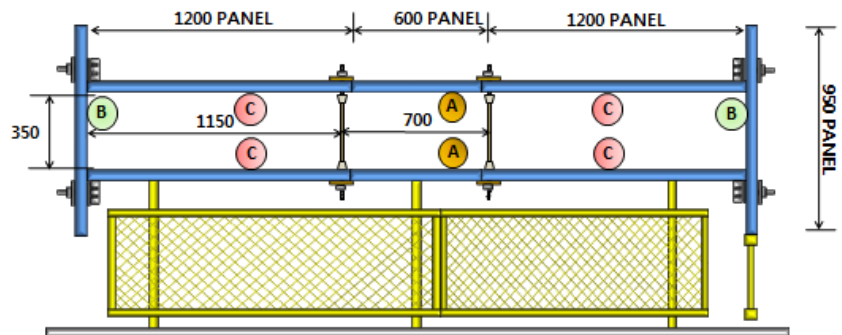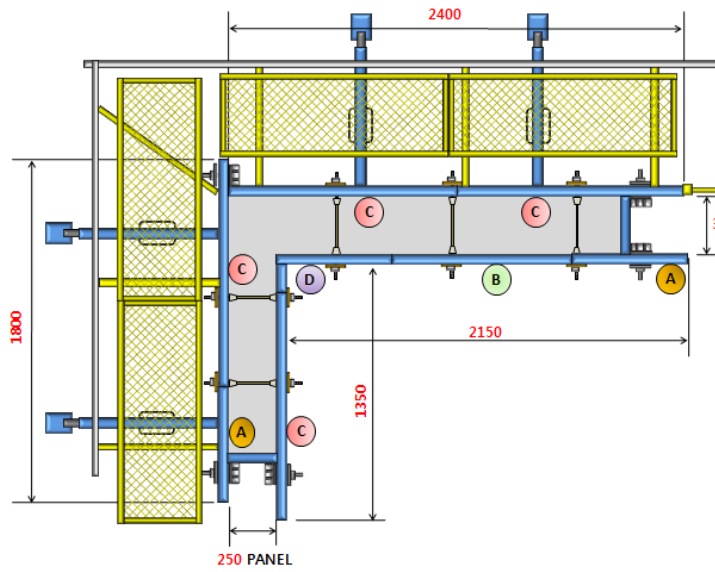


Fastener Accessories:

1. Column Coupler

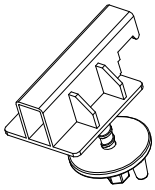


Column coupler (立柱夹) is used for vertical connect two formwork panel, it' s composed by lock catch (锁扣头) and disk nut (盘型螺母) .

Usage: Insert the lock catch's rod to adjusting hole,

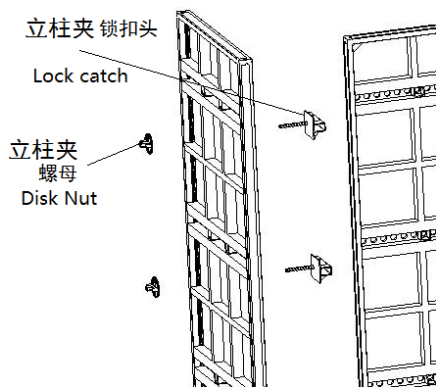

Change the position of column coupler by adjusting hole, then 4 formwork panel surround area will be changed the dimension. To be suitable for different section size column applications.

2. Standard Clamp


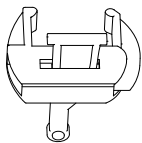


Standard clamp (标准夹) is used for connect two formwork panel to expand formwork area and height. It's not only use for connect formwork panel, but also be used for connect ladder, caster, rebar regulator, this is multifunction design, in order to more convenience in jobsite.



3. Alignment coupler

Alignment coupler (大力夹) is used for connect two formwork panel, but also it has aligned function. It's reinforcements of standard clamp in connection.

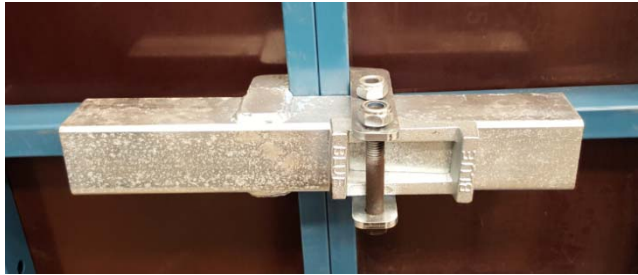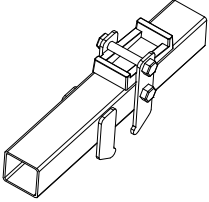

These accessories' locking and unfasten use hammer is enough. Improve work efficiency, simplify working.

Facilitate Accessories


1. Ladder & Work Platform



Working access to monitored concrete pouring , the feature as follows :

- A. Utilize normal steel pipe as handrail instead of design specially-made. Take full advantage of exactly materials in jobsite.
- B. Use same fasten clamp (C-clamp) on handrail and metal plank, multifunction design.
- C. Use same connection mode in formwork panel and ladder (by standard clamp). Let the ladder can be erect and move quickly.

Sketch of work platform:

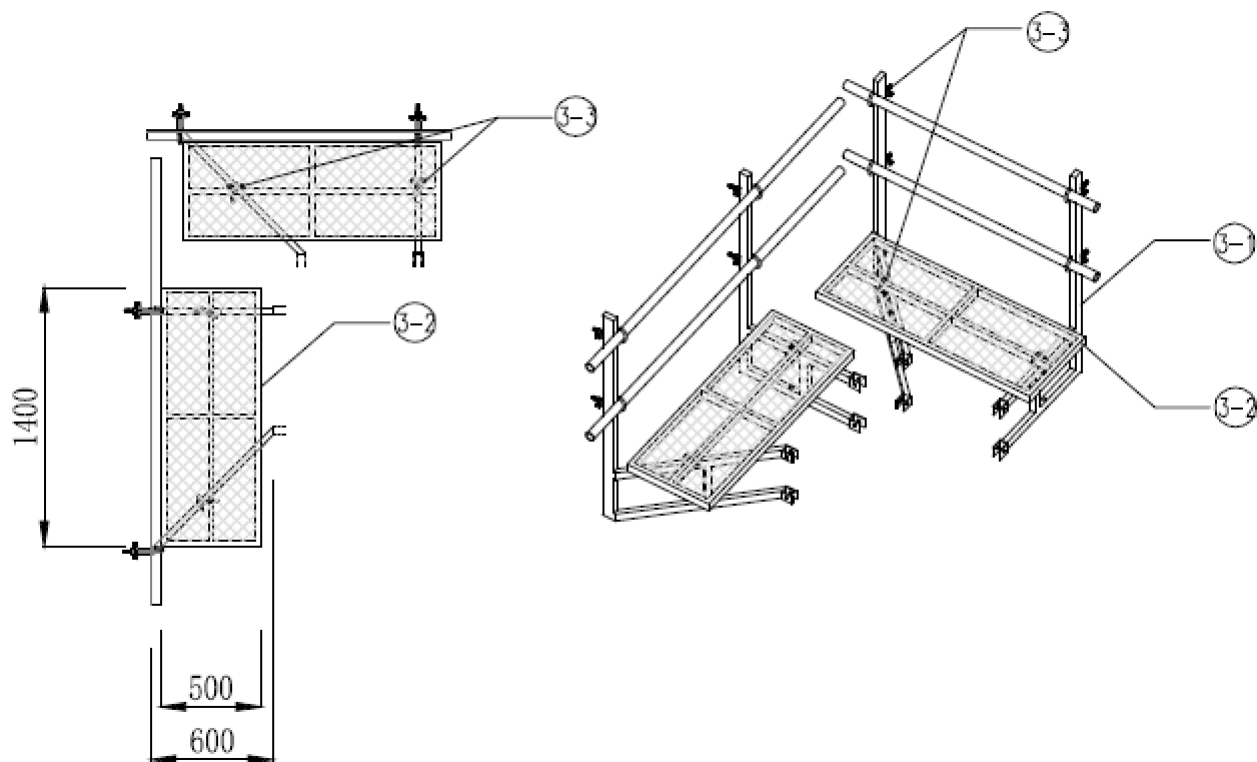


Component :

3-1 : Standard

3-2: Metal Plank

3-3: C-Clamp

Handrail use normal steel pipe.

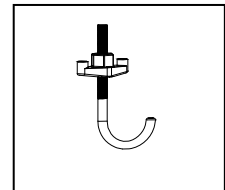

Permitted service load: 1.5 kN/m² (150kg/m²)

Load Class 2 to EN 12811-1:2003




2. Wheel set (Caster)



Using bolts or clamp to connect on the formwork panel, twist the handle, you can lift the formwork suite, easy to move, although the formwork is heavier, just 1 or 2 people can easily move it, from one work position to another quickly and flexible, needn't setup formwork for every one column, meanwhile, reduce the cost of using of crane.



Because it can be easily removed, one set is shareable for many formwork suite, save the cost.

In order to keep the formwork suite stable, safety and use convenience, it was designed 2 type. Usually use 2 rib-connect type and 1 side-connect type in half column formwork suite.

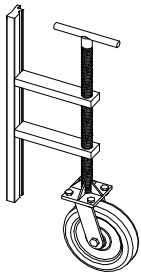

Side- connect


Connect by Standard clamp

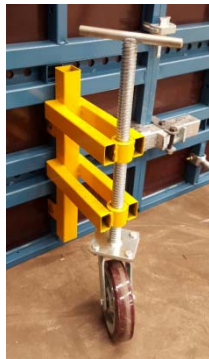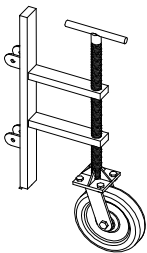

Rib- connect

Connect by bolt



3. Crane hook

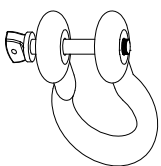

Provide a lift point for formwork panel.


Connect on the rib of formwork panel by bolt.

4. Rebar Regulator

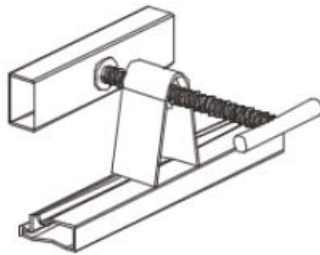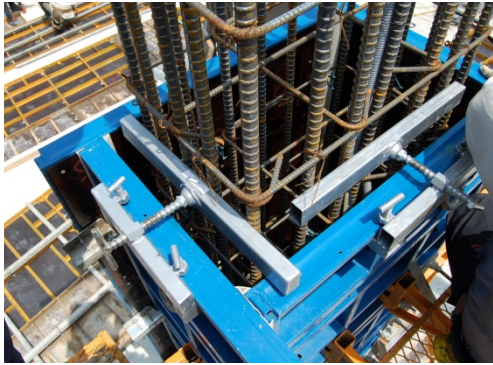

Used to secure the position of rebar to prevent dislocation. Use same shaped profile with formwork frame, easily to connect and dismantle by standard clamp.


5. Chamfer strip

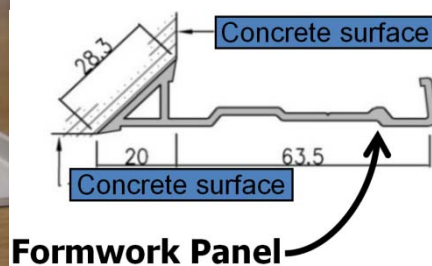


Some region have safety regulations on the corner of construction components, it cannot appear sharp angles.

The traditional method is to use a triangular section of wood to nail in the edges of the formwork.

This chamfer strip can be install on the side of formwork panel, need not nail to fix.

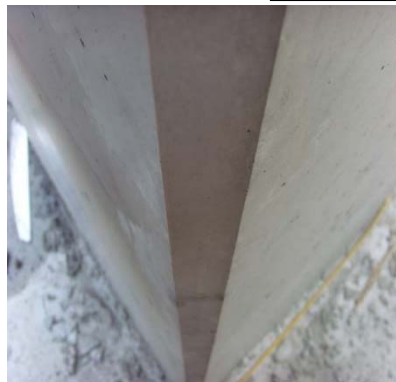







6. Push-Pull Prop



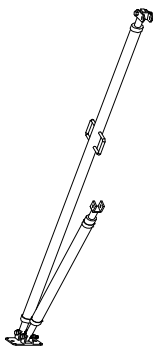


Shoring the formwork keep and adjust the angle of verticality.




Connect the formwork by bolt and fixed on the rib. Another end be fixed on the concrete harden surface by anchor bolt.

Wall solution components:

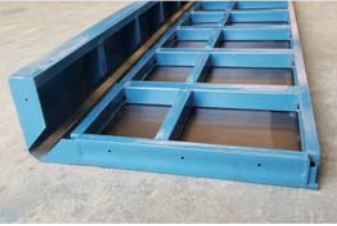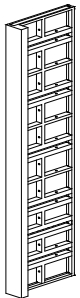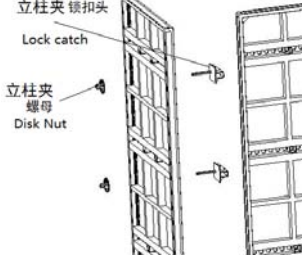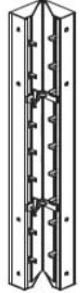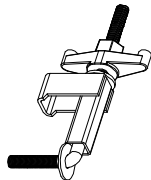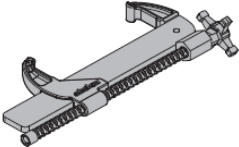
		1. Internal corner Elastic corner let formwork dismentle more easy with enough strength.
		2. No external corner design External corner is unnecessary, why need more accessories when we have good coupler design?
		3. Articulated Corner Similar to hinges, let any different angle forming is possible.
		4. Infill material connector
		5. Infill clamp Fix narrow gap by infill materials quickly. Scope: 0~200mm
		6. Waler clamp Align all panel when integral lift and erection.

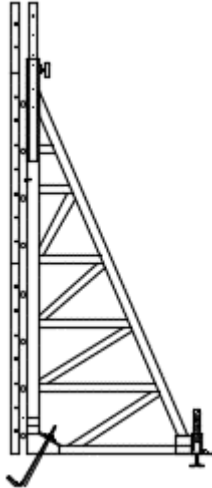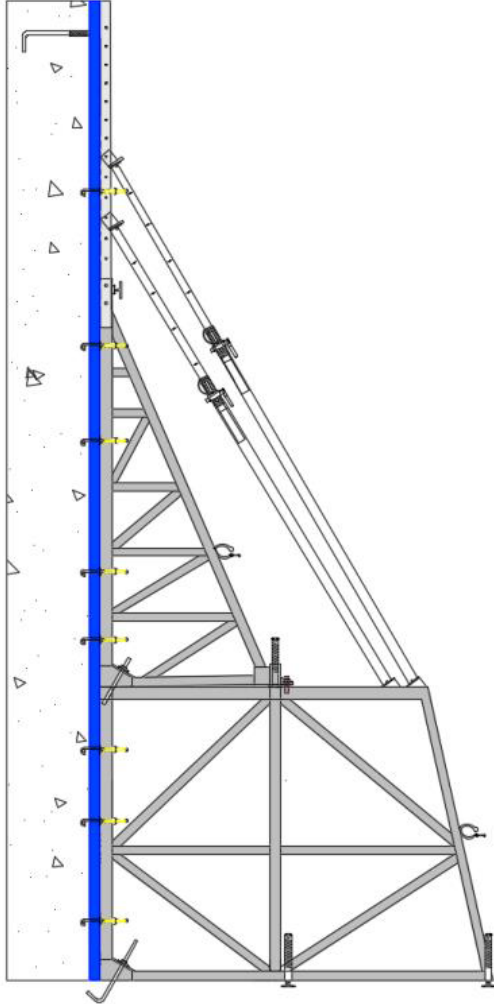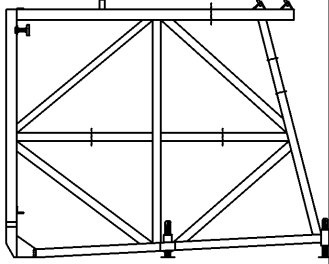		7. Single side supporter B-form for single-side wall up to 6m 
		Supporter connector Simple, convenience and safe connect supporter with formwork panel 

Shear Wall assembly:

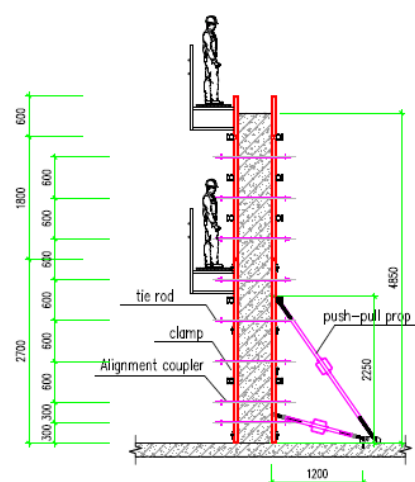
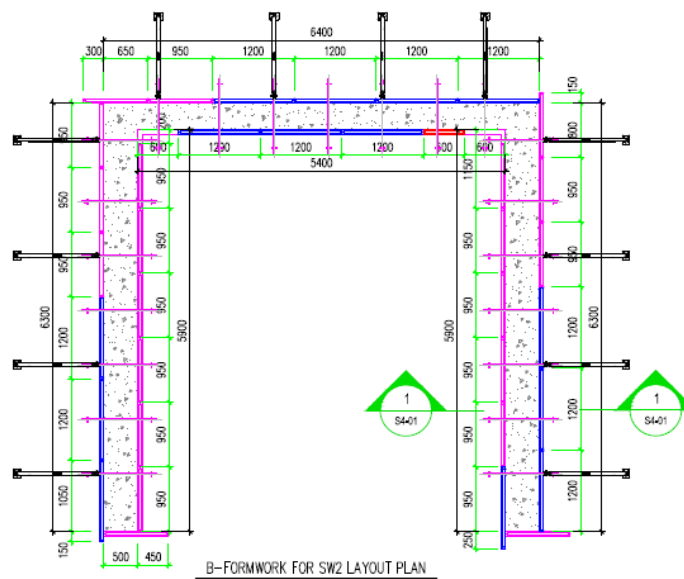
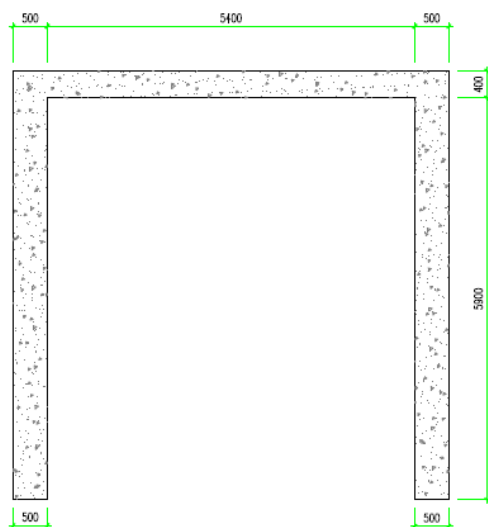


SECTION 1
(LT.6~LT.11)


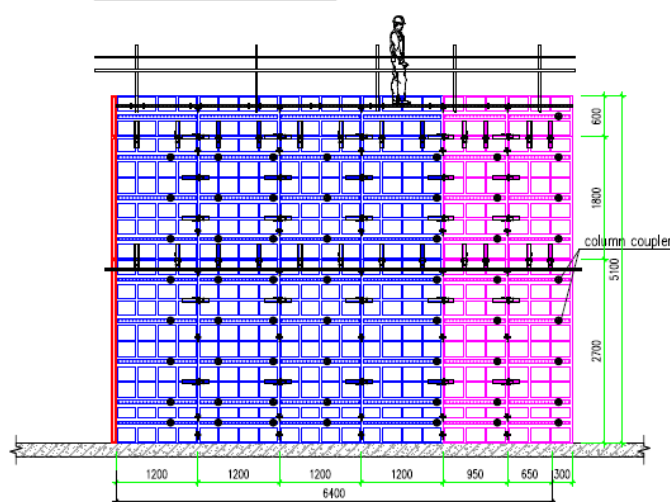


REAR ELEVATION
(LT.6~LT.11)

Retaining wall single-side form assembly

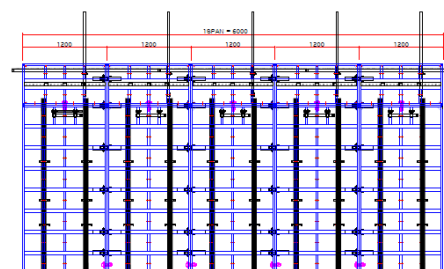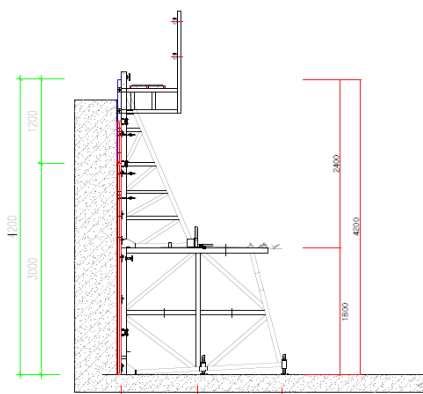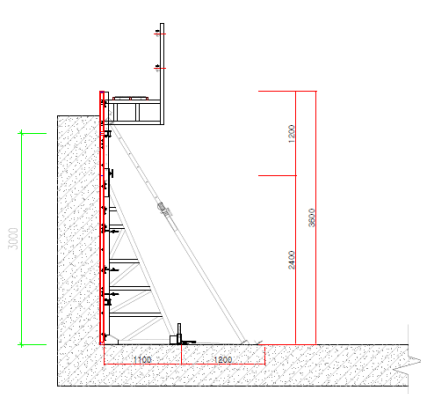

Column assembly :

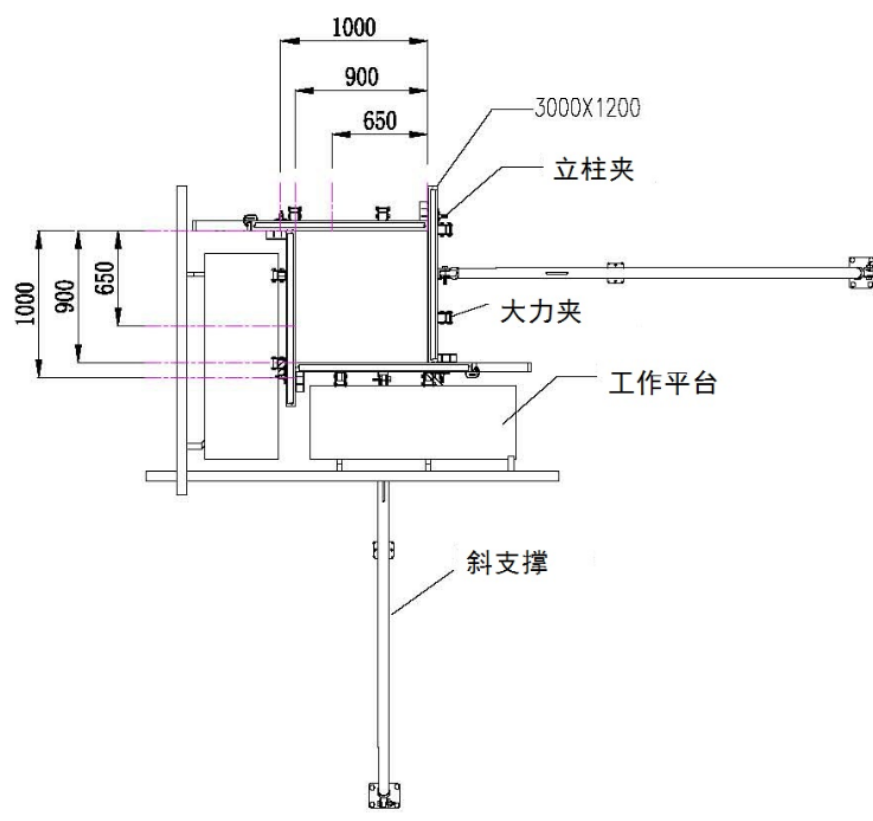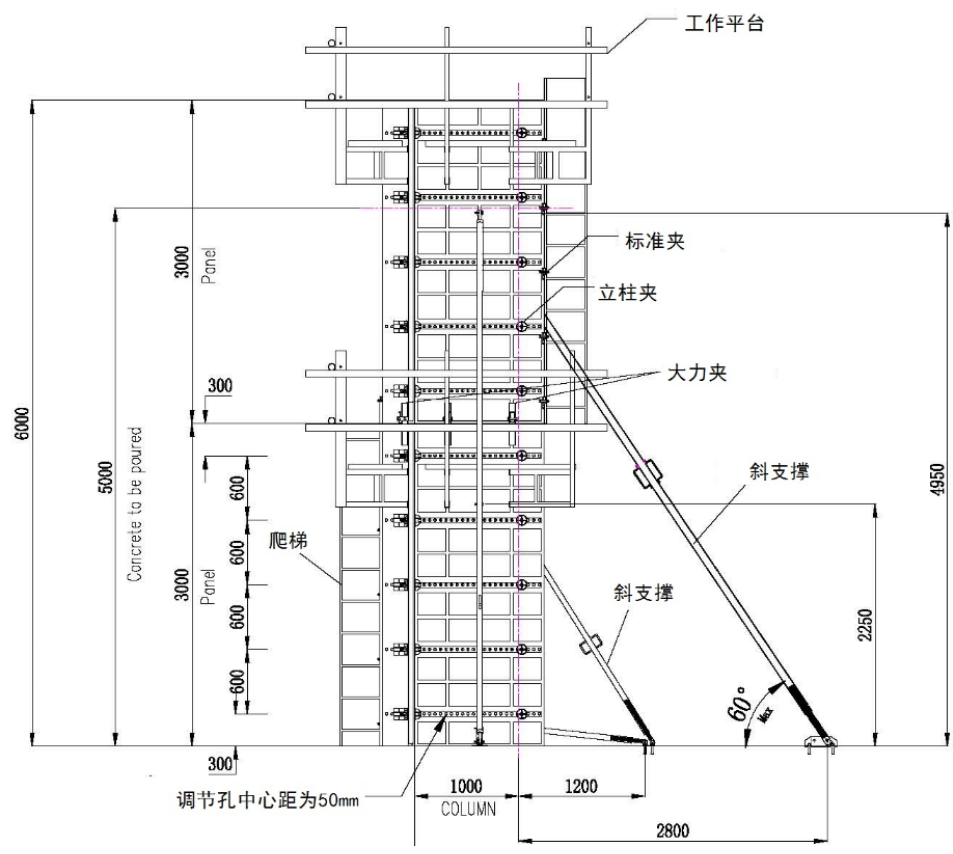

About surface panel:


The surface panel of B-form is 12mm film faced plywood. We know the plywood's service life are limited, as usually, it can be used about 50 times in the B-form frame.

That means you need change new plywood. Actually it's very easy and convenience.


Only 2 step: Rivet ; Seal side

Blind rivet (5*20)

Silicone sealant

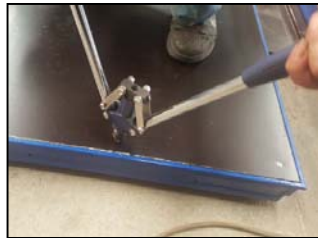

Install and change plywood by Rivet

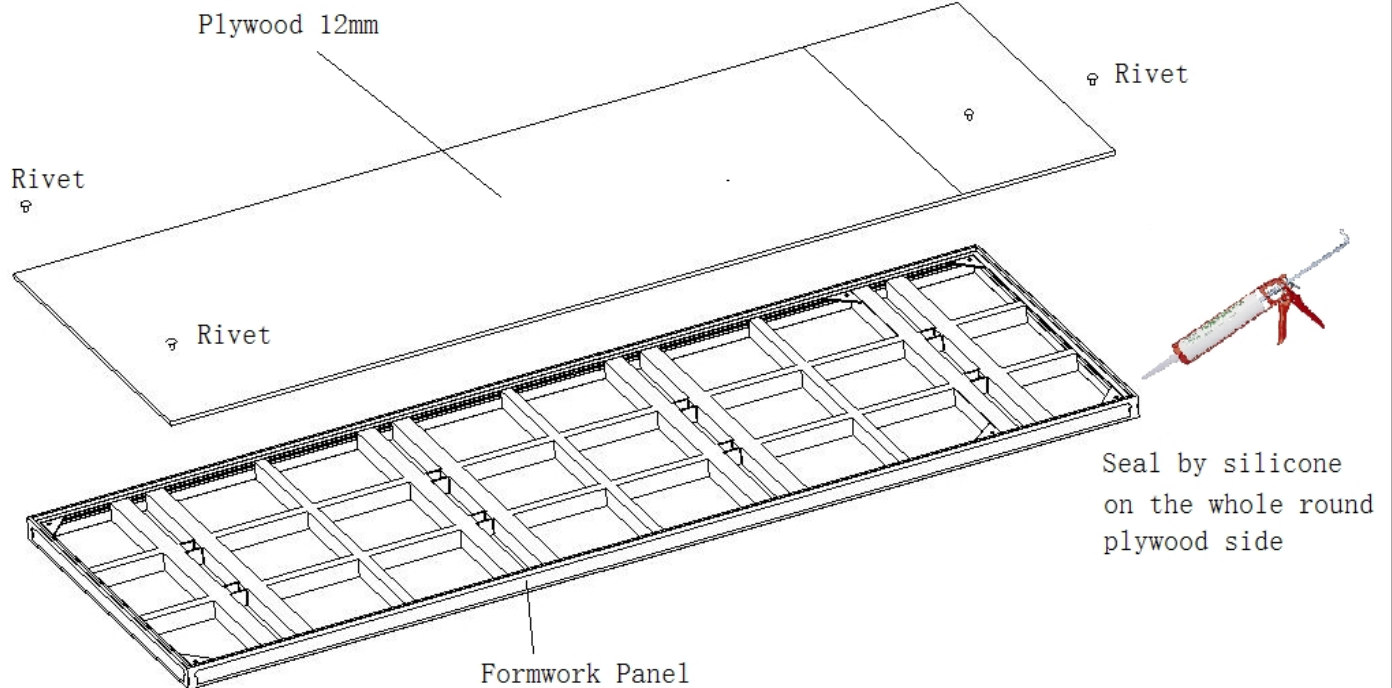


The rivet should be anchored to anchor plate. (A small triangle plate in frame)

About cutting size:

We know the standard plywood dimension is 1220x2440mm (4' x 8')

B-form regular size has 3000mm length. We can joint 2 panel. The steel frame has been prepared "anchor plate" (small triangle as below photo). Let joint on rib tube.

So, the 3m panel should be cut 2388mm + 587mm

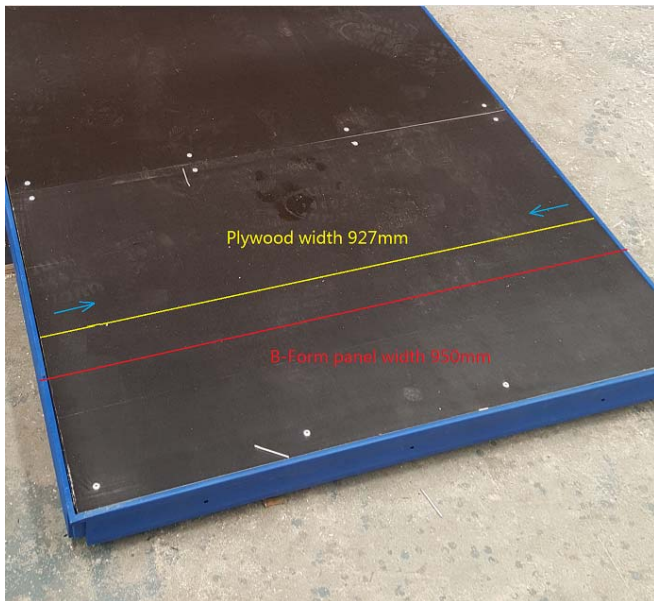

Other dimension B-form panel can use integral plywood.

The plywood size should be shorter 23~25mm than B-form panel

Form example:

B-form 1200mm ---- Plywood 1177mm

B-form 950mm ---- Plywood 927mm

B-form 600mm ---- Plywood 577mm

.....



QUALITY PRODUCTS SAFETY ASSURED

BUILDING MATERIALS INTEGRATED SERVICE SUPPLIER

HUNAN ADTO BUILDING MATERIALS GROUP CO., LTD.

HEADQUARTERS:

8F, 11F, 15F, 16F, 18F, MINGCHENG INTL BLDG, CHANGSHA CITY, CHINA

TEL: 86-731-8866 0581 / 8866 0584 / 8866 0573 / 8866 0572

FAX: 86-731-8866 0576

NO. 8, JINXING RD., WANGCHENG DISTRICT, CHANGSHA, HUNAN, CHINA.

www.adtomall.com

E-mail: Info@adtomall.com