

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Front End Body Panels - Edge & MKX

2008 ACCESSORIES & BODY, CAB

Front End Body Panels - Edge & MKX

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-ft	lb-in
Cowl grille panel extension bolts	6	-	53
Fender cowl bolt	9	-	80
Front fender bolts	9	-	80
Fender-to-stud nut	9	-	80
Hood hinge-to-body bolts	12	9	-
Hood hinge-to-hood bolts	23	17	-
Hood latch bolts	10	-	89
Hood striker bolts	11	8	-
Lower cowl grille panel bolts	9	-	80
Lower cowl panel-to-front of dash bolt	20	15	-
Lower fender bolt	9	-	80
Upper cowl grille panel bolts	6	-	53
Upper fender bolts	9	-	80
Upper rear fender bolt	9	-	80
Wiper mounting arm and pivot shaft assembly bolts	7	-	62
Wiper pivot arm nuts	20	15	-

REMOVAL AND INSTALLATION

FRONT END BODY PANELS - EXPLODED VIEW

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Front End Body Panels - Edge & MKX

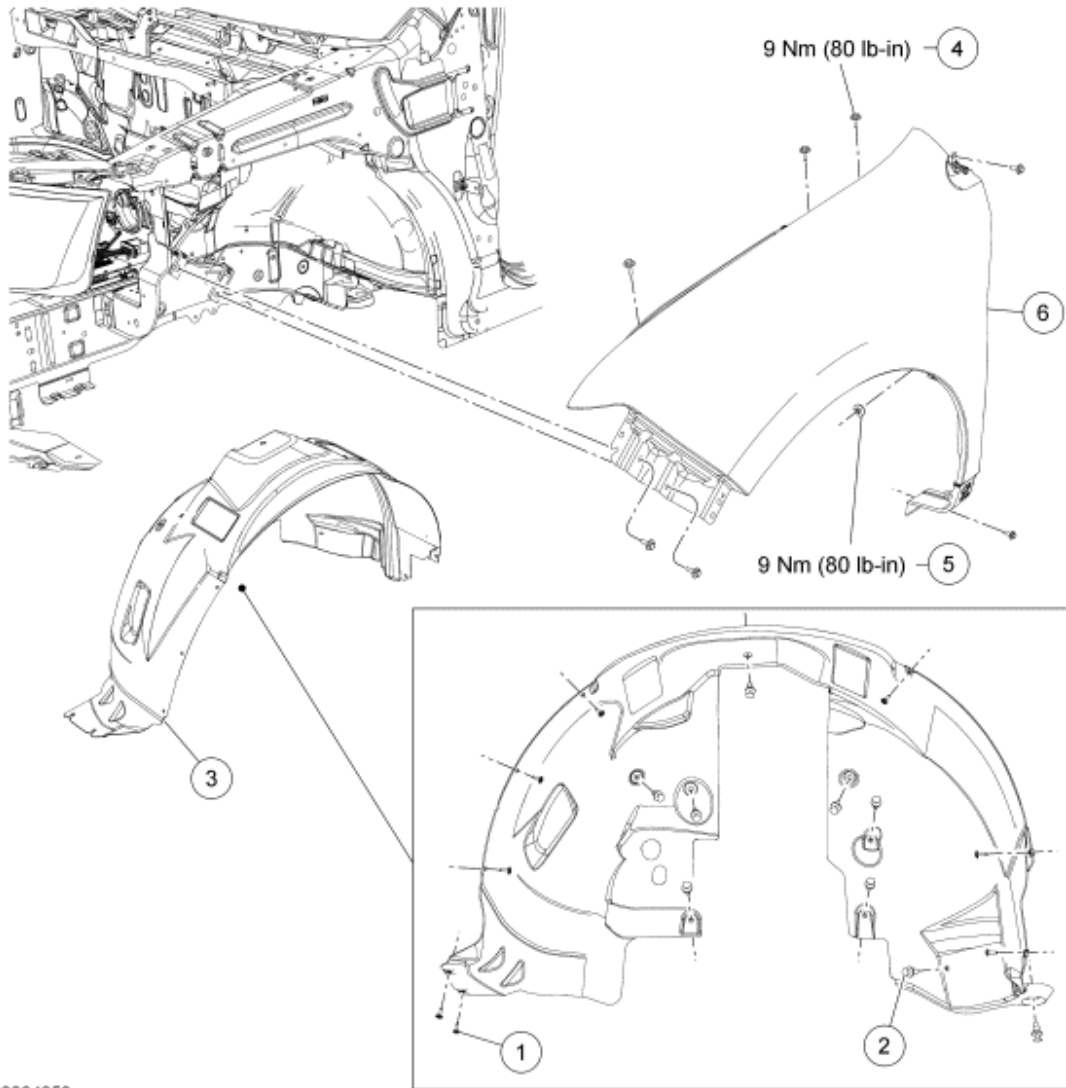


Fig. 1: Exploded View Of Front End Body Panels With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W706805	Splash shield screw (8 required)
2	W712196	Splash shield pin-type retainer (10 required)
3	16054 RH/ 16055 LH	Splash shield
4	W505421	Fender bolt (7 required)
5	W709603	Fender rear nut
6	16015 RH/ 16016 LH	Fender

1. For additional information, refer to the procedures in this article.

FENDER

REMOVAL AND INSTALLATION

1. Remove the 2 screws and the rocker panel moulding end cap.

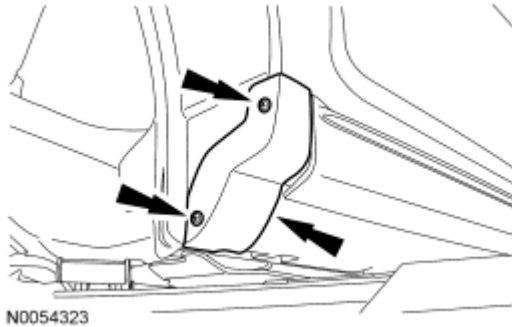


Fig. 2: Identifying Rocker Panel Molding End Cap & Screws
Courtesy of FORD MOTOR CO.

2. Remove the front fender splash shield. For additional information, refer to **Fender Splash Shield**.
3. Remove the lower fender bolt.
 - To install, tighten to 9 N.m (80 lb-in).

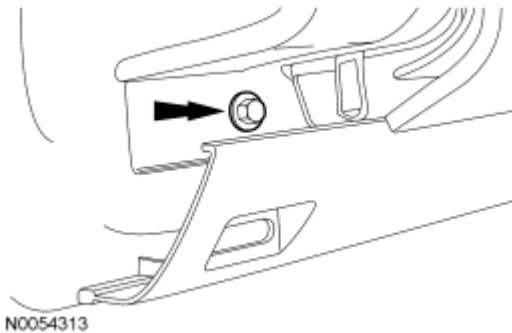


Fig. 3: Locating Lower Fender Bolt
Courtesy of FORD MOTOR CO.

4. Remove the nut from the stud inside the fender well.
 - To install, tighten to 9 N.m (80 lb-in).



Fig. 4: Identifying Stud Inside Fender Well
Courtesy of FORD MOTOR CO.

CAUTION: The front bumper cover may be damaged if pulled outward too far while trying to access the bolts.

5. Remove the front fender bolts.
 - Remove the front bumper cover corner.
 - Remove the bolts.
 - To install, tighten to 9 N.m (80 lb-in).

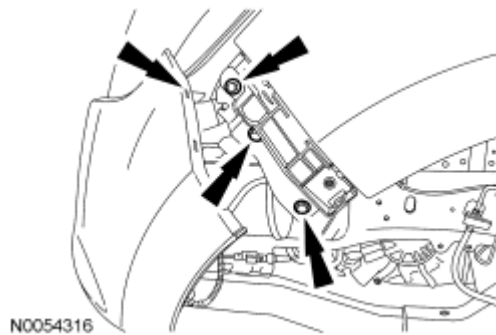


Fig. 5: Locating Front Bumper Cover Corner & Bolts
Courtesy of FORD MOTOR CO.

6. Remove the upper rear fender bolt cover.

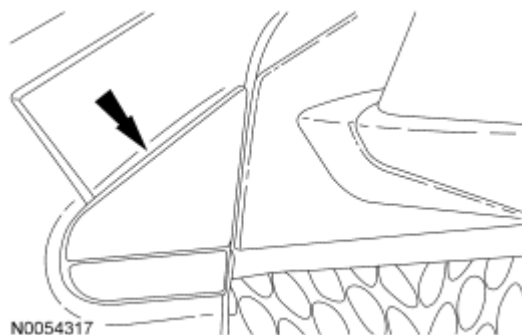


Fig. 6: Locating Upper Rear Fender Bolt Cover
Courtesy of FORD MOTOR CO.

7. Remove the upper rear fender bolt.
 - To install, tighten to 9 N.m (80 lb-in).

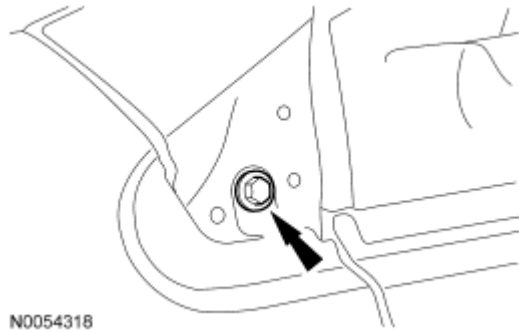


Fig. 7: Locating Upper Rear Fender Bolt
Courtesy of FORD MOTOR CO.

8. Remove the 2 upper fender bolts.
 - To install, tighten to 9 N.m (80 lb-in).


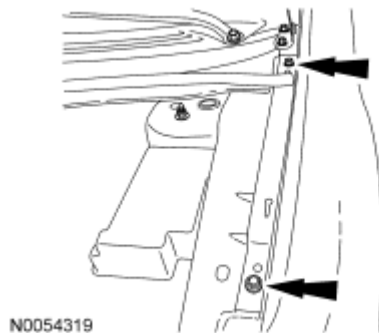


Fig. 8: Locating Upper Fender Bolts
Courtesy of FORD MOTOR CO.

9. Remove the fender cowl bolt.
 - Position the cowl cover aside.
 - Remove the bolt.
 - To install, tighten to 9 N.m (80 lb-in).

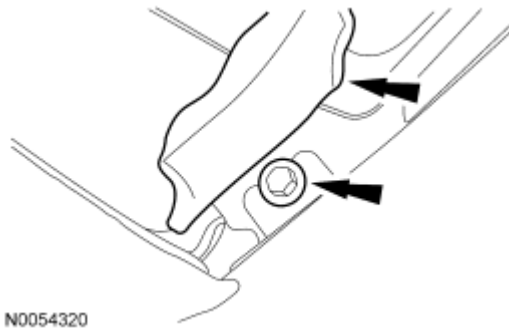

N0054320

Fig. 9: Locating Fender Cowl Bolt
Courtesy of FORD MOTOR CO.

10. Remove the front fender.
11. To install, reverse the removal procedure.
 - If necessary, transfer parts.

FENDER SPLASH SHIELD

REMOVAL AND INSTALLATION

1. Remove the fender splash shield screws.
2. Remove the fender splash shield pin-type retainers.
3. To install, reverse the removal procedure.

COWL PANEL GRILLE

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Front End Body Panels - Edge & MKX

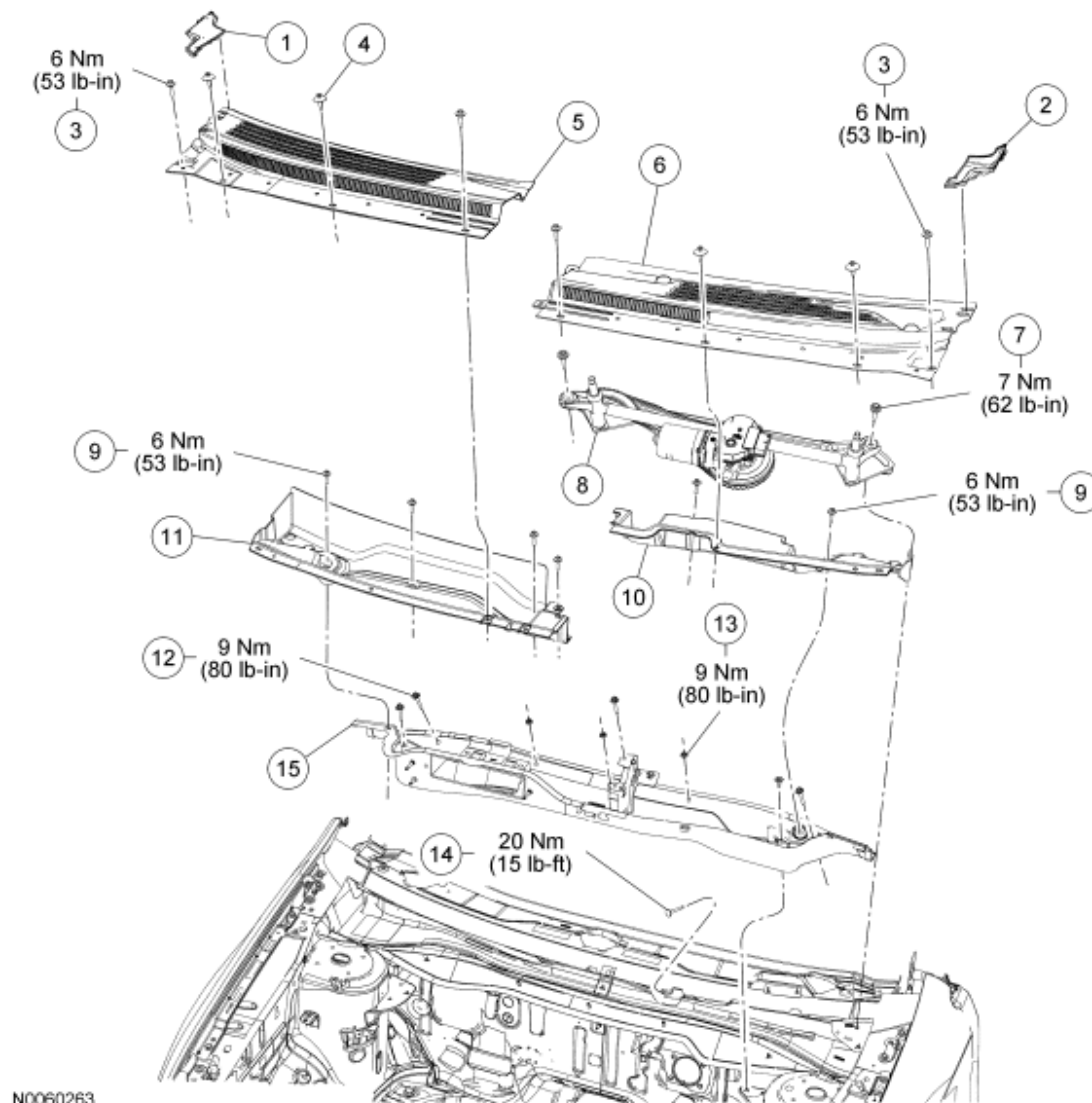


Fig. 10: Exploded View Of Cowl Panel Grille With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	020A26	RH cowl side outer panel
2	020A27	LH cowl side outer panel
3	W712648	Upper cowl grille panel screws (4 required)
4	N804837	Upper cowl grille panel scrivet (4 required)
5	02222	RH upper cowl panel
6	02223	LH upper cowl panel
7	17526	Wiper pivot arm assembly bolt (2 required)

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Front End Body Panels - Edge & MKX

8	17508B	Wiper pivot arm assembly
9	W707257	Cowl panel extension bolts (6 required)
10	021A37	LH cowl panel extension
11	W707257	RH cowl panel extension
12	W710593	Lower cowl panel bolt (5 required)
13	W702751	Lower cowl panel nut (3 required)
14	W710309	Lower cowl panel-to-front of dash bolt
15	02106	Lower cowl panel

Upper and lower cowl grille panel

NOTE: The upper cowl panel grille must be removed before the lower cowl panel grille can be removed.

1. Remove the LH and RH wiper pivot arms. For additional information, refer to **WIPERS AND WASHERS** article.

Upper cowl panel grille

2. Remove the RH cowl side outer panel.
3. Remove the LH cowl side outer panel.
4. Remove the 2 scrivets from the RH upper cowl panel grille.
5. Remove the 2 bolts from the RH upper cowl grille panel and remove the RH upper cowl grille panel.
 - To install, tighten to 6 N.m (53 lb-in).
6. Remove the 2 scrivets from the LH upper cowl grille panel.
7. Remove the 2 bolts from the LH upper cowl grille panel and remove the LH upper cowl grille panel.
 - To install, tighten to 6 N.m (53 lb-in).

Lower cowl panel grille

8. Remove the wiper arm and wiper pivot shaft assembly.
 - Disconnect the electrical connector.
 - Remove the 2 bolts.
 - To install, tighten to 7 N.m (62 lb-in).
9. Remove the 2 bolts from the upper left lower cowl grille panel extension and remove the panel.
 - To install, tighten to 6 N.m (53 lb-in).
10. Remove the 4 bolts from the upper right lower cowl panel extension and remove the panel.
 - To install, tighten to 6 N.m (53 lb-in).
11. Disconnect the wiring harness from the retainer on the left front of the lower cowl grille panel.

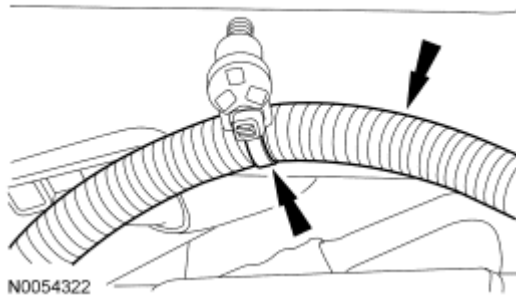


Fig. 11: Identifying Wiring Harness From Retainer
Courtesy of FORD MOTOR CO.

12. Disconnect the electrical connectors from the PCM.

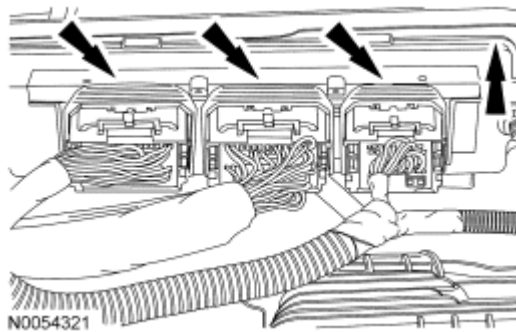


Fig. 12: Identifying Electrical Connectors From PCM
Courtesy of FORD MOTOR CO.

13. Remove the evaporative purge valve and bracket from the center of the lower cowl panel grille and set aside.
14. Remove the 5 bolts and 3 nuts from inside the lower cowl grille panel.
 - To install, tighten to 9 N.m (80 lb-in).
15. Remove the bolt from the lower cowl panel-to-front of dash.
 - To install, tighten to 20 N.m (15 lb-ft).
16. Remove the lower cowl grille panel and PCM from the vehicle.

Upper and lower cowl grille panel

CAUTION: Incorrect installation of the lower/upper cowl panel grille may cause damage to the windshield. Make sure the cowl panel grille clips are located under the windshield prior to installation.

17. To install, reverse the removal procedure.
 - Transfer the components as necessary.
 - Adjust the pivot arms. For additional information, refer to **WIPERS AND WASHERS** article.