

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Bumpers - Edge & MKX

2008 ACCESSORIES & BODY, CAB

Bumpers - Edge & MKX

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-ft	lb-in
Front bumper-to-radiator support nuts	25	18	-
Front lower bumper nuts	25	18	-
Front upper bumper bolts	67	49	-
Front upper bumper-to-radiator support bolts	9	-	80
Power steering cooler pipe mounting nuts	7	-	62
Rear bumper bolts (with trailer hitch only)	90	66	-
Rear bumper nuts	25	18	-
Rear center bumper bolts	40	30	-

REMOVAL AND INSTALLATION

BUMPER - EXPLODED VIEW, FRONT

NOTE: MKX shown, Edge similar.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Bumpers - Edge & MKX

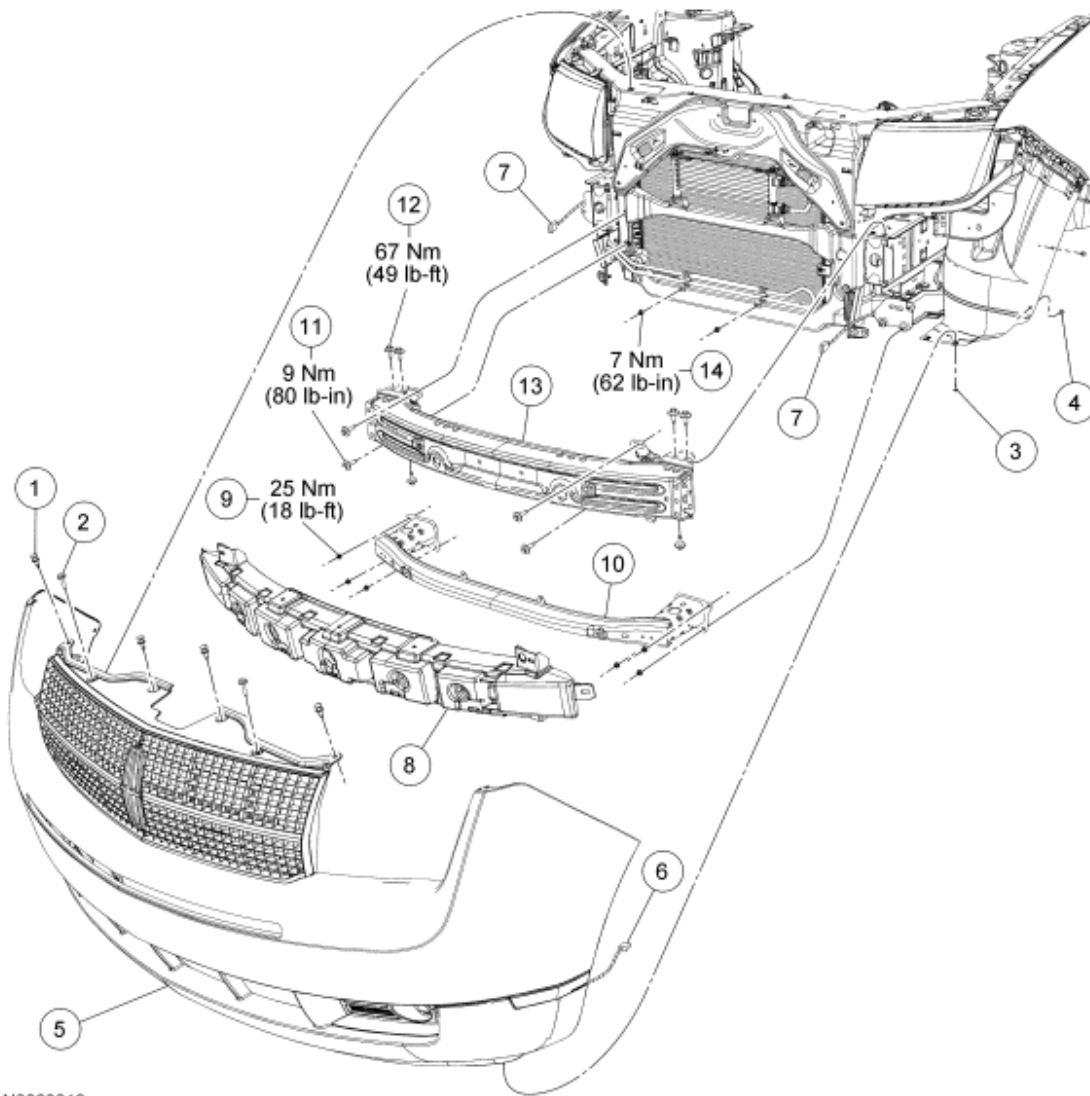


Fig. 1: Exploded View Of Front Bumper With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W711685	Upper radiator grille bolt (2 required)
2	W706350	Upper radiator grille scrivet (4 required)
3	N623332	Bumper cover lower screw (4 required)
4	W711656	Splash shield screw (6 required)
5	17D957	Front bumper cover
6	-	Bumper cover wiring harness assembly (part of 17E810)
7	14290	Wiring harness assembly
8	17C882	Isolator front bumper
		Lower front bumper mounting bolt (6

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Bumpers - Edge & MKX

9	-	required) (part of 5019)
10	5019	Lower front bumper
11	W711617	Upper front bumper-to-radiator support bolt (4 required)
12	W711617	Upper front bumper mounting bolt (6 required)
13	17757	Upper front bumper
14	W711788	Power steering cooler pipe nut (2 required)

1. For additional information, refer to the procedures in this article.

BUMPER COVER - FRONT

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to **JACKING AND LIFTING** article.
2. Remove the 2 bolts from the top of the radiator grille.

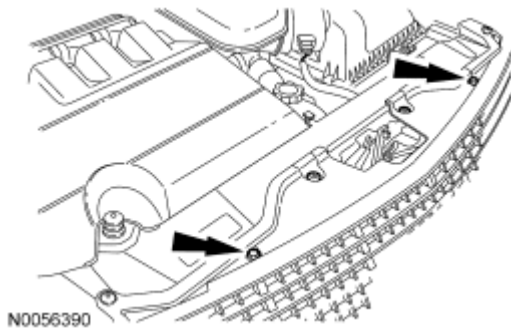


Fig. 2: Locating Bolts From Top Of Radiator Grille
Courtesy of FORD MOTOR CO.

3. Remove the 4 scrivets from the top of the radiator grille.

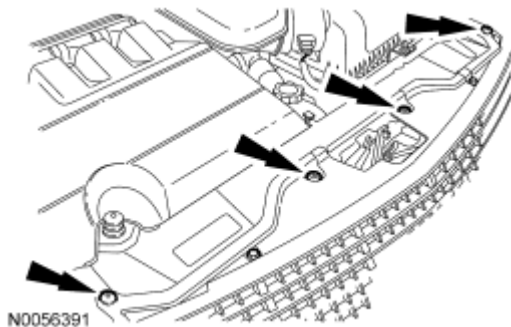


Fig. 3: Locating Scrivets From Top Of Radiator Grille
Courtesy of FORD MOTOR CO.

4. Remove the 3 lower pin-type retainers.

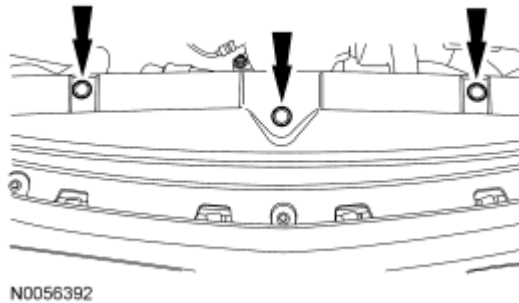


Fig. 4: Identifying Lower Pin-Type Retainer
Courtesy of FORD MOTOR CO.

5. Remove the 6 fender splash shield screws (3 each side).

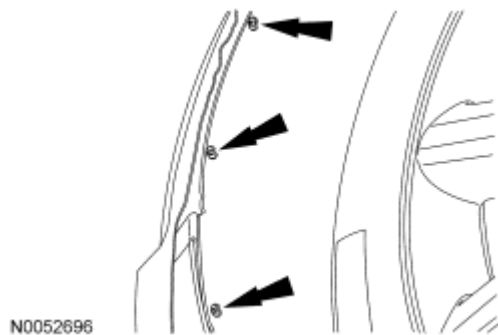


Fig. 5: Identifying Fender Splash Shield Screws
Courtesy of FORD MOTOR CO.

6. Remove the 4 lower screws (2 each side).

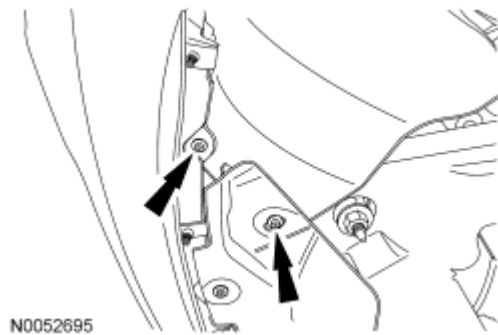


Fig. 6: Identifying Lower Screws
Courtesy of FORD MOTOR CO.

7. Disconnect the side marker lamp electrical connectors, if equipped.

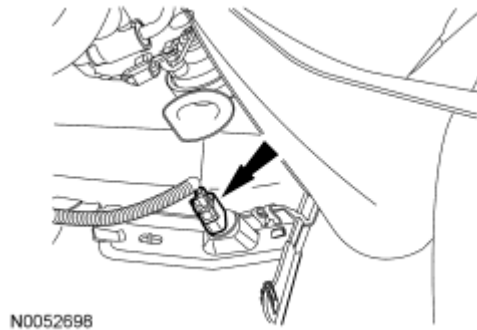


Fig. 7: Identifying Side Marker Lamp Electrical Connectors
Courtesy of FORD MOTOR CO.

8. Disconnect the fog lamp electrical connectors, if equipped.



Fig. 8: Identifying Fog Lamp Electrical Connectors
Courtesy of FORD MOTOR CO.

9. Remove the front bumper cover.
 - Pull the corner of the bumper cover from the bracket.

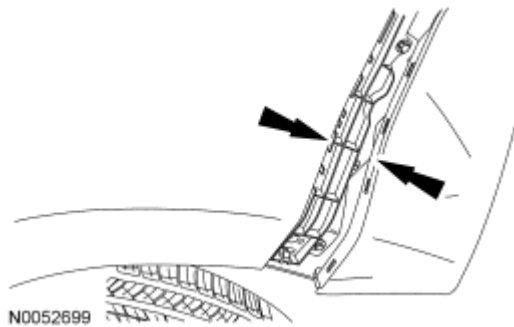


Fig. 9: Identifying Front Bumper Cover
Courtesy of FORD MOTOR CO.

10. To install, reverse the removal procedure.

1. Remove the front bumper cover. For additional information, refer to **Bumper Cover - Front**.
2. Remove the 6 front bumper bolts (3 each side).
 - To install, tighten to 67 N.m (49 lb-ft).

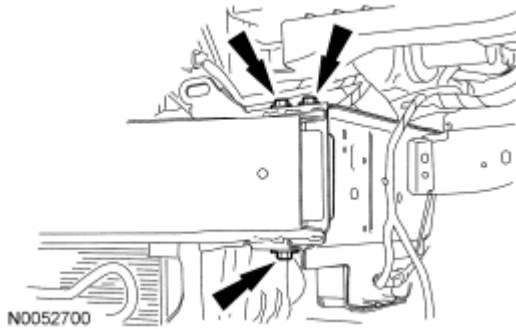


Fig. 10: Identifying Front Bumper Bolts
Courtesy of FORD MOTOR CO.

3. Remove the 4 upper and lower bumper-to-radiator support bolts (2 each side).
 - To install, tighten to 9 N.m (80 lb-in).

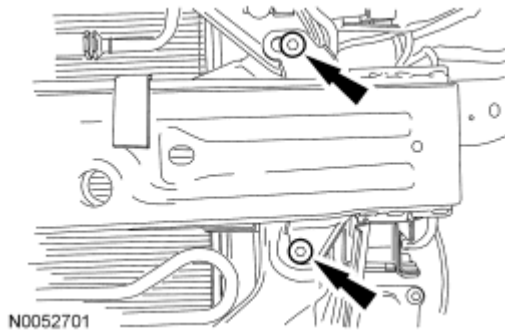


Fig. 11: Identifying Upper & Lower Bumper-To-Radiator Support Bolts
Courtesy of FORD MOTOR CO.

4. Remove the front bumper.
5. To install, reverse the removal procedure.

BUMPER - FRONT, LOWER

1. Remove the front bumper cover. For additional information, refer to **Bumper Cover - Front**.
2. Remove the 2 nuts from the power steering cooler pipe-to-lower front bumper.
 - To install, tighten to 7 N.m (62 lb-in).

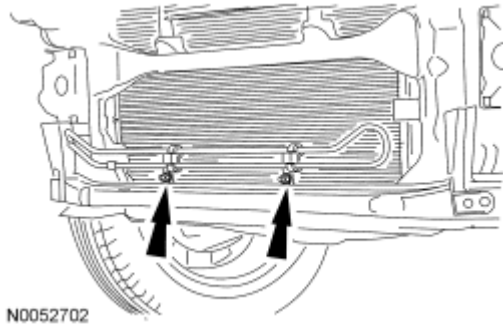


Fig. 12: Locating Nuts From Power Steering Cooler Pipe-To-Lower Front Bumper
Courtesy of FORD MOTOR CO.

3. Remove the 6 bumper-to-radiator support nuts (3 each side) and remove the lower front bumper.
 - To install, tighten to 25 N.m (18 lb-ft).



Fig. 13: Identifying Bumper-To-Radiator Support Nuts & Lower Front Bumper
Courtesy of FORD MOTOR CO.

4. To install, reverse the removal procedure.

BUMPER - EXPLODED VIEW, REAR

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Bumpers - Edge & MKX

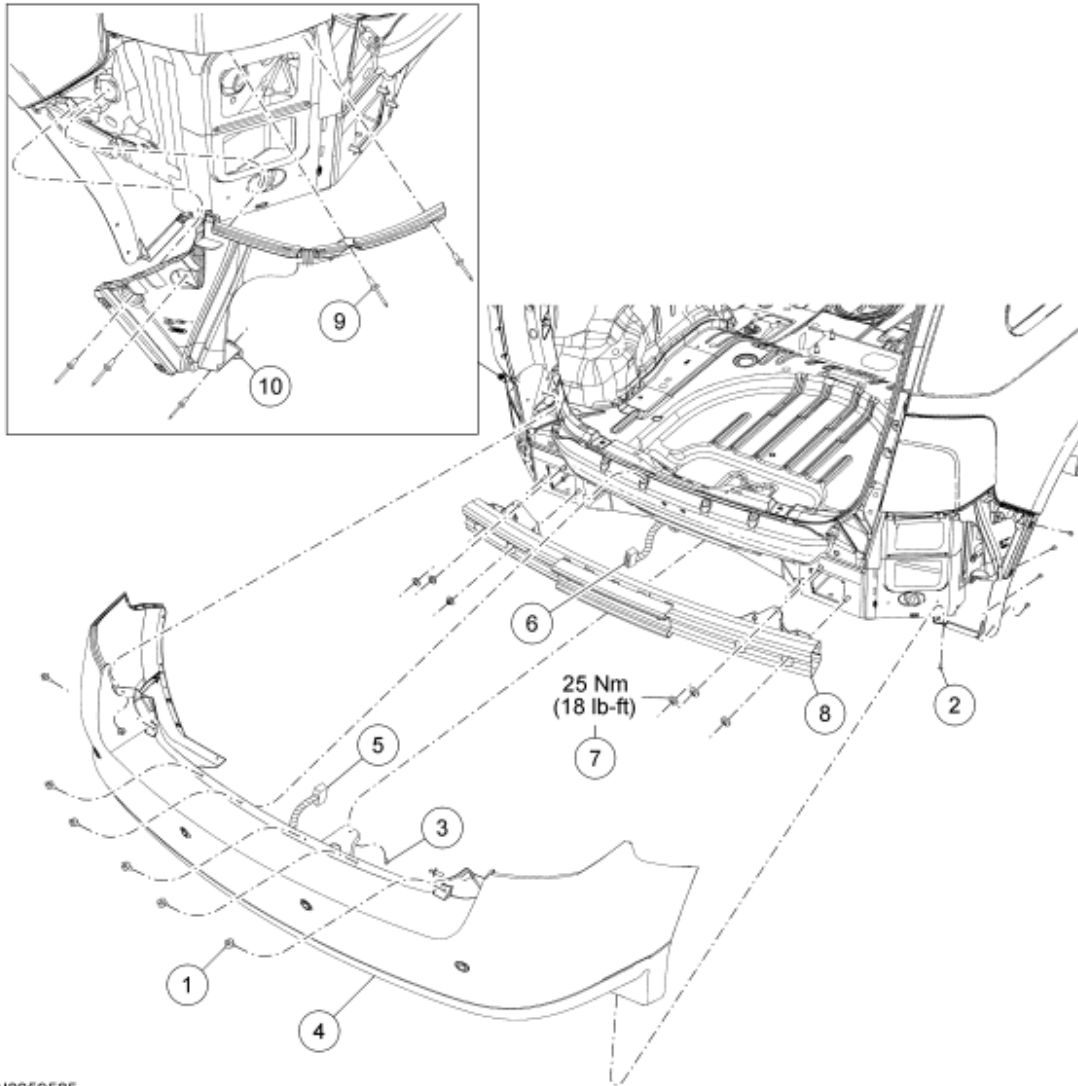



Fig. 14: Exploded View Of Rear Bumper Without Trailer Hitch With Torque Specification
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W713202	Rear bumper cover scrivet (Edge) (8 required)
1	W713202	Rear bumper cover scrivet (MKX) (10 required)
2	W711656	Splash shield screw (10 required)
3	W711656	Rear bumper cover body brace screw
4	17K835	Rear bumper cover
5	-	Wiring harness assembly
6	-	Wiring harness assembly
7	N804620	Rear bumper mounting nut (6 required)

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Bumpers - Edge & MKX

8	17906	Rear bumper
9	W705376	Rear bumper cover mounting bracket rivet (5 required)
10	17D980	Rear bumper cover mounting bracket

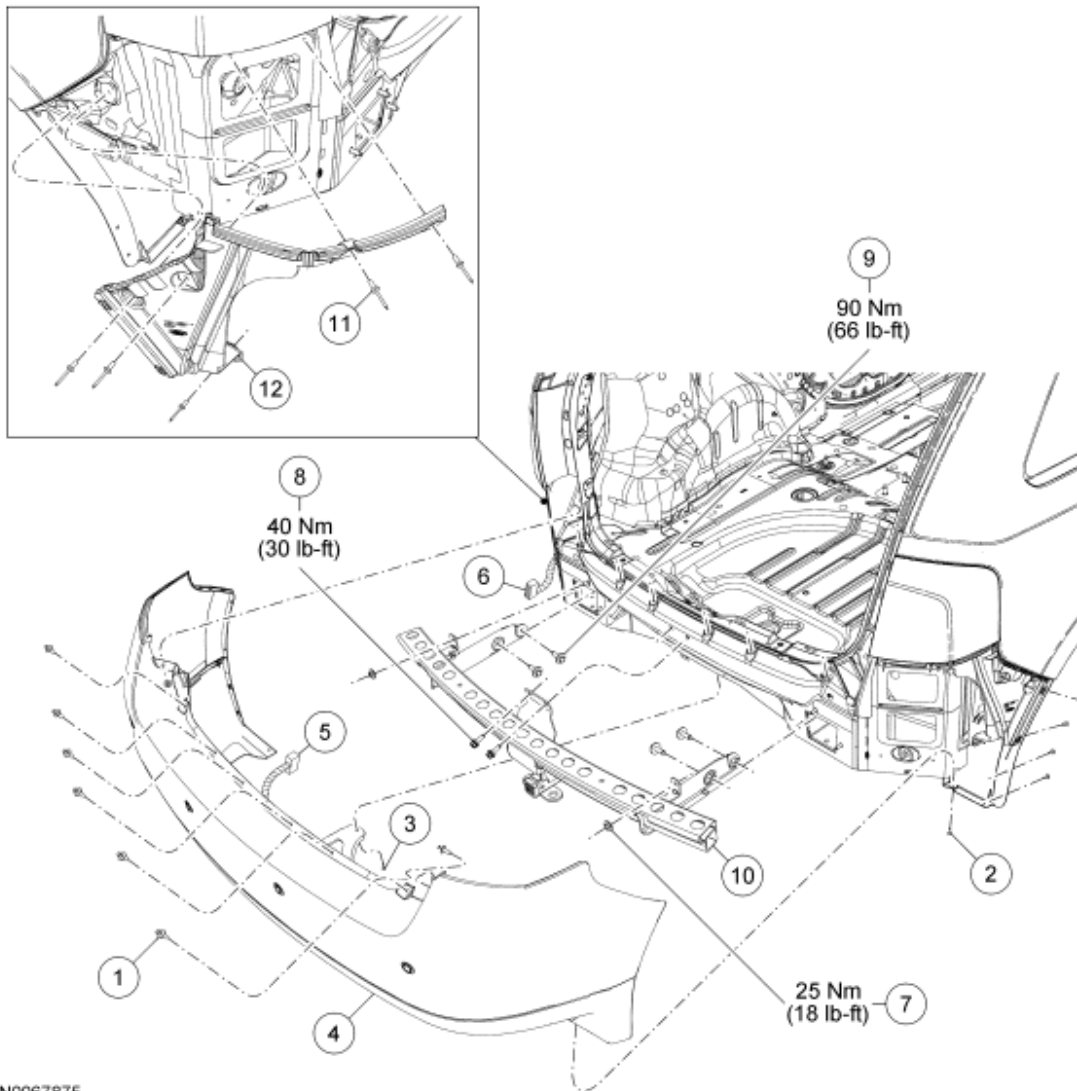

N0067875

Fig. 15: Exploded View Of Rear Bumper With Trailer Hitch With Torque Specifications
 Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W713202	Rear bumper cover scrivet (Edge) (8 required)
1	W713202	Rear bumper cover scrivet (MKX) (10 required)
2	W711656	Splash shield screw (10 required)

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Bumpers - Edge & MKX

3	W711656	Rear bumper cover body brace screw
4	17K835	Rear bumper cover
5	-	Wiring harness assembly
6	-	Wiring harness assembly
7	N804620	Rear bumper mounting nut (2 required)
8	W712171	Rear bumper mounting bolt (2 required)
9	W702256	Rear bumper mounting bolt (4 required)
10	17D826	Rear bumper
11	W705376	Rear bumper cover mounting bracket rivet (5 required)
12	17D980	Rear bumper cover mounting bracket

1. For additional information, refer to the procedures in this article.

BUMPER COVER - REAR

NOTE: MKX shown, Edge similar.

1. Remove the scrivets from the rear bumper cover.



Fig. 16: Locating Scrivets From Rear Bumper Cover
Courtesy of FORD MOTOR CO.

2. Remove the 10 screws (5 each side) from the rear splash shield.

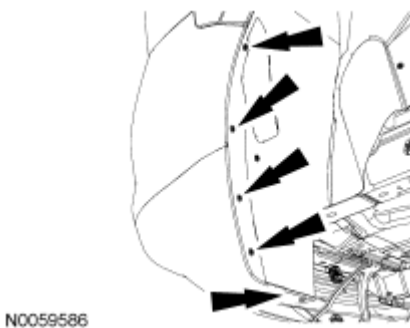


Fig. 17: Locating Screws From Rear Splash Shield
Courtesy of FORD MOTOR CO.

3. Remove the rear bumper cover-to-body brace screw.

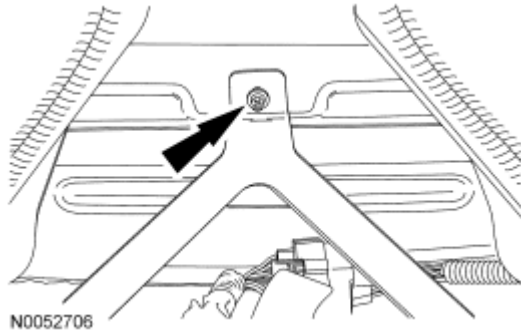


Fig. 18: Identifying Rear Bumper Cover-To-Body Brace Screw
Courtesy of FORD MOTOR CO.

4. Disconnect the trailer hitch and parking aid system wiring harness, if equipped.

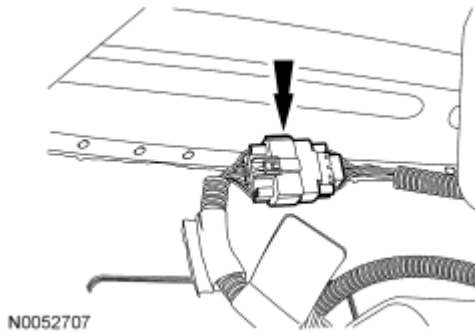


Fig. 19: Identifying Trailer Hitch & Parking Aid System Wiring Harness
Courtesy of FORD MOTOR CO.

5. Disconnect the retainers from the rear bumper cover-to-body brace.

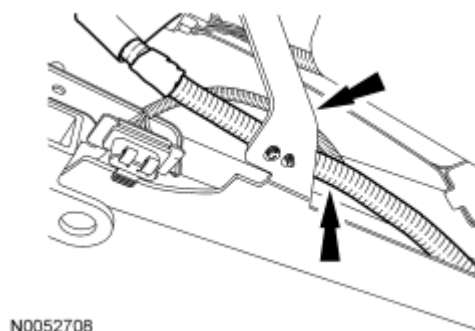


Fig. 20: Locating Retainers From Rear Bumper Cover-To-Body Brace
Courtesy of FORD MOTOR CO.

6. Remove the rear bumper cover.
 - Remove the bumper cover from the bumper cover bracket.
 - Remove the bumper cover.

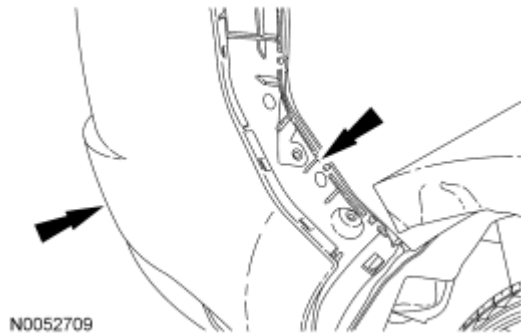


Fig. 21: Locating Bumper Cover From Bumper Cover Bracket
Courtesy of FORD MOTOR CO.

7. To install, reverse the removal procedure.

BUMPER - REAR

All vehicles

1. Remove the rear bumper cover. For additional information, refer to **Bumper Cover - Rear**.

Without trailer tow

2. Remove the 6 bumper mounting nuts (3 each side).
 - To install, tighten to 25 N.m (18 lb-ft).

With trailer tow

3. Remove the 2 underbody heat shields.
 - Remove the 6 screws (3 each side).
 - Remove the 2 pushpin retainers (1 each side).
 - Disconnect the wiring harness from the heat shield.

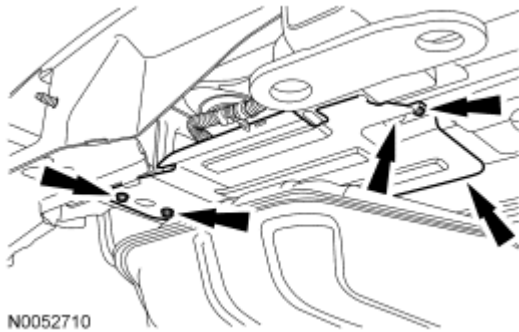


Fig. 22: Locating Wiring Harness From Heat Shield
Courtesy of FORD MOTOR CO.

4. Remove the 4 inside rear bumper bolts (2 each side) and the 2 nuts (1 each side).
 - To install, tighten rear bumper bolts to 90 N.m (66 lb-ft).
 - To install, tighten rear bumper nuts to 25 Nm (18 lb-ft).

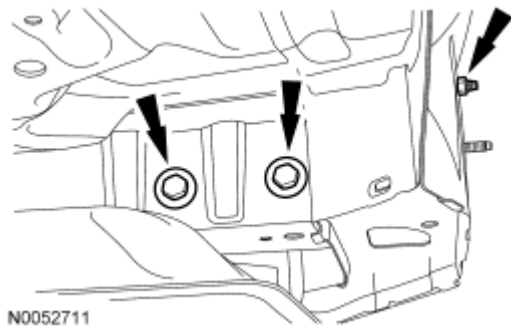


Fig. 23: Identifying Inside Rear Bumper Bolts & Nuts
Courtesy of FORD MOTOR CO.

5. Remove the 2 rear center bumper bolts.
 - To install, tighten to 40 N.m (30 lb-ft).

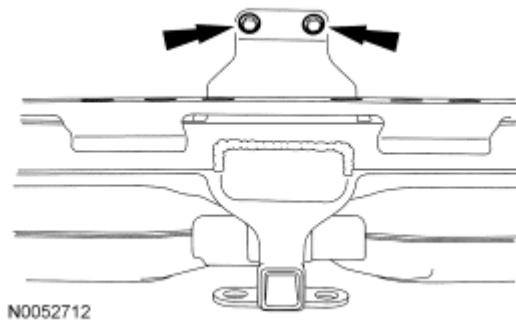


Fig. 24: Identifying Rear Center Bumper Bolts
Courtesy of FORD MOTOR CO.

2008 Ford Edge SE

2008 ACCESSORIES & BODY, CAB Bumpers - Edge & MKX

All vehicles

6. Remove the rear bumper.
7. To install, reverse the removal procedure.