Pumping Gain: Understanding Dynamics Processors

Like a boa constrictor, a linear accelerator, or a surgeon's scalpel, a dynamics processor in the wrong hands is a dangerous thing.

angerous? You bet. Dynamics processors—compressors, limiters, expanders, and gates—are the most misunderstood of all signal processors. And they can be touchy: Mishandle a compressor, for instance, and it'll squash the life out of a good recording.

But don't be scared. Dynamics processors are easy to use, once you understand them, and they can make the difference between a good recording and a great one. They're wonderful problem-solvers, and fantastic for effects. In informed hands, a dynamics processor is a powerful thing.

DYNAMICS PROCESSING, MORE OR LESS

Dynamics is the rise and fall in sound level, and it's responsible for much of the drama and impact in music and sound. Dynamics processors (not to be confused with dynamically controlled effects processors) change audio signals by altering the relationship of the loud parts to the soft parts. Changing the dynamics of a sound can profoundly alter its effect on the listener. As it happens, it also can dramatically affect how the sound can be recorded and reproduced.

Dynamic range is the amplitude difference between the quiet and loud passages of a sound or signal. Not all things are created equal, in this respect. A symphony orchestra, for example, is capable of fantastic dynamic range: more than 70 decibels between its quietest and loudest levels. A harpsichord, on the other hand, has a much smaller dynamic range; there isn't a great deal of difference between a key pressed lightly and one played with force. When you want to increase or decrease dynamic range, subtly or overtly, dynamics processors come into play.

Compressors and limiters are the best-known dynamics processors. They, along with two variants known as de-essers and duckers, are used to *reduce* a signal's dynamic range. On the other side are expanders and gates, which *increase* dynamic range. When should they be used? How do they differ? Let's find out.

BY BRENT HURTIG

COMPRESSORS

Vocalists are capable of tremendous dynamic range, from a whisper to a scream. That's great. But if you've ever tried recording vocals, you've probably found it necessary to "ride" the faders; that is, to adjust the vocal fader up and down as levels change to prevent overload and overcome tape hiss and other background noise.

The ideal result is a more evenly balanced, smoothersounding vocal track, but there are two problems with "gain riding." First, it's inefficient. You've got better

PUMPING GAIN

things to do than worry about a single fader. The second shortcoming is that you're human; try as you might, there's no way you can react to a sudden peak fast enough to prevent overload.

A compressor can free you from gain riding by acting like an automated gain control. Compressors let you set a predetermined *threshold*. Signals below that threshold pass through the compressor unaffected. When signals cross above the threshold, however, the compressor kicks in and reduces their level. A compressor can help "average" a singer or instrument for consistent, more professional results (see Figs. 1 and 2).

A common misconception is that compressors make loud passages quieter, and quiet passages louder. Here's what really happens: Since loud signals are reduced, the total range between the loudest and quietest passages is reduced; quiet passages seem louder, even though they're not processed. Engineers use this effect to increase the sustain of instruments, since decaying notes seem louder when peak attacks are compressed. Unfortunately, buzzing, background hiss, and other low-

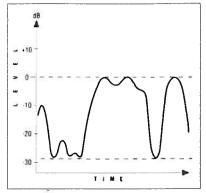


FIG. 1: The amplitude envelope of an unprocessed audio signal.

level signals may also sound louder. It's usually better to compress a signal before it goes to tape.

Most of the time, you should use just enough compression to do the job; extreme settings can make the signal sound "pumped" or "squashed." There are times, though, when an extreme is just what the doctor ordered.

LIMITERS

Limiting is an extreme form of com-

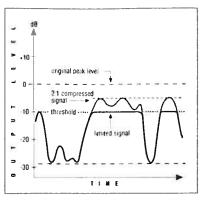


FIG. 2: The same signal envelope, illustrating compression at a 2:1 ratio, and limiting (infinite compression). The threshold in each case is set at 10 dB below the uncompressed peak.

pression: Levels that exceed the threshold are effectively stopped from getting any louder. A good limiter can let you set an absolute maximum level.

Generally, limiters are used as safety devices. For instance, anyone who has played in a garage band knows it's easy for a singer or a kick drum to produce a peak capable of destroying a loudspeaker. Every professional P.A. system




Syncman and Syncman Plus (w/SMPTE to Song Pointer conversion): Dollar for Dollar, more features than any other MIDI sync box. Reads and writes all SMPTE formats, converts SMPTE to MTC or DTL, supports Song Pointer Sync, JAM syncs in SMPTE & Song Pointer modes, even duplicates any sync stripe. Syncman Plus adds SMPTE to Song Pointer conversion for syncing any sequencer to SMPTE including MMT-8, M1, W-30 and Cakewalk to name a few.

MIDI Time Window: The first SMPTE-MTC-Direct Time Lock/Song Pointer display and SMPTE "Hit" recorder for professional or home studios. Works with any sequencer or MIDI sync box including Syncman, Syncman Plus, PPS-1, Time Machine, Studio 3 and MIDI Time Piece.


And we guarantee it! All Midiman products carry a lifetime warranty and are backed by a seven day-a-week technical support "helpline": (818) 794-4098. Give us a call!



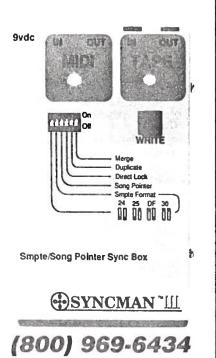

ॐ mipiman™Guaranteed for life.

30 North Raymond Avenue, Suite 505, Pasadena, CA 91103 | Tel.: (818) 449-8838 Fax.: (818) 449-9480

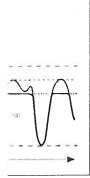

ope, illustrating commiting (infinite comth case is set at 10 dB

ceed the threshed from getting ter can let vou a level.

used as safety wone who has knows it's easy un to produce a roying a loudonal P.A. system



8) 449-9480

should be equipped with limiters of some sort, typically wired between the mixer (or active crossover) and the power amps.

In the studio, limiters are used to prevent overload at the tape machine, Typically, they're used with vocalists and drums, though any source with a quick, unpredictably loud attack is a candidate for a "safety" limiter.

DE-ESSERS AND DUCKERS

Condenser mikes sound wonderful, especially for vocals. Unfortunately, many of them accentuate sibilant sounds, those "sss," "sshhh," and "tsch" sounds. You can throw in an equalizer and cut the offending frequencies (around 1 to 7 kHz), but it will reduce those frequencies by a fixed amount. The professional solution is to use a deesser, a device that gradually compresses sibilant frequencies as they get louder.


Often, it's necessary to sing or talk over music, particularly in radio or jingles. There are two ways to handle this. The first is to "ride gain," lowering the level of the music as the voice comes in and raising the music as the voice leaves. The other way is to automatically "duck" the music when the announcer speaks. A ducker is a compressor with a side-chain. The music is put through the compressor, and the announcer's voice is routed to the sidechain input. When the announcer speaks, the level of the music is reduced in proportion to the level of the voice.

EXPANDERS

When you need to increase dynamic range, call in an expander. Unlike a compressor, which kicks in when signals exceed the preset threshold, an expander kicks in when signals drop below the threshold setting.

There are four main uses for an expander. The first is to restore lifelike dynamic range. (Some people use sterco expanders on their home stereo to increase the limited dynamic range of tapes and LP records.) The second is a noise reduction system; used carefully, an expander can make quiet background noise even quieter. Since a compressor may raise the apparent level of background noise, it's common to run a compressor's output into an expander, to reduce noise while "averaging" a signal's peaks (see fig. 3).

Mibac. Music lessons

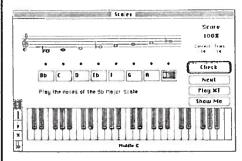

MiBAC™ Music Lessons is an easy-to-use Macintosh® program that helps you learn the elements of music theory. Each of the eleven drills have multiple skill levels that make Music Lessons just right for the beginner, yet powerful enough for the advanced musician.

Music Lessons' drills help you master:

- Note Names
- Circle of Fifths
- Key Signatures
- Minor/Major Scales
- Modes
- Jazz Scales.
- Scale Degrees
- Intervals
- Note Durations · Ear Training Intervals
- Ear Training Scales

- On-screen piano keyboard
- · Sampled grand piano sound
- Works with or without MIDI
- Multiple skill levels in each drill
- Treble, bass and alto clefs
- Individualized score reports
- On-line music theory help

VISA, MasterCard, Institutional Orders and Dealer Inquiries Welcome

(507) 645-5851



MUSIC SOFTWARE

P.O. Box 468 Northfield, MN 55057

Requires Mac Plus or later model with two disk drives. MiBAC is a trademark of MiBAC Music Software, Inc. Macintosh is a registered trademark of Apple Computer, Inc.






PREAMP/RECORDING AMP

ALL-TUBE BASS SOUND MACHINE



Hughes & Kettner, Inc., 35 Summit Avenue, Chadds Ford, PA 19317 For more information, call (215) 558 0345, or FAX (215) 558-0342

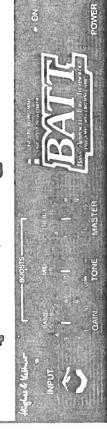

PUMPING GAIN

The third use is for cleaning uptracks and minimizing crosstalk. Certain sounds may "bleed" between tapetracks, or a microphone can pick upnearby instruments. Since these extraneous sounds are usually low-level, an expander can make them even quieter (without the "clipping" effect induced by most gates, as we'll see). Finally, an expander is great for "tightening up" the sound of sustained instruments: A tom drum might sound great struck on its own, but when you play the rest of the set, it may ring too long. A cleverly tweaked expander reduces sustain as soon as the signal drops below the threshold by "pushing down" the decaying signal even further.

GATES

Just as limiting is a form of maximum compression, gating is expansion taken to its most extreme. With expansion, signals that drop below a certain threshold are made even quieter. With gating, once a signal drops below the threshold, it's completely silenced; only when the incoming signal rises

MASTERING THE CONTROLS

Threshold: Determines the level at which processing kicks in. With compressors and limiters, signals that cross above the threshold level get processed; with expanders and gates, only signals below the threshold get the treatment.

To help in setting the threshold, better processors have a gain-reduction meter. Simpler boxes may have an LED that illuminates whenever the input signal crosses the threshold.

Ratio: The ratio between a change in input level and the corresponding change in output.

Ratio range depends upon the job at hand. Compression calls for ratios of 2:1 to 10:1. Once you approach 8:1 or greater, audio begins to sound more than just a little "squashed."

For expanders, opposite ratios are the way to think: A 3:1 ratio setting on the box should really be thought of as a 1:3 setting, since a 1 dB drop in input level will be expanded to a 3 dB drop in output level (once the signal drops below threshold). Expansion ratios range from 1:2 to about 1:10

A gate is like an extreme expander.

Since gates are usually "open"

or "closed," however, and not somewhere in between, their ratio is 1:∞. This means that once the input level drops below threshold, there is an infinite amount of gating—in other words, silence.

Attack and Release: The attack control determines how quickly processing kicks in once a signal has crossed threshold, from microseconds to a second or longer. There are times when it's necessary to limit a signal instantly. A more moderate attack setting sounds better for processing an "average" of signals, rather than just peaks.

A release control lets you set how much time passes before the processing stops, once the signal crosses back under (or over, in the case of an expander or gate) the threshold. Quick releases are best for peak control, and moderate or longer release times are better for "average," natural-sounding processing.

input and Output: An input-gain control sets the processor's sensitivity. Changing the input level will have an effect on the device's threshold setting.

Dynamics processing, whether it's compression or expansion, often causes a reduction in the device's overall output level.
Output-level controls "compensale" for lost gain. If your pro-

cessor lacks an output control, you can increase the level of the compressed signal at your mixer.

Gain-Reduction Meter: This shows how much processing is taking place and usually is calibrated in dB. Once signals cross the threshold, LED gain-reduction meters begin to light up. Some older processors have mechanical meters that start at "0 dB" and begin to drop to "-3 dB" and further as processing starts. Some boxes just have a single LED that illuminates when processing starts.

Side-Chain in, or Key in: This switch engages the external side-chain return so that external signals control the VCA (see sidebar "Of VCAs and Side-Chains"). Not all processors with side-chains have these front panel switches, in which case anything plugged into a rear-panel side-chain input will control the VCA automatically.

Slave: Dual-channel, or stereo, processors usually sport a slave switch on the second (or right) channel. Push this in, and the slave channel will be controlled by the master channel (usually channel one, or the left channel). The slave channel's controls have no effect once the channel is slaved to the master.

. PUMPING GAIN

above the threshold level does the gate "reopen" and allow the signal to be heard.

Gates are perfect for eliminating hum and buzz, something for which guitar setups, on stage and in the studio, are notorious. Gates also can be used to shut out background noise (such as lip-smacks and pages turning) from any microphone. The key to success, as with any of these dynamics processors, is careful adjustment: An improper setting can "clip" the attack off sounds or cause "stuttering" if a signal waivers around the threshold level.

It's difficult to listen to much popular radio these days without hearing the ubiquitous, Phil Collins-like "gated reverb" effect on drums. I present the full technique for this already overused sound on p. 68 of this month's issue.

THE RIGHT TOOL FOR THE JOB

Dynamics processors come in a wide variety of devices. Most are designed as "outboard," rack-mount gear. If you spend time in professional studios, you may come across certain mixing consoles with complete dynamics processors built into each channel. In midsize P.A. gear, you'll find compression and limiter circuits built into power amps and mixers (most notably from Peavey), though these are designed primarily to prevent overload and usually aren't adjustable.

At the other end of the scale are compressor and gate footpedals. While some of the studio techniques described below can be applied to "stomp" boxes, noise and mediocre frequency response generally limit them to stage use.

Compressors and limiters are usually combined into a "comp/limiter" device, as the difference between a compressor and a limiter is largely a difference in attack and ratio amounts (see sidebar "Mastering the Controls"). Some comp/limiters do compression or limiting; others have separate limiter circuits for simultaneous comp/limiting. Comp/limiters with a side-chain input (see sidebar "Of VCAs and Side-Chains") also can be configured to function as de-essers or duckers.

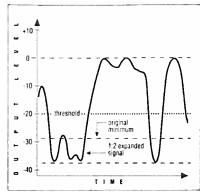


FIG. 3: Our lovely model signal, this time expanded at a ratio of 1:2 with a threshold 20 dB below peak.

Gates are usually found on their own as single- or multi-channel gates (Symetrix, Furman, and others offer 4-channel gates). Several gates (notably from Klark-Teknik, Studiomaster, and Drawmer) include MIDI control; this allows the gate to open, for instance, when a particular MIDI note number comes in. Certain comp/limiters also throw in a simple gate circuit, suitable for many gating purposes.

Master Your Mix With MIDI!



Affordable audio automation is here! The *MIDI Mixer 7s* is a MIDI-controlled mixer that offers seven *stereo* line inputs with bass, treble, pan, trim, and two *stereo* effects sends on each channel, all packed into an efficient, single rack-space chassis for under \$600. You can't touch that!

And you won't have to touch your rack either. The 7s can be controlled from any sequencer or the wheels, sliders or levers on your MIDI keyboard or controller. Now you can record moves into your favorite sequencer to capture a fully automated mix.

The MIDI MIXER 7s gives you high-end features like noise gates for an ultra-quiet mix, an auxiliary stereo input/output,

and an advanced smoothing algorithm to ensure even response. A software control panel is also included.

Use the **MIDI MIXER** 7s with keyboards, guitars, tape decks, effects processors, vocals or any line level signal. Multiple units chain together for as many stereo channels as you need.

We've included a front panel headphone output with separate volume control, two stereo effects returns, and left/right master outputs. And *everything* is in stereo.

So mix it up at your local Mark of the Unicorn dealer. Call us for a detailed brochure and the authorized dealer nearest you.



Mark of the Unicorn, Inc. 222 Third Street, Cambridge, MA. 02142 (617) 576-2760



nical Reference

rs, it is apparent rd is to redefine *V-22 and V-24s*.

e new generation

ith a V-22 and MPU-401

ovative MIDI MPU's other PC their products.

option.

of PC MIDI ect from the Voyetra.

e V-22/V-24s! your MPU-401 1 \$50 when you



PUMPING GAIN

Stand-alone expanders are uncommon. Some gates can do double duty as expanders, if they have an adjustable ratio control. But for the most part, look for true expander circuits in some of the more professional (and expensive) multi-purpose dynamics processors from Drawmer, Symetrix, and others.

Thankfully, it doesn't cost an arm and a leg to move up from a stomp box to a quality, outboard dynamics processor. Gates, compressors, and even comp/limiters with simple gates are available for under \$200. A \$500 investment will bring you a pro-grade, 1- or 2-channel processor with a broad palette

of controls. Above \$1,000, you get into the land of MIDI-controlled gates (BSS, Drawmer): digitally controlled and programmable, multi-purpose boxes (Drawmer, Studiomaster); and esoteric vacuum tube and solid-state compressors and limiters (Summit, Pultec, GML, and others).

A few words of warning: Be sure your dynamics processor choice is compatible with your existing setup. Whether you have a -10 dBV, "semi-pro" mixer (or 4-track ministudio), or are using a professional-level, +4 dBm mixer, make sure the dynamics processor has level-compatible inputs and outputs.

Secondly, there are a lot of do-everything digital effects boxes on the market, with great reverb, delay, and more. Many sport, as an extra feature, digital "compressor/limiter" functions. While these sections may work okay, chances are the box won't provide any indication when a signal exceeds or drops below the threshold level, nor provide a meter showing how much dynamic processing is happening. Consequently, these functions are not a replacement for a real dynamics processor.

Finally, a word about connection: Unlike using a reverb-where a mixer's effects send feeds some of the signal to the effect, and an effects return or input channel is used for the effect's output-dynamics processors usually are connected at insert loops. (Most mixers and many 4-track ministudios feature insert, or send/receive, loops on their channel inputs.) This is because normally, you process the entire signal. Alternately, a dynamics processor can be connected at a mixer's group outputs, between a group and the multitrack deck (or the crossovers or power amps, in the case of a P.A. system).

So don't be scared. Dynamics processors are easy to use, now that you understand them. They're wonderful problem-solvers and fantastic for effects. In your informed hands, a dynamics processor is a powerful and versatile tool.

Based in San Francisco, Brent Hurtig is the author of Multi-Track Recording For Musicians (GPI/Alfred), the editor of over ten books, and was founding editor of EQ magazine. He is now lucky to be qualified and crazed enough to work as a creative and technical consultant to the recording industry.

OF VCAS AND SIDE-CHAINS

Central to most dynamics processors is a small circuit known as a voltage-controlled amplifier (VCA). Each channel has its own VCA.

Once incoming signals cross the threshold level, however, the VCA kicks in and begins to attenuate (reduce) levels. The amount and rate of reduction depends upon the type of processor and its various control settings; see sidebar "Mastering The Controls." Remember, with compressors and limiters, overall dynamic range is reduced as high-level signals are attenuated. With gates and expanders, overall dynamic range is increased as low-level signals are attenuated even further.

Normally, the VCA is controlled by whatever signal is at the processor's input, but not always.

In fact, there is an electronic internal "port" to the VCA known as a control input. Usually, this control input is fed by the incoming audio signal, so, for instance, when you want to gate a bass guitar, the VCA gates the signat once the level of the bass drops below the gate's threshold.

Many processors allow you to "access" the VCA's control input via an external side-chain (some boxes call it a detector, key, control, or trigger input). Once you connect something to the side-chain input, that external source controls how much dynamic processing occurs and when it starts (see Fig. 4).

Let's return to our gated bass gultar setup. The VCA is normally controlled by the bass guitar's level changes. But If we were to connect a drum machine's kick drum to the side-chain input, then the level of the kick will control the VCA, in turn controlling how and when the bass is gated. In this way, the kick could turn the bass "off and on" with each kick.

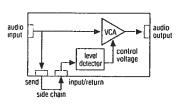


FIG. 4: Block diagram of a generic dynamics processor with side chain.

Keep in mind that side-chain signals are not fed to the outputs of the dynamics processor; they only control how the incoming audio is processed. Unless we simultaneously feed the kick drum's signal to the mixer, we won't hear any kick.

Aside from this sort of "gate trigger" control, the side-chain can be used for frequency-dependent dynamics processing. Sometimes it's necessary to process certain frequencies and not others. Deessing is a type of frequency-dependent compression.

Frequency-dependent gating and expansion are also techniques to try, particularly for reducing noise at certain frequencies. The big difference with these processors is that you cut, rather than boost, the frequencies you want to process.


The Engineer's Notebook: Twelve Ways To Use Dynamics Processors

By Brent Hurtig



We'll get you started with a dozen suggested recipes for using expanders, gates, compressors, and limiters. Add one part creative experimentation, and mix.




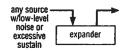

Expansion Ratio: Between 2:1 and 8:1 Attack Time: Moderately fast Release Time: Moderate Threshold Level: 2 dB to 20 dB below peak

- Use on its own or following a compressed signal.
- An expander is a great tool for reducing tape hiss and other noise.
- Useful when something rings on too long and muddies a mix.
- Expansion also can be used to restore life to a track recorded with too much compression.




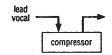

Compression Ratio: Between 5:1 and 10:1 Attack Time: Very fast Release Time: Moderate Threshold Level: 6 dB to 20 dB below peak

- The effect of choice for soft-voiced Michael Jackson imitators.
- Creates whispery, in-your-face vocals.
- Best with minimal reverb.
- Compression is so intense that breath, lip-smacking, and other background noises will seem accentuated.
- A "Pop" filter is necessary on the microphone, and a noise-reducing expander may have to follow the compressor.



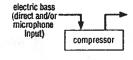

Compression Ratio: Between 3:1 and 6:1 Attack Time: Very fast Release Time: Moderate to very slow Threshold Level: 2 dB to 9 dB below peak

Alternate Sources: Electric guitar, acoustic bass, synth bass

- After the instrument's initial attack, sustained notes will increase in gain, resulting in an increase in apparent sustain
- Attack time and threshold controls will determine how long the sustain lasts.
- This can create long sustain on regular electric guitar, with or without distortion.

66 Electronic Musician March 1991

ates,

BASS



Between 3:1 Very fast ate to very slow dB to 9 dB ectric guitar, nth bass

t's initial attack, ncrease in gain, ase in apparent


shold controls will e sustain lasts. sustain on reguh or without dis**RADIO MIX**



Compression Ratio: Between 1.5:1 and 3:1 Attack Time: Moderate Release Time: Slow Threshold Level: 2 dB to 4 dB below peak

- Produces a tight mix for radio/dance.
- Connect compressor between mixer's stereo master outs and the mixdown deck.
- For fade-out, gradually reduce the ratio to 1:1 as you fade; otherwise, the compressor will "fight" you as you fade.

AUTO ACOUSTIC BASS

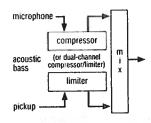

COMPRESSOR


Compression Ratio: 6:1 Attack Time: Fast Release Time: Very slow Threshold Level: 2 dB to 9 dB below peak

LIMITER

Compression Ratio: 20:1 Attack Time: Moderate Release Time: Moderately fast Threshold Level: 2 dB to 9 dB below peak Alternate Sources: Electric guitar, acoustic bass, synth bass

- · A great 2-channel setup for any dynamically varied bass.
- Loud passages are limited by the pickup channel's processing.
- Quiet passages are compressed and sustained by the microphone channel's processing.
- · Experiment with microphone placement for best results.


STACCATO TRIGGERED GATE

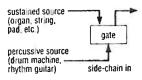

Expansion Ratio: 1:∞ Attack Time: Varies Release Time: Varies Threshold Level: 15 to 50 dB below peak

- Gate a sustained source (guitar, vocal. keyboards) with an external, percussive signal.
- •Adjust threshold so that the gate opens with each percussive hit and closes between hits.
- Try triggering gated bass with a kick drum playing the same rhythm. Yields an extremely punchy and tight-sounding bass pattern.
- Get creative!

ERSATZ TREMOLO

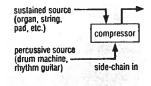


Compression Ratio: 6:1 Attack Time: fast Release Time: moderate Threshold Level: 9 to 20 dB below peak

Alternate Sources: You name it.

- Run a keyboard with long, sustained chords through the expander. Trigger the expander (via the side-chain) with a fast, even kick drum. The result is a strange sort of tremolo that engages as soon as the keyboard's chords drop below the threshold level.
- · With a compressor in place of the expander, the tremolo starts as soon the chords' peaks exceed the threshold (triggered by the kick) and stops as the chords decay.

FREQUENCY-DEPEN-DENT COMPRESSOR / **DE-ESSER**

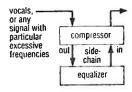

COMPRESSOR


Compression Ratio: Between 2:1 and 6:1 Attack Time: Very fast Release Time: Moderate Threshold Level: 2 dB to 6 dB below peak

EQ

Center Frequency: 1 to 7 kHz Boost: 3 to 12 dB Alternate Sources: Any source with particular excessive frequencies


- Reduces excessive sibilance. Sibilant frequencies are the first to cause compression.
- Can be used to control obnoxious frequencies, including "boomy" guitars or "ringing" drums.

SMOOTH VOCALS

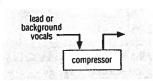


Compression Ratio: 3:1 to 5:1 Attack Time: Moderately fast Release Time: Slow Threshold Level: 2 dB to 6 dB below peak Alternate Sources: Brass and woodwinds, guitar

- The classic compressor application.
- Effect should be subtle and even.
- For background vocals or horn sections, apply this same compressor setting to a group (bus) output, fed by all the vocals or horns.
- Use a "slaved" stereo compressor if background vocals or horns are in stereo.
- For excessive peaks, run source into limiter first (fast attack time and release time). Adjust threshold to limit troublesome peaks.

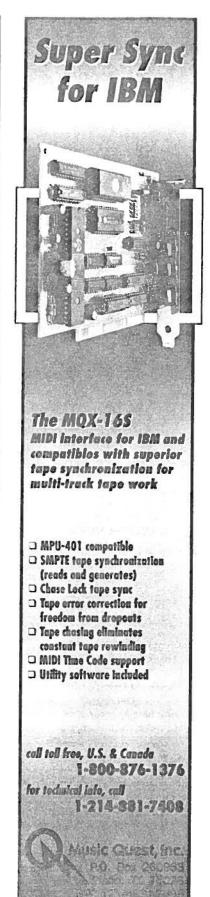

THICK AND CHUNKY

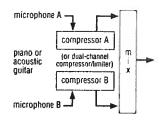

COMPRESSOR A


Compression Ratio: 8:1 Attack Time: Fast Release Time: Moderately fast Threshold Level: 6 dB to 20 dB below peak

COMPRESSOR B

Compression Ratio: 5:1
Attack Time: Moderate
Release Time: Slow
Threshold Level: 6 dB to 20 dB
below peak
Alternate Sources: Acoustic piano,
acoustic guitar

- The idea is to apply different amounts of compression to the two microphones.
- Place mic A close to the guitar amplifier's speaker. Fast attack and high compression ratio causes the guitar to sound "pumped."
- Place mic B (room mike), at a distance of 1 to 3 meters from the amp. A moderate to slow attack, combined with the tone of the room, creates a warm, sustained sound.
- When using a preamp, use two channel inputs with different EQ and/or ambience as sources to the compressors.

GATED AND CAVERN-OUS DRUMS O'DOOM

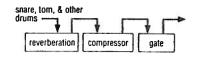

REVERB

Reverb Type: Concert Hall or Plate
Decay Time: Moderate to long
EQ: Bright
Pre-delay: 0 ms

COMPRESSOR


Compression Ratio: ∞:1 Attack Time: Very fast Release Time: Varies Threshold Level: 15 to 40 dB below peak

GATE

Expansion Ratio: 1:∞
Attack Time: Varies
Hold Time: Varies
Release Time: Moderately fast
Threshold Level: Varies
Alternate Sources: Any quick, percussive source

- The classic, Phil Collins/Hugh Padgham, gated drum sound
- The comp/limiter "squashes" the drum sound intensely. The sound of the signal "recovering" after being severely compressed and reverberated intensifies the effect of the gate.
- The onset of gating can be timed to suit the music by adjusting the attack of the compressor and the attack (and/or hold) time of the gate.

I'D LIKE TO BUY A

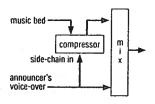

Compression Ratio: 6:1 Attack Time: Fast Release Time: Moderate Threshold Level: 6 to 15 dB below peak Alternate Sources: Your pick

- Use during a "voice-over," to "duck" the music automatically when the announcer speaks.
- Adjust threshold to reduce the gain of the music as the vocalist speaks; the more the gain reduction, the more the music will be ducked.
- Can also be used in creative context, i.e., a rapper who ducks an intense rhythm part, or a saxophonist who ducks a keyboard part.

The author wishes to thank Jim Dean, of Musideo Productions in San Francisco, for his advice with Tips 5, 7, and 10.