


j4_controller -- pin diagram

TTGO T-Display v1.1, rails visible, USB-C at the TOP (as mounted)

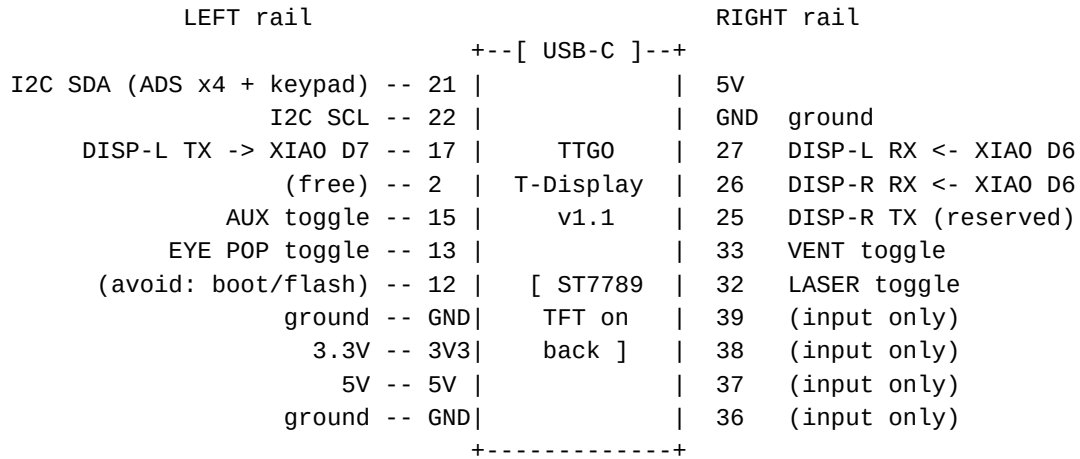

on-board (no header pin): GPIO34 = battery sense, BOOT = GPIO00,
 GPIO35 = screen-cycle button, TFT on 4/5/16/18/19/23
 I2C bus: ADS_01 @ 0x48, ADS_02 @ 0x49, ADS_03 @ 0x4A,
 ADS_04 @ 0x4B, PCF8574 keypad @ 0x20
 toggles: INPUT_PULLUP, switch closes to GND (ON = LOW)

GPIO	Function
21	I2C SDA (ADS1115 x4, PCF8574 keypad)
22	I2C SCL
17	Serial1 TX to j4_display_left (XIAO D7)
27	Serial1 RX from j4_display_left (XIAO D6)
25	Serial2 TX to j4_display_right (XIAO D7, reserved)
26	Serial2 RX from j4_display_right (XIAO D6, pot feed)
32	LASER toggle (INPUT_PULLUP, switch closes to GND)
33	VENT toggle (INPUT_PULLUP, switch closes to GND)
13	EYE POP toggle (INPUT_PULLUP, switch closes to GND)
15	AUX toggle, next to the right joystick (INPUT_PULLUP, unassigned)
34	Battery voltage sense (ADC input, read-only)
35	Screen-cycle button (TTGO built-in; data / MAC / connection status)