


j4_talk -- pin diagram

Teensy 4.1 + Audio Shield Rev D, component side up, USB at the TOP

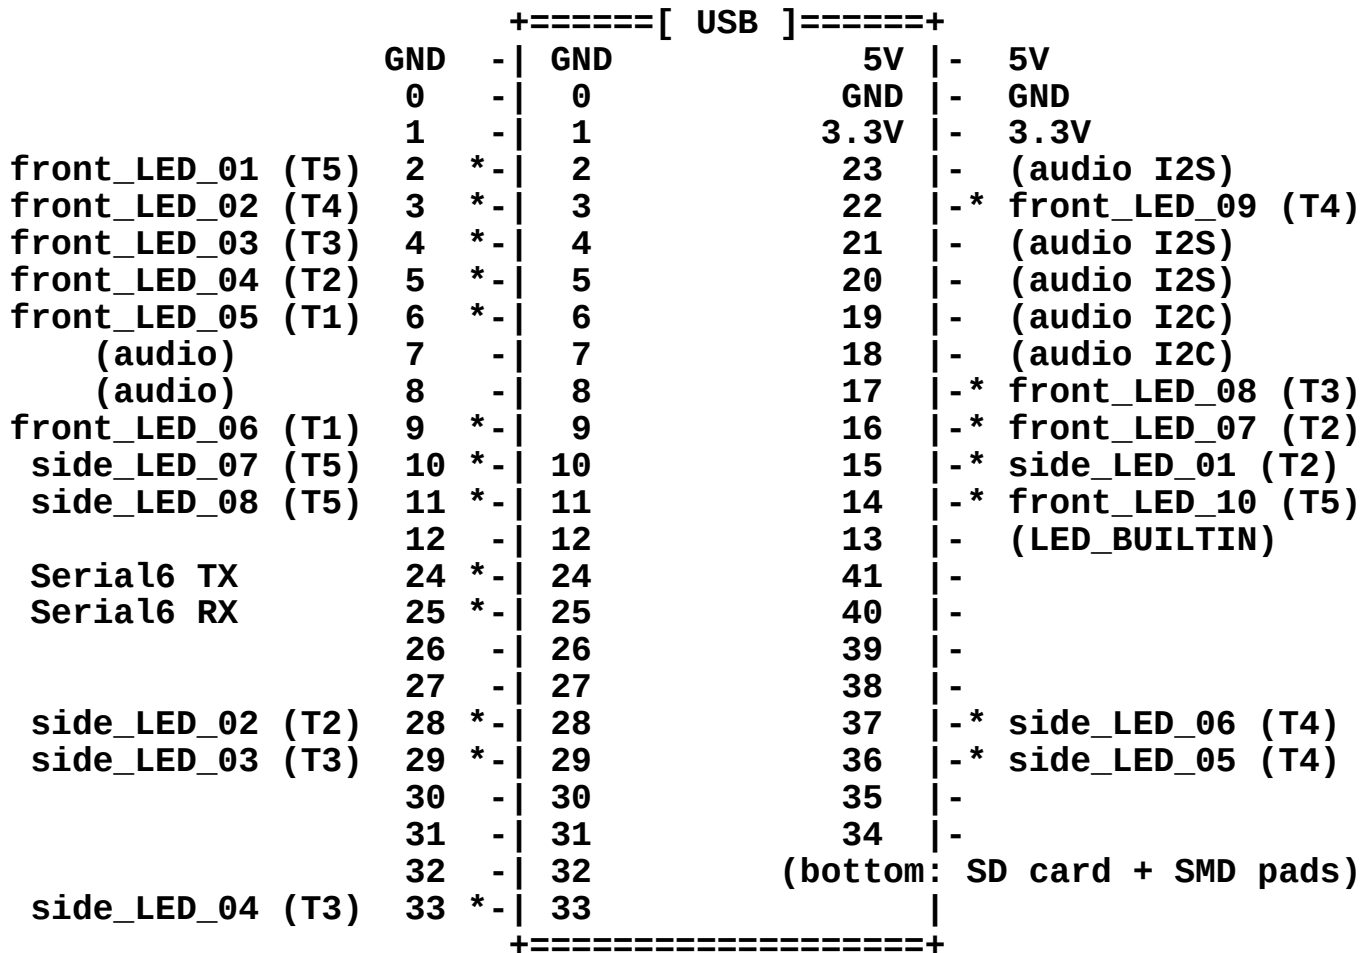

```
Serial6: 24 (TX) -> j4_receiver GPIO 2 ; 25 (RX) <- j4_receiver GPIO 17
Audio Shield Rev D uses 7, 8, 20, 21, 23 (I2S) + 18, 19 (I2C) + built-in SD.
front_LED_01..10 = front row left to right (pins 2,3,4,5,6,9,16,17,22,14);
front 05/06 light first. side_LED_01..08 = down the side, top to bottom
(pins 15,28,29,33,36,37,10,11).
```

Pin(s)	Function
2, 3, 4, 5, 6	front_LED_01..05 -- front row left half (tiers 5, 4, 3, 2, 1)
9, 16, 17, 22, 14	front_LED_06..10 -- front row right half (tiers 1, 2, 3, 4, 5)
6, 9	front_LED_05 + 06 = innermost pair, FIRST to light (tier 1)
15, 28	side_LED_01, side_LED_02 -- top of the side column (tier 2)
29, 33	side_LED_03, side_LED_04 (tier 3)
36, 37	side_LED_05, side_LED_06 (tier 4)
10, 11	side_LED_07, side_LED_08 -- bottom of the side column (tier 5)
24	Serial6 TX to j4_receiver (receiver GPIO 2)
25	Serial6 RX from j4_receiver (receiver GPIO 17)
7, 8, 20, 21, 23	Audio Shield Rev D I2S (do not reuse)
18, 19	Audio Shield Rev D I2C (do not reuse)