j4_talk -- pin diagram

Teensy 4.1 + Audio Shield Rev D, component side up, USB at the TOP

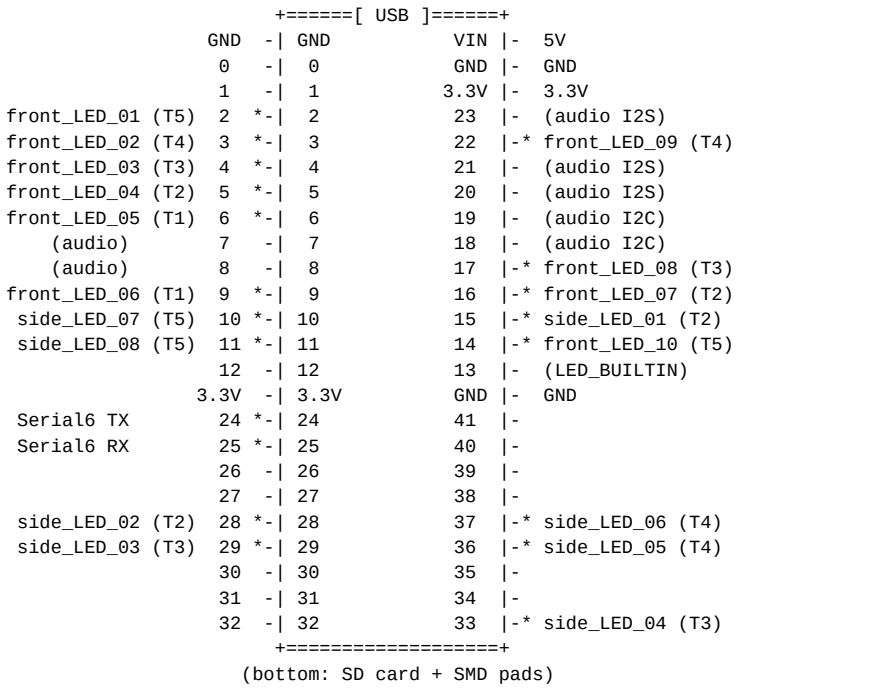


```
Serial6: 24 (TX) -> j4_receiver GPIO 2 ;  25 (RX) <- j4_receiver GPIO 17
Audio Shield Rev D uses 7, 8, 20, 21, 23 (I2S) + 18, 19 (I2C) + built-in SD.
front_LED_01..10 = front row left to right (pins 2,3,4,5,6,9,16,17,22,14);
front 05/06 light first. side_LED_01..08 = down the side, top to bottom
(pins 15,28,29,33,36,37,10,11).
```

Teensy Pin	Function
2	front_LED_01 (tier 5)
3	front_LED_02 (tier 4)
4	front_LED_03 (tier 3)
5	front_LED_04 (tier 2)
6	front_LED_05 (tier 1, innermost)
9	front_LED_06 (tier 1, innermost)
10	side_LED_07 (tier 5)
11	side_LED_08 (tier 5)
14	front_LED_10 (tier 5)
15	side_LED_01 (tier 2)
16	front_LED_07 (tier 2)
17	front_LED_08 (tier 3)
22	front_LED_09 (tier 4)
24	Serial6 TX to j4_receiver (receiver GPIO 2)
25	Serial6 RX from j4_receiver (receiver GPIO 17)
28	side_LED_02 (tier 2)
29	side_LED_03 (tier 3)
33	side_LED_04 (tier 3)
36	side_LED_05 (tier 4)
37	side_LED_06 (tier 4)