# j4_talk -- pin diagram

Teensy 4.1 + Audio Shield Rev D, component side up, USB at the TOP

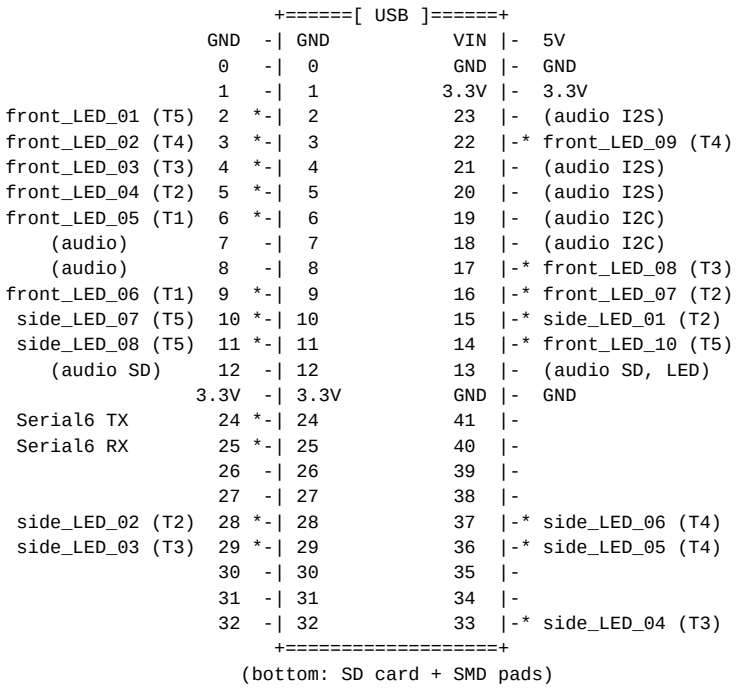


```
Serial6: 24 (TX) -> j4_receiver GPIO 2 ;  25 (RX) <- j4_receiver GPIO 17
Audio Shield Rev D uses 7, 8, 20, 21, 23 (I2S) + 18, 19 (I2C) + built-in SD.
The shield is also tied to 6, 10-13, 15 (memory CS, its SD slot, volume pot):
keep its SD slot empty and no memory chip or volume pot fitted.
front_LED_01..10 = front row left to right (pins 2,3,4,5,6,9,16,17,22,14);
front 05/06 light first. side_LED_01..08 = down the side, top to bottom
(pins 15,28,29,33,36,37,10,11).
```

| Teensy Pin | Function |
|---|---|
| 2 | front_LED_01 (tier 5) |
| 3 | front_LED_02 (tier 4) |
| 4 | front_LED_03 (tier 3) |
| 5 | front_LED_04 (tier 2) |
| 6 | front_LED_05 (tier 1, innermost) |
| 9 | front_LED_06 (tier 1, innermost) |
| 10 | side_LED_07 (tier 5) |
| 11 | side_LED_08 (tier 5) |
| 14 | front_LED_10 (tier 5) |
| 15 | side_LED_01 (tier 2) |
| 16 | front_LED_07 (tier 2) |
| 17 | front_LED_08 (tier 3) |
| 22 | front_LED_09 (tier 4) |
| 24 | Serial6 TX to j4_receiver (receiver GPIO 2) |
| 25 | Serial6 RX from j4_receiver (receiver GPIO 17) |
| 28 | side_LED_02 (tier 2) |
| 29 | side_LED_03 (tier 3) |
| 33 | side_LED_04 (tier 3) |
| 36 | side_LED_05 (tier 4) |
| 37 | side_LED_06 (tier 4) |