

HUMS - APPLICATION MANAGEMENT - SOFTWARE DOCUMENTATION

STATUS AND REFERENCES

Status

Responsibility:

DASSAULT AVIATION

Copyright:

This document is the intellectual property of DASSAULT AVIATION. It should not be used, copied, modified or disclosed without their prior approval. DASSAULT AVIATION Proprietary Data.

Medias

A2-A-RF0181-D-F6117-09001-A-001-01 Constants of the application

1. Constants of the application

NOTE: Setting data modification for backup of dialogs originating from MMS entails restarting the server application.

This function is used to modify the configuration parameters of the application, to modify some register keys, to set up the saving of files exchanged with the other systems and records.

The constants of the application display is split into multiple tables ( fig-001):

- DB setting,
- client setting,
- server backup management.

A. DB setting

Parameter designation	Type of field	Possible values	User function concerned
Archiving timeout of a phase (seconds)	Free entry field (to be expressed in seconds)	-	Setting of server savings
Deleting the memory images in Users stations	Choice on scroll list	Yes / No (by default)	Medium reading from a WEB inquiry station
Documentation collection installation			
EDMS maximum timeout		-	Answer granted time to EDMS
EDMS SERVER		-	Name or IP address of the server hosting EDMS
Formatting image in automatic mode	Choice on scroll list	Two-seater Single-seater	Reading of data recorded on the MDC
FOSDAC SERVER			
Inhibition of integrity test after formatting	Choice on scroll list	Yes / No	Reading of data recorded on the MDC

Parameter designation	Type of field	Possible values	User function concerned
Local time = UTC time +/-	Time format	-	All the times recorded during flight can be viewed in one of the reference frames Defines the time difference between local time and UTC time according to the operated Time Zone
Maximum waiting time delay for MMS	Free entry fields: numbers only		Time delay in seconds before a message exchange with MMS is declared timeout
Number of flights present in the Flight view per aircraft	Free entry field	-	Display in the Flight view
Site name	Entry field for a three-character string	-	The three letters displayed in the top left corner of the Flight View
Synchronization deviation permitted	Free entry field	Numerical value	Automatic synchronization
Type of medium formatting	Choice on scroll list	MANUAL / AUTO	Reading of data recorded on the MDC

B. Client setting

Parameter designation	Value	User functions concerned
Local directory used for data export operations	A directory of the client station Upon installation, the directory is created by default.	Used by the HUMS data export functions (aircraft deployment, failure library export, MFR export, etc.)
Local directory used for data import operations	A directory of the client station Upon installation, the directory is created by default.	Used by the HUMS data import functions (aircraft enrollment, failure library import, MFR import, etc.)
Temporary directory used by client software	A directory of the client station Upon installation, the directory is created by default.	"Engine medium reading" for engine file division, all the import/export functions for calculation of required memory size
Trace file management setting	Choice on scroll list	NO: no trace YES: all the error messages are traced in a trace file DEBUG: debug mode of the application

C. Server backup management

Parameter name	File transit directory	Functions concerned
Saving of raw files resulting from medium unloading	Free entry field	"Medium reading" function Indicates the directory on the server in which the Flight Data will be stored on the server
Archiving of trace directories	Free entry field	All functions Indicates the directory on the server in which the log files will be stored
HUMS in messages saving	Free entry field	Indicates the directory where messages sent by the MMS are saved
HUMS out messages saving	Free entry field	Indicates the directory where messages transmitted to the MMS are saved

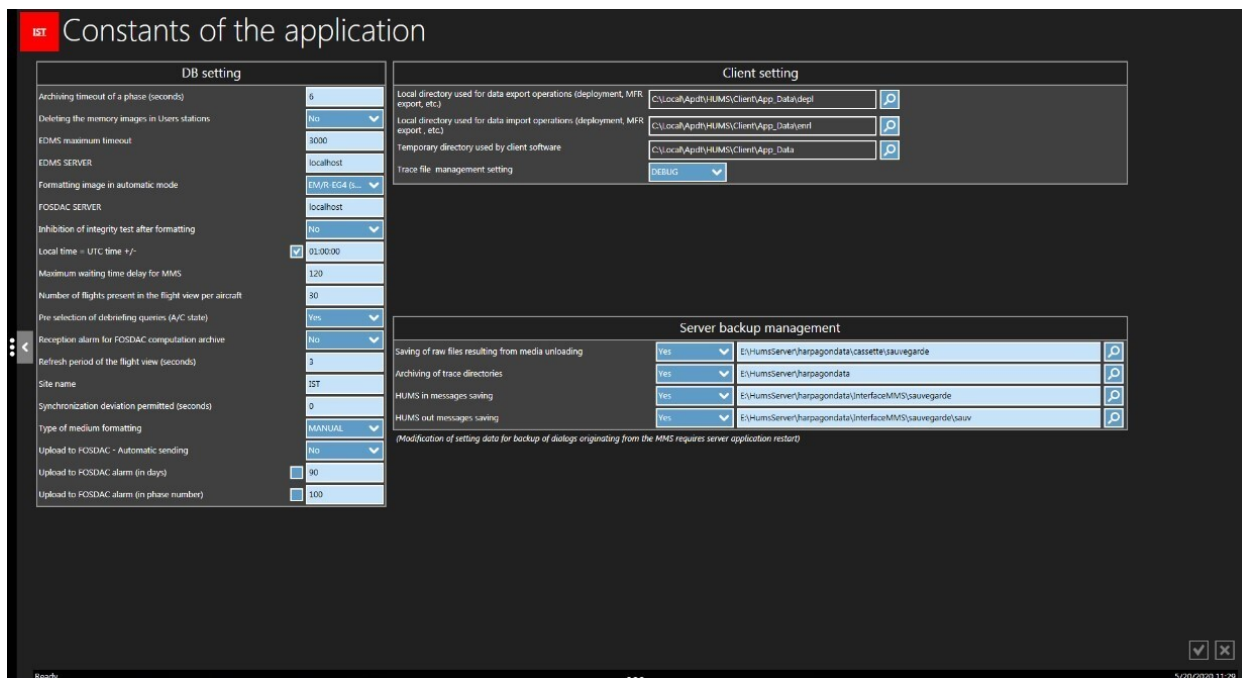


Figure 1: Constants of the application