


P1 Green Team Assembly Instructions

Ben Bruick, Layla Chehab, Aidan Deacon, Kimberly Gurwin

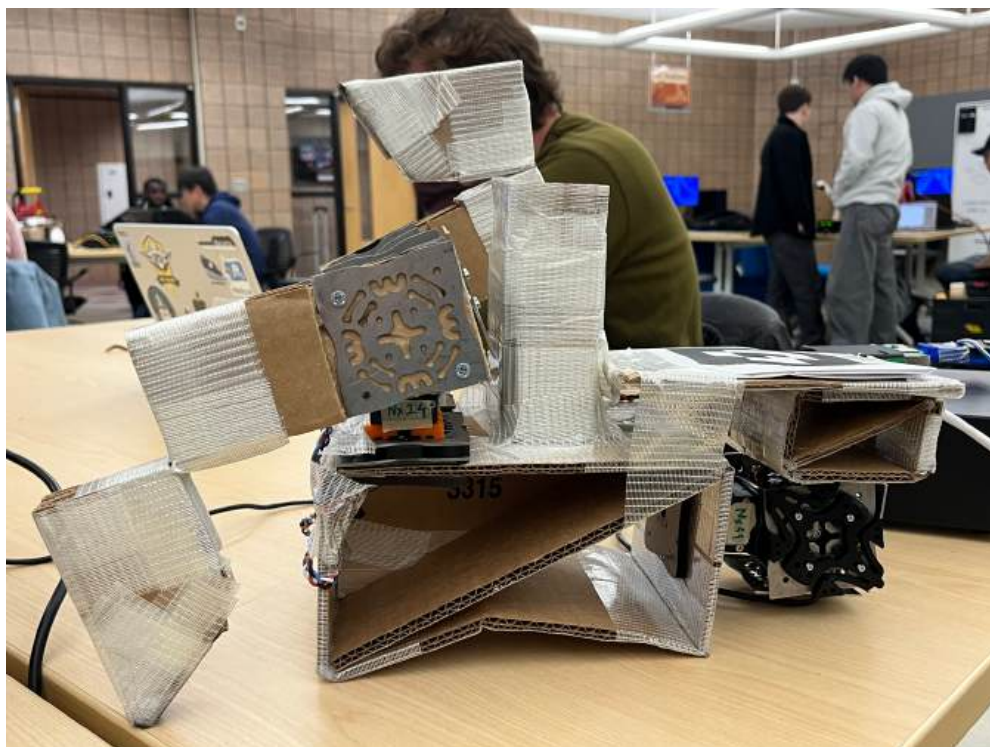

The conversion of the 2025 P0 Green Team Robot to the 2025 P1 Green Team Robot is outlined in the sections below. The process will not be adding any additional parts, but rather will take existing components and repurpose them for new uses.



Materials	2
I. Removals	2
II. Additions	3
III. Wiring	5

Materials: The following materials make up the required materials for constructing the robots


- 2025 P0 Green Team Robot
- Utility Knife
- Fiber Tape

1. Removals


1) Remove the additional attachment from the back motor module by disengaging the snap-locks



2) Cut the fiber tape connections between the april tag platform's legs and the body of the robot and remove the platform from the body

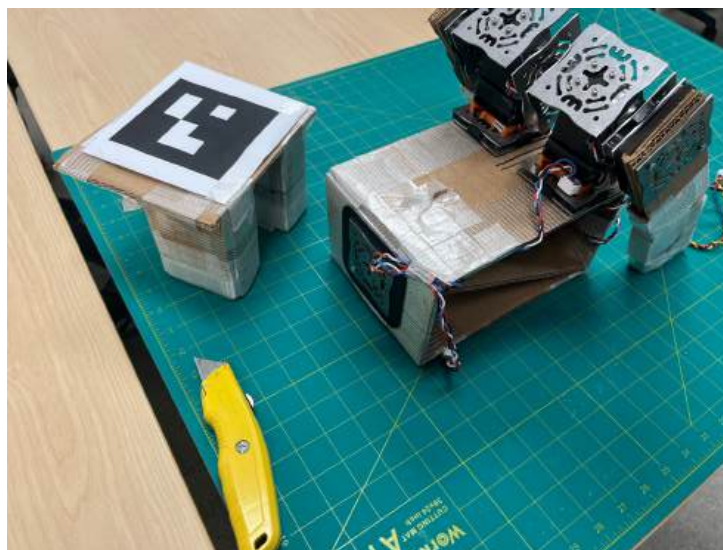


3) Cut the fiber tape connections between the legs and april tag platform's faceplate, as well as the german-colored wire port and the faceplate, and separate these components

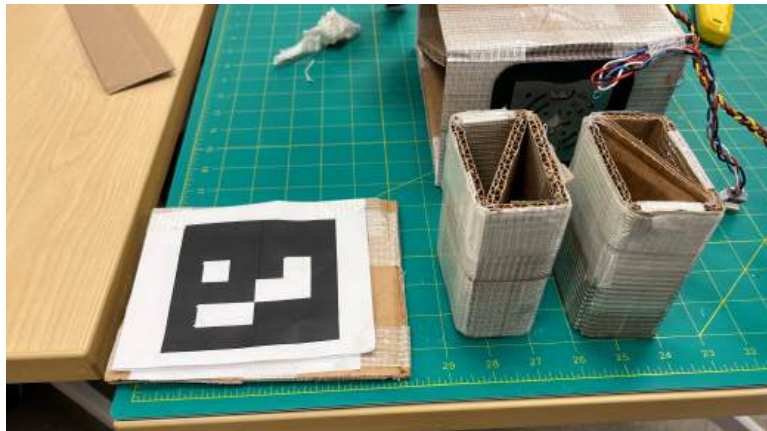


2. Additions

1) Take one of the legs from the platform and attach it to the base in a centered position as close to the leg motors as possible without having any contact with them to make a tower

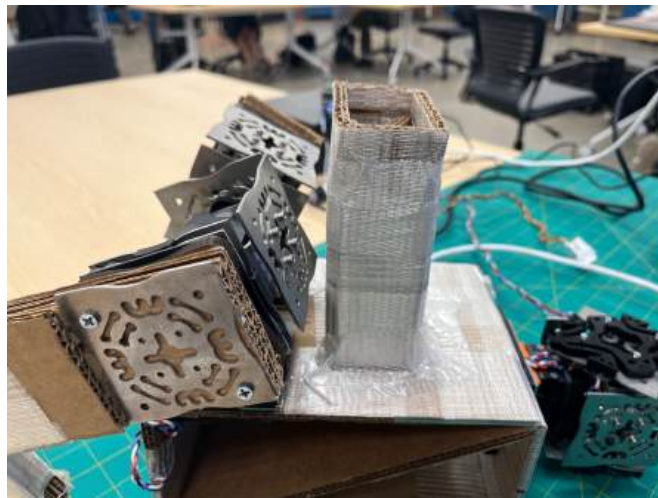

2) Attach the german wire port to the top of the tower in an upright position

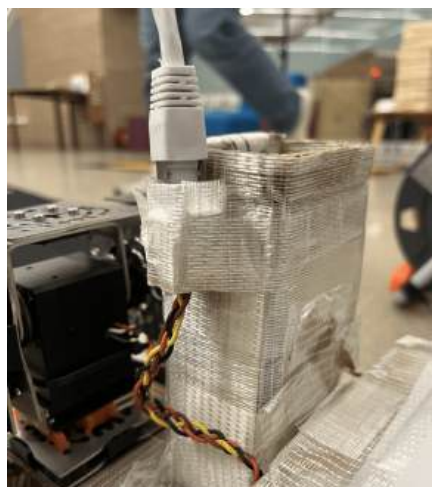

3) Take the second leg and place it above the back motor, but do not put any tape between them. Then, attach the faceplate to the top of that leg, and use tape between the main body and the faceplate to stabilize the connection




4) Add an additional length of tape connecting the faceplate to the side of the tower leg and attach the new april tag in the orientation where the front and back of the tag are on the right and left respectively



3. Wiring

- 1) Remove the dutch-colored wire that connects the back motor to the right leg motor

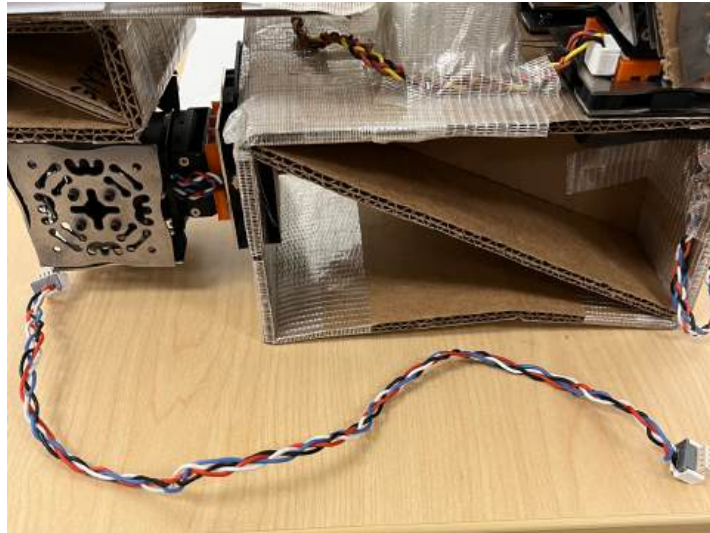

- 2) Attach the JST-connector end of the german wire to the right motor module



- 3) Use fiber tape to attach the german wire to the robot underneath the faceplate

