


top plate: 1:1 drilling template

100 mm: measure before drilling

3 mm aluminium, 130 × 130 mm, corners R8. Coordinates from the plate's centre. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.

→ FRONT (car forward)

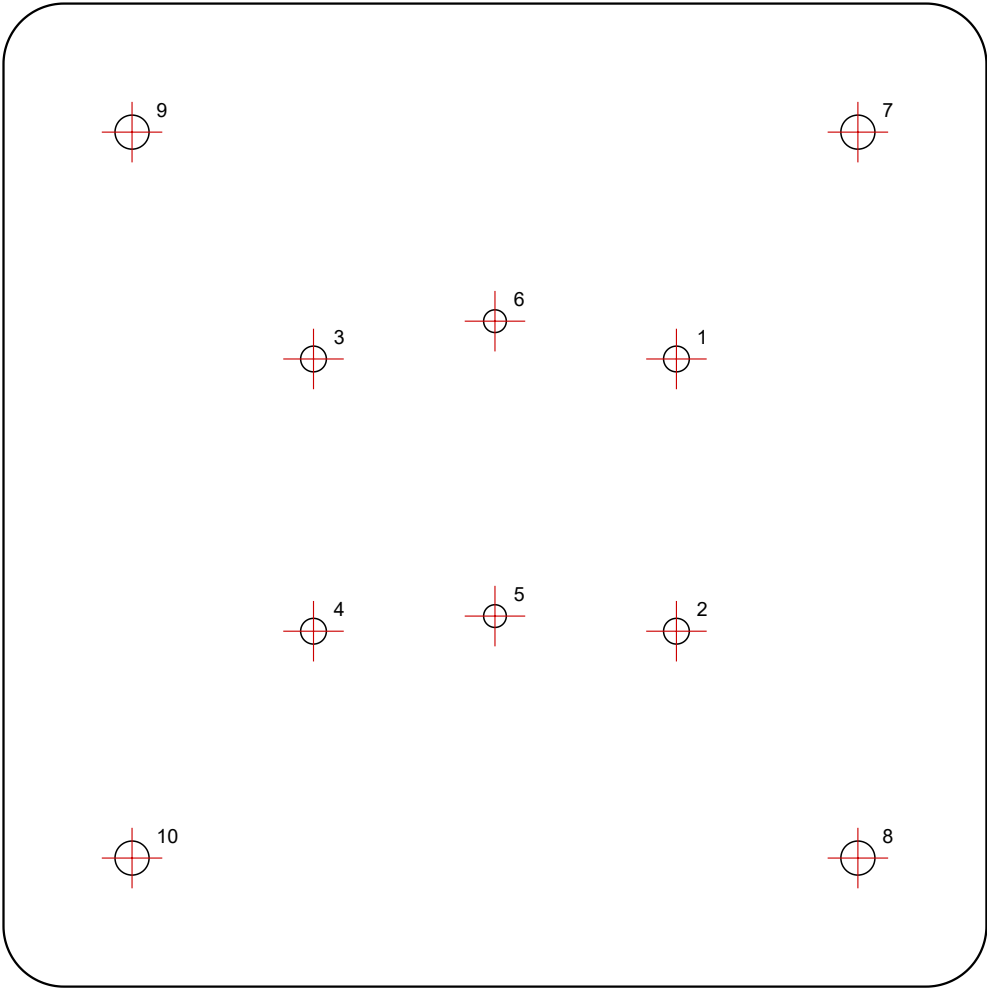


#	Size	For	(x, y) mm
1	Ø 3.4 mm	M3 clear (LiDAR, from below)	(24.0, 18.0)
2	Ø 3.4 mm	M3 clear (LiDAR, from below)	(24.0, -18.0)
3	Ø 3.4 mm	M3 clear (LiDAR, from below)	(-24.0, 18.0)
4	Ø 3.4 mm	M3 clear (LiDAR, from below)	(-24.0, -18.0)
5	Ø 3 mm	dowel 3x5 press (check against the LiDAR first)	(0.0, -16.0)
6	Ø 3 mm	dowel 3x5 press (check against the LiDAR first)	(0.0, 23.0)
7	Ø 4.5 mm	M4 clear (to wedge inserts)	(48.0, 48.0)
8	Ø 4.5 mm	M4 clear (to wedge inserts)	(48.0, -48.0)
9	Ø 4.5 mm	M4 clear (to wedge inserts)	(-48.0, 48.0)
10	Ø 4.5 mm	M4 clear (to wedge inserts)	(-48.0, -48.0)

base plate: 1:1 drilling template

100 mm: measure before drilling

3 mm aluminium, 150 × 150 mm, corners R10. Coordinates from the plate's centre. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.

→ FRONT (car forward)

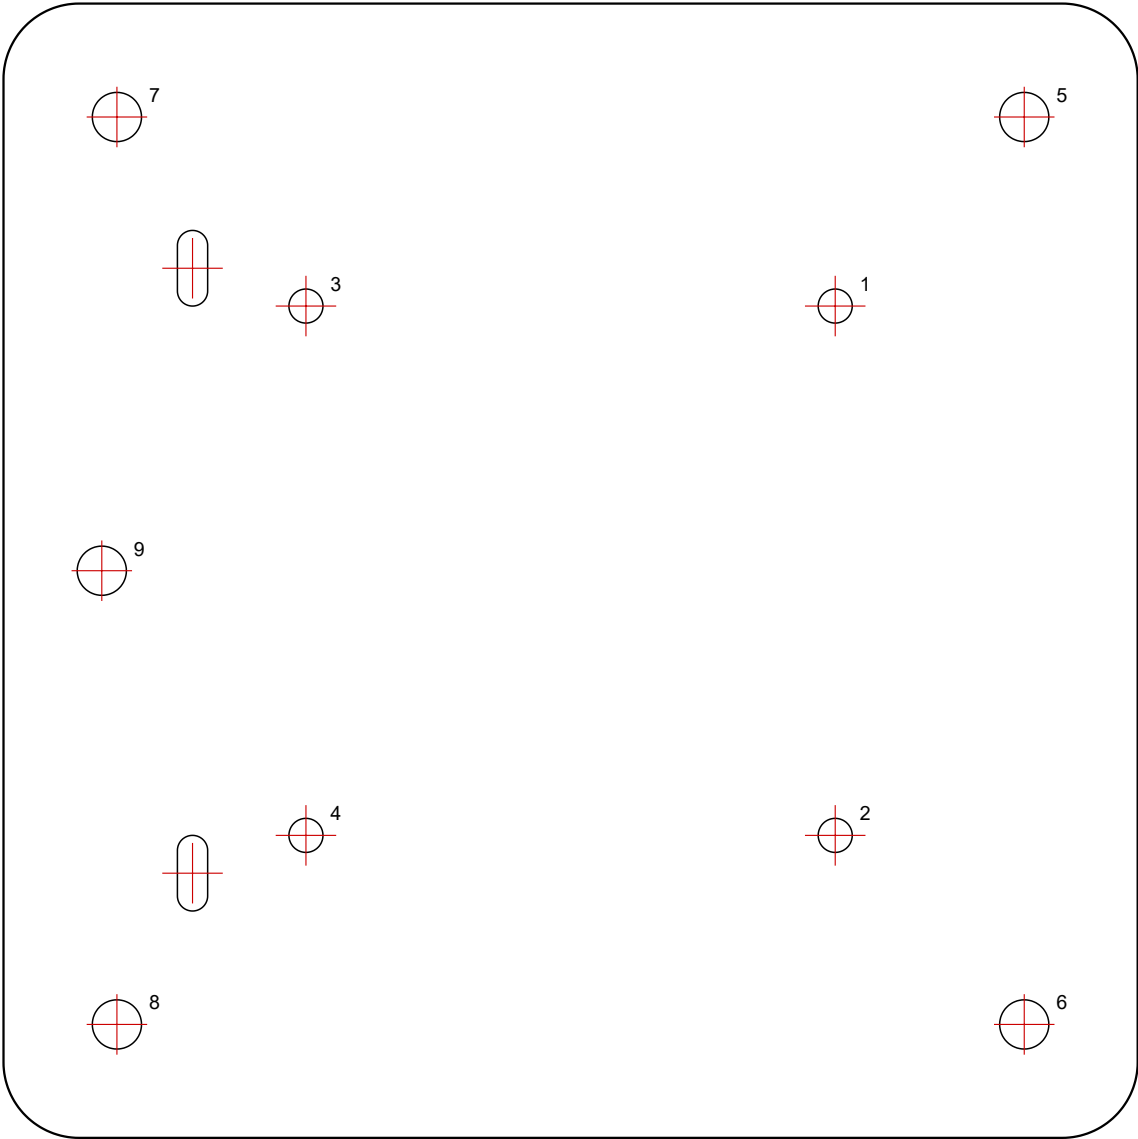

#	Size	For	(x, y) mm
1	Ø 4.5 mm	M4 clear (to wedge inserts)	(35.0, 35.0)
2	Ø 4.5 mm	M4 clear (to wedge inserts)	(35.0, -35.0)
3	Ø 4.5 mm	M4 clear (to wedge inserts)	(-35.0, 35.0)
4	Ø 4.5 mm	M4 clear (to wedge inserts)	(-35.0, -35.0)
5	Ø 6.5 mm	M6 (pot magnet stud)	(60.0, 60.0)
6	Ø 6.5 mm	M6 (pot magnet stud)	(60.0, -60.0)
7	Ø 6.5 mm	M6 (pot magnet stud)	(-60.0, 60.0)
8	Ø 6.5 mm	M6 (pot magnet stud)	(-60.0, -60.0)
9	Ø 6.5 mm	tether	(-62.0, 0.0)
slot	4 × 10 mm	cable-tie slot	(-50.0, 40.0)
slot	4 × 10 mm	cable-tie slot	(-50.0, -40.0)