dash panel: 1:1 drilling template

100 mm: measure before drilling

Dash panel behind the E-stop base, seen from the driver, 56 × 56 mm. Coordinates from the bottom-left corner. Measure the box first; if it differs, change box_in in the model and regenerate. Tape the outline to the panel's edges. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.

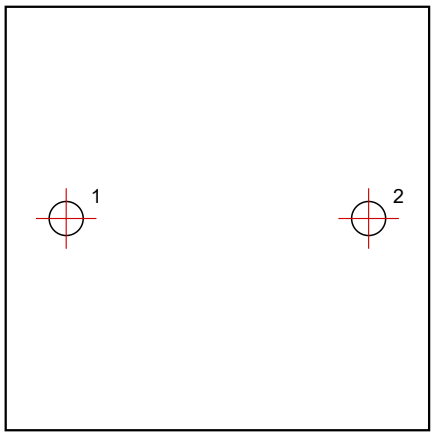

#	Size	For	(x, y) mm
1	Ø 4.5 mm	M4 to the dash panel	(8.0, 28.0)
2	Ø 4.5 mm	M4 to the dash panel	(48.0, 28.0)