glass plate: 1:1 drilling template

100 mm: measure before drilling

Aluminium 3 mm, bonded to the glass (VHB), seen from the cabin; roof end up, 50 × 60 mm. Coordinates from the bottom-left corner. Measure the box first; if it differs, change box_in in the model and regenerate. Tape the outline to the panel's edges. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.

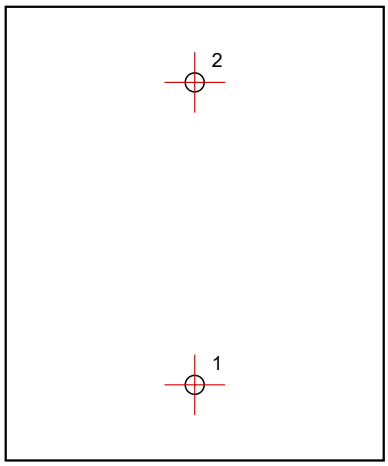

#	Size	For	(x, y) mm
1	Ø 2.5 mm	drill 2.5, tap M3 (rail screws)	(25.0, 10.0)
2	Ø 2.5 mm	drill 2.5, tap M3 (rail screws)	(25.0, 50.0)