
front wall: 1:1 drilling template

100 mm: measure before drilling

Front wall (DB-25), seen from outside, 246 × 98 mm. Coordinates from the bottom-left corner. Measure the box first; if it differs, change box_in in the model and regenerate. Tape the outline to the panel's edges. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.




#	Size	For	(x, y) mm
D	39 × 11 mm D, 2 × Ø 3.1 on 47.04	DB-25 to the pod: VERIFY the shell against the cut-out. Drill the corners, cut, file to the line.	(164.0, 20.9)

rear wall: 1:1 drilling template

100 mm: measure before drilling

Rear wall (cable glands), seen from outside, 246 × 98 mm. Coordinates from the bottom-left corner. Measure the box first; if it differs, change box_in in the model and regenerate. Tape the outline to the panel's edges. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.

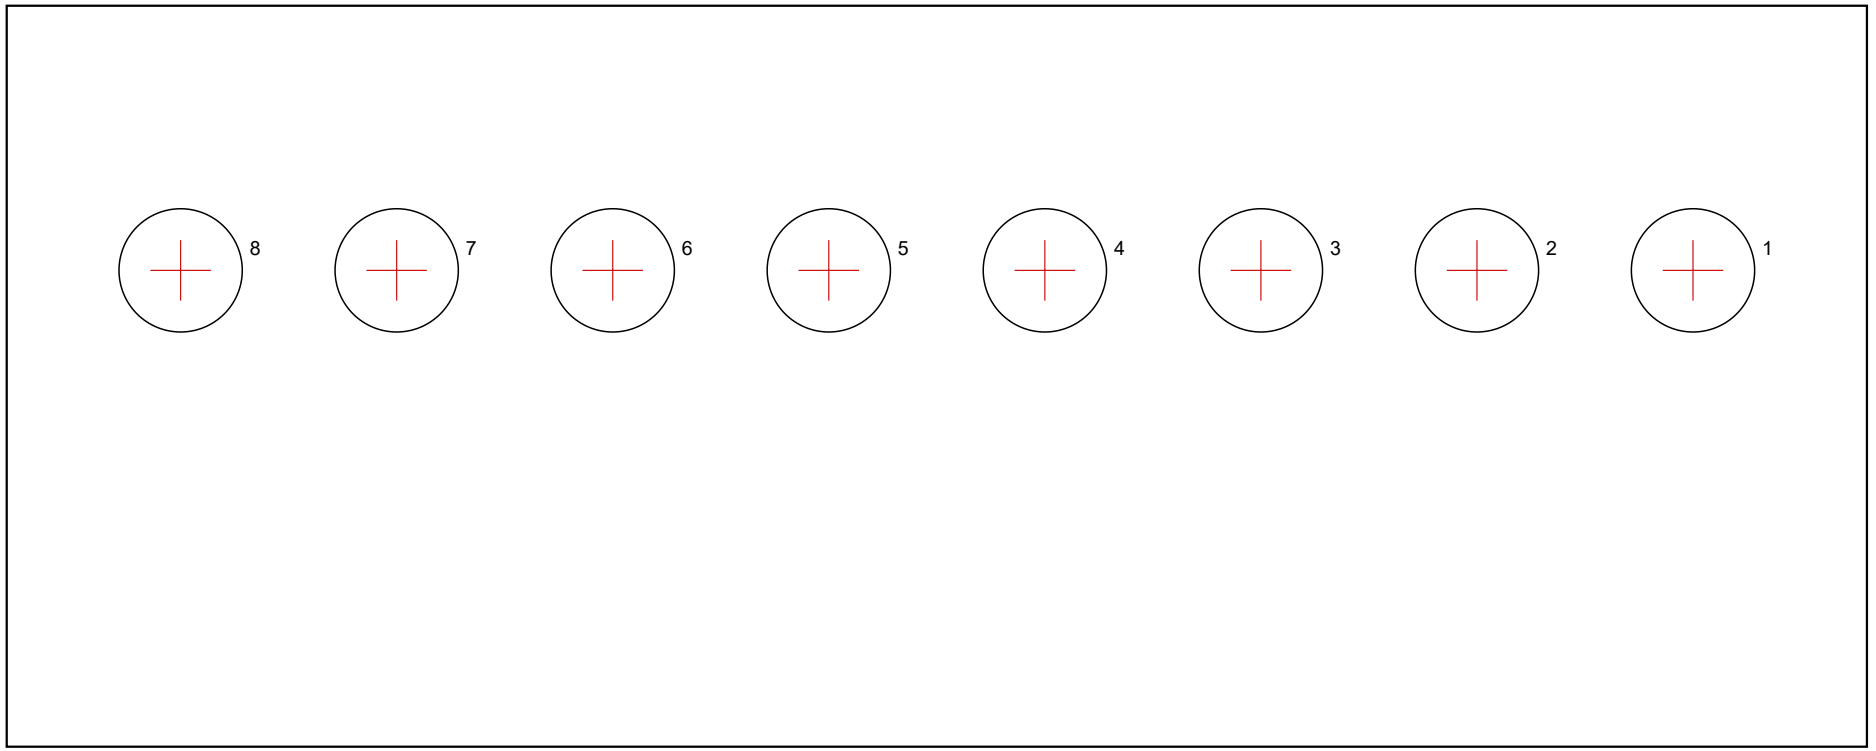


#	Size	For	(x, y) mm
1	Ø 16.3 mm	M16 gland: LiDAR 12 V (M12 lead)	(223.0, 63.0)
2	Ø 16.3 mm	M16 gland: OBD-II lead (CAN, keep it ~0.5 m)	(194.4, 63.0)
3	Ø 16.3 mm	M16 gland: brake-light switch	(165.9, 63.0)
4	Ø 16.3 mm	M16 gland: relay contacts to the car's switch wiring	(137.3, 63.0)
5	Ø 16.3 mm	M16 gland: 12 V ACC (switched) in	(108.7, 63.0)
6	Ø 16.3 mm	M16 gland: E-stop (kill relay coil)	(80.1, 63.0)
7	Ø 16.3 mm	M16 gland: actuator + cable magnet	(51.6, 63.0)
8	Ø 16.3 mm	M16 gland: 12 V battery feed (fused at the battery)	(23.0, 63.0)

left wall: 1:1 drilling template

100 mm: measure before drilling

Left wall (vents by the BTS7960 heatsink), seen from outside, 146 × 98 mm. Coordinates from the bottom-left corner. Measure the box first; if it differs, change box_in in the model and regenerate. Tape the outline to the panel's edges. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.

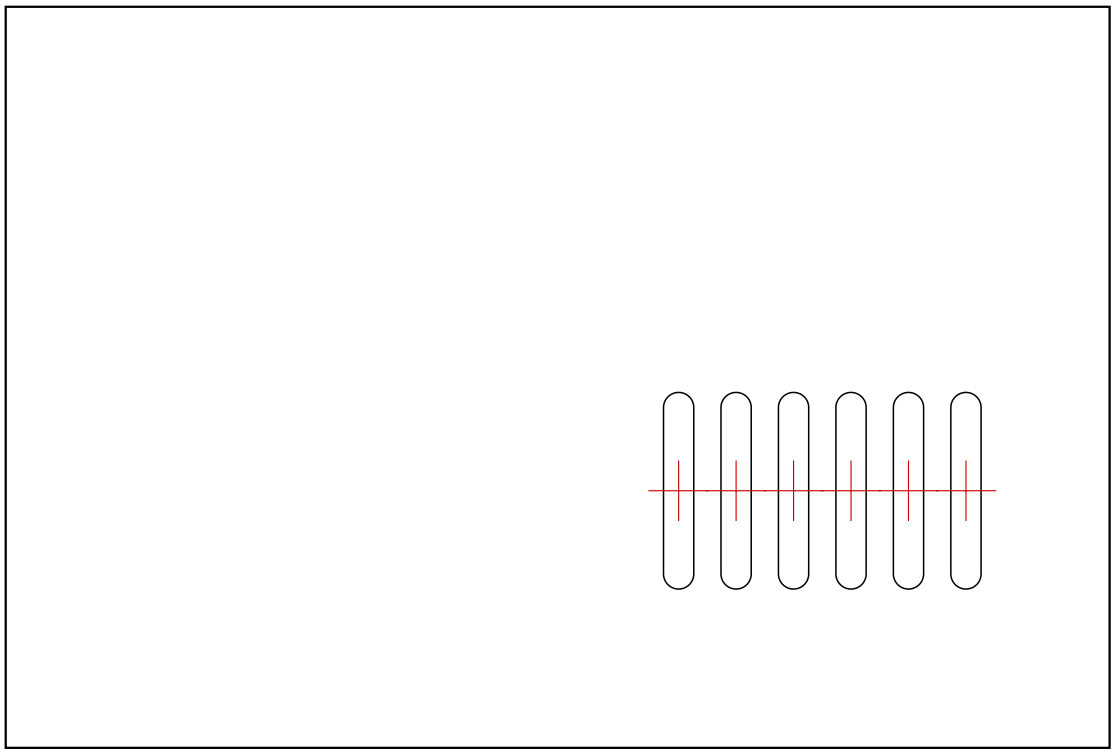


#	Size	For	(x, y) mm
slot	4 × 26 mm	vent slot	(127.0, 34.0)
slot	4 × 26 mm	vent slot	(119.4, 34.0)
slot	4 × 26 mm	vent slot	(111.8, 34.0)
slot	4 × 26 mm	vent slot	(104.2, 34.0)
slot	4 × 26 mm	vent slot	(96.6, 34.0)
slot	4 × 26 mm	vent slot	(89.0, 34.0)

floor: 1:1 drilling template

100 mm: measure before drilling

Box floor, seen from INSIDE with the front wall at the bottom (or mark through the printed chassis), 240 × 140 mm. Coordinates from the bottom-left corner. Measure the box first; if it differs, change box_in in the model and regenerate. Tape the outline to the panel's edges. Print at 100 % (actual size). Centre-punch each red cross, pilot-drill 2.5 mm, then drill to size (a step drill for the large holes). Deburr.



#	Size	For	(x, y) mm
1	Ø 4.5 mm	M4 to the chassis insert	(105.0, 6.0)
2	Ø 4.5 mm	M4 to the chassis insert	(105.0, 60.0)
3	Ø 4.5 mm	M4 to the chassis insert	(21.0, 68.0)
4	Ø 4.5 mm	M4 to the chassis insert	(219.0, 68.0)