

NOTES:

1. AT THE TIME OF ASSEMBLY MAKE SUSRE ALL FRAME SECTIONS ARE HAVE THE COUNTERBORE FACING UP. THESE COUNTERBORES ARE USED FOR HOUSING THE 5mm NUTS THAT MUST BE PRESSED IN FLUSH SO THE COMPLETE TARGET ASSEMBLY CLAMPS TOGETHER AS ONE UNIT.

SECTION A-A

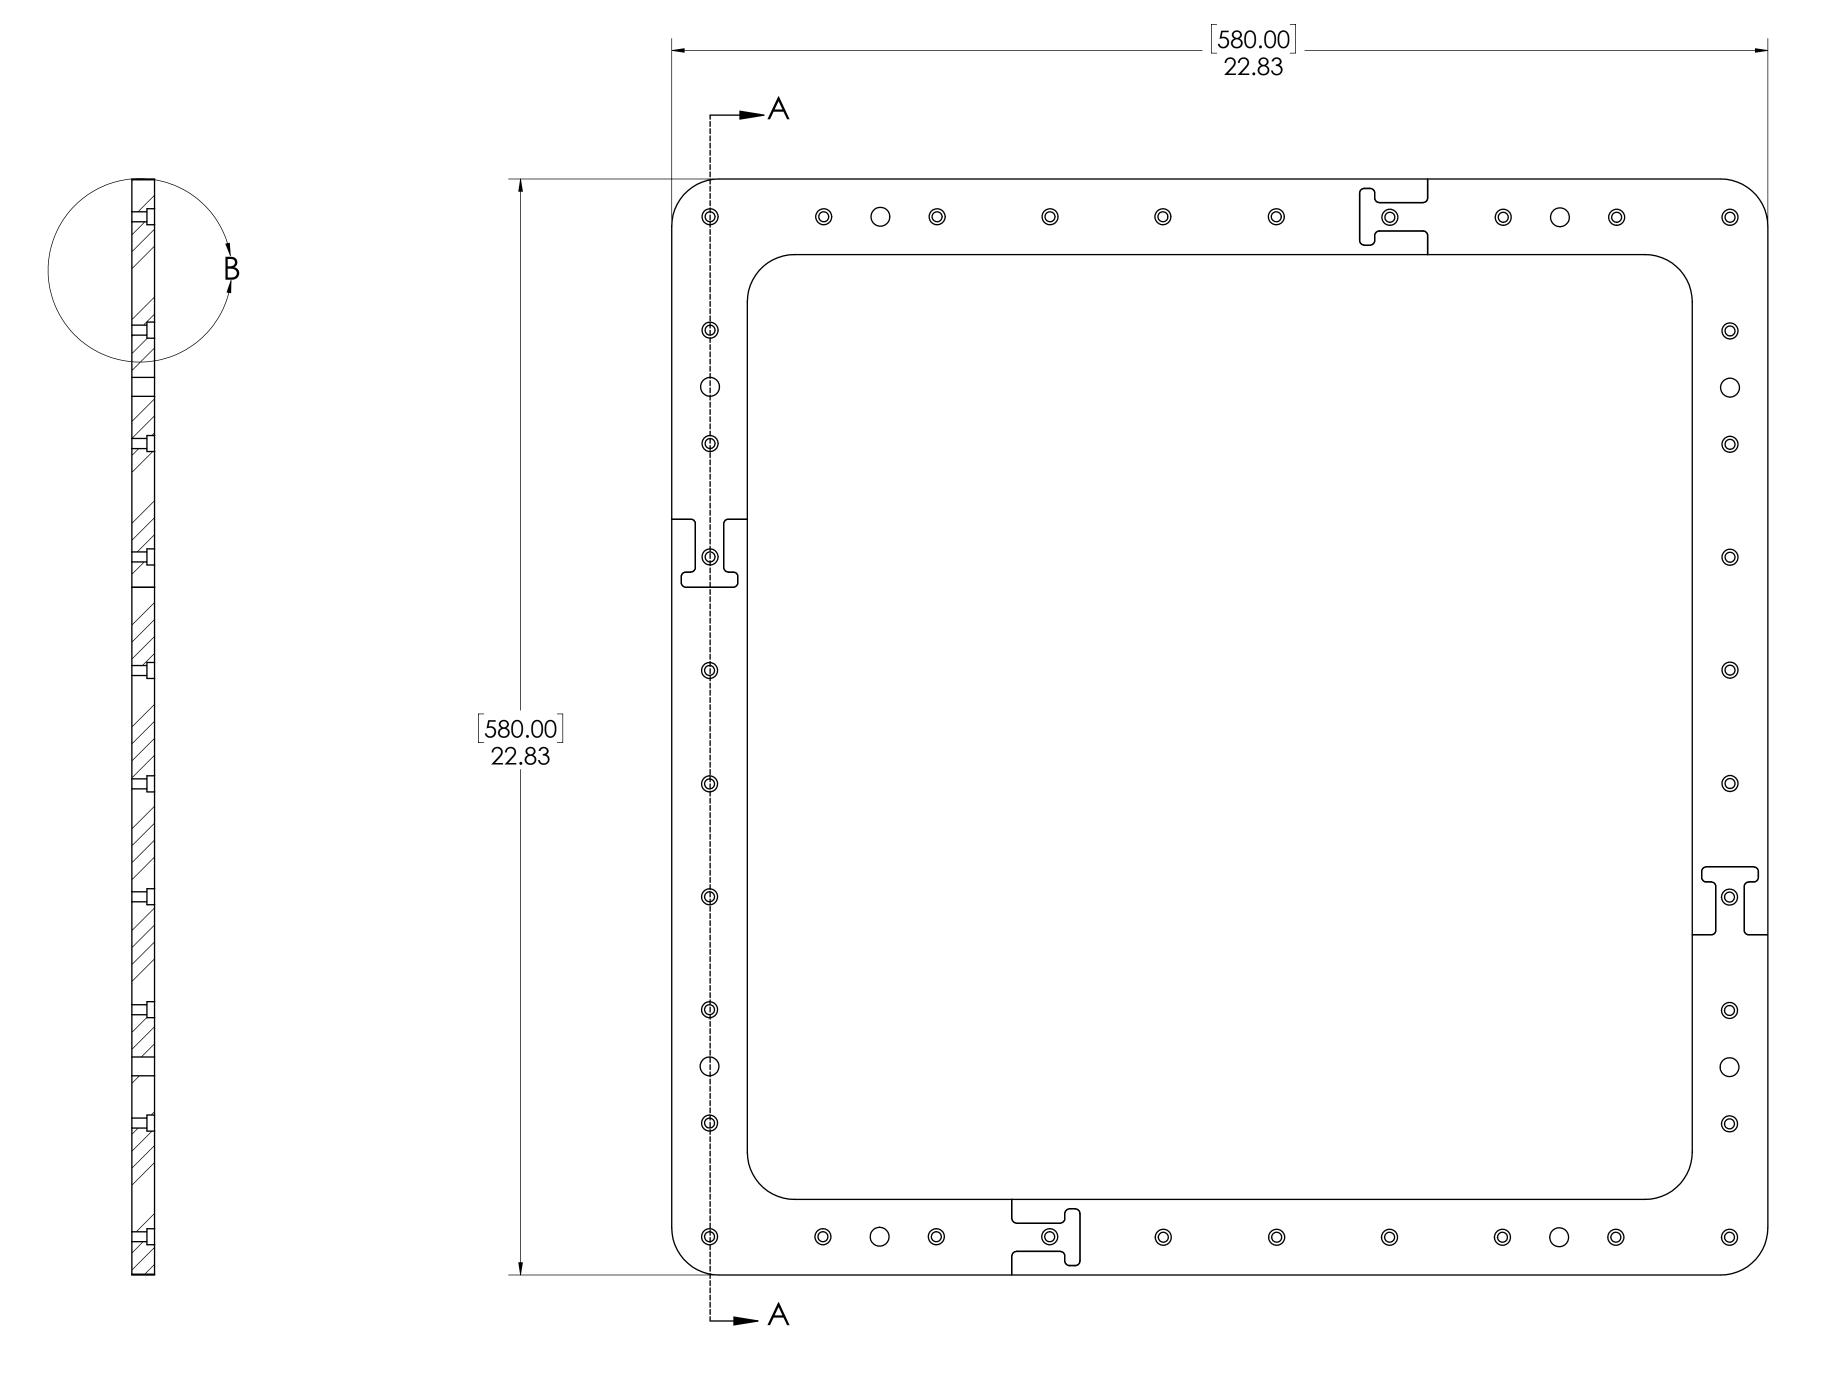

THIS VIEW IS THE BACK SIDE OF THE CLAMP FRAME SHOWING THE COUNTERBORES

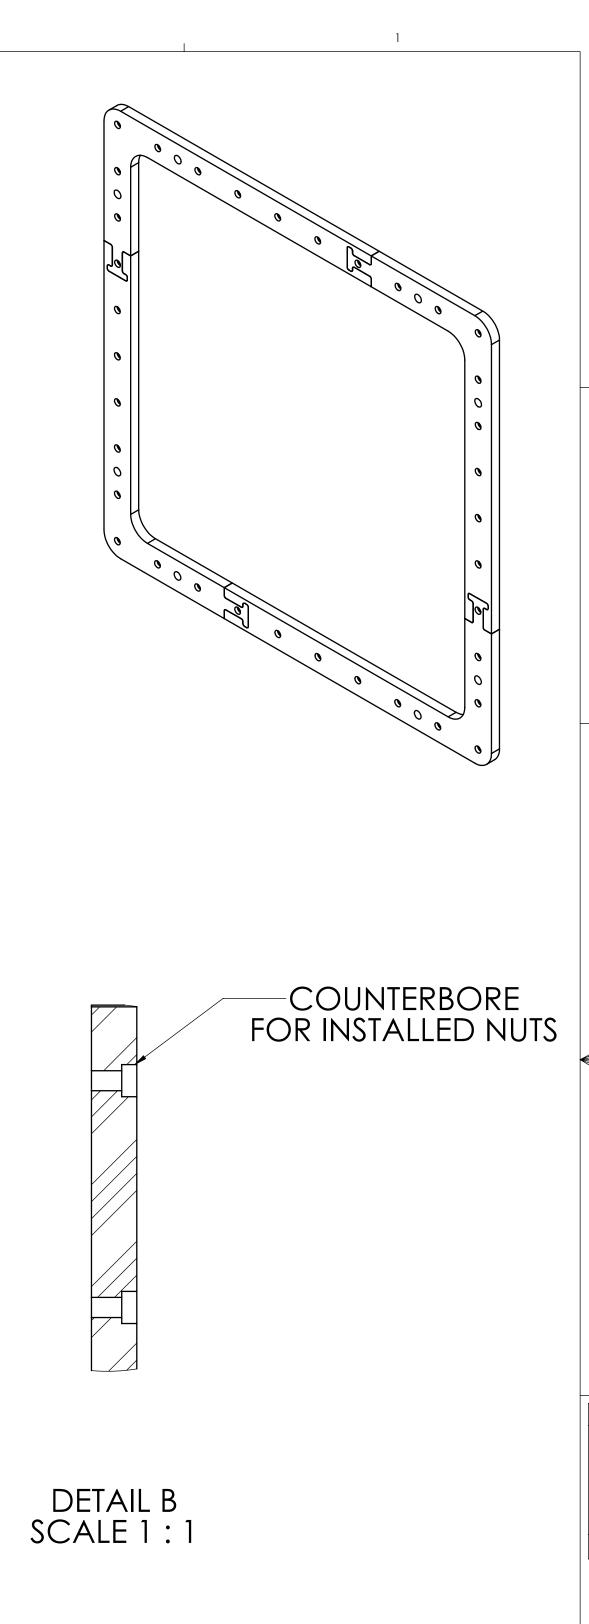

1 4 FET-0205 BACK CLAMP FRAME SECTION PLYWOOD	-
ITEM NO. PART NUMBER PART DESCRIPTION MATERIAL FINISH	NOTE NO.
UNLESS OTHERWISE SPECIFIED: NAME DATE FRETTATGET	
DIMENSIONS ARE IN INCHES DIXAM 3. SIVALI	
TOLERANCES: FRACTIONAL ± CHECKED TITLE:	
ANGULAR: MACH± BEND± TWO PLACE DECIMAL ± ENG APPR. DACK CLANAD AS	21/
TWO PLACE DECIMAL ± THREE PLACE DECIMAL ± MFG APPR. BACK CLAMP AS	5 Y
INTERPRET GEOMETRIC Q.A.	
TOLERANCING PER: COMMENTS:	DE\/

SCALE: 1:2 1.55

SHEET 1 OF 1

NEXT ASSY