HOME PLOTS APPS EDITOR PUBLISH VIEW

Search (Ctrl+Shift+Space)

New Open Save Print Compare Go To Find Bookmark Copilot Refactor Profiler Code Issues Debugger Generate Test Find Tests Run Section Section Break Run and Advance Run to End Run Step

FILE NAVIGATE CODE ANALYZE TEST SECTION RUN

C: › Users › HP › Downloads ›

Files

Name

_Getintopc.com_Optiwave_
_temp_matlab_R2026a_Win
_temp_matlab_R2026b_Win
Camera Roll
Documents
ES
Iot
OptiSystem-23.0.0-evaluatio
Saveetha_Browser
Vivado Lab Ed 2024.1 052...
_Getintopc.com_Altium_Desi...
_Getintopc.com_Optiwave_...
OOBCCGYKAAAAYD4D0I29...

Workspace

Name	Value	Size
I1_sc	5	1×1
I1_sc2	1.6000	1×1
I2_sc	2	1×1
I2_sc2	4	1×1
Parameter	4×1 cell	4×1
T	4×2 table	4×2
V1_sc	10	1×1
V2_sc	8	1×1
Value	[0.5000 0.20...	4×1
Y	[0.5000 0.20...	2×2
Y11	0.5000	1×1
Y12	0.2000	1×1

Editor

ECA56-EXP-1.m × EXP1.m × EXP12.m ×

C:\Users\HP\Downloads\EXP12.m

```
clc;
clear;
close all;

% Given Measurements
% Case 1: V2 = 0 (Output Port Short-Circuited)
V1_sc = 10; % Input Voltage (V)
I1_sc = 5; % Input Current (A)
I2_sc = 2; % Output Current (A)

% Case 2: V1 = 0 (Input Port Short-Circuited)
V2_sc = 8; % Output Voltage (V)
I1_sc2 = 1.6; % Input Current (A)
I2_sc2 = 4; % Output Current (A)

% Calculation of Y Parameters

Y11 = I1_sc / V1_sc;
Y21 = I2_sc / V1_sc;

Y12 = I1_sc2 / V2_sc;
Y22 = I2_sc2 / V2_sc;

% Display Results
```

Command Window

New to MATLAB? See resources for Getting Started

```
    {'Y11'}    0.5
    {'Y12'}    0.2
    {'Y21'}    0.2
    {'Y22'}    0.5

>>
```


Figures

FIGURE FORMAT TOOLS LAYOUT

Save As Copy Figure Print Show Code Title Subtitle X-Label Y-Label Legend

FILE LABELS AND ANNOTATIONS

Figure 1 ×

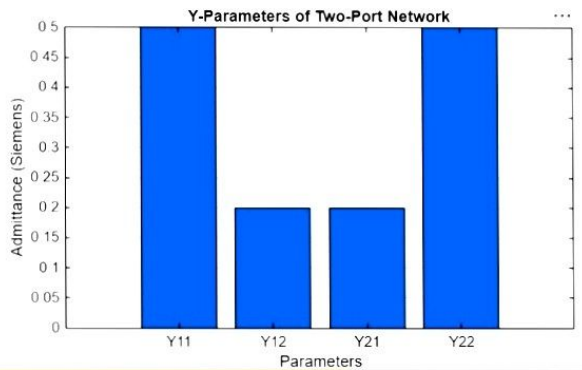

Copilot Chat

help write
Learn more

ns accurate
se. Share
esponses.

A = [2 4 1
results

function

ial, preprocess

EXP12.m

Ask Copilot

Validate generated output before use.