

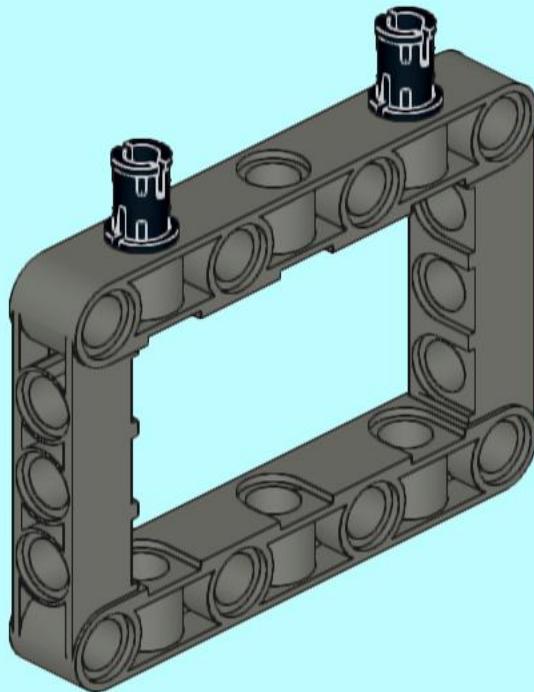



1

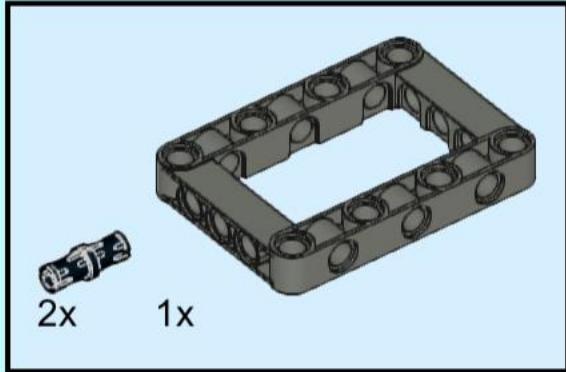


2

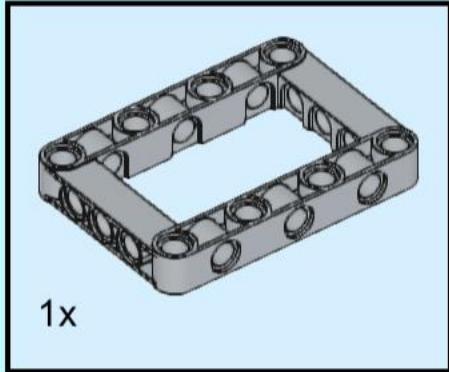


1x

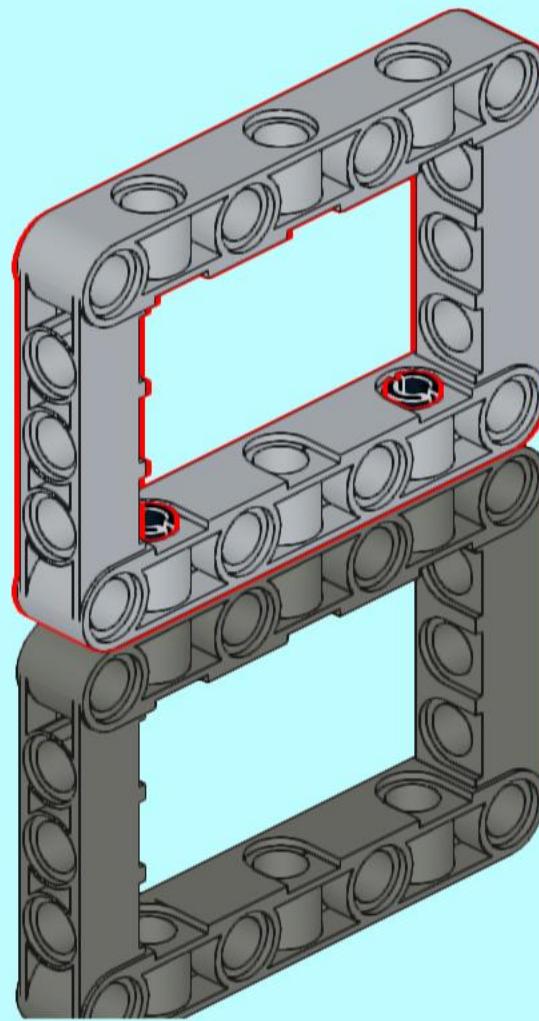



3

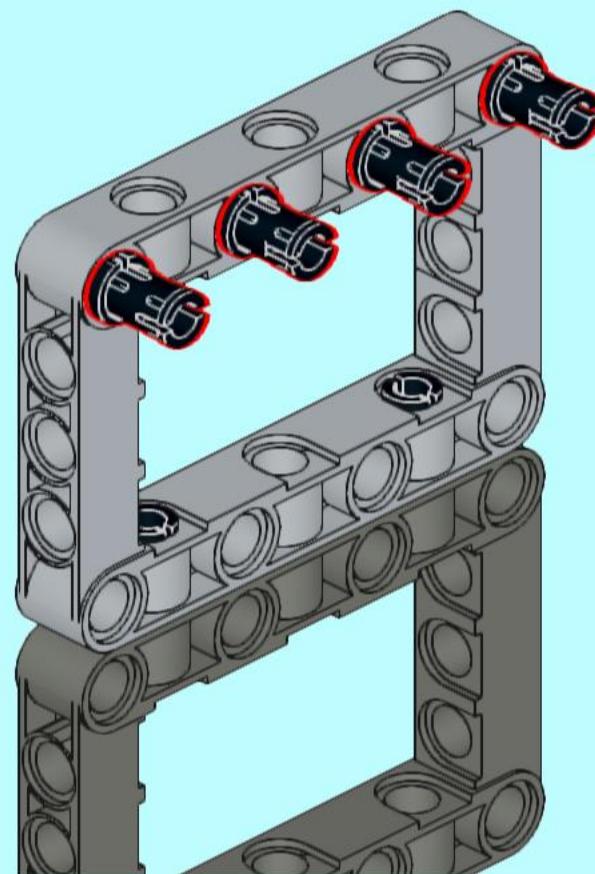



4

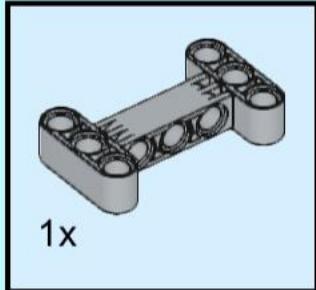


1x

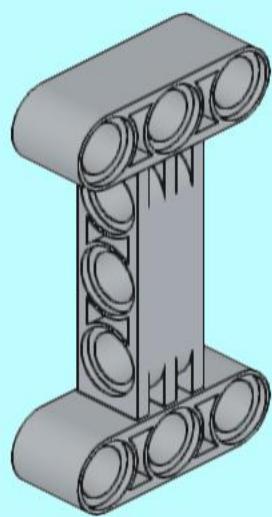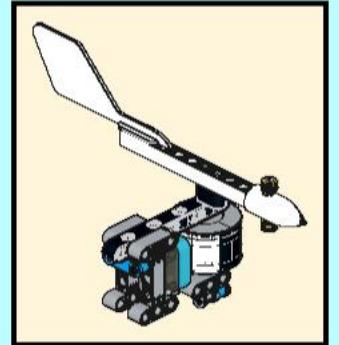


5

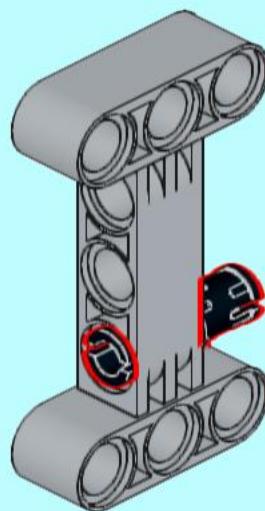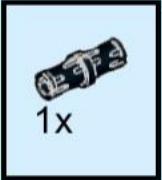


6

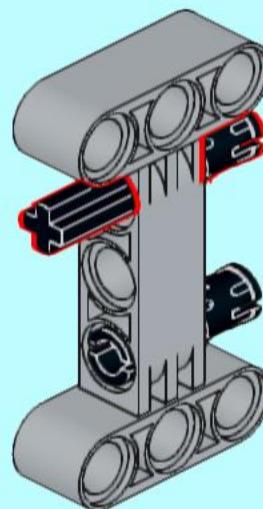




7

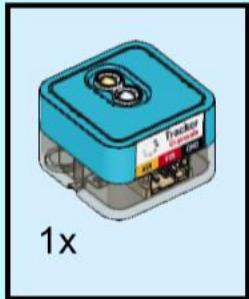



1x

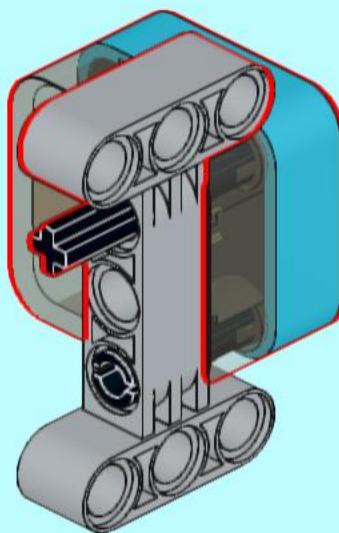




8

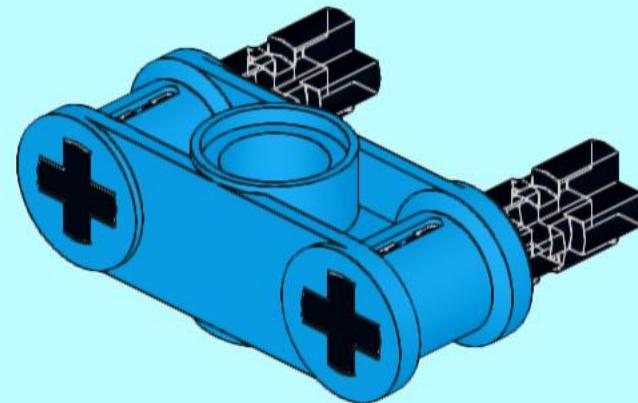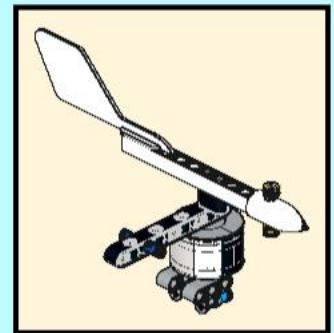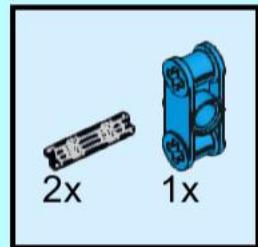




9

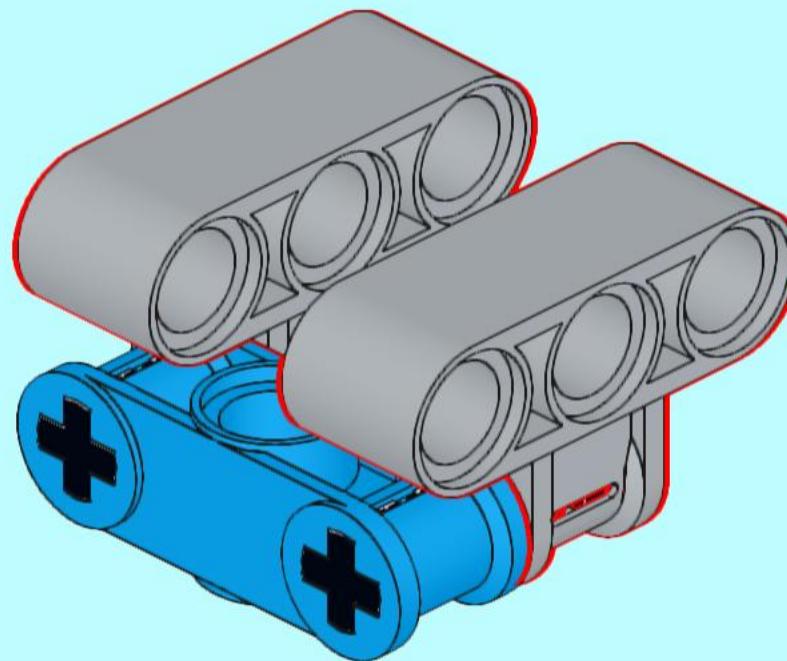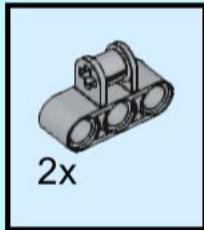



10

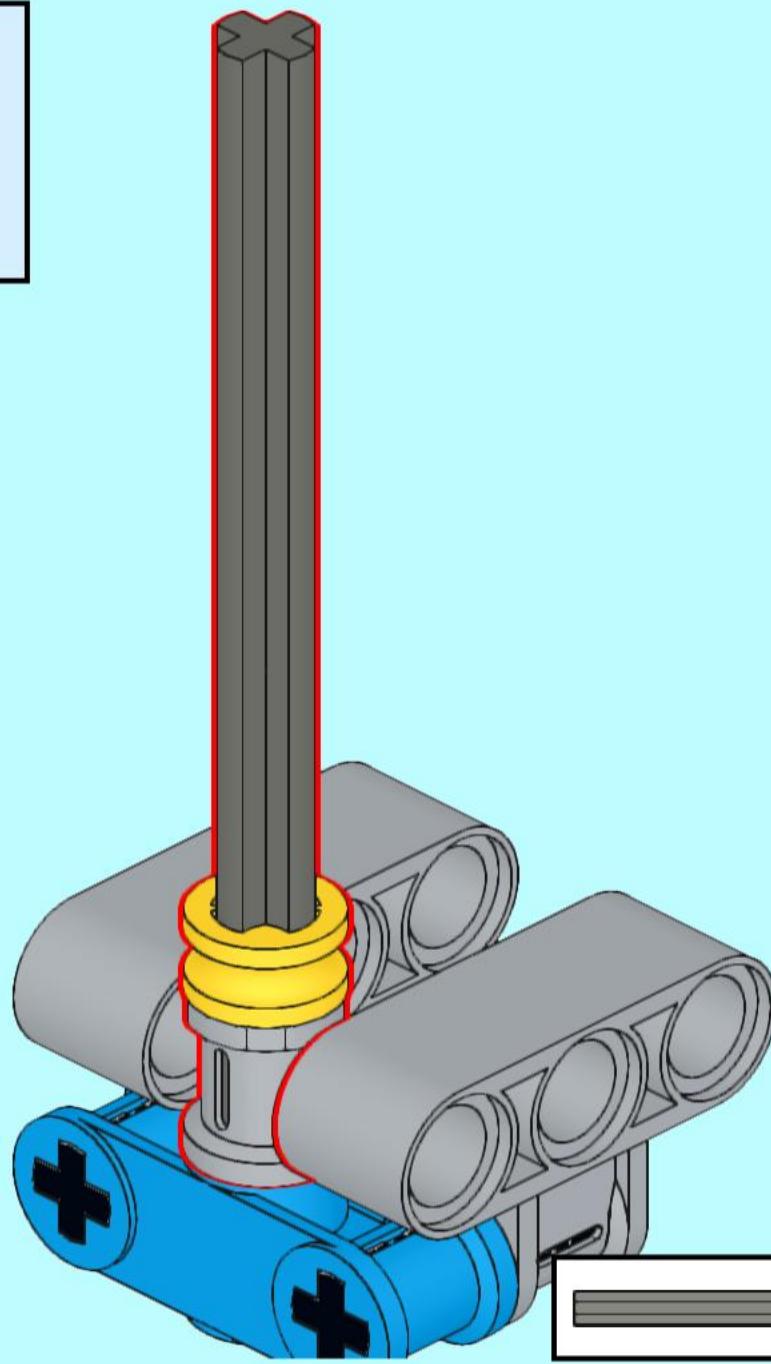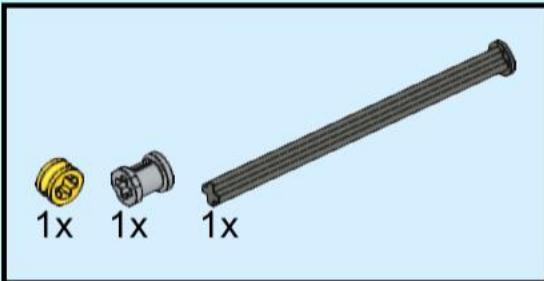



11

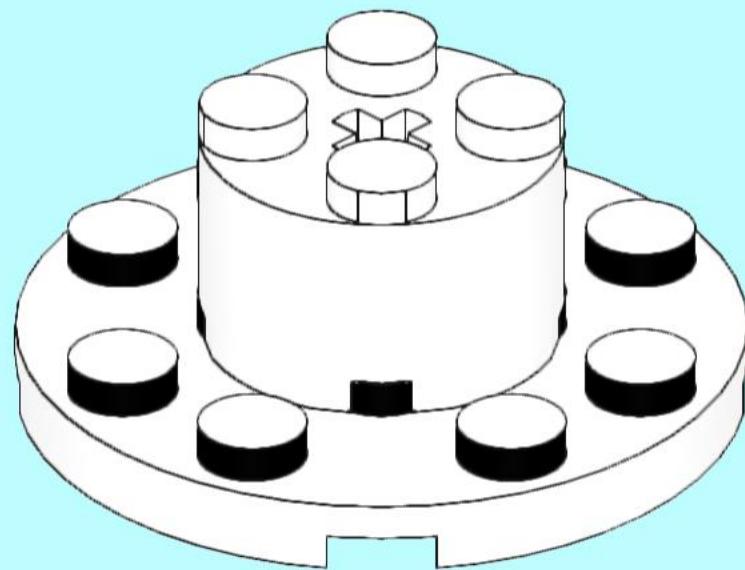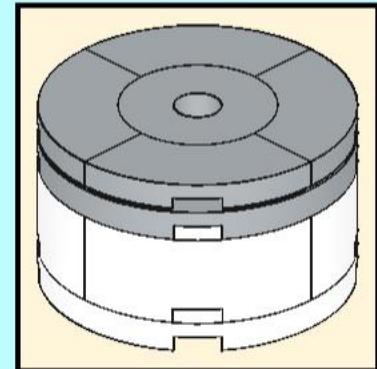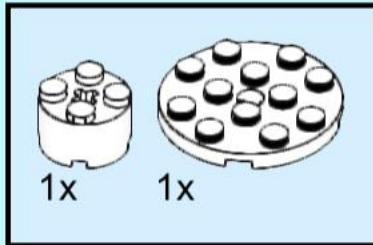



12

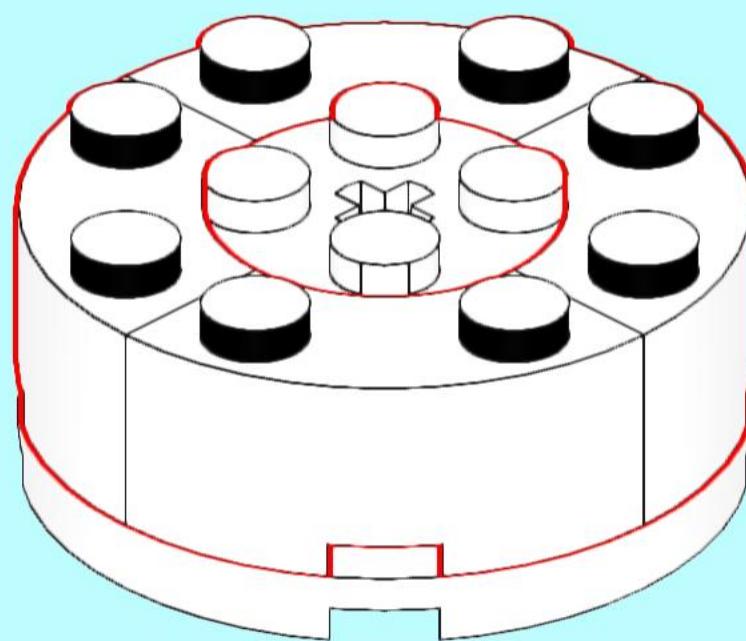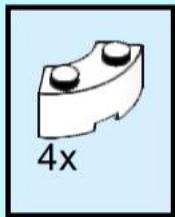


13

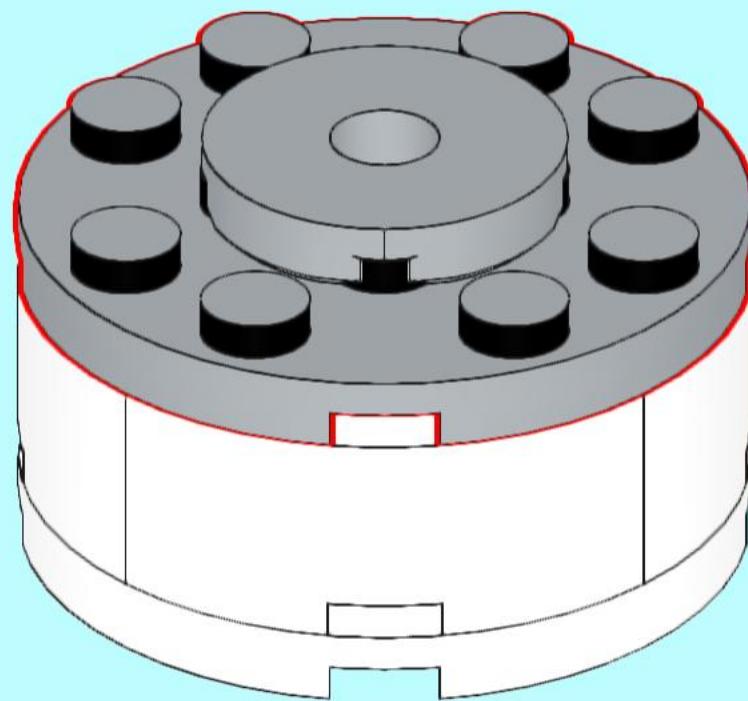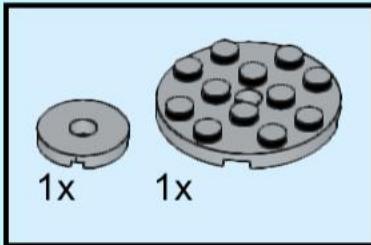



14

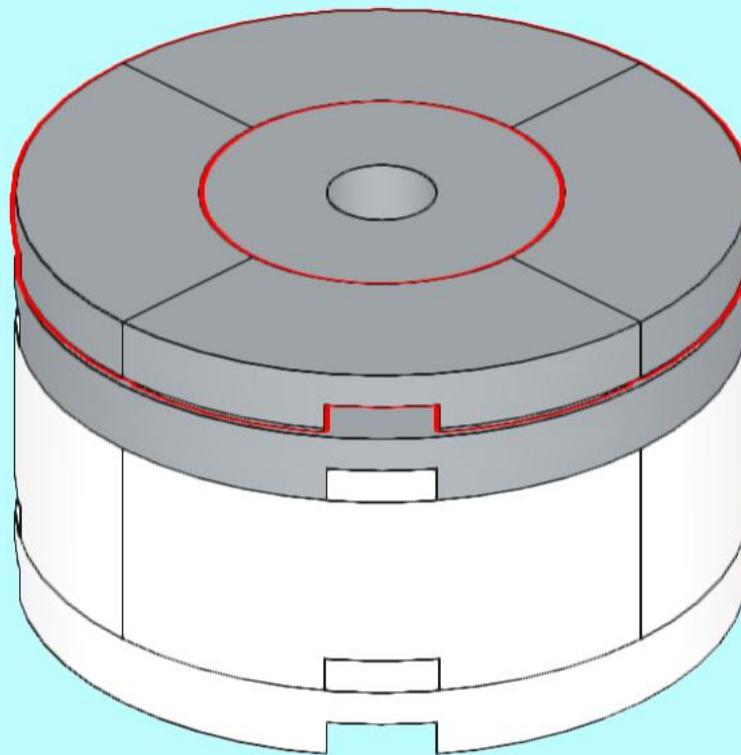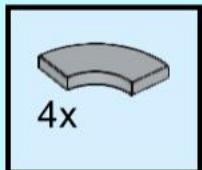



15

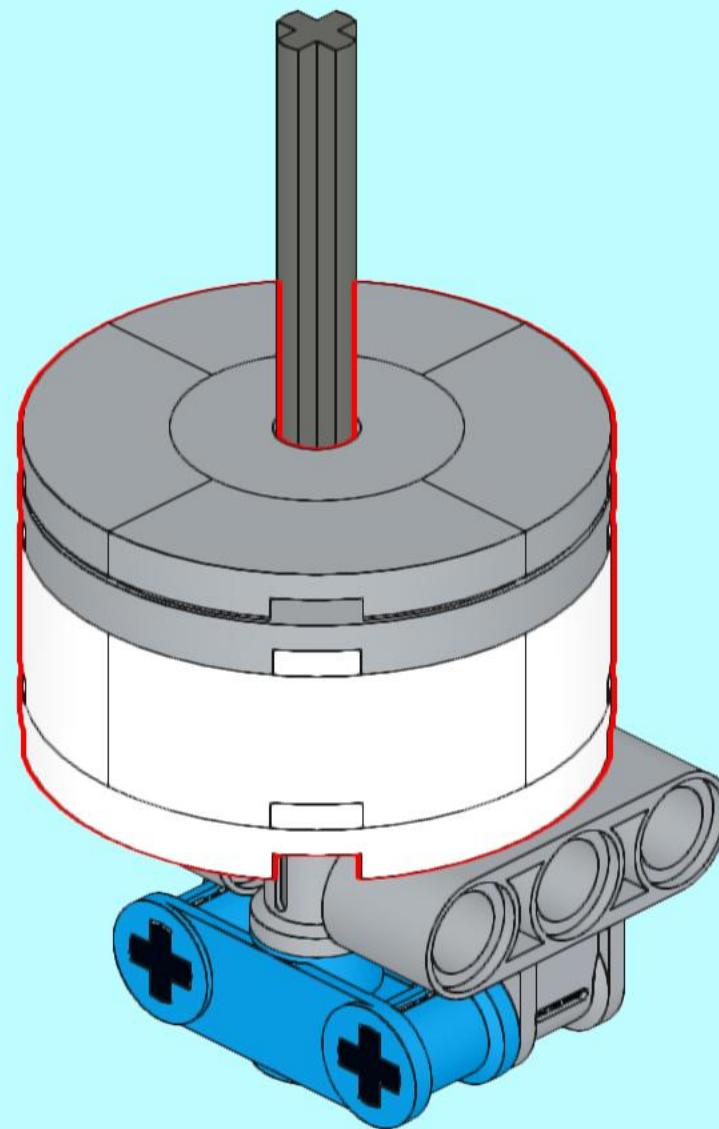



16

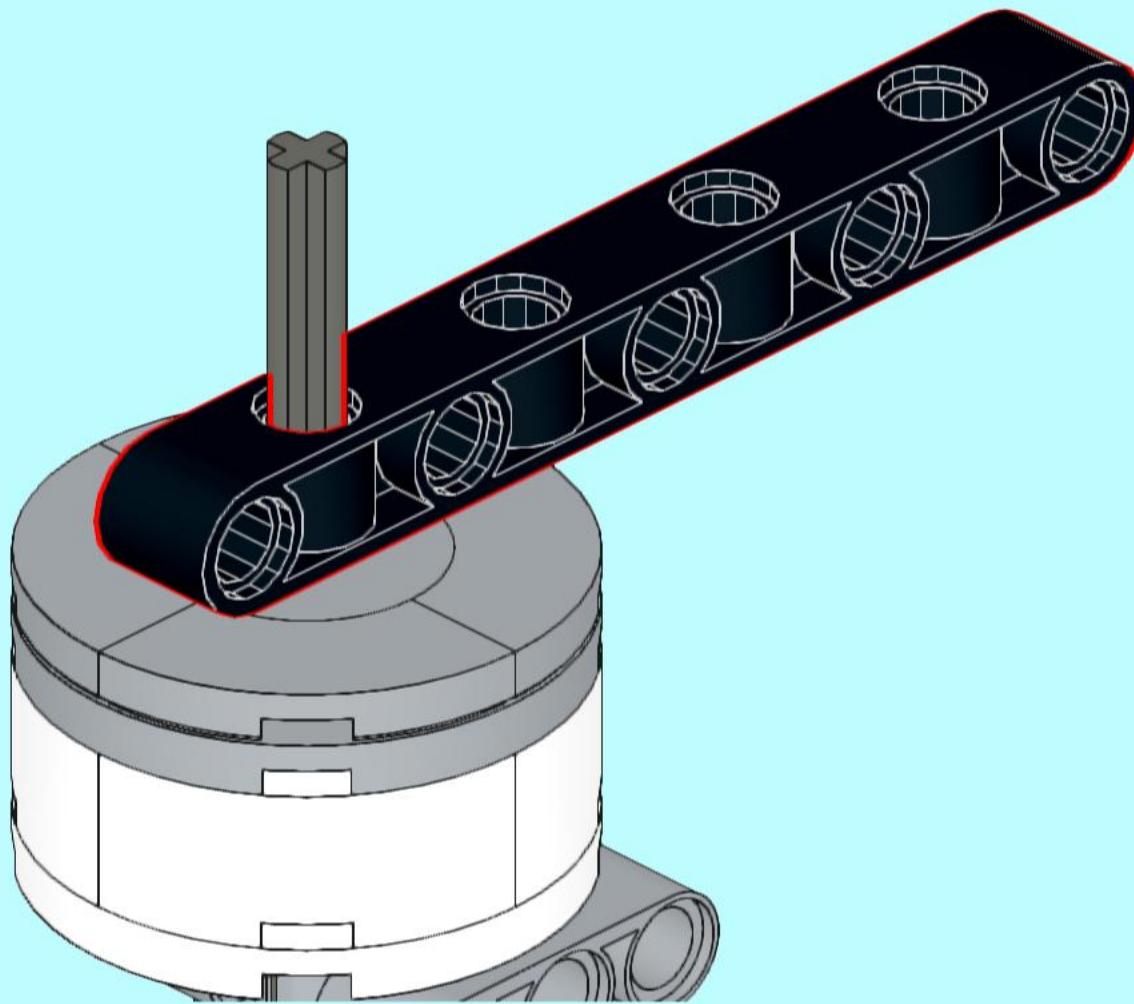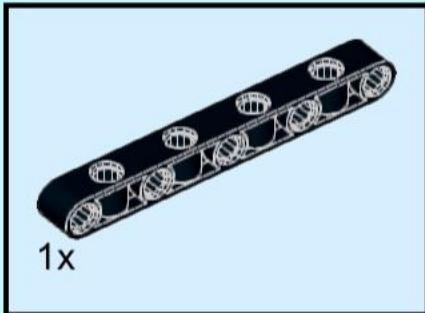

17

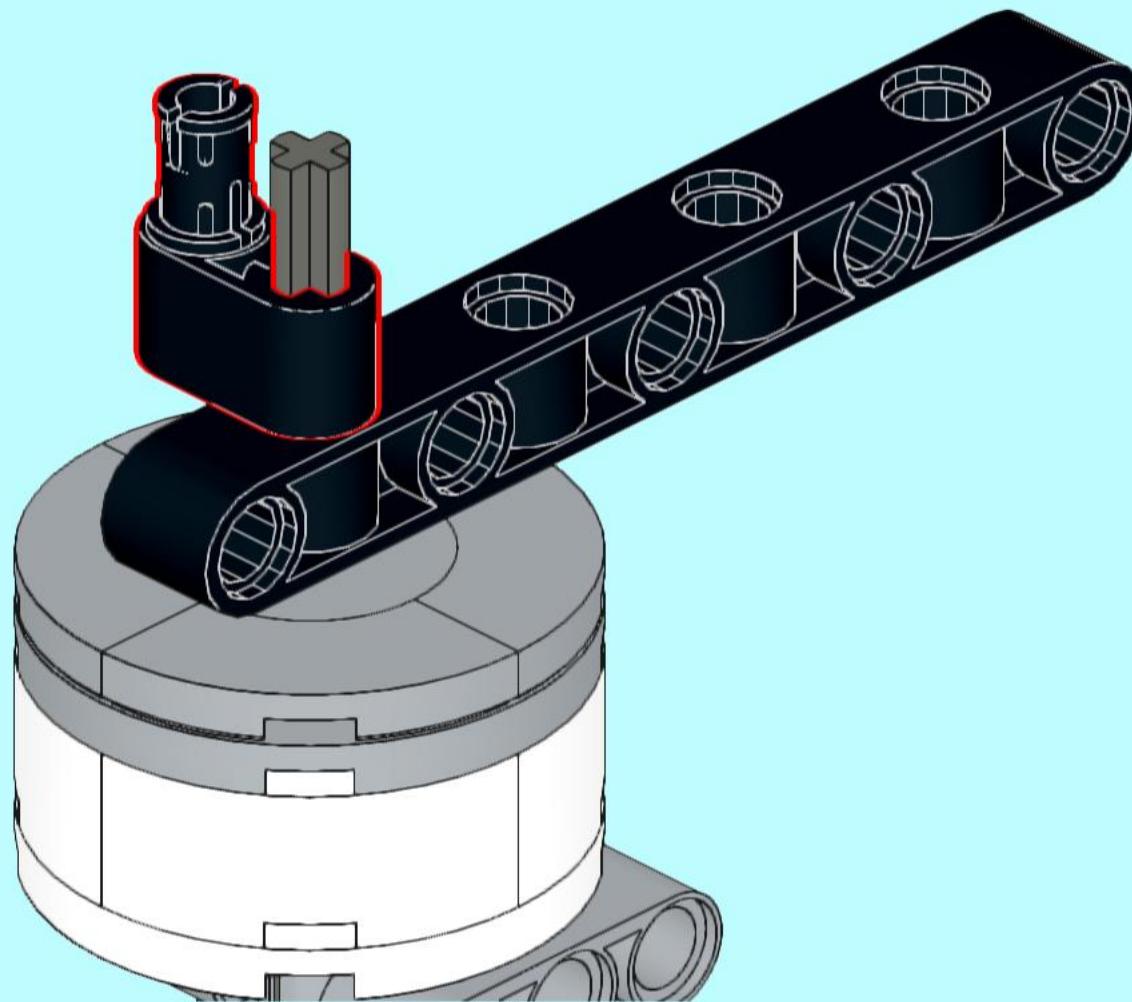
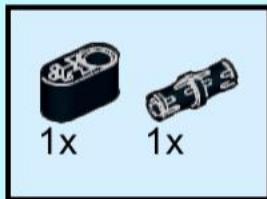


18

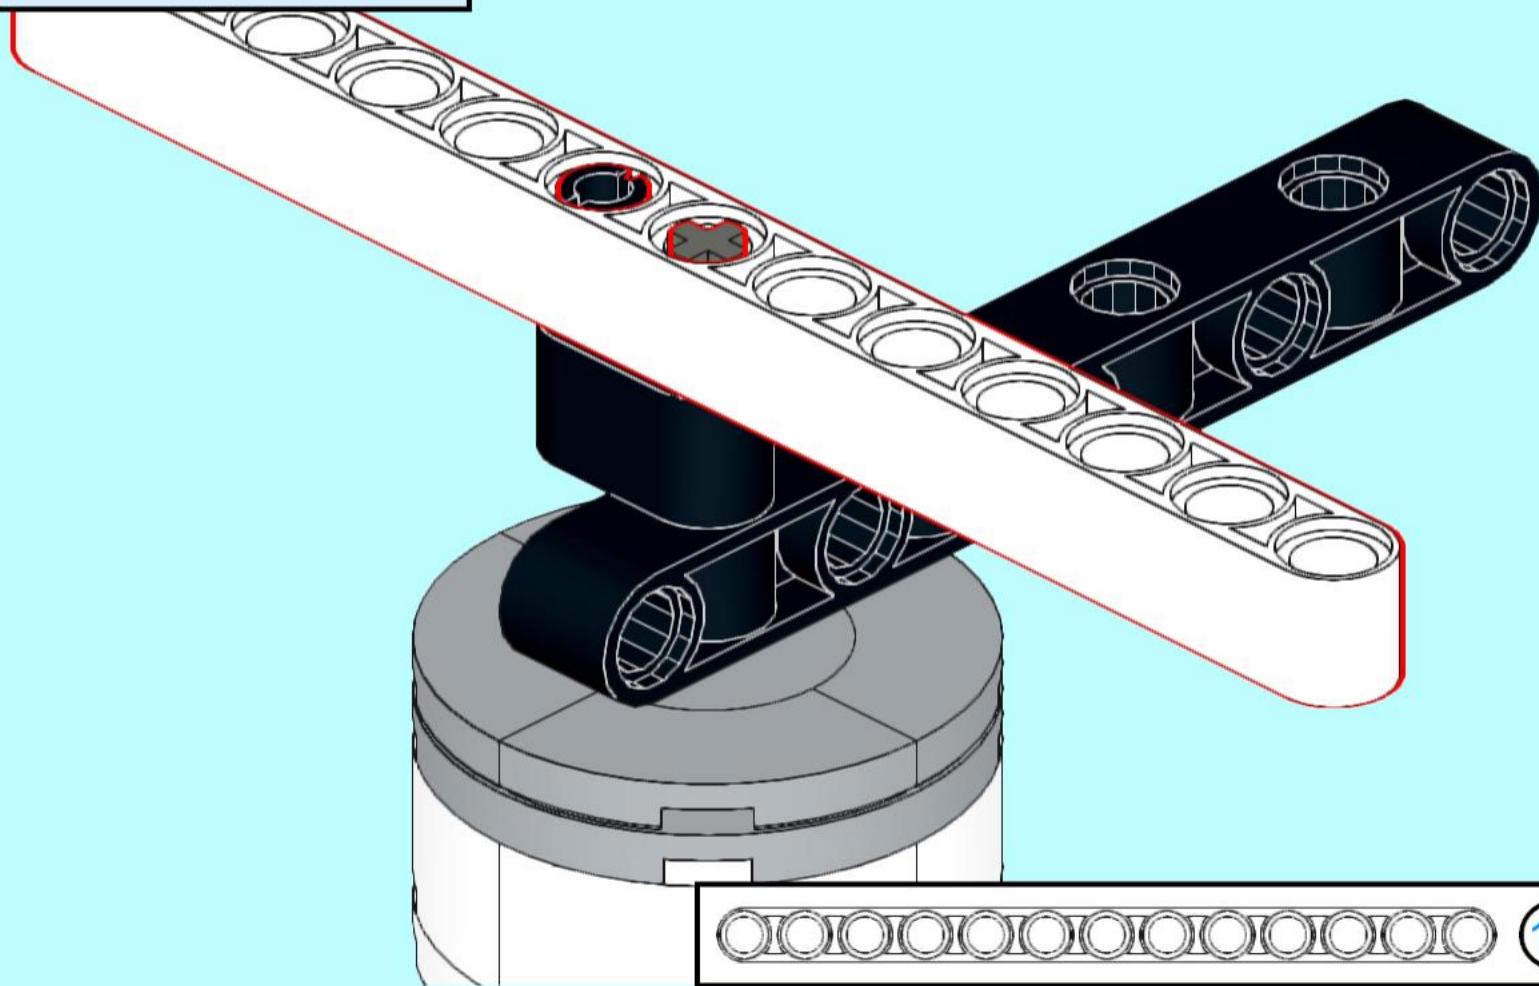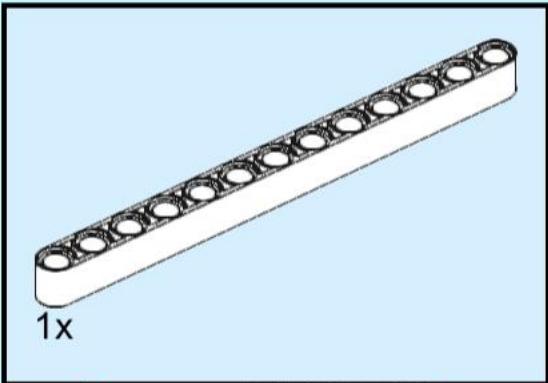


13 1:1


19

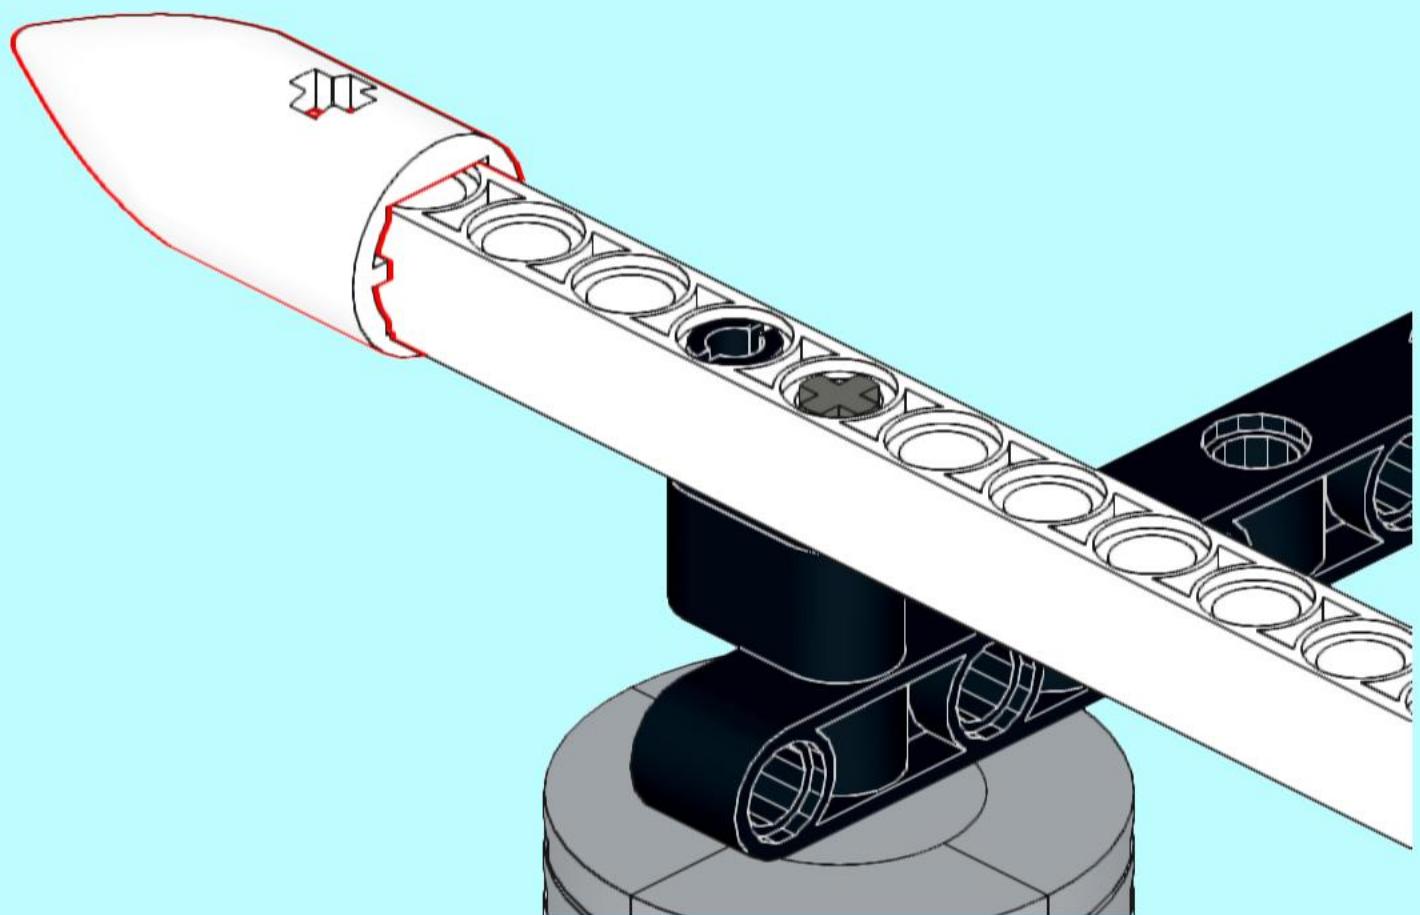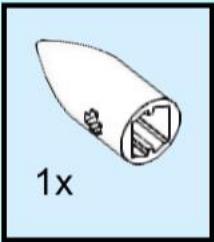


20

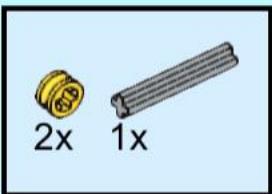


如3D打印件裝上後不會鬆動，可以跳過這步驟

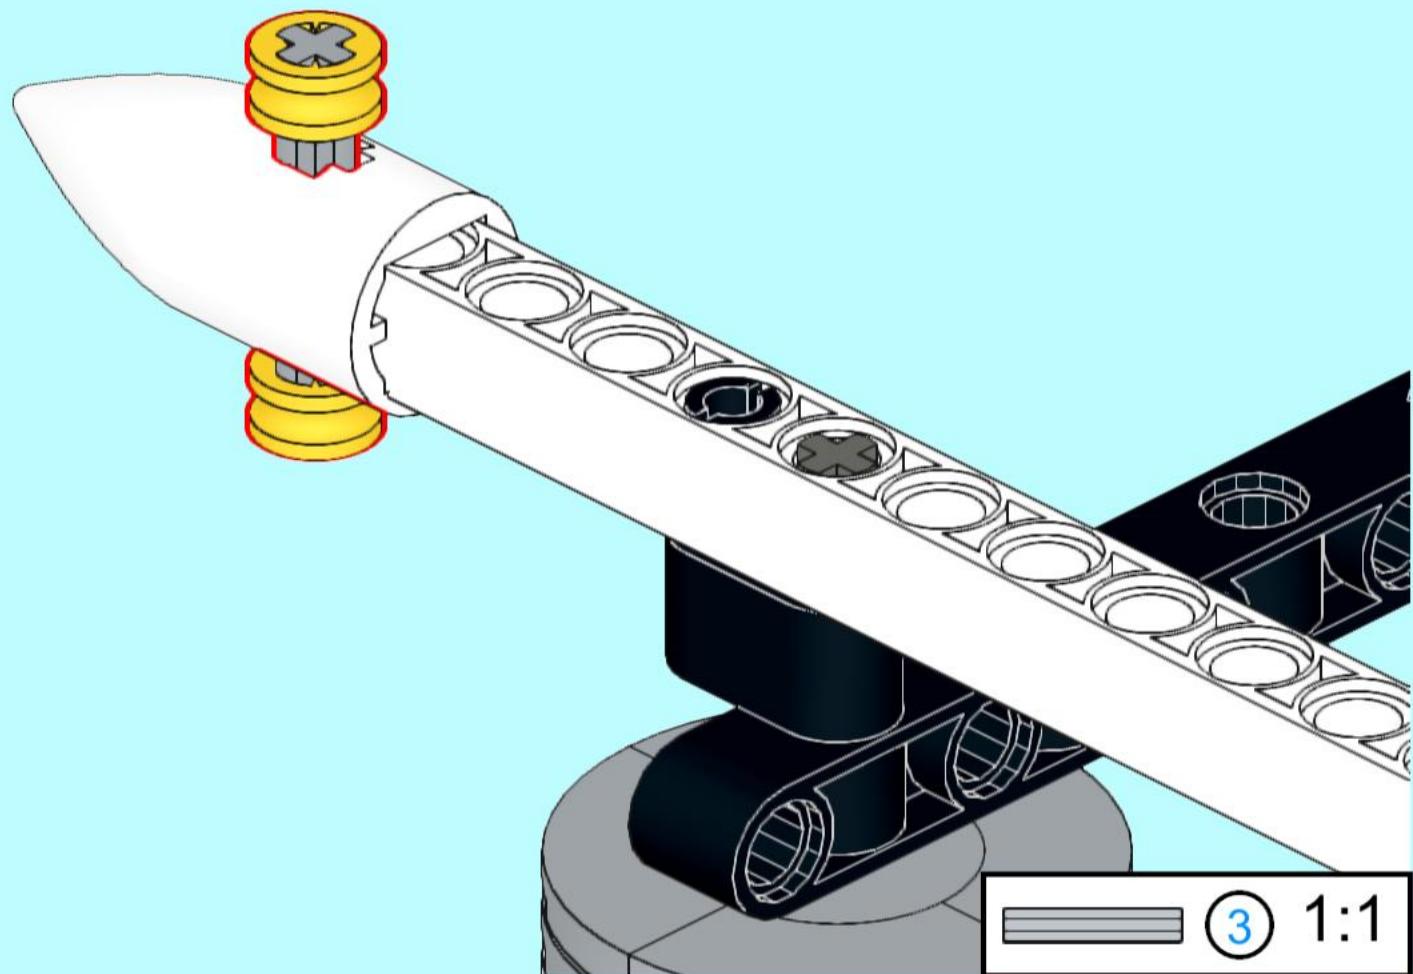


21

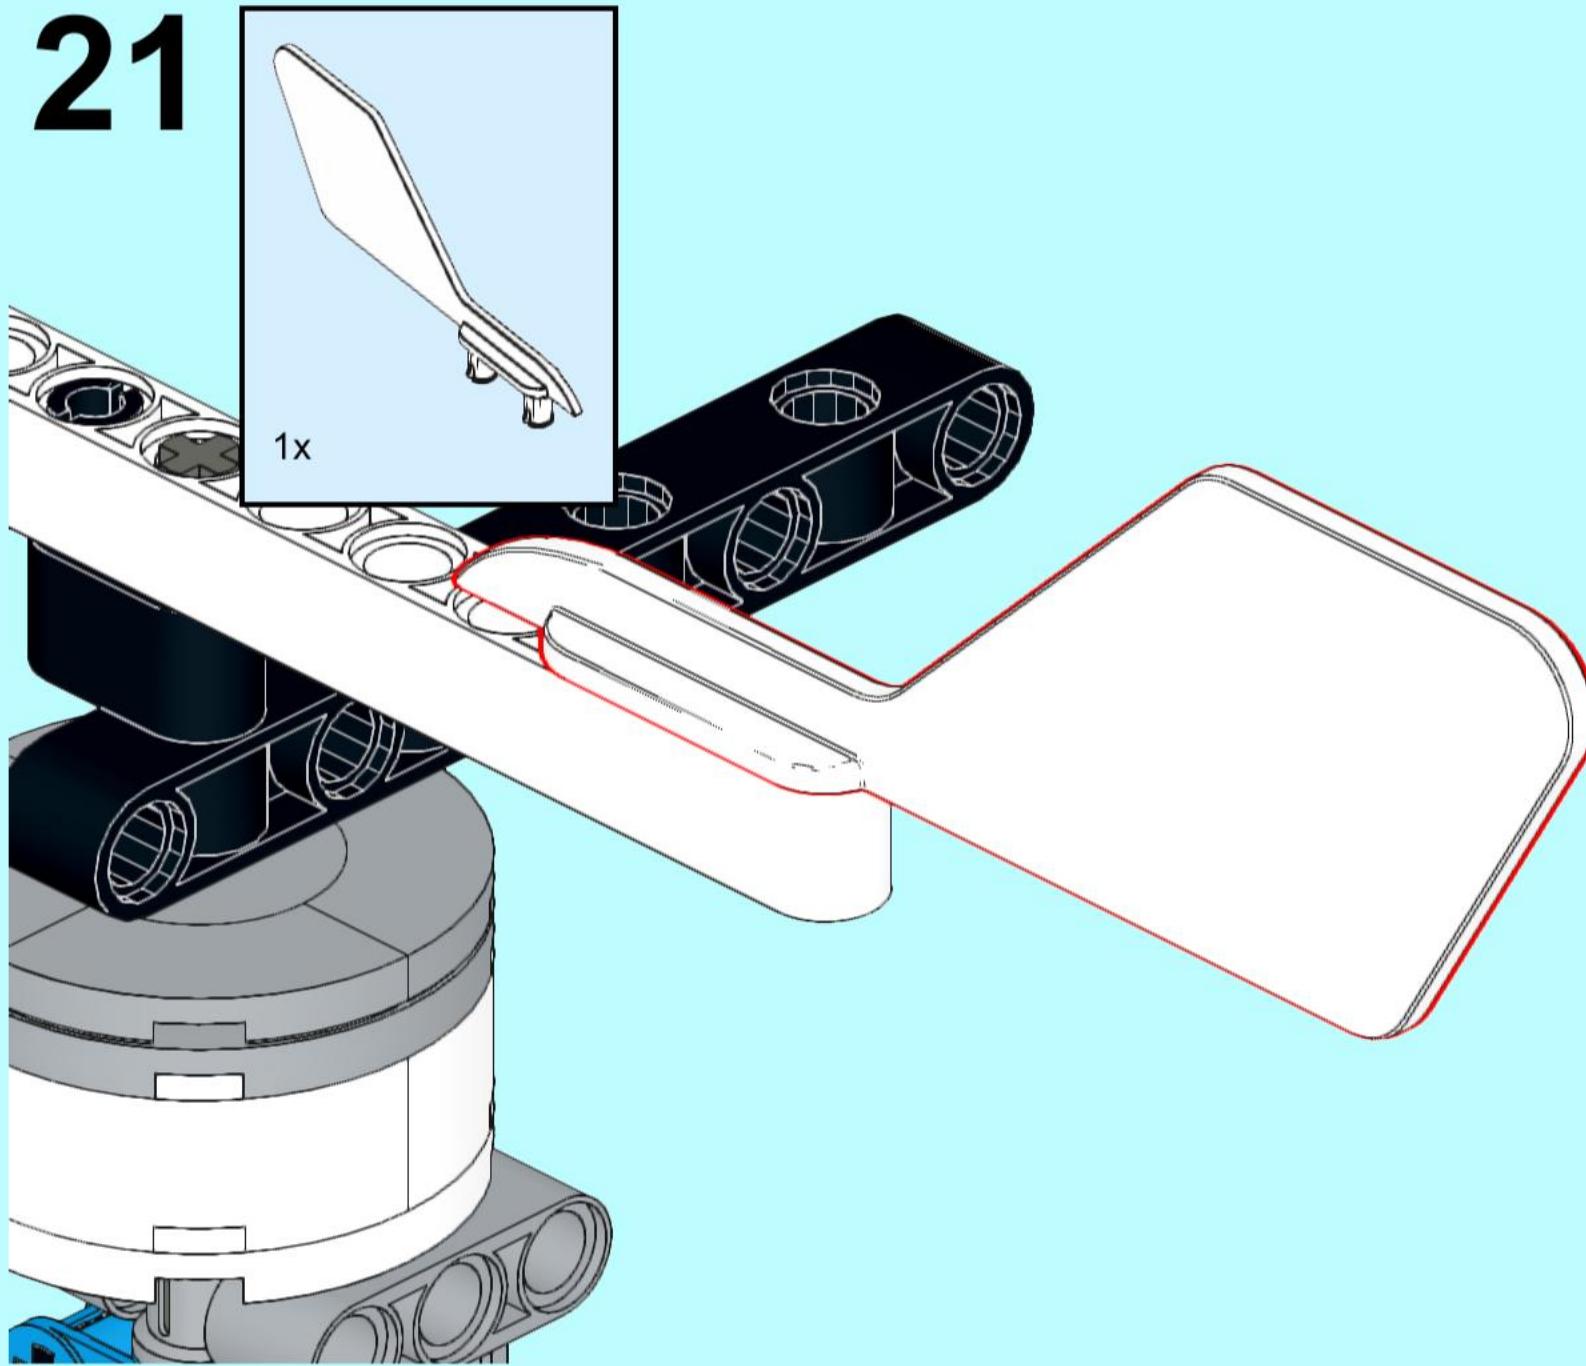


22

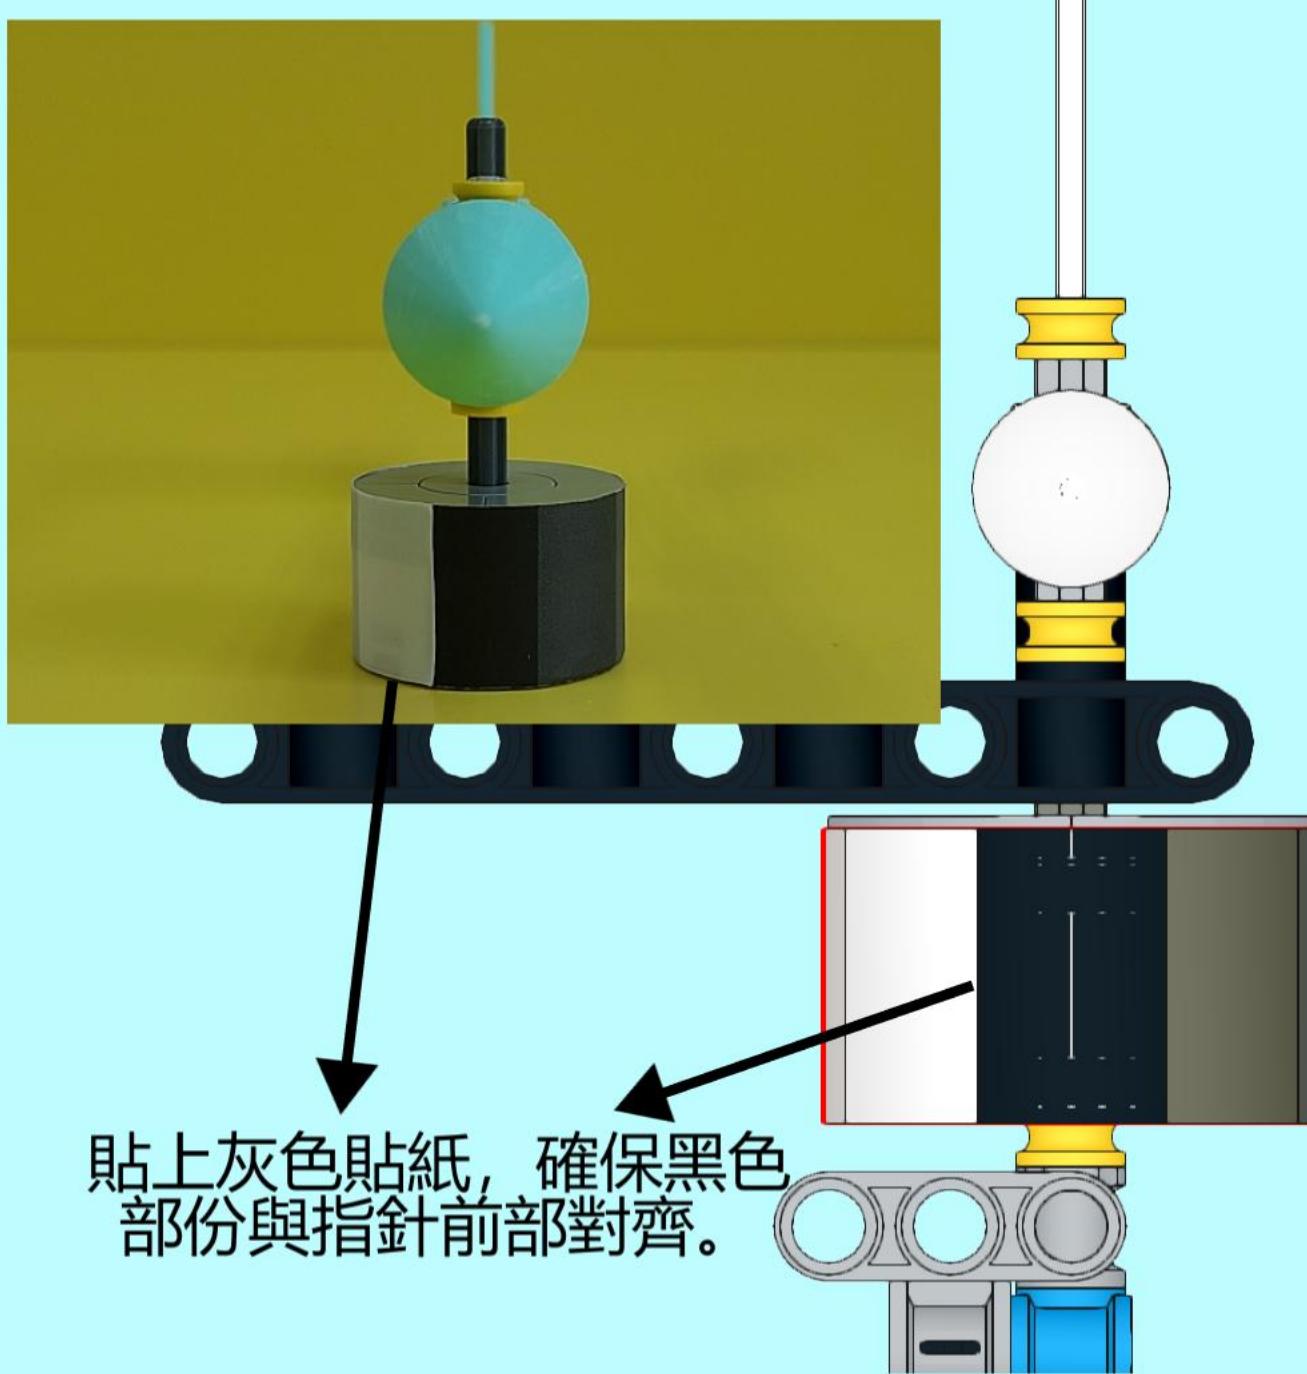


貼上灰色貼紙，確保黑色
部份與指針前部對齊。

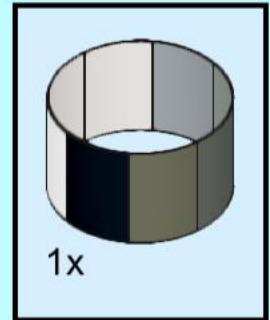



23

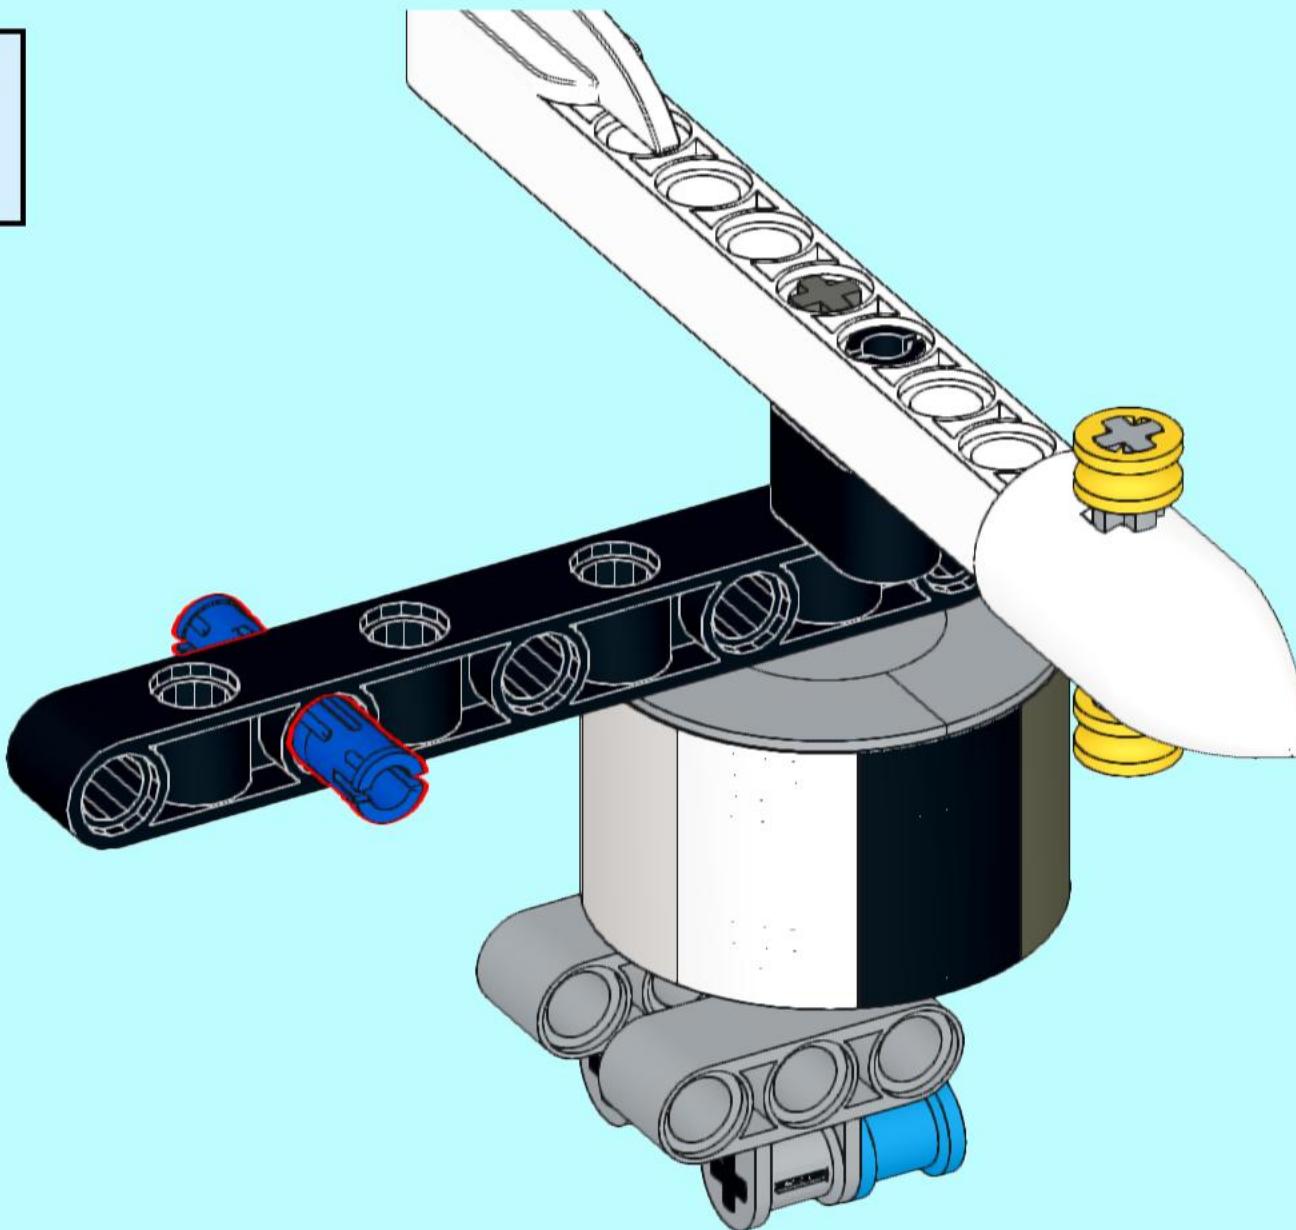



24

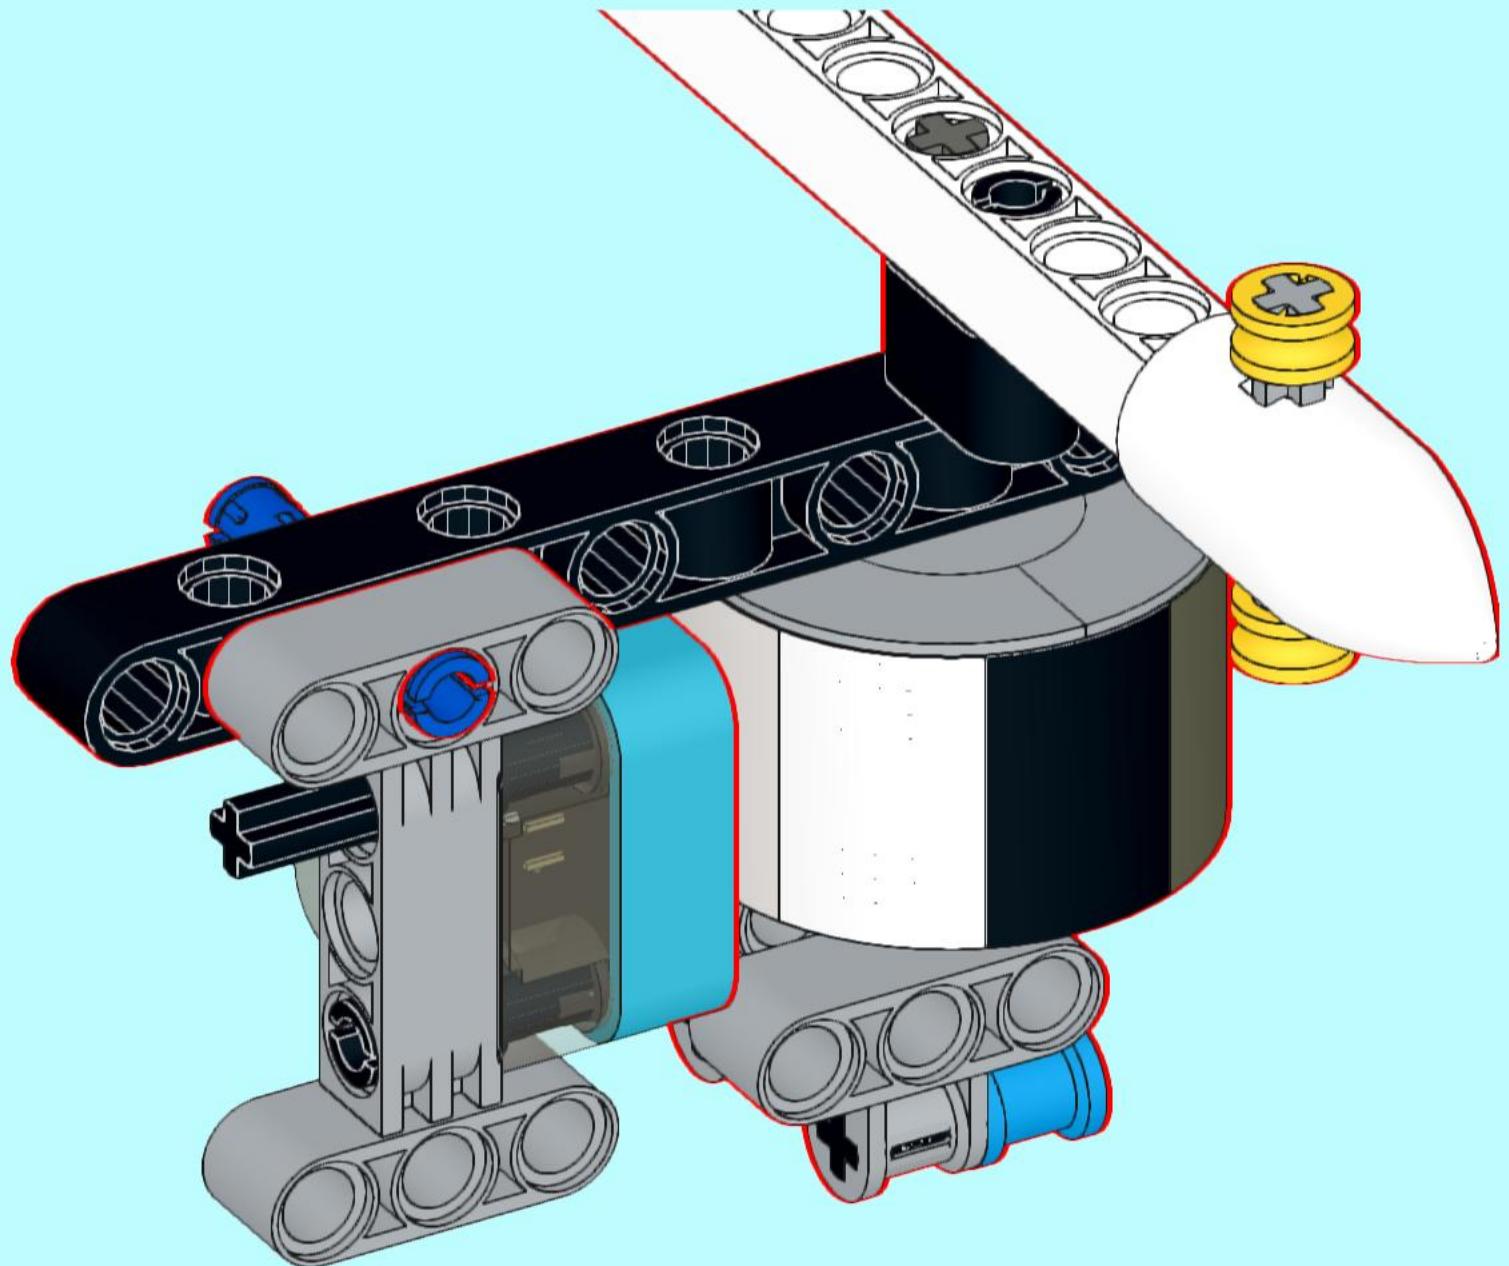



25

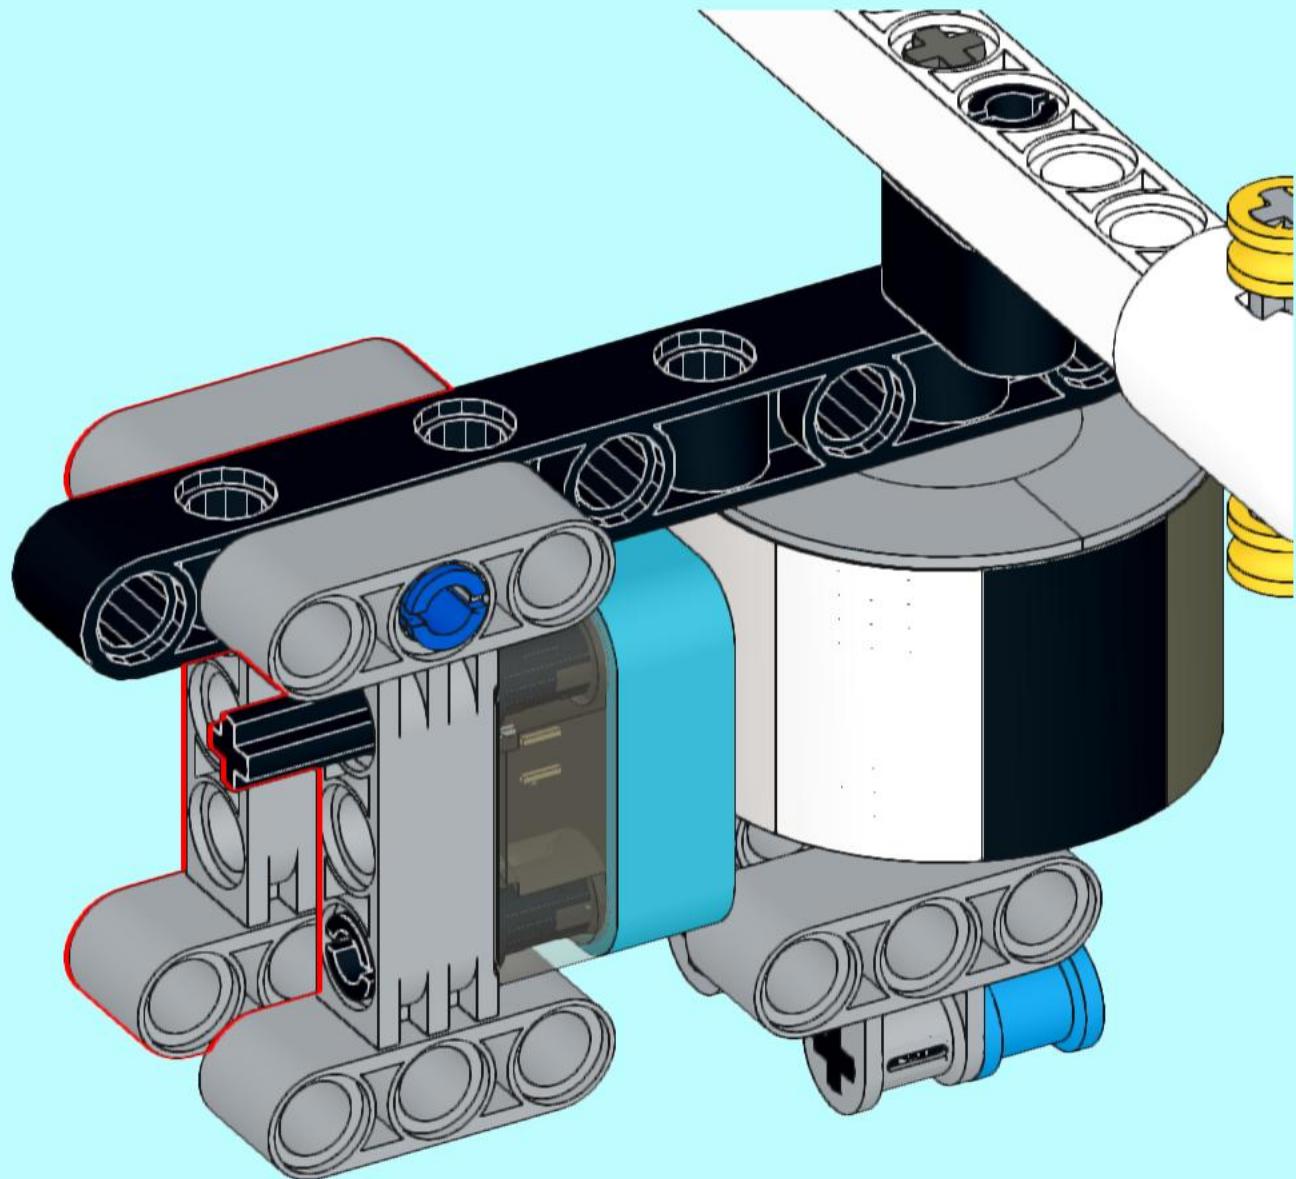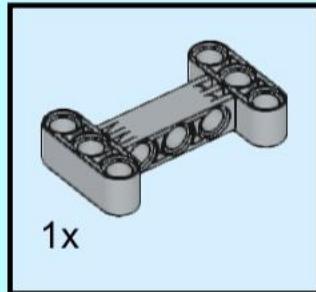


26

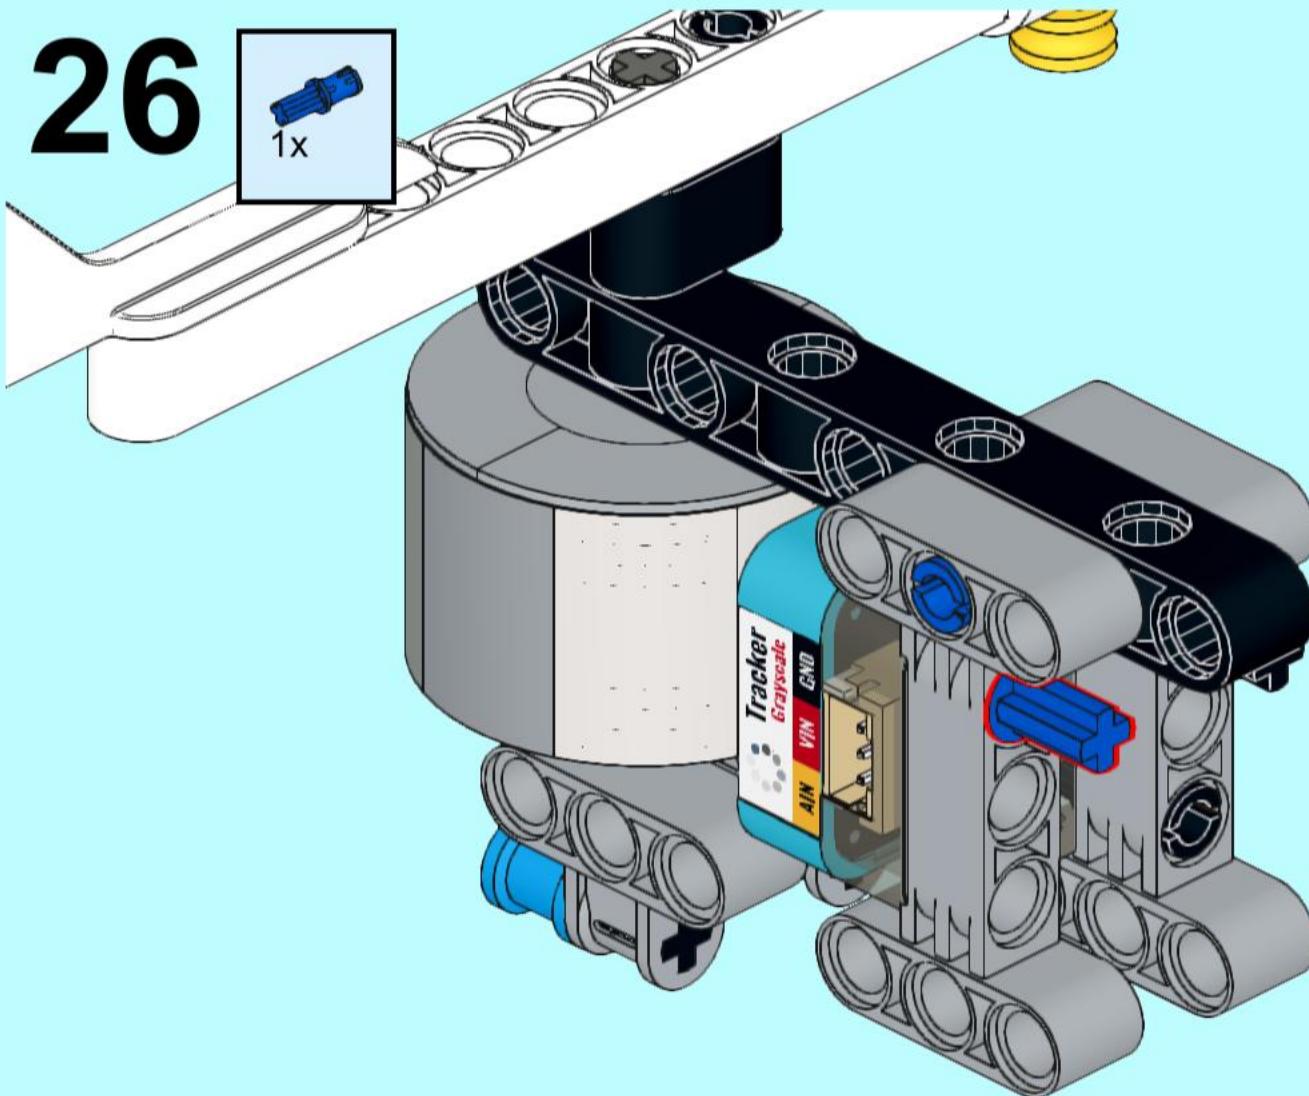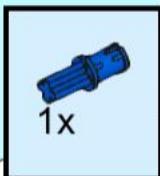



27

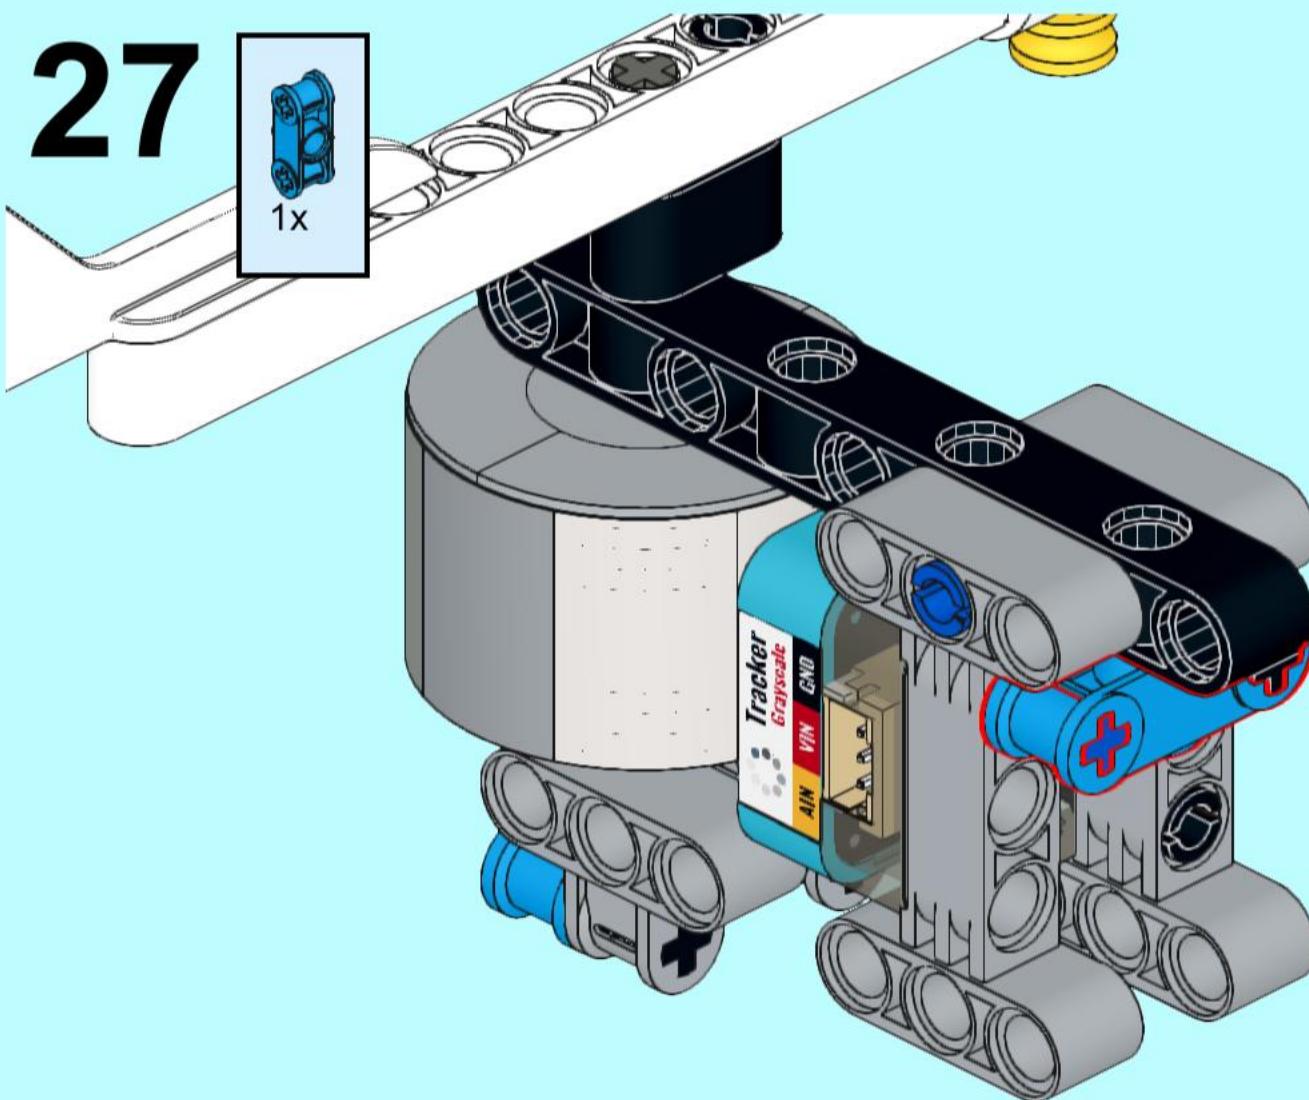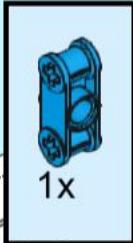


28

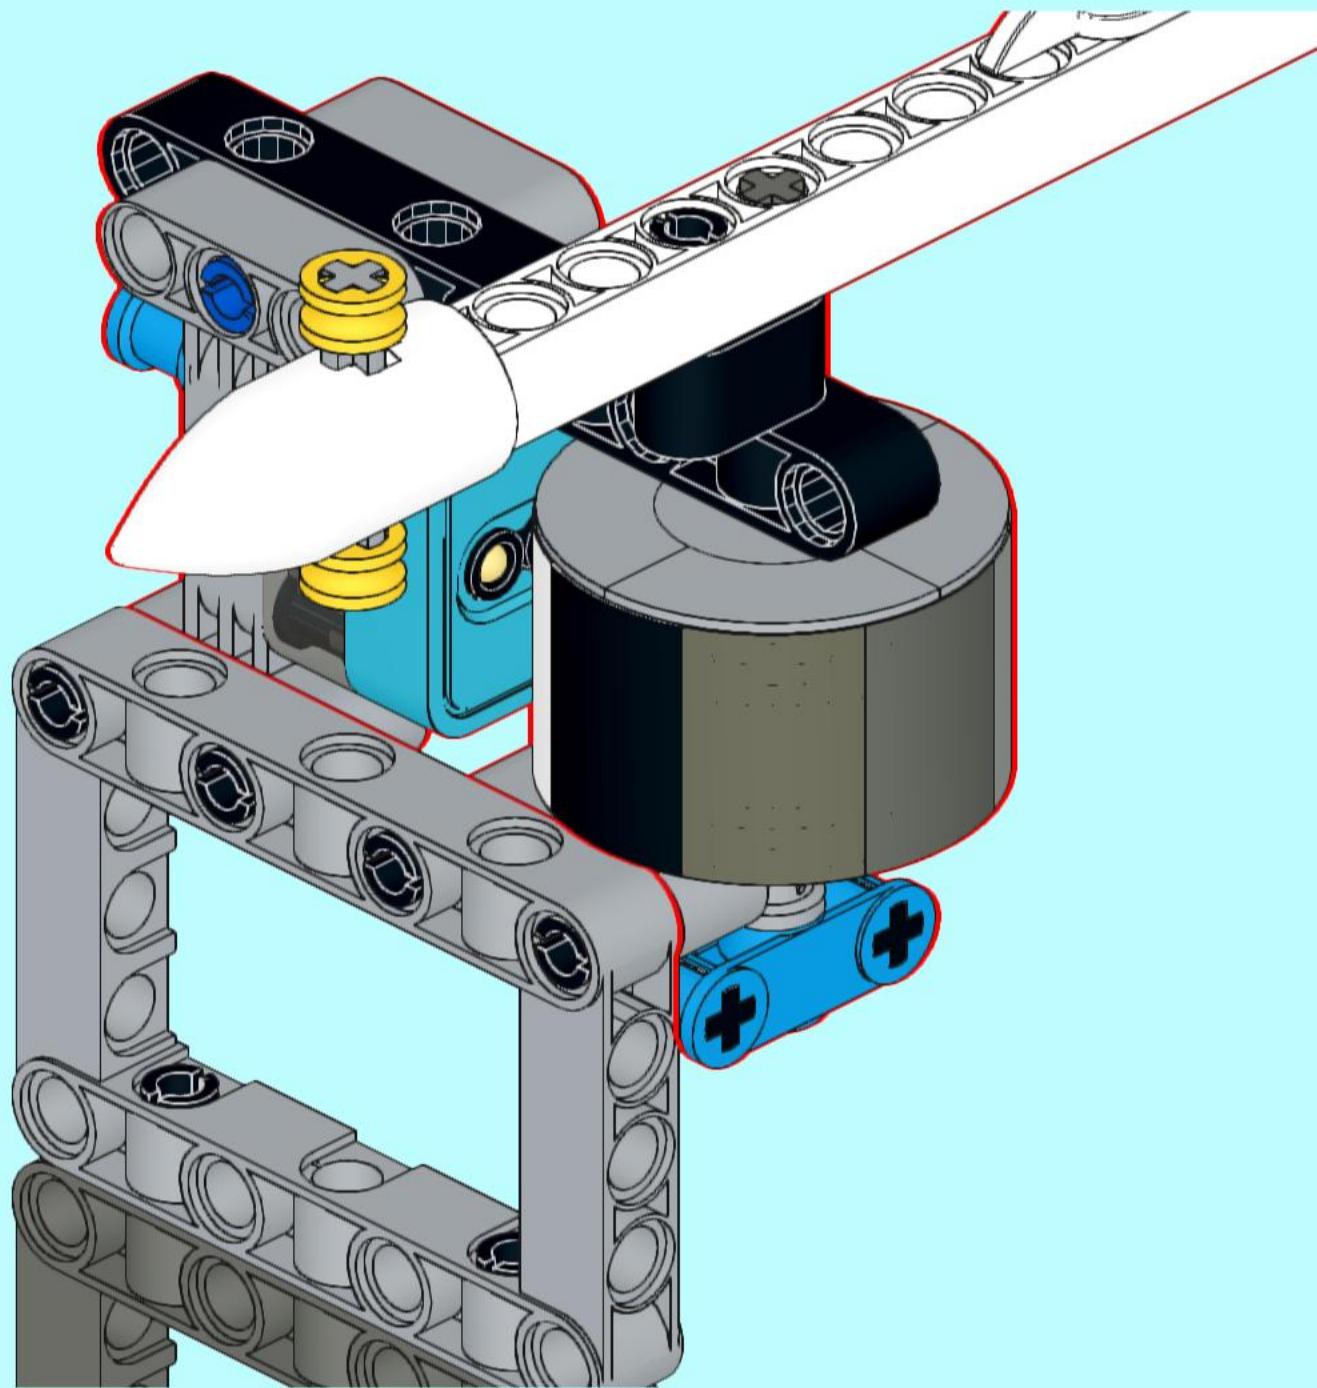


29

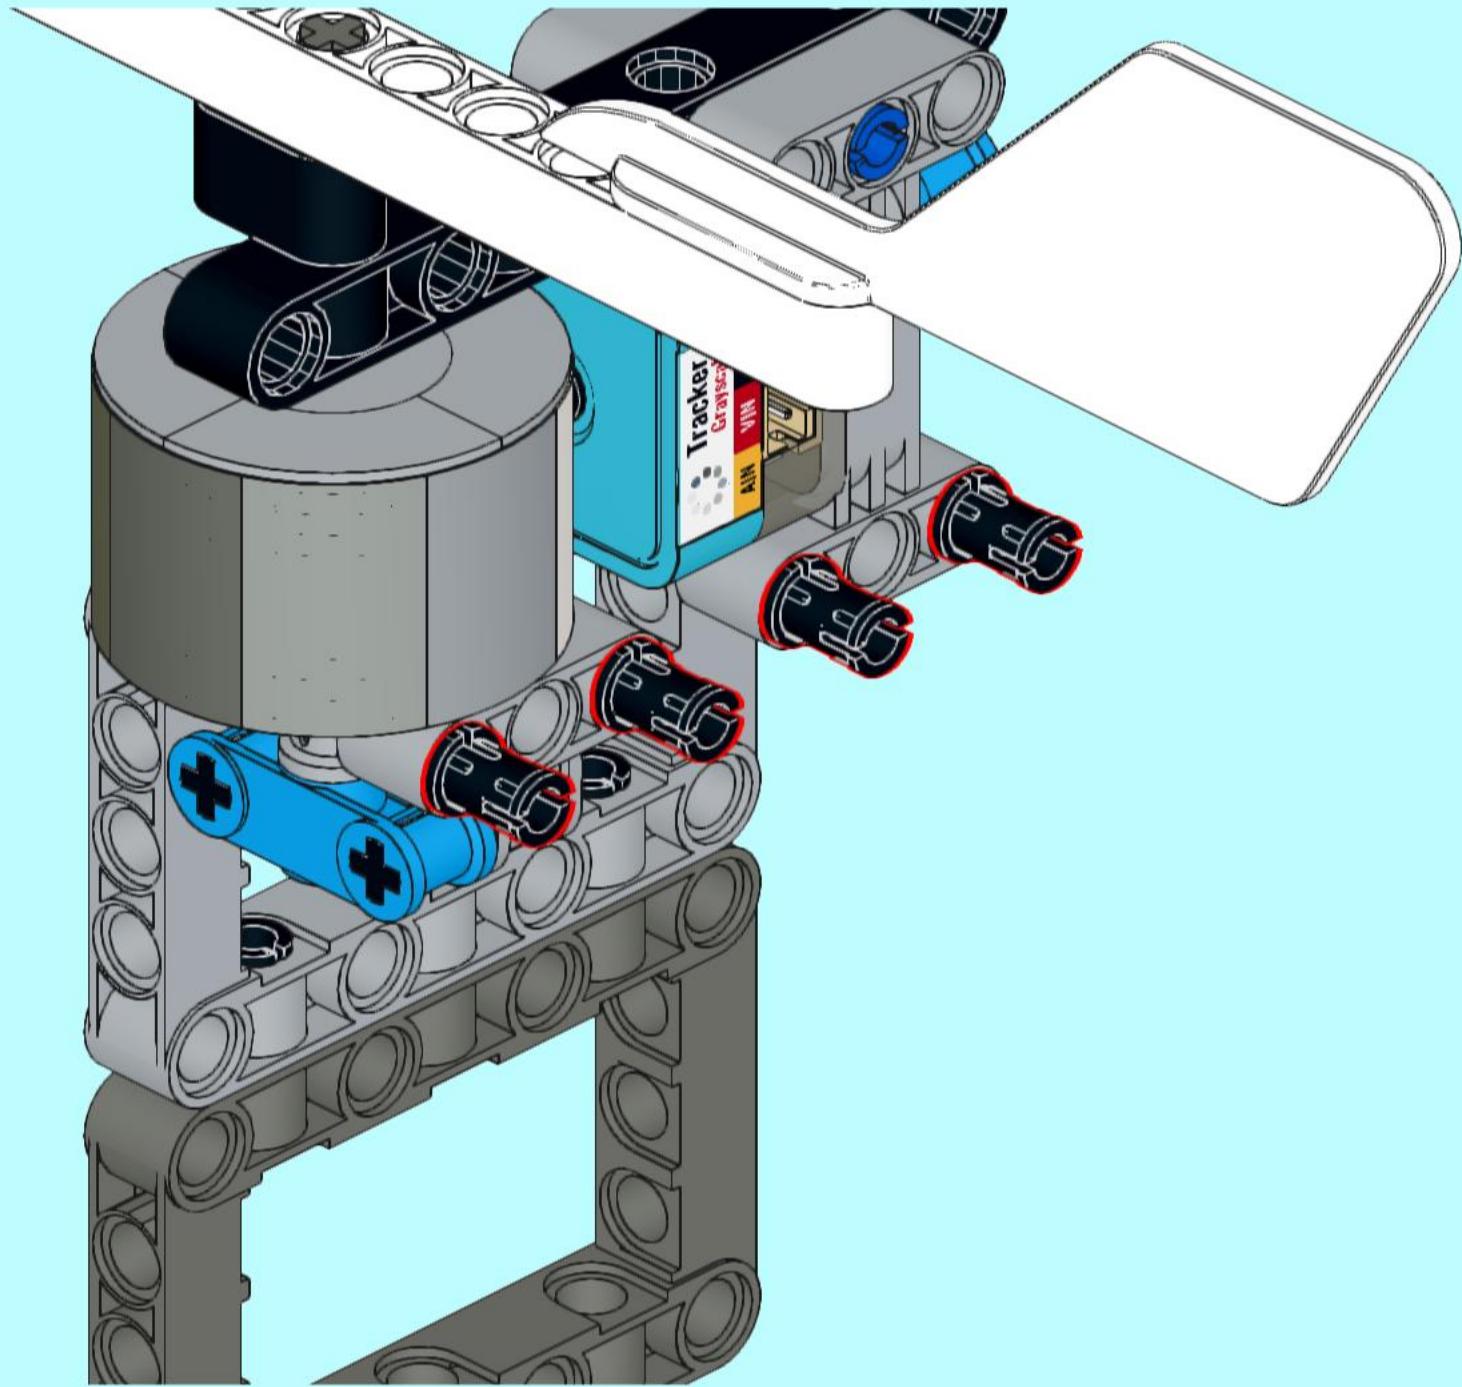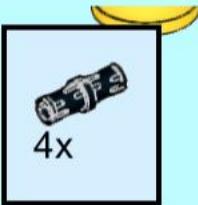


30

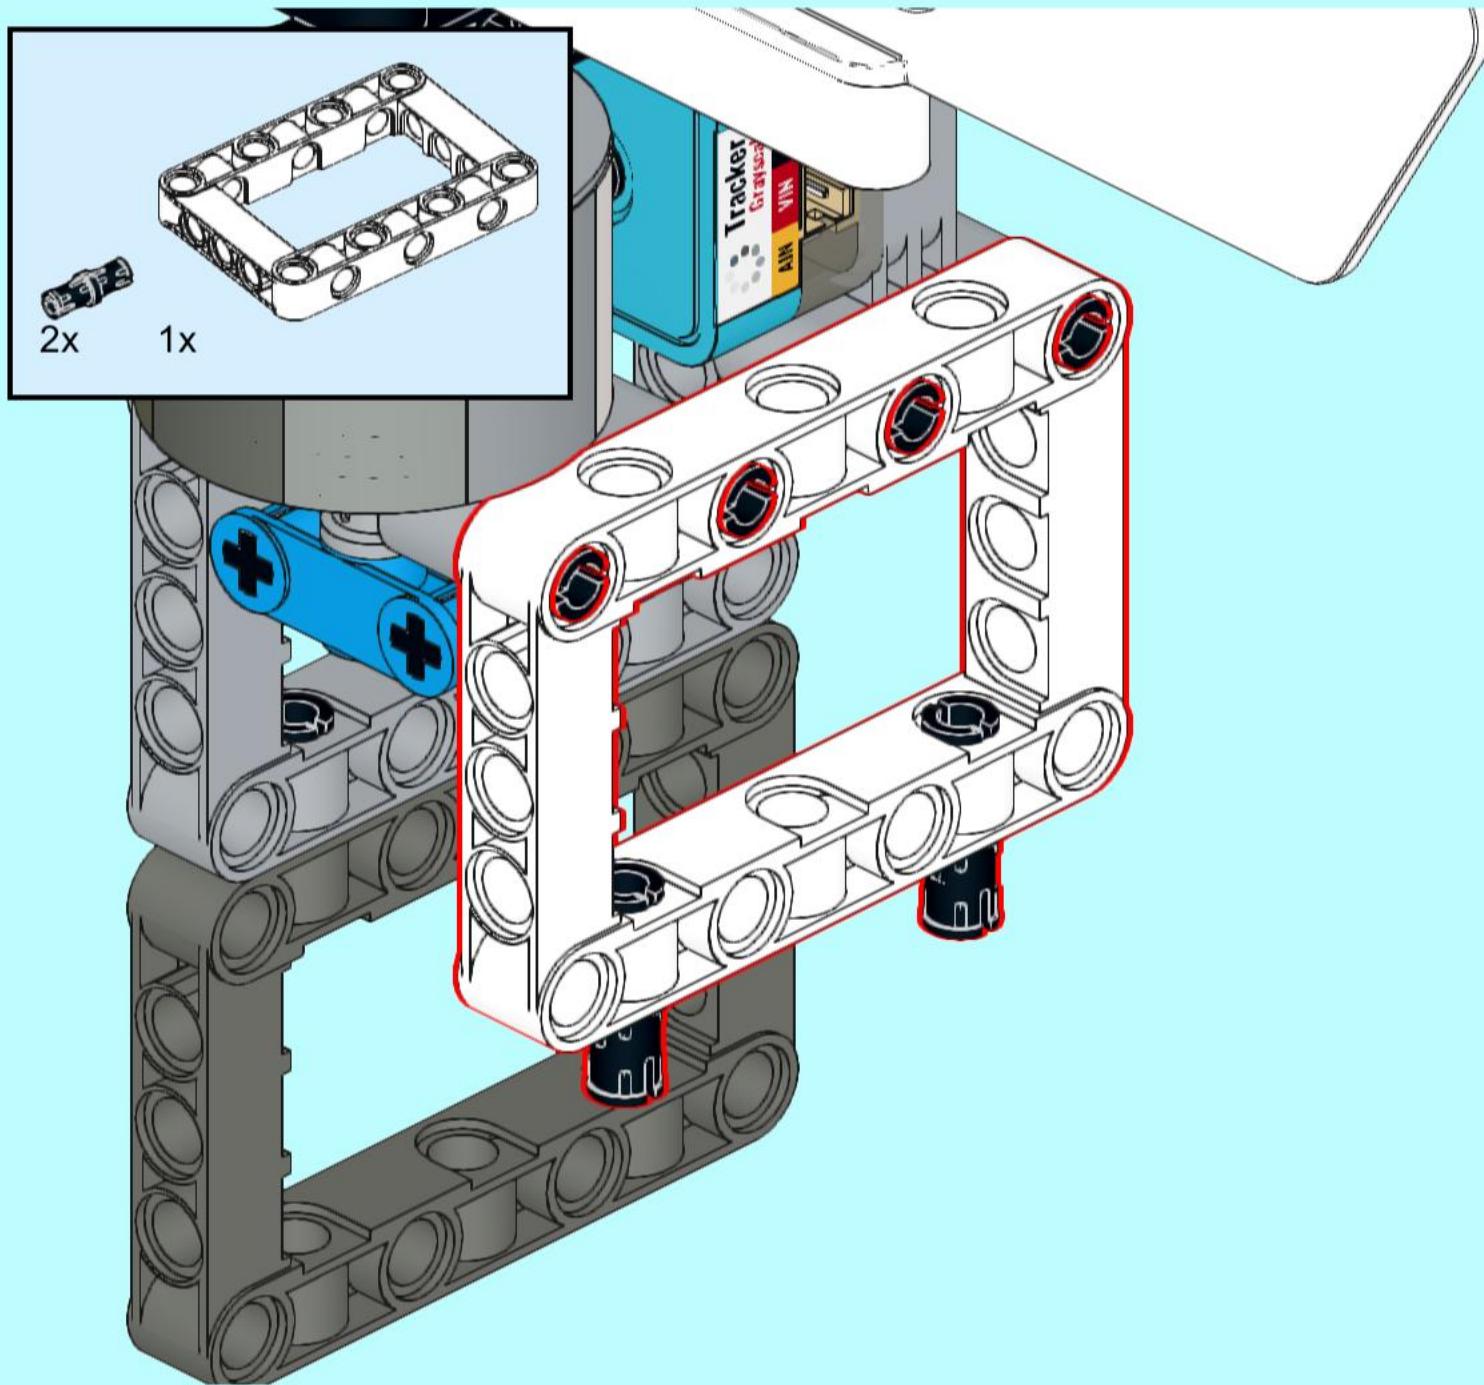


31

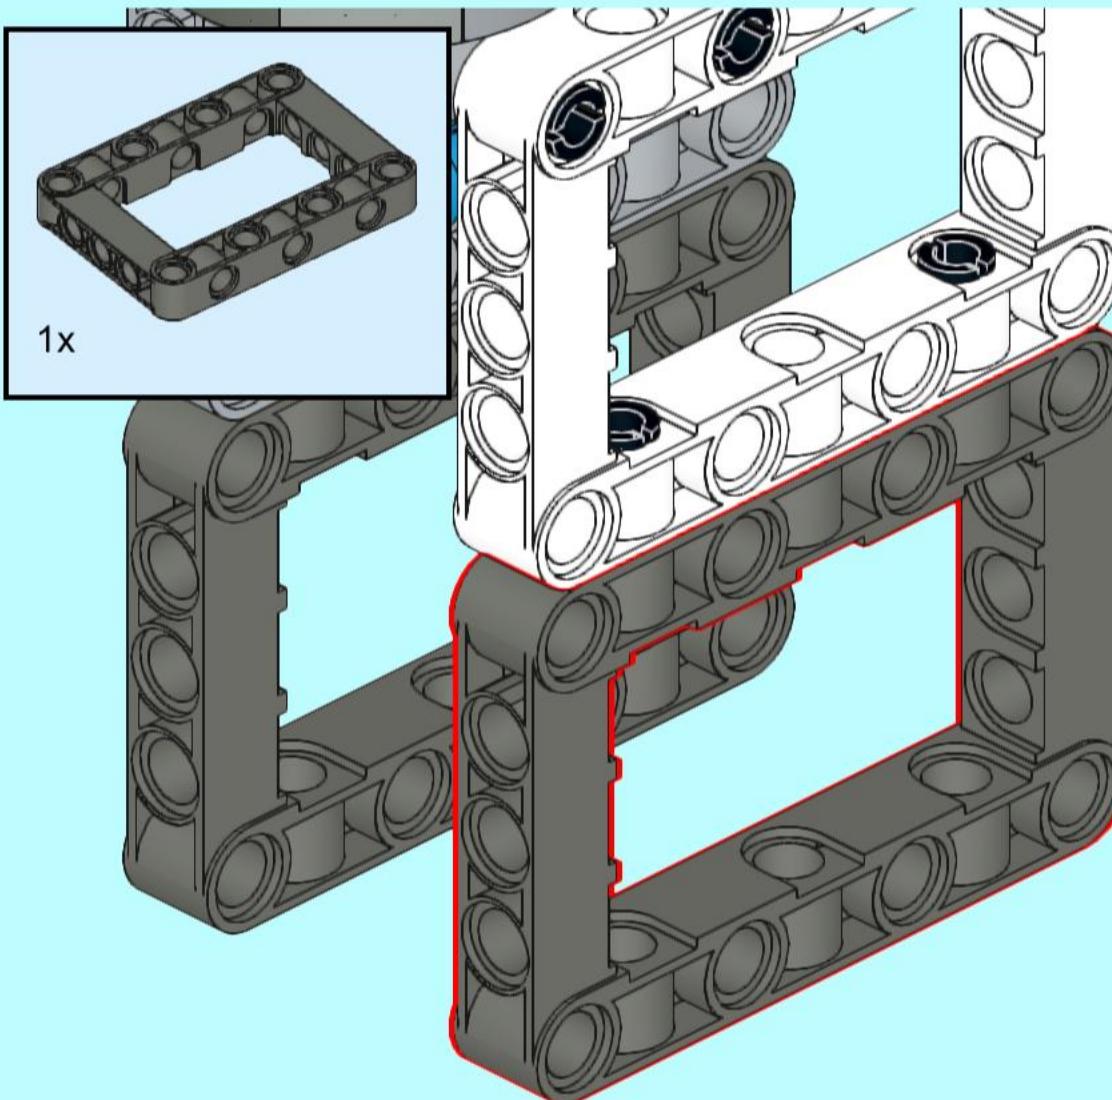



32

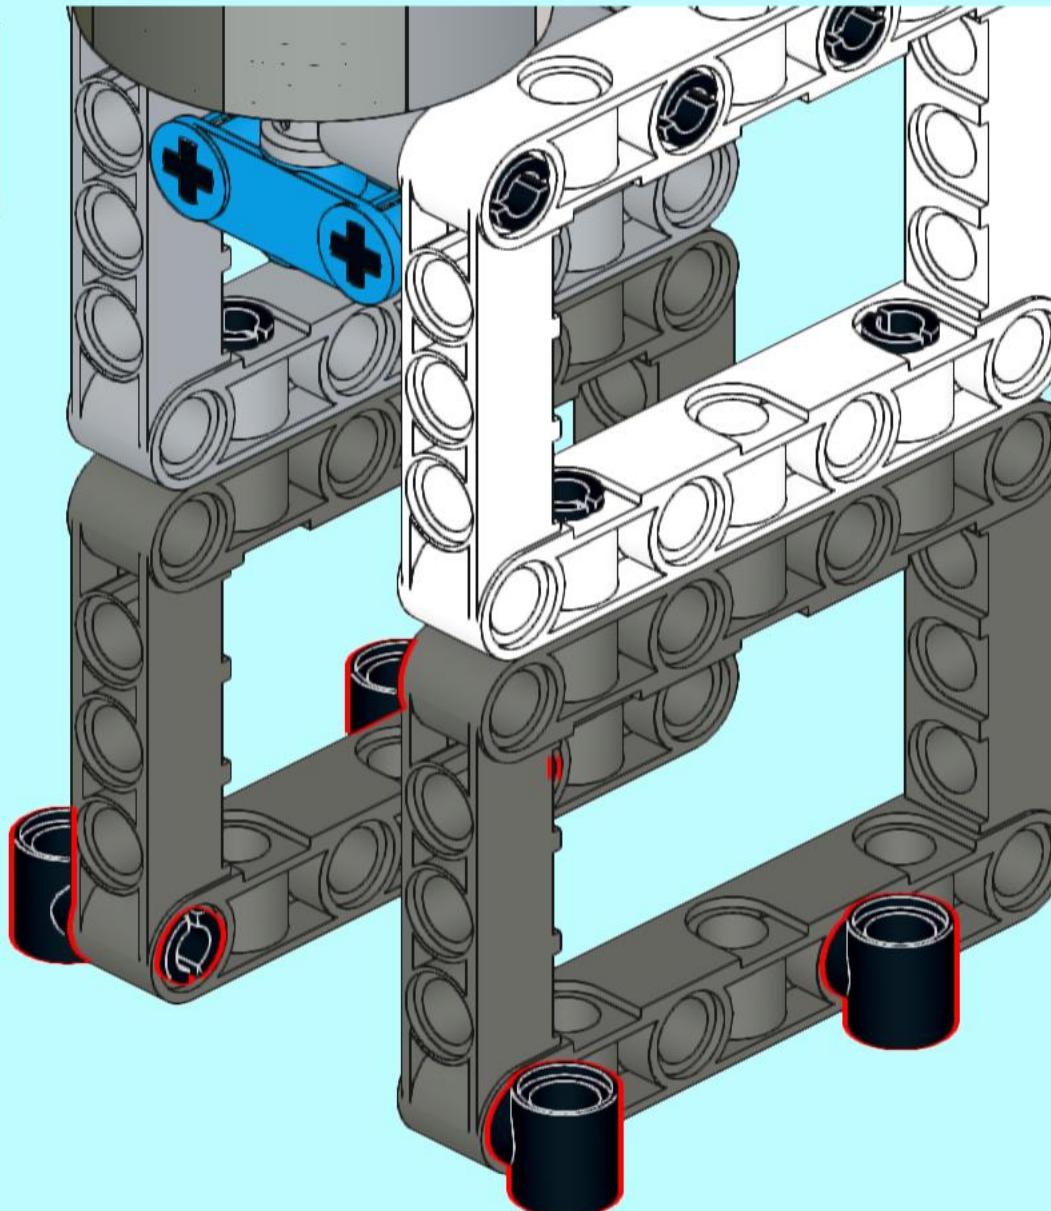


33

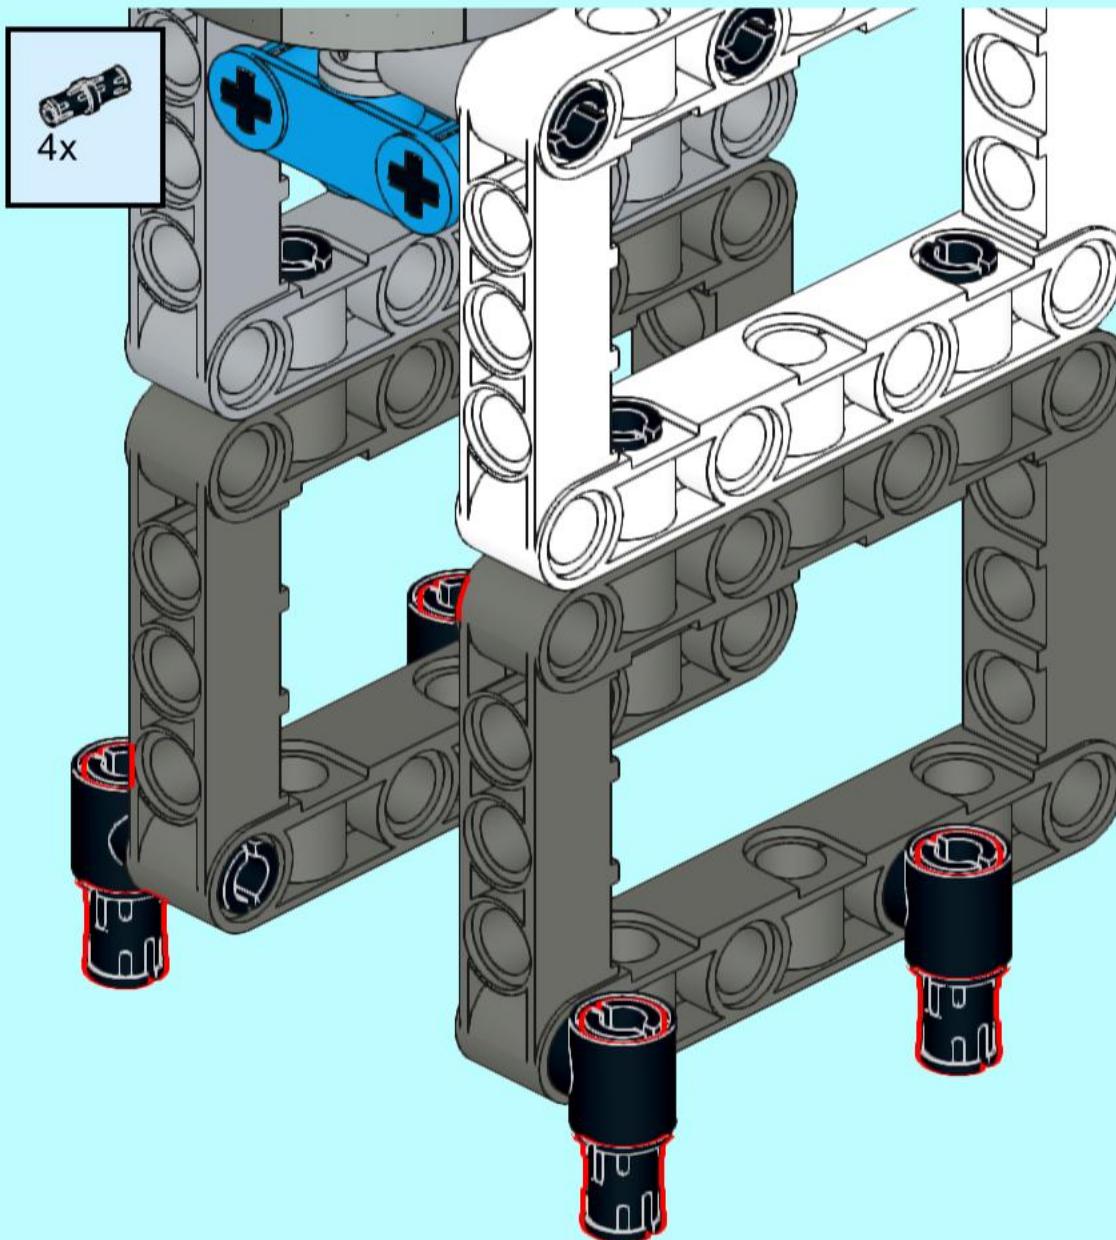


34

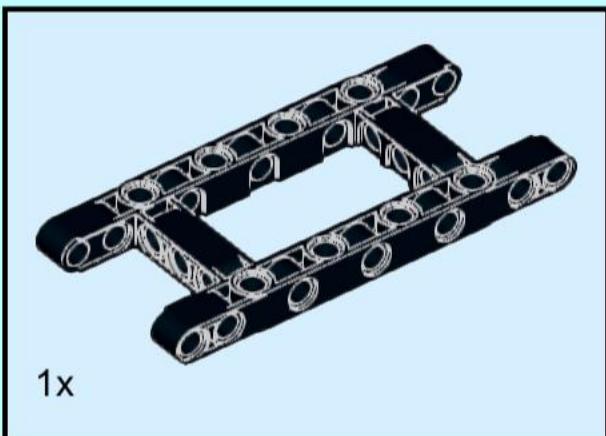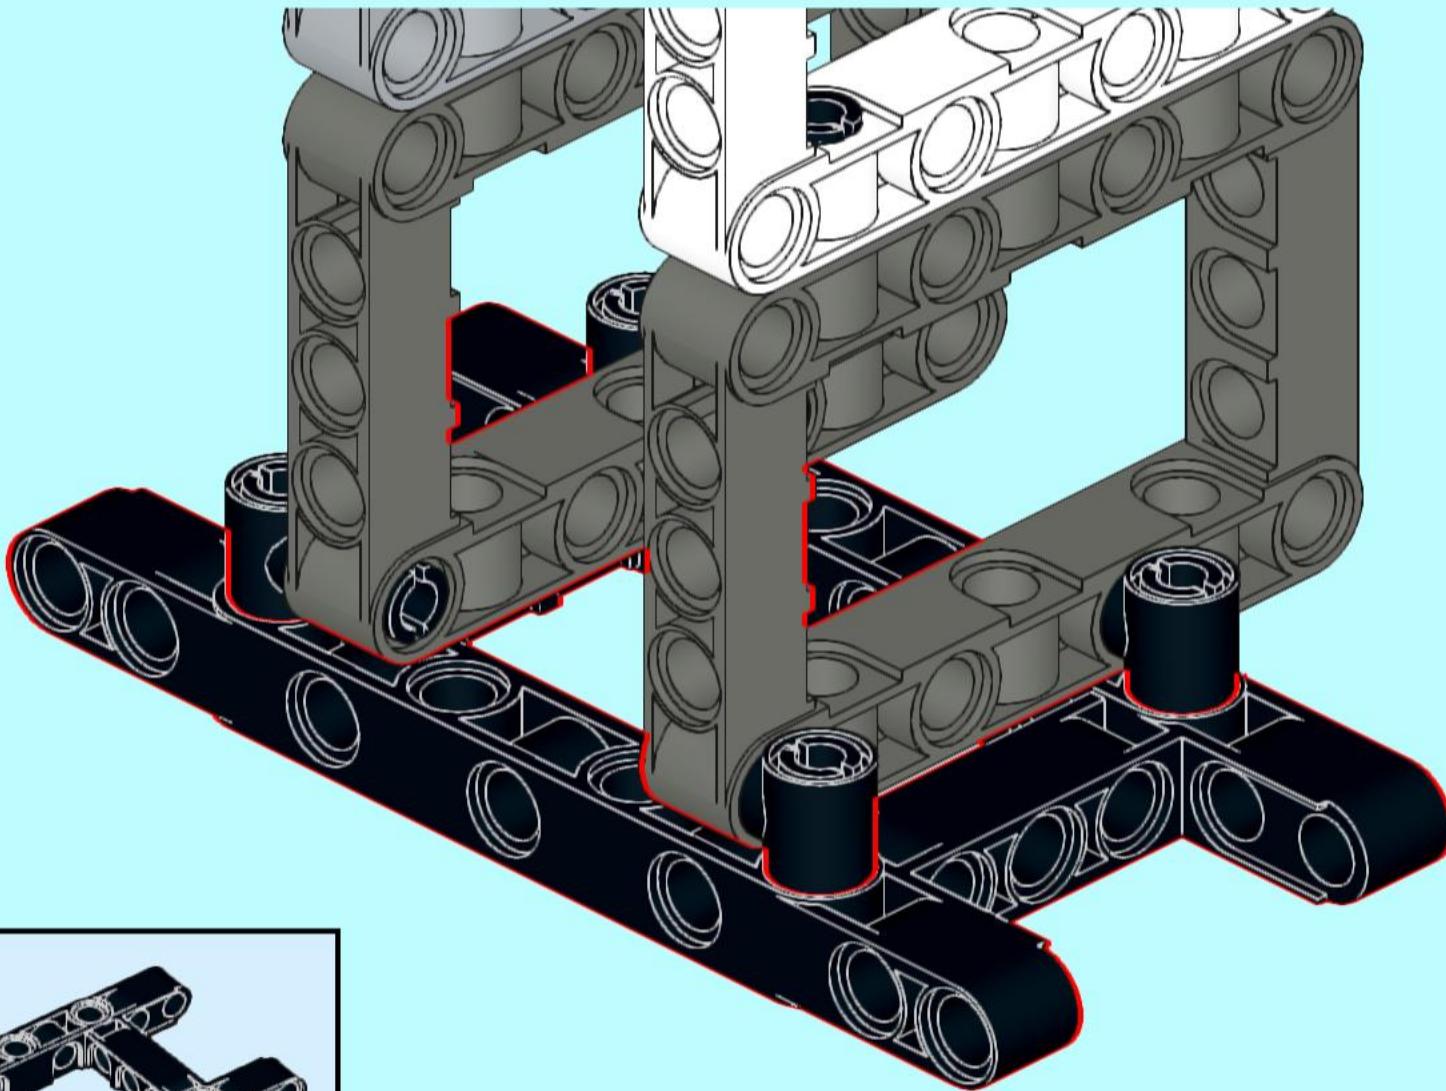



35

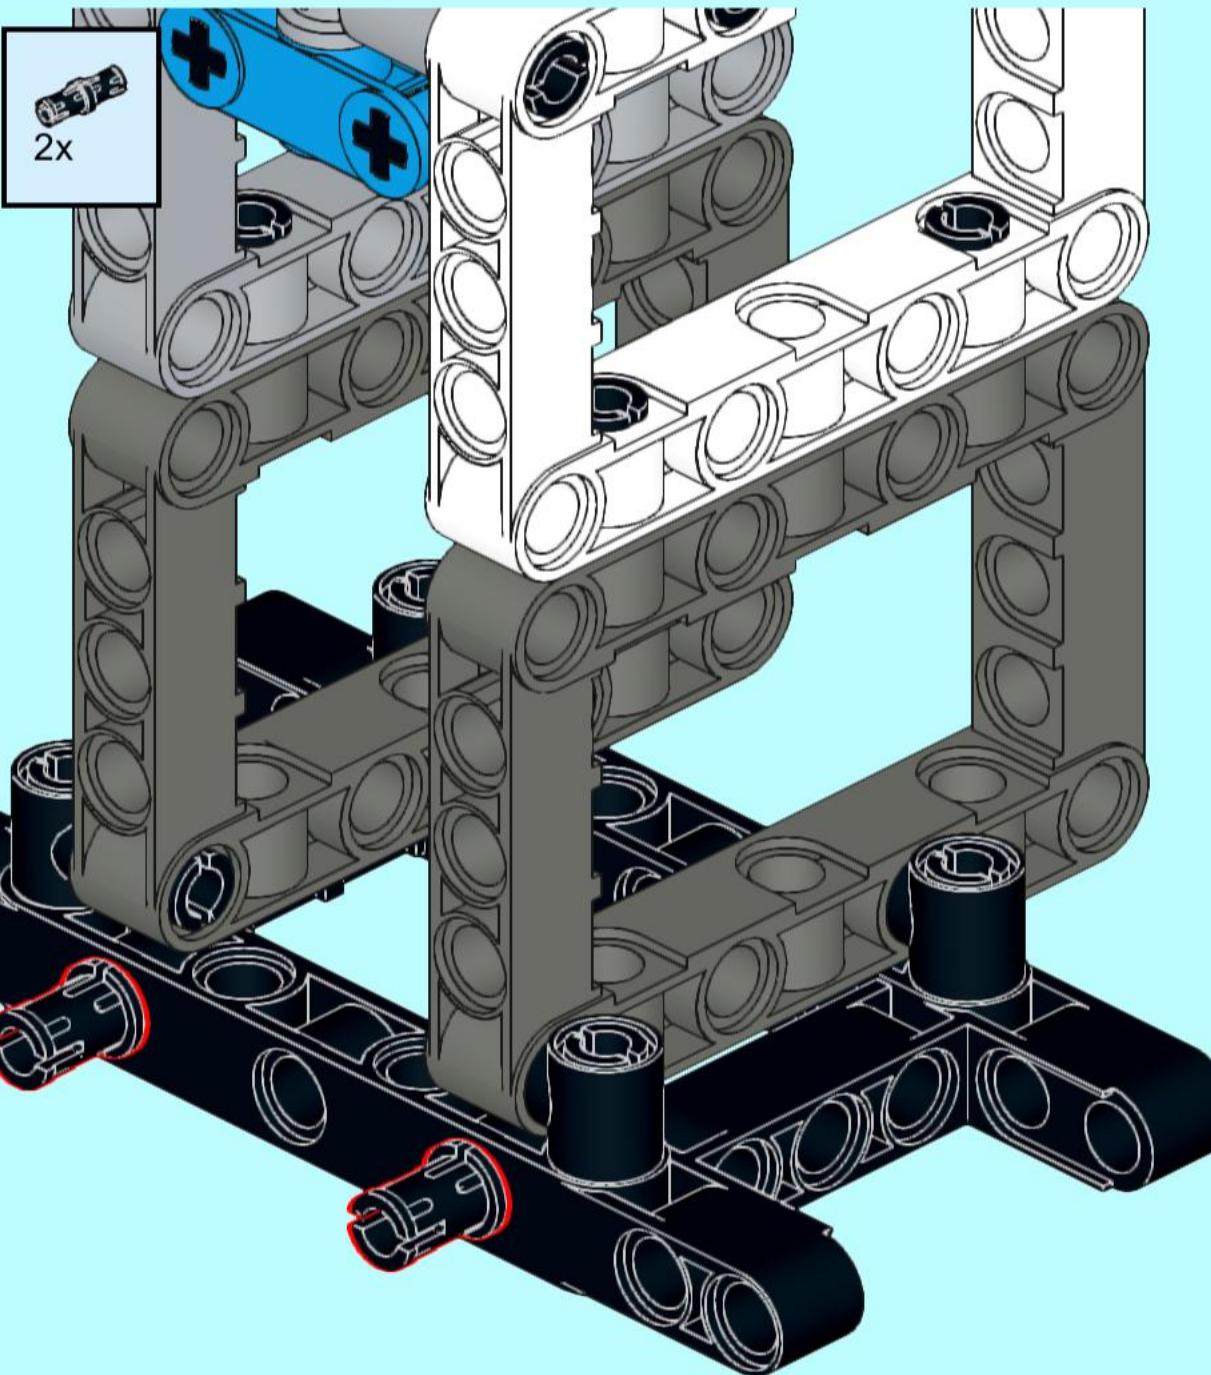



36

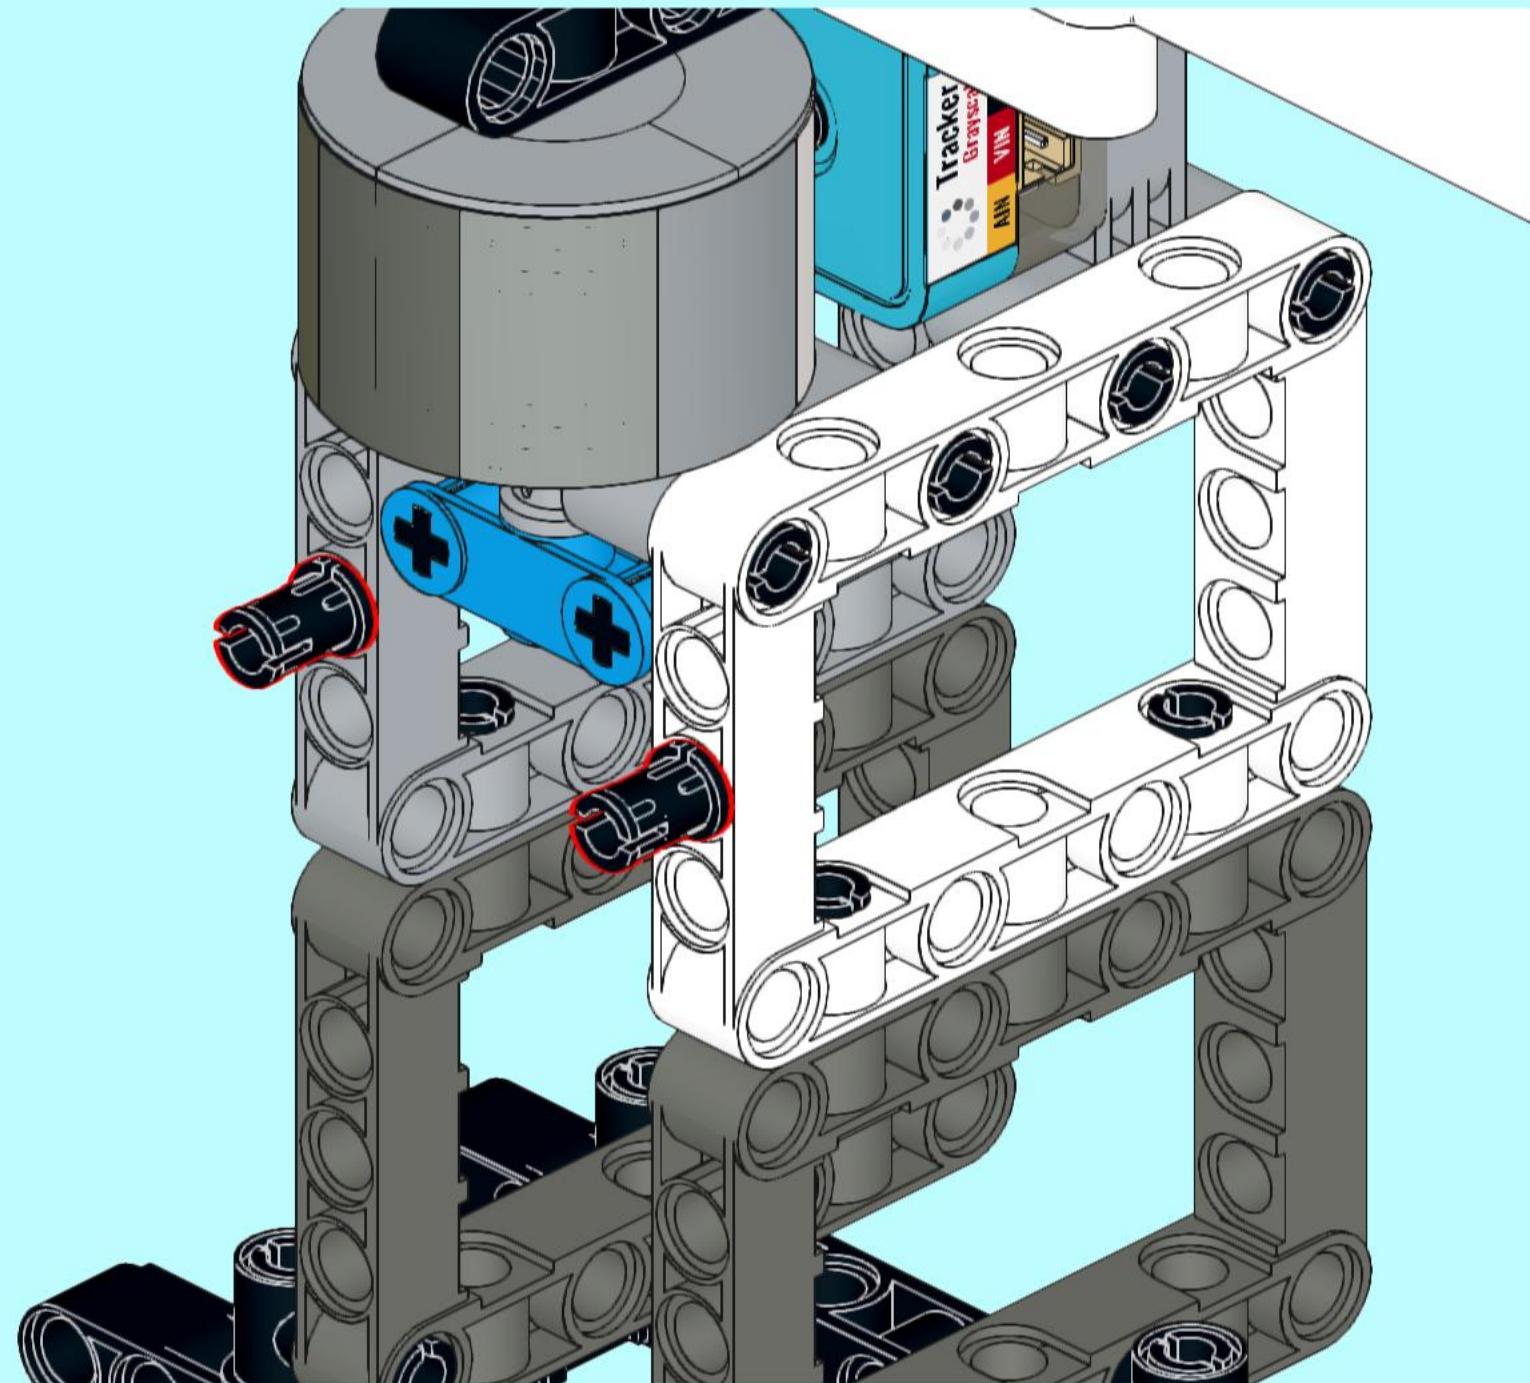



37

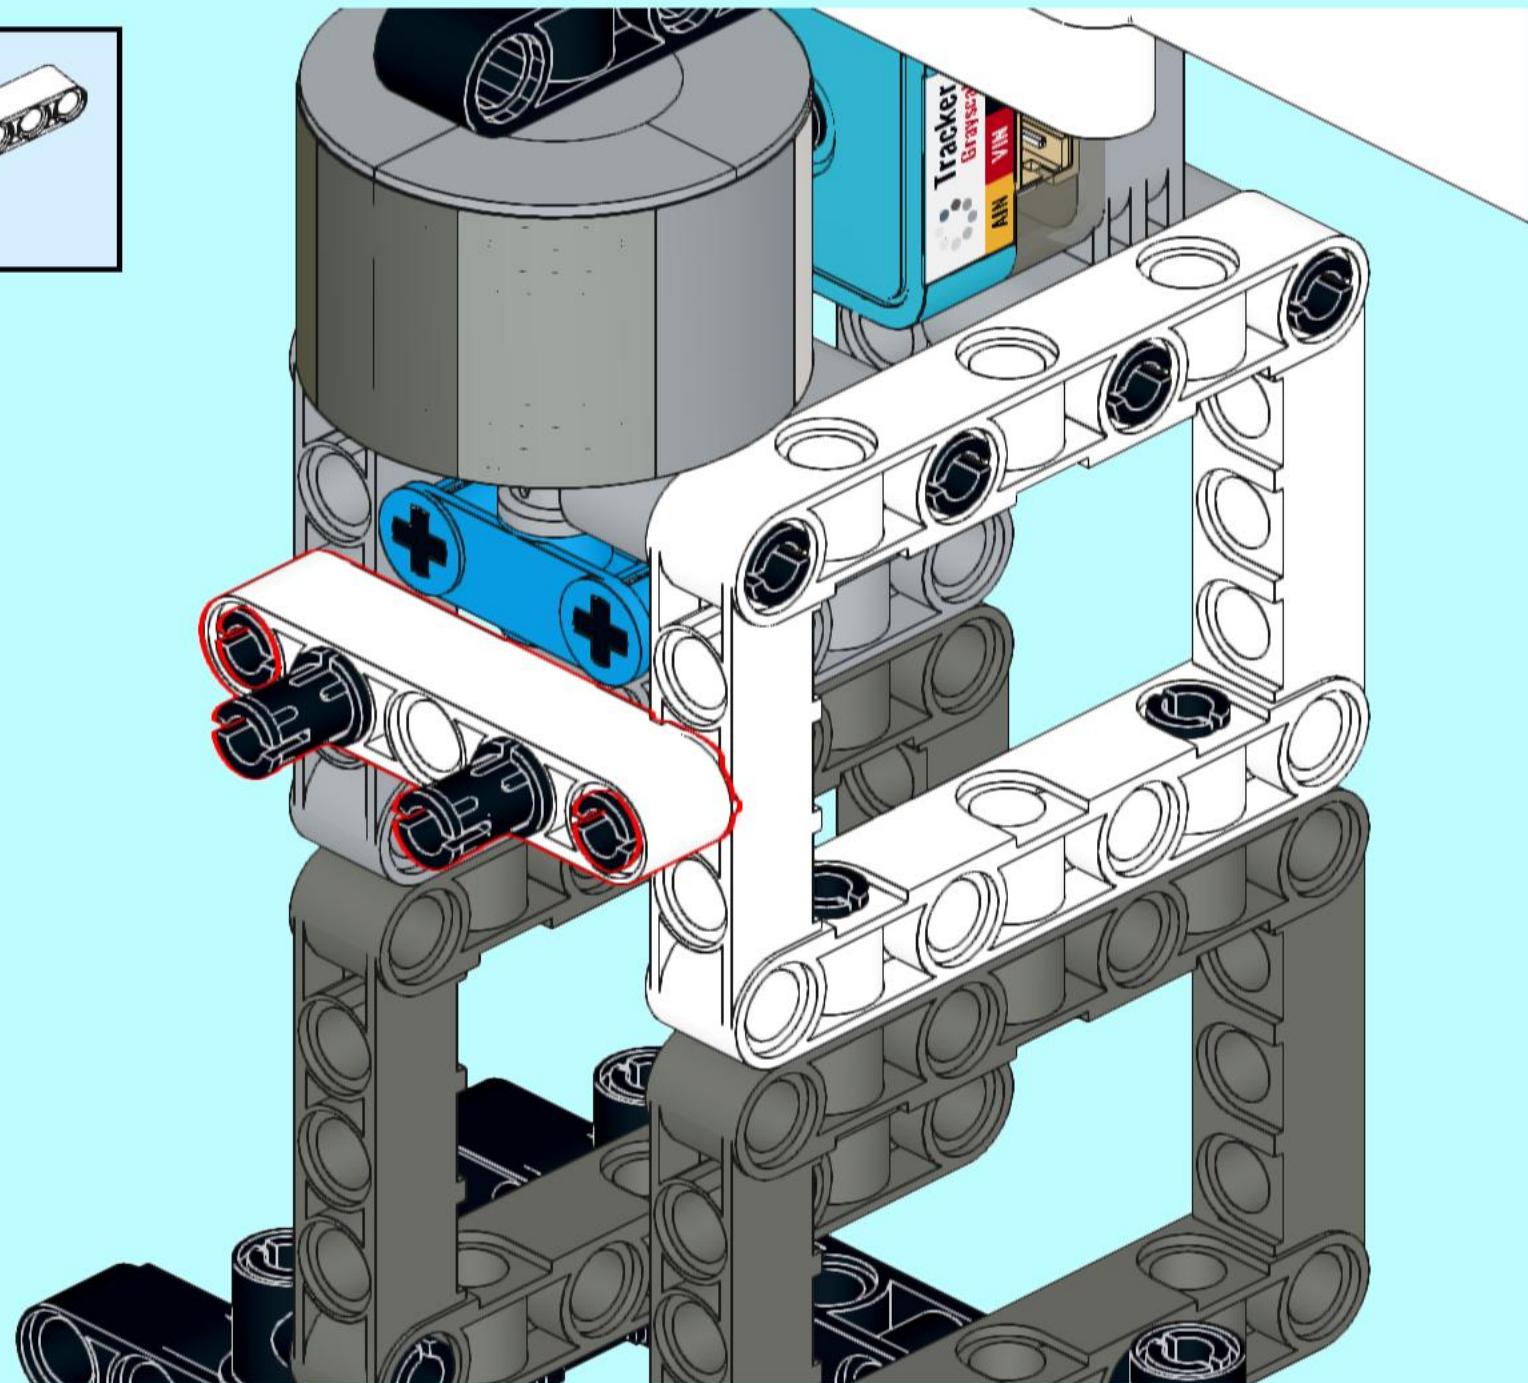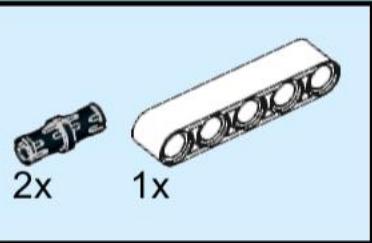

38

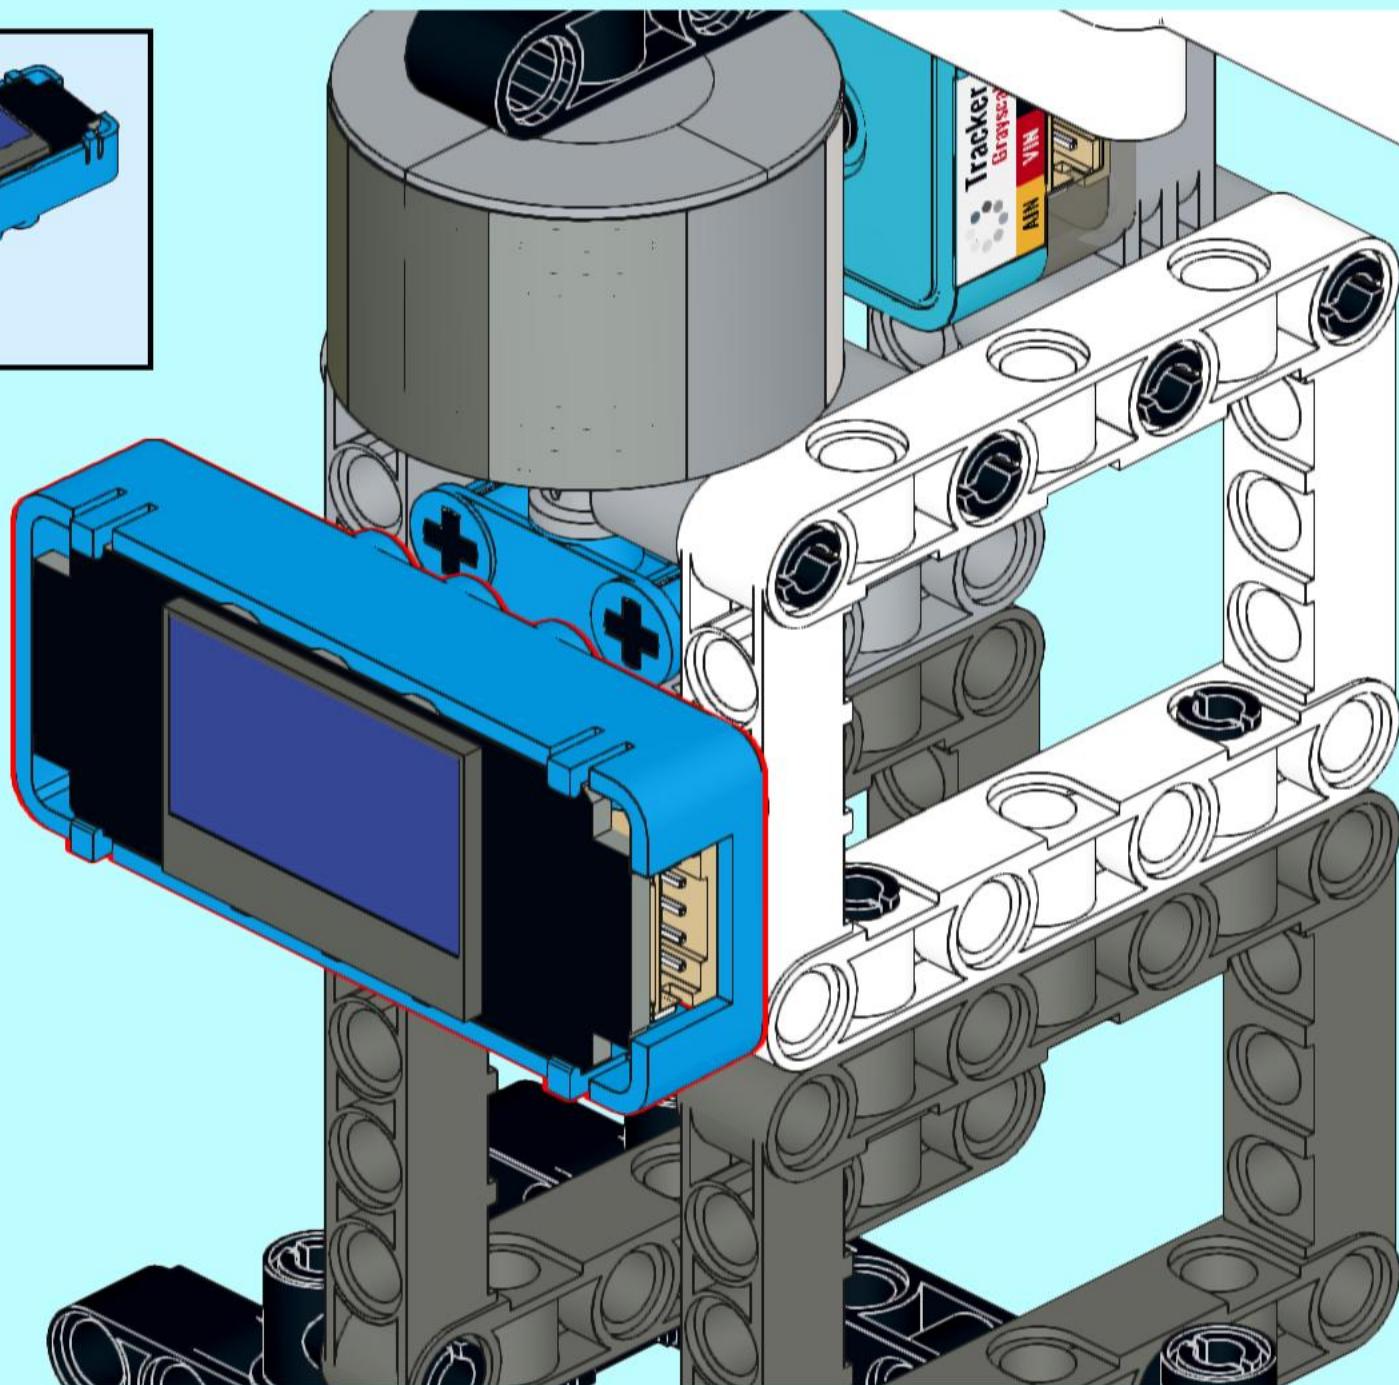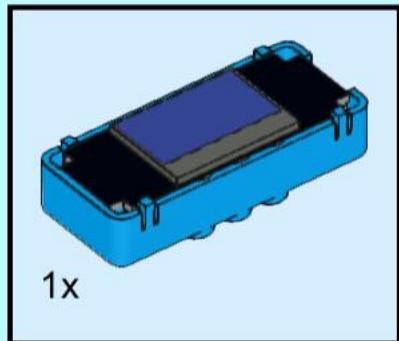

39

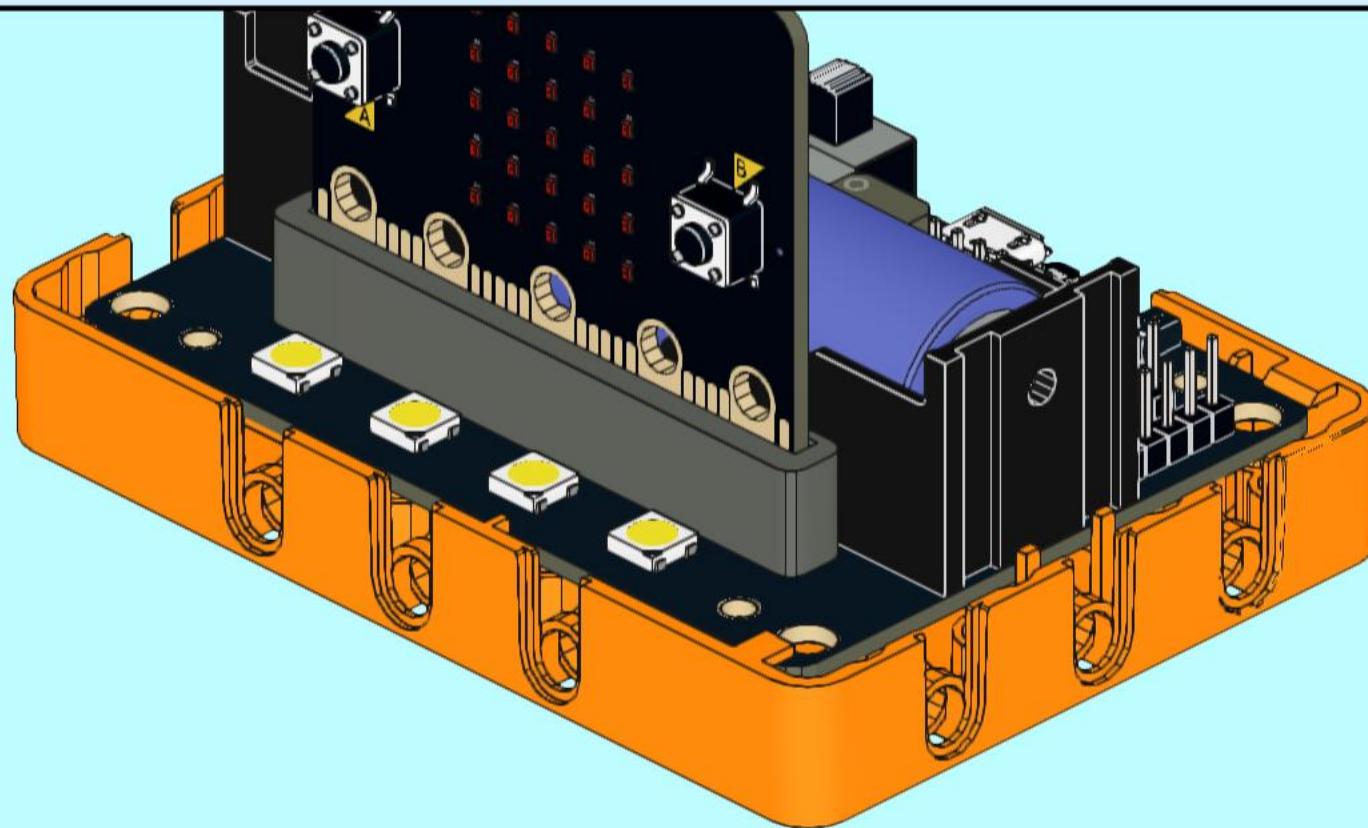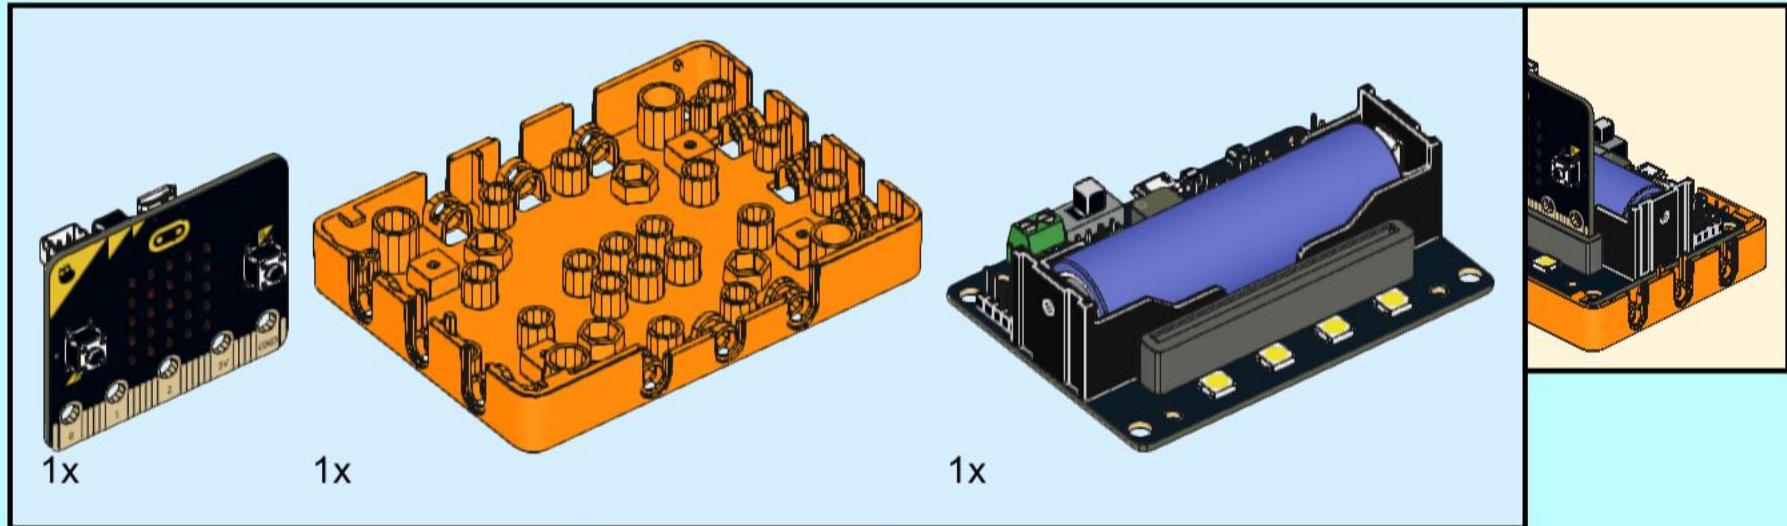

40

