
# Process Automation Laboratory - Cascade control and feed forward control


Kjartan Halvorsen

2020-09-28

### The two-tank model with one level sensor

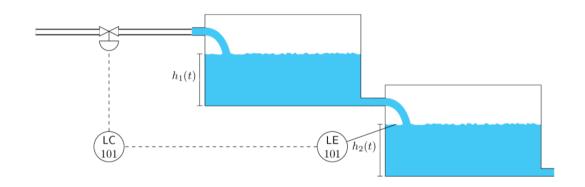


#### The two-tank model with two level sensors and one flow sensor

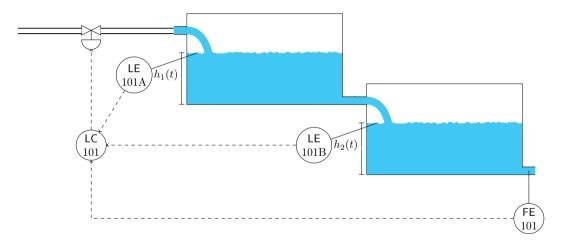


Key idea: We can improve the control using more information

### Cascade control



# Designing the inner loop



Have model  $G_1(s) = \frac{K_1}{s\tau_1+1} = \frac{51}{51s+1}$ . PI controller

$$F_1(s) = k_c \left(1 + rac{1}{ au_i s}
ight) = k_c rac{ au_i s + 1}{ au_i s}$$

Characteristic equation

$$s(s\tau_1+1)+k_c\frac{K}{\tau_i}(s\tau_i+1)=0$$

Choose  $\tau_i$  and  $k_c$  to place the poles at any desired location in the LHP.


#### Exercise

Have characteristic equation


$$s(s\tau_1+1)+k_c\frac{K}{\tau_i}(s\tau_i+1)=0$$

Choose  $\tau_i = \tau_1$ , simplify the characteristic equation, and then determine  $k_c$  which gives a pole in  $s = -\frac{4}{\tau_1}$ .

## Designing the outer loop




The output of the outer controller  $F_2(s)$  is the desired level in tank 1. If the inner loop is sufficiently fast, we can approximate that the actual level in tank 1 is equal to the desired level.




## Designing the outer loop, contd


Alternatively, we can fit a model to the plant and the inner control-loop




#### Feed forward from the disturbance

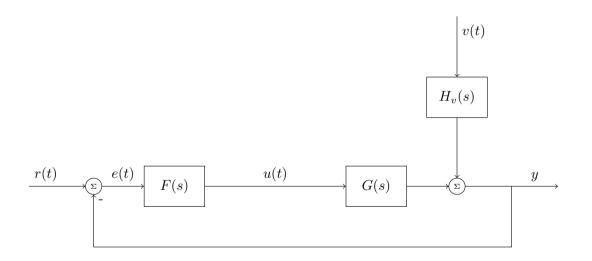

#### Feed forward from the disturbance

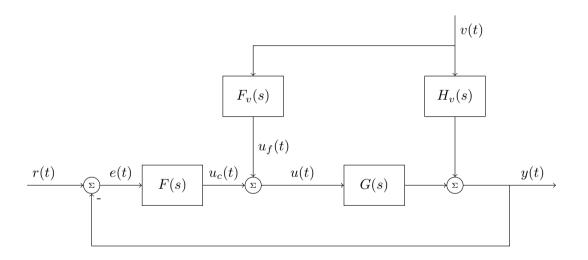

#### Feed forward from the disturbance

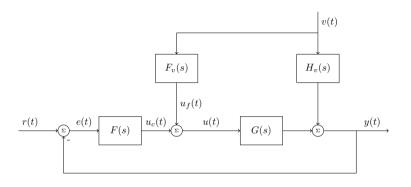

Clearly if

$$G(s)F_{\nu}(s)V(s) = H_{\nu}(s)V(s)$$

the effect of the disturbance cancels. Activity: Solve for  $F_V(s)$ !