

SEVENTH EDITION

# FLUID MECHANICS



FRANK M. WHITE

### Conversion Factors from BG to SI Units

	To convert from	To	Multiply by
Acceleration	ft/s <sup>2</sup>	m/s <sup>2</sup>	0.3048
Area	ft <sup>2</sup>	m <sup>2</sup>	9.2903 E - 2
	mi <sup>2</sup>	m <sup>2</sup>	2.5900 E + 6
	acres	m <sup>2</sup>	4.0469 E + 3
Density	slug/ft <sup>3</sup>	kg/m <sup>3</sup>	5.1538 E + 2
	lbm/ft <sup>3</sup>	kg/m <sup>3</sup>	1.6019 E + 1
Energy	ft-lbf	J	1.3558
	Btu	J	1.0551 E + 3
	cal	J	4.1868
Force	lbf	N	4.4482
	kgf	N	9.8067
Length	ft	m	0.3048
	in	m	2.5400 E - 2
	mi (statute)	m	1.6093 E + 3
	nmi (nautical)	m	1.8520 E + 3
Mass	slug	kg	1.4594 E + 1
	lbm	kg	4.5359 E - 1
Mass flow	slug/s	kg/s	1.4594 E + 1
	lbm/s	kg/s	4.5359 E - 1
Power	ft·lbf/s	W	1.3558
	hp	W	7.4570 E + 2

### Conversion Factors from BG to SI Units (Continued)

	To convert from	To	Multiply by
Pressure	lbf/ft <sup>2</sup>	Pa	4.7880 E + 1
	lbf/in <sup>2</sup>	Pa	6.8948 E + 3
	atm	Pa	1.0133 E + 5
	mm Hg	Pa	1.3332 E + 2
Specific weight	lbf/ft <sup>3</sup>	N/m <sup>3</sup>	1.5709 E + 2
Specific heat	ft <sup>2</sup> /(s <sup>2</sup> ·°R)	m <sup>2</sup> /(s <sup>2</sup> ·K)	1.6723 E - 1
Surface tension	lbf/ft	N/m	1.4594 E + 1
Temperature	°F	°C	$t_C = \frac{5}{9}(t_F - 32^\circ)$
	°R	K	0.5556
Velocity	ft/s	m/s	0.3048
	mi/h	m/s	4.4704 E - 1
	knot	m/s	5.1444 E - 1
Viscosity	lbf·s/ft <sup>2</sup>	N·s/m <sup>2</sup>	4.7880 E + 1
	g/(cm·s)	N·s/m <sup>2</sup>	0.1
Volume	ft <sup>3</sup>	m <sup>3</sup>	2.8317 E - 2
	L	m <sup>3</sup>	0.001
	gal (U.S.)	m <sup>3</sup>	3.7854 E - 3
	fluid ounce (U.S.)	m <sup>3</sup>	2.9574 E - 5
Volume flow	ft <sup>3</sup> /s	m <sup>3</sup> /s	2.8317 E - 2
	gal/min	m <sup>3</sup> /s	6.3090 E - 5

## EQUATION SHEET

Ideal-gas law: $p = \rho RT$ , $R_{\text{air}} = 287 \text{ J/kg}\cdot\text{K}$	Surface tension: $\Delta p = Y(R_1^{-1} + R_2^{-1})$
Hydrostatics, constant density: $p_2 - p_1 = -\gamma(z_2 - z_1)$ , $\gamma = \rho g$	Hydrostatic panel force: $F = \gamma h_{\text{CG}}A$ , $y_{\text{CP}} = -I_{xx}\sin\theta/(h_{\text{CG}}A)$ , $x_{\text{CP}} = -I_{xy}\sin\theta/(h_{\text{CG}}A)$
Buoyant force: $F_B = \gamma_{\text{fluid}}(\text{displaced volume})$	CV mass: $d/dt(\int_{\text{cv}} \rho dv) + \sum (\rho AV)_{\text{out}} - \sum (\rho AV)_{\text{in}} = 0$
CV momentum: $d/dt(\int_{\text{cv}} \rho \mathbf{V} dv) + \sum [(\rho AV)\mathbf{V}]_{\text{out}} - \sum [(\rho AV)\mathbf{V}]_{\text{in}} = \sum \mathbf{F}$	CV angular momentum: $d/dt(\int_{\text{cv}} \rho (\mathbf{r}_0 \times \mathbf{V}) dv) + \sum \rho AV(\mathbf{r}_0 \times \mathbf{V})_{\text{out}} - \sum \rho AV(\mathbf{r}_0 \times \mathbf{V})_{\text{in}} = \sum \mathbf{M}_0$
Steady flow energy: $(p/\gamma + \alpha V^2/2g + z)_{\text{in}} = (p/\gamma + \alpha V^2/2g + z)_{\text{out}} + h_{\text{friction}} - h_{\text{pump}} + h_{\text{turbine}}$	Acceleration: $d\mathbf{V}/dt = \partial \mathbf{V}/\partial t + u(\partial \mathbf{V}/\partial x) + v(\partial \mathbf{V}/\partial y) + w(\partial \mathbf{V}/\partial z)$
Incompressible continuity: $\nabla \cdot \mathbf{V} = 0$	Navier-Stokes: $\rho(d\mathbf{V}/dt) = \rho \mathbf{g} - \nabla p + \mu \nabla^2 \mathbf{V}$
Incompressible stream function $\psi(x,y)$ : $u = \partial\psi/\partial y$ ; $v = -\partial\psi/\partial x$	Velocity potential $\phi(x,y,z)$ : $u = \partial\phi/\partial x$ ; $v = \partial\phi/\partial y$ ; $w = \partial\phi/\partial z$
Bernoulli unsteady irrotational flow: $\partial\phi/\partial t + \int dp/\rho + V^2/2 + gz = \text{Const}$	Turbulent friction factor: $1/\sqrt{f} = -2.0 \log_{10}[\varepsilon/(3.7d) + 2.51/(\text{Re}_d \sqrt{f})]$
Pipe head loss: $h_f = f(L/d)V^2/(2g)$ where $f$ = Moody chart friction factor	Orifice, nozzle, venturi flow: $Q = C_d A_{\text{throat}} [2\Delta p / \{\rho(1-\beta^4)\}]^{1/2}$ , $\beta = d/D$
Laminar flat plate flow: $\delta/x = 5.0/\text{Re}_x^{1/2}$ , $c_f = 0.664/\text{Re}_x^{1/2}$ , $C_D = 1.328/\text{Re}_L^{1/2}$	Turbulent flat plate flow: $\delta/x = 0.16/\text{Re}_x^{1/7}$ , $c_f = 0.027/\text{Re}_x^{1/7}$ , $C_D = 0.031/\text{Re}_L^{1/7}$
$C_D = \text{Drag}/(\frac{1}{2}\rho V^2 A)$ ; $C_L = \text{Lift}/(\frac{1}{2}\rho V^2 A)$	2-D potential flow: $\nabla^2 \phi = \nabla^2 \psi = 0$
Isentropic flow: $T_0/T = 1 + \{(k-1)/2\}\text{Ma}^2$ , $\rho_0/\rho = (T_0/T)^{1/(k-1)}$ , $p_0/p = (T_0/T)^{k(k-1)}$	One-dimensional isentropic area change: $A/A^* = (1/\text{Ma})[1 + \{(k-1)/2\}\text{Ma}^2]^{(1/2)(k+1)/(k-1)}$
Prandtl-Meyer expansion: $K = (k+1)/(k-1)$ , $\omega = K^{1/2} \tan^{-1}[(\text{Ma}^2 - 1)/K]^{1/2} - \tan^{-1}(\text{Ma}^2 - 1)^{1/2}$	Uniform flow, Manning's $n$ , SI units: $V_0(\text{m/s}) = (1.0/n)[R_h(m)]^{2/3} S_0^{1/2}$
Gradually varied channel flow: $dy/dx = (S_0 - S)/(1 - \text{Fr}^2)$ , $\text{Fr} = V/V_{\text{crit}}$	Euler turbine formula: $\text{Power} = \rho Q(u_2 V_{t2} - u_1 V_{t1})$ , $u = r\omega$

*This page intentionally left blank*

# Fluid Mechanics

## **McGraw-Hill Series in Mechanical Engineering**

**Aciatore/Histand**

*Introduction to Mechatronics and Measurement Systems*

**Anderson**

*Computational Fluid Dynamics: The Basics with Applications*

**Anderson**

*Fundamentals of Aerodynamics*

**Anderson**

*Introduction to Flight*

**Anderson**

*Modern Compressible Flow*

**Beer/Johnston**

*Vector Mechanics for Engineers: Statics and Dynamics*

**Beer/Johnston**

*Mechanics of Materials*

**Budynas**

*Advanced Strength and Applied Stress Analysis*

**Budynas/Nisbett**

*Shigley's Mechanical Engineering Design*

**Engel**

*Heat and Mass Transfer: A Practical Approach*

**Engel**

*Introduction to Thermodynamics & Heat Transfer*

**Engel/Boles**

*Thermodynamics: An Engineering Approach*

**Engel/Cimbala**

*Fluid Mechanics: Fundamentals and Applications*

**Engel/Turner**

*Fundamentals of Thermal-Fluid Sciences*

**Dieter**

*Engineering Design: A Materials & Processing Approach*

**Dieter**

*Mechanical Metallurgy*

**Dorf/Byers**

*Technology Ventures: From Idea to Enterprise*

**Finnemore/Franzini**

*Fluid Mechanics with Engineering Applications*

**Hamrock/Schmid/Jacobson**

*Fundamentals of Machine Elements*

**Heywood**

*Internal Combustion Engine Fundamentals*

**Holman**

*Experimental Methods for Engineers*

**Holman**

*Heat Transfer*

**Kays/Crawford/Weigand**

*Convective Heat and Mass Transfer*

**Meirovitch**

*Fundamentals of Vibrations*

**Norton**

*Design of Machinery*

**Palm**

*System Dynamics*

**Reddy**

*An Introduction to Finite Element Method*

**Schey**

*Introduction to Manufacturing Processes*

**Smith/Hashemi**

*Foundations of Materials Science and Engineering*

**Turcs**

*An Introduction to Combustion: Concepts and Applications*

**Ugural**

*Mechanical Design: An Integrated Approach*

**Ullman**

*The Mechanical Design Process*

**White**

*Fluid Mechanics*

**White**

*Viscous Fluid Flow*

# Fluid Mechanics

Seventh Edition

**Frank M. White**

*University of Rhode Island*





## FLUID MECHANICS, SEVENTH EDITION

Published by McGraw-Hill, a business unit of The McGraw-Hill Companies, Inc., 1221 Avenue of the Americas, New York, NY 10020. Copyright ©2011 by The McGraw-Hill Companies, Inc. All rights reserved. Previous editions ©2008, 2003, and 1999. No part of this publication may be reproduced or distributed in any form or by any means, or stored in a database or retrieval system, without the prior written consent of The McGraw-Hill Companies, Inc., including, but not limited to, in any network or other electronic storage or transmission, or broadcast for distance learning.

Some ancillaries, including electronic and print components, may not be available to customers outside the United States.

This book is printed on acid-free paper.

1 2 3 4 5 6 7 8 9 0 DOC/DOC 1 0 9 8 7 6 5 4 3 2 1 0

ISBN 978-0-07-352934-9

MHID 0-07-352934-6

Vice President & Editor-in-Chief: *Marty Lange*

Vice President, EDP/Central Publishing Services: *Kimberly Meriwether-David*

Global Publisher: *Raghathanan Srinivasan*

Senior Sponsoring Editor: *Bill Stenquist*

Director of Development: *Kristine Tibbets*

Developmental Editor: *Lora Neyens*

Senior Marketing Manager: *Curt Reynolds*

Senior Project Manager: *Lisa A. Brufeldt*

Production Supervisor: *Nicole Baumgartner*

Design Coordinator: *Brenda A. Rolwes*

Cover Designer: *Studio Montage, St. Louis, Missouri*

(USE) Cover Image: *Copyright SkySails*

Senior Photo Research Coordinator: *John C. Leland*

Photo Research: *Emily Tietz/Editorial Image, LLC*

Compositor: *Aptara, Inc.*

Typeface: *10/12 Times Roman*

Printer: *R. R. Donnelley*

All credits appearing on page or at the end of the book are considered to be an extension of the copyright page.

### Library of Congress Cataloging-in-Publication Data

White, Frank M.

Fluid mechanics / Frank M. White. —7th ed.

p. cm. — (Mcgraw-Hill series in mechanical engineering)

Includes bibliographical references and index.

ISBN 978-0-07-352934-9 (alk. paper)

1. Fluid mechanics. I. Title.

TA357.W48 2009

620.1'06—dc22

2009047498

# About the Author

**Frank M. White** is Professor Emeritus of Mechanical and Ocean Engineering at the University of Rhode Island. He studied at Georgia Tech and M.I.T. In 1966 he helped found, at URI, the first department of ocean engineering in the country. Known primarily as a teacher and writer, he has received eight teaching awards and has written four textbooks on fluid mechanics and heat transfer.

From 1979 to 1990 he was editor-in-chief of the *ASME Journal of Fluids Engineering* and then served from 1991 to 1997 as chairman of the ASME Board of Editors and of the Publications Committee. He is a Fellow of ASME and in 1991 received the ASME Fluids Engineering Award. He lives with his wife, Jeanne, in Narragansett, Rhode Island.

To Jeanne

# Contents

Preface xi

## Chapter 1

Introduction 3

- 1.1 Preliminary Remarks 3
- 1.2 History and Scope of Fluid Mechanics 4
- 1.3 Problem-Solving Techniques 6
- 1.4 The Concept of a Fluid 6
- 1.5 The Fluid as a Continuum 8
- 1.6 Dimensions and Units 9
- 1.7 Properties of the Velocity Field 17
- 1.8 Thermodynamic Properties of a Fluid 18
- 1.9 Viscosity and Other Secondary Properties 25
- 1.10 Basic Flow Analysis Techniques 40
- 1.11 Flow Patterns: Streamlines, Streaklines, and Pathlines 41
- 1.12 The Engineering Equation Solver 46
- 1.13 Uncertainty in Experimental Data 46
- 1.14 The Fundamentals of Engineering (FE) Examination 48
  - Problems 49
  - Fundamentals of Engineering Exam Problems 57
  - Comprehensive Problems 58
  - References 61

## Chapter 2

Pressure Distribution in a Fluid 65

- 2.1 Pressure and Pressure Gradient 65
- 2.2 Equilibrium of a Fluid Element 67
- 2.3 Hydrostatic Pressure Distributions 68
- 2.4 Application to Manometry 75

- 2.5 Hydrostatic Forces on Plane Surfaces 78
- 2.6 Hydrostatic Forces on Curved Surfaces 86
- 2.7 Hydrostatic Forces in Layered Fluids 89
- 2.8 Buoyancy and Stability 91
- 2.9 Pressure Distribution in Rigid-Body Motion 97
- 2.10 Pressure Measurement 105
  - Summary 109
  - Problems 109
  - Word Problems 132
  - Fundamentals of Engineering Exam Problems 133
  - Comprehensive Problems 134
  - Design Projects 135
  - References 136

## Chapter 3

Integral Relations for a Control Volume 139

- 3.1 Basic Physical Laws of Fluid Mechanics 139
- 3.2 The Reynolds Transport Theorem 143
- 3.3 Conservation of Mass 150
- 3.4 The Linear Momentum Equation 155
- 3.5 Frictionless Flow: The Bernoulli Equation 169
- 3.6 The Angular Momentum Theorem 178
- 3.7 The Energy Equation 184
  - Summary 195
  - Problems 195
  - Word Problems 224
  - Fundamentals of Engineering Exam Problems 224
  - Comprehensive Problems 226
  - Design Project 227
  - References 227

**Chapter 4****Differential Relations for Fluid Flow** 229

- 4.1** The Acceleration Field of a Fluid 230  
**4.2** The Differential Equation of Mass Conservation 232  
**4.3** The Differential Equation of Linear Momentum 238  
**4.4** The Differential Equation of Angular Momentum 244  
**4.5** The Differential Equation of Energy 246  
**4.6** Boundary Conditions for the Basic Equations 249  
**4.7** The Stream Function 253  
**4.8** Vorticity and Irrotationality 261  
**4.9** Frictionless Irrotational Flows 263  
**4.10** Some Illustrative Incompressible Viscous Flows 268  
 Summary 276  
 Problems 277  
 Word Problems 288  
 Fundamentals of Engineering Exam Problems 288  
 Comprehensive Problems 289  
 References 290

**Chapter 5****Dimensional Analysis and Similarity** 293

- 5.1** Introduction 298  
**5.2** The Principle of Dimensional Homogeneity 296  
**5.3** The Pi Theorem 302  
**5.4** Nondimensionalization of the Basic Equations 312  
**5.5** Modeling and Its Pitfalls 321  
 Summary 333  
 Problems 333  
 Word Problems 342  
 Fundamentals of Engineering Exam Problems 342  
 Comprehensive Problems 343  
 Design Projects 344  
 References 344

**Chapter 6****Viscous Flow in Ducts** 347

- 6.1** Reynolds Number Regimes 347  
**6.2** Internal versus External Viscous Flow 352  
**6.3** Head Loss—The Friction Factor 355  
**6.4** Laminar Fully Developed Pipe Flow 357  
**6.5** Turbulence Modeling 359

- 6.6** Turbulent Pipe Flow 365  
**6.7** Four Types of Pipe Flow Problems 373  
**6.8** Flow in Noncircular Ducts 379  
**6.9** Minor or Local Losses in Pipe Systems 388  
**6.10** Multiple-Pipe Systems 397  
**6.11** Experimental Duct Flows: Diffuser Performance 403  
**6.12** Fluid Meters 408  
 Summary 429  
 Problems 430  
 Word Problems 448  
 Fundamentals of Engineering Exam Problems 449  
 Comprehensive Problems 450  
 Design Projects 452  
 References 453

**Chapter 7****Flow Past Immersed Bodies** 457

- 7.1** Reynolds Number and Geometry Effects 457  
**7.2** Momentum Integral Estimates 461  
**7.3** The Boundary Layer Equations 464  
**7.4** The Flat-Plate Boundary Layer 467  
**7.5** Boundary Layers with Pressure Gradient 476  
**7.6** Experimental External Flows 482  
 Summary 509  
 Problems 510  
 Word Problems 523  
 Fundamentals of Engineering Exam Problems 524  
 Comprehensive Problems 524  
 Design Project 525  
 References 526

**Chapter 8****Potential Flow and Computational Fluid Dynamics** 529

- 8.1** Introduction and Review 529  
**8.2** Elementary Plane Flow Solutions 532  
**8.3** Superposition of Plane Flow Solutions 539  
**8.4** Plane Flow Past Closed-Body Shapes 545  
**8.5** Other Plane Potential Flows 555  
**8.6** Images 559  
**8.7** Airfoil Theory 562  
**8.8** Axisymmetric Potential Flow 574  
**8.9** Numerical Analysis 579

Summary	593
Problems	594
Word Problems	604
Comprehensive Problems	605
Design Projects	606
References	606

**Chapter 9****Compressible Flow** 609

<b>9.1</b>	Introduction: Review of Thermodynamics	609
<b>9.2</b>	The Speed of Sound	614
<b>9.3</b>	Adiabatic and Isentropic Steady Flow	616
<b>9.4</b>	Isentropic Flow with Area Changes	622
<b>9.5</b>	The Normal Shock Wave	629
<b>9.6</b>	Operation of Converging and Diverging Nozzles	637
<b>9.7</b>	Compressible Duct Flow with Friction	642
<b>9.8</b>	Frictionless Duct Flow with Heat Transfer	654
<b>9.9</b>	Two-Dimensional Supersonic Flow	659
<b>9.10</b>	Prandtl-Meyer Expansion Waves	669
	Summary	681
	Problems	682
	Word Problems	695
	Fundamentals of Engineering Exam Problems	696
	Comprehensive Problems	696
	Design Projects	698
	References	698

**Chapter 10****Open-Channel Flow** 701

<b>10.1</b>	Introduction	701
<b>10.2</b>	Uniform Flow: The Chézy Formula	707
<b>10.3</b>	Efficient Uniform-Flow Channels	712
<b>10.4</b>	Specific Energy: Critical Depth	714
<b>10.5</b>	The Hydraulic Jump	722
<b>10.6</b>	Gradually Varied Flow	726

<b>10.7</b>	Flow Measurement and Control by Weirs	734
-------------	---------------------------------------	-----

	Summary	741
	Problems	741
	Word Problems	754
	Fundamentals of Engineering Exam Problems	754
	Comprehensive Problems	754
	Design Projects	756
	References	756

**Chapter 11****Turbomachinery** 759

<b>11.1</b>	Introduction and Classification	759
<b>11.2</b>	The Centrifugal Pump	762
<b>11.3</b>	Pump Performance Curves and Similarity Rules	768
<b>11.4</b>	Mixed- and Axial-Flow Pumps: The Specific Speed	778
<b>11.5</b>	Matching Pumps to System Characteristics	785
<b>11.6</b>	Turbines	793
	Summary	807
	Problems	807
	Word Problems	820
	Comprehensive Problems	820
	Design Project	822
	References	822

**Appendix A Physical Properties of Fluids** 824**Appendix B Compressible Flow Tables** 829**Appendix C Conversion Factors** 836**Appendix D Equations of Motion in Cylindrical Coordinates** 838**Answers to Selected Problems** 840**Index** 847

*This page intentionally left blank*

# Preface

## General Approach

The seventh edition of *Fluid Mechanics* sees some additions and deletions but no philosophical change. The basic outline of eleven chapters, plus appendices, remains the same. The triad of integral, differential, and experimental approaches is retained. Many problem exercises, and some fully worked examples, have been changed. The informal, student-oriented style is retained. A number of new photographs and figures have been added. Many new references have been added, for a total of 435. The writer is a firm believer in “further reading,” especially in the postgraduate years.

## Learning Tools

The total number of problem exercises continues to increase, from 1089 in the first edition, to 1675 in this seventh edition. There are approximately 20 new problems added to each chapter. Most of these are basic end-of-chapter problems, classified according to topic. There are also Word Problems, multiple-choice Fundamentals of Engineering Problems, Comprehensive Problems, and Design Projects. The appendix lists approximately 700 Answers to Selected Problems.

The example problems are structured in the text to follow the sequence of recommended steps outlined in Sect. 1.3, Problem-Solving Techniques.

The Engineering Equation Solver (EES) is available with the text and continues its role as an attractive tool for fluid mechanics and, indeed, other engineering problems. Not only is it an excellent solver, but it also contains thermophysical properties, publication-quality plotting, units checking, and many mathematical functions, including numerical integration. The author is indebted to Sanford Klein and William Beckman, of the University of Wisconsin, for invaluable and continuous help in preparing and updating EES for use in this text. For newcomers to EES, a brief guide to its use is found on this book’s website.

## Content Changes

There are some revisions in each chapter.

Chapter 1 has added material on the history of late 20th century fluid mechanics, notably the development of Computational Fluid Dynamics. A very brief introduction to the acceleration field has been added. Boundary conditions for slip flow have been added. There is more discussion of the speed of sound in liquids. The treatment of thermal conductivity has been moved to Chapter 4.

Chapter 2 introduces a photo, discussion, and new problems for the deep ocean submersible vehicle, ALVIN. The density distribution in the troposphere is now given explicitly. There are brief remarks on the great Greek mathematician, Archimedes.

Chapter 3 has been substantially revised. Reviewers wanted Bernoulli's equation moved ahead of angular velocity and energy, to follow linear momentum. I did this and followed their specific improvements, but truly extensive renumbering and rearranging was necessary. Pressure and velocity conditions at a tank surface have an improved discussion. A brief history of the control volume has been added. There is a better treatment of the relation between Bernoulli's equation and the energy equation. There is a new discussion of stagnation, static and dynamic pressures, and boundary conditions at a jet exit.

Chapter 4 has a great new opener: CFD for flow past a spinning soccer ball. The total time derivative of velocity is now written out in full. Fourier's Law, and its application to the differential energy equation, have been moved here from Chapter 1. There are 21 new problems, including several slip-flow analyses.

The Chapter 5 introduction expands on the effects of Mach number and Froude number, instead of concentrating only on the Reynolds number. Ipsen's method, which the writer admires, is retained as an alternative to the pi theorem. The new opener, a giant disk-band-gap parachute, allows for several new dimensional analysis problems.

Chapter 6 has a new formula for entrance length in turbulent duct flow, sent to me by two different researchers. There is a new problem describing the flow in a fuel cell. The new opener, the Trans-Alaska Pipeline, allows for several innovative problems, including a related one on the proposed Alaska-Canada natural gas pipeline.

Chapter 7 has an improved description of turbulent flow past a flat plate, plus recent reviews of progress in turbulence modeling with CFD. Two new aerodynamic advances are reported: the Finaish-Witherspoon redesign of the Kline-Fogelman airfoil and the increase in stall angle achieved by tubercles modeled after a humpback whale. The new Transition® flying car, which had a successful maiden flight in 2009, leads to a number of good problem assignments. Two other photos, Rocket Man over the Alps, and a cargo ship propelled by a kite, also lead to interesting new problems.

Chapter 8 is essentially unchanged, except for a bit more discussion of modern CFD software. The Transition® autocar, featured in Chapter 7, is attacked here by aerodynamic theory, including induced drag.

Chapter 9 benefited from reviewer improvement. Figure 9.7, with its 30-year-old curve-fits for the area ratio, has been replaced with fine-gridded curves for the area-change properties. The curve-fits are gone, and Mach numbers follow nicely from Fig. 9.7 and either Excel or EES. New Trends in Aeronautics presents the X-43 Scramjet airplane, which generates several new problem assignments. Data for the proposed Alaska-to-Canada natural gas pipeline provides a different look at frictional choking.

Chapter 10 is basically the same, except for new photos of both plane and circular hydraulic jumps, plus a tidal bore, with their associated problem assignments.

Chapter 11 has added a section on the performance of gas turbines, with application to turbofan aircraft engines. The section on wind turbines has been updated, with new data and photos. A wind-turbine-driven vehicle, which can easily move directly into the wind, has inspired new problem assignments.

Appendix A has new data on the bulk modulus of various liquids. Appendix B, Compressible Flow Tables, has been shortened by using coarser increments (0.1) in Mach number. Tables with much smaller increments are now on the book website. Appendix E, Introduction to EES, has been deleted and moved to the website, on the theory that most students are now quite familiar with EES.

## Online Supplements

A number of supplements are available to students and/or instructors at the text website [www.mhhe.com/white7e](http://www.mhhe.com/white7e). Students have access to a Student Study Guide developed by Jerry Dunn of Texas A&M University. They are also able to utilize Engineering Equation Solver (EES), fluid mechanics videos developed by Gary Settles of Pennsylvania State University, and CFD images and animations prepared by Fluent Inc. Also available to students are Fundamentals of Engineering (FE) Exam quizzes, prepared by Edward Anderson of Texas Tech University.

Instructors may obtain a series of PowerPoint slides and images, plus the full Solutions Manual, in PDF format. The Solutions Manual provides complete and detailed solutions, including problem statements and artwork, to the end-of-chapter problems. It may be photocopied for posting or preparing transparencies for the classroom. Instructors can also obtain access to C.O.S.M.O.S. for the seventh edition. C.O.S.M.O.S. is a Complete Online Solutions Manual Organization System instructors can use to create exams and assignments, create custom content, and edit supplied problems and solutions.

## Electronic Textbook Options

Ebooks are an innovative way for students to save money and create a greener environment at the same time. An ebook can save students about half the cost of a traditional textbook and offers unique features like a powerful search engine, highlighting, and the ability to share notes with classmates using ebooks.

McGraw-Hill offers this text as an ebook. To talk about the ebook options, contact your McGraw-Hill sales rep or visit the site [www.coursesmart.com](http://www.coursesmart.com) to learn more.

# Acknowledgments

As usual, so many people have helped me that I may fail to list them all. Sheldon Green of the University of British Columbia, Gordon Holloway of the University of New Brunswick, Sukanta K. Dash of The Indian Institute of Technology at Kharagpur, and Pezhman Shirvani of Ford Motor Co. gave many helpful suggestions. Hubert Chanson of the University of Queensland, Frank J. Cunha of Pratt&Whitney, Samuel Schweighart of Terrafugia Inc., Mark Spear of the Woods Hole Oceanographic Institution, Keith Hanna of ANSYS Inc., Elena Mejia of the Jet Propulsion Laboratory, Anne Staack of SkySails, Inc., and Ellen Emerson White provided great new images. Samuel S. Sih of Walla Walla College, Timothy Singler of SUNY Binghamton, Saeed Moaveni of Minnesota State University, and John Borg of Marquette University were especially helpful with the solutions manual.

The following prereviewers gave many excellent suggestions for improving the manuscript: Rolando Bravo of Southern Illinois University; Joshua B. Kollat of Penn State University; Daniel Maynes of Brigham Young University; Joseph Schaefer of Iowa State University; and Xiangchun Xuan of Clemson University.

In preparation, the writer got stuck on Chapter 3 but was rescued by the following reviewers: Serhiy Yarusevych of the University of Waterloo; H. Pirouz Kavehpour and Jeff Eldredge of the University of California, Los Angeles; Rayhaneh Akhavan of the University of Michigan; Soyoung Steve Cha of the University of Illinois, Chicago; Georgia Richardson of the University of Alabama; Krishan Bhatia of Rowan University; Hugh Coleman of the University of Alabama-Huntsville; D.W. Ostendorf of the University of Massachusetts; and Donna Meyer of the University of Rhode Island. The writer continues to be indebted to many others who have reviewed this book over the various years and editions.

Many other reviewers and correspondents gave good suggestions, encouragement, corrections, and materials: Elizabeth J. Kenyon of MathWorks; Juan R. Cruz of NASA Langley Research Center; LiKai Li of University of Science and Technology of China; Tom Robbins of National Instruments; Tapan K. Sengupta of the Indian Institute of Technology at Kanpur; Paulo Vatavuk of Unicamp University; Andris Skattebo of Scand-power A/S; Jeffrey S. Allen of Michigan Technological University; Peter R. Spedding of Queen's University, Belfast, Northern Ireland; Iskender Sahin of Western Michigan University; Michael K. Dailey of General Motors; Cristina L. Archer of Stanford University; Paul F. Jacobs of Technology Development Associates; Rebecca Cullion-Webb of the University of Colorado at Colorado Springs; Debendra K. Das of the University of Alaska Fairbanks; Kevin O'Sullivan and Matthew Lutts of the Associated


Press; Lennart Lüttig and Nina Koliha of REpower Systems AG, Hamburg, Germany; Chi-Yang Cheng of ANSYS Inc.; Debabrata Dasgupta of The Indian Institute of Technology at Kharagpur; Fabian Anselmet of the Institut de Recherche sur les Phenomenes Hors Equilibre, Marseilles; David Chelidze, Richard Lessmann, Donna Meyer, Arun Shukla, Peter Larsen, and Malcolm Spaulding of the University of Rhode Island; Craig Swanson of Applied Science Associates, Inc.; Jim Smay of Oklahoma State University; Deborah Pence of Oregon State University; Eric Braschoss of Philadelphia, PA.; and Dale Hart of Louisiana Tech University.

The McGraw-Hill staff was, as usual, enormously helpful. Many thanks are due to Bill Stenquist, Lora Kalb-Neyens, Curt Reynolds, John Leland, Jane Mohr, Brenda Rolwes, as well as all those who worked on previous editions.

Finally, the continuing support and encouragement of my wife and family are, as always, much appreciated. Special thanks are due to our dog, Sadie, and our cats, Cole and Kerry.

*This page intentionally left blank*

# Fluid Mechanics

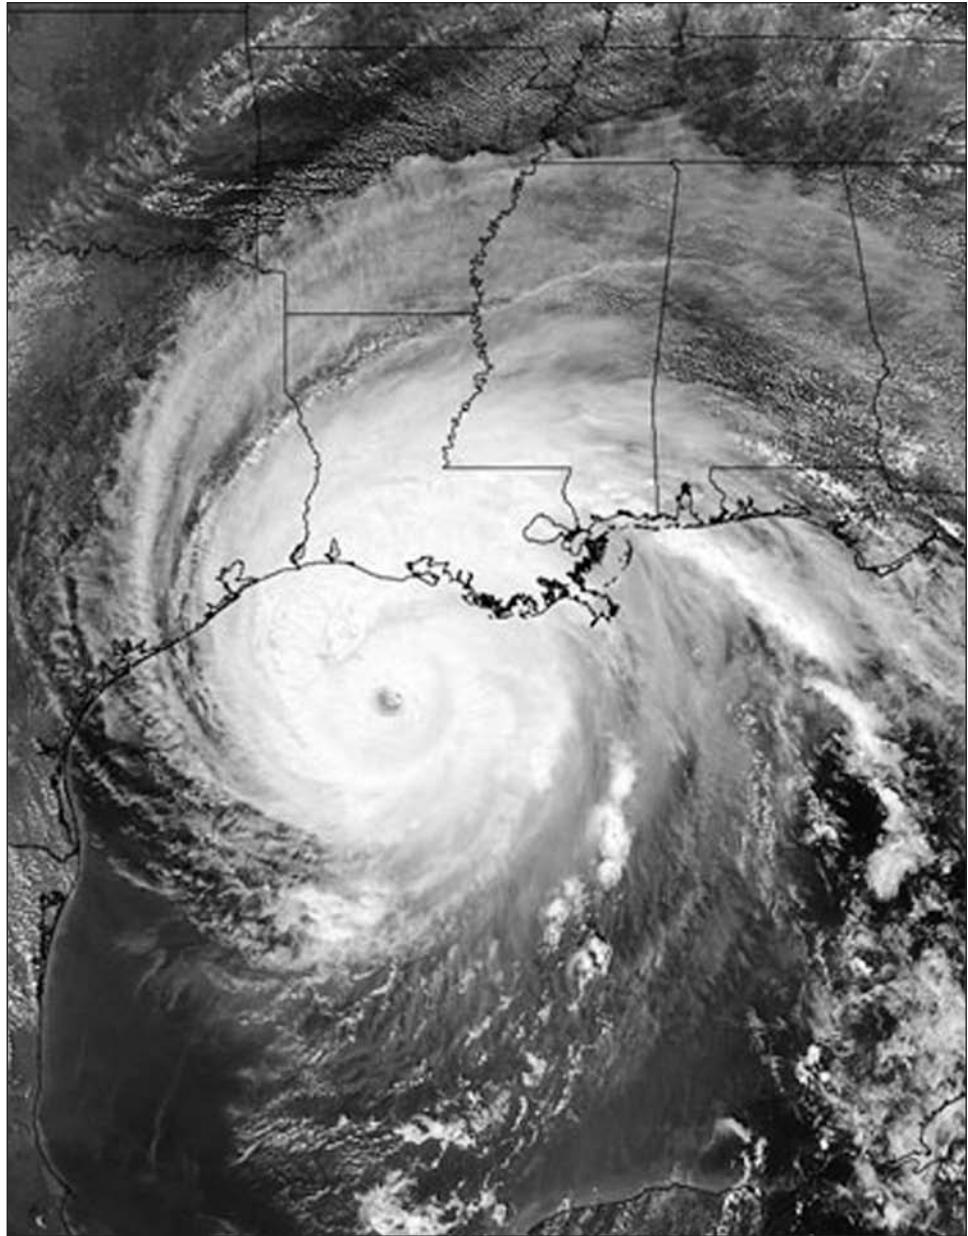

Hurricane Rita in the Gulf of Mexico, Sept. 22, 2005. Rita made landfall at the Texas-Louisiana border and caused billions of dollars in wind and flooding damage. Though more dramatic than typical applications in this text, Rita is a true fluid flow, strongly influenced by the earth's rotation and the ocean temperature. (*Photo courtesy of NASA.*)

# Chapter 1

## Introduction

### 1.1 Preliminary Remarks

Fluid mechanics is the study of fluids either in motion (*fluid dynamics*) or at rest (*fluid statics*). Both gases and liquids are classified as fluids, and the number of fluid engineering applications is enormous: breathing, blood flow, swimming, pumps, fans, turbines, airplanes, ships, rivers, windmills, pipes, missiles, icebergs, engines, filters, jets, and sprinklers, to name a few. When you think about it, almost everything on this planet either is a fluid or moves within or near a fluid.

The essence of the subject of fluid flow is a judicious compromise between theory and experiment. Since fluid flow is a branch of mechanics, it satisfies a set of well-documented basic laws, and thus a great deal of theoretical treatment is available. However, the theory is often frustrating because it applies mainly to idealized situations, which may be invalid in practical problems. The two chief obstacles to a workable theory are geometry and viscosity. The basic equations of fluid motion (Chap. 4) are too difficult to enable the analyst to attack arbitrary geometric configurations. Thus most textbooks concentrate on flat plates, circular pipes, and other easy geometries. It is possible to apply numerical computer techniques to complex geometries, and specialized textbooks are now available to explain the new *computational fluid dynamics* (CFD) approximations and methods [1–4].<sup>1</sup> This book will present many theoretical results while keeping their limitations in mind.

The second obstacle to a workable theory is the action of viscosity, which can be neglected only in certain idealized flows (Chap. 8). First, viscosity increases the difficulty of the basic equations, although the boundary-layer approximation found by Ludwig Prandtl in 1904 (Chap. 7) has greatly simplified viscous-flow analyses. Second, viscosity has a destabilizing effect on all fluids, giving rise, at frustratingly small velocities, to a disorderly, random phenomenon called *turbulence*. The theory of turbulent flow is crude and heavily backed up by experiment (Chap. 6), yet it can be quite serviceable as an engineering estimate. This textbook only introduces the standard experimental correlations for turbulent time-mean flow. Meanwhile, there are advanced texts on both time-mean *turbulence* and *turbulence modeling* [5, 6] and on the newer, computer-intensive *direct numerical simulation* (DNS) of fluctuating turbulence [7, 8].

<sup>1</sup>Numbered references appear at the end of each chapter.

Thus there is theory available for fluid flow problems, but in all cases it should be backed up by experiment. Often the experimental data provide the main source of information about specific flows, such as the drag and lift of immersed bodies (Chap. 7). Fortunately, fluid mechanics is a highly visual subject, with good instrumentation [9–11], and the use of dimensional analysis and modeling concepts (Chap. 5) is widespread. Thus experimentation provides a natural and easy complement to the theory. You should keep in mind that theory and experiment should go hand in hand in all studies of fluid mechanics.

## 1.2 History and Scope of Fluid Mechanics



**Fig. 1.1** Leonhard Euler (1707–1783) was the greatest mathematician of the eighteenth century and used Newton's calculus to develop and solve the equations of motion of inviscid flow. He published over 800 books and papers. [Courtesy of the School of Mathematics and Statistics, University of St Andrew, Scotland.]

Like most scientific disciplines, fluid mechanics has a history of erratically occurring early achievements, then an intermediate era of steady fundamental discoveries in the eighteenth and nineteenth centuries, leading to the twenty-first-century era of “modern practice,” as we self-centeredly term our limited but up-to-date knowledge. Ancient civilizations had enough knowledge to solve certain flow problems. Sailing ships with oars and irrigation systems were both known in prehistoric times. The Greeks produced quantitative information. Archimedes and Hero of Alexandria both postulated the parallelogram law for addition of vectors in the third century B.C. Archimedes (285–212 B.C.) formulated the laws of buoyancy and applied them to floating and submerged bodies, actually deriving a form of the differential calculus as part of the analysis. The Romans built extensive aqueduct systems in the fourth century B.C. but left no records showing any quantitative knowledge of design principles.

From the birth of Christ to the Renaissance there was a steady improvement in the design of such flow systems as ships and canals and water conduits but no recorded evidence of fundamental improvements in flow analysis. Then Leonardo da Vinci (1452–1519) stated the equation of conservation of mass in one-dimensional steady flow. Leonardo was an excellent experimentalist, and his notes contain accurate descriptions of waves, jets, hydraulic jumps, eddy formation, and both low-drag (streamlined) and high-drag (parachute) designs. A Frenchman, Edme Mariotte (1620–1684), built the first wind tunnel and tested models in it.

Problems involving the momentum of fluids could finally be analyzed after Isaac Newton (1642–1727) postulated his laws of motion and the law of viscosity of the linear fluids now called newtonian. The theory first yielded to the assumption of a “perfect” or frictionless fluid, and eighteenth-century mathematicians (Daniel Bernoulli, Leonhard Euler, Jean d'Alembert, Joseph-Louis Lagrange, and Pierre-Simon Laplace) produced many beautiful solutions of frictionless-flow problems. Euler, Fig. 1.1, developed both the differential equations of motion and their integrated form, now called the Bernoulli equation. D'Alembert used them to show his famous paradox: that a body immersed in a frictionless fluid has zero drag. These beautiful results amounted to overkill, since perfect-fluid assumptions have very limited application in practice and most engineering flows are dominated by the effects of viscosity. Engineers began to reject what they regarded as a totally unrealistic theory and developed the science of *hydraulics*, relying almost entirely on experiment. Such experimentalists as Chézy, Pitot, Borda, Weber, Francis, Hagen, Poiseuille, Darcy, Manning, Bazin, and Weisbach produced data on a variety of flows such as open channels, ship resistance, pipe flows, waves, and turbines. All too often the data were used in raw form without regard to the fundamental physics of flow.



**Fig. 1.2** Ludwig Prandtl (1875–1953), often called the “father of modern fluid mechanics” [15], developed boundary layer theory and many other innovative analyses. He and his students were pioneers in flow visualization techniques. [*Aufnahme von Fr. Struckmeyer, Göttingen, courtesy AIP Emilio Segré Visual Archives, Lande Collection.*]

At the end of the nineteenth century, unification between experimental *hydraulics* and theoretical *hydrodynamics* finally began. William Froude (1810–1879) and his son Robert (1846–1924) developed laws of model testing; Lord Rayleigh (1842–1919) proposed the technique of dimensional analysis; and Osborne Reynolds (1842–1912) published the classic pipe experiment in 1883, which showed the importance of the dimensionless Reynolds number named after him. Meanwhile, viscous-flow theory was available but unexploited, since Navier (1785–1836) and Stokes (1819–1903) had successfully added newtonian viscous terms to the equations of motion. The resulting Navier-Stokes equations were too difficult to analyze for arbitrary flows. Then, in 1904, a German engineer, Ludwig Prandtl (1875–1953), Fig. 1.2, published perhaps the most important paper ever written on fluid mechanics. Prandtl pointed out that fluid flows with small viscosity, such as water flows and airflows, can be divided into a thin viscous layer, or *boundary layer*, near solid surfaces and interfaces, patched onto a nearly inviscid outer layer, where the Euler and Bernoulli equations apply. Boundary-layer theory has proved to be a very important tool in modern flow analysis. The twentieth-century foundations for the present state of the art in fluid mechanics were laid in a series of broad-based experiments and theories by Prandtl and his two chief friendly competitors, Theodore von Kármán (1881–1963) and Sir Geoffrey I. Taylor (1886–1975). Many of the results sketched here from a historical point of view will, of course, be discussed in this textbook. More historical details can be found in Refs. 12 to 14.

The second half of the twentieth century introduced a new tool: Computational Fluid Dynamics (CFD). The earliest paper on the subject known to this writer was by A. Thom in 1933 [47], a laborious, but accurate, hand calculation of flow past a cylinder at low Reynolds numbers. Commercial digital computers became available in the 1950s, and personal computers in the 1970s, bringing CFD into adulthood. A legendary first textbook was by Patankar [3]. Presently, with increases in computer speed and memory, almost any laminar flow can be modeled accurately. Turbulent flow is still calculated with empirical models, but Direct Numerical Simulation [7, 8] is possible for low Reynolds numbers. Another five orders of magnitude in computer speed are needed before general turbulent flows can be calculated. That may not be possible, due to size limits of nano- and pico-elements. But, if general DNS develops, Gad-el-Hak [14] raises the prospect of a shocking future: all of fluid mechanics reduced to a black box, with no real need for teachers, researchers, writers, or fluids engineers.

Since the earth is 75 percent covered with water and 100 percent covered with air, the scope of fluid mechanics is vast and touches nearly every human endeavor. The sciences of meteorology, physical oceanography, and hydrology are concerned with naturally occurring fluid flows, as are medical studies of breathing and blood circulation. All transportation problems involve fluid motion, with well-developed specialties in aerodynamics of aircraft and rockets and in naval hydrodynamics of ships and submarines. Almost all our electric energy is developed either from water flow or from steam flow through turbine generators. All combustion problems involve fluid motion as do the more classic problems of irrigation, flood control, water supply, sewage disposal, projectile motion, and oil and gas pipelines. The aim of this book is to present enough fundamental concepts and practical applications in fluid mechanics to prepare you to move smoothly into any of these specialized fields of the science of flow—and then be prepared to move out again as new technologies develop.

### 1.3 Problem-Solving Techniques

Fluid flow analysis is packed with problems to be solved. The present text has more than 1700 problem assignments. Solving a large number of these is a key to learning the subject. One must deal with equations, data, tables, assumptions, unit systems, and solution schemes. The degree of difficulty will vary, and we urge you to sample the whole spectrum of assignments, with or without the Answers in the Appendix. Here are the recommended steps for problem solution:


1. Read the problem and restate it with your summary of the results desired.
2. From tables or charts, gather the needed property data: density, viscosity, etc.
3. Make sure you understand what is *asked*. Students are apt to answer the wrong question—for example, pressure instead of pressure gradient, lift force instead of drag force, or mass flow instead of volume flow. Read the problem carefully.
4. Make a detailed, *labeled* sketch of the system or control volume needed.
5. Think carefully and list your *assumptions*. You must decide if the flow is steady or unsteady, compressible or incompressible, viscous or inviscid, and whether a control volume or partial differential equations are needed.
6. Find an algebraic solution if possible. Then, if a numerical value is needed, use either the SI or BG unit systems, to be reviewed in Sec. 1.6.
7. Report your solution, *labeled*, with the proper units and the proper number of significant figures (usually two or three) that the data uncertainty allows.

We shall follow these steps, where appropriate, in our example problems.

### 1.4 The Concept of a Fluid

From the point of view of fluid mechanics, all matter consists of only two states, fluid and solid. The difference between the two is perfectly obvious to the layperson, and it is an interesting exercise to ask a layperson to put this difference into words. The technical distinction lies with the reaction of the two to an applied shear or tangential stress. *A solid can resist a shear stress by a static deflection; a fluid cannot*. Any shear stress applied to a fluid, no matter how small, will result in motion of that fluid. The fluid moves and deforms continuously as long as the shear stress is applied. As a corollary, we can say that a fluid at rest must be in a state of zero shear stress, a state often called the hydrostatic stress condition in structural analysis. In this condition, Mohr's circle for stress reduces to a point, and there is no shear stress on any plane cut through the element under stress.

Given this definition of a fluid, every layperson also knows that there are two classes of fluids, *liquids* and *gases*. Again the distinction is a technical one concerning the effect of cohesive forces. A liquid, being composed of relatively close-packed molecules with strong cohesive forces, tends to retain its volume and will form a free surface in a gravitational field if unconfined from above. Free-surface flows are dominated by gravitational effects and are studied in Chaps. 5 and 10. Since gas molecules are widely spaced with negligible cohesive forces, a gas is free to expand until it encounters confining walls. A gas has no definite volume, and when left to itself without confinement, a gas forms an atmosphere that is essentially hydrostatic. The hydrostatic behavior of liquids and gases is taken up in Chap. 2. Gases cannot form a free surface, and thus gas flows are rarely concerned with gravitational effects other than buoyancy.

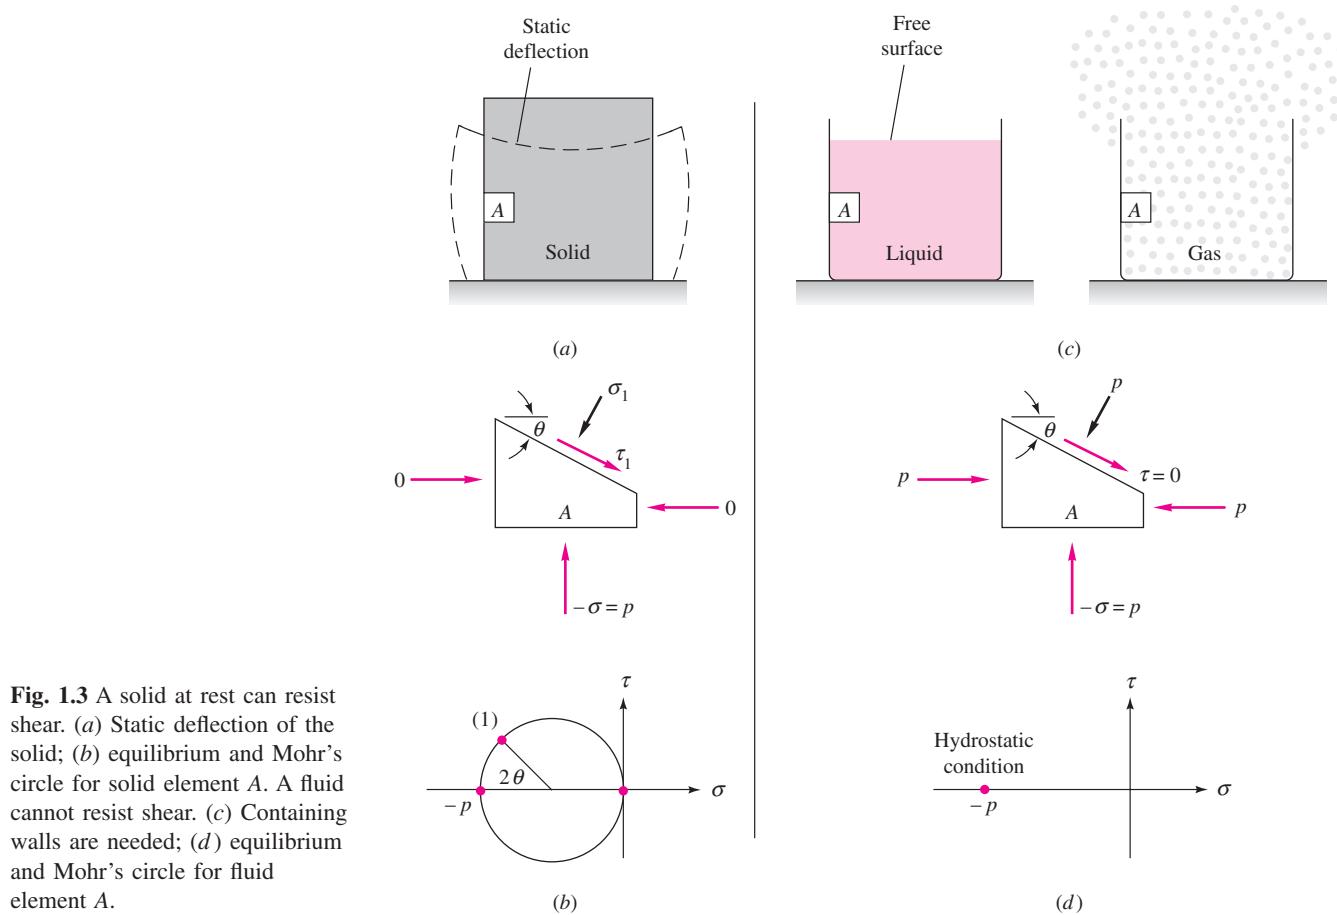

**Fig. 1.3** A solid at rest can resist shear. (a) Static deflection of the solid; (b) equilibrium and Mohr's circle for solid element A. A fluid cannot resist shear. (c) Containing walls are needed; (d) equilibrium and Mohr's circle for fluid element A.

Figure 1.3 illustrates a solid block resting on a rigid plane and stressed by its own weight. The solid sags into a static deflection, shown as a highly exaggerated dashed line, resisting shear without flow. A free-body diagram of element A on the side of the block shows that there is shear in the block along a plane cut at an angle  $\theta$  through A. Since the block sides are unsupported, element A has zero stress on the left and right sides and compression stress  $\sigma = -p$  on the top and bottom. Mohr's circle does not reduce to a point, and there is nonzero shear stress in the block.

By contrast, the liquid and gas at rest in Fig. 1.3 require the supporting walls in order to eliminate shear stress. The walls exert a compression stress of  $-p$  and reduce Mohr's circle to a point with zero shear everywhere—that is, the hydrostatic condition. The liquid retains its volume and forms a free surface in the container. If the walls are removed, shear develops in the liquid and a big splash results. If the container is tilted, shear again develops, waves form, and the free surface seeks a horizontal configuration, pouring out over the lip if necessary. Meanwhile, the gas is unrestrained and expands out of the container, filling all available space. Element A in the gas is also hydrostatic and exerts a compression stress  $-p$  on the walls.


In the previous discussion, clear decisions could be made about solids, liquids, and gases. Most engineering fluid mechanics problems deal with these clear cases—that is, the common liquids, such as water, oil, mercury, gasoline, and alcohol, and the common gases, such as air, helium, hydrogen, and steam, in their common temperature and pressure ranges. There are many borderline cases, however, of which you should be aware. Some apparently “solid” substances such as asphalt and lead resist shear stress for short periods but actually deform slowly and exhibit definite fluid behavior over long periods. Other substances, notably colloid and slurry mixtures, resist small shear stresses but “yield” at large stress and begin to flow as fluids do. Specialized textbooks are devoted to this study of more general deformation and flow, a field called *rheology* [16]. Also, liquids and gases can coexist in two-phase mixtures, such as steam–water mixtures or water with entrapped air bubbles. Specialized textbooks present the analysis of such *multiphase flows* [17]. Finally, in some situations the distinction between a liquid and a gas blurs. This is the case at temperatures and pressures above the so-called *critical point* of a substance, where only a single phase exists, primarily resembling a gas. As pressure increases far above the critical point, the gaslike substance becomes so dense that there is some resemblance to a liquid and the usual thermodynamic approximations like the perfect-gas law become inaccurate. The critical temperature and pressure of water are  $T_c = 647\text{ K}$  and  $p_c = 219\text{ atm}$  (atmosphere<sup>2</sup>) so that typical problems involving water and steam are below the critical point. Air, being a mixture of gases, has no distinct critical point, but its principal component, nitrogen, has  $T_c = 126\text{ K}$  and  $p_c = 34\text{ atm}$ . Thus typical problems involving air are in the range of high temperature and low pressure where air is distinctly and definitely a gas. This text will be concerned solely with clearly identifiable liquids and gases, and the borderline cases just discussed will be beyond our scope.

## 1.5 The Fluid as a Continuum

We have already used technical terms such as *fluid pressure* and *density* without a rigorous discussion of their definition. As far as we know, fluids are aggregations of molecules, widely spaced for a gas, closely spaced for a liquid. The distance between molecules is very large compared with the molecular diameter. The molecules are not fixed in a lattice but move about freely relative to each other. Thus fluid density, or mass per unit volume, has no precise meaning because the number of molecules occupying a given volume continually changes. This effect becomes unimportant if the unit volume is large compared with, say, the cube of the molecular spacing, when the number of molecules within the volume will remain nearly constant in spite of the enormous interchange of particles across the boundaries. If, however, the chosen unit volume is too large, there could be a noticeable variation in the bulk aggregation of the particles. This situation is illustrated in Fig. 1.4, where the “density” as calculated from molecular mass  $\delta m$  within a given volume  $\delta V$  is plotted versus the size of the unit volume. There is a limiting volume  $\delta V^*$  below which molecular variations may be important and above which aggregate variations may be important. The *density*  $\rho$  of a fluid is best defined as

$$\rho = \lim_{\delta V \rightarrow \delta V^*} \frac{\delta m}{\delta V} \quad (1.1)$$

<sup>2</sup>One atmosphere equals  $2116\text{ lbf/ft}^2 = 101,300\text{ Pa}$ .

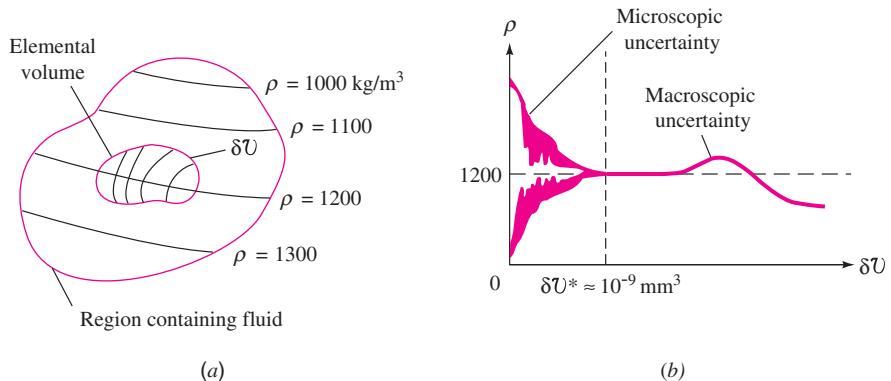

**Fig. 1.4** The limit definition of continuum fluid density: (a) an elemental volume in a fluid region of variable continuum density; (b) calculated density versus size of the elemental volume.

The limiting volume  $\delta V^*$  is about  $10^{-9} \text{ mm}^3$  for all liquids and for gases at atmospheric pressure. For example,  $10^{-9} \text{ mm}^3$  of air at standard conditions contains approximately  $3 \times 10^7$  molecules, which is sufficient to define a nearly constant density according to Eq. (1.1). Most engineering problems are concerned with physical dimensions much larger than this limiting volume, so that density is essentially a point function and fluid properties can be thought of as varying continually in space, as sketched in Fig. 1.4a. Such a fluid is called a *continuum*, which simply means that its variation in properties is so smooth that differential calculus can be used to analyze the substance. We shall assume that continuum calculus is valid for all the analyses in this book. Again there are borderline cases for gases at such low pressures that molecular spacing and mean free path<sup>3</sup> are comparable to, or larger than, the physical size of the system. This requires that the continuum approximation be dropped in favor of a molecular theory of rarefied gas flow [18]. In principle, all fluid mechanics problems can be attacked from the molecular viewpoint, but no such attempt will be made here. Note that the use of continuum calculus does not preclude the possibility of discontinuous jumps in fluid properties across a free surface or fluid interface or across a shock wave in a compressible fluid (Chap. 9). Our calculus in analyzing fluid flow must be flexible enough to handle discontinuous boundary conditions.

## 1.6 Dimensions and Units

A *dimension* is the measure by which a physical variable is expressed quantitatively. A *unit* is a particular way of attaching a number to the quantitative dimension. Thus length is a dimension associated with such variables as distance, displacement, width, deflection, and height, while centimeters and inches are both numerical units for expressing length. Dimension is a powerful concept about which a splendid tool called *dimensional analysis* has been developed (Chap. 5), while units are the numerical quantity that the customer wants as the final answer.

In 1872 an international meeting in France proposed a treaty called the Metric Convention, which was signed in 1875 by 17 countries including the United States. It was an improvement over British systems because its use of base 10 is the foundation of our number system, learned from childhood by all. Problems still remained because

<sup>3</sup>The mean distance traveled by molecules between collisions (see Prob. P1.5).

**Table 1.1** Primary Dimensions in SI and BG Systems

Primary dimension	SI unit	BG unit	Conversion factor
Mass $\{M\}$	Kilogram (kg)	Slug	1 slug = 14.5939 kg
Length $\{L\}$	Meter (m)	Foot (ft)	1 ft = 0.3048 m
Time $\{T\}$	Second (s)	Second (s)	1 s = 1 s
Temperature $\{\Theta\}$	Kelvin (K)	Rankine ( $^{\circ}$ R)	1 K = $1.8^{\circ}$ R

even the metric countries differed in their use of kiloponds instead of dynes or newtons, kilograms instead of grams, or calories instead of joules. To standardize the metric system, a General Conference of Weights and Measures, attended in 1960 by 40 countries, proposed the *International System of Units* (SI). We are now undergoing a painful period of transition to SI, an adjustment that may take many more years to complete. The professional societies have led the way. Since July 1, 1974, SI units have been required by all papers published by the American Society of Mechanical Engineers, and there is a textbook explaining the SI [19]. The present text will use SI units together with British gravitational (BG) units.

### Primary Dimensions

In fluid mechanics there are only four *primary dimensions* from which all other dimensions can be derived: mass, length, time, and temperature.<sup>4</sup> These dimensions and their units in both systems are given in Table 1.1. Note that the kelvin unit uses no degree symbol. The braces around a symbol like  $\{M\}$  mean “the dimension” of mass. All other variables in fluid mechanics can be expressed in terms of  $\{M\}$ ,  $\{L\}$ ,  $\{T\}$ , and  $\{\Theta\}$ . For example, acceleration has the dimensions  $\{LT^{-2}\}$ . The most crucial of these secondary dimensions is force, which is directly related to mass, length, and time by Newton’s second law. Force equals the time rate of change of momentum or, for constant mass,

$$\mathbf{F} = ma \quad (1.2)$$

From this we see that, dimensionally,  $\{F\} = \{MLT^{-2}\}$ .

### The International System (SI)

The use of a constant of proportionality in Newton’s law, Eq. (1.2), is avoided by defining the force unit exactly in terms of the other basic units. In the SI system, the basic units are newtons  $\{F\}$ , kilograms  $\{M\}$ , meters  $\{L\}$ , and seconds  $\{T\}$ . We define

$$1 \text{ newton of force} = 1 \text{ N} = 1 \text{ kg} \cdot 1 \text{ m/s}^2$$

The newton is a relatively small force, about the weight of an apple (0.225 lbf). In addition, the basic unit of temperature  $\{\Theta\}$  in the SI system is the degree Kelvin, K. Use of these SI units (N, kg, m, s, K) will require no conversion factors in our equations.

### The British Gravitational (BG) System

In the BG system also, a constant of proportionality in Eq. (1.2) is avoided by defining the force unit exactly in terms of the other basic units. In the BG system, the basic units are pound-force  $\{F\}$ , slugs  $\{M\}$ , feet  $\{L\}$ , and seconds  $\{T\}$ . We define

$$1 \text{ pound of force} = 1 \text{ lbf} = 1 \text{ slug} \cdot 1 \text{ ft/s}^2$$

<sup>4</sup>If electromagnetic effects are important, a fifth primary dimension must be included, electric current  $\{I\}$ , whose SI unit is the ampere (A).

One lbf  $\approx 4.4482$  N and approximates the weight of four apples. We will use the abbreviation *lbf* for pound-force and *lbm* for pound-mass. The slug is a rather hefty mass, equal to 32.174 lbm. The basic unit of temperature  $\{\Theta\}$  in the BG system is the degree Rankine,  $^{\circ}\text{R}$ . Recall that a temperature difference  $1\text{ K} = 1.8^{\circ}\text{R}$ . Use of these BG units (lbf, slug, ft, s,  $^{\circ}\text{R}$ ) will require no conversion factors in our equations.

### Other Unit Systems

There are other unit systems still in use. At least one needs no proportionality constant: the CGS system (dyne, gram, cm, s, K). However, CGS units are too small for most applications ( $1\text{ dyne} = 10^{-5}\text{ N}$ ) and will not be used here.

In the USA, some still use the English Engineering system, (lbf, lbm, ft, s,  $^{\circ}\text{R}$ ), where the basic mass unit is the *pound of mass*. Newton's law (1.2) must be rewritten:

$$\mathbf{F} = \frac{ma}{g_c}, \quad \text{where } g_c = 32.174 \frac{\text{ft} \cdot \text{lbf}}{\text{lbf} \cdot \text{s}^2} \quad (1.3)$$

The constant of proportionality,  $g_c$ , has both dimensions and a numerical value not equal to 1.0. The present text uses only the SI and BG systems and will not solve problems or examples in the English Engineering system. Because Americans still use them, a few problems in the text will be stated in truly awkward units: acres, gallons, ounces, or miles. Your assignment will be to convert these and solve in the SI or BG systems.

### The Principle of Dimensional Homogeneity

In engineering and science, *all* equations must be *dimensionally homogeneous*, that is, each additive term in an equation must have the same dimensions. For example, take Bernoulli's incompressible equation, to be studied and used throughout this text:

$$p + \frac{1}{2}\rho V^2 + \rho g Z = \text{constant}$$

Each and every term in this equation *must* have dimensions of pressure  $\{ML^{-1}T^{-2}\}$ . We will examine the dimensional homogeneity of this equation in detail in Ex. 1.3.

A list of some important secondary variables in fluid mechanics, with dimensions derived as combinations of the four primary dimensions, is given in Table 1.2. A more complete list of conversion factors is given in App. C.

**Table 1.2** Secondary Dimensions in Fluid Mechanics

Secondary dimension	SI unit	BG unit	Conversion factor
Area $\{L^2\}$	$\text{m}^2$	$\text{ft}^2$	$1\text{ m}^2 = 10.764\text{ ft}^2$
Volume $\{L^3\}$	$\text{m}^3$	$\text{ft}^3$	$1\text{ m}^3 = 35.315\text{ ft}^3$
Velocity $\{LT^{-1}\}$	$\text{m/s}$	$\text{ft/s}$	$1\text{ ft/s} = 0.3048\text{ m/s}$
Acceleration $\{LT^{-2}\}$	$\text{m/s}^2$	$\text{ft/s}^2$	$1\text{ ft/s}^2 = 0.3048\text{ m/s}^2$
Pressure or stress $\{ML^{-1}T^{-2}\}$	$\text{Pa} = \text{N/m}^2$	$\text{lbf/ft}^2$	$1\text{ lbf/ft}^2 = 47.88\text{ Pa}$
Angular velocity $\{T^{-1}\}$	$\text{s}^{-1}$	$\text{s}^{-1}$	$1\text{ s}^{-1} = 1\text{ s}^{-1}$
Energy, heat, work $\{ML^2T^{-2}\}$	$\text{J} = \text{N} \cdot \text{m}$	$\text{ft} \cdot \text{lbf}$	$1\text{ ft} \cdot \text{lbf} = 1.3558\text{ J}$
Power $\{ML^2T^{-3}\}$	$\text{W} = \text{J/s}$	$\text{ft} \cdot \text{lbf/s}$	$1\text{ ft} \cdot \text{lbf/s} = 1.3558\text{ W}$
Density $\{ML^{-3}\}$	$\text{kg/m}^3$	$\text{slugs/ft}^3$	$1\text{ slug/ft}^3 = 515.4\text{ kg/m}^3$
Viscosity $\{ML^{-1}T^{-1}\}$	$\text{kg/(m} \cdot \text{s)}$	$\text{slugs/(ft} \cdot \text{s)}$	$1\text{ slug/(ft} \cdot \text{s)} = 47.88\text{ kg/(m} \cdot \text{s)}$
Specific heat $\{L^2T^{-2}\Theta^{-1}\}$	$\text{m}^2/(\text{s}^2 \cdot \text{K})$	$\text{ft}^2/(\text{s}^2 \cdot {}^{\circ}\text{R})$	$1\text{ m}^2/(\text{s}^2 \cdot \text{K}) = 5.980\text{ ft}^2/(\text{s}^2 \cdot {}^{\circ}\text{R})$

**EXAMPLE 1.1**

A body weighs 1000 lbf when exposed to a standard earth gravity  $g = 32.174 \text{ ft/s}^2$ . (a) What is its mass in kg? (b) What will the weight of this body be in N if it is exposed to the moon's standard acceleration  $g_{\text{moon}} = 1.62 \text{ m/s}^2$ ? (c) How fast will the body accelerate if a net force of 400 lbf is applied to it on the moon or on the earth?

**Solution**

We need to find the (a) mass; (b) weight on the moon; and (c) acceleration of this body. This is a fairly simple example of conversion factors for differing unit systems. No property data is needed. The example is too low-level for a sketch.

**Part (a)**

Newton's law (1.2) holds with known weight and gravitational acceleration. Solve for  $m$ :

$$F = W = 1000 \text{ lbf} = mg = (m)(32.174 \text{ ft/s}^2), \quad \text{or} \quad m = \frac{1000 \text{ lbf}}{32.174 \text{ ft/s}^2} = 31.08 \text{ slugs}$$

Convert this to kilograms:

$$m = 31.08 \text{ slugs} = (31.08 \text{ slugs})(14.5939 \text{ kg/slug}) = 454 \text{ kg} \quad \text{Ans. (a)}$$

**Part (b)**

The mass of the body remains 454 kg regardless of its location. Equation (1.2) applies with a new gravitational acceleration and hence a new weight:

$$F = W_{\text{moon}} = mg_{\text{moon}} = (454 \text{ kg})(1.62 \text{ m/s}^2) = 735 \text{ N} \quad \text{Ans. (b)}$$

**Part (c)**

This part does not involve weight or gravity or location. It is simply an application of Newton's law with a known mass and known force:

$$F = 400 \text{ lbf} = ma = (31.08 \text{ slugs}) a$$

Solve for

$$a = \frac{400 \text{ lbf}}{31.08 \text{ slugs}} = 12.87 \frac{\text{ft}}{\text{s}^2} \left( 0.3048 \frac{\text{m}}{\text{ft}} \right) = 3.92 \frac{\text{m}}{\text{s}^2} \quad \text{Ans. (c)}$$

*Comment (c):* This acceleration would be the same on the earth or moon or anywhere.

Many data in the literature are reported in inconvenient or arcane units suitable only to some industry or specialty or country. The engineer should convert these data to the SI or BG system before using them. This requires the systematic application of conversion factors, as in the following example.

**EXAMPLE 1.2**

Industries involved in viscosity measurement [27, 36] continue to use the CGS system of units, since centimeters and grams yield convenient numbers for many fluids. The absolute viscosity ( $\mu$ ) unit is the *poise*, named after J. L. M. Poiseuille, a French physician who in 1840 performed pioneering experiments on water flow in pipes; 1 poise = 1 g/(cm-s). The kinematic viscosity ( $\nu$ ) unit is the *stokes*, named after G. G. Stokes, a British physicist who

in 1845 helped develop the basic partial differential equations of fluid momentum; 1 stokes = 1 cm<sup>2</sup>/s. Water at 20°C has  $\mu \approx 0.01$  poise and also  $\nu \approx 0.01$  stokes. Express these results in (a) SI and (b) BG units.

### Solution

#### Part (a)

- *Approach:* Systematically change grams to kg or slugs and change centimeters to meters or feet.
- *Property values:* Given  $\mu = 0.01$  g/(cm·s) and  $\nu = 0.01$  cm<sup>2</sup>/s.
- *Solution steps:* (a) For conversion to SI units,

$$\mu = 0.01 \frac{\text{g}}{\text{cm} \cdot \text{s}} = 0.01 \frac{\text{g}(1 \text{ kg}/1000\text{g})}{\text{cm}(0.01 \text{ m}/\text{cm})} = 0.001 \frac{\text{kg}}{\text{m} \cdot \text{s}}$$

$$\nu = 0.01 \frac{\text{cm}^2}{\text{s}} = 0.01 \frac{\text{cm}^2(0.01 \text{ m}/\text{cm})^2}{\text{s}} = 0.000001 \frac{\text{m}^2}{\text{s}} \quad \text{Ans. (a)}$$

#### Part (b)

- For conversion to BG units

$$\mu = 0.01 \frac{\text{g}}{\text{cm} \cdot \text{s}} = 0.01 \frac{\text{g}(1 \text{ kg}/1000 \text{ g})(1 \text{ slug}/14.5939 \text{ kg})}{(0.01 \text{ m}/\text{cm})(1 \text{ ft}/0.3048 \text{ m})} = 0.0000209 \frac{\text{slug}}{\text{ft} \cdot \text{s}}$$

$$\nu = 0.01 \frac{\text{cm}^2}{\text{s}} = 0.01 \frac{\text{cm}^2(0.01 \text{ m}/\text{cm})^2(1 \text{ ft}/0.3048 \text{ m})^2}{\text{s}} = 0.0000108 \frac{\text{ft}^2}{\text{s}} \quad \text{Ans. (b)}$$

- *Comments:* This was a laborious conversion that could have been shortened by using the direct viscosity conversion factors in App. C. For example,  $\mu_{\text{BG}} = \mu_{\text{SI}}/47.88$ .

We repeat our advice: Faced with data in unusual units, convert them immediately to either SI or BG units because (1) it is more professional and (2) theoretical equations in fluid mechanics are *dimensionally consistent* and require no further conversion factors when these two fundamental unit systems are used, as the following example shows.

### EXAMPLE 1.3

A useful theoretical equation for computing the relation between pressure, velocity, and altitude in a steady flow of a nearly inviscid, nearly incompressible fluid with negligible heat transfer and shaft work<sup>5</sup> is the *Bernoulli relation*, named after Daniel Bernoulli, who published a hydrodynamics textbook in 1738:

$$p_0 = p + \frac{1}{2}\rho V^2 + \rho g Z \quad (1)$$

where  $p_0$  = stagnation pressure

$p$  = pressure in moving fluid

$V$  = velocity

$\rho$  = density

$Z$  = altitude

$g$  = gravitational acceleration

<sup>5</sup>That's an awful lot of assumptions, which need further study in Chap. 3.

(a) Show that Eq. (1) satisfies the principle of dimensional homogeneity, which states that all additive terms in a physical equation must have the same dimensions. (b) Show that consistent units result without additional conversion factors in SI units. (c) Repeat (b) for BG units.

### Solution

#### Part (a)

We can express Eq. (1) dimensionally, using braces, by entering the dimensions of each term from Table 1.2:

$$\begin{aligned}\{ML^{-1}T^{-2}\} &= \{ML^{-1}T^{-2}\} + \{ML^{-3}\}\{L^2T^{-2}\} + \{ML^{-3}\}\{LT^{-2}\}\{L\} \\ &= \{ML^{-1}T^{-2}\} \text{ for all terms}\end{aligned}\quad \text{Ans. (a)}$$

#### Part (b)

Enter the SI units for each quantity from Table 1.2:

$$\begin{aligned}\{\text{N/m}^2\} &= \{\text{N/m}^2\} + \{\text{kg/m}^3\}\{\text{m}^2/\text{s}^2\} + \{\text{kg/m}^3\}\{\text{m/s}^2\}\{\text{m}\} \\ &= \{\text{N/m}^2\} + \{\text{kg}/(\text{m} \cdot \text{s}^2)\}\end{aligned}$$

The right-hand side looks bad until we remember from Eq. (1.3) that  $1 \text{ kg} = 1 \text{ N} \cdot \text{s}^2/\text{m}$ .

$$\{\text{kg}/(\text{m} \cdot \text{s}^2)\} = \frac{\{\text{N} \cdot \text{s}^2/\text{m}\}}{\{\text{m} \cdot \text{s}^2\}} = \{\text{N/m}^2\} \quad \text{Ans. (b)}$$

Thus all terms in Bernoulli's equation will have units of pascals, or newtons per square meter, when SI units are used. No conversion factors are needed, which is true of all theoretical equations in fluid mechanics.

#### Part (c)

Introducing BG units for each term, we have

$$\begin{aligned}\{\text{lbf/ft}^2\} &= \{\text{lbf/ft}^2\} + \{\text{slugs/ft}^3\}\{\text{ft}^2/\text{s}^2\} + \{\text{slugs/ft}^3\}\{\text{ft/s}^2\}\{\text{ft}\} \\ &= \{\text{lbf/ft}^2\} + \{\text{slugs}/(\text{ft} \cdot \text{s}^2)\}\end{aligned}$$

But, from Eq. (1.3),  $1 \text{ slug} = 1 \text{ lbf} \cdot \text{s}^2/\text{ft}$ , so that

$$\{\text{slugs}/(\text{ft} \cdot \text{s}^2)\} = \frac{\{\text{lbf} \cdot \text{s}^2/\text{ft}\}}{\{\text{ft} \cdot \text{s}^2\}} = \{\text{lbf/ft}^2\} \quad \text{Ans. (c)}$$

All terms have the unit of pounds-force per square foot. No conversion factors are needed in the BG system either.

There is still a tendency in English-speaking countries to use pound-force per square inch as a pressure unit because the numbers are more manageable. For example, standard atmospheric pressure is  $14.7 \text{ lbf/in}^2 = 2116 \text{ lbf/ft}^2 = 101,300 \text{ Pa}$ . The pascal is a small unit because the newton is less than  $\frac{1}{4} \text{ lbf}$  and a square meter is a very large area.

### Consistent Units

Note that not only must all (fluid) mechanics equations be dimensionally homogeneous, one must also use *consistent units*; that is, each additive term must have the same units. There is no trouble doing this with the SI and BG systems, as in Example 1.3, but woe unto those who try to mix colloquial English units. For example, in Chap. 9, we often use the assumption of steady adiabatic compressible gas flow:

$$h + \frac{1}{2}V^2 = \text{constant}$$

where  $h$  is the fluid enthalpy and  $V^2/2$  is its kinetic energy per unit mass. Colloquial thermodynamic tables might list  $h$  in units of British thermal units per pound mass (Btu/lb), whereas  $V$  is likely used in ft/s. It is completely erroneous to add Btu/lb to  $\text{ft}^2/\text{s}^2$ . The proper unit for  $h$  in this case is  $\text{ft} \cdot \text{lbf}/\text{slug}$ , which is identical to  $\text{ft}^2/\text{s}^2$ . The conversion factor is  $1 \text{ Btu/lb} \approx 25,040 \text{ ft}^2/\text{s}^2 = 25,040 \text{ ft} \cdot \text{lbf}/\text{slug}$ .

### Homogeneous versus Dimensionally Inconsistent Equations

All theoretical equations in mechanics (and in other physical sciences) are *dimensionally homogeneous*; that is, each additive term in the equation has the same dimensions. However, the reader should be warned that many empirical formulas in the engineering literature, arising primarily from correlations of data, are dimensionally inconsistent. Their units cannot be reconciled simply, and some terms may contain hidden variables. An example is the formula that pipe valve manufacturers cite for liquid volume flow rate  $Q$  ( $\text{m}^3/\text{s}$ ) through a partially open valve:

$$Q = C_V \left( \frac{\Delta p}{SG} \right)^{1/2}$$

where  $\Delta p$  is the pressure drop across the valve and SG is the specific gravity of the liquid (the ratio of its density to that of water). The quantity  $C_V$  is the *valve flow coefficient*, which manufacturers tabulate in their valve brochures. Since SG is dimensionless {1}, we see that this formula is totally inconsistent, with one side being a flow rate  $\{L^3/T\}$  and the other being the square root of a pressure drop  $\{M^{1/2}/L^{1/2}T\}$ . It follows that  $C_V$  must have dimensions, and rather odd ones at that:  $\{L^{7/2}/M^{1/2}\}$ . Nor is the resolution of this discrepancy clear, although one hint is that the values of  $C_V$  in the literature increase nearly as the square of the size of the valve. The presentation of experimental data in homogeneous form is the subject of *dimensional analysis* (Chap. 5). There we shall learn that a homogeneous form for the valve flow relation is

$$Q = C_d A_{\text{opening}} \left( \frac{\Delta p}{\rho} \right)^{1/2}$$

where  $\rho$  is the liquid density and  $A$  the area of the valve opening. The *discharge coefficient*  $C_d$  is dimensionless and changes only moderately with valve size. Please believe—until we establish the fact in Chap. 5—that this latter is a *much* better formulation of the data.

Meanwhile, we conclude that dimensionally inconsistent equations, though they occur in engineering practice, are misleading and vague and even dangerous, in the sense that they are often misused outside their range of applicability.

**Table 1.3 Convenient Prefixes for Engineering Units**

Multiplicative factor	Prefix	Symbol
$10^{12}$	tera	T
$10^9$	giga	G
$10^6$	mega	M
$10^3$	kilo	k
$10^2$	hecto	h
10	deka	da
$10^{-1}$	deci	d
$10^{-2}$	centi	c
$10^{-3}$	milli	m
$10^{-6}$	micro	$\mu$
$10^{-9}$	nano	n
$10^{-12}$	pico	p
$10^{-15}$	femto	f
$10^{-18}$	atto	a

### Convenient Prefixes in Powers of 10

Engineering results often are too small or too large for the common units, with too many zeros one way or the other. For example, to write  $p = 114,000,000 \text{ Pa}$  is long and awkward. Using the prefix “M” to mean  $10^6$ , we convert this to a concise  $p = 114 \text{ MPa}$  (megapascals). Similarly,  $t = 0.000000003 \text{ s}$  is a proofreader’s nightmare compared to the equivalent  $t = 3 \text{ ns}$  (nanoseconds). Such prefixes are common and convenient, in both the SI and BG systems. A complete list is given in Table 1.3.

**EXAMPLE 1.4**

In 1890 Robert Manning, an Irish engineer, proposed the following empirical formula for the average velocity  $V$  in uniform flow due to gravity down an open channel (BG units):

$$V = \frac{1.49}{n} R^{2/3} S^{1/2} \quad (1)$$

where  $R$  = hydraulic radius of channel (Chaps. 6 and 10)

$S$  = channel slope (tangent of angle that bottom makes with horizontal)

$n$  = Manning's roughness factor (Chap. 10)

and  $n$  is a constant for a given surface condition for the walls and bottom of the channel.

(a) Is Manning's formula dimensionally consistent? (b) Equation (1) is commonly taken to be valid in BG units with  $n$  taken as dimensionless. Rewrite it in SI form.

**Solution**

- *Assumption:* The channel slope  $S$  is the tangent of an angle and is thus a dimensionless ratio with the dimensional notation {1}—that is, not containing  $M$ ,  $L$ , or  $T$ .
- *Approach (a):* Rewrite the dimensions of each term in Manning's equation, using brackets {}:

$$\{V\} = \left\{ \frac{1.49}{n} \right\} \{R^{2/3}\} \{S^{1/2}\} \quad \text{or} \quad \left\{ \frac{L}{T} \right\} = \left\{ \frac{1.49}{n} \right\} \{L^{2/3}\} \{1\}$$

This formula is incompatible unless  $\{1.49/n\} = \{L^{1/3}/T\}$ . If  $n$  is dimensionless (and it is never listed with units in textbooks), the number 1.49 must carry the dimensions of  $\{L^{1/3}/T\}$ . *Ans. (a)*

- *Comment (a):* Formulas whose numerical coefficients have units can be disastrous for engineers working in a different system or another fluid. Manning's formula, though popular, is inconsistent both dimensionally and physically and is valid only for water flow with certain wall roughnesses. The effects of water viscosity and density are hidden in the numerical value 1.49.
- *Approach (b):* Part (a) showed that 1.49 has dimensions. If the formula is valid in BG units, then it must equal  $1.49 \text{ ft}^{1/3}/\text{s}$ . By using the SI conversion for length, we obtain

$$(1.49 \text{ ft}^{1/3}/\text{s})(0.3048 \text{ m}/\text{ft})^{1/3} = 1.00 \text{ m}^{1/3}/\text{s}$$

Therefore Manning's inconsistent formula changes form when converted to the SI system:

$$\text{SI units: } V = \frac{1.0}{n} R^{2/3} S^{1/2} \quad \text{Ans. (b)}$$

with  $R$  in meters and  $V$  in meters per second.

- *Comment (b):* Actually, we misled you: This is the way Manning, a metric user, first proposed the formula. It was later converted to BG units. Such dimensionally inconsistent formulas are dangerous and should either be reanalyzed or treated as having very limited application.

## 1.7 Properties of the Velocity Field

In a given flow situation, the determination, by experiment or theory, of the properties of the fluid as a function of position and time is considered to be the *solution* to the problem. In almost all cases, the emphasis is on the space–time distribution of the fluid properties. One rarely keeps track of the actual fate of the specific fluid particles.<sup>6</sup> This treatment of properties as continuum-field functions distinguishes fluid mechanics from solid mechanics, where we are more likely to be interested in the trajectories of individual particles or systems.

### Eulerian and Lagrangian Descriptions

There are two different points of view in analyzing problems in mechanics. The first view, appropriate to fluid mechanics, is concerned with the field of flow and is called the *eulerian* method of description. In the eulerian method we compute the pressure field  $p(x, y, z, t)$  of the flow pattern, not the pressure changes  $p(t)$  that a particle experiences as it moves through the field.

The second method, which follows an individual particle moving through the flow, is called the *lagrangian* description. The lagrangian approach, which is more appropriate to solid mechanics, will not be treated in this book. However, certain numerical analyses of sharply bounded fluid flows, such as the motion of isolated fluid droplets, are very conveniently computed in lagrangian coordinates [1].

Fluid dynamic measurements are also suited to the eulerian system. For example, when a pressure probe is introduced into a laboratory flow, it is fixed at a specific position  $(x, y, z)$ . Its output thus contributes to the description of the eulerian pressure field  $p(x, y, z, t)$ . To simulate a lagrangian measurement, the probe would have to move downstream at the fluid particle speeds; this is sometimes done in oceanographic measurements, where flowmeters drift along with the prevailing currents.

The two different descriptions can be contrasted in the analysis of traffic flow along a freeway. A certain length of freeway may be selected for study and called the field of flow. Obviously, as time passes, various cars will enter and leave the field, and the identity of the specific cars within the field will constantly be changing. The traffic engineer ignores specific cars and concentrates on their average velocity as a function of time and position within the field, plus the flow rate or number of cars per hour passing a given section of the freeway. This engineer is using an eulerian description of the traffic flow. Other investigators, such as the police or social scientists, may be interested in the path or speed or destination of specific cars in the field. By following a specific car as a function of time, they are using a lagrangian description of the flow.

### The Velocity Field

Foremost among the properties of a flow is the velocity field  $\mathbf{V}(x, y, z, t)$ . In fact, determining the velocity is often tantamount to solving a flow problem, since other properties follow directly from the velocity field. Chapter 2 is devoted to the calculation of the pressure field once the velocity field is known. Books on heat transfer (for example, Ref. 20) are largely devoted to finding the temperature field from known velocity fields.

<sup>6</sup>One example where fluid particle paths are important is in water quality analysis of the fate of contaminant discharges.

In general, velocity is a vector function of position and time and thus has three components  $u$ ,  $v$ , and  $w$ , each a scalar field in itself:

$$\mathbf{V}(x, y, z, t) = \mathbf{i}u(x, y, z, t) + \mathbf{j}v(x, y, z, t) + \mathbf{k}w(x, y, z, t) \quad (1.4)$$

The use of  $u$ ,  $v$ , and  $w$  instead of the more logical component notation  $V_x$ ,  $V_y$ , and  $V_z$  is the result of an almost unbreakable custom in fluid mechanics. Much of this textbook, especially Chaps. 4, 7, 8, and 9, is concerned with finding the distribution of the velocity vector  $\mathbf{V}$  for a variety of practical flows.

### The Acceleration Field

The acceleration vector,  $\mathbf{a} = d\mathbf{V}/dt$ , occurs in Newton's law for a fluid and thus is very important. In order to follow a particle in the Eulerian frame of reference, the final result for acceleration is nonlinear and quite complicated. Here we only give the formula:

$$\mathbf{a} = \frac{d\mathbf{V}}{dt} = \frac{\partial \mathbf{V}}{\partial t} + u \frac{\partial \mathbf{V}}{\partial x} + v \frac{\partial \mathbf{V}}{\partial y} + w \frac{\partial \mathbf{V}}{\partial z} \quad (1.5)$$

where  $(u, v, w)$  are the velocity components from Eq. (1.4). We shall study this formula in detail in Chap. 4. The last three terms in Eq. (1.5) are nonlinear products and greatly complicate the analysis of general fluid motions, especially viscous flows.

## 1.8 Thermodynamic Properties of a Fluid

While the velocity field  $\mathbf{V}$  is the most important fluid property, it interacts closely with the thermodynamic properties of the fluid. We have already introduced into the discussion the three most common such properties:

1. Pressure  $p$
2. Density  $\rho$
3. Temperature  $T$

These three are constant companions of the velocity vector in flow analyses. Four other intensive thermodynamic properties become important when work, heat, and energy balances are treated (Chaps. 3 and 4):

4. Internal energy  $\hat{u}$
5. Enthalpy  $h = \hat{u} + p/\rho$
6. Entropy  $s$
7. Specific heats  $c_p$  and  $c_v$

In addition, friction and heat conduction effects are governed by the two so-called *transport properties*:

8. Coefficient of viscosity  $\mu$
9. Thermal conductivity  $k$

All nine of these quantities are true thermodynamic properties that are determined by the thermodynamic condition or *state* of the fluid. For example, for a single-phase

substance such as water or oxygen, two basic properties such as pressure and temperature are sufficient to fix the value of all the others:

$$\rho = \rho(p, T) \quad h = h(p, T) \quad \mu = \mu(p, T)$$

and so on for every quantity in the list. Note that the specific volume, so important in thermodynamic analyses, is omitted here in favor of its inverse, the density  $\rho$ .

Recall that thermodynamic properties describe the state of a *system*—that is, a collection of matter of fixed identity that interacts with its surroundings. In most cases here the system will be a small fluid element, and all properties will be assumed to be continuum properties of the flow field:  $\rho = \rho(x, y, z, t)$ , and so on.

Recall also that thermodynamics is normally concerned with *static* systems, whereas fluids are usually in variable motion with constantly changing properties. Do the properties retain their meaning in a fluid flow that is technically not in equilibrium? The answer is yes, from a statistical argument. In gases at normal pressure (and even more so for liquids), an enormous number of molecular collisions occur over a very short distance of the order of 1  $\mu\text{m}$ , so that a fluid subjected to sudden changes rapidly adjusts itself toward equilibrium. We therefore assume that all the thermodynamic properties just listed exist as point functions in a flowing fluid and follow all the laws and state relations of ordinary equilibrium thermodynamics. There are, of course, important nonequilibrium effects such as chemical and nuclear reactions in flowing fluids, which are not treated in this text.

### Pressure

Pressure is the (compression) stress at a point in a static fluid (Fig. 1.3). Next to velocity, the pressure  $p$  is the most dynamic variable in fluid mechanics. Differences or *gradients* in pressure often drive a fluid flow, especially in ducts. In low-speed flows, the actual magnitude of the pressure is often not important, unless it drops so low as to cause vapor bubbles to form in a liquid. For convenience, we set many such problem assignments at the level of 1 atm = 2116 lbf/ft<sup>2</sup> = 101,300 Pa. High-speed (compressible) gas flows (Chap. 9), however, are indeed sensitive to the magnitude of pressure.

### Temperature

Temperature  $T$  is related to the internal energy level of a fluid. It may vary considerably during high-speed flow of a gas (Chap. 9). Although engineers often use Celsius or Fahrenheit scales for convenience, many applications in this text require *absolute* (Kelvin or Rankine) temperature scales:

$$^{\circ}\text{R} = ^{\circ}\text{F} + 459.69$$

$$\text{K} = ^{\circ}\text{C} + 273.16$$

If temperature differences are strong, *heat transfer* may be important [20], but our concern here is mainly with dynamic effects.

### Density

The density of a fluid, denoted by  $\rho$  (lowercase Greek rho), is its mass per unit volume. Density is highly variable in gases and increases nearly proportionally to the pressure level. Density in liquids is nearly constant; the density of water (about 1000 kg/m<sup>3</sup>)

increases only 1 percent if the pressure is increased by a factor of 220. Thus most liquid flows are treated analytically as nearly “incompressible.”

In general, liquids are about three orders of magnitude more dense than gases at atmospheric pressure. The heaviest common liquid is mercury, and the lightest gas is hydrogen. Compare their densities at 20°C and 1 atm:

$$\text{Mercury: } \rho = 13,580 \text{ kg/m}^3 \quad \text{Hydrogen: } \rho = 0.0838 \text{ kg/m}^3$$

They differ by a factor of 162,000! Thus the physical parameters in various liquid and gas flows might vary considerably. The differences are often resolved by the use of *dimensional analysis* (Chap. 5). Other fluid densities are listed in Tables A.3 and A.4 (in App. A) and in Ref. 21.

## Specific Weight

The *specific weight* of a fluid, denoted by  $\gamma$  (lowercase Greek gamma), is its weight per unit volume. Just as a mass has a weight  $W = mg$ , density and specific weight are simply related by gravity:

$$\gamma = \rho g \quad (1.6)$$

The units of  $\gamma$  are weight per unit volume, in lbf/ft<sup>3</sup> or N/m<sup>3</sup>. In standard earth gravity,  $g = 32.174 \text{ ft/s}^2 = 9.807 \text{ m/s}^2$ . Thus, for example, the specific weights of air and water at 20°C and 1 atm are approximately

$$\gamma_{\text{air}} = (1.205 \text{ kg/m}^3)(9.807 \text{ m/s}^2) = 11.8 \text{ N/m}^3 = 0.0752 \text{ lbf/ft}^3$$

$$\gamma_{\text{water}} = (998 \text{ kg/m}^3)(9.807 \text{ m/s}^2) = 9790 \text{ N/m}^3 = 62.4 \text{ lbf/ft}^3$$

Specific weight is very useful in the hydrostatic pressure applications of Chap. 2. Specific weights of other fluids are given in Tables A.3 and A.4.

## Specific Gravity

*Specific gravity*, denoted by SG, is the ratio of a fluid density to a standard reference fluid, usually water at 4°C (for liquids) and air (for gases):

$$\text{SG}_{\text{gas}} = \frac{\rho_{\text{gas}}}{\rho_{\text{air}}} = \frac{\rho_{\text{gas}}}{1.205 \text{ kg/m}^3} \quad (1.7)$$

$$\text{SG}_{\text{liquid}} = \frac{\rho_{\text{liquid}}}{\rho_{\text{water}}} = \frac{\rho_{\text{liquid}}}{1000 \text{ kg/m}^3}$$

For example, the specific gravity of mercury (Hg) is  $\text{SG}_{\text{Hg}} = 13,580/1000 \approx 13.6$ . Engineers find these dimensionless ratios easier to remember than the actual numerical values of density of a variety of fluids.

## Potential and Kinetic Energies

In thermostatics the only energy in a substance is that stored in a system by molecular activity and molecular bonding forces. This is commonly denoted as *internal energy*  $\hat{u}$ . A commonly accepted adjustment to this static situation for fluid flow is to add two more energy terms that arise from newtonian mechanics: potential energy and kinetic energy.

The potential energy equals the work required to move the system of mass  $m$  from the origin to a position vector  $\mathbf{r} = ix + jy + kz$  against a gravity field  $\mathbf{g}$ . Its value is  $-mg \cdot \mathbf{r}$ , or  $-\mathbf{g} \cdot \mathbf{r}$  per unit mass. The kinetic energy equals the work required to change the speed of the mass from zero to velocity  $V$ . Its value is  $\frac{1}{2}mV^2$  or  $\frac{1}{2}V^2$  per unit mass. Then by common convention the total stored energy  $e$  per unit mass in fluid mechanics is the sum of three terms:

$$e = \hat{u} + \frac{1}{2}V^2 + (-\mathbf{g} \cdot \mathbf{r}) \quad (1.8)$$

Also, throughout this book we shall define  $z$  as upward, so that  $\mathbf{g} = -g\mathbf{k}$  and  $\mathbf{g} \cdot \mathbf{r} = -gz$ . Then Eq. (1.8) becomes

$$e = \hat{u} + \frac{1}{2}V^2 + gz \quad (1.9)$$

The molecular internal energy  $\hat{u}$  is a function of  $T$  and  $p$  for the single-phase pure substance, whereas the potential and kinetic energies are kinematic quantities.

### State Relations for Gases

Thermodynamic properties are found both theoretically and experimentally to be related to each other by state relations that differ for each substance. As mentioned, we shall confine ourselves here to single-phase pure substances, such as water in its liquid phase. The second most common fluid, air, is a mixture of gases, but since the mixture ratios remain nearly constant between 160 and 2200 K, in this temperature range air can be considered to be a pure substance.

All gases at high temperatures and low pressures (relative to their critical point) are in good agreement with the *perfect-gas law*

$$p = \rho RT \quad R = c_p - c_v = \text{gas constant} \quad (1.10)$$

where the specific heats  $c_p$  and  $c_v$  are defined in Eqs. (1.14) and (1.15).

Since Eq. (1.10) is dimensionally consistent,  $R$  has the same dimensions as specific heat,  $\{L^2T^{-2}\Theta^{-1}\}$ , or velocity squared per temperature unit (kelvin or degree Rankine). Each gas has its own constant  $R$ , equal to a universal constant  $\Lambda$  divided by the molecular weight

$$R_{\text{gas}} = \frac{\Lambda}{M_{\text{gas}}} \quad (1.11)$$

where  $\Lambda = 49,700 \text{ ft-lbf/(slugmol} \cdot {^{\circ}\text{R}}\text{)} = 8314 \text{ J/(kmol} \cdot \text{K)}$ . Most applications in this book are for air, whose molecular weight is  $M = 28.97/\text{mol}$ :

$$R_{\text{air}} = \frac{49,700 \text{ ft-lbf/(slugmol} \cdot {^{\circ}\text{R}}\text{)}}{28.97/\text{mol}} = 1716 \frac{\text{ft-lbf}}{\text{slug} \cdot {^{\circ}\text{R}}} = 1716 \frac{\text{ft}^2}{\text{s}^2 \cdot {^{\circ}\text{R}}} = 287 \frac{\text{m}^2}{\text{s}^2 \cdot \text{K}} \quad (1.12)$$

Standard atmospheric pressure is  $2116 \text{ lbf/ft}^2 = 2116 \text{ slug/(ft} \cdot \text{s}^2\text{)}$ , and standard temperature is  $60^{\circ}\text{F} = 520^{\circ}\text{R}$ . Thus standard air density is

$$\rho_{\text{air}} = \frac{2116 \text{ slug/(ft} \cdot \text{s}^2\text{)}}{[1716 \text{ ft}^2/(\text{s}^2 \cdot {^{\circ}\text{R}})](520^{\circ}\text{R})} = 0.00237 \text{ slug/ft}^3 = 1.22 \text{ kg/m}^3 \quad (1.13)$$

This is a nominal value suitable for problems. For other gases, see Table A.4.

One proves in thermodynamics that Eq. (1.10) requires that the internal molecular energy  $\hat{u}$  of a perfect gas vary only with temperature:  $\hat{u} = \hat{u}(T)$ . Therefore the specific heat  $c_v$  also varies only with temperature:

$$c_v = \left( \frac{\partial \hat{u}}{\partial T} \right)_p = \frac{d\hat{u}}{dT} = c_v(T)$$

or

$$d\hat{u} = c_v(T)dT \quad (1.14)$$

In like manner  $h$  and  $c_p$  of a perfect gas also vary only with temperature:

$$h = \hat{u} + \frac{p}{\rho} = \hat{u} + RT = h(T)$$

$$c_p = \left( \frac{\partial h}{\partial T} \right)_p = \frac{dh}{dT} = c_p(T)$$

$$dh = c_p(T)dT \quad (1.15)$$

The ratio of specific heats of a perfect gas is an important dimensionless parameter in compressible flow analysis (Chap. 9)

$$k = \frac{c_p}{c_v} = k(T) \geq 1 \quad (1.16)$$

As a first approximation in airflow analysis we commonly take  $c_p$ ,  $c_v$ , and  $k$  to be constant:

$$k_{\text{air}} \approx 1.4$$

$$c_v = \frac{R}{k - 1} \approx 4293 \text{ ft}^2/(\text{s}^2 \cdot ^\circ\text{R}) = 718 \text{ m}^2/(\text{s}^2 \cdot \text{K}) \quad (1.17)$$

$$c_p = \frac{kR}{k - 1} \approx 6010 \text{ ft}^2/(\text{s}^2 \cdot ^\circ\text{R}) = 1005 \text{ m}^2/(\text{s}^2 \cdot \text{K})$$

Actually, for all gases,  $c_p$  and  $c_v$  increase gradually with temperature, and  $k$  decreases gradually. Experimental values of the specific-heat ratio for eight common gases are shown in Fig. 1.5.


Many flow problems involve steam. Typical steam operating conditions are relatively close to the critical point, so that the perfect-gas approximation is inaccurate. Since no simple formulas apply accurately, steam properties are available both in EES (see Sec. 1.12) and on a CD-ROM [23] and even on the Internet, as a MathPad Corp. applet [24]. Meanwhile, the error of using the perfect-gas law can be moderate, as the following example shows.

### EXAMPLE 1.5

Estimate  $\rho$  and  $c_p$  of steam at 100 lbf/in<sup>2</sup> and 400°F, in English units, (a) by the perfect-gas approximation and (b) by the ASME Steam Tables [23] or by EES.

#### Solution

- *Approach (a)—the perfect-gas law:* Although steam is not an ideal gas, we can estimate these properties with moderate accuracy from Eqs. (1.10) and (1.17). First convert pressure

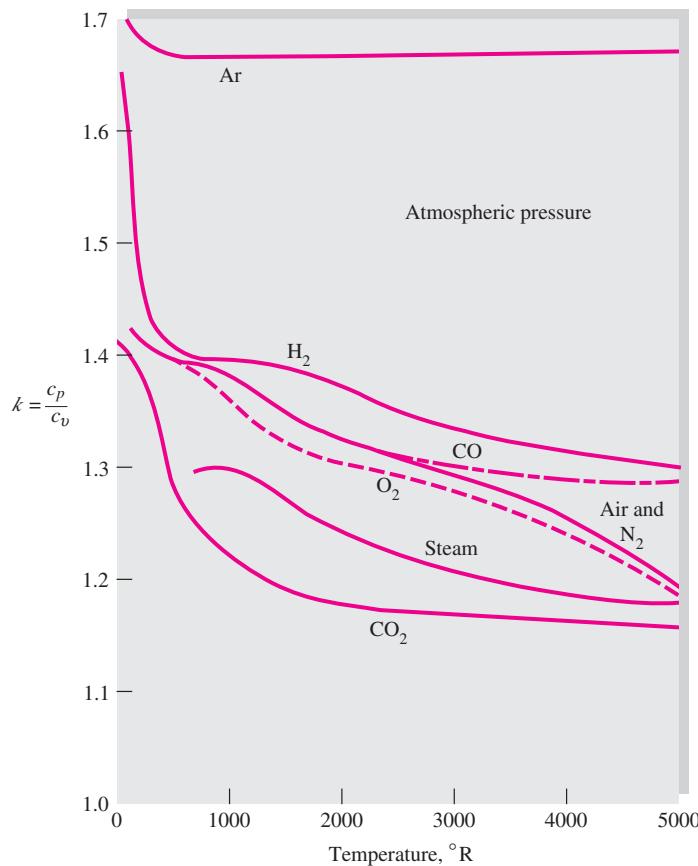

**Fig. 1.5** Specific-heat ratio of eight common gases as a function of temperature. (Data from Ref. 22.)

from 100 lbf/in<sup>2</sup> to 14,400 lbf/ft<sup>2</sup>, and use absolute temperature, (400°F + 460) = 860°R. Then we need the gas constant for steam, in English units. From Table A.4, the molecular weight of H<sub>2</sub>O is 18.02, whence

$$R_{\text{steam}} = \frac{\Lambda_{\text{English}}}{M_{\text{H}_2\text{O}}} = \frac{49,700 \text{ ft} \cdot \text{lbf}/(\text{slugmol } ^\circ\text{R})}{18.02/\text{mol}} = 2758 \frac{\text{ft} \cdot \text{lbf}}{\text{slug } ^\circ\text{R}}$$

Then the density estimate follows from the perfect-gas law, Eq. (1.10):

$$\rho \approx \frac{p}{RT} = \frac{14,400 \text{ lbf/ft}^2}{[2758 \text{ ft} \cdot \text{lbf}/(\text{slug} \cdot ^\circ\text{R})](860 \text{ }^\circ\text{R})} \approx 0.00607 \frac{\text{slug}}{\text{ft}^3} \quad \text{Ans. (a)}$$

At 860°R, from Fig. 1.5,  $k_{\text{steam}} = c_p/c_v \approx 1.30$ . Then, from Eq. (1.17),

$$c_p \approx \frac{kR}{k - 1} = \frac{(1.3)(2758 \text{ ft} \cdot \text{lbf}/(\text{slug } ^\circ\text{R}))}{(1.3 - 1)} \approx 12,000 \frac{\text{ft} \cdot \text{lbf}}{\text{slug } ^\circ\text{R}} \quad \text{Ans. (a)}$$

- *Approach (b)—tables or software:* One can either read the steam tables or program a few lines in EES. In either case, the English units (psi, Btu, lbm) are awkward when applied to fluid mechanics formulas. Even so, when using EES, make sure that the

*Variable Information* menu specifies English units: psia and °F. EES statements for evaluating density and specific heat of steam are, for these conditions,

```
Rho = DENSITY(steam, P = 100, T = 400)
```

```
Cp = SPECHEAT(steam, P = 100, T = 400)
```

Note that the software is set up for psia and °F, without converting. EES returns the curve-fit values

$$\text{Rho} \approx 0.2027 \text{ lbm/ft}^3 ; \text{ Cp} \approx 0.5289 \text{ Btu/(lbm-F)}$$

As just stated, Btu and lbm are extremely unwieldy when applied to mass, momentum, and energy problems in fluid mechanics. Therefore, either convert to ft-lbf and slugs using your own resources, or use the “Convert” function in EES, placing the old and new units in single quote marks:

```
Rho2 = Rho*CONVERT('lbm/ft^3', 'slug/ft^3')
```

```
Cp2 = Cp*CONVERT('Btu/lbm-F', 'ft^2/s^2-R')
```

Note that (1) you multiply the old Rho and Cp by the CONVERT function; and (2) units to the right of the division sign “/” in CONVERT are assumed to be in the denominator. EES returns these results:

$$\text{Rho2} = 0.00630 \text{ slug/ft}^3 \quad \text{Cp2} = 13,200 \text{ ft}^2/(\text{s}^2\text{-R}) \quad \text{Ans. (b)}$$

- *Comments:* The steam tables would yield results quite close to EES. The perfect-gas estimate of  $\rho$  is 4 percent low, and the estimate of  $c_p$  is 9 percent low. The chief reason for the discrepancy is that this temperature and pressure are rather close to the critical point and saturation line of steam. At higher temperatures and lower pressures, say, 800°F and 50 lbf/in<sup>2</sup>, the perfect-gas law yields properties with an accuracy of about ±1 percent.

Once again let us warn that English units (psia, lbm Btu) are awkward and must be converted in most fluid mechanics formulas. EES handles SI units nicely, with no conversion factors needed.

## State Relations for Liquids

The writer knows of no “perfect-liquid law” comparable to that for gases. Liquids are nearly incompressible and have a single, reasonably constant specific heat. Thus an idealized state relation for a liquid is

$$\rho \approx \text{const} \quad c_p \approx c_v \approx \text{const} \quad dh \approx c_p \, dT \quad (1.18)$$

Most of the flow problems in this book can be attacked with these simple assumptions. Water is normally taken to have a density of 998 kg/m<sup>3</sup> and a specific heat  $c_p = 4210 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ . The steam tables may be used if more accuracy is required.

The density of a liquid usually decreases slightly with temperature and increases moderately with pressure. If we neglect the temperature effect, an empirical pressure-density relation for a liquid is

$$\frac{p}{p_a} \approx (B + 1) \left( \frac{\rho}{\rho_a} \right)^n - B \quad (1.19)$$

where  $B$  and  $n$  are dimensionless parameters that vary slightly with temperature and  $p_a$  and  $\rho_a$  are standard atmospheric values. Water can be fitted approximately to the values  $B \approx 3000$  and  $n \approx 7$ .

Seawater is a variable mixture of water and salt and thus requires three thermodynamic properties to define its state. These are normally taken as pressure, temperature, and the *salinity*  $\hat{S}$ , defined as the weight of the dissolved salt divided by the weight of the mixture. The average salinity of seawater is 0.035, usually written as 35 parts per 1000, or 35 %. The average density of seawater is  $2.00 \text{ slugs/ft}^3 \approx 1030 \text{ kg/m}^3$ . Strictly speaking, seawater has three specific heats, all approximately equal to the value for pure water of  $25,200 \text{ ft}^2/(\text{s}^2 \cdot ^\circ\text{R}) = 4210 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ .

### EXAMPLE 1.6

The pressure at the deepest part of the ocean is approximately 1100 atm. Estimate the density of seawater in slug/ft<sup>3</sup> at this pressure.

#### Solution

Equation (1.19) holds for either water or seawater. The ratio  $p/p_a$  is given as 1100:

$$1100 \approx (3001) \left( \frac{\rho}{\rho_a} \right)^7 - 3000$$

or

$$\frac{\rho}{\rho_a} = \left( \frac{4100}{3001} \right)^{1/7} = 1.046$$

Assuming an average surface seawater density  $\rho_a = 2.00 \text{ slugs/ft}^3$ , we compute

$$\rho \approx 1.046(2.00) = 2.09 \text{ slugs/ft}^3$$

*Ans.*

Even at these immense pressures, the density increase is less than 5 percent, which justifies the treatment of a liquid flow as essentially incompressible.


## 1.9 Viscosity and Other Secondary Properties

The quantities such as pressure, temperature, and density discussed in the previous section are *primary* thermodynamic variables characteristic of any system. Certain secondary variables also characterize specific fluid mechanical behavior. The most important of these is viscosity, which relates the local stresses in a moving fluid to the strain rate of the fluid element.

### Viscosity

Viscosity is a quantitative measure of a fluid's resistance to flow. More specifically, it determines the fluid strain rate that is generated by a given applied shear stress. We can easily move through air, which has very low viscosity. Movement is more difficult in water, which has 50 times higher viscosity. Still more resistance is found in SAE 30 oil, which is 300 times more viscous than water. Try to slide your hand through glycerin, which is five times more viscous than SAE 30 oil, or blackstrap molasses, another factor of five higher than glycerin. Fluids may have a vast range of viscosities.

Consider a fluid element sheared in one plane by a single shear stress  $\tau$ , as in Fig. 1.6a. The shear strain angle  $\delta\theta$  will continuously grow with time as long as the stress  $\tau$  is maintained, the upper surface moving at speed  $\delta u$  larger than the

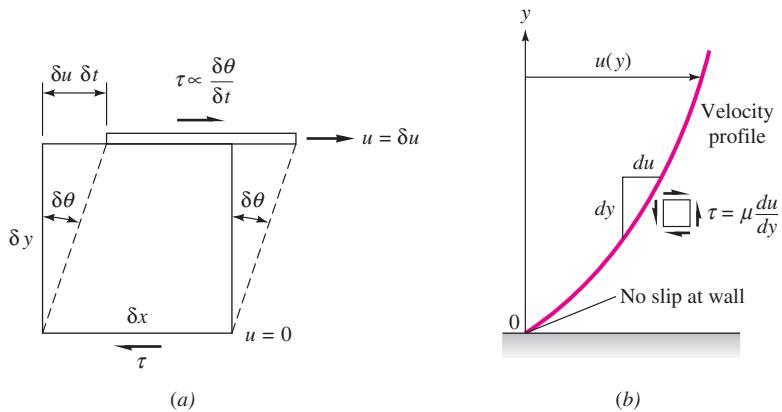

**Fig. 1.6** Shear stress causes continuous shear deformation in a fluid: (a) a fluid element straining at a rate  $\delta\theta/\delta t$ ; (b) newtonian shear distribution in a shear layer near a wall.

lower. Such common fluids as water, oil, and air show a linear relation between applied shear and resulting strain rate:

$$\tau \propto \frac{\delta\theta}{\delta t} \quad (1.20)$$

From the geometry of Fig. 1.4a, we see that

$$\tan \delta\theta = \frac{\delta u}{\delta y} \quad (1.21)$$

In the limit of infinitesimal changes, this becomes a relation between shear strain rate and velocity gradient:

$$\frac{d\theta}{dt} = \frac{du}{dy} \quad (1.22)$$

From Eq. (1.20), then, the applied shear is also proportional to the velocity gradient for the common linear fluids. The constant of proportionality is the viscosity coefficient  $\mu$ :

$$\tau = \mu \frac{d\theta}{dt} = \mu \frac{du}{dy} \quad (1.23)$$

Equation (1.23) is dimensionally consistent; therefore  $\mu$  has dimensions of stress-time:  $\{FT/L^2\}$  or  $\{M/(LT)\}$ . The BG unit is slugs per foot-second, and the SI unit is kilograms per meter-second. The linear fluids that follow Eq. (1.23) are called *newtonian fluids*, after Sir Isaac Newton, who first postulated this resistance law in 1687.

We do not really care about the strain angle  $\theta(t)$  in fluid mechanics, concentrating instead on the velocity distribution  $u(y)$ , as in Fig. 1.6b. We shall use Eq. (1.23) in Chap. 4 to derive a differential equation for finding the velocity distribution  $u(y)$ —and, more generally,  $\mathbf{V}(x, y, z, t)$ —in a viscous fluid. Figure 1.6b illustrates a shear layer, or *boundary layer*, near a solid wall. The shear stress is proportional to the slope of the velocity profile and is greatest at the wall. Further, at the wall, the velocity  $u$  is zero relative to the wall: This is called the *no-slip condition* and is characteristic of all viscous fluid flows.

**Table 1.4** Viscosity and Kinematic Viscosity of Eight Fluids at 1 atm and 20°C

Fluid	$\mu, \text{ kg}/(\text{m} \cdot \text{s})^{\dagger}$	Ratio $\mu/\mu(\text{H}_2)$	$\rho, \text{ kg}/\text{m}^3$	$\nu, \text{ m}^2/\text{s}^{\dagger}$	Ratio $\nu/\nu(\text{Hg})$
Hydrogen	9.0 E-6	1.0	0.084	1.05 E-4	910
Air	1.8 E-5	2.1	1.20	1.50 E-5	130
Gasoline	2.9 E-4	33	680	4.22 E-7	3.7
Water	1.0 E-3	114	998	1.01 E-6	8.7
Ethyl alcohol	1.2 E-3	135	789	1.52 E-6	13
Mercury	1.5 E-3	170	13,550	1.16 E-7	1.0
SAE 30 oil	0.29	33,000	891	3.25 E-4	2,850
Glycerin	1.5	170,000	1,260	1.18 E-3	10,300

<sup>†</sup>1 kg/(m · s) = 0.0209 slug/(ft · s); 1 m<sup>2</sup>/s = 10.76 ft<sup>2</sup>/s.

The viscosity of newtonian fluids is a true thermodynamic property and varies with temperature and pressure. At a given state ( $p, T$ ) there is a vast range of values among the common fluids. Table 1.4 lists the viscosity of eight fluids at standard pressure and temperature. There is a variation of six orders of magnitude from hydrogen up to glycerin. Thus there will be wide differences between fluids subjected to the same applied stresses.

Generally speaking, the viscosity of a fluid increases only weakly with pressure. For example, increasing  $p$  from 1 to 50 atm will increase  $\mu$  of air only 10 percent. Temperature, however, has a strong effect, with  $\mu$  increasing with  $T$  for gases and decreasing for liquids. Figure A.1 (in App. A) shows this temperature variation for various common fluids. It is customary in most engineering work to neglect the pressure variation.

The variation  $\mu(p, T)$  for a typical fluid is nicely shown by Fig. 1.7, from Ref. 25, which normalizes the data with the *critical-point state* ( $\mu_c, p_c, T_c$ ). This behavior, called the *principle of corresponding states*, is characteristic of all fluids, but the actual numerical values are uncertain to  $\pm 20$  percent for any given fluid. For example, values of  $\mu(T)$  for air at 1 atm, from Table A.2, fall about 8 percent low compared to the “low-density limit” in Fig. 1.7.

Note in Fig. 1.7 that changes with temperature occur very rapidly near the critical point. In general, critical-point measurements are extremely difficult and uncertain.

## The Reynolds Number


The primary parameter correlating the viscous behavior of all newtonian fluids is the dimensionless *Reynolds number*:

$$\text{Re} = \frac{\rho VL}{\mu} = \frac{VL}{\nu} \quad (1.24)$$

where  $V$  and  $L$  are characteristic velocity and length scales of the flow. The second form of Re illustrates that the ratio of  $\mu$  to  $\rho$  has its own name, the *kinematic viscosity*:

$$\nu = \frac{\mu}{\rho} \quad (1.25)$$

It is called kinematic because the mass units cancel, leaving only the dimensions  $\{L^2/T\}$ .

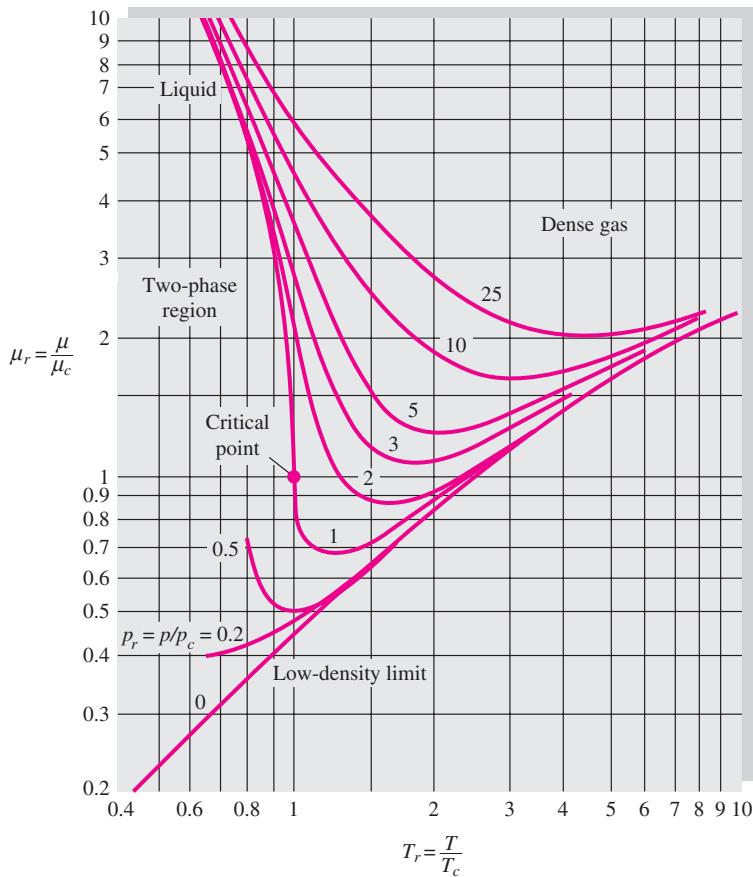


**Fig. 1.7** Fluid viscosity nondimensionalized by critical-point properties. This generalized chart is characteristic of all fluids but is accurate only to  $\pm 20$  percent. (From Ref. 25.)

Generally, the first thing a fluids engineer should do is estimate the Reynolds number range of the flow under study. Very low Re indicates viscous *creeping* motion, where inertia effects are negligible. Moderate Re implies a smoothly varying *laminar* flow. High Re probably spells *turbulent* flow, which is slowly varying in the time-mean but has superimposed strong random high-frequency fluctuations. Explicit numerical values for low, moderate, and high Reynolds numbers cannot be stated here. They depend on flow geometry and will be discussed in Chaps. 5 through 7.

Table 1.4 also lists values of  $\nu$  for the same eight fluids. The pecking order changes considerably, and mercury, the heaviest, has the smallest viscosity relative to its own weight. All gases have high  $\nu$  relative to thin liquids such as gasoline, water, and alcohol. Oil and glycerin still have the highest  $\nu$ , but the ratio is smaller. For given values of  $V$  and  $L$  in a flow, these fluids exhibit a spread of four orders of magnitude in the Reynolds number.

## Flow between Plates

A classic problem is the flow induced between a fixed lower plate and an upper plate moving steadily at velocity  $V$ , as shown in Fig. 1.8. The clearance between plates is

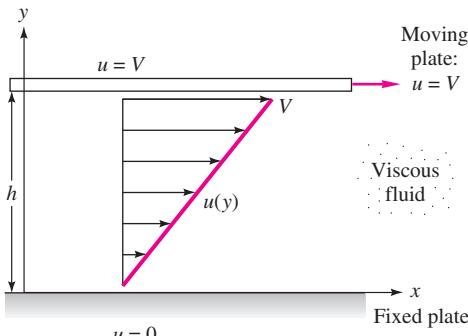

**Fig. 1.8** Viscous flow induced by relative motion between two parallel plates.

$h$ , and the fluid is newtonian and does not slip at either plate. If the plates are large, this steady shearing motion will set up a velocity distribution  $u(y)$ , as shown, with  $v = w = 0$ . The fluid acceleration is zero everywhere.

With zero acceleration and assuming no pressure variation in the flow direction, you should show that a force balance on a small fluid element leads to the result that the shear stress is constant throughout the fluid. Then Eq. (1.23) becomes

$$\frac{du}{dy} = \frac{\tau}{\mu} = \text{const}$$

which we can integrate to obtain

$$u = a + by$$

The velocity distribution is linear, as shown in Fig. 1.8, and the constants  $a$  and  $b$  can be evaluated from the no-slip condition at the upper and lower walls:

$$u = \begin{cases} 0 = a + b(0) & \text{at } y = 0 \\ V = a + b(h) & \text{at } y = h \end{cases}$$

Hence  $a = 0$  and  $b = V/h$ . Then the velocity profile between the plates is given by

$$u = V \frac{y}{h} \quad (1.26)$$

as indicated in Fig. 1.8. Turbulent flow (Chap. 6) does not have this shape.

Although viscosity has a profound effect on fluid motion, the actual viscous stresses are quite small in magnitude even for oils, as shown in the following example.

### EXAMPLE 1.7

Suppose that the fluid being sheared in Fig. 1.8 is SAE 30 oil at 20°C. Compute the shear stress in the oil if  $V = 3$  m/s and  $h = 2$  cm.

### Solution

- *System sketch:* This is shown earlier in Fig. 1.8.
- *Assumptions:* Linear velocity profile, laminar newtonian fluid, no slip at either plate surface.

- **Approach:** The analysis of Fig. 1.8 leads to Eq. (1.26) for laminar flow.
- **Property values:** From Table 1.4 for SAE 30 oil, the oil viscosity  $\mu = 0.29 \text{ kg/(m}\cdot\text{s)}$ .
- **Solution steps:** In Eq. (1.26), the only unknown is the fluid shear stress:

$$\tau = \mu \frac{V}{h} = \left( 0.29 \frac{\text{kg}}{\text{m}\cdot\text{s}} \right) \frac{(3 \text{ m/s})}{(0.02 \text{ m})} = 43.5 \frac{\text{kg}\cdot\text{m/s}^2}{\text{m}^2} = 43.5 \frac{\text{N}}{\text{m}^2} \approx 44 \text{ Pa} \quad \text{Ans.}$$

- **Comments:** Note the unit identities,  $1 \text{ kg}\cdot\text{m/s}^2 \equiv 1 \text{ N}$  and  $1 \text{ N/m}^2 \equiv 1 \text{ Pa}$ . Although oil is very viscous, this shear stress is modest, about 2400 times less than atmospheric pressure. Viscous stresses in gases and thin (watery) liquids are even smaller.

## Variation of Viscosity with Temperature

Temperature has a strong effect and pressure a moderate effect on viscosity. The viscosity of gases and most liquids increases slowly with pressure. Water is anomalous in showing a very slight decrease below 30°C. Since the change in viscosity is only a few percent up to 100 atm, we shall neglect pressure effects in this book.

Gas viscosity increases with temperature. Two common approximations are the power law and the Sutherland law:

$$\frac{\mu}{\mu_0} \approx \begin{cases} \left(\frac{T}{T_0}\right)^n & \text{power law} \\ \frac{(T/T_0)^{3/2}(T_0 + S)}{T + S} & \text{Sutherland law} \end{cases} \quad (1.27)$$

where  $\mu_0$  is a known viscosity at a known absolute temperature  $T_0$  (usually 273 K). The constants  $n$  and  $S$  are fit to the data, and both formulas are adequate over a wide range of temperatures. For air,  $n \approx 0.7$  and  $S \approx 110 \text{ K} = 199^\circ\text{R}$ . Other values are given in Ref. 26.

Liquid viscosity decreases with temperature and is roughly exponential,  $\mu \approx ae^{-bT}$ ; but a better fit is the empirical result that  $\ln \mu$  is quadratic in  $1/T$ , where  $T$  is absolute temperature:


$$\ln \frac{\mu}{\mu_0} \approx a + b \left( \frac{T_0}{T} \right) + c \left( \frac{T_0}{T} \right)^2 \quad (1.28)$$

For water, with  $T_0 = 273.16 \text{ K}$ ,  $\mu_0 = 0.001792 \text{ kg/(m}\cdot\text{s)}$ , suggested values are  $a = -1.94$ ,  $b = -4.80$ , and  $c = 6.74$ , with accuracy about  $\pm 1$  percent. The viscosity of water is tabulated in Table A.1. Curve-fit viscosity formulas for 355 organic liquids are given by Yaws et al. [27]. For further viscosity data, see Refs. 21, 28 and 29.

## Nonnewtonian Fluids

Fluids that do not follow the linear law of Eq. (1.23) are called *nonnewtonian* and are treated in books on *rheology* [16]. Figure 1.9a compares some examples to a newtonian fluid. For the nonlinear curves, the slope at any point is called the *apparent viscosity*.

**Dilatant.** This fluid is *shear-thickening*, increasing its resistance with increasing strain rate. Examples are suspensions of corn starch or sand in water. The classic case is *quicksand*, which stiffens up if one thrashes about.

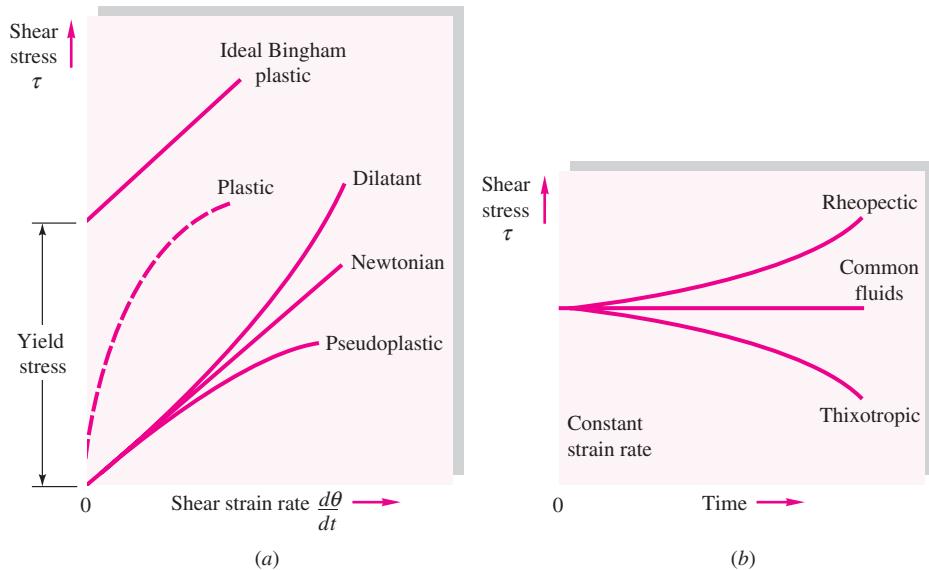

**Fig. 1.9** Rheological behavior of various viscous materials:  
(a) stress versus strain rate;  
(b) effect of time on applied stress.

**Pseudoplastic.** A *shear-thinning* fluid is less resistant at higher strain rates. A very strong thinning is called *plastic*. Some of the many examples are polymer solutions, colloidal suspensions, paper pulp in water, latex paint, blood plasma, syrup, and molasses. The classic case is *paint*, which is thick when poured but thin when brushed at a high strain rate.


**Bingham plastic.** The limiting case of a plastic substance is one that requires a finite yield stress before it begins to flow. Figure 1.9a shows yielding followed by linear behavior, but nonlinear flow can also occur. Some examples are clay suspensions, drilling mud, toothpaste, mayonnaise, chocolate, and mustard. The classic case is *catsup*, which will not come out of the bottle until you stress it by shaking.

A further complication of nonnewtonian behavior is the transient effect shown in Fig. 1.9b. Some fluids require a gradually increasing shear stress to maintain a constant strain rate and are called *rheopectic*. The opposite case of a fluid that thins out with time and requires decreasing stress is termed *thixotropic*. We neglect non-newtonian effects in this book; see Ref. 16 for further study.

## Surface Tension

A liquid, being unable to expand freely, will form an *interface* with a second liquid or gas. The physical chemistry of such interfacial surfaces is quite complex, and whole textbooks are devoted to this specialty [30]. Molecules deep within the liquid repel each other because of their close packing. Molecules at the surface are less dense and attract each other. Since half of their neighbors are missing, the mechanical effect is that the surface is in tension. We can account adequately for surface effects in fluid mechanics with the concept of surface tension.

If a cut of length  $dL$  is made in an interfacial surface, equal and opposite forces of magnitude  $\gamma dL$  are exposed normal to the cut and parallel to the surface, where  $\gamma$  is called the *coefficient of surface tension*. The dimensions of  $\gamma$  are  $\{F/L\}$ , with SI

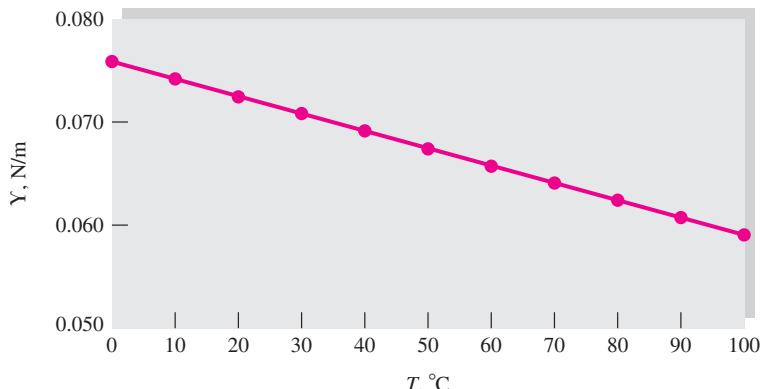

**Fig. 1.10** Surface tension of a clean air–water interface. Data from Table A.5.

units of newtons per meter and BG units of pounds-force per foot. An alternate concept is to open up the cut to an area  $dA$ ; this requires work to be done of amount  $\gamma dA$ . Thus the coefficient  $\gamma$  can also be regarded as the surface energy per unit area of the interface, in  $N \cdot m/m^2$  or  $ft \cdot lbf/ft^2$ .

The two most common interfaces are water–air and mercury–air. For a clean surface at  $20^\circ\text{C} = 68^\circ\text{F}$ , the measured surface tension is

$$\gamma = \begin{cases} 0.0050 \text{ lbf/ft} = 0.073 \text{ N/m} & \text{air–water} \\ 0.033 \text{ lbf/ft} = 0.48 \text{ N/m} & \text{air–mercury} \end{cases} \quad (1.29)$$

These are design values and can change considerably if the surface contains contaminants like detergents or slicks. Generally  $\gamma$  decreases with liquid temperature and is zero at the critical point. Values of  $\gamma$  for water are given in Fig. 1.10 and Table A.5.

If the interface is curved, a mechanical balance shows that there is a pressure difference across the interface, the pressure being higher on the concave side, as illustrated in Fig. 1.11. In Fig. 1.11a, the pressure increase in the interior of a liquid cylinder is balanced by two surface-tension forces:

$$2RL \Delta p = 2\gamma L$$

$$\text{or} \quad \Delta p = \frac{\gamma}{R} \quad (1.30)$$


We are not considering the weight of the liquid in this calculation. In Fig. 1.11b, the pressure increase in the interior of a spherical droplet balances a ring of surface-tension force:

$$\pi R^2 \Delta p = 2\pi R \gamma$$

$$\text{or} \quad \Delta p = \frac{2\gamma}{R} \quad (1.31)$$

We can use this result to predict the pressure increase inside a soap bubble, which has *two* interfaces with air, an inner and outer surface of nearly the same radius  $R$ :

$$\Delta p_{\text{bubble}} \approx 2 \Delta p_{\text{droplet}} = \frac{4\gamma}{R} \quad (1.32)$$

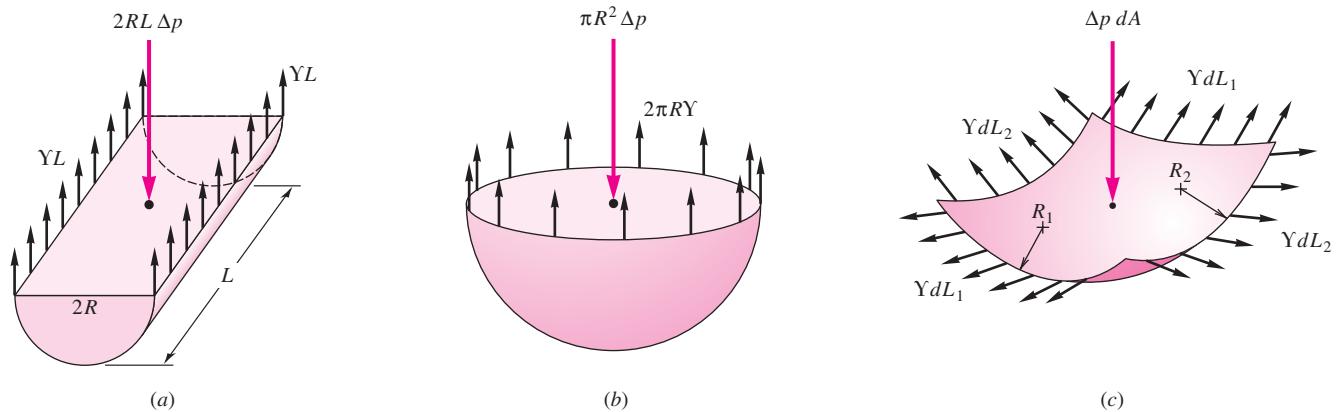


**Fig. 1.11** Pressure change across a curved interface due to surface tension: (a) interior of a liquid cylinder; (b) interior of a spherical droplet; (c) general curved interface.

Figure 1.11c shows the general case of an arbitrarily curved interface whose principal radii of curvature are  $R_1$  and  $R_2$ . A force balance normal to the surface will show that the pressure increase on the concave side is


$$\Delta p = Y(R_1^{-1} + R_2^{-1}) \quad (1.33)$$

Equations (1.30) to (1.32) can all be derived from this general relation; for example, in Eq. (1.30),  $R_1 = R$  and  $R_2 = \infty$ .

A second important surface effect is the *contact angle*  $\theta$ , which appears when a liquid interface intersects with a solid surface, as in Fig. 1.12. The force balance would then involve both  $Y$  and  $\theta$ . If the contact angle is less than  $90^\circ$ , the liquid is said to *wet* the solid; if  $\theta > 90^\circ$ , the liquid is termed *nonwetting*. For example, water wets soap but does not wet wax. Water is extremely wetting to a clean glass surface, with  $\theta \approx 0^\circ$ . Like  $Y$ , the contact angle  $\theta$  is sensitive to the actual physico-chemical conditions of the solid–liquid interface. For a clean mercury–air–glass interface,  $\theta = 130^\circ$ .

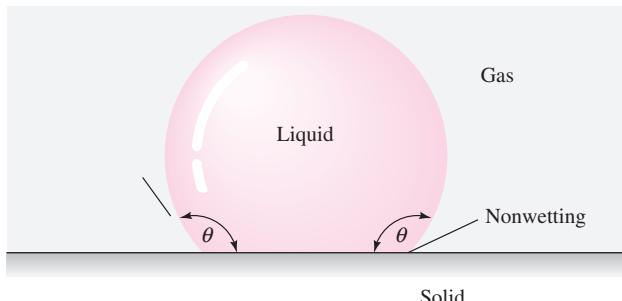

**Fig. 1.12** Contact-angle effects at liquid–gas–solid interface. If  $\theta < 90^\circ$ , the liquid “wets” the solid; if  $\theta > 90^\circ$ , the liquid is nonwetting.

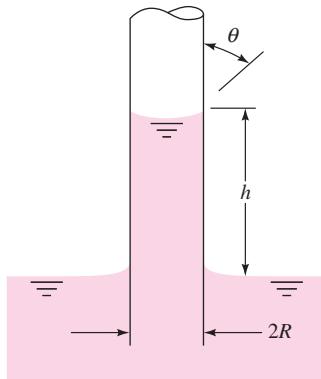

E1.8

Example 1.8 illustrates how surface tension causes a fluid interface to rise or fall in a capillary tube.

### EXAMPLE 1.8

Derive an expression for the change in height  $h$  in a circular tube of a liquid with surface tension  $Y$  and contact angle  $\theta$ , as in Fig. E1.8.

#### Solution

The vertical component of the ring surface-tension force at the interface in the tube must balance the weight of the column of fluid of height  $h$ :

$$2\pi RY \cos \theta = \gamma\pi R^2 h$$

Solving for  $h$ , we have the desired result:

$$h = \frac{2Y \cos \theta}{\gamma R} \quad \text{Ans.}$$

Thus the capillary height increases inversely with tube radius  $R$  and is positive if  $\theta < 90^\circ$  (wetting liquid) and negative (capillary depression) if  $\theta > 90^\circ$ .

Suppose that  $R = 1$  mm. Then the capillary rise for a water-air-glass interface,  $\theta \approx 0^\circ$ ,  $Y = 0.073$  N/m, and  $\rho = 1000$  kg/m<sup>3</sup> is

$$h = \frac{2(0.073 \text{ N/m})(\cos 0^\circ)}{(1000 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(0.001 \text{ m})} = 0.015 \text{ (N} \cdot \text{s}^2\text{)/kg} = 0.015 \text{ m} = 1.5 \text{ cm}$$

For a mercury-air-glass interface, with  $\theta = 130^\circ$ ,  $Y = 0.48$  N/m, and  $\rho = 13,600$  kg/m<sup>3</sup>, the capillary rise is

$$h = \frac{2(0.48)(\cos 130^\circ)}{13,600(9.81)(0.001)} = -0.0046 \text{ m} = -0.46 \text{ cm}$$


When a small-diameter tube is used to make pressure measurements (Chap. 2), these capillary effects must be corrected for.

## Vapor Pressure

Vapor pressure is the pressure at which a liquid boils and is in equilibrium with its own vapor. For example, the vapor pressure of water at 68°F is 49 lbf/ft<sup>2</sup>, while that of mercury is only 0.0035 lbf/ft<sup>2</sup>. If the liquid pressure is greater than the vapor pressure, the only exchange between liquid and vapor is evaporation at the interface. If, however, the liquid pressure falls below the vapor pressure, vapor bubbles begin to appear in the liquid. If water is heated to 212°F, its vapor pressure rises to 2116 lbf/ft<sup>2</sup>, and thus water at normal atmospheric pressure will boil. When the liquid pressure is dropped below the vapor pressure due to a flow phenomenon, we call the process *cavitation*. If water is accelerated from rest to about 50 ft/s, its pressure drops by about 15 lbf/in<sup>2</sup>, or 1 atm. This can cause cavitation [31].

The dimensionless parameter describing flow-induced boiling is the *cavitation number*

$$\text{Ca} = \frac{p_a - p_v}{\frac{1}{2}\rho V^2} \quad (1.34)$$

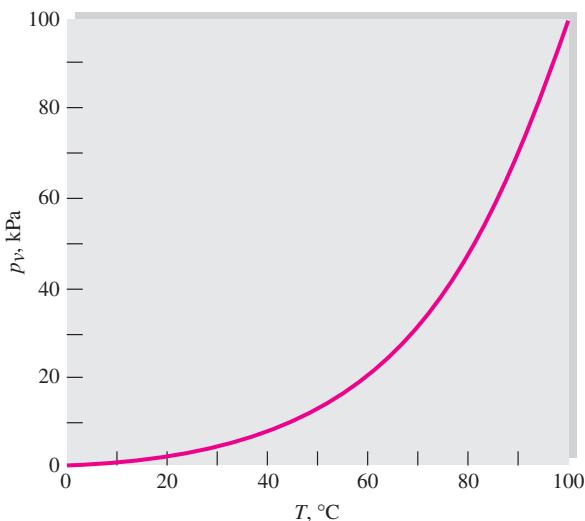

**Fig. 1.13** Vapor pressure of water.  
Data from Table A.5.

where  $p_a$  = ambient pressure

$p_v$  = vapor pressure

$V$  = characteristic flow velocity

$\rho$  = fluid density

Depending on the geometry, a given flow has a critical value of  $Ca$  below which the flow will begin to cavitate. Values of surface tension and vapor pressure of water are given in Table A.5. The vapor pressure of water is plotted in Fig. 1.13.

Figure 1.14a shows cavitation bubbles being formed on the low-pressure surfaces of a marine propeller. When these bubbles move into a higher-pressure region, they collapse impulsively. Cavitation collapse can rapidly spall and erode metallic surfaces and eventually destroy them, as shown in Fig. 1.14b.

### EXAMPLE 1.9



A certain torpedo, moving in fresh water at 10°C, has a minimum-pressure point given by the formula

$$p_{\min} = p_0 - 0.35 \rho V^2 \quad (1)$$

where  $p_0 = 115$  kPa,  $\rho$  is the water density, and  $V$  is the torpedo velocity. Estimate the velocity at which cavitation bubbles will form on the torpedo. The constant 0.35 is dimensionless.

### Solution

- **Assumption:** Cavitation bubbles form when the minimum pressure equals the vapor pressure  $p_v$ .
- **Approach:** Solve Eq. (1) above, which is related to the Bernoulli equation from Example 1.3, for the velocity when  $p_{\min} = p_v$ . Use SI units (m, N, kg, s).
- **Property values:** At 10°C, read Table A.1 for  $\rho = 1000$  kg/m<sup>3</sup> and Table A.5 for  $p_v = 1.227$  kPa.

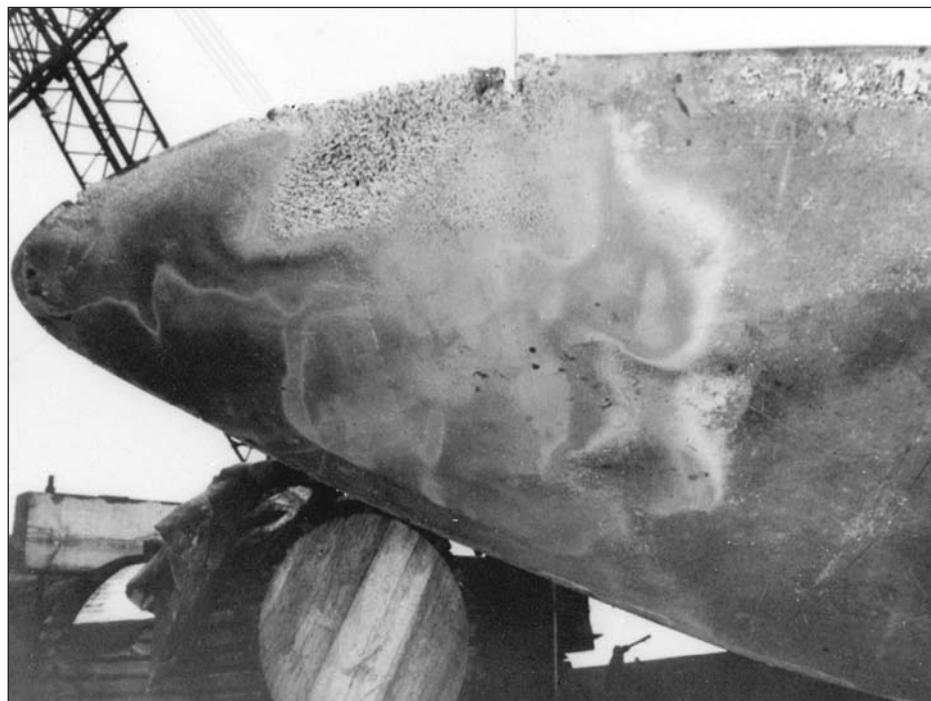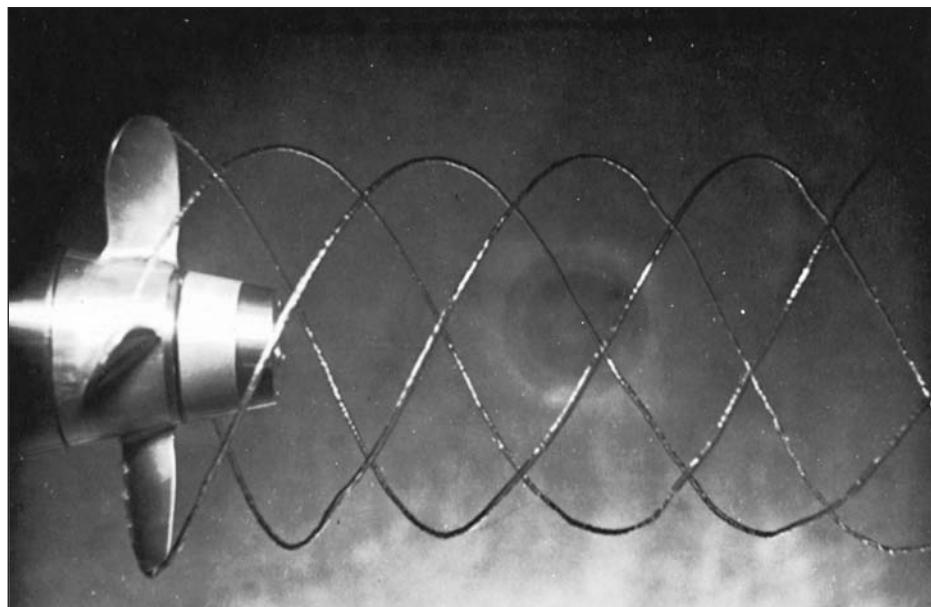

**Fig. 1.14** Two aspects of cavitation bubble formation in liquid flows: (a) beauty: spiral bubble sheets form from the surface of a marine propeller (*courtesy of the Garfield Thomas Water Tunnel, Pennsylvania State University*); (b) ugliness: collapsing bubbles erode a propeller surface (*courtesy of Thomas T. Huang, David Taylor Research Center*).

- *Solution steps:* Insert the known data into Eq. (1) and solve for the velocity, using SI units:

$$p_{\min} = p_v = 1227 \text{ Pa} = 115,000 \text{ Pa} - 0.35 \left( 1000 \frac{\text{kg}}{\text{m}^3} \right) V^2, \text{ with } V \text{ in m/s}$$

$$\text{Solve } V^2 = \frac{(115,000 - 1227)}{0.35(1000)} = 325 \frac{\text{m}^2}{\text{s}^2} \text{ or } V = \sqrt{325} \approx 18.0 \text{ m/s} \quad \text{Ans.}$$


- *Comments:* Note that the use of SI units requires no conversion factors, as discussed in Example 1.3b. Pressures must be entered in pascals, not kilopascals.

### No-Slip and No-Temperature-Jump Conditions

When a fluid flow is bounded by a solid surface, molecular interactions cause the fluid in contact with the surface to seek momentum and energy equilibrium with that surface. All liquids essentially are in equilibrium with the surfaces they contact. All gases are, too, except under the most rarefied conditions [18]. Excluding rarefied gases, then, all fluids at a point of contact with a solid take on the velocity and temperature of that surface:

$$V_{\text{fluid}} \equiv V_{\text{wall}} \quad T_{\text{fluid}} \equiv T_{\text{wall}} \quad (1.35)$$

These are called the *no-slip* and *no-temperature-jump conditions*, respectively. They serve as *boundary conditions* for analysis of fluid flow past a solid surface. Figure 1.15 illustrates the no-slip condition for water flow past the top and bottom surfaces of a fixed thin plate. The flow past the upper surface is disorderly, or turbulent, while

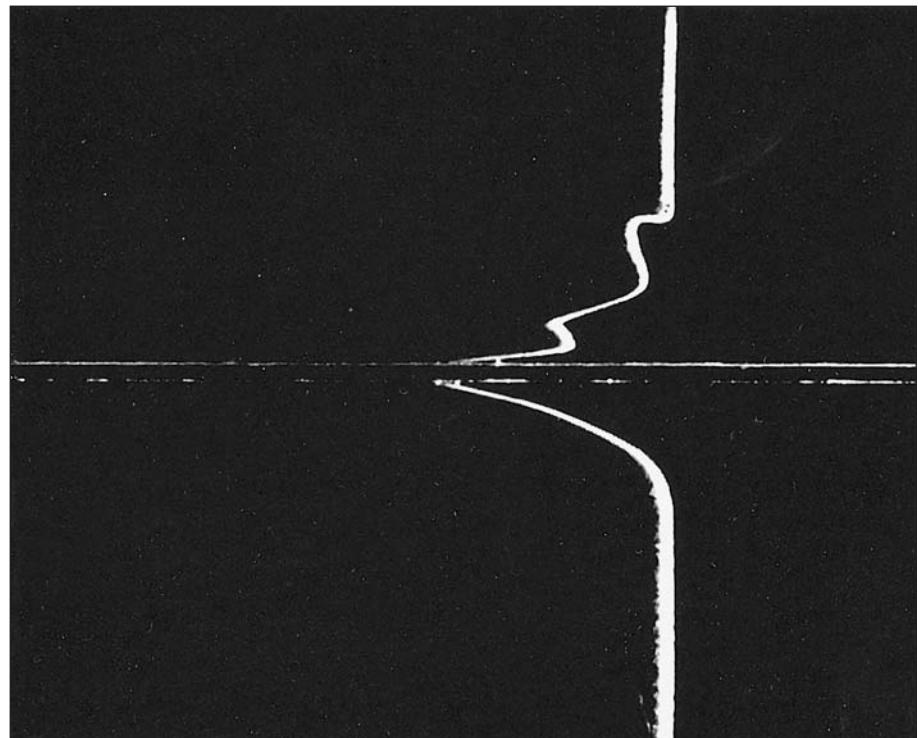

**Fig. 1.15** The no-slip condition in water flow past a thin fixed plate. The upper flow is turbulent; the lower flow is laminar. The velocity profile is made visible by a line of hydrogen bubbles discharged from the wire across the flow. (National Committee for Fluid Mechanics Films, Education Development Center, Inc, ©1972)

the lower surface flow is smooth, or laminar.<sup>7</sup> In both cases there is clearly no slip at the wall, where the water takes on the zero velocity of the fixed plate. The velocity profile is made visible by the discharge of a line of hydrogen bubbles from the wire shown stretched across the flow.

To decrease the mathematical difficulty, the no-slip condition is partially relaxed in the analysis of inviscid flow (Chap. 8). The flow is allowed to “slip” past the surface but not to permeate through the surface

$$V_{\text{normal}}(\text{fluid}) \equiv V_{\text{normal}}(\text{solid}) \quad (1.36)$$

while the tangential velocity  $V_t$  is allowed to be independent of the wall. The analysis is much simpler, but the flow patterns are highly idealized.


For high-viscosity newtonian fluids, the linear velocity assumption and the no-slip conditions can yield some sophisticated approximate analyses for two- and three-dimensional viscous flows. The following example, for a type of rotating-disk viscometer, will illustrate.

### EXAMPLE 1.10

A oil film of viscosity  $\mu$  and thickness  $h \ll R$  lies between a solid wall and a circular disk, as in Fig. E1.10. The disk is rotated steadily at angular velocity  $\Omega$ . Noting that both velocity and shear stress vary with radius  $r$ , derive a formula for the torque  $M$  required to rotate the disk. Neglect air drag.

#### Solution

- *System sketch:* Figure E1.10 shows a side view (a) and a top view (b) of the system.

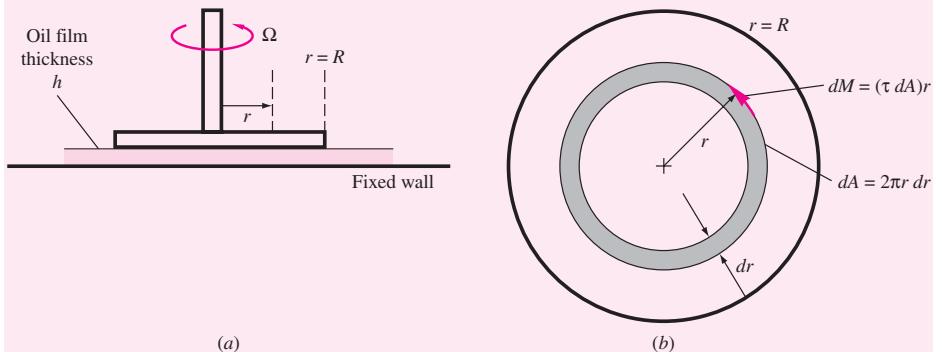

#### E1.10

- *Assumptions:* Linear velocity profile, laminar flow, no-slip, local shear stress given by Eq. (1.23).
- *Approach:* Estimate the shear stress on a circular strip of width  $dr$  and area  $dA = 2\pi r dr$  in Fig. E1.10b, then find the moment  $dM$  about the origin caused by this shear stress. Integrate over the entire disk to find the total moment  $M$ .

<sup>7</sup>Laminar and turbulent flows are studied in Chaps. 6 and 7.

- *Property values:* Constant oil viscosity  $\mu$ . In this steady flow, oil density is not relevant.
- *Solution steps:* At radius  $r$ , the velocity in the oil is tangential, varying from zero at the fixed wall (no-slip) to  $u = \Omega r$  at the disk surface (also no-slip). The shear stress at this position is thus

$$\tau = \mu \frac{du}{dy} \approx \mu \frac{\Omega r}{h}$$

This shear stress is everywhere perpendicular to the radius from the origin (see Fig. E1.10b). Then the total moment about the disk origin, caused by shearing this circular strip, can be found and integrated:

$$dM = (\tau)(dA)r = \left(\frac{\mu\Omega r}{h}\right)(2\pi r dr)r, \quad M = \int dM = \frac{2\pi\mu\Omega}{h} \int_0^R r^3 dr = \frac{\pi\mu\Omega R^4}{2h} \quad \text{Ans.}$$

- *Comments:* This is a simplified engineering analysis, which neglects possible edge effects, air drag on the top of the disk, and the turbulence that might ensue if the disk rotates too fast.

## Slip Flow in Gases

The “free slip” boundary condition, Eq. (1.36), is an unrealistic mathematical artifice to enable inviscid-flow solutions. However, actual, realistic wall slip occurs in rarefied gases, where there are too few molecules to establish momentum equilibrium with the wall. In 1879, the physicist James Clerk Maxwell used the kinetic theory of gases to predict a *slip velocity* at the wall:

$$\delta u_{\text{wall}} \approx \ell \frac{\partial u}{\partial y} \Big|_{\text{wall}} \quad (1.37)$$

where  $\ell$  is the mean free path of the gas, and  $u$  and  $x$  are along the wall. If  $\ell$  is very small compared to the lateral scale  $L$  of the flow, the *Knudsen number*,  $\text{Kn} = \ell/L$ , is small, and the slip velocity is near zero. We will assign a few slip problems, but the details of rarefied gas flow are left for further reading in Refs. 18 and 52.

## Speed of Sound

In gas flow, one must be aware of *compressibility* effects (significant density changes caused by the flow). We shall see in Sec. 4.2 and in Chap. 9 that compressibility becomes important when the flow velocity reaches a significant fraction of the speed of sound of the fluid. The *speed of sound*  $a$  of a fluid is the rate of propagation of small-disturbance pressure pulses (“sound waves”) through the fluid. In Chap. 9 we shall show, from momentum and thermodynamic arguments, that the speed of sound is defined by a pressure-density derivative proportional to the *isentropic bulk modulus*:

$$a^2 = \frac{B}{\rho} = \left( \frac{\partial p}{\partial \rho} \right)_s = k \left( \frac{\partial p}{\partial \rho} \right)_T, \quad k = \frac{c_p}{c_v}$$

where  $B$  = isentropic bulk modulus =  $\rho \left( \frac{\partial p}{\partial \rho} \right)_s$ .

This is true for either a liquid or a gas, but it is for *gases* that the problem of compressibility occurs. For an ideal gas, Eq. (1.10), we obtain the simple formula

$$a_{\text{ideal gas}} = (kRT)^{1/2} \quad (1.38)$$

where  $R$  is the gas constant, Eq. (1.11), and  $T$  the absolute temperature. For example, for air at 20°C,  $a = \{(1.40)[287 \text{ m}^2/(\text{s}^2 \cdot \text{K})](293 \text{ K})\}^{1/2} \approx 343 \text{ m/s}$  (1126 ft/s = 768 mi/h). If, in this case, the air velocity reaches a significant fraction of  $a$ , say, 100 m/s, then we must account for compressibility effects (Chap. 9). Another way to state this is to account for compressibility when the *Mach number*  $\text{Ma} = V/a$  of the flow reaches about 0.3.

The speed of sound of water is tabulated in Table A.5. For near perfect gases, like air, the speed of sound is simply calculated by Eq. (1.38). Many liquids have their bulk modulus listed in Table A.3. Note, however, as discussed in Ref. 51, even a very small amount of dissolved gas in a liquid can reduce the mixture speed of sound by up to 80 percent.

### EXAMPLE 1.11

A commercial airplane flies at 540 mi/h at a standard altitude of 30,000 ft. What is its Mach number?

#### Solution

- *Approach:* Find the “standard” speed of sound; divide it into the velocity, using proper units.
- *Property values:* From Table A.6, at 30,000 ft (9144 m),  $a \approx 303 \text{ m/s}$ . Check this against the standard temperature, estimated from the table to be 229 K. From Eq. (1.38) for air,

$$a = [kR_{\text{air}}T]^{1/2} = [1.4(287)(229)]^{1/2} \approx 303 \text{ m/s.}$$

- *Solution steps:* Convert the airplane velocity to m/s:

$$V = (540 \text{ mi/h})[0.44704 \text{ m/s}/(\text{mi/h})] \approx 241 \text{ m/s.}$$

Then the Mach number is given by

$$\text{Ma} = V/a = (241 \text{ m/s})/(303 \text{ m/s}) = 0.80 \quad \text{Ans.}$$

- *Comments:* This value,  $\text{Ma} = 0.80$ , is typical of present-day commercial airliners.

## 1.10 Basic Flow Analysis Techniques

There are three basic ways to attack a fluid flow problem. They are equally important for a student learning the subject, and this book tries to give adequate coverage to each method:

1. Control-volume, or *integral* analysis (Chap. 3).
2. Infinitesimal system, or *differential* analysis (Chap. 4).
3. Experimental study, or *dimensional* analysis (Chap. 5).

In all cases, the flow must satisfy the three basic laws of mechanics plus a thermodynamic state relation and associated boundary conditions:

1. Conservation of mass (continuity).
2. Linear momentum (Newton's second law).
3. First law of thermodynamics (conservation of energy).
4. A state relation like  $\rho = \rho(p, T)$ .
5. Appropriate boundary conditions at solid surfaces, interfaces, inlets, and exits.

In integral and differential analyses, these five relations are modeled mathematically and solved by computational methods. In an experimental study, the fluid itself performs this task without the use of any mathematics. In other words, these laws are believed to be fundamental to physics, and no fluid flow is known to violate them.

## 1.11 Flow Patterns: Streamlines, Streaklines, and Pathlines

Fluid mechanics is a highly visual subject. The patterns of flow can be visualized in a dozen different ways, and you can view these sketches or photographs and learn a great deal qualitatively and often quantitatively about the flow.

Four basic types of line patterns are used to visualize flows:

1. A *streamline* is a line everywhere tangent to the velocity vector at a given instant.
2. A *pathline* is the actual path traversed by a given fluid particle.
3. A *streakline* is the locus of particles that have earlier passed through a prescribed point.
4. A *timeline* is a set of fluid particles that form a line at a given instant.


The streamline is convenient to calculate mathematically, while the other three are easier to generate experimentally. Note that a streamline and a timeline are instantaneous lines, while the pathline and the streakline are generated by the passage of time. The velocity profile shown in Fig. 1.15 is really a timeline generated earlier by a single discharge of bubbles from the wire. A pathline can be found by a time exposure of a single marked particle moving through the flow. Streamlines are difficult to generate experimentally in unsteady flow unless one marks a great many particles and notes their direction of motion during a very short time interval [32]. In steady flow, where velocity varies only with position, the situation simplifies greatly:

**Streamlines, pathlines, and streaklines are identical in steady flow.**

In fluid mechanics the most common mathematical result for visualization purposes is the streamline pattern. Figure 1.16a shows a typical set of streamlines, and Fig. 1.16b shows a closed pattern called a *streamtube*. By definition the fluid within a streamtube is confined there because it cannot cross the streamlines; thus the streamtube walls need not be solid but may be fluid surfaces.

Figure 1.17 shows an arbitrary velocity vector. If the elemental arc length  $dr$  of a streamline is to be parallel to  $\mathbf{V}$ , their respective components must be in proportion:

$$\text{Streamline: } \frac{dx}{u} = \frac{dy}{v} = \frac{dz}{w} = \frac{dr}{V} \quad (1.39)$$

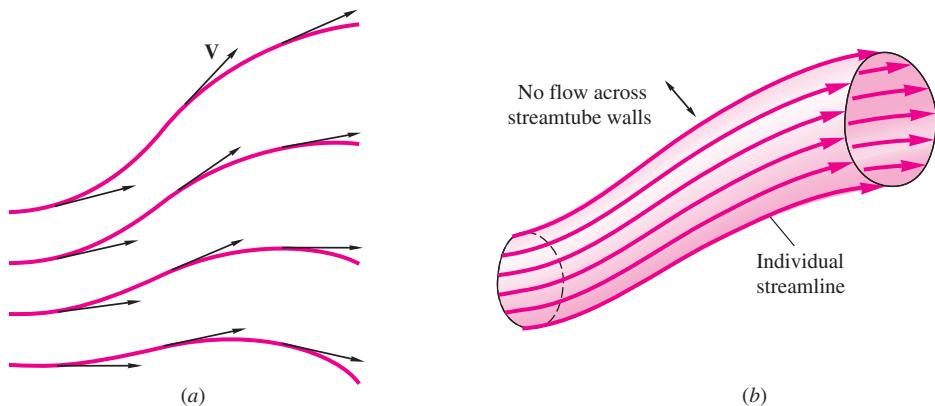

**Fig. 1.16** The most common method of flow-pattern presentation: (a) Streamlines are everywhere tangent to the local velocity vector; (b) a streamtube is formed by a closed collection of streamlines.


If the velocities ( $u, v, w$ ) are known functions of position and time, Eq. (1.39) can be integrated to find the streamline passing through the initial point  $(x_0, y_0, z_0, t_0)$ . The method is straightforward for steady flows (Example 1.12) but may be laborious for unsteady flow.

The pathline, or displacement of a particle, is defined by integration of the velocity components:

$$\text{Pathline:} \quad x = \int u \, dt \quad y = \int v \, dt \quad z = \int w \, dt \quad (1.40)$$

Given  $(u, v, w)$  as known functions of position and time, the integration is begun at a specified initial position  $(x_0, y_0, z_0, t_0)$ . Again the integration may be laborious.

Streaklines, easily generated experimentally with smoke, dye, or bubble releases, are very difficult to compute analytically. See Ref. 33 for mathematical details.

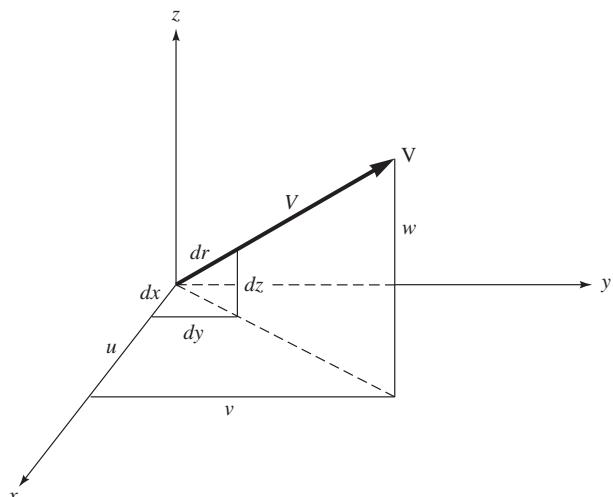

**Fig. 1.17** Geometric relations for defining a streamline.

**EXAMPLE 1.12**

Given the steady two-dimensional velocity distribution

$$u = Kx \quad v = -Ky \quad w = 0 \quad (1)$$

where  $K$  is a positive constant, compute and plot the streamlines of the flow, including directions, and give some possible interpretations of the pattern.

**Solution**

Since time does not appear explicitly in Eq. (1), the motion is steady, so that streamlines, pathlines, and streaklines will coincide. Since  $w = 0$  everywhere, the motion is two-dimensional, in the  $xy$  plane. The streamlines can be computed by substituting the expressions for  $u$  and  $v$  into Eq. (1.39):

$$\frac{dx}{Kx} = -\frac{dy}{Ky}$$

or


$$\int \frac{dx}{x} = -\int \frac{dy}{y}$$

Integrating, we obtain  $\ln x = -\ln y + \ln C$ , or

$$xy = C \quad \text{Ans. (2)}$$

This is the general expression for the streamlines, which are hyperbolas. The complete pattern is plotted in Fig. E1.12 by assigning various values to the constant  $C$ . The arrowheads can be determined only by returning to Eq. (1) to ascertain the velocity component directions, assuming  $K$  is positive. For example, in the upper right quadrant ( $x > 0, y > 0$ ),  $u$  is positive and  $v$  is negative; hence the flow moves down and to the right, establishing the arrowheads as shown.

Note that the streamline pattern is entirely independent of constant  $K$ . It could represent the impingement of two opposing streams, or the upper half could simulate the flow of a

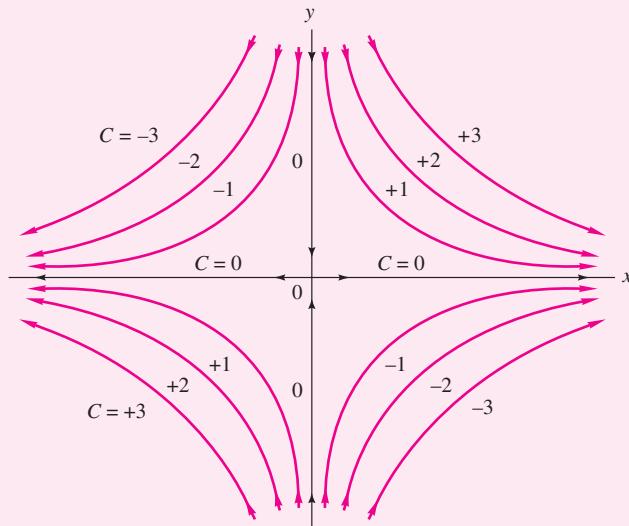

**Fig. E1.12** Streamlines for the velocity distribution given by Eq. (1), for  $K > 0$ .

single downward stream against a flat wall. Taken in isolation, the upper right quadrant is similar to the flow in a 90° corner. This is definitely a realistic flow pattern and is discussed again in Chap. 8.

Finally note the peculiarity that the two streamlines ( $C = 0$ ) have opposite directions and intersect. This is possible only at a point where  $u = v = w = 0$ , which occurs at the origin in this case. Such a point of zero velocity is called a *stagnation point*.

## Flow Visualization

Clever experimentation can produce revealing images of a fluid flow pattern, as shown earlier in Figs. 1.14a and 1.15. For example, streaklines are produced by the continuous release of marked particles (dye, smoke, or bubbles) from a given point. If the flow is steady, the streaklines will be identical to the streamlines and pathlines of the flow.

Some methods of flow visualization include the following [34–36]:

1. Dye, smoke, or bubble discharges.
2. Surface powder or flakes on liquid flows.
3. Floating or neutral-density particles.
4. Optical techniques that detect density changes in gas flows: shadowgraph, schlieren, and interferometer.
5. Tufts of yarn attached to boundary surfaces.
6. Evaporative coatings on boundary surfaces.
7. Luminescent fluids, additives, or bioluminescence.
8. Particle image velocimetry (PIV).


Figures 1.14a and 1.15 were both visualized by bubble releases. Another example is the use of particles in Fig. 1.18 to visualize a flow negotiating a 180° turn in a serpentine channel [42].

Figure 1.18a is at a low, laminar Reynolds number of 1000. The flow is steady, and the particles form streaklines showing that the flow cannot make the sharp turn without separating away from the bottom wall.


Figure 1.18b is at a higher, turbulent Reynolds number of 30,000. The flow is unsteady, and the streaklines would be chaotic and smeared, unsuitable for visualization. The image is thus produced by the new technique of particle image velocimetry [37]. In PIV, hundreds of particles are tagged and photographed at two closely spaced times. Particle movements thus indicate local velocity vectors. These hundreds of vectors are then smoothed by repeated computer operations until the time-mean flow pattern in Fig. 1.18b is achieved. Modern flow experiments and numerical models use computers extensively to create their visualizations, as described in the text by Yang [38].

Mathematical details of streamline/streakline/pathline analysis are given in Ref. 33. References 39–41 are beautiful albums of flow photographs. References 34–36 are monographs on flow visualization techniques.

Fluid mechanics is a marvelous subject for visualization, not just for still (steady) patterns, but also for moving (unsteady) motion studies. An outstanding list of available flow movies and videotapes is given by Carr and Young [43].

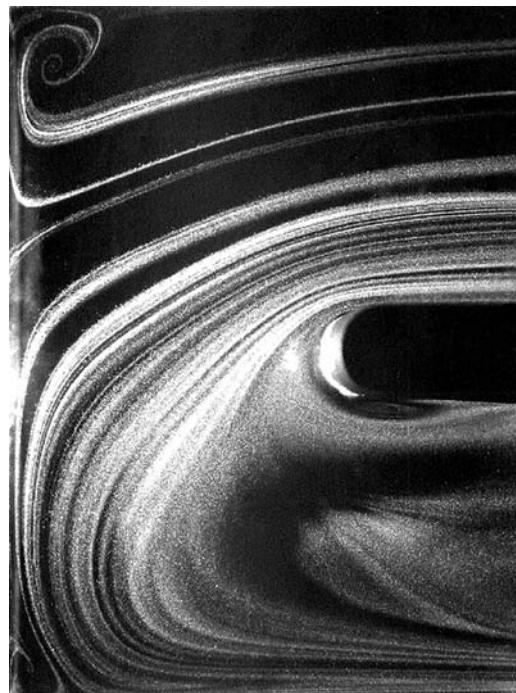

(a)

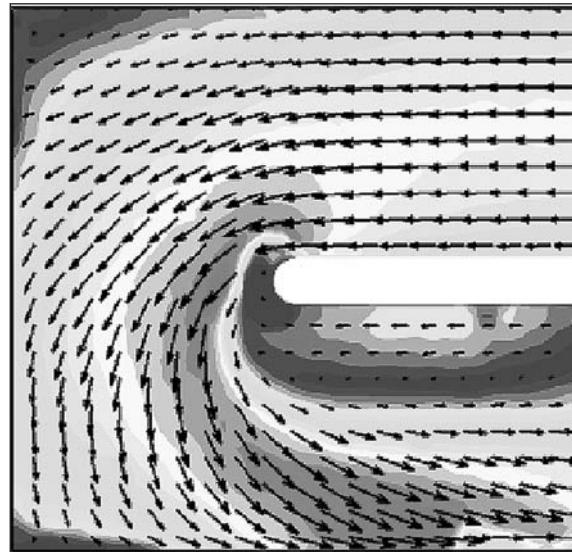

(b)

**Fig. 1.18.** Two visualizations of flow making a 180° turn in a serpentine channel: (a) particle streaklines at a Reynolds number of 1000; (b) time-mean particle image velocimetry (PIV) at a turbulent Reynolds number of 30,000 (From Ref. 42, by permission of the American Society of Mechanical Engineers.)

## 1.12 The Engineering Equation Solver

EES

Most of the examples and exercises in this text are amenable to direct calculation without guessing or iteration or looping. Until recently, only such direct problem assignments, whether “plug-and-chug” or more subtle, were appropriate for undergraduate engineering courses. However, the introduction of computer software *solvers* makes almost any set of algebraic relations viable for analysis and solution. The solver recommended here is the *Engineering Equation Solver* (EES) developed by Klein and Beckman [44].

Any software solver should handle a purely mathematical set of relations, such as the one posed in Ref. 44:  $X \ln(X) = Y^3$ ,  $X^{1/2} = 1/Y$ . Submit that pair to any commercial solver and you will no doubt receive the answer:  $X = 1.467$ ,  $Y = 0.826$ . However, for engineers, in the author’s opinion, EES is superior to most solvers because (1) equations can be entered in any order; (2) scores of mathematical formulas are built-in, such as the Bessel functions; and (3) thermophysical properties of many fluids are built-in, such as the steam tables [23]. Both metric and English units are allowed. Equations need not be written in the traditional BASIC or FORTRAN style. For example,  $X - Y + 1 = 0$  is perfectly satisfactory; there is no need to retype this as  $X = Y - 1$ .

For example, reconsider Example 1.7 as an EES exercise. One would first enter the reference properties  $p_0$  and  $\rho_0$  plus the curve-fit constants  $B$  and  $n$ :

$$P_z = 1.0$$

$$\rho_{0z} = 2.0$$

$$B = 3000$$

$$n = 7$$

Then specify the given pressure ratio and the curve-fit relation, Eq. (1.19), for the equation of state of water:

$$P = 1100 * P_z$$

$$P/P_z = (B + 1) * (\rho/\rho_{0z})^n - B$$

If you request an initial opinion from the CHECK/FORMAT menu, EES states that there are six equations in six unknowns and there are no obvious difficulties. Then request SOLVE from the menu and EES quickly prints out  $\rho = 2.091$ , the correct answer as seen already in Example 1.6. It also prints out values of the other five variables. Occasionally EES reports “unable to converge” and states what went wrong (division by zero, square root of a negative number, etc.). One needs only to improve the guesses and ranges of the unknowns in Variable Information to assist EES to the solution.

In subsequent chapters we will illustrate some implicit (iterative) examples by using EES and will also assign some advanced problem exercises for which EES is an ideal approach. The use of an engineering solver, notably EES, is recommended to all engineers in this era of the personal computer. If EES is not available, the writer recommends using an Excel spreadsheet.

## 1.13 Uncertainty in Experimental Data

Uncertainty is a fact of life in engineering. We rarely know any engineering properties or variables to an extreme degree of accuracy. The *uncertainty* of data is normally defined as the band within which one is 95 percent confident that the true value lies. Recall from Fig. 1.7 that the uncertainty of the ratio  $\mu/\mu_c$  was estimated as  $\pm 20$  percent.

There are whole monographs devoted to the subject of experimental uncertainty [45–46], so we give only a brief summary here.

All experimental data have uncertainty, separated into two causes: (1) a *systematic* error due to the instrument or its environment and (2) a *random* error due to scatter in repeated readings. We minimize the systematic error by careful calibration and then estimate the random error statistically. The judgment of the experimenter is of crucial importance.

Here is the accepted mathematical estimate. Suppose a desired result  $P$  depends upon a single experimental variable  $x$ . If  $x$  has an uncertainty  $\delta x$ , then the uncertainty  $\delta P$  is estimated from the calculus:

$$\delta P \approx \frac{\partial P}{\partial x} \delta x$$

If there are multiple variables,  $P = P(x_1, x_2, x_3, \dots, x_N)$ , the overall uncertainty  $\delta P$  is calculated as a root-mean-square estimate [48]:

$$\delta P = \left[ \left( \frac{\partial P}{\partial x_1} \delta x_1 \right)^2 + \left( \frac{\partial P}{\partial x_2} \delta x_2 \right)^2 + \dots + \left( \frac{\partial P}{\partial x_N} \delta x_N \right)^2 \right]^{1/2} \quad (1.41)$$

This calculation is statistically much more probable than simply adding linearly the various uncertainties  $\delta x_i$ , thereby making the unlikely assumption that all variables simultaneously attain maximum error. Note that it is the responsibility of the experimenter to establish and report accurate estimates of all the relevant uncertainties  $\delta x_i$ .

If the quantity  $P$  is a simple power-law expression of the other variables, for example,  $P = \text{Const } x_1^{n_1} x_2^{n_2} x_3^{n_3} \dots$ , then each derivative in Eq. (1.41) is proportional to  $P$  and the relevant power-law exponent and is inversely proportional to that variable.

If  $P = \text{Const } x_1^{n_1} x_2^{n_2} x_3^{n_3} \dots$ , then

$$\frac{\partial P}{\partial x_1} = \frac{n_1 P}{x_1}, \quad \frac{\partial P}{\partial x_2} = \frac{n_2 P}{x_2}, \quad \frac{\partial P}{\partial x_3} = \frac{n_3 P}{x_3}, \dots$$

Thus, from Eq. (1.41),

$$\frac{\delta P}{P} = \left[ \left( n_1 \frac{\delta x_1}{x_1} \right)^2 + \left( n_2 \frac{\delta x_2}{x_2} \right)^2 + \left( n_3 \frac{\delta x_3}{x_3} \right)^2 + \dots \right]^{1/2} \quad (1.42)$$

Evaluation of  $\delta P$  is then a straightforward procedure, as in the following example.

### EXAMPLE 1.13

The so-called dimensionless Moody pipe friction factor  $f$ , plotted in Fig. 6.13, is calculated in experiments from the following formula involving pipe diameter  $D$ , pressure drop  $\Delta p$ , density  $\rho$ , volume flow rate  $Q$ , and pipe length  $L$ :

$$f = \frac{\pi^2}{8} \frac{D^5 \Delta p}{\rho Q^2 L}$$

Measurement uncertainties are given for a certain experiment:  $D = 0.5$  percent,  $\Delta p = 2.0$  percent,  $\rho = 1.0$  percent,  $Q = 3.5$  percent, and  $L = 0.4$  percent. Estimate the overall uncertainty of the friction factor  $f$ .

**Solution**

The coefficient  $\pi^2/8$  is assumed to be a pure theoretical number, with no uncertainty. The other variables may be collected using Eqs. (1.41) and (1.42):

$$\begin{aligned} U &= \frac{\delta f}{f} = \left[ \left( 5 \frac{\delta D}{D} \right)^2 + \left( 1 \frac{\delta \Delta p}{\Delta p} \right)^2 + \left( 1 \frac{\delta \rho}{\rho} \right)^2 + \left( 2 \frac{\delta Q}{Q} \right)^2 + \left( 1 \frac{\delta L}{L} \right)^2 \right]^{1/2} \\ &= [\{5(0.5\%)^2 + (2.0\%)^2 + (1.0\%)^2 + \{2(3.5\%)^2 + (0.4\%)^2\}]^{1/2} \approx 7.8\% \quad \text{Ans.} \end{aligned}$$

By far the dominant effect in this particular calculation is the 3.5 percent error in  $Q$ , which is amplified by doubling, due to the power of 2 on flow rate. The diameter uncertainty, which is quintupled, would have contributed more had  $\delta D$  been larger than 0.5 percent.

## 1.14 The Fundamentals of Engineering (FE) Examination

The road toward a professional engineer's license has a first stop, the Fundamentals of Engineering Examination, known as the FE exam. It was formerly known as the Engineer-in-Training (E-I-T) Examination. This eight-hour national test will probably soon be required of all engineering graduates, not just for licensure, but as a student assessment tool. The 120-problem four-hour morning session covers many general studies:

<b>Mathematics—15%</b>	<b>Ethics and business practices—7%</b>	<b>Material properties—7%</b>
<b>Engineering probability and statistics—7%</b>	<b>Engineering economics—8%</b>	<b>Fluid mechanics 7%</b>
<b>Chemistry—9%</b>	<b>Engineering mechanics—10%</b>	<b>Electricity and magnetism—9%</b>
<b>Computers—7%</b>	<b>Strength of materials—7%</b>	<b>Thermodynamics—7%</b>

For the 60-problem, four-hour afternoon session you may choose one of seven modules: chemical, civil, electrical, environmental, industrial, mechanical, and other/general engineering. Note that fluid mechanics is an integral topic of the examination. Therefore, for practice, this text includes a number of end-of-chapter FE problems where appropriate.

The format for the FE exam questions is multiple-choice, usually with five selections, chosen carefully to tempt you with plausible answers if you used incorrect units, forgot to double or halve something, are missing a factor of  $\pi$ , or the like. In some cases, the selections are unintentionally ambiguous, such as the following example from a previous exam:

- Transition from laminar to turbulent flow occurs at a Reynolds number of  
 (A) 900   (B) 1200   (C) 1500   (D) 2100   (E) 3000

The “correct” answer was graded as (D),  $Re = 2100$ . Clearly the examiner was thinking, but forgot to specify,  $Re_d$  for *flow in a smooth circular pipe*, since (see Chaps. 6 and 7) transition is highly dependent on geometry, surface roughness, and the length scale used in the definition of  $Re$ . The moral is not to get peevish about the exam but simply to go with the flow (pun intended) and decide which answer best fits an undergraduate training situation. Every effort has been made to keep the FE exam questions in this text unambiguous.

## Problems


Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk as in Prob. 1.18. Problems labeled with an EES icon  (for example, Prob. 1.61) will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon  may require the use of a computer. The standard end-of-chapter problems 1.1 to 1.90 (categorized in the problem list below) are followed by fundamentals of engineering (FE) exam problems FE1.1 to FE1.10 and comprehensive problems C1.1 to C1.12.

### Problem Distribution

Section	Topic	Problems
1.1, 1.4, 1.5	Fluid continuum concept	1.1–1.4
1.6	Dimensions and units	1.5–1.23
1.8	Thermodynamic properties	1.24–1.37
1.9	Viscosity, no-slip condition	1.38–1.61
1.9	Surface tension	1.62–1.71
1.9	Vapor pressure; cavitation	1.72–1.74
1.9	Speed of sound, Mach number	1.75–1.80
1.11	Streamlines	1.81–1.83
1.2	History of fluid mechanics	1.84–1.85a#
1.13	Experimental uncertainty	1.86–1.90

### The concept of a fluid

- P1.1** A gas at 20°C may be considered *rarefied*, deviating from the continuum concept, when it contains less than  $10^{12}$  molecules per cubic millimeter. If Avogadro's number is 6,023 E23 molecules per mole, what absolute pressure (in Pa) for air does this represent?
- P1.2** Table A.6 lists the density of the standard atmosphere as a function of altitude. Use these values to estimate, crudely—say, within a factor of 2—the number of molecules of air in the entire atmosphere of the earth.
- P1.3** For the triangular element in Fig. P1.3, show that a *tilted* free liquid surface, in contact with an atmosphere at pressure  $p_a$ , must undergo shear stress and hence begin to flow. Hint: Account for the weight of the fluid and show that a no-shear condition will cause horizontal forces to be out of balance.

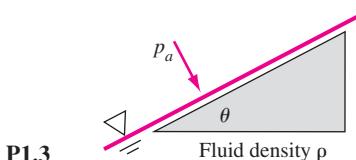

P1.3

- P1.4** Sand, and other granular materials, appear to *flow*; that is, you can pour them from a container or a hopper. There are whole textbooks on the “transport” of granular materials [54]. Therefore, is sand a *fluid*? Explain.

### Dimensions and units

- P1.5** The *mean free path* of a gas,  $l$ , is defined as the average distance traveled by molecules between collisions. A proposed formula for estimating  $l$  of an ideal gas is

$$l = 1.26 \frac{\mu}{\rho \sqrt{RT}}$$

What are the dimensions of the constant 1.26? Use the formula to estimate the mean free path of air at 20°C and 7 kPa. Would you consider air rarefied at this condition?

- P1.6** The Saybolt Universal Viscometer, now outdated but still sold in scientific catalogs, measures the kinematic viscosity of lubricants [Ref. 49, p. 40]. A specialized container, held at constant temperature, is filled with the test fluid. Measure the time  $t$  for 60 ml of the fluid to drain from a small hole or short tube in the bottom. This time unit, called *Saybolt universal seconds*, or SUS, is correlated with kinematic viscosity  $\nu$ , in centistokes (1 stoke = 1 cm<sup>2</sup>/s), by the following curve-fit formula:

$$\nu = 0.215t - \frac{145}{t} \quad \text{for } 40 < t < 100 \text{ SUS}$$

- (a) Comment on the dimensionality of this equation.  
 (b) Is the formula physically correct? (c) Since  $\nu$  varies strongly with temperature, how does temperature enter into the formula? (d) Can we easily convert  $\nu$  from centistokes to mm<sup>2</sup>/s?

- P1.7** Convert the following inappropriate quantities into SI units: (a) a velocity of 5937 yards per hour; (b) a volume flow rate of 4903 acre-feet of water per week; and (c) the mass flow rate of 25,616 gallons per day of SAE 30W oil at 20°C.

- P1.8** Suppose we know little about the strength of materials but are told that the bending stress  $\sigma$  in a beam is *proportional* to the beam half-thickness  $y$  and also depends on the bending moment  $M$  and the beam area moment of inertia  $I$ . We also learn that, for the particular case  $M = 2900 \text{ in} \cdot \text{lbf}$ ,  $y = 1.5 \text{ in}$ , and  $I = 0.4 \text{ in}^4$ , the predicted stress is 75 MPa. Using this information and dimensional reasoning only, find, to three significant figures, the only possible dimensionally homogeneous formula  $\sigma = y f(M, I)$ .

- P1.9** An inverted conical container, 26 in in diameter and 44 in high, is filled with a liquid at 20°C and weighed. The liquid weight is found to be 5030 ounces. (a) What is the density of the fluid, in  $\text{kg}/\text{m}^3$ ? (b) What fluid might this be? Assume standard gravity,  $g = 9.807 \text{ m/s}^2$ .

- P1.10** The Stokes-Oseen formula [33] for drag force  $F$  on a sphere of diameter  $D$  in a fluid stream of low velocity  $V$ , density  $\rho$ , and viscosity  $\mu$  is

$$F = 3\pi\mu DV + \frac{9\pi}{16}\rho V^2 D^2$$


Is this formula dimensionally homogeneous?

- P1.11** In English Engineering units, the specific heat  $c_p$  of air at room temperature is approximately 0.24  $\text{Btu}/(\text{lbfm} \cdot ^\circ\text{F})$ . When working with kinetic energy relations, it is more appropriate to express  $c_p$  as a velocity-squared per absolute degree. Give the numerical value, in this form, of  $c_p$  for air in (a) SI units, and (b) BG units.

- P1.12** For low-speed (laminar) steady flow through a circular pipe, as shown in Fig. P1.12, the velocity  $u$  varies with radius and takes the form

$$u = B \frac{\Delta p}{\mu} (r_0^2 - r^2)$$

where  $\mu$  is the fluid viscosity and  $\Delta p$  is the pressure drop from entrance to exit. What are the dimensions of the constant  $B$ ?

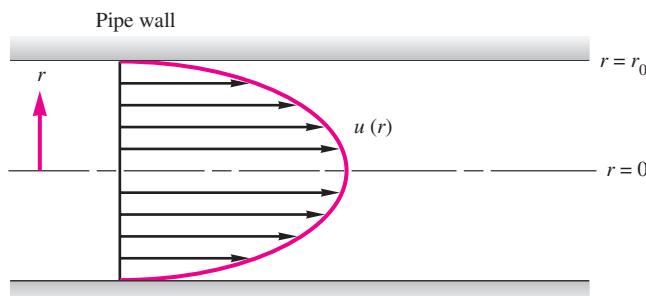


**P1.12**

- P1.13** The efficiency  $\eta$  of a pump is defined as the (dimensionless) ratio of the power developed by the flow to the power required to drive the pump:

$$\eta = \frac{Q\Delta p}{\text{input power}}$$

where  $Q$  is the volume rate of flow and  $\Delta p$  is the pressure rise produced by the pump. Suppose that a certain pump develops a pressure rise of 35  $\text{lbf/in}^2$  when its flow rate is 40 L/s. If the input power is 16 hp, what is the efficiency?

- \*P1.14** Figure P1.14 shows the flow of water over a dam. The volume flow  $Q$  is known to depend only on crest width  $B$ , acceleration of gravity  $g$ , and upstream water height  $H$  above the dam crest. It is further known that  $Q$  is proportional to  $B$ . What is the form of the only possible dimensionally homogeneous relation for this flow rate?

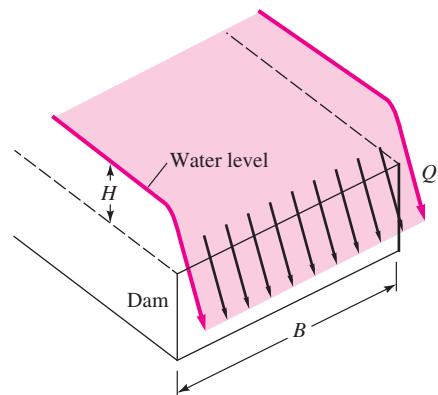

**P1.14**

- P1.15** Mott [49] recommends the following formula for the friction head loss  $h_f$  in ft, for flow through a pipe of length  $L$  and diameter  $D$  (both must be in ft):

$$h_f = L \left( \frac{Q}{0.551 A C_h D^{0.63}} \right)^{1.852}$$

where  $Q$  is the volume flow rate in  $\text{ft}^3/\text{s}$ ,  $A$  is the pipe cross-section area in  $\text{ft}^2$ , and  $C_h$  is a dimensionless coefficient whose value is approximately 100. Determine the dimensions of the constant 0.551.

- P1.16** Algebraic equations such as Bernoulli's relation, Eq. (1) of Example 1.3, are dimensionally consistent, but what about differential equations? Consider, for example, the boundary-layer  $x$ -momentum equation, first derived by Ludwig Prandtl in 1904:

$$\rho u \frac{\partial u}{\partial x} + \rho v \frac{\partial u}{\partial y} = -\frac{\partial p}{\partial x} + \rho g_x + \frac{\partial \tau}{\partial y}$$

where  $\tau$  is the boundary-layer shear stress and  $g_x$  is the component of gravity in the  $x$  direction. Is this equation dimensionally consistent? Can you draw a general conclusion?

- P1.17** The Hazen-Williams hydraulics formula for volume rate of flow  $Q$  through a pipe of diameter  $D$  and length  $L$  is given by

$$Q \approx 61.9 D^{2.63} \left( \frac{\Delta p}{L} \right)^{0.54}$$

where  $\Delta p$  is the pressure drop required to drive the flow. What are the dimensions of the constant 61.9? Can this formula be used with confidence for various liquids and gases?

- \*P1.18** For small particles at low velocities, the first term in the Stokes-Oseen drag law, Prob. 1.10, is dominant; hence,  $F \approx KV$ , where  $K$  is a constant. Suppose a particle of mass  $m$  is constrained to move horizontally from the initial position  $x = 0$  with initial velocity  $V_0$ . Show (a) that its velocity will decrease exponentially with time and (b) that it will stop after traveling a distance  $x = mV_0/K$ .

- P1.19** In his study of the circular hydraulic jump formed by a faucet flowing into a sink, Watson [53] proposed a parameter combining volume flow rate  $Q$ , density  $\rho$ , and viscosity  $\mu$  of the fluid, and depth  $h$  of the water in the sink. He claims that his grouping is dimensionless, with  $Q$  in the numerator. Can you verify this?

- P1.20** Books on porous media and atomization claim that the viscosity  $\mu$  and surface tension  $Y$  of a fluid can be combined with a characteristic velocity  $U$  to form an important dimensionless parameter. (a) Verify that this is so. (b) Evaluate this parameter for water at 20°C and a velocity of 3.5 cm/s. Note: You get extra credit if you know the name of this parameter.

- P1.21** In 1908, Prandtl's student, Heinrich Blasius, proposed the following formula for the wall shear stress  $\tau_w$  at a position  $x$  in viscous flow at velocity  $V$  past a flat surface:

$$\tau_w = 0.332 \rho^{1/2} \mu^{1/2} V^{3/2} x^{-1/2}$$

Determine the dimensions of the constant 0.332.

- P1.22** The *Ekman number*,  $E_k$ , arises in geophysical fluid dynamics. It is a dimensionless parameter combining seawater density  $\rho$ , a characteristic length  $L$ , seawater viscosity  $\mu$ , and the Coriolis frequency  $\Omega \sin\varphi$ , where  $\Omega$  is the rotation rate of the earth and  $\varphi$  is the latitude angle. Determine the correct form of  $E_k$  if the viscosity is in the numerator.

- P1.23** During World War II, Sir Geoffrey Taylor, a British fluid dynamicist, used dimensional analysis to estimate the energy released by an atomic bomb explosion. He assumed that the energy released  $E$ , was a function of blast wave radius  $R$ , air density  $\rho$ , and time  $t$ . Arrange these variables into a single dimensionless group, which we may term the *blast wave number*.

## Thermodynamic properties

- P1.24** Air, assumed to be an ideal gas with  $k = 1.40$ , flows isentropically through a nozzle. At section 1, conditions are sea level standard (see Table A.6). At section 2, the temperature is  $-50^\circ\text{C}$ . Estimate (a) the pressure, and (b) the density of the air at section 2.

- P1.25** A tank contains  $0.9 \text{ m}^3$  of helium at  $200 \text{ kPa}$  and  $20^\circ\text{C}$ . Estimate the total mass of this gas, in kg, (a) on earth and (b) on the moon. Also, (c) how much heat transfer, in MJ, is required to expand this gas at constant temperature to a new volume of  $1.5 \text{ m}^3$ ?

- P1.26** When we in the United States say a car's tire is filled "to 32 lb," we mean that its internal pressure is 32 lbf/in<sup>2</sup> above the ambient atmosphere. If the tire is at sea level, has a volume of  $3.0 \text{ ft}^3$ , and is at  $75^\circ\text{F}$ , estimate the total weight of air, in lbf, inside the tire.

- P1.27** For steam at  $40 \text{ lbf/in}^2$ , some values of temperature and specific volume are as follows, from Ref. 23:

$T, ^\circ\text{F}$	400	500	600	700	800
$v, \text{ft}^3/\text{lbm}$	12.624	14.165	15.685	17.195	18.699

Is steam, for these conditions, nearly a perfect gas, or is it wildly nonideal? If reasonably perfect, find a least-squares<sup>†</sup> value for the gas constant  $R$ , in  $\text{m}^2/(\text{s}^2 \cdot \text{K})$ ; estimate the percentage error in this approximation; and compare with Table A.4.

- P1.28** Wet atmospheric air at 100 percent relative humidity contains saturated water vapor and, by Dalton's law of partial pressures,

$$p_{\text{atm}} = p_{\text{dry air}} + p_{\text{water vapor}}$$

Suppose this wet atmosphere is at  $40^\circ\text{C}$  and 1 atm. Calculate the density of this 100 percent humid air, and compare it with the density of dry air at the same conditions.

- P1.29** A compressed-air tank holds  $5 \text{ ft}^3$  of air at  $120 \text{ lbf/in}^2$  "gage," that is, above atmospheric pressure. Estimate the energy, in ft-lbf, required to compress this air from the atmosphere, assuming an ideal isothermal process.

- P1.30** Repeat Prob. 1.29 if the tank is filled with compressed water instead of air. Why is the result thousands of times less than the result of  $215,000 \text{ ft} \cdot \text{lbf}$  in Prob. 1.29?

- P1.31** One cubic foot of argon gas at  $10^\circ\text{C}$  and 1 atm is compressed isentropically to a pressure of  $600 \text{ kPa}$ . (a) What will be its new pressure and temperature? (b) If it is allowed to cool at this new volume back to  $10^\circ\text{C}$ , what will be the final pressure?

<sup>†</sup>The concept of "least-squares" error is very important and should be learned by everyone.

- P1.32** A blimp is approximated by a prolate spheroid 90 m long and 30 m in diameter. Estimate the weight of 20°C gas within the blimp for (a) helium at 1.1 atm and (b) air at 1.0 atm. What might the *difference* between these two values represent (see Chap. 2)?

- P1.33** Experimental data [55] for the density of n-pentane liquid for high pressures, at 50°C, are listed as follows:

Pressure, MPa	0.01	10.23	20.70	34.31
Density, kg/m <sup>3</sup>	586.3	604.1	617.8	632.8

Interestingly, this data does not fit the author's suggested liquid state relation, Eq. (1.19), very well. Therefore (a) fit the data, as best you can, to a second-order polynomial. Use your curve-fit to estimate (b) the bulk modulus of n-pentane at 1 atm, and (c) the speed of sound of n-pentane at a pressure of 25 MPa.

- P1.34** Consider steam at the following state near the saturation line:  $(p_1, T_1) = (1.31 \text{ MPa}, 290^\circ\text{C})$ . Calculate and compare, for an ideal gas (Table A.4) and the steam tables (or the EES software), (a) the density  $\rho_1$  and (b) the density  $\rho_2$  if the steam expands isentropically to a new pressure of 414 kPa. Discuss your results.

- P1.35** In Table A.4, most common gases (air, nitrogen, oxygen, hydrogen) have a specific heat ratio  $k \approx 1.40$ . Why do argon and helium have such high values? Why does NH<sub>3</sub> have such a low value? What is the lowest  $k$  for any gas that you know of?

- P1.36** The isentropic bulk modulus  $B$  of a fluid is defined in Eq. (1.38). (a) What are its dimensions? Using theoretical  $p$ - $\rho$  relations for a gas or liquid, estimate the bulk modulus, in Pa, of (b) chlorine at 100°C and 10 atm; and (c) water, at 20°C and 1000 atm.

- P1.37** A near-ideal gas has a molecular weight of 44 and a specific heat  $c_v = 610 \text{ J/(kg} \cdot \text{K)}$ . What are (a) its specific heat ratio,  $k$ , and (b) its speed of sound at 100°C?

### Viscosity, no-slip condition

- P1.38** In Fig. 1.8, if the fluid is glycerin at 20°C and the width between plates is 6 mm, what shear stress (in Pa) is required to move the upper plate at 5.5 m/s? What is the Reynolds number if  $L$  is taken to be the distance between plates?

- P1.39** Knowing  $\mu$  for air at 20°C from Table 1.4, estimate its viscosity at 500°C by (a) the power law and (b) the Sutherland law. Also make an estimate from (c) Fig. 1.7. Compare with the accepted value of  $\mu \approx 3.58 \text{ E-5 kg/m} \cdot \text{s}$ .

- \*P1.40** For liquid viscosity as a function of temperature, a simplification of the log-quadratic law of Eq. (1.30) is *Andrade's equation* [21],  $\mu \approx A \exp(B/T)$ , where ( $A, B$ )

are curve-fit constants and  $T$  is absolute temperature. Fit this relation to the data for water in Table A.1 and estimate the percentage error of the approximation.

- P1.41** An aluminum cylinder weighing 30 N, 6 cm in diameter and 40 cm long, is falling concentrically through a long vertical sleeve of diameter 6.04 cm. The clearance is filled with SAE 50 oil at 20°C. Estimate the *terminal* (zero acceleration) fall velocity. Neglect air drag and assume a linear velocity distribution in the oil. *Hint:* You are given diameters, not radii.

- P1.42** Experimental values for the viscosity of helium at 1 atm are as follows:


$T, \text{ K}$	200	400	600	800	1000	1200
$\mu, \text{ kg/(m} \cdot \text{s)}$	1.50 E-5	2.43 E-5	3.20 E-5	3.88 E-5	4.50 E-5	5.08 E-5

Fit these values to either (a) a power law or (b) the Sutherland law, Eq. (1.29).

- P1.43** For the flow of gas between two parallel plates of Fig. 1.8, reanalyze for the case of *slip flow* at both walls. Use the simple slip condition,  $\delta u_{\text{wall}} = \ell (du/dy)_{\text{wall}}$ , where  $\ell$  is the mean free path of the fluid. Sketch the expected velocity profile and find an expression for the shear stress at each wall.

- P1.44** SAE 50 oil at 20°C fills the concentric annular space between an inner cylinder,  $r_i = 5 \text{ cm}$ , and an outer cylinder,  $r_o = 6 \text{ cm}$ . The length of the cylinders is 120 cm. If the outer cylinder is fixed and the inner cylinder rotates at 900 rev/min, use the linear profile approximation to estimate the power, in watts, required to maintain the rotation. Neglect any temperature change of the oil.

- P1.45** A block of weight  $W$  slides down an inclined plane while lubricated by a thin film of oil, as in Fig. P1.45. The film contact area is  $A$  and its thickness is  $h$ . Assuming a linear velocity distribution in the film, derive an expression for the "terminal" (zero-acceleration) velocity  $V$  of the block. Find the terminal velocity of the block if the block mass is 6 kg,  $A = 35 \text{ cm}^2$ ,  $\theta = 15^\circ$ , and the film is 1-mm-thick SAE 30 oil at 20°C.

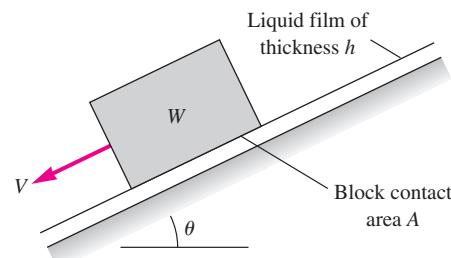

**P1.45**

- P1.46** A simple and popular model for two nonnewtonian fluids in Fig. 1.9a is the *power-law*:

$$\tau \approx C \left( \frac{du}{dy} \right)^n$$


where  $C$  and  $n$  are constants fit to the fluid [16]. From Fig. 1.9a, deduce the values of the exponent  $n$  for which the fluid is (a) newtonian, (b) dilatant, and (c) pseudoplastic. Consider the specific model constant  $C = 0.4 \text{ N} \cdot \text{s}^n/\text{m}^2$ , with the fluid being sheared between two parallel plates as in Fig. 1.8. If the shear stress in the fluid is 1200 Pa, find the velocity  $V$  of the upper plate for the cases (d)  $n = 1.0$ , (e)  $n = 1.2$ , and (f)  $n = 0.8$ .

- P1.47** Data for the apparent viscosity of average human blood, at normal body temperature of 37°C, varies with shear strain rate, as shown in the following table.

Strain rate, $\text{s}^{-1}$	1	10	100	1000
Apparent viscosity, $\text{kg}/(\text{m} \cdot \text{s})$	0.011	0.009	0.006	0.004

(a) Is blood a nonnewtonian fluid? (b) If so, what type of fluid is it? (c) How do these viscosities compare with plain water at 37°C?

- P1.48** A thin plate is separated from two fixed plates by very viscous liquids  $\mu_1$  and  $\mu_2$ , respectively, as in Fig. P1.48. The plate spacings  $h_1$  and  $h_2$  are unequal, as shown. The contact area is  $A$  between the center plate and each fluid. (a) Assuming a linear velocity distribution in each fluid, derive the force  $F$  required to pull the plate at velocity  $V$ . (b) Is there a necessary *relation* between the two viscosities,  $\mu_1$  and  $\mu_2$ ?

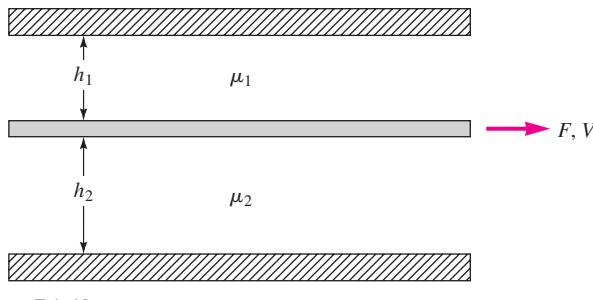

P1.48

- P1.49** An amazing number of commercial and laboratory devices have been developed to measure fluid viscosity, as described in Refs. 29 and 49. Consider a concentric shaft, fixed axially and rotated inside the sleeve. Let the inner and outer cylinders have radii  $r_i$  and  $r_o$ , respectively, with total sleeve length  $L$ . Let the rotational rate

be  $\Omega$  (rad/s) and the applied torque be  $M$ . Using these parameters, derive a theoretical relation for the viscosity  $\mu$  of the fluid between the cylinders.

- P1.50** A simple viscometer measures the time  $t$  for a solid sphere to fall a distance  $L$  through a test fluid of density  $\rho$ . The fluid viscosity  $\mu$  is then given by


$$\mu \approx \frac{W_{\text{net}} t}{3\pi D L} \quad \text{if } t \geq \frac{2\rho D L}{\mu}$$

where  $D$  is the sphere diameter and  $W_{\text{net}}$  is the sphere net weight in the fluid. (a) Prove that both of these formulas are dimensionally homogeneous. (b) Suppose that a 2.5 mm diameter aluminum sphere (density 2700 kg/m<sup>3</sup>) falls in an oil of density 875 kg/m<sup>3</sup>. If the time to fall 50 cm is 32 s, estimate the oil viscosity and verify that the inequality is valid.

- P1.51** An approximation for the boundary-layer shape in Figs. 1.6b and P1.51 is the formula


$$u(y) \approx U \sin\left(\frac{\pi y}{2\delta}\right), \quad 0 \leq y \leq \delta$$

where  $U$  is the stream velocity far from the wall and  $\delta$  is the boundary layer thickness, as in Fig. P1.51. If the fluid is helium at 20°C and 1 atm, and if  $U = 10.8 \text{ m/s}$  and  $\delta = 3 \text{ cm}$ , use the formula to (a) estimate the wall shear stress  $\tau_w$  in Pa, and (b) find the position in the boundary layer where  $\tau$  is one-half of  $\tau_w$ .

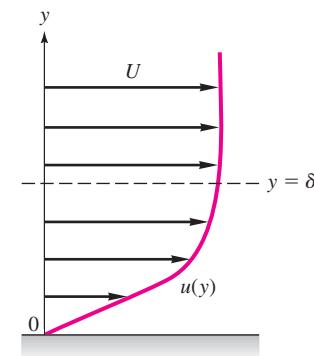

P1.51


- P1.52** The belt in Fig. P1.52 moves at a steady velocity  $V$  and skims the top of a tank of oil of viscosity  $\mu$ , as shown.

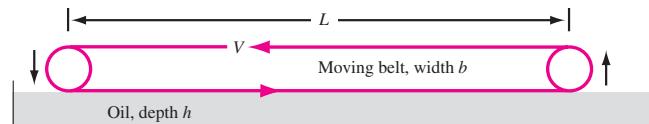

P1.52


Assuming a linear velocity profile in the oil, develop a simple formula for the required belt-drive power  $P$  as a function of  $(h, L, V, b, \mu)$ . What belt-drive power  $P$ , in watts, is required if the belt moves at 2.5 m/s over SAE 30W oil at 20°C, with  $L = 2$  m,  $b = 60$  cm, and  $h = 3$  cm?

- \*P1.53 A solid cone of angle  $2\theta$ , base  $r_0$ , and density  $\rho_c$  is rotating with initial angular velocity  $\omega_0$  inside a conical seat, as shown in Fig. P1.53. The clearance  $h$  is filled with oil of viscosity  $\mu$ . Neglecting air drag, derive an analytical expression for the cone's angular velocity  $\omega(t)$  if there is no applied torque.

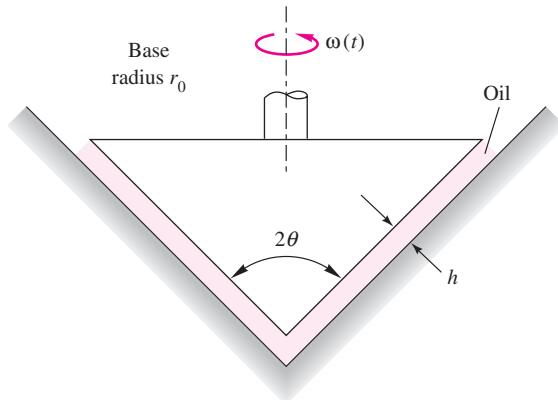

P1.53


- \*P1.54 A disk of radius  $R$  rotates at an angular velocity  $\Omega$  inside a disk-shaped container filled with oil of viscosity  $\mu$ , as shown in Fig. P1.54. Assuming a linear velocity profile and neglecting shear stress on the outer disk edges, derive a formula for the viscous torque on the disk.

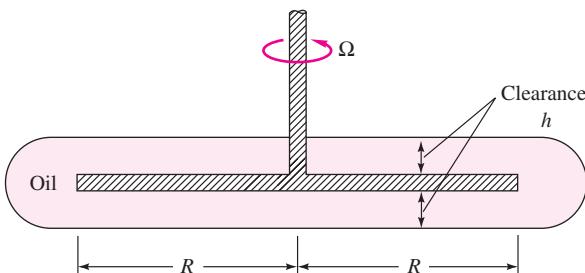

P1.54


- P1.55 A block of weight  $W$  is being pulled over a table by another weight  $W_o$ , as shown in Fig. P1.55. Find an algebraic

formula for the steady velocity  $U$  of the block if it slides on an oil film of thickness  $h$  and viscosity  $\mu$ . The block bottom area  $A$  is in contact with the oil. Neglect the cord weight and the pulley friction. Assume a linear velocity profile in the oil film.

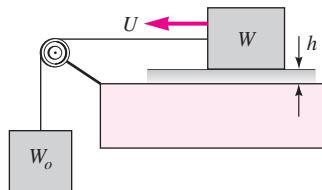


P1.55

- \*P1.56 The device in Fig. P1.56 is called a *cone-plate viscometer* [29]. The angle of the cone is very small, so that  $\sin \theta \approx \theta$ , and the gap is filled with the test liquid. The torque  $M$  to rotate the cone at a rate  $\Omega$  is measured. Assuming a linear velocity profile in the fluid film, derive an expression for fluid viscosity  $\mu$  as a function of  $(M, R, \Omega, \theta)$ .

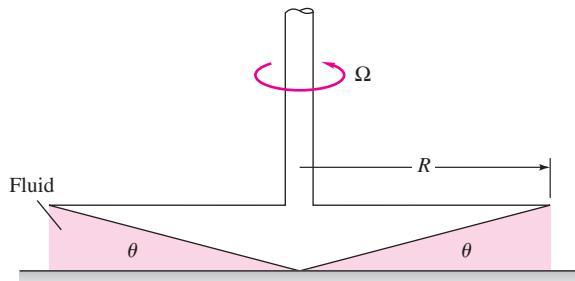

P1.56

- P1.57 Extend the steady flow between a fixed lower plate and a moving upper plate, from Fig. 1.8, to the case of two immiscible liquids between the plates, as in Fig. P1.57.

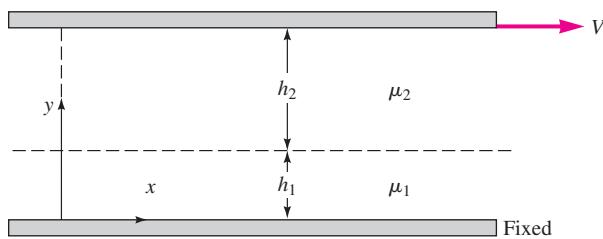

P1.57

- (a) Sketch the expected no-slip velocity distribution  $u(y)$  between the plates. (b) Find an analytic expression for the velocity  $U$  at the interface between the two liquid layers. (c) What is the result of (b) if the viscosities and layer thicknesses are equal?

- \*P1.58** The laminar pipe flow example of Prob. 1.12 can be used to design a *capillary viscometer* [29]. If  $Q$  is the volume flow rate,  $L$  is the pipe length, and  $\Delta p$  is the pressure drop from entrance to exit, the theory of Chap. 6 yields a formula for viscosity:

$$\mu = \frac{\pi r_0^4 \Delta p}{8LQ}$$

Pipe end effects are neglected [29]. Suppose our capillary has  $r_0 = 2$  mm and  $L = 25$  cm. The following flow rate and pressure drop data are obtained for a certain fluid:

$Q, \text{m}^3/\text{h}$	0.36	0.72	1.08	1.44	1.80
$\Delta p, \text{kPa}$	159	318	477	1274	1851

What is the viscosity of the fluid? Note: Only the first three points give the proper viscosity. What is peculiar about the last two points, which were measured accurately?

- P1.59** A solid cylinder of diameter  $D$ , length  $L$ , and density  $\rho_s$  falls due to gravity inside a tube of diameter  $D_0$ . The clearance,  $D_0 - D \ll D$ , is filled with fluid of density  $\rho$  and viscosity  $\mu$ . Neglect the air above and below the cylinder. Derive a formula for the terminal fall velocity of the cylinder. Apply your formula to the case of a steel cylinder,  $D = 2$  cm,  $D_0 = 2.04$  cm,  $L = 15$  cm, with a film of SAE 30 oil at 20°C.

- P1.60** Pipelines are cleaned by pushing through them a close-fitting cylinder called a *pig*. The name comes from the squealing noise it makes sliding along. Reference 50 describes a new nontoxic pig, driven by compressed air, for cleaning cosmetic and beverage pipes. Suppose the pig diameter is 5-15/16 in and its length 26 in. It cleans a 6-in-diameter pipe at a speed of 1.2 m/s. If the clearance is filled with glycerin at 20°C, what pressure difference, in pascals, is needed to drive the pig? Assume a linear velocity profile in the oil and neglect air drag.

- \*P1.61** EES An air-hockey puck has a mass of 50 g and is 9 cm in diameter. When placed on the air table, a 20°C air film, of 0.12-mm thickness, forms under the puck. The puck is struck with an initial velocity of 10 m/s. Assuming a linear velocity distribution in the air film, how long will it take the puck to (a) slow down to 1 m/s and (b) stop

completely? Also, (c) how far along this extremely long table will the puck have traveled for condition (a)?


### Surface tension

- P1.62** The hydrogen bubbles that produced the velocity profiles in Fig. 1.15 are quite small,  $D \approx 0.01$  mm. If the hydrogen–water interface is comparable to air–water and the water temperature is 30°C, estimate the excess pressure within the bubble.

- P1.63** Derive Eq. (1.33) by making a force balance on the fluid interface in Fig. 1.11c.

- P1.64** Determine the maximum diameter, in milliliters, of a solid aluminum ball, density  $\rho_o = 2700 \text{ kg/m}^3$ , which will float on a clean water-air surface at 20°C.

- P1.65** The system in Fig. P1.65 is used to calculate the pressure  $p_1$  in the tank by measuring the 15-cm height of liquid in the 1-mm-diameter tube. The fluid is at 60°C. Calculate the true fluid height in the tube and the percentage error due to capillarity if the fluid is (a) water or (b) mercury.

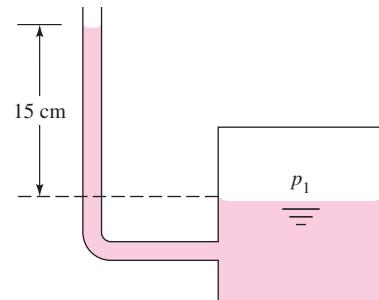


**P1.65**

- P1.66** A thin wire ring, 3 cm in diameter, is lifted from a water surface at 20°C. Neglecting the wire weight, what is the force required to lift the ring? Is this a good way to measure surface tension? Should the wire be made of any particular material?

- P1.67** A vertical concentric annulus, with outer radius  $r_o$  and inner radius  $r_i$ , is lowered into a fluid of surface tension  $Y$  and contact angle  $\theta < 90^\circ$ . Derive an expression for the capillary rise  $h$  in the annular gap if the gap is very narrow.

- \*P1.68** Make an analysis of the shape  $\eta(x)$  of the water–air interface near a plane wall, as in Fig. P1.68, assuming that the slope is small,  $R^{-1} \approx d^2\eta/dx^2$ . Also assume that the pressure difference across the interface is balanced by the specific weight and the interface height,  $\Delta p \approx \rho g \eta$ . The boundary conditions are a wetting contact angle  $\theta$  at


- $x = 0$  and a horizontal surface  $\eta = 0$  as  $x \rightarrow \infty$ . What is the maximum height  $h$  at the wall?

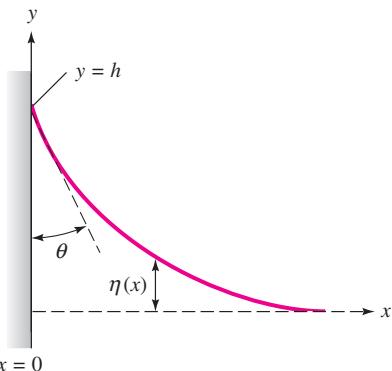

P1.68

- P1.69** A solid cylindrical needle of diameter  $d$ , length  $L$ , and density  $\rho_n$  may float in liquid of surface tension  $Y$ . Neglect buoyancy and assume a contact angle of  $0^\circ$ . Derive a formula for the maximum diameter  $d_{\max}$  able to float in the liquid. Calculate  $d_{\max}$  for a steel needle ( $\text{SG} = 7.84$ ) in water at  $20^\circ\text{C}$ .

- P1.70** Derive an expression for the capillary height change  $h$  for a fluid of surface tension  $Y$  and contact angle  $\theta$  between two vertical parallel plates a distance  $W$  apart, as in Fig. P1.70. What will  $h$  be for water at  $20^\circ\text{C}$  if  $W = 0.5 \text{ mm}$ ?

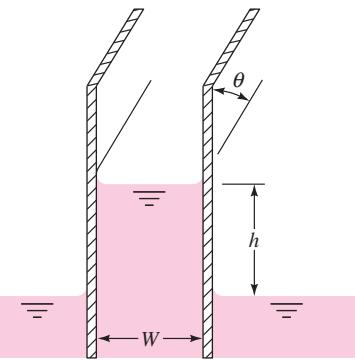

P1.70

- \*P1.71** A soap bubble of diameter  $D_1$  coalesces with another bubble of diameter  $D_2$  to form a single bubble  $D_3$  with the same amount of air. Assuming an isothermal process, derive an expression for finding  $D_3$  as a function of  $D_1$ ,  $D_2$ ,  $p_{\text{atm}}$ , and  $Y$ .

### Vapor pressure

- P1.72** Early mountaineers boiled water to estimate their altitude. If they reach the top and find that water boils at  $84^\circ\text{C}$ , approximately how high is the mountain?

- P1.73** A small submersible moves at velocity  $V$ , in fresh water at  $20^\circ\text{C}$ , at a 2-m depth, where ambient pressure is 131 kPa. Its critical cavitation number is known to be  $C_a = 0.25$ . At what velocity will cavitation bubbles begin to form on the body? Will the body cavitate if  $V = 30 \text{ m/s}$  and the water is cold ( $5^\circ\text{C}$ )?

- P1.74** Oil, with a vapor pressure of 20 kPa, is delivered through a pipeline by equally spaced pumps, each of which increases the oil pressure by 1.3 MPa. Friction losses in the pipe are 150 Pa per meter of pipe. What is the maximum possible pump spacing to avoid cavitation of the oil?

### Speed of sound, Mach number

- P1.75** An airplane flies at 555 mi/h. At what altitude in the standard atmosphere will the airplane's Mach number be exactly 0.8?

- P1.76** Estimate the speed of sound of steam at  $200^\circ\text{C}$  and 400 kPa (a) by an ideal-gas approximation (Table A.4) and (b) using EES (or the steam tables) and making small isentropic changes in pressure and density and approximating Eq. (1.37).

- \*P1.77** The density of  $20^\circ\text{C}$  gasoline varies with pressure approximately as follows:

$p$ , atm	1	500	1000	1500
$\rho$ , lbm/ft <sup>3</sup>	42.45	44.85	46.60	47.98

Use these data to estimate (a) the speed of sound (m/s) and (b) the bulk modulus (MPa) of gasoline at 1 atm.

- P1.78** Sir Isaac Newton measured the speed of sound by timing the difference between seeing a cannon's puff of smoke and hearing its boom. If the cannon is on a mountain 5.2 mi away, estimate the air temperature in degrees Celsius if the time difference is (a) 24.2 s and (b) 25.1 s.

- P1.79** From Table A.3, the density of glycerin at standard conditions is about  $1260 \text{ kg/m}^3$ . At a very high pressure of  $8000 \text{ lb/in}^2$ , its density increases to approximately  $1275 \text{ kg/m}^3$ . Use this data to estimate the speed of sound of glycerin, in ft/s.

- P1.80** In Problem P1.24, for the given data, the air velocity at section 2 is  $1180 \text{ ft/s}$ . What is the Mach number at that section?

### Streamlines

- P1.81** Repeat Example 1.12 by letting the velocity components increase linearly with time:

$$\mathbf{V} = Kx\mathbf{i} - Ky\mathbf{j} + 0\mathbf{k}$$

Find and sketch, for a few representative times, the instantaneous streamlines. How do they differ from the steady flow lines in Example 1.12?

**P1.82** A velocity field is given by  $u = V \cos\theta$ ,  $v = V \sin\theta$ , and  $w = 0$ , where  $V$  and  $\theta$  are constants. Derive a formula for the streamlines of this flow.

**\*P1.83** A two-dimensional unsteady velocity field is given by  $u = x(1 + 2t)$ ,  $v = y$ . Find the equation of the time-varying streamlines that all pass through the point  $(x_0, y_0)$  at some time  $t$ . Sketch a few of these.

### History of fluid mechanics

**P1.84** In the early 1900s, the British chemist Sir Cyril Hinshelwood quipped that fluid dynamics study was divided into “workers who observed things they could not explain and workers who explained things they could not observe.” To what historic situation was he referring?

**P1.85** Do some reading and report to the class on the life and achievements, especially vis-à-vis fluid mechanics, of

- (a) Evangelista Torricelli (1608–1647)
- (b) Henri de Pitot (1695–1771)
- (c) Antoine Chézy (1718–1798)
- (d) Gotthilf Heinrich Ludwig Hagen (1797–1884)
- (e) Julius Weisbach (1806–1871)
- (f) George Gabriel Stokes (1819–1903)
- (g) Moritz Weber (1871–1951)
- (h) Theodor von Kármán (1881–1963)
- (i) Paul Richard Heinrich Blasius (1883–1970)
- (j) Ludwig Prandtl (1875–1953)
- (k) Osborne Reynolds (1842–1912)
- (l) John William Strutt, Lord Rayleigh (1842–1919)
- (m) Daniel Bernoulli (1700–1782)
- (n) Leonhard Euler (1707–1783)

### Experimental uncertainty

**P1.86** A right circular cylinder volume  $v$  is to be calculated from the measured base radius  $R$  and height  $H$ . If the uncertainty in  $R$  is 2 percent and the uncertainty in  $H$  is

3 percent, estimate the overall uncertainty in the calculated volume.

**P1.87** A dimensionless parameter, important in natural convection heat transfer of fluids, is the *Grashof number*:

$$\text{Gr} = \frac{g \beta \rho^2 L^3 \Delta T}{\mu^2}$$

where  $g$  is the acceleration of gravity,  $\beta$  is the thermal expansion coefficient,  $\rho$  the density,  $L$  a characteristic length,  $\Delta T$  a temperature difference, and  $\mu$  the viscosity. If the uncertainty of each of these variables is  $\pm 2$  percent, determine the overall uncertainty of the Grashof number.

**P1.88** The device in Fig. P1.54 is called a *rotating disk viscometer* [29]. Suppose that  $R = 5$  cm and  $h = 1$  mm.  
(a) If the torque required to rotate the disk at 900 r/min is 0.537 N · m, what is the viscosity of the fluid? (b) If the uncertainty in each parameter ( $M$ ,  $R$ ,  $h$ ,  $\Omega$ ) is  $\pm 1$  percent, what is the overall uncertainty in the viscosity?

**P1.89** For the cone-plate viscometer of Fig. P1.56, suppose  $R = 6$  cm and  $\theta = 3^\circ$ . (a) If the torque required to rotate the cone is 0.157 N · m, what is the viscosity of the fluid? (b) If the uncertainty in each parameter ( $M$ ,  $R$ ,  $\theta$ ,  $\Omega$ ) is  $\pm 2$  percent, what is the overall uncertainty in the viscosity?

**P1.90** The dimensionless *drag coefficient*  $C_D$  of a sphere, to be studied in Chaps. 5 and 7, is

$$C_D = \frac{F}{(1/2)\rho V^2(\pi/4)D^2}$$

where  $F$  is the drag force,  $\rho$  the fluid density,  $V$  the fluid velocity, and  $D$  the sphere diameter. If the uncertainties of these variables are  $F$  ( $\pm 3$  percent),  $\rho$  ( $\pm 1.5$  percent),  $V$  ( $\pm 2$  percent), and  $D$  ( $\pm 1$  percent), what is the overall uncertainty in the measured drag coefficient?

### Fundamentals of Engineering Exam Problems

**FE1.1** The absolute viscosity  $\mu$  of a fluid is primarily a function of

- (a) Density, (b) Temperature, (c) Pressure, (d) Velocity, (e) Surface tension

**FE1.2** Carbon dioxide, at 20°C and 1 atm, is compressed isentropically to 4 atm. Assume CO<sub>2</sub> is an ideal gas. The final temperature would be

- (a) 130°C, (b) 162°C, (c) 171°C, (d) 237°C, (e) 313°C

**FE1.3** Helium has a molecular weight of 4.003. What is the weight of 2 m<sup>3</sup> of helium at 1 atm and 20°C?

- (a) 3.3 N, (b) 6.5 N, (c) 11.8 N, (d) 23.5 N, (e) 94.2 N

**FE1.4** An oil has a kinematic viscosity of 1.25 E-4 m<sup>2</sup>/s and a specific gravity of 0.80. What is its dynamic (absolute) viscosity in kg/(m · s)?

- (a) 0.08, (b) 0.10, (c) 0.125, (d) 1.0, (e) 1.25

**FE1.5** Consider a soap bubble of diameter 3 mm. If the surface tension coefficient is 0.072 N/m and external pressure is 0 Pa gage, what is the bubble's internal gage pressure?

- (a) -24 Pa, (b) +48 Pa, (c) +96 Pa, (d) +192 Pa, (e) -192 Pa

- FE1.6** The only possible dimensionless group that combines velocity  $V$ , body size  $L$ , fluid density  $\rho$ , and surface tension coefficient  $\sigma$  is  
 (a)  $L\rho\sigma/V$ , (b)  $\rho VL^2/\sigma$ , (c)  $\rho\sigma V^2/L$ , (d)  $\sigma LV^2/\rho$ ,  
 (e)  $\rho LV^2/\sigma$
- FE1.7** Two parallel plates, one moving at 4 m/s and the other fixed, are separated by a 5-mm-thick layer of oil of specific gravity 0.80 and kinematic viscosity 1.25 E-4 m<sup>2</sup>/s. What is the average shear stress in the oil?  
 (a) 80 Pa, (b) 100 Pa, (c) 125 Pa, (d) 160 Pa,  
 (e) 200 Pa
- FE1.8** Carbon dioxide has a specific heat ratio of 1.30 and a gas constant of 189 J/(kg · °C). If its temperature rises from 20 to 45°C, what is its internal energy rise?  
 (a) 12.6 kJ/kg, (b) 15.8 kJ/kg, (c) 17.6 kJ/kg,  
 (d) 20.5 kJ/kg, (e) 25.1 kJ/kg

## Comprehensive Problems

**C1.1** Sometimes we can develop equations and solve practical problems by knowing nothing more than the dimensions of the key parameters in the problem. For example, consider the heat loss through a window in a building. Window efficiency is rated in terms of “ $R$  value,” which has units of (ft<sup>2</sup> · h · °F)/Btu. A certain manufacturer advertises a double-pane window with an  $R$  value of 2.5. The same company produces a triple-pane window with an  $R$  value of 3.4. In either case the window dimensions are 3 ft by 5 ft. On a given winter day, the temperature difference between the inside and outside of the building is 45°F.

- (a) Develop an equation for the amount of heat lost in a given time period  $\Delta t$ , through a window of area  $A$ , with  $R$  value  $R$ , and temperature difference  $\Delta T$ . How much heat (in Btu) is lost through the double-pane window in one 24-h period?
- (b) How much heat (in Btu) is lost through the triple-pane window in one 24-h period?
- (c) Suppose the building is heated with propane gas, which costs \$3.25 per gallon. The propane burner is 80 percent efficient. Propane has approximately 90,000 Btu of available energy per gallon. In that same 24-h period, how much money would a homeowner save per window by installing triple-pane rather than double-pane windows?
- (d) Finally, suppose the homeowner buys 20 such triple-pane windows for the house. A typical winter has the equivalent of about 120 heating days at a temperature difference of 45°F. Each triple-pane

- FE1.9** A certain water flow at 20°C has a critical cavitation number, where bubbles form,  $Ca \approx 0.25$ , where  $Ca = 2(p_a - p_{vap})/\rho V^2$ . If  $p_a = 1$  atm and the vapor pressure is 0.34 pounds per square inch absolute (psia), for what water velocity will bubbles form?  
 (a) 12 mi/h, (b) 28 mi/h, (c) 36 mi/h, (d) 55 mi/h,  
 (e) 63 mi/h
- FE1.10** Example 1.10 gave an analysis that predicted that the viscous moment on a rotating disk  $M = \pi\mu\Omega R^4/(2h)$ . If the uncertainty of each of the four variables ( $\mu$ ,  $\Omega$ ,  $R$ ,  $h$ ) is 1.0 percent, what is the estimated overall uncertainty of the moment  $M$ ?  
 (a) 4.0 percent (b) 4.4 percent (c) 5.0 percent (d) 6.0 percent (e) 7.0 percent


window costs \$85 more than the double-pane window. Ignoring interest and inflation, how many years will it take the homeowner to make up the additional cost of the triple-pane windows from heating bill savings?

- C1.2** When a person ice skates, the surface of the ice actually melts beneath the blades, so that he or she skates on a thin sheet of water between the blade and the ice.
- (a) Find an expression for total friction force on the bottom of the blade as a function of skater velocity  $V$ , blade length  $L$ , water thickness (between the blade and the ice)  $h$ , water viscosity  $\mu$ , and blade width  $W$ .
  - (b) Suppose an ice skater of total mass  $m$  is skating along at a constant speed of  $V_0$  when she suddenly stands stiff with her skates pointed directly forward, allowing herself to coast to a stop. Neglecting friction due to air resistance, how far will she travel before she comes to a stop? (Remember, she is coasting on two skate blades.) Give your answer for the total distance traveled,  $x$ , as a function of  $V_0$ ,  $m$ ,  $L$ ,  $h$ ,  $\mu$ , and  $W$ .
  - (c) Find  $x$  for the case where  $V_0 = 4.0$  m/s,  $m = 100$  kg,  $L = 30$  cm,  $W = 5.0$  mm, and  $h = 0.10$  mm. Do you think our assumption of negligible air resistance is a good one?


- C1.3** Two thin flat plates, tilted at an angle  $\alpha$ , are placed in a tank of liquid of known surface tension  $\gamma$  and contact angle  $\theta$ , as shown in Fig. C1.3. At the free surface of the liquid in the tank, the two plates are a distance  $L$  apart

and have width  $b$  into the page. The liquid rises a distance  $h$  between the plates, as shown.

- (a) What is the total upward ( $z$ -directed) force, due to surface tension, acting on the liquid column between the plates?  
 (b) If the liquid density is  $\rho$ , find an expression for surface tension  $\gamma$  in terms of the other variables.

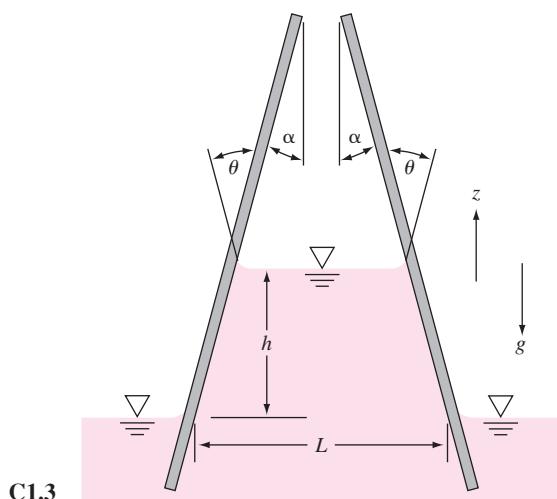

- C1.4** Oil of viscosity  $\mu$  and density  $\rho$  drains steadily down the side of a tall, wide vertical plate, as shown in Fig. C1.4. In the region shown, *fully developed* conditions exist; that is, the velocity profile shape and the film thickness  $\delta$  are independent of distance  $z$  along the plate. The vertical velocity  $w$  becomes a function only of  $x$ , and the shear resistance from the atmosphere is negligible.

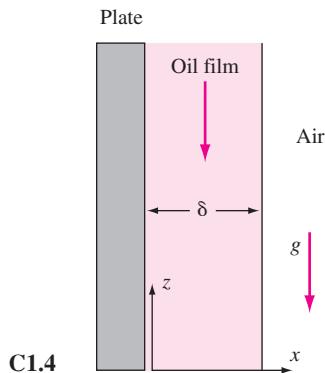

- (a) Sketch the approximate shape of the velocity profile  $w(x)$ , considering the boundary conditions at the wall and at the film surface.

- (b) Suppose film thickness  $\delta$ , and the slope of the velocity profile at the wall,  $(dw/dx)_{\text{wall}}$ , are measured by a laser Doppler anemometer (to be discussed in Chap. 6). Find an expression for the viscosity of the oil as a function of  $\rho$ ,  $\delta$ ,  $(dw/dx)_{\text{wall}}$ , and the gravitational acceleration  $g$ . Note that, for the coordinate system given, both  $w$  and  $(dw/dx)_{\text{wall}}$  are negative.


- C1.5** Viscosity can be measured by flow through a thin-bore or *capillary* tube if the flow rate is low. For length  $L$ , (small) diameter  $D \ll L$ , pressure drop  $\Delta p$ , and (low) volume flow rate  $Q$ , the formula for viscosity is  $\mu = D^4 \Delta p / (CLQ)$ , where  $C$  is a constant.

- (a) Verify that  $C$  is dimensionless. The following data are for water flowing through a 2-mm-diameter tube which is 1 meter long. The pressure drop is held constant at  $\Delta p = 5$  kPa.

$T, ^\circ\text{C}$	10.0	40.0	70.0
$Q, \text{L/min}$	0.091	0.179	0.292

- (b) Using proper SI units, determine an average value of  $C$  by accounting for the variation with temperature of the viscosity of water.

- C1.6** The *rotating-cylinder viscometer* in Fig. C1.6 shears the fluid in a narrow clearance  $\Delta r$ , as shown. Assuming a linear velocity distribution in the gaps, if the driving torque  $M$  is measured, find an expression for  $\mu$  by  
 (a) neglecting and (b) including the bottom friction.

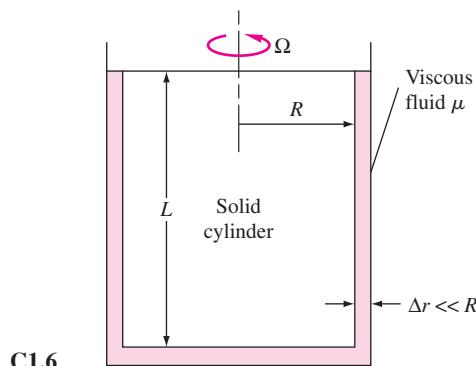

- C1.7** SAE 10W oil at  $20^\circ\text{C}$  flows past a flat surface, as in Fig. 1.6b. The velocity profile  $u(y)$  is measured, with the following results:

$y, \text{m}$	0.0	0.003	0.006	0.009	0.012	0.015
$u, \text{m/s}$	0.0	1.99	3.94	5.75	7.29	8.46

Using your best interpolating skills, estimate the shear stress in the oil ( $a$ ) at the wall and ( $b$ ) at  $y = 15$  mm.


- C1.8** A mechanical device that uses the rotating cylinder of Fig. C1.6 is the *Stormer viscometer* [29]. Instead of being driven at constant  $\Omega$ , a cord is wrapped around the shaft and attached to a falling weight  $W$ . The time  $t$  to turn the shaft a given number of revolutions (usually five) is measured and correlated with viscosity. The formula is

$$t \approx \frac{A\mu}{W - B}$$

where  $A$  and  $B$  are constants that are determined by calibrating the device with a known fluid. Here are calibration data for a Stormer viscometer tested in glycerol, using a weight of 50 N:

$\mu$ , kg/m-s	0.23	0.34	0.57	0.84	1.15
$t$ , sec	15	23	38	56	77

- (a) Find reasonable values of  $A$  and  $B$  to fit this calibration data. Hint: The data are not very sensitive to the value of  $B$ .  
(b) A more viscous fluid is tested with a 100 N weight and the measured time is 44 s. Estimate the viscosity of this fluid.  
**C1.9** The lever in Fig. C1.9 has a weight  $W$  at one end and is tied to a cylinder at the left end. The cylinder has negligible weight and buoyancy and slides upward through a film of heavy oil of viscosity  $\mu$ . (a) If there is no acceleration (uniform lever rotation), derive a formula for the rate of fall  $V_2$  of the weight. Neglect the lever weight. Assume a linear velocity profile in the oil film. (b) Estimate the fall velocity of the weight if  $W = 20$  N,  $L_1 = 75$  cm,  $L_2 = 50$  cm,  $D = 10$  cm,  $L = 22$  cm,  $\Delta R = 1$  mm, and the oil is glycerin at 20°C.

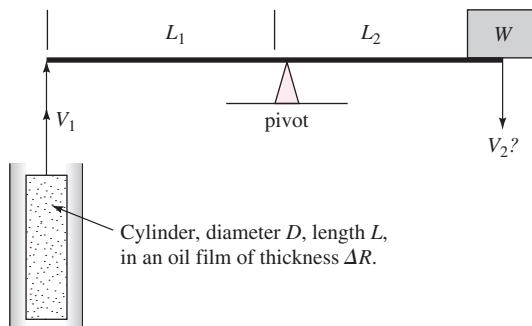


**C1.9**

- C1.10** A popular gravity-driven instrument is the *Cannon-Ubbelohde viscometer*, shown in Fig. C1.10. The test

liquid is drawn up above the bulb on the right side and allowed to drain by gravity through the capillary tube below the bulb. The time  $t$  for the meniscus to pass from upper to lower timing marks is recorded. The kinematic viscosity is computed by the simple formula:

$$\nu = Ct$$

where  $C$  is a calibration constant. For  $\nu$  in the range of 100–500 mm<sup>2</sup>/s, the recommended constant is  $C = 0.50$  mm<sup>2</sup>/s<sup>2</sup>, with an accuracy less than 0.5 percent.

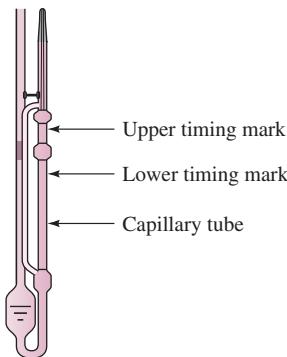

**C1.10** The Cannon-Ubbelohde viscometer. [Courtesy of Cannon Instrument Company.]

- (a) What liquids from Table A.3 are in this viscosity range? (b) Is the calibration formula dimensionally consistent? (c) What system properties might the constant  $C$  depend upon? (d) What problem in this chapter hints at a formula for estimating the viscosity?

- C1.11** Mott [Ref. 49, p. 38] discusses a simple falling-ball viscometer, which we can analyze later in Chapter 7. A small ball of diameter  $D$  and density  $\rho_b$  falls though a tube of test liquid ( $\rho$ ,  $\mu$ ). The fall velocity  $V$  is calculated by the time to fall a measured distance. The formula for calculating the viscosity of the fluid is

$$\mu = \frac{(\rho_b - \rho)gD^2}{18V}$$

This result is limited by the requirement that the Reynolds number ( $\rho V D / \mu$ ) be less than 1.0. Suppose a steel ball ( $SG = 7.87$ ) of diameter 2.2 mm falls in SAE 25W oil ( $SG = 0.88$ ) at 20°C. The measured fall velocity is 8.4 cm/s. (a) What is the viscosity of the oil, in kg/m-s? (b) Is the Reynolds number small enough for a valid estimate?

- C1.12** A solid aluminum disk ( $SG = 2.7$ ) is 2 in in diameter and 3/16 in thick. It slides steadily down a 14° incline that is coated with a castor oil ( $SG = 0.96$ ) film one hundredth of an inch thick. The steady slide velocity is 2 cm/s. Using Figure A.1 and a linear oil velocity profile assumption, estimate the temperature of the castor oil.

## References

1. J. C. Tannehill, D. A. Anderson, and R. H. Pletcher, *Computational Fluid Mechanics and Heat Transfer*, 2d ed., Taylor and Francis, Bristol, PA, 1997.
2. J. Tu, G. H. Yeoh, and C. Liu, *Computational Fluid Dynamics: A Practical Approach*, Butterworth-Heinemann, New York, 2007.
3. S. V. Patankar, *Numerical Heat Transfer and Fluid Flow*, Hemisphere, New York, 1980.
4. H. Versteeg and W. Malalasekra, *An Introduction to Computational Fluid Dynamics: The Finite Volume Method*, Prentice-Hall, Upper Saddle River, NJ, 2007.
5. C. J. Chen and S. Y. Jaw, *Fundamentals of Turbulence Modeling*, Taylor and Francis, Bristol, PA, 1997.
6. S. B. Pope, *Turbulent Flows*, Cambridge University Press, New York, 2000.
7. T. Baritaud, *Direct Numerical Simulation for Turbulent Reacting Flows*, Editions Technip, Paris, 1996.
8. B. Geurts, *Elements of Direct and Large Eddy Simulation*, R. T. Edwards Inc., Flourtown, PA, 2003.
9. S. Tavoularis, "Measurement in Fluid Mechanics," Cambridge University Press, New York, 2005.
10. R. C. Baker, *Introductory Guide to Flow Measurement*, Wiley, New York, 2002.
11. R. W. Miller, *Flow Measurement Engineering Handbook*, 3d ed., McGraw-Hill, New York, 1996.
12. H. Rouse and S. Ince, *History of Hydraulics*, Iowa Institute of Hydraulic Research, Univ. of Iowa, Iowa City, IA, 1957; reprinted by Dover, New York, 1963.
13. H. Rouse, *Hydraulics in the United States 1776-1976*, Iowa Institute of Hydraulic Research, Univ. of Iowa, Iowa City, IA, 1976.
14. M. Gad-el-Hak, "Fluid Mechanics from the Beginning to the Third Millennium," *Intl. J. of Engineering Education*, vol. 14, no. 3, 1998, pp. 177-185.
15. Cambridge University Press, "Ludwig Prandtl—Father of Modern Fluid Mechanics," URL <[www.fluidmech.net/msc/prandtl.htm](http://www.fluidmech.net/msc/prandtl.htm)>.
16. R. I. Tanner, *Engineering Rheology*, 2d ed., Oxford University Press, New York, 2000.
17. C. E. Brennen, *Fundamentals of Multiphase Flow*, Cambridge University Press, New York, 2005. See also URL <<http://caltechbook.library.caltech.edu/51/01/multiph.htm>>.
18. G. A. A. Bird, *Molecular Gas Dynamics and the Direct Simulation of Gas Flows*, Oxford University Press, New York, 1994.
19. F. Carderelli and M. J. Shields, *Scientific Unit Conversion: A Practical Guide to Metrification*, 2d ed., Springer-Verlag, New York, 1999.
20. J. P. Holman, *Heat Transfer*, 9th ed., McGraw-Hill, New York, 2001.
21. R. C. Reid, J. M. Prausnitz, and T. K. Sherwood, *The Properties of Gases and Liquids*, 4th ed., McGraw-Hill, New York, 1987.
22. J. Hilsenrath et al., "Tables of Thermodynamic and Transport Properties," *U.S. Nat. Bur. Standards Circular 564*, 1955; reprinted by Pergamon, New York, 1960.
23. W. T. Parry et al., *ASME International Steam Tables for Industrial Use*, ASME Press, New York, 2000 (software also available).
24. MathPad Corp., *Internet Steam Tables Calculator*; URL <<http://www.mathpad.com/public/htmls/main/left/StInfo.html>>.
25. O. A. Hougen and K. M. Watson, *Chemical Process Principles Charts*, Wiley, New York, 1960.
26. F. M. White, *Viscous Fluid Flow*, 3d ed., McGraw-Hill, New York, 2005.
27. C. L. Yaws, X. Lin, and L. Bu, "Calculate Viscosities for 355 Compounds: An Equation Can Be Used to Calculate Liquid Viscosity as a Function of Temperature," *Chemical Engineering*, vol. 101, no. 4, April 1994, pp. 119-128.
28. SAE Fuels and Lubricants Standards Manual, Society of Automotive Engineers, Warrendale, PA, 2001.
29. C. L. Yaws, *Handbook of Viscosity*, 3 vols., Elsevier Science and Technology, New York, 1994.
30. A. W. Adamson and A. P. Gast, *Physical Chemistry of Surfaces*, Wiley, New York, 1999.
31. C. E. Brennen, *Cavitation and Bubble Dynamics*, Oxford University Press, New York, 1994.
32. National Committee for Fluid Mechanics Films, *Illustrated Experiments in Fluid Mechanics*, M.I.T. Press, Cambridge, MA, 1972.
33. I. G. Currie, *Fundamental Mechanics of Fluids*, 3d ed., Marcel Dekker, New York, 2003.
34. W.-J. Yang (ed.), *Handbook of Flow Visualization*, 2d ed., Taylor and Francis, New York, 2001.
35. F.T. Nieuwstadt (ed.), *Flow Visualization and Image Analysis*, Springer, New York, 2007.
36. T. T. Lim and A. J. Smits (eds.), *Flow Visualization: Techniques and Examples*, Imperial College Press, London, 2000.
37. A. Schröder and C. E. Willert (eds.), *Particle Image Velocimetry: New Developments and Recent Applications*, Springer, New York, 2008.
38. Wen-Jai Yang, *Computer-Assisted Flow Visualization*, Begell House, New York, 1994.
39. M. van Dyke, *An Album of Fluid Motion*, Parabolic Press, Stanford, CA, 1982.
40. Y. Nakayama and Y. Tanida (eds.), *Visualized Flow*, vol. 1, Elsevier, New York, 1993; vols. 2 and 3, CRC Press, Boca Raton, FL, 1996.

41. M. Samimy, K. S. Breuer, L. G. Leal, and P. H. Steen, *A Gallery of Fluid Motion*, Cambridge University Press, New York, 2003.
42. S. Y. Son et al., “Coolant Flow Field Measurements in a Two-Pass Channel Using Particle Image Velocimetry,” 1999 Heat Transfer Gallery, *Journal of Heat Transfer*, vol. 121, August, 1999.
43. B. Carr and V. E. Young, “Videotapes and Movies on Fluid Dynamics and Fluid Machines,” in *Handbook of Fluid Dynamics and Fluid Machinery*, vol. II, J. A. Schetz and A. E. Fuhs (eds.), Wiley, New York, 1996, pp. 1171–1189.
44. Sanford Klein and William Beckman, *Engineering Equation Solver (EES)*, F-Chart Software, Middleton, WI, 2008.
45. H. W. Coleman and W. G. Steele, *Experimentation and Uncertainty Analysis for Engineers*, 3d ed., Wiley, New York, 2009.
46. R. Cooke, *Uncertainty Analysis*, Wiley, New York, 2006.
47. A. Thom, “The Flow Past Circular Cylinders at Low Speeds,” *Proc. Royal Society*, A141, London, 1933, pp. 651–666.
48. S. J. Kline and F. A. McClintock, “Describing Uncertainties in Single-Sample Experiments,” *Mechanical Engineering*, January, 1953, pp. 3–9.
49. R. L. Mott, *Applied Fluid Mechanics*, Pearson Prentice-Hall, Upper Saddle River, NJ, 2006.
50. “Putting Porky to Work,” Technology Focus, *Mechanical Engineering*, August 2002, p. 24.
51. R. M. Olson and S. J. Wright, *Essentials of Engineering Fluid Mechanics*, 5th ed., HarperCollins, New York, 1990.
52. W. Liou and Y. Fang, *Microfluid Mechanics: Principles and Modeling*, McGraw-Hill, New York, 2006.
53. E. J. Watson, “The Spread of a Liquid Jet over a Horizontal Plane,” *J. Fluid Mechanics*, vol. 20, 1964, pp. 481–499.
54. J. Dean and A. Reisinger, *Sands, Powders, and Grains: An Introduction to the Physics of Granular Materials*, Springer-Verlag, New York, 1999.
55. E. Kiran and Y. L. Sen, “High Pressure Density and Viscosity of n-alkanes,” *Int. J. Thermophysics*, vol. 13, no. 3, 1992, pp. 411–442.

*This page intentionally left blank*



We live comfortably in a hydrostatic condition, namely, our atmosphere, at pressures of 100 kPa or less. The ocean, however, produces crushing hydrostatic pressures, increasing downward by 1 atm every 10 meters. The Deep Submergence Vehicle ALVIN is the descendant of Dr. William Beebe's cable-supported *Bathysphere*, which reached the depth of 1000 meters in the 1930s. ALVIN is a self-propelled vehicle (no cable), with good visibility, video cameras, instrument probes, and external manipulators. It can carry three passengers as deep as 4500 meters, where the pressure is 450 atm, or about 3.3 tons per square inch. (*Photo courtesy of Mark Spear of the Woods Hole Oceanographic Institution.*)

# Chapter 2

## Pressure Distribution in a Fluid

**Motivation.** Many fluid problems do not involve motion. They concern the pressure distribution in a static fluid and its effect on solid surfaces and on floating and submerged bodies.


When the fluid velocity is zero, denoted as the *hydrostatic condition*, the pressure variation is due only to the weight of the fluid. Assuming a known fluid in a given gravity field, the pressure may easily be calculated by integration. Important applications in this chapter are (1) pressure distribution in the atmosphere and the oceans, (2) the design of manometer, mechanical, and electronic pressure instruments, (3) forces on submerged flat and curved surfaces, (4) buoyancy on a submerged body, and (5) the behavior of floating bodies. The last two result in Archimedes' principles.

If the fluid is moving in *rigid-body motion*, such as a tank of liquid that has been spinning for a long time, the pressure also can be easily calculated because the fluid is free of shear stress. We apply this idea here to simple rigid-body accelerations in Sec. 2.9. Pressure measurement instruments are discussed in Sec. 2.10. As a matter of fact, pressure also can be analyzed in arbitrary (nonrigid-body) motions  $\mathbf{V}(x, y, z, t)$ , but we defer that subject to Chap. 4.

### 2.1 Pressure and Pressure Gradient

In Fig. 1.1 we saw that a fluid at rest cannot support shear stress and thus Mohr's circle reduces to a point. In other words, the normal stress on any plane through a fluid element at rest is a point property called the *fluid pressure*  $p$ , taken positive for compression by common convention. This is such an important concept that we shall review it with another approach.

Figure 2.1 shows a small wedge of fluid at rest of size  $\Delta x$  by  $\Delta z$  by  $\Delta s$  and depth  $b$  into the paper. There is no shear by definition, but we postulate that the pressures  $p_x$ ,  $p_z$ , and  $p_n$  may be different on each face. The weight of the element also may be important. The element is assumed small, so the pressure is constant on each

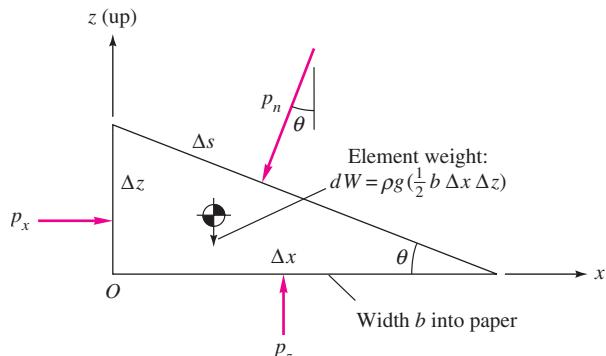

**Fig. 2.1** Equilibrium of a small wedge of fluid at rest.

face. Summation of forces must equal zero (no acceleration) in both the  $x$  and  $z$  directions.

$$\begin{aligned}\sum F_x &= 0 = p_x b \Delta z - p_n b \Delta s \sin \theta \\ \sum F_z &= 0 = p_z b \Delta x - p_n b \Delta s \cos \theta - \frac{1}{2} \rho g b \Delta x \Delta z\end{aligned}\quad (2.1)$$

But the geometry of the wedge is such that

$$\Delta s \sin \theta = \Delta z \quad \Delta s \cos \theta = \Delta x \quad (2.2)$$

Substitution into Eq. (2.1) and rearrangement give

$$p_x = p_n \quad p_z = p_n + \frac{1}{2} \rho g \Delta z \quad (2.3)$$

These relations illustrate two important principles of the hydrostatic, or shear-free, condition: (1) There is no pressure change in the horizontal direction, and (2) there is a vertical change in pressure proportional to the density, gravity, and depth change. We shall exploit these results to the fullest, starting in Sec. 2.3.

In the limit as the fluid wedge shrinks to a “point,”  $\Delta z \rightarrow 0$  and Eqs. (2.3) become

$$p_x = p_z = p_n = p \quad (2.4)$$

Since  $\theta$  is arbitrary, we conclude that the pressure  $p$  in a static fluid is a point property, independent of orientation.

### Pressure Force on a Fluid Element


Pressure (or any other stress, for that matter) causes a net force on a fluid element when it varies *spatially*.<sup>1</sup> To see this, consider the pressure acting on the two  $x$  faces in Fig. 2.2. Let the pressure vary arbitrarily

$$p = p(x, y, z, t)$$

The net force in the  $x$  direction on the element in Fig. 2.2 is given by

$$dF_x = p dy dz - \left( p + \frac{\partial p}{\partial x} dx \right) dy dz = -\frac{\partial p}{\partial x} dx dy dz$$

<sup>1</sup>An interesting application for a large element is seen in Fig. 3.7.

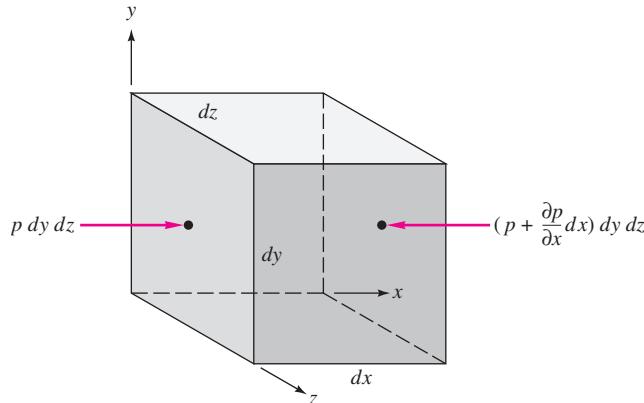

**Fig. 2.2** Net  $x$  force on an element due to pressure variation.

In like manner the net force  $dF_y$  involves  $-\partial p / \partial y$ , and the net force  $dF_z$  concerns  $-\partial p / \partial z$ . The total net-force vector on the element due to pressure is

$$d\mathbf{F}_{\text{press}} = \left( -\mathbf{i} \frac{\partial p}{\partial x} - \mathbf{j} \frac{\partial p}{\partial y} - \mathbf{k} \frac{\partial p}{\partial z} \right) dx dy dz \quad (2.5)$$

We recognize the term in parentheses as the negative vector gradient of  $p$ . Denoting  $\mathbf{f}$  as the net force per unit element volume, we rewrite Eq. (2.5) as

$$\mathbf{f}_{\text{press}} = -\nabla p \quad (2.6)$$

$$\text{where } \nabla = \text{gradient operator} = \mathbf{i} \frac{\partial}{\partial x} + \mathbf{j} \frac{\partial}{\partial y} + \mathbf{k} \frac{\partial}{\partial z}$$

Thus it is not the pressure but the pressure *gradient* causing a net force that must be balanced by gravity or acceleration or some other effect in the fluid.

## 2.2 Equilibrium of a Fluid Element

The pressure gradient is a *surface* force that acts on the sides of the element. There may also be a *body* force, due to electromagnetic or gravitational potentials, acting on the entire mass of the element. Here we consider only the gravity force, or weight of the element:

$$d\mathbf{F}_{\text{grav}} = \rho \mathbf{g} dx dy dz \quad (2.7)$$


or

$$\mathbf{f}_{\text{grav}} = \rho \mathbf{g}$$

In addition to gravity, a fluid in motion will have *surface* forces due to viscous stresses. By Newton's law, Eq. (1.2), the sum of these per-unit-volume forces equals the mass per unit volume (density) times the acceleration  $\mathbf{a}$  of the fluid element:

$$\sum \mathbf{f} = \mathbf{f}_{\text{press}} + \mathbf{f}_{\text{grav}} + \mathbf{f}_{\text{visc}} = -\nabla p + \rho \mathbf{g} + \mathbf{f}_{\text{visc}} = \rho \mathbf{a} \quad (2.8)$$

This general equation will be studied in detail in Chap. 4. Note that Eq. (2.8) is a *vector* relation, and the acceleration may not be in the same vector direction as the velocity. For our present topic, *hydrostatics*, the viscous stresses and the acceleration are zero.

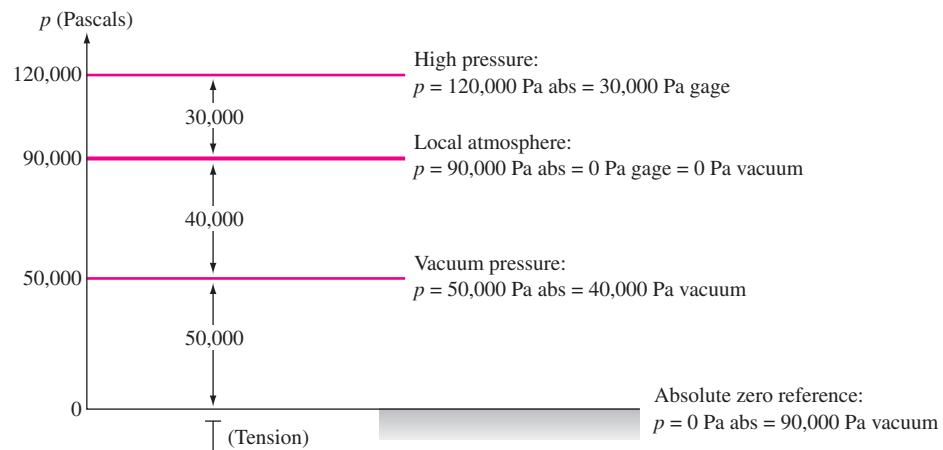

**Fig. 2.3** Illustration of absolute, gage, and vacuum pressure readings.

### Gage Pressure and Vacuum Pressure: Relative Terms

Before embarking on examples, we should note that engineers are apt to specify pressures as (1) the *absolute* or total magnitude or (2) the value *relative* to the local ambient atmosphere. The second case occurs because many pressure instruments are of *differential* type and record, not an absolute magnitude, but the difference between the fluid pressure and the atmosphere. The measured pressure may be either higher or lower than the local atmosphere, and each case is given a name:

1.  $p > p_a$  *Gage pressure:*  $p(\text{gage}) = p - p_a$
2.  $p < p_a$  *Vacuum pressure:*  $p(\text{vacuum}) = p_a - p$

This is a convenient shorthand, and one later adds (or subtracts) atmospheric pressure to determine the absolute fluid pressure.

A typical situation is shown in Fig. 2.3. The local atmosphere is at, say, 90,000 Pa, which might reflect a storm condition in a sea-level location or normal conditions at an altitude of 1000 m. Thus, on this day,  $p_a = 90,000 \text{ Pa absolute} = 0 \text{ Pa gage} = 0 \text{ Pa vacuum}$ . Suppose gage 1 in a laboratory reads  $p_1 = 120,000 \text{ Pa absolute}$ . This value may be reported as a *gage* pressure,  $p_1 = 120,000 - 90,000 = 30,000 \text{ Pa gage}$ . (One must also record the atmospheric pressure in the laboratory, since  $p_a$  changes gradually.) Suppose gage 2 reads  $p_2 = 50,000 \text{ Pa absolute}$ . Locally, this is a *vacuum* pressure and might be reported as  $p_2 = 90,000 - 50,000 = 40,000 \text{ Pa vacuum}$ . Occasionally, in the problems section, we will specify gage or vacuum pressure to keep you alert to this common engineering practice. If a pressure is listed without the modifier gage or vacuum, we assume it is absolute pressure.

### 2.3 Hydrostatic Pressure Distributions

If the fluid is at rest or at constant velocity,  $\mathbf{a} = 0$  and  $\mathbf{f}_{\text{visc}} = 0$ . Equation (2.8) for the pressure distribution reduces to

$$\nabla p = \rho \mathbf{g} \quad (2.9)$$

This is a *hydrostatic* distribution and is correct for all fluids at rest, regardless of their viscosity, because the viscous term vanishes identically.

Recall from vector analysis that the vector  $\nabla p$  expresses the magnitude and direction of the maximum spatial rate of increase of the scalar property  $p$ . As a result,  $\nabla p$  is perpendicular everywhere to surfaces of constant  $p$ . Thus Eq. (2.9) states that a fluid in hydrostatic equilibrium will align its constant-pressure surfaces everywhere normal to the local-gravity vector. The maximum pressure increase will be in the direction of gravity—that is, “down.” If the fluid is a liquid, its free surface, being at atmospheric pressure, will be normal to local gravity, or “horizontal.” You probably knew all this before, but Eq. (2.9) is the proof of it.

In our customary coordinate system  $z$  is “up.” Thus the local-gravity vector for small-scale problems is

$$\mathbf{g} = -g\mathbf{k} \quad (2.10)$$

where  $g$  is the magnitude of local gravity, for example,  $9.807 \text{ m/s}^2$ . For these coordinates Eq. (2.9) has the components

$$\frac{\partial p}{\partial x} = 0 \quad \frac{\partial p}{\partial y} = 0 \quad \frac{\partial p}{\partial z} = -\rho g = -\gamma \quad (2.11)$$

the first two of which tell us that  $p$  is independent of  $x$  and  $y$ . Hence  $\partial p/\partial z$  can be replaced by the total derivative  $dp/dz$ , and the hydrostatic condition reduces to

$$\begin{aligned} \frac{dp}{dz} &= -\gamma \\ \text{or} \quad p_2 - p_1 &= - \int_1^2 \gamma dz \end{aligned} \quad (2.12)$$

Equation (2.12) is the solution to the hydrostatic problem. The integration requires an assumption about the density and gravity distribution. Gases and liquids are usually treated differently.

We state the following conclusions about a hydrostatic condition:


**Pressure in a continuously distributed uniform static fluid varies only with vertical distance and is independent of the shape of the container. The pressure is the same at all points on a given horizontal plane in the fluid. The pressure increases with depth in the fluid.**

An illustration of this is shown in Fig. 2.4. The free surface of the container is atmospheric and forms a horizontal plane. Points  $a$ ,  $b$ ,  $c$ , and  $d$  are at equal depth in a horizontal plane and are interconnected by the same fluid, water; therefore all points have the same pressure. The same is true of points  $A$ ,  $B$ , and  $C$  on the bottom, which all have the same higher pressure than at  $a$ ,  $b$ ,  $c$ , and  $d$ . However, point  $D$ , although at the same depth as  $A$ ,  $B$ , and  $C$ , has a different pressure because it lies beneath a different fluid, mercury.

### Effect of Variable Gravity

For a spherical planet of uniform density, the acceleration of gravity varies inversely as the square of the radius from its center

$$g = g_0 \left( \frac{r_0}{r} \right)^2 \quad (2.13)$$

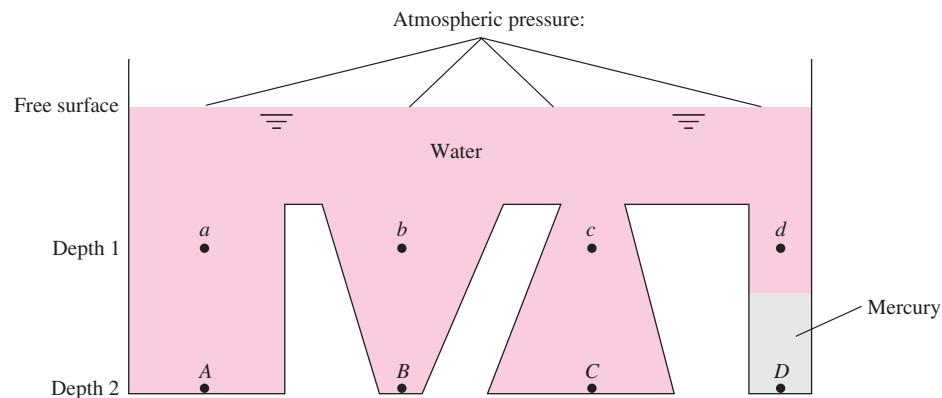

**Fig. 2.4** Hydrostatic-pressure distribution. Points *a*, *b*, *c*, and *d* are at equal depths in water and therefore have identical pressures. Points *A*, *B*, and *C* are also at equal depths in water and have identical pressures higher than *a*, *b*, *c*, and *d*. Point *D* has a different pressure from *A*, *B*, and *C* because it is not connected to them by a water path.

where  $r_0$  is the planet radius and  $g_0$  is the surface value of  $g$ . For earth,  $r_0 \approx 3960$  statute mi  $\approx 6400$  km. In typical engineering problems the deviation from  $r_0$  extends from the deepest ocean, about 11 km, to the atmospheric height of supersonic transport operation, about 20 km. This gives a maximum variation in  $g$  of  $(6400/6420)^2$ , or 0.6 percent. We therefore neglect the variation of  $g$  in most problems.

### Hydrostatic Pressure in Liquids


Liquids are so nearly incompressible that we can neglect their density variation in hydrostatics. In Example 1.6 we saw that water density increases only 4.6 percent at the deepest part of the ocean. Its effect on hydrostatics would be about half of this, or 2.3 percent. Thus we assume constant density in liquid hydrostatic calculations, for which Eq. (2.12) integrates to

Liquids:	$p_2 - p_1 = -\gamma(z_2 - z_1)$	(2.14)
or	$z_1 - z_2 = \frac{p_2 - p_1}{\gamma}$	

We use the first form in most problems. The quantity  $\gamma$  is called the *specific weight* of the fluid, with dimensions of weight per unit volume; some values are tabulated in Table 2.1. The quantity  $p/\gamma$  is a length called the *pressure head* of the fluid.

**Table 2.1** Specific Weight of Some Common Fluids

Fluid	lbf/ft <sup>3</sup>	N/m <sup>3</sup>	Specific weight $\gamma$ at 68°F = 20°C
Air (at 1 atm)	0.0752	11.8	
Ethyl alcohol	49.2	7,733	
SAE 30 oil	55.5	8,720	
Water	62.4	9,790	
Seawater	64.0	10,050	
Glycerin	78.7	12,360	
Carbon tetrachloride	99.1	15,570	
Mercury	846	133,100	

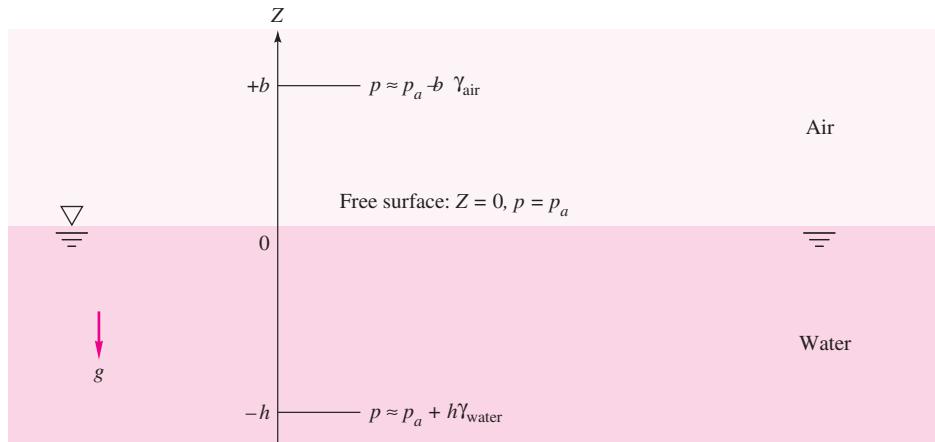

**Fig. 2.5** Hydrostatic-pressure distribution in oceans and atmospheres.

For lakes and oceans, the coordinate system is usually chosen as in Fig. 2.5, with  $z = 0$  at the free surface, where  $p$  equals the surface atmospheric pressure  $p_a$ . When we introduce the reference value  $(p_1, z_1) = (p_a, 0)$ , Eq. (2.14) becomes, for  $p$  at any (negative) depth  $z$ ,

$$\text{Lakes and oceans: } p = p_a - \gamma z \quad (2.15)$$

where  $\gamma$  is the average specific weight of the lake or ocean. As we shall see, Eq. (2.15) holds in the atmosphere also with an accuracy of 2 percent for heights  $z$  up to 1000 m.

### EXAMPLE 2.1

Newfound Lake, a freshwater lake near Bristol, New Hampshire, has a maximum depth of 60 m, and the mean atmospheric pressure is 91 kPa. Estimate the absolute pressure in kPa at this maximum depth.

#### Solution


- *System sketch:* Imagine that Fig. 2.5 is Newfound Lake, with  $h = 60$  m and  $z = 0$  at the surface.
- *Property values:* From Table 2.1,  $\gamma_{\text{water}} = 9790 \text{ N/m}^3$ . We are given that  $p_{\text{atmos}} = 91 \text{ kPa}$ .
- *Solution steps:* Apply Eq. (2.15) to the deepest point. Use SI units, pascals, not kilopascals:

$$p_{\max} = p_a - \gamma z = 91,000 \text{ Pa} - (9790 \frac{\text{N}}{\text{m}^3})(-60 \text{ m}) = 678,400 \text{ Pa} \approx 678 \text{ kPa} \quad \text{Ans.}$$

- *Comments:* Kilopascals are awkward. Use pascals in the formula, then convert the answer.

### The Mercury Barometer

The simplest practical application of the hydrostatic formula (2.14) is the barometer (Fig. 2.6), which measures atmospheric pressure. A tube is filled with mercury and inverted while submerged in a reservoir. This causes a near vacuum in the closed upper end because mercury has an extremely small vapor pressure at room temperatures

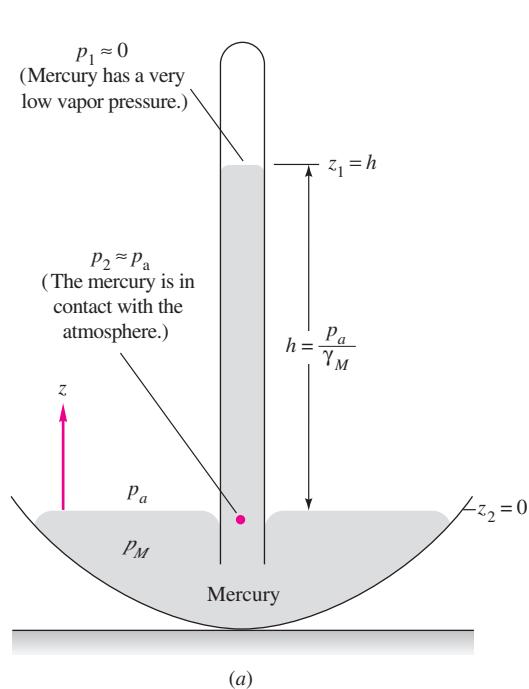

(a)



(b)

**Fig. 2.6** A barometer measures local absolute atmospheric pressure: (a) the height of a mercury column is proportional to  $p_{atm}$ ; (b) a modern portable barometer, with digital readout, uses the resonating silicon element of Fig. 2.28c. (Courtesy of Paul Lupke, Druck Inc.)

(0.16 Pa at 20°C). Since atmospheric pressure forces a mercury column to rise a distance  $h$  into the tube, the upper mercury surface is at zero pressure.

From Fig. 2.6, Eq. (2.20) applies with  $p_1 = 0$  at  $z_1 = h$  and  $p_2 = p_a$  at  $z_2 = 0$ :

$$p_a - 0 = -\gamma_M(0 - h)$$

or

$$h = \frac{p_a}{\gamma_M} \quad (2.16)$$

At sea-level standard, with  $p_a = 101,350$  Pa and  $\gamma_M = 133,100$  N/m<sup>3</sup> from Table 2.1, the barometric height is  $h = 101,350/133,100 = 0.761$  m or 761 mm. In the United States the weather service reports this as an atmospheric “pressure” of 29.96 inHg (inches of mercury). Mercury is used because it is the heaviest common liquid. A water barometer would be 34 ft high.

## Hydrostatic Pressure in Gases

Gases are compressible, with density nearly proportional to pressure. Thus density must be considered as a variable in Eq. (2.12) if the integration carries over large pressure changes. It is sufficiently accurate to introduce the perfect-gas law  $p = \rho RT$  in Eq. (2.12):

$$\frac{dp}{dz} = -\rho g = -\frac{p}{RT} g$$

Separate the variables and integrate between points 1 and 2:

$$\int_1^2 \frac{dp}{p} = \ln \frac{p_2}{p_1} = -\frac{g}{R} \int_1^2 \frac{dz}{T} \quad (2.17)$$

The integral over  $z$  requires an assumption about the temperature variation  $T(z)$ . One common approximation is the *isothermal atmosphere*, where  $T = T_0$ :

$$p_2 = p_1 \exp \left[ -\frac{g(z_2 - z_1)}{RT_0} \right] \quad (2.18)$$

The quantity in brackets is dimensionless. (Think that over; it must be dimensionless, right?) Equation (2.18) is a fair approximation for earth, but actually the earth's mean atmospheric temperature drops off nearly linearly with  $z$  up to an altitude of about 36,000 ft (11,000 m):

$$T \approx T_0 - Bz \quad (2.19)$$

Here  $T_0$  is sea-level temperature (absolute) and  $B$  is the *lapse rate*, both of which vary somewhat from day to day.

### The Standard Atmosphere

By international agreement [1] the following standard values are assumed to apply from 0 to 36,000 ft:

$$T_0 = 518.69^\circ\text{R} = 288.16 \text{ K} = 15^\circ\text{C}$$

$$B = 0.003566^\circ\text{R}/\text{ft} = 0.00650 \text{ K/m}$$

This lower portion of the atmosphere is called the *troposphere*. Introducing Eq. (2.19) into (2.17) and integrating, we obtain the more accurate relation

$$p = p_a \left( 1 - \frac{Bz}{T_0} \right)^{g/(RB)} \quad \text{where} \quad \frac{g}{RB} = 5.26 \text{ (air)}$$

$$\rho = \rho_o \left( 1 - \frac{Bz}{T_o} \right)^{\frac{g}{RB}-1} \quad \text{where} \quad \rho_o = 1.2255 \frac{\text{kg}}{\text{m}^3}, \quad p_o = 101,350 \text{ Pa}$$

(2.20)

in the troposphere, with  $z = 0$  at sea level. The exponent  $g/(RB)$  is dimensionless (again it must be) and has the standard value of 5.26 for air, with  $R = 287 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ .

The U.S. standard atmosphere [1] is sketched in Fig. 2.7. The pressure is seen to be nearly zero at  $z = 30 \text{ km}$ . For tabulated properties see Table A.6.

### EXAMPLE 2.2

If sea-level pressure is 101,350 Pa, compute the standard pressure at an altitude of 5000 m, using (a) the exact formula and (b) an isothermal assumption at a standard sea-level temperature of  $15^\circ\text{C}$ . Is the isothermal approximation adequate?

**Solution****Part (a)**

Use absolute temperature in the exact formula, Eq. (2.20):

$$p = p_a \left[ 1 - \frac{(0.00650 \text{ K/m})(5000 \text{ m})}{288.16 \text{ K}} \right]^{5.26} = (101,350 \text{ Pa})(0.8872)^{5.26}$$

$$= 101,350(0.5328) = 54,000 \text{ Pa}$$

*Ans. (a)*

This is the standard-pressure result given at  $z = 5000 \text{ m}$  in Table A.6.

**Part (b)**

If the atmosphere were isothermal at 288.16 K, Eq. (2.18) would apply:

$$p \approx p_a \exp\left(-\frac{gz}{RT}\right) = (101,350 \text{ Pa}) \exp\left\{-\frac{(9.807 \text{ m/s}^2)(5000 \text{ m})}{[287 \text{ m}^2/(\text{s}^2 \cdot \text{K})](288.16 \text{ K})}\right\}$$

$$= (101,350 \text{ Pa}) \exp(-0.5929) \approx 56,000 \text{ Pa}$$


*Ans. (b)*

This is 4 percent higher than the exact result. The isothermal formula is inaccurate in the troposphere.

### Is the Linear Formula Adequate for Gases?

The linear approximation from Eq. (2.14),  $\delta p \approx -\rho g \delta z$ , is satisfactory for liquids, which are nearly incompressible. For gases, it is inaccurate unless  $\delta z$  is rather small. Problem P2.26 asks you to show, by binomial expansion of Eq. (2.20), that the error in using constant gas density to estimate  $\delta p$  from Eq. (2.14) is small if

$$\delta z \ll \frac{2T_0}{(n - 1)B} \quad (2.21)$$

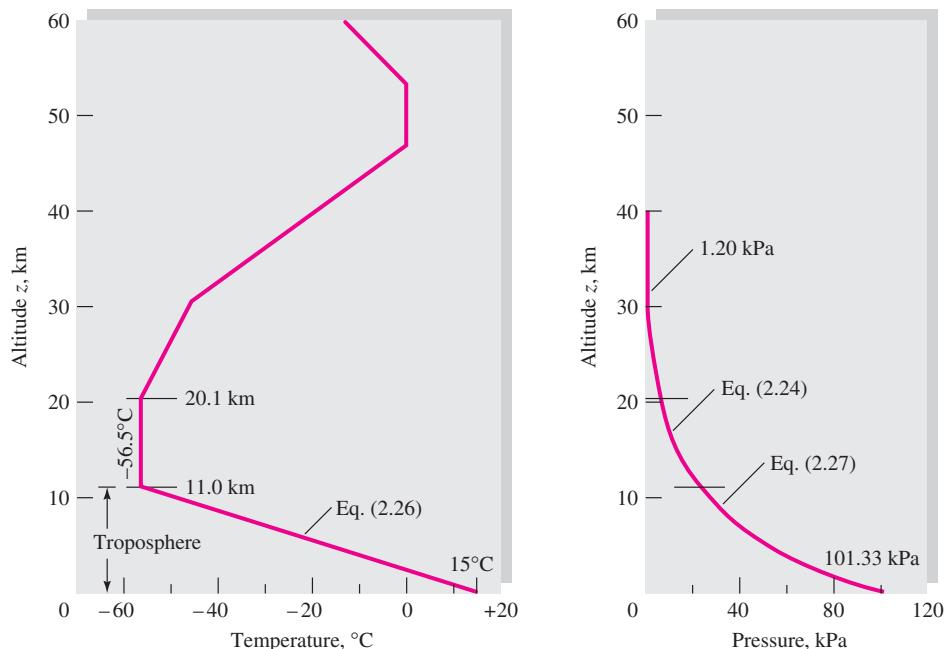

**Fig. 2.7** Temperature and pressure distribution in the U.S. standard atmosphere. (From Ref. 1.)

where  $T_o$  is the local absolute temperature,  $B$  is the lapse rate from Eq. (2.19), and  $n = g/(RB)$  is the exponent in Eq. (2.20). The error is less than 1 percent if  $\delta z < 200$  m.

## 2.4 Application to Manometry

From the hydrostatic formula (2.14), a change in elevation  $z_2 - z_1$  of a liquid is equivalent to a change in pressure  $(p_2 - p_1)/\gamma$ . Thus a static column of one or more liquids or gases can be used to measure pressure differences between two points. Such a device is called a *manometer*. If multiple fluids are used, we must change the density in the formula as we move from one fluid to another. Figure 2.8 illustrates the use of the formula with a column of multiple fluids. The pressure change through each fluid is calculated separately. If we wish to know the total change  $p_5 - p_1$ , we add the successive changes  $p_2 - p_1$ ,  $p_3 - p_2$ ,  $p_4 - p_3$ , and  $p_5 - p_4$ . The intermediate values of  $p$  cancel, and we have, for the example of Fig. 2.8,

$$p_5 - p_1 = -\gamma_0(z_2 - z_1) - \gamma_w(z_3 - z_2) - \gamma_G(z_4 - z_3) - \gamma_M(z_5 - z_4) \quad (2.22)$$


No additional simplification is possible on the right-hand side because of the different densities. Notice that we have placed the fluids in order from the lightest on top to the heaviest at bottom. This is the only stable configuration. If we attempt to layer them in any other manner, the fluids will overturn and seek the stable arrangement.

### Pressure Increases Downward


The basic hydrostatic relation, Eq. (2.14), is mathematically correct but vexing to engineers because it combines two negative signs to have the pressure increase downward. When calculating hydrostatic pressure changes, engineers work instinctively by simply having the pressure increase downward and decrease upward. If point 2 is a distance  $h$  below point 1 in a uniform liquid, then  $p_2 = p_1 + \rho gh$ . In the meantime, Eq. (2.14) remains accurate and safe if used properly. For example, Eq. (2.22) is correct as shown, or it could be rewritten in the following “multiple downward increase” mode:

$$p_5 = p_1 + \gamma_0|z_1 - z_2| + \gamma_w|z_2 - z_3| + \gamma_G|z_3 - z_4| + \gamma_M|z_4 - z_5|$$

That is, keep adding on pressure increments as you move down through the layered fluid. A different application is a manometer, which involves both “up” and “down” calculations.

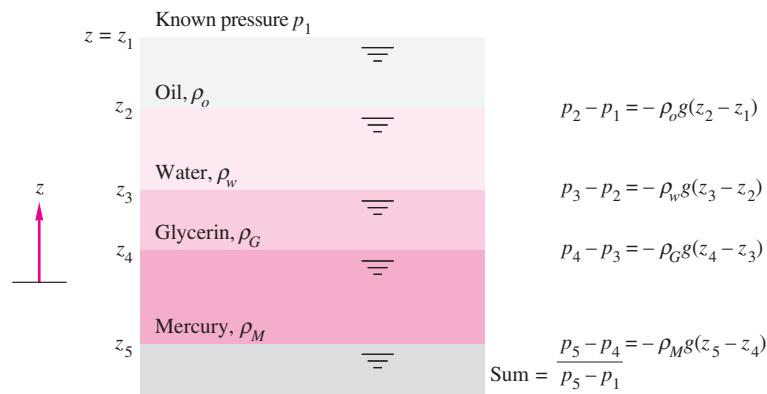

**Fig. 2.8** Evaluating pressure changes through a column of multiple fluids.

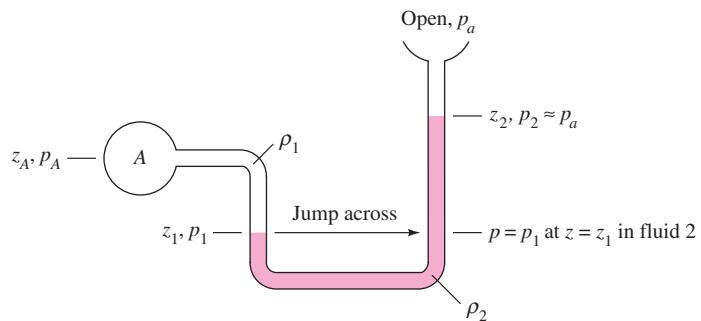

**Fig. 2.9** Simple open manometer for measuring  $p_A$  relative to atmospheric pressure.

### Application: A Simple Manometer

Figure 2.9 shows a simple U-tube open manometer that measures the *gage* pressure  $p_A$  relative to the atmosphere,  $p_a$ . The chamber fluid  $\rho_1$  is separated from the atmosphere by a second, heavier fluid  $\rho_2$ , perhaps because fluid A is corrosive, or more likely because a heavier fluid  $\rho_2$  will keep  $z_2$  small and the open tube can be shorter.

We first apply the hydrostatic formula (2.14) from A down to  $z_1$ . Note that we can then go down to the bottom of the U-tube and back up on the right side to  $z_1$ , and the pressure will be the same,  $p = p_1$ . Thus we can “jump across” and then up to level  $z_2$ :

$$p_A + \gamma_1 |z_A - z_1| - \gamma_2 |z_1 - z_2| = p_2 \approx p_{\text{atm}} \quad (2.23)$$


Another physical reason that we can “jump across” at section 1 is that a continuous length of the same fluid connects these two equal elevations. The hydrostatic relation (2.14) requires this equality as a form of Pascal’s law:

**Any two points at the same elevation in a continuous mass of the same static fluid will be at the same pressure.**

This idea of jumping across to equal pressures facilitates multiple-fluid problems. It will be inaccurate however if there are bubbles in the fluid.

### EXAMPLE 2.3

The classic use of a manometer is when two U-tube legs are of equal length, as in Fig. E2.3, and the measurement involves a pressure difference across two horizontal points. The typical application is to measure pressure change across a flow device, as shown. Derive a formula for the pressure difference  $p_a - p_b$  in terms of the system parameters in Fig. E2.3.

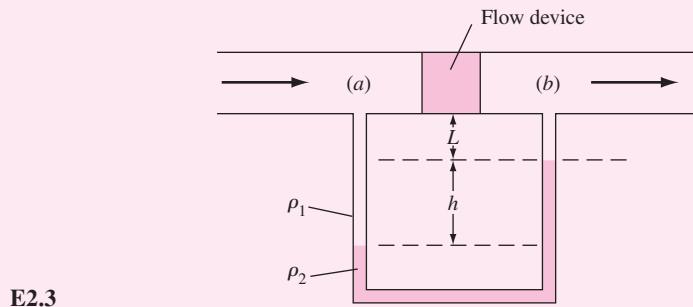

E2.3

**Solution**

Using Eq. (2.14), start at (a), evaluate pressure changes around the U-tube, and end up at (b):

$$p_a + \rho_1 g L + \rho_1 g h - \rho_2 g h - \rho_1 g L = p_b$$

or


$$p_a - p_b = (\rho_2 - \rho_1)gh \quad \text{Ans.}$$

The measurement only includes  $h$ , the manometer reading. Terms involving  $L$  drop out. Note the appearance of the *difference* in densities between manometer fluid and working fluid. It is a common student error to fail to subtract out the working fluid density  $\rho_1$ —a serious error if both fluids are liquids and less disastrous numerically if fluid 1 is a gas. Academically, of course, such an error is always considered serious by fluid mechanics instructors.

Although Example 2.3, because of its popularity in engineering experiments, is sometimes considered to be the “manometer formula,” it is best *not* to memorize it but rather to adapt Eq. (2.14) to each new multiple-fluid hydrostatics problem. For example, Fig. 2.10 illustrates a multiple-fluid manometer problem for finding the difference in pressure between two chambers  $A$  and  $B$ . We repeatedly apply Eq. (2.14), jumping across at equal pressures when we come to a continuous mass of the same fluid. Thus, in Fig. 2.10, we compute four pressure differences while making three jumps:

$$\begin{aligned} p_A - p_B &= (p_A - p_1) + (p_1 - p_2) + (p_2 - p_3) + (p_3 - p_B) \\ &= -\gamma_1(z_A - z_1) - \gamma_2(z_1 - z_2) - \gamma_3(z_2 - z_3) - \gamma_4(z_3 - z_B) \end{aligned} \quad (2.24)$$


The intermediate pressures  $p_{1,2,3}$  cancel. It looks complicated, but really it is merely *sequential*. One starts at  $A$ , goes down to 1, jumps across, goes up to 2, jumps across, goes down to 3, jumps across, and finally goes up to  $B$ .

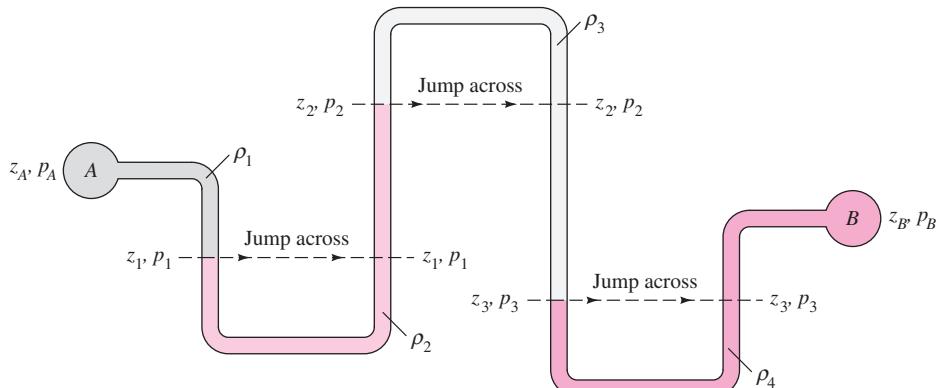

**Fig. 2.10** A complicated multiple-fluid manometer to relate  $p_A$  to  $p_B$ . This system is not especially practical but makes a good homework or examination problem.

**EXAMPLE 2.4**

Pressure gage *B* is to measure the pressure at point *A* in a water flow. If the pressure at *B* is 87 kPa, estimate the pressure at *A* in kPa. Assume all fluids are at 20°C. See Fig. E2.4.

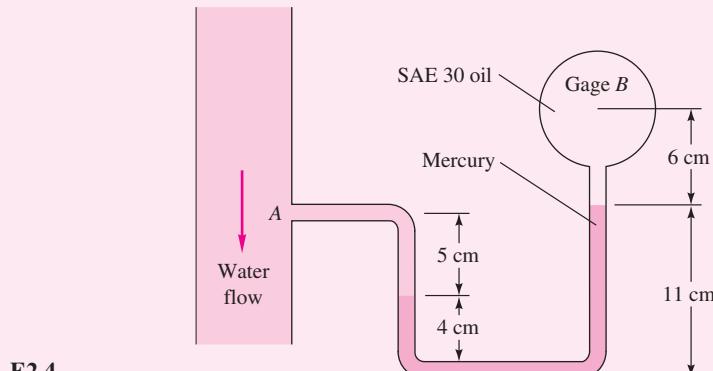

E2.4

**Solution**

- System sketch:** The system is shown in Fig. E2.4.
- Assumptions:** Hydrostatic fluids, no mixing, vertical “up” in Fig. E2.4.
- Approach:** Sequential use of Eq. (2.14) to go from *A* to *B*.
- Property values:** From Table 2.1 or Table A.3:

$$\gamma_{\text{water}} = 9790 \text{ N/m}^3; \quad \gamma_{\text{mercury}} = 133,100 \text{ N/m}^3; \quad \gamma_{\text{oil}} = 8720 \text{ N/m}^3$$

- Solution steps:** Proceed from *A* to *B*, “down” then “up,” jumping across at the left mercury meniscus:

$$p_A + \gamma_w |\Delta z|_w - \gamma_m |\Delta z_m| - \gamma_o |\Delta z|_o = p_B$$

or  $p_A + (9790 \text{ N/m}^3)(0.05 \text{ m}) - (133,100 \text{ N/m}^3)(0.07 \text{ m}) - (8720 \text{ N/m}^3)(0.06 \text{ m}) = 87,000$


or  $p_A + 490 - 9317 - 523 = 87,000$  Solve for  $p_A = 96,350 \text{ N/m}^2 \approx 96.4 \text{ kPa}$  Ans.

- Comments:** Note that we abbreviated the units  $\text{N/m}^2$  to pascals, or Pa. The intermediate five-figure result,  $p_A = 96,350 \text{ Pa}$ , is unrealistic, since the data are known to only about three significant figures.

In making these manometer calculations we have neglected the capillary height changes due to surface tension, which were discussed in Example 1.8. These effects cancel if there is a fluid interface, or *meniscus*, between similar fluids on both sides of the U-tube. Otherwise, as in the right-hand U-tube of Fig. 2.10, a capillary correction can be made or the effect can be made negligible by using large-bore ( $\geq 1 \text{ cm}$ ) tubes.

## 2.5 Hydrostatic Forces on Plane Surfaces

The design of containment structures requires computation of the hydrostatic forces on various solid surfaces adjacent to the fluid. These forces relate to the weight of fluid bearing on the surface. For example, a container with a flat, horizontal bottom

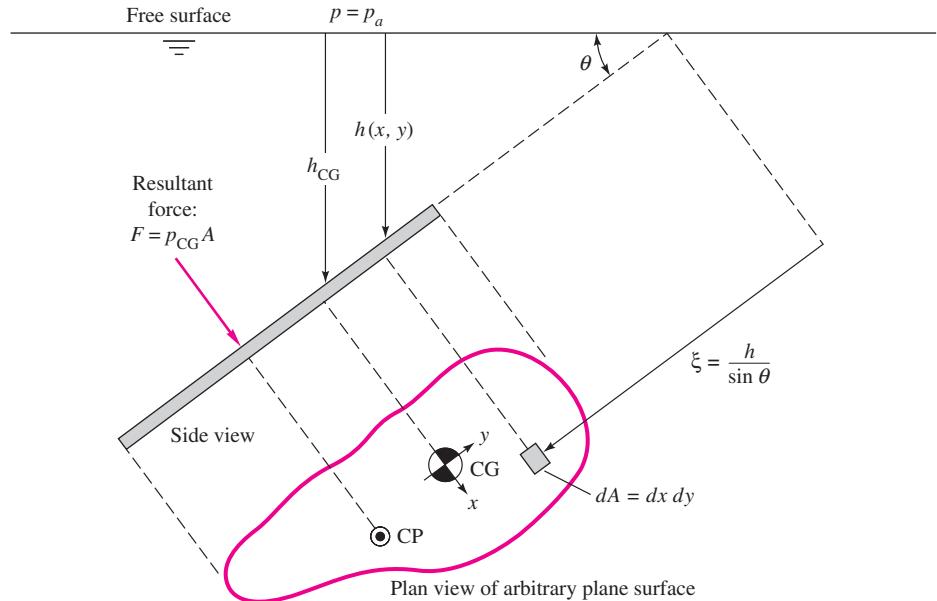

**Fig. 2.11** Hydrostatic force and center of pressure on an arbitrary plane surface of area  $A$  inclined at an angle  $\theta$  below the free surface.

of area  $A_b$  and water depth  $H$  will experience a downward bottom force  $F_b = \gamma H A_b$ . If the surface is not horizontal, additional computations are needed to find the horizontal components of the hydrostatic force.

If we neglect density changes in the fluid, Eq. (2.14) applies and the pressure on any submerged surface varies linearly with depth. For a plane surface, the linear stress distribution is exactly analogous to combined bending and compression of a beam in strength-of-materials theory. The hydrostatic problem thus reduces to simple formulas involving the centroid and moments of inertia of the plate cross-sectional area.

Figure 2.11 shows a plane panel of arbitrary shape completely submerged in a liquid. The panel plane makes an arbitrary angle  $\theta$  with the horizontal free surface, so that the depth varies over the panel surface. If  $h$  is the depth to any element area  $dA$  of the plate, from Eq. (2.14) the pressure there is  $p = p_a + \gamma h$ .

To derive formulas involving the plate shape, establish an  $xy$  coordinate system in the plane of the plate with the origin at its centroid, plus a dummy coordinate  $\xi$  down from the surface in the plane of the plate. Then the total hydrostatic force on one side of the plate is given by

$$F = \int p \, dA = \int (p_a + \gamma h) \, dA = p_a A + \gamma \int h \, dA \quad (2.25)$$

The remaining integral is evaluated by noticing from Fig. 2.11 that  $h = \xi \sin \theta$  and, by definition, the centroidal slant distance from the surface to the plate is

$$\xi_{CG} = \frac{1}{A} \int \xi \, dA$$

Therefore, since  $\theta$  is constant along the plate, Eq. (2.25) becomes

$$F = p_a A + \gamma \sin \theta \int \xi dA = p_a A + \gamma \sin \theta \xi_{CG} A$$

Finally, unravel this by noticing that  $\xi_{CG} \sin \theta = h_{CG}$ , the depth straight down from the surface to the plate centroid. Thus


$$F = p_a A + \gamma h_{CG} A = (p_a + \gamma h_{CG}) A = p_{CG} A \quad (2.26)$$

The force on one side of any plane submerged surface in a uniform fluid equals the pressure at the plate centroid times the plate area, independent of the shape of the plate or the angle  $\theta$  at which it is slanted.

Equation (2.26) can be visualized physically in Fig. 2.12 as the resultant of a linear stress distribution over the plate area. This simulates combined compression and bending of a beam of the same cross section. It follows that the “bending” portion of the stress causes no force if its “neutral axis” passes through the plate centroid of area. Thus the remaining “compression” part must equal the centroid stress times the plate area. This is the result of Eq. (2.26).

However, to balance the bending-moment portion of the stress, the resultant force  $F$  acts not through the centroid but below it toward the high-pressure side. Its line of action passes through the *center of pressure* CP of the plate, as sketched in Fig. 2.11. To find the coordinates  $(x_{CP}, y_{CP})$ , we sum moments of the elemental force  $p dA$  about the centroid and equate to the moment of the resultant  $F$ . To compute  $y_{CP}$ , we equate

$$Fy_{CP} = \int yp dA = \int y(p_a + \gamma\xi \sin \theta) dA = \gamma \sin \theta \int y\xi dA$$

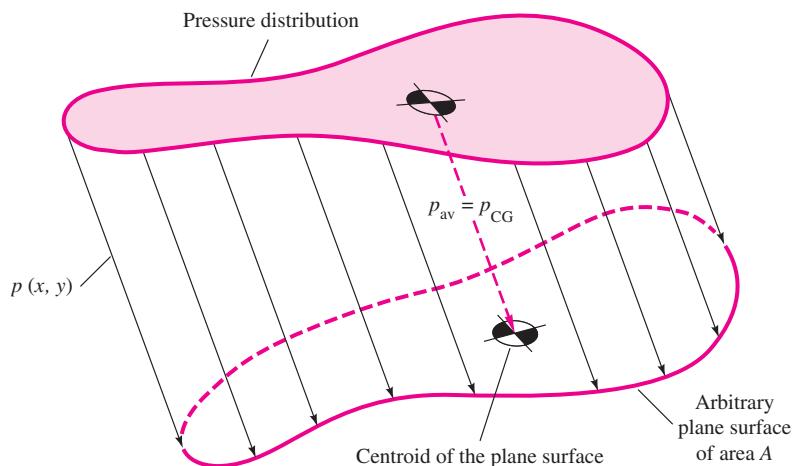

**Fig. 2.12** The hydrostatic pressure force on a plane surface is equal, regardless of its shape, to the resultant of the three-dimensional linear pressure distribution on that surface  $F = p_{CG}A$ .

The term  $\int p_a y \, dA$  vanishes by definition of centroidal axes. Introducing  $\xi = \xi_{CG} - y$ , we obtain

$$Fy_{CP} = \gamma \sin \theta \left( \xi_{CG} \int y \, dA - \int y^2 \, dA \right) = -\gamma \sin \theta I_{xx}$$

where again  $\int y \, dA = 0$  and  $I_{xx}$  is the area moment of inertia of the plate area about its centroidal  $x$  axis, computed in the plane of the plate. Substituting for  $F$  gives the result

$$y_{CP} = -\gamma \sin \theta \frac{I_{xx}}{p_{CG}A} \quad (2.27)$$

The negative sign in Eq. (2.27) shows that  $y_{CP}$  is below the centroid at a deeper level and, unlike  $F$ , depends on angle  $\theta$ . If we move the plate deeper,  $y_{CP}$  approaches the centroid because every term in Eq. (2.27) remains constant except  $p_{CG}$ , which increases.

The determination of  $x_{CP}$  is exactly similar:

$$\begin{aligned} Fx_{CP} &= \int xp \, dA = \int x[p_a + \gamma(\xi_{CG} - y) \sin \theta] \, dA \\ &= -\gamma \sin \theta \int xy \, dA = -\gamma \sin \theta I_{xy} \end{aligned}$$

where  $I_{xy}$  is the product of inertia of the plate, again computed in the plane of the plate. Substituting for  $F$  gives

$$x_{CP} = -\gamma \sin \theta \frac{I_{xy}}{p_{CG}A} \quad (2.28)$$


For positive  $I_{xy}$ ,  $x_{CP}$  is negative because the dominant pressure force acts in the third, or lower left, quadrant of the panel. If  $I_{xy} = 0$ , usually implying symmetry,  $x_{CP} = 0$  and the center of pressure lies directly below the centroid on the  $y$  axis.

### Gage Pressure Formulas

In most cases the ambient pressure  $p_a$  is neglected because it acts on both sides of the plate; for example, the other side of the plate is inside a ship or on the dry side of a gate or dam. In this case  $p_{CG} = \gamma h_{CG}$ , and the center of pressure becomes independent of specific weight:

$$F = \gamma h_{CG}A \quad y_{CP} = -\frac{I_{xx} \sin \theta}{h_{CG}A} \quad x_{CP} = -\frac{I_{xy} \sin \theta}{h_{CG}A} \quad (2.29)$$


Figure 2.13 gives the area and moments of inertia of several common cross sections for use with these formulas. Note that  $\theta$  is the angle between the plate and the horizon.

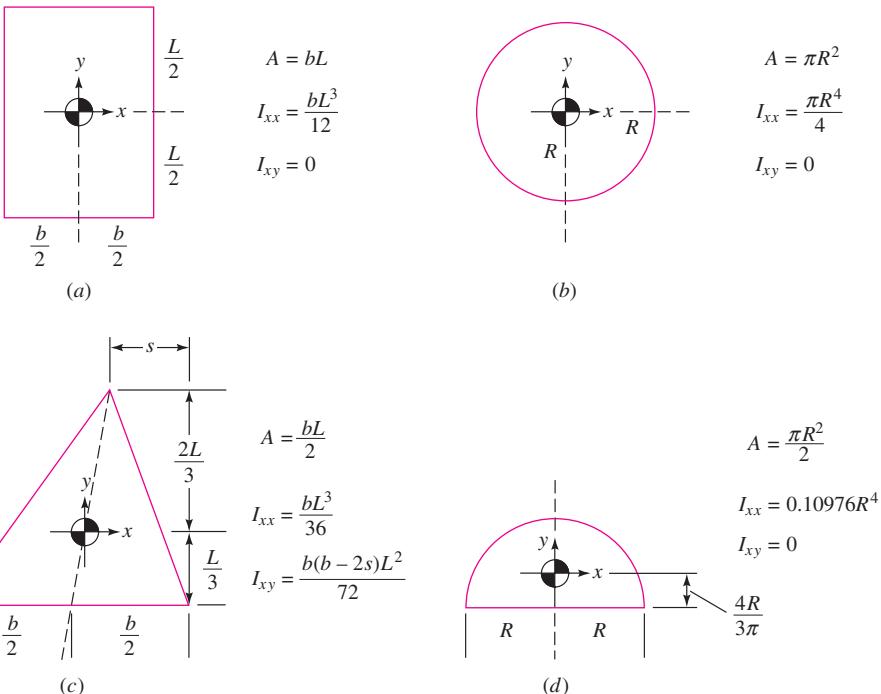

**Fig. 2.13** Centroidal moments of inertia for various cross sections: (a) rectangle, (b) circle, (c) triangle, and (d) semicircle.

### EXAMPLE 2.5

The gate in Fig. E2.5a is 5 ft wide, is hinged at point *B*, and rests against a smooth wall at point *A*. Compute (a) the force on the gate due to seawater pressure, (b) the horizontal force *P* exerted by the wall at point *A*, and (c) the reactions at the hinge *B*.

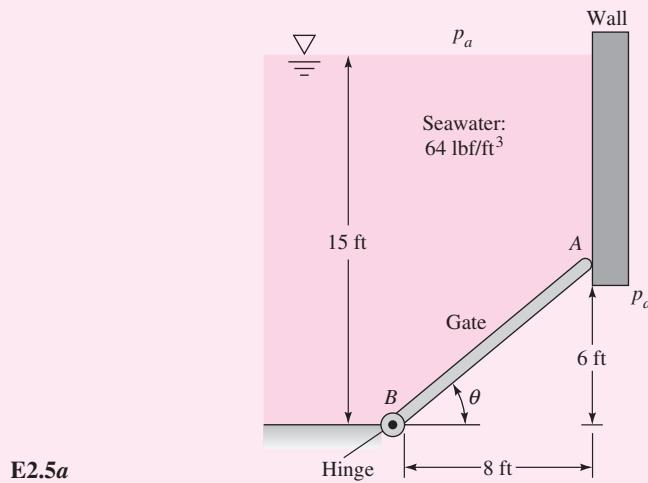

**Solution****Part (a)**

By geometry the gate is 10 ft long from A to B, and its centroid is halfway between, or at elevation 3 ft above point B. The depth  $h_{CG}$  is thus  $15 - 3 = 12$  ft. The gate area is  $5(10) = 50 \text{ ft}^2$ . Neglect  $p_a$  as acting on both sides of the gate. From Eq. (2.26) the hydrostatic force on the gate is

$$F = p_{CG}A = \gamma h_{CG}A = (64 \text{ lbf/ft}^3)(12 \text{ ft})(50 \text{ ft}^2) = 38,400 \text{ lbf} \quad \text{Ans. (a)}$$


**Part (b)**

First we must find the center of pressure of  $F$ . A free-body diagram of the gate is shown in Fig. E2.5b. The gate is a rectangle, hence

$$I_{xy} = 0 \quad \text{and} \quad I_{xx} = \frac{bL^3}{12} = \frac{(5 \text{ ft})(10 \text{ ft})^3}{12} = 417 \text{ ft}^4$$

The distance  $l$  from the CG to the CP is given by Eq. (2.29) since  $p_a$  is neglected.

$$l = -y_{CP} = +\frac{I_{xx} \sin \theta}{h_{CG}A} = \frac{(417 \text{ ft}^4)(\frac{6}{10})}{(12 \text{ ft})(50 \text{ ft}^2)} = 0.417 \text{ ft}$$

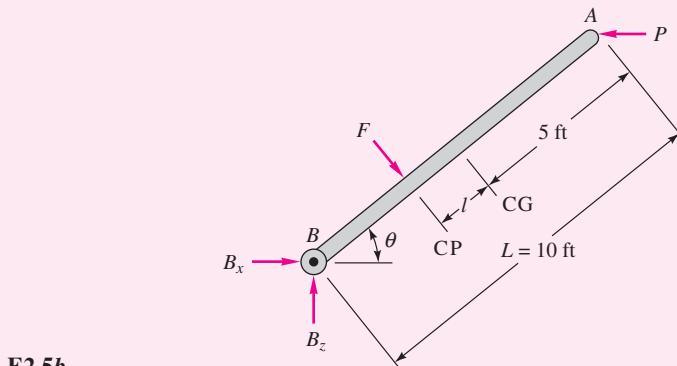

E2.5b

The distance from point B to force  $F$  is thus  $10 - l - 5 = 4.583$  ft. Summing the moments counterclockwise about B gives

$$PL \sin \theta - F(5 - l) = P(6 \text{ ft}) - (38,400 \text{ lbf})(4.583 \text{ ft}) = 0$$

or

$$P = 29,300 \text{ lbf} \quad \text{Ans. (b)}$$

**Part (c)**

With  $F$  and  $P$  known, the reactions  $B_x$  and  $B_z$  are found by summing forces on the gate:

$$\sum F_x = 0 = B_x + F \sin \theta - P = B_x + 38,400 \text{ lbf} (0.6) - 29,300 \text{ lbf}$$

or

$$B_x = 6300 \text{ lbf}$$

$$\sum F_z = 0 = B_z - F \cos \theta = B_z - 38,400 \text{ lbf} (0.8)$$

or

$$B_z = 30,700 \text{ lbf} \quad \text{Ans. (c)}$$

This example should have reviewed your knowledge of statics.

The solution of Example 2.5 was achieved with the moment of inertia formulas, Eqs. (2.29). They simplify the calculations, but one loses a physical feeling for the forces. Let us repeat Parts (a) and (b) of Example 2.5 using a more visual approach.

### EXAMPLE 2.6


Repeat Example 2.5 to sketch the pressure distribution on plate  $AB$ , and break this distribution into rectangular and triangular parts to solve for (a) the force on the plate and (b) the center of pressure.

#### Solution

##### Part (a)

Point  $A$  is 9 ft deep, hence  $p_A = \gamma h_A = (64 \text{ lbf}/\text{ft}^3)(9 \text{ ft}) = 576 \text{ lbf}/\text{ft}^2$ . Similarly, Point  $B$  is 15 ft deep, hence  $p_B = \gamma h_B = (64 \text{ lbf}/\text{ft}^3)(15 \text{ ft}) = 960 \text{ lbf}/\text{ft}^2$ . This defines the linear pressure distribution in Fig. E2.6. The rectangle is 576 by 10 ft by 5 ft into the paper. The triangle is  $(960 - 576) = 384 \text{ lbf}/\text{ft}^2 \times 10 \text{ ft}$  by 5 ft. The centroid of the rectangle is 5 ft down the plate from  $A$ . The centroid of the triangle is 6.67 ft down from  $A$ . The total force is the rectangle force plus the triangle force:

$$\begin{aligned} F &= \left(576 \frac{\text{lbf}}{\text{ft}^2}\right)(10 \text{ ft})(5 \text{ ft}) + \left(\frac{384 \text{ lbf}}{2 \text{ ft}^2}\right)(10 \text{ ft})(5 \text{ ft}) \\ &= 28,800 \text{ lbf} + 9600 \text{ lbf} = 38,400 \text{ lbf} \end{aligned} \quad \text{Ans. (a)}$$

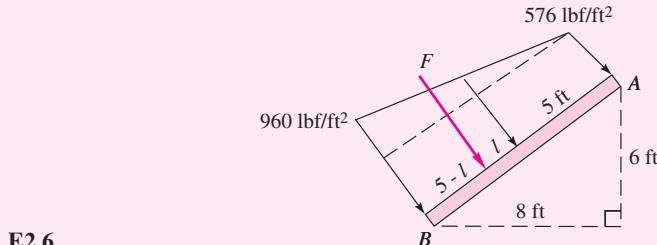

E2.6

##### Part (b)

The moments of these forces about point  $A$  are


$$\Sigma M_A = (28,800 \text{ lbf})(5 \text{ ft}) + (9600 \text{ lbf})(6.67 \text{ ft}) = 144,000 + 64,000 = 208,000 \text{ ft} \cdot \text{lbf}$$

$$\text{Then } 5 \text{ ft} + l = \frac{M_A}{F} = \frac{208,000 \text{ ft} \cdot \text{lbf}}{38,400 \text{ lbf}} = 5.417 \text{ ft} \quad \text{hence } l = 0.417 \text{ ft} \quad \text{Ans. (b)}$$

*Comment:* We obtain the same force and center of pressure as in Example 2.5 but with more understanding. However, this approach is awkward and laborious if the plate is not a rectangle. It would be difficult to solve Example 2.7 with the pressure distribution alone because the plate is a triangle. Thus moments of inertia can be a useful simplification.

**EXAMPLE 2.7**

A tank of oil has a right-triangular panel near the bottom, as in Fig. E2.7. Omitting  $p_a$ , find the (a) hydrostatic force and (b) CP on the panel.

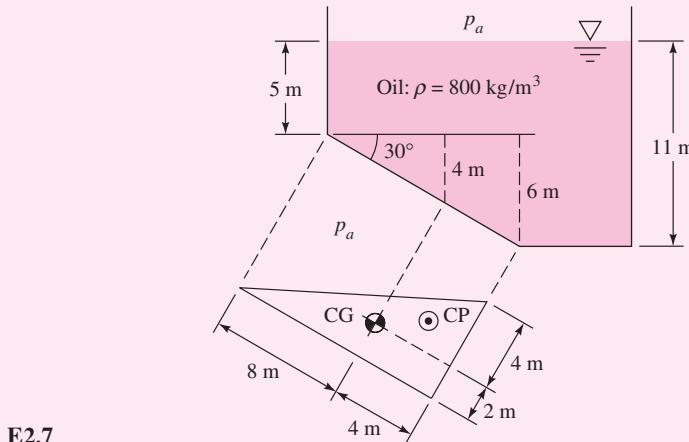**Solution****Part (a)**

The triangle has properties given in Fig. 2.13c. The centroid is one-third up (4 m) and one-third over (2 m) from the lower left corner, as shown. The area is

$$\frac{1}{2}(6 \text{ m})(12 \text{ m}) = 36 \text{ m}^2$$

The moments of inertia are

$$I_{xx} = \frac{bL^3}{36} = \frac{(6 \text{ m})(12 \text{ m})^3}{36} = 288 \text{ m}^4$$

$$\text{and } I_{xy} = \frac{b(b - 2s)L^2}{72} = \frac{(6 \text{ m})[6 \text{ m} - 2(6 \text{ m})](12 \text{ m})^2}{72} = -72 \text{ m}^4$$

The depth to the centroid is  $h_{CG} = 5 + 4 = 9 \text{ m}$ ; thus the hydrostatic force from Eq. (2.26) is

$$\begin{aligned} F &= \rho gh_{CG}A = (800 \text{ kg/m}^3)(9.807 \text{ m/s}^2)(9 \text{ m})(36 \text{ m}^2) \\ &= 2.54 \times 10^6 \text{ (kg} \cdot \text{m})/\text{s}^2 = 2.54 \times 10^6 \text{ N} = 2.54 \text{ MN} \end{aligned} \quad \text{Ans. (a)}$$

**Part (b)**

The CP position is given by Eqs. (2.29):

$$y_{CP} = -\frac{I_{xx} \sin \theta}{h_{CG} A} = -\frac{(288 \text{ m}^4)(\sin 30^\circ)}{(9 \text{ m})(36 \text{ m}^2)} = -0.444 \text{ m}$$

$$x_{CP} = -\frac{I_{xy} \sin \theta}{h_{CG} A} = -\frac{(-72 \text{ m}^4)(\sin 30^\circ)}{(9 \text{ m})(36 \text{ m}^2)} = +0.111 \text{ m} \quad \text{Ans. (b)}$$

The resultant force  $F = 2.54 \text{ MN}$  acts through this point, which is down and to the right of the centroid, as shown in Fig. E2.7.

## 2.6 Hydrostatic Forces on Curved Surfaces

The resultant pressure force on a curved surface is most easily computed by separating it into horizontal and vertical components. Consider the arbitrary curved surface sketched in Fig. 2.14a. The incremental pressure forces, being normal to the local area element, vary in direction along the surface and thus cannot be added numerically. We could sum the separate three components of these elemental pressure forces, but it turns out that we need not perform a laborious three-way integration.

Figure 2.14b shows a free-body diagram of the column of fluid contained in the vertical projection above the curved surface. The desired forces  $F_H$  and  $F_V$  are exerted by the surface on the fluid column. Other forces are shown due to fluid weight and horizontal pressure on the vertical sides of this column. The column of fluid must be in static equilibrium. On the upper part of the column *bcd*, the horizontal components  $F_1$  exactly balance and are not relevant to the discussion. On the lower, irregular portion of fluid *abc* adjoining the surface, summation of horizontal forces shows that the desired force  $F_H$  due to the curved surface is exactly equal to the force  $F_H$  on the vertical left side of the fluid column. This left-side force can be computed by the plane surface formula, Eq. (2.26), based on a vertical projection of the area of the curved surface. This is a general rule and simplifies the analysis:


**The horizontal component of force on a curved surface equals the force on the plane area formed by the projection of the curved surface onto a vertical plane normal to the component.**

If there are two horizontal components, both can be computed by this scheme. Summation of vertical forces on the fluid free body then shows that

$$F_V = W_1 + W_2 + W_{\text{air}} \quad (2.30)$$

We can state this in words as our second general rule:

**The vertical component of pressure force on a curved surface equals in magnitude and direction the weight of the entire column of fluid, both liquid and atmosphere, above the curved surface.**

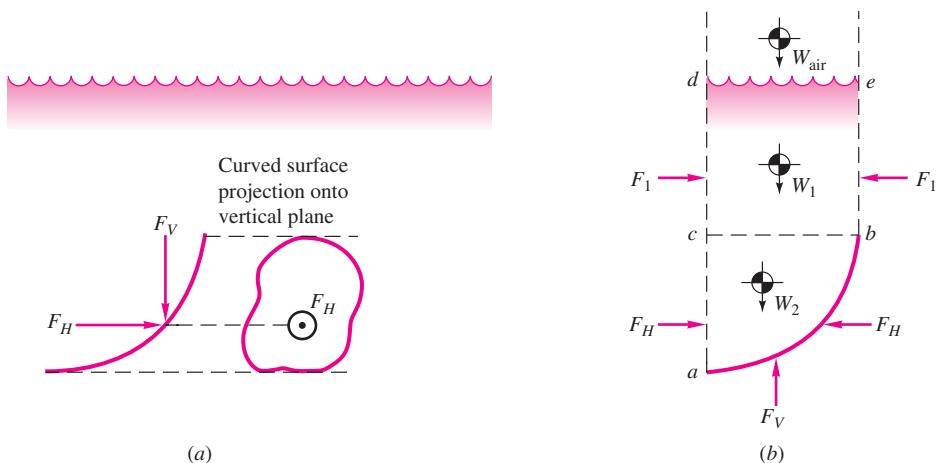


**Fig. 2.14** Computation of hydrostatic force on a curved surface: (a) submerged curved surface; (b) free-body diagram of fluid above the curved surface.

Thus the calculation of  $F_V$  involves little more than finding centers of mass of a column of fluid—perhaps a little integration if the lower portion  $abc$  in Fig. 2.14b has a particularly vexing shape.

### EXAMPLE 2.8

A dam has a parabolic shape  $z/z_0 = (x/x_0)^2$  as shown in Fig. E2.8a, with  $x_0 = 10$  ft and  $z_0 = 24$  ft. The fluid is water,  $\gamma = 62.4 \text{ lbf/ft}^3$ , and atmospheric pressure may be omitted. Compute the forces  $F_H$  and  $F_V$  on the dam and their line of action. The width of the dam is 50 ft.

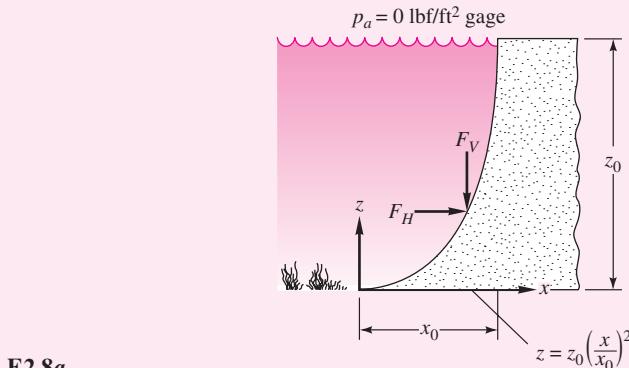

### Solution

- *System sketch:* Figure E2.8b shows the various dimensions. The dam width is  $b = 50$  ft.
- *Approach:* Calculate  $F_H$  and its line of action from Eqs. (2.26) and (2.29). Calculate  $F_V$  and its line of action by finding the weight of fluid above the parabola and the centroid of this weight.
- *Solution steps for the horizontal component:* The vertical projection of the parabola lies along the  $z$  axis in Fig. E2.8b and is a rectangle 24 ft high and 50 ft wide. Its centroid is halfway down, or  $h_{CG} = 24/2 = 12$  ft. Its area is  $A_{proj} = (24 \text{ ft})(50 \text{ ft}) = 1200 \text{ ft}^2$ . Then, from Eq. (2.26),

$$F_H = \gamma h_{CG} A_{proj} = \left( 62.4 \frac{\text{lbf}}{\text{ft}^3} \right) (12 \text{ ft}) (1200 \text{ ft}^2) = 898,560 \text{ lbf} \approx 899 \times 10^3 \text{ lbf}$$

The line of action of  $F_H$  is below the centroid of  $A_{proj}$ , as given by Eq. (2.29):


$$y_{CP, proj} = -\frac{I_{xx} \sin \theta}{h_{CG} A_{proj}} = -\frac{(1/12)(50 \text{ ft})(24 \text{ ft})^3 \sin 90^\circ}{(12 \text{ ft})(1200 \text{ ft}^2)} = -4 \text{ ft}$$

Thus  $F_H$  is  $12 + 4 = 16$  ft, or two-thirds of the way down from the surface (8 ft up from the bottom).

- *Comments:* Note that you calculate  $F_H$  and its line of action from the *vertical projection* of the parabola, not from the parabola itself. Since this projection is *vertical*, its angle  $\theta = 90^\circ$ .
- *Solution steps for the vertical component:* The vertical force  $F_V$  equals the weight of water above the parabola. Alas, a parabolic section is not in Fig. 2.13, so we had to look

it up in another book. The area and centroid are shown in Fig. E2.8b. The weight of this parabolic amount of water is

$$F_V = \gamma A_{\text{section}} b = \left( 62.4 \frac{\text{lbf}}{\text{ft}^3} \right) \left[ \frac{2}{3} (24 \text{ ft})(10 \text{ ft}) \right] (50 \text{ ft}) = 499,200 \text{ lbf} \approx 499 \times 10^3 \text{ lbf}$$

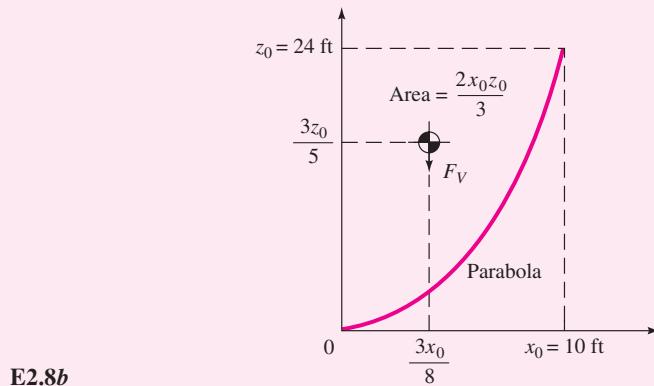



This force acts downward, through the centroid of the parabolic section, or at a distance  $3x_0/8 = 3.75$  ft over from the origin, as shown in Figs. E2.8b,c. The resultant hydrostatic force on the dam is

$$F = (F_H^2 + F_V^2)^{1/2} = [(899E3 \text{ lbf})^2 + (499E3 \text{ lbf})^2]^{1/2} = 1028 \times 10^3 \text{ lbf} \text{ at } \sqrt{29^\circ} \text{ Ans.}$$

This resultant is shown in Fig. E2.8c and passes through a point 8 ft up and 3.75 ft over from the origin. It strikes the dam at a point 5.43 ft over and 7.07 ft up, as shown.

- *Comments:* Note that entirely different formulas are used to calculate  $F_H$  and  $F_V$ . The concept of center of pressure CP is, in the writer's opinion, stretched too far when applied to curved surfaces.

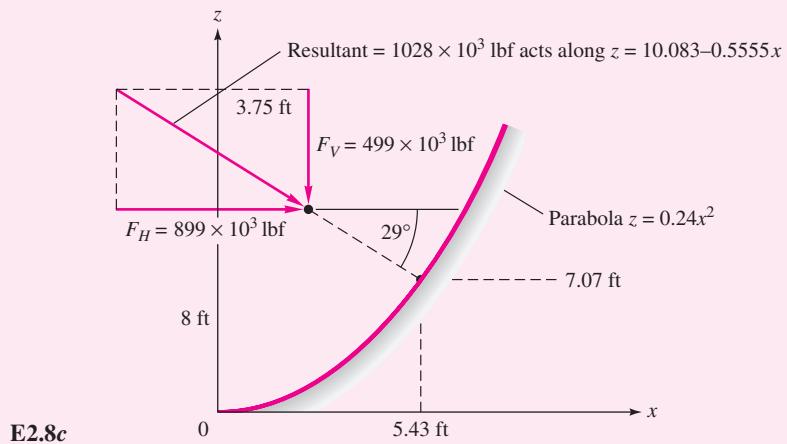

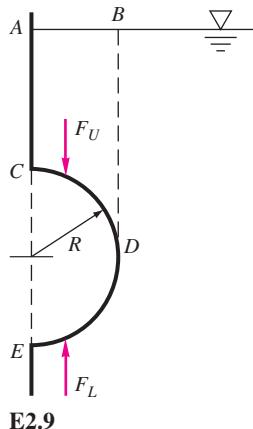**EXAMPLE 2.9**

Find an algebraic formula for the net vertical force  $F$  on the submerged semicircular projecting structure  $CDE$  in Fig. E2.9. The structure has uniform width  $b$  into the paper. The liquid has specific weight  $\gamma$ .

**Solution**


The net force is the difference between the upward force  $F_L$  on the lower surface  $DE$  and the downward force  $F_U$  on the upper surface  $CD$ , as shown in Fig. E2.9. The force  $F_U$  equals  $\gamma$  times the volume  $ABDC$  above surface  $CD$ . The force  $F_L$  equals  $\gamma$  times the volume  $ABDEC$  above surface  $DE$ . The latter is clearly larger. The difference is  $\gamma$  times the volume of the structure itself. Thus the net upward fluid force on the semicylinder is

$$F = \gamma_{\text{fluid}} (\text{volume } CDE) = \gamma_{\text{fluid}} \frac{\pi}{2} R^2 b \quad \text{Ans.}$$

This is the principle upon which the laws of buoyancy, Sec. 2.8, are founded. Note that the result is independent of the depth of the structure and depends upon the specific weight of the fluid, not the material within the structure.

## 2.7 Hydrostatic Forces in Layered Fluids

The formulas for plane and curved surfaces in Secs. 2.5 and 2.6 are valid only for a fluid of uniform density. If the fluid is layered with different densities, as in Fig. 2.15, a single formula cannot solve the problem because the slope of the linear pressure

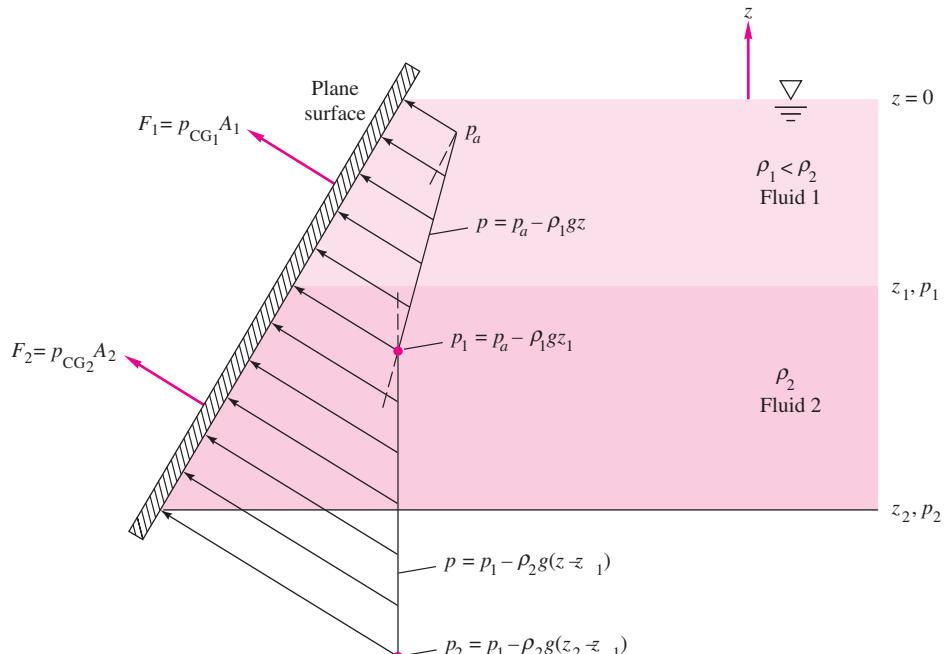

**Fig. 2.15** Hydrostatic forces on a surface immersed in a layered fluid must be summed in separate pieces.

distribution changes between layers. However, the formulas apply separately to each layer, and thus the appropriate remedy is to compute and sum the separate layer forces and moments.

Consider the slanted plane surface immersed in a two-layer fluid in Fig. 2.15. The slope of the pressure distribution becomes steeper as we move down into the denser second layer. The total force on the plate does *not* equal the pressure at the centroid times the plate area, but the plate portion in each layer does satisfy the formula, so that we can sum forces to find the total:

$$F = \sum F_i = \sum p_{CG_i} A_i \quad (2.31)$$

Similarly, the centroid of the plate portion in each layer can be used to locate the center of pressure on that portion:

$$y_{CP_i} = -\frac{\rho_i g \sin \theta_i I_{xx_i}}{p_{CG_i} A_i} \quad x_{CP_i} = -\frac{\rho_i g \sin \theta_i I_{xy_i}}{p_{CG_i} A_i} \quad (2.32)$$

These formulas locate the center of pressure of that particular  $F_i$  with respect to the centroid of that particular portion of plate in the layer, not with respect to the centroid of the entire plate. The center of pressure of the total force  $F = \sum F_i$  can then be found by summing moments about some convenient point such as the surface. The following example will illustrate this.

### EXAMPLE 2.10

A tank 20 ft deep and 7 ft wide is layered with 8 ft of oil, 6 ft of water, and 4 ft of mercury. Compute (a) the total hydrostatic force and (b) the resultant center of pressure of the fluid on the right-hand side of the tank.

#### Solution

##### Part (a)

Divide the end panel into three parts as sketched in Fig. E2.10, and find the hydrostatic pressure at the centroid of each part, using the relation (2.26) in steps as in Fig. E2.10:

$$p_{CG_1} = (55.0 \text{ lbf}/\text{ft}^3)(4 \text{ ft}) = 220 \text{ lbf}/\text{ft}^2$$

$$p_{CG_2} = (55.0)(8) + 62.4(3) = 627 \text{ lbf}/\text{ft}^2$$

$$p_{CG_3} = (55.0)(8) + 62.4(6) + 846(2) = 2506 \text{ lbf}/\text{ft}^2$$


These pressures are then multiplied by the respective panel areas to find the force on each portion:

$$F_1 = p_{CG_1} A_1 = (220 \text{ lbf}/\text{ft}^2)(8 \text{ ft})(7 \text{ ft}) = 12,300 \text{ lbf}$$

$$F_2 = p_{CG_2} A_2 = 627(6)(7) = 26,300 \text{ lbf}$$

$$F_3 = p_{CG_3} A_3 = 2506(4)(7) = 70,200 \text{ lbf}$$

$$F = \sum F_i = 108,800 \text{ lbf} \quad \text{Ans. (a)}$$

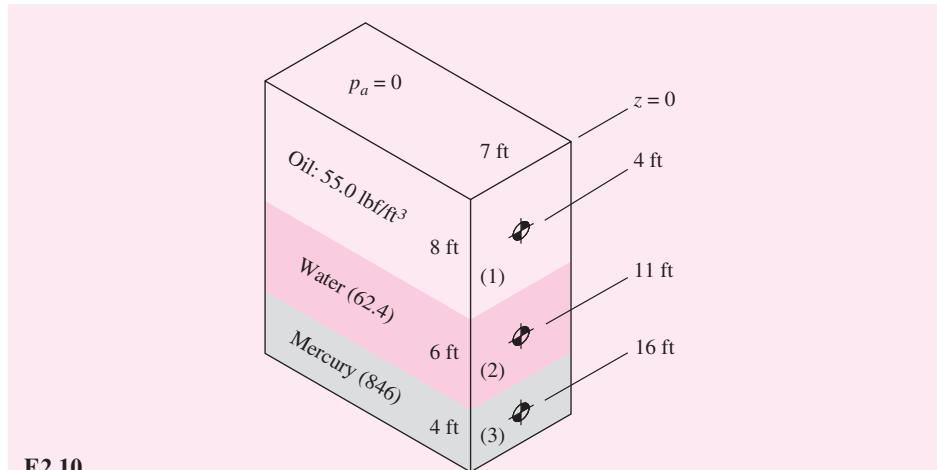

E2.10

**Part (b)**

Equations (2.32) can be used to locate the CP of each force  $F_i$ , noting that  $\theta = 90^\circ$  and  $\sin \theta = 1$  for all parts. The moments of inertia are  $I_{xx_1} = (7\text{ ft})(8\text{ ft})^3/12 = 298.7 \text{ ft}^4$ ,  $I_{xx_2} = 7(6)^3/12 = 126.0 \text{ ft}^4$ , and  $I_{xx_3} = 7(4)^3/12 = 37.3 \text{ ft}^4$ . The centers of pressure are thus at

$$y_{CP_1} = -\frac{\rho_1 g I_{xx_1}}{F_1} = -\frac{(55.0 \text{ lb}/\text{ft}^3)(298.7 \text{ ft}^4)}{12,300 \text{ lbf}} = -1.33 \text{ ft}$$

$$y_{CP_2} = -\frac{62.4(126.0)}{26,300} = -0.30 \text{ ft} \quad y_{CP_3} = -\frac{846(37.3)}{70,200} = -0.45 \text{ ft}$$

This locates  $z_{CP_1} = -4 - 1.33 = -5.33 \text{ ft}$ ,  $z_{CP_2} = -11 - 0.30 = -11.30 \text{ ft}$ , and  $z_{CP_3} = -16 - 0.45 = -16.45 \text{ ft}$ . Summing moments about the surface then gives

$$\sum F_i z_{CP_i} = F_z_{CP}$$

$$\text{or} \quad 12,300(-5.33) + 26,300(-11.30) + 70,200(-16.45) = 108,800 z_{CP}$$


$$\text{or} \quad z_{CP} = -\frac{1,518,000}{108,800} = -13.95 \text{ ft} \quad \text{Ans. (b)}$$

The center of pressure of the total resultant force on the right side of the tank lies 13.95 ft below the surface.

## 2.8 Buoyancy and Stability

The same principles used to compute hydrostatic forces on surfaces can be applied to the net pressure force on a completely submerged or floating body. The results are the two laws of buoyancy discovered by Archimedes in the third century B.C.:

1. A body immersed in a fluid experiences a vertical buoyant force equal to the weight of the fluid it displaces.
2. A floating body displaces its own weight in the fluid in which it floats.

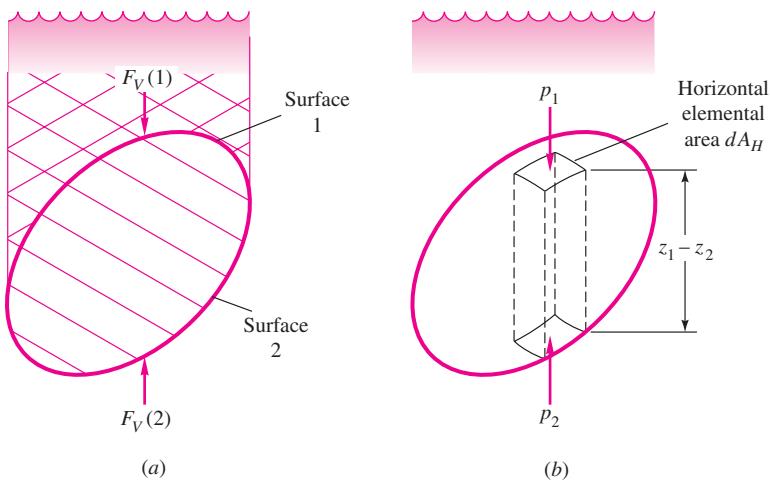

**Fig. 2.16** Two different approaches to the buoyant force on an arbitrary immersed body: (a) forces on upper and lower curved surfaces; (b) summation of elemental vertical-pressure forces.

Archimedes (287–212 B.C.) was born and lived in the Greek city-state of Syracuse, on what is now the island of Sicily. He was a brilliant mathematician and engineer, two millennia ahead of his time. He calculated an accurate value for pi and approximated areas and volumes of various bodies by summing elemental shapes. In other words, he invented the integral calculus. He developed levers, pulleys, catapults, and a screw pump. Archimedes was the first to write large numbers as powers of 10, avoiding Roman numerals. And he deduced the principles of buoyancy, which we study here, when he realized how light he was when sitting in a bathtub.

Archimedes' two laws are easily derived by referring to Fig. 2.16. In Fig. 2.16a, the body lies between an upper curved surface 1 and a lower curved surface 2. From Eq. (2.30) for vertical force, the body experiences a net upward force


$$\begin{aligned} F_B &= F_V(2) - F_V(1) \\ &= (\text{fluid weight above 2}) - (\text{fluid weight above 1}) \\ &= \text{weight of fluid equivalent to body volume} \end{aligned} \quad (2.33)$$

Alternatively, from Fig. 2.16b, we can sum the vertical forces on elemental vertical slices through the immersed body:

$$F_B = \int_{\text{body}} (p_2 - p_1) dA_H = -\gamma \int (z_2 - z_1) dA_H = (\gamma)(\text{body volume}) \quad (2.34)$$

These are identical results and equivalent to Archimedes' law 1.

Equation (2.34) assumes that the fluid has uniform specific weight. The line of action of the buoyant force passes through the center of volume of the displaced body; that is, its center of mass computed as if it had uniform density. This point through which  $F_B$  acts is called the *center of buoyancy*, commonly labeled  $B$  or  $CB$  on a drawing. Of course, the point  $B$  may or may not correspond to the actual center of mass of the body's own material, which may have variable density.

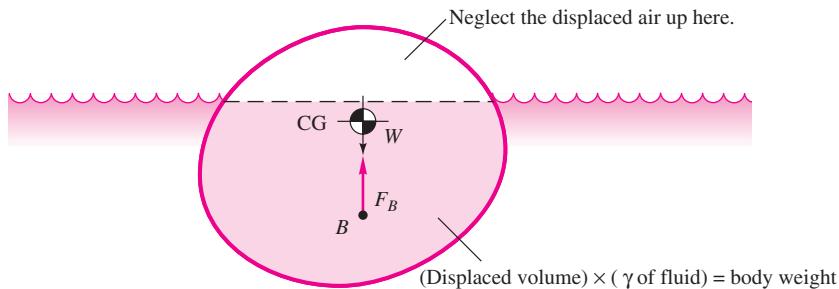

**Fig. 2.17** Static equilibrium of a floating body.

Equation (2.34) can be generalized to a layered fluid (LF) by summing the weights of each layer of density  $\rho_i$  displaced by the immersed body:

$$(F_B)_{\text{LF}} = \sum \rho_i g (\text{displaced volume})_i \quad (2.35)$$

Each displaced layer would have its own center of volume, and one would have to sum moments of the incremental buoyant forces to find the center of buoyancy of the immersed body.

Since liquids are relatively heavy, we are conscious of their buoyant forces, but gases also exert buoyancy on any body immersed in them. For example, human beings have an average specific weight of about 60 lbf/ft<sup>3</sup>. We may record the weight of a person as 180 lbf and thus estimate the person's total volume as 3.0 ft<sup>3</sup>. However, in so doing we are neglecting the buoyant force of the air surrounding the person. At standard conditions, the specific weight of air is 0.0763 lbf/ft<sup>3</sup>; hence the buoyant force is approximately 0.23 lbf. If measured in a vacuum, the person would weigh about 0.23 lbf more. For balloons and blimps the buoyant force of air, instead of being negligible, is the controlling factor in the design. Also, many flow phenomena, such as natural convection of heat and vertical mixing in the ocean, are strongly dependent on seemingly small buoyant forces.


Floating bodies are a special case; only a portion of the body is submerged, with the remainder poking up out of the free surface. This is illustrated in Fig. 2.17, where the shaded portion is the displaced volume. Equation (2.34) is modified to apply to this smaller volume:

$$F_B = (\gamma)(\text{displaced volume}) = \text{floating-body weight} \quad (2.36)$$

Not only does the buoyant force equal the body weight, but also they are *collinear* since there can be no net moments for static equilibrium. Equation (2.36) is the mathematical equivalent of Archimedes' law 2, previously stated.

#### EXAMPLE 2.11

A block of concrete weighs 100 lbf in air and “weighs” only 60 lbf when immersed in fresh water (62.4 lbf/ft<sup>3</sup>). What is the average specific weight of the block?

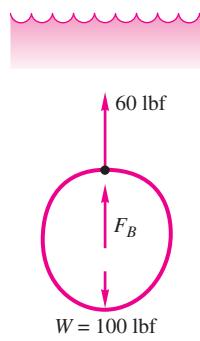

E2.11

**Solution**

A free-body diagram of the submerged block (see Fig. E2.11) shows a balance between the apparent weight, the buoyant force, and the actual weight:

$$\sum F_z = 0 = 60 + F_B - 100$$

$$\text{or } F_B = 40 \text{ lbf} = (62.4 \text{ lbf/ft}^3)(\text{block volume, ft}^3)$$

Solving gives the volume of the block as  $40/62.4 = 0.641 \text{ ft}^3$ . Therefore the specific weight of the block is

$$\gamma_{\text{block}} = \frac{100 \text{ lbf}}{0.641 \text{ ft}^3} = 156 \text{ lbf/ft}^3$$

Ans.


Occasionally, a body will have exactly the right weight and volume for its ratio to equal the specific weight of the fluid. If so, the body will be *neutrally buoyant* and will remain at rest at any point where it is immersed in the fluid. Small neutrally buoyant particles are sometimes used in flow visualization, and a neutrally buoyant body called a *Swallow flat* [2] is used to track oceanographic currents. A submarine can achieve positive, neutral, or negative buoyancy by pumping water in or out of its ballast tanks.

**Stability**

A floating body as in Fig. 2.17 may not approve of the position in which it is floating. If so, it will overturn at the first opportunity and is said to be statically *unstable*, like a pencil balanced on its point. The least disturbance will cause it to seek another equilibrium position that is stable. Engineers must design to avoid floating instability. The only way to tell for sure whether a floating position is stable is to “disturb” the body a slight amount mathematically and see whether it develops a restoring moment that will return it to its original position. If so, it is stable; if not, unstable. Such calculations for arbitrary floating bodies have been honed to a fine art by naval architects [3], but we can at least outline the basic principle of the static stability calculation. Figure 2.18 illustrates the computation for the usual case of a symmetric floating body. The steps are as follows:

1. The basic floating position is calculated from Eq. (2.36). The body’s center of mass  $G$  and center of buoyancy  $B$  are computed.
2. The body is tilted a small angle  $\Delta\theta$ , and a new waterline is established for the body to float at this angle. The new position  $B'$  of the center of buoyancy is calculated. A vertical line drawn upward from  $B'$  intersects the line of symmetry at a point  $M$ , called the *metacenter*, which is independent of  $\Delta\theta$  for small angles.
3. If point  $M$  is above  $G$  (that is, if the *metacentric height*  $\overline{MG}$  is positive), a restoring moment is present and the original position is stable. If  $M$  is below  $G$  (negative  $\overline{MG}$ ), the body is unstable and will overturn if disturbed. Stability increases with increasing  $\overline{MG}$ .

Thus the metacentric height is a property of the cross section for the given weight, and its value gives an indication of the stability of the body. For a body of varying cross section and draft, such as a ship, the computation of the metacenter can be very involved.

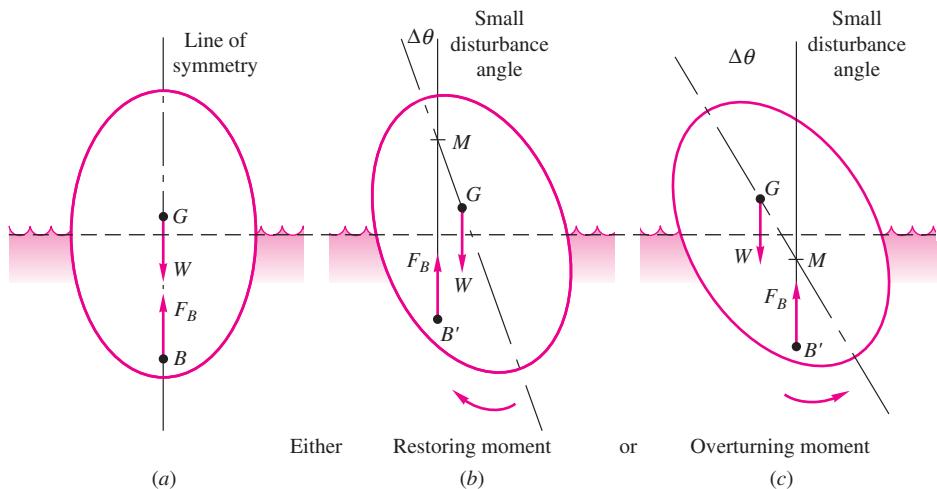


**Fig. 2.18** Calculation of the metacenter  $M$  of the floating body shown in (a). Tilt the body a small angle  $\Delta\theta$ . Either (b)  $B'$  moves far out (point  $M$  above  $G$  denotes stability); or (c)  $B'$  moves slightly (point  $M$  below  $G$  denotes instability).

### Stability Related to Waterline Area

Naval architects [3] have developed the general stability concepts from Fig. 2.18 into a simple computation involving the area moment of inertia of the *waterline area* about the axis of tilt. The derivation assumes that the body has a smooth shape variation (no discontinuities) near the waterline and is derived from Fig. 2.19.

The  $y$  axis of the body is assumed to be a line of symmetry. Tilting the body a small angle  $\theta$  then submerges the small wedge  $Obd$  and uncovers an equal wedge  $cOa$ , as shown. The new position  $B'$  of the center of buoyancy is calculated as the centroid of the submerged portion  $aObde$  of the body:

$$\begin{aligned}\bar{x} v_{aObde} &= \int_{cOdea} x dv + \int_{Obd} x dv - \int_{cOa} x dv = 0 + \int_{Obd} x (L dA) - \int_{cOa} x (L dA) \\ &= 0 + \int_{Obd} x L (x \tan \theta dx) - \int_{cOa} x L (-x \tan \theta dx) = \tan \theta \int_{\text{waterline}} x^2 dA_{\text{waterline}} = I_O \tan \theta\end{aligned}$$

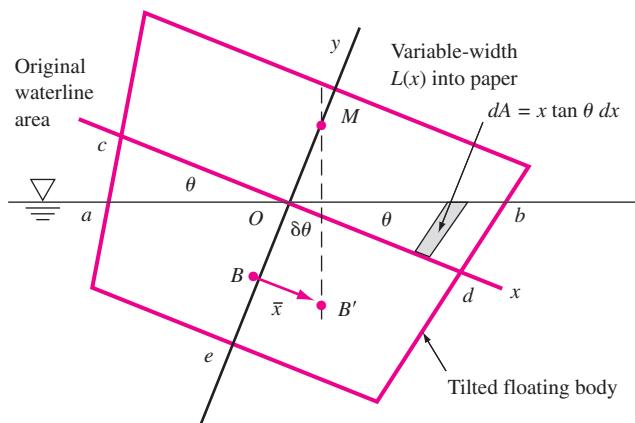

**Fig. 2.19** A floating body tilted through a small angle  $\theta$ . The movement  $\bar{x}$  of the center of buoyancy  $B$  is related to the waterline area moment of inertia.


where  $I_O$  is the area moment of inertia of the *waterline footprint* of the body about its tilt axis  $O$ . The first integral vanishes because of the symmetry of the original submerged portion  $cOdea$ . The remaining two “wedge” integrals combine into  $I_O$  when we notice that  $L dx$  equals an element of *waterline area*. Thus we determine the desired distance from  $M$  to  $B$ :

$$\frac{\bar{x}}{\tan \theta} = \overline{MB} = \frac{I_O}{v_{\text{submerged}}} = \overline{MG} + \overline{GB} \quad \text{or} \quad \overline{MG} = \frac{I_O}{v_{\text{sub}}} - \overline{GB} \quad (2.37)$$

The engineer would determine the distance from  $G$  to  $B$  from the basic shape and design of the floating body and then make the calculation of  $I_O$  and the submerged volume  $v_{\text{sub}}$ . If the metacentric height  $MG$  is positive, the body is stable for small disturbances. Note that if  $\overline{GB}$  is negative, that is,  $B$  is *above*  $G$ , the body is always stable.

### EXAMPLE 2.12

A barge has a uniform rectangular cross section of width  $2L$  and vertical draft of height  $H$ , as in Fig. E2.12. Determine (a) the metacentric height for a small tilt angle and (b) the range of ratio  $L/H$  for which the barge is statically stable if  $G$  is exactly at the waterline as shown.

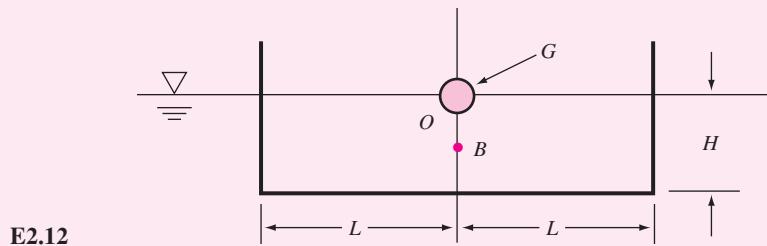

E2.12

### Solution

If the barge has length  $b$  into the paper, the waterline area, relative to tilt axis  $O$ , has a base  $b$  and a height  $2L$ ; therefore,  $I_O = b(2L)^3/12$ . Meanwhile,  $v_{\text{sub}} = 2LbH$ . Equation (2.37) predicts

$$\overline{MG} = \frac{I_O}{v_{\text{sub}}} - \overline{GB} = \frac{8bL^3/12}{2LbH} - \frac{H}{2} = \frac{L^2}{3H} - \frac{H}{2} \quad \text{Ans. (a)}$$

The barge can thus be stable only if

$$L^2 > 3H^2/2 \quad \text{or} \quad 2L > 2.45H \quad \text{Ans. (b)}$$

The wider the barge relative to its draft, the more stable it is. Lowering  $G$  would help also.

Even an expert will have difficulty determining the floating stability of a buoyant body of irregular shape. Such bodies may have two or more stable positions. For



**Fig. 2.20** A North Atlantic iceberg formed by calving from a Greenland glacier. These, and their even larger Antarctic sisters, are the largest floating bodies in the world. Note the evidence of further calving fractures on the front surface.  
(©Corbis.)

example, a ship may float the way we like it, so that we can sit on the deck, or it may float upside down (capsized). An interesting mathematical approach to floating stability is given in Ref. 11. The author of this reference points out that even simple shapes, such as a cube of uniform density, may have a great many stable floating orientations, not necessarily symmetric. Homogeneous circular cylinders can float with the axis of symmetry tilted from the vertical.

Floating instability occurs in nature. Fish generally swim with their planes of symmetry vertical. After death, this position is unstable and they float with their flat sides up. Giant icebergs may overturn after becoming unstable when their shapes change due to underwater melting. Iceberg overturning is a dramatic, rarely seen event.

Figure 2.20 shows a typical North Atlantic iceberg formed by calving from a Greenland glacier that protruded into the ocean. The exposed surface is rough, indicating that it has undergone further calving. Icebergs are frozen fresh, bubbly, glacial water of average density  $900 \text{ kg/m}^3$ . Thus, when an iceberg is floating in seawater, whose average density is  $1025 \text{ kg/m}^3$ , approximately  $900/1025$ , or seven-eighths, of its volume lies below the water.


## 2.9 Pressure Distribution in Rigid-Body Motion

In rigid-body motion, all particles are in combined translation and rotation, and there is no relative motion between particles. With no relative motion, there are no strains or strain rates, so that the viscous term in Eq. (2.8) vanishes, leaving a balance between pressure, gravity, and particle acceleration:

$$\nabla p = \rho(\mathbf{g} - \mathbf{a}) \quad (2.38)$$

The pressure gradient acts in the direction  $\mathbf{g} - \mathbf{a}$ , and lines of constant pressure (including the free surface, if any) are perpendicular to this direction. The general case of combined translation and rotation of a rigid body is discussed in Chap. 3, Fig. 3.11.

Fluids can rarely move in rigid-body motion unless restrained by confining walls for a long time. For example, suppose a tank of water is in a car that starts a constant acceleration. The water in the tank would begin to slosh about, and that sloshing

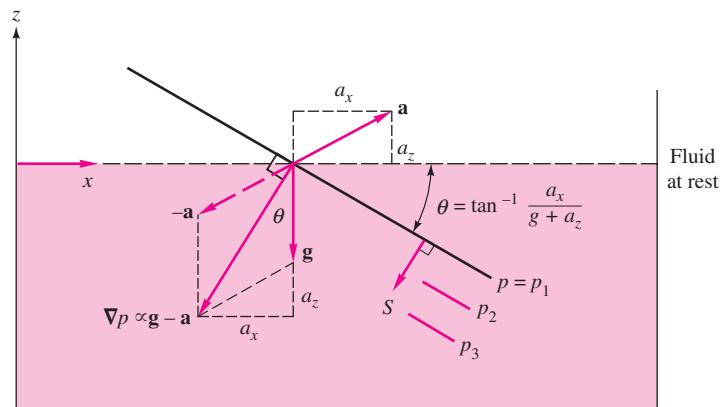

**Fig. 2.21** Tilting of constant-pressure surfaces in a tank of liquid in rigid-body acceleration.

would damp out very slowly until finally the particles of water would be in approximately rigid-body acceleration. This would take so long that the car would have reached hypersonic speeds. Nevertheless, we can at least discuss the pressure distribution in a tank of rigidly accelerating water.

## Uniform Linear Acceleration

In the case of uniform rigid-body acceleration, Eq. (2.38) applies,  $\mathbf{a}$  having the same magnitude and direction for all particles. With reference to Fig. 2.21, the parallelogram sum of  $\mathbf{g}$  and  $-\mathbf{a}$  gives the direction of the pressure gradient or greatest rate of increase of  $p$ . The surfaces of constant pressure must be perpendicular to this and are thus tilted at a downward angle  $\theta$  such that

$$\theta = \tan^{-1} \frac{a_x}{g + a_z} \quad (2.39)$$

One of these tilted lines is the free surface, which is found by the requirement that the fluid retain its volume unless it spills out. The rate of increase of pressure in the direction  $\mathbf{g} - \mathbf{a}$  is greater than in ordinary hydrostatics and is given by

$$\frac{dp}{ds} = \rho G \quad \text{where } G = [a_x^2 + (g + a_z)^2]^{1/2} \quad (2.40)$$


These results are independent of the size or shape of the container as long as the fluid is continuously connected throughout the container.

### EXAMPLE 2.13

A drag racer rests her coffee mug on a horizontal tray while she accelerates at  $7 \text{ m/s}^2$ . The mug is 10 cm deep and 6 cm in diameter and contains coffee 7 cm deep at rest. (a) Assuming rigid-body acceleration of the coffee, determine whether it will spill out of the mug. (b) Calculate the gage pressure in the corner at point A if the density of coffee is  $1010 \text{ kg/m}^3$ .

**Solution**

- *System sketch:* Figure E2.13 shows the coffee tilted during the acceleration.

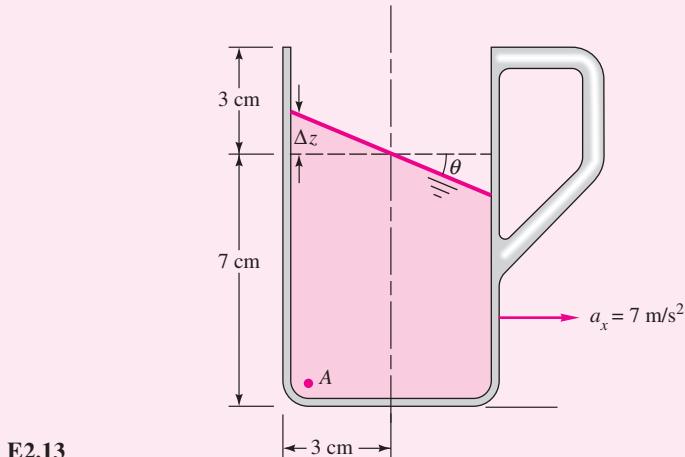

- *Assumptions:* Rigid-body horizontal acceleration,  $a_x = 7 \text{ m/s}^2$ . Symmetric coffee cup.
- *Property values:* Density of coffee given as  $1010 \text{ kg/m}^3$ .
- *Approach (a):* Determine the angle of tilt from the known acceleration, then find the height rise.
- *Solution steps:* From Eq. (2.39), the angle of tilt is given by

$$\theta = \tan^{-1} \frac{a_x}{g} = \tan^{-1} \frac{7.0 \text{ m/s}^2}{9.81 \text{ m/s}^2} = 35.5^\circ$$

If the mug is symmetric, the tilted surface will pass through the center point of the rest position, as shown in Fig. E2.13. Then the rear side of the coffee free surface will rise an amount  $\Delta z$  given by


$$\Delta z = (3 \text{ cm})(\tan 35.5^\circ) = 2.14 \text{ cm} < 3 \text{ cm} \quad \text{therefore no spilling} \quad \text{Ans. (a)}$$

- *Comment (a):* This solution neglects sloshing, which might occur if the start-up is uneven.
- *Approach (b):* The pressure at A can be computed from Eq. (2.40), using the perpendicular distance  $\Delta s$  from the surface to A. When at rest,  $p_A = \rho g h_{\text{rest}} = (1010 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(0.07 \text{ m}) = 694 \text{ Pa}$ . When accelerating,

$$p_A = \rho G \Delta s = \left(1010 \frac{\text{kg}}{\text{m}^3}\right) \left[ \sqrt{(9.81)^2 + (7.0)^2} \right] [(0.07 + 0.0214) \cos 35.5^\circ] \approx 906 \text{ Pa} \quad \text{Ans. (b)}$$

- *Comment (b):* The acceleration has increased the pressure at A by 31 percent. Think about this alternative: why does it work? Since  $a_z = 0$ , we may proceed vertically down the left side to compute

$$p_A = \rho g(z_{\text{surf}} - z_A) = (1010 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(0.0214 + 0.07 \text{ m}) = 906 \text{ Pa}$$

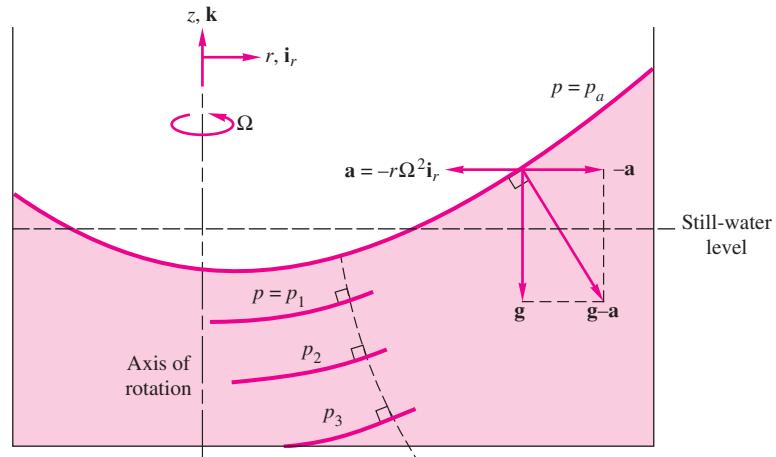

**Fig. 2.22** Development of paraboloid constant-pressure surfaces in a fluid in rigid-body rotation. The dashed line along the direction of maximum pressure increase is an exponential curve.

### Rigid-Body Rotation

As a second special case, consider rotation of the fluid about the  $z$  axis without any translation, as sketched in Fig. 2.22. We assume that the container has been rotating long enough at constant  $\Omega$  for the fluid to have attained rigid-body rotation. The fluid acceleration will then be a centripetal term. In the coordinates of Fig. 2.22, the angular-velocity and position vectors are given by

$$\boldsymbol{\Omega} = \mathbf{k}\Omega \quad \mathbf{r}_0 = \mathbf{i}_r r \quad (2.41)$$

Then the acceleration is given by

$$\boldsymbol{\Omega} \times (\boldsymbol{\Omega} \times \mathbf{r}_0) = -r\Omega^2 \mathbf{i}_r \quad (2.42)$$

as marked in the figure, and Eq. (2.38) for the force balance becomes

$$\nabla p = \mathbf{i}_r \frac{\partial p}{\partial r} + \mathbf{k} \frac{\partial p}{\partial z} = \rho(\mathbf{g} - \mathbf{a}) = \rho(-g\mathbf{k} + r\Omega^2 \mathbf{i}_r)$$

Equating like components, we find the pressure field by solving two first-order partial differential equations:

$$\frac{\partial p}{\partial r} = \rho r \Omega^2 \quad \frac{\partial p}{\partial z} = -\gamma \quad (2.43)$$


The right-hand sides of (2.43) are known functions of  $r$  and  $z$ . One can proceed as follows: Integrate the first equation “partially,” holding  $z$  constant, with respect to  $r$ . The result is

$$p = \frac{1}{2}\rho r^2 \Omega^2 + f(z) \quad (2.44)$$

where the “constant” of integration is actually a function  $f(z)$ .<sup>2</sup> Now differentiate this with respect to  $z$  and compare with the second relation of (2.43):

$$\frac{\partial p}{\partial z} = 0 + f'(z) = -\gamma$$

<sup>2</sup>This is because  $f(z)$  vanishes when differentiated with respect to  $r$ . If you don’t see this, you should review your calculus.

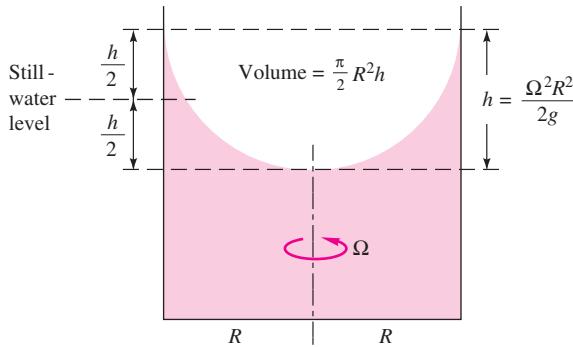

**Fig. 2.23** Determining the free-surface position for rotation of a cylinder of fluid about its central axis.

$$\text{or} \quad f(z) = -\gamma z + C$$

where  $C$  is a constant. Thus Eq. (2.44) now becomes

$$p = \text{const} - \gamma z + \frac{1}{2}\rho r^2 \Omega^2 \quad (2.45)$$

This is the pressure distribution in the fluid. The value of  $C$  is found by specifying the pressure at one point. If  $p = p_0$  at  $(r, z) = (0, 0)$ , then  $C = p_0$ . The final desired distribution is

$$p = p_0 - \gamma z + \frac{1}{2}\rho r^2 \Omega^2 \quad (2.46)$$

The pressure is linear in  $z$  and parabolic in  $r$ . If we wish to plot a constant-pressure surface, say,  $p = p_1$ , Eq. (2.45) becomes

$$z = \frac{p_0 - p_1}{\gamma} + \frac{r^2 \Omega^2}{2g} = a + br^2 \quad (2.47)$$

Thus the surfaces are paraboloids of revolution, concave upward, with their minimum points on the axis of rotation. Some examples are sketched in Fig. 2.22.

As in the previous example of linear acceleration, the position of the free surface is found by conserving the volume of fluid. For a noncircular container with the axis of rotation off-center, as in Fig. 2.22, a lot of laborious mensuration is required, and a single problem will take you all weekend. However, the calculation is easy for a cylinder rotating about its central axis, as in Fig. 2.23. Since the volume of a paraboloid is one-half the base area times its height, the still-water level is exactly halfway between the high and low points of the free surface. The center of the fluid drops an amount  $h/2 = \Omega^2 R^2/(4g)$ , and the edges rise an equal amount.

#### EXAMPLE 2.14

The coffee cup in Example 2.13 is removed from the drag racer, placed on a turntable, and rotated about its central axis until a rigid-body mode occurs. Find (a) the angular velocity that will cause the coffee to just reach the lip of the cup and (b) the gage pressure at point A for this condition.


**Solution****Part (a)**

The cup contains 7 cm of coffee. The remaining distance of 3 cm up to the lip must equal the distance  $h/2$  in Fig. 2.23. Thus

$$\frac{h}{2} = 0.03 \text{ m} = \frac{\Omega^2 R^2}{4g} = \frac{\Omega^2(0.03 \text{ m})^2}{4(9.81 \text{ m/s}^2)}$$

Solving, we obtain

$$\Omega^2 = 1308 \quad \text{or} \quad \Omega = 36.2 \text{ rad/s} = 345 \text{ r/min} \quad \text{Ans. (a)}$$

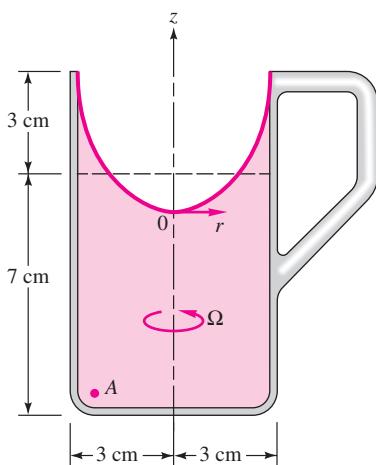**Part (b)**

E2.14

To compute the pressure, it is convenient to put the origin of coordinates  $r$  and  $z$  at the bottom of the free-surface depression, as shown in Fig. E2.14. The gage pressure here is  $p_0 = 0$ , and point  $A$  is at  $(r, z) = (3 \text{ cm}, -4 \text{ cm})$ . Equation (2.46) can then be evaluated:

$$\begin{aligned} p_A &= 0 - (1010 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(-0.04 \text{ m}) \\ &\quad + \frac{1}{2}(1010 \text{ kg/m}^3)(0.03 \text{ m})^2(1308 \text{ rad}^2/\text{s}^2) \\ &= 396 \text{ N/m}^2 + 594 \text{ N/m}^2 = 990 \text{ Pa} \end{aligned} \quad \text{Ans. (b)}$$

This is about 43 percent greater than the still-water pressure  $p_A = 694 \text{ Pa}$ .

Here, as in the linear acceleration case, it should be emphasized that the paraboloid pressure distribution (2.46) sets up in *any* fluid under rigid-body rotation, regardless of the shape or size of the container. The container may even be closed and filled with fluid. It is only necessary that the fluid be continuously interconnected throughout the container. The following example will illustrate a peculiar case in which one can visualize an imaginary free surface extending outside the walls of the container.

**EXAMPLE 2.15**

A U-tube with a radius of 10 in and containing mercury to a height of 30 in is rotated about its center at 180 r/min until a rigid-body mode is achieved. The diameter of the tubing is negligible. Atmospheric pressure is 2116 lbf/ft<sup>2</sup>. Find the pressure at point  $A$  in the rotating condition. See Fig. E2.15.


**Solution**

Convert the angular velocity to radians per second:

$$\Omega = (180 \text{ r/min}) \frac{2\pi \text{ rad/r}}{60 \text{ s/min}} = 18.85 \text{ rad/s}$$

From Table 2.1 we find for mercury that  $\gamma = 846 \text{ lbf/ft}^3$  and hence  $\rho = 846/32.2 = 26.3 \text{ slugs/ft}^3$ . At this high rotation rate, the free surface will slant upward at a fierce angle [about 84°; check this from Eq. (2.47)], but the tubing is so thin that the free surface will remain at approximately the same 30-in height, point  $B$ . Placing our origin of coordinates at this

E2.15

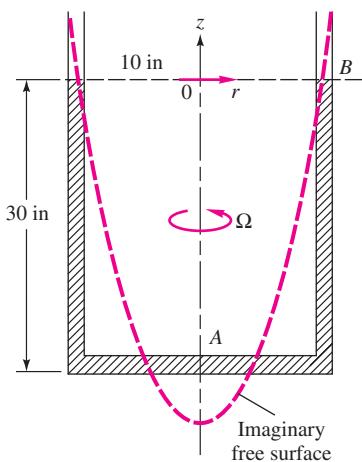

height, we can calculate the constant  $C$  in Eq. (2.45) from the condition  $p_B = 2116 \text{ lbf/ft}^2$  at  $(r, z) = (10 \text{ in}, 0)$ :

$$p_B = 2116 \text{ lbf/ft}^2 = C - 0 + \frac{1}{2}(26.3 \text{ slugs/ft}^3)(\frac{10}{12} \text{ ft})^2(18.85 \text{ rad/s})^2$$

or  $C = 2116 - 3245 = -1129 \text{ lbf/ft}^2$

We then obtain  $p_A$  by evaluating Eq. (2.46) at  $(r, z) = (0, -30 \text{ in})$ :

$$p_A = -1129 - (846 \text{ lbf/ft}^3)(-\frac{30}{12} \text{ ft}) = -1129 + 2115 = 986 \text{ lbf/ft}^2 \quad \text{Ans.}$$

This is less than atmospheric pressure, and we can see why if we follow the free-surface paraboloid down from point  $B$  along the dashed line in the figure. It will cross the horizontal portion of the U-tube (where  $p$  will be atmospheric) and fall *below* point  $A$ . From Fig. 2.23 the actual drop from point  $B$  will be

$$h = \frac{\Omega^2 R^2}{2g} = \frac{(18.85)^2 (\frac{10}{12})^2}{2(32.2)} = 3.83 \text{ ft} = 46 \text{ in}$$

Thus  $p_A$  is about 16 inHg below atmospheric pressure, or about  $\frac{16}{12}(846) = 1128 \text{ lbf/ft}^2$  below  $p_a = 2116 \text{ lbf/ft}^2$ , which checks with the answer above. When the tube is at rest,

$$p_A = 2116 - 846(-\frac{30}{12}) = 4231 \text{ lbf/ft}^2$$

Hence rotation has reduced the pressure at point  $A$  by 77 percent. Further rotation can reduce  $p_A$  to near-zero pressure, and cavitation can occur.

An interesting by-product of this analysis for rigid-body rotation is that the lines everywhere parallel to the pressure gradient form a family of curved surfaces, as sketched in Fig. 2.22. They are everywhere orthogonal to the constant-pressure surfaces, and hence their slope is the negative inverse of the slope computed from Eq. (2.47):

$$\left. \frac{dz}{dr} \right|_{\text{GL}} = -\frac{1}{(dz/dr)_{p=\text{const}}} = -\frac{1}{r\Omega^2/g}$$


where GL stands for gradient line

$$\text{or } \frac{dz}{dr} = -\frac{g}{r\Omega^2} \quad (2.48)$$

Separating the variables and integrating, we find the equation of the pressure-gradient surfaces:

$$r = C_1 \exp\left(-\frac{\Omega^2 z}{g}\right) \quad (2.49)$$

Notice that this result and Eq. (2.47) are independent of the density of the fluid. In the absence of friction and Coriolis effects, Eq. (2.49) defines the lines along which

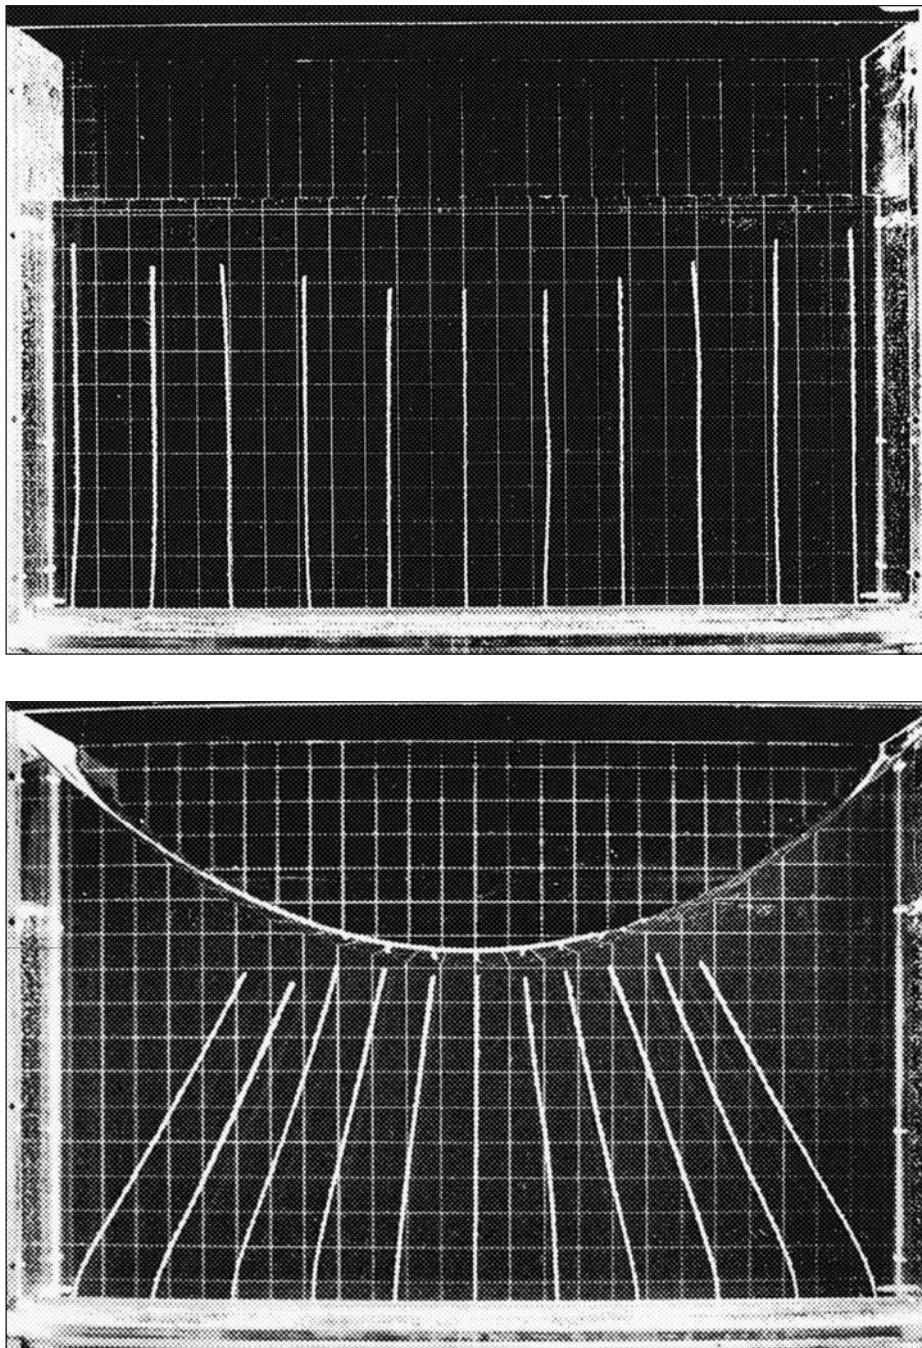

**Fig. 2.24** Experimental demonstration with buoyant streamers of the fluid force field in rigid-body rotation: (top) fluid at rest (streamers hang vertically upward); (bottom) rigid-body rotation (streamers are aligned with the direction of maximum pressure gradient). (*The American Association of Physics Teachers. Reprinted with permission from The Apparent Field of Gravity in a Rotating Fluid System*' by R. Ian Fletcher. *American Journal of Physics* vol. 40, pp. 959-965, July 1972.)

the apparent net gravitational field would act on a particle. Depending on its density, a small particle or bubble would tend to rise or fall in the fluid along these exponential lines, as demonstrated experimentally in Ref. 5. Also, buoyant streamers would align themselves with these exponential lines, thus avoiding any stress other than pure tension. Figure 2.24 shows the configuration of such streamers before and during rotation.


## 2.10 Pressure Measurement

Pressure is a derived property. It is the force per unit area as related to fluid molecular bombardment of a surface. Thus most pressure instruments only *infer* the pressure by calibration with a primary device such as a deadweight piston tester. There are many such instruments, for both a static fluid and a moving stream. The instrumentation texts in Refs. 7 to 10, 12, 13, and 16–17 list over 20 designs for pressure measurement instruments. These instruments may be grouped into four categories:

1. *Gravity-based*: barometer, manometer, deadweight piston.
2. *Elastic deformation*: bourdon tube (metal and quartz), diaphragm, bellows, strain-gage, optical beam displacement.
3. *Gas behavior*: gas compression (McLeod gage), thermal conductance (Pirani gage), molecular impact (Knudsen gage), ionization, thermal conductivity, air piston.
4. *Electric output*: resistance (Bridgman wire gage), diffused strain gage, capacitative, piezoelectric, potentiometric, magnetic inductance, magnetic reluctance, linear variable differential transformer (LVDT), resonant frequency.
5. *Luminescent coatings* for surface pressures [15].

The gas-behavior gages are mostly special-purpose instruments used for certain scientific experiments. The deadweight tester is the instrument used most often for calibrations; for example, it is used by the U.S. National Institute for Standards and Technology (NIST). The barometer is described in Fig. 2.6.


The manometer, analyzed in Sec. 2.4, is a simple and inexpensive hydrostatic-principle device with no moving parts except the liquid column itself. Manometer measurements must not disturb the flow. The best way to do this is to take the measurement through a *static hole* in the wall of the flow, as illustrated in Fig. 2.25a. The hole should be normal to the wall, and burrs should be avoided. If the hole is small enough (typically 1-mm diameter), there will be no flow into the measuring tube once the pressure has adjusted to a steady value. Thus the flow is almost undisturbed. An oscillating flow pressure, however, can cause a large error due to possible dynamic response of the tubing. Other devices of smaller dimensions are used for dynamic-pressure measurements. The manometer in Fig. 2.25a measures the gage pressure  $p_1$ . The instrument in Fig. 2.25b is a digital *differential* manometer, which can measure the difference between two different points in the flow, with stated accuracy of 0.1 percent of full scale. The world of instrumentation is moving quickly toward digital readings.

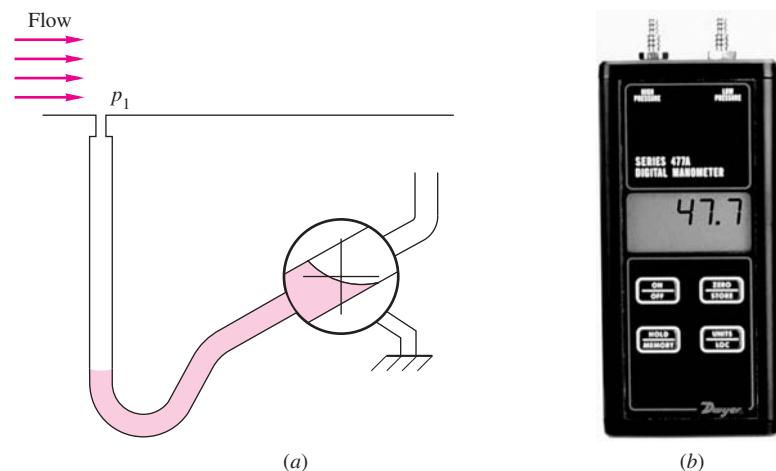


**Fig. 2.25** Two types of accurate manometers for precise measurements: (a) tilted tube with eyepiece; (b) a capacitive-type digital manometer of rated accuracy  $\pm 0.1$  percent. (Courtesy of Dwyer Instruments, Inc.)

In category 2, elastic-deformation instruments, a popular, inexpensive, and reliable device is the *bourdon tube*, sketched in Fig. 2.26. When pressurized internally, a curved tube with flattened cross section will deflect outward. The deflection can be measured by a linkage attached to a calibrated dial pointer, as shown. Or the deflection can be used to drive electric-output sensors, such as a variable transformer. Similarly, a membrane or *diaphragm* will deflect under pressure and can either be sensed directly or used to drive another sensor.

An interesting variation of Fig. 2.26 is the *fused-quartz, force-balanced bourdon tube*, shown in Fig. 2.27, whose spiral-tube deflection is sensed optically and returned to a zero reference state by a magnetic element whose output is proportional to the

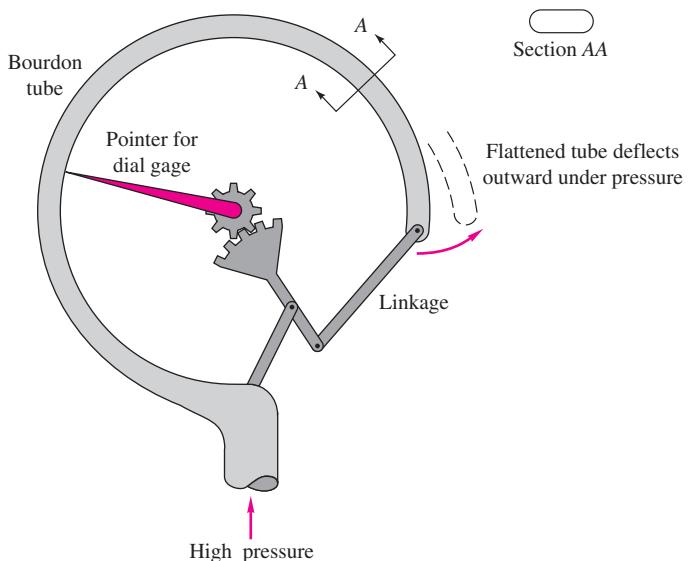

**Fig. 2.26** Schematic of a bourdon-tube device for mechanical measurement of high pressures.

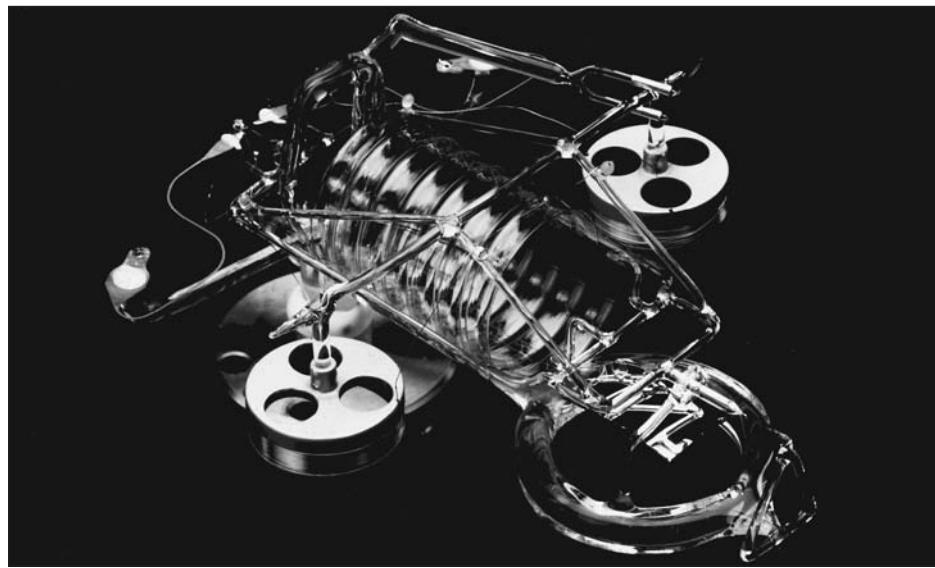


**Fig. 2.27** The fused-quartz, force-balanced bourdon tube is the most accurate pressure sensor used in commercial applications today. (Courtesy of Ruska Instrument Corporation, Houston, TX.)

fluid pressure. The fused-quartz, force-balanced bourdon tube is reported to be one of the most accurate pressure sensors ever devised, with uncertainty on the order of  $\pm 0.003$  percent.


The quartz gages, both the bourdon type and the resonant type, are expensive but extremely accurate, stable, and reliable [14]. They are often used for deep-ocean pressure measurements, which detect long waves and tsunami activity over extensive time periods.

The last category, *electric-output sensors*, is extremely important in engineering because the data can be stored on computers and freely manipulated, plotted, and analyzed. Three examples are shown in Fig. 2.28, the first being the *capacitive* sensor in Fig. 2.28a. The differential pressure deflects the silicon diaphragm and changes the capacitance of the liquid in the cavity. Note that the cavity has spherical end caps to prevent overpressure damage. In the second type, Fig. 2.28b, strain gages and other sensors are chemically diffused or etched onto a chip, which is stressed by the applied pressure. Finally, in Fig. 2.28c, a micromachined silicon sensor is arranged to deform under pressure such that its natural vibration frequency is proportional to the pressure. An oscillator excites the element's resonant frequency and converts it into appropriate pressure units.

Another kind of dynamic electric-output sensor is the *piezoelectric transducer*, shown in Fig. 2.29. The sensing elements are thin layers of quartz, which generate an electric charge when subjected to stress. The design in Fig. 2.29 is flush-mounted on a solid surface and can sense rapidly varying pressures, such as blast waves. Other designs are of the cavity type. This type of sensor primarily detects transient pressures, not steady stress, but if highly insulated can also be used for short-term static events. Note also that it measures *gage* pressure—that is, it detects only a change from ambient conditions.

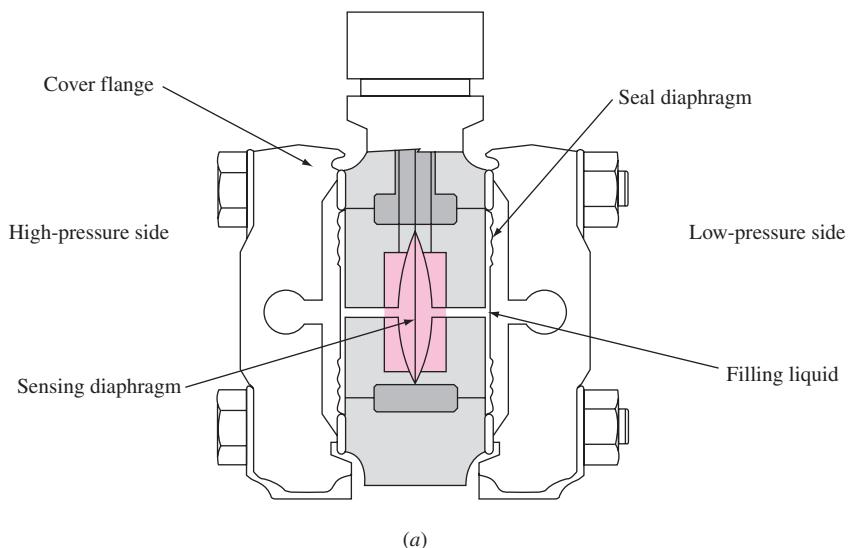


(a)

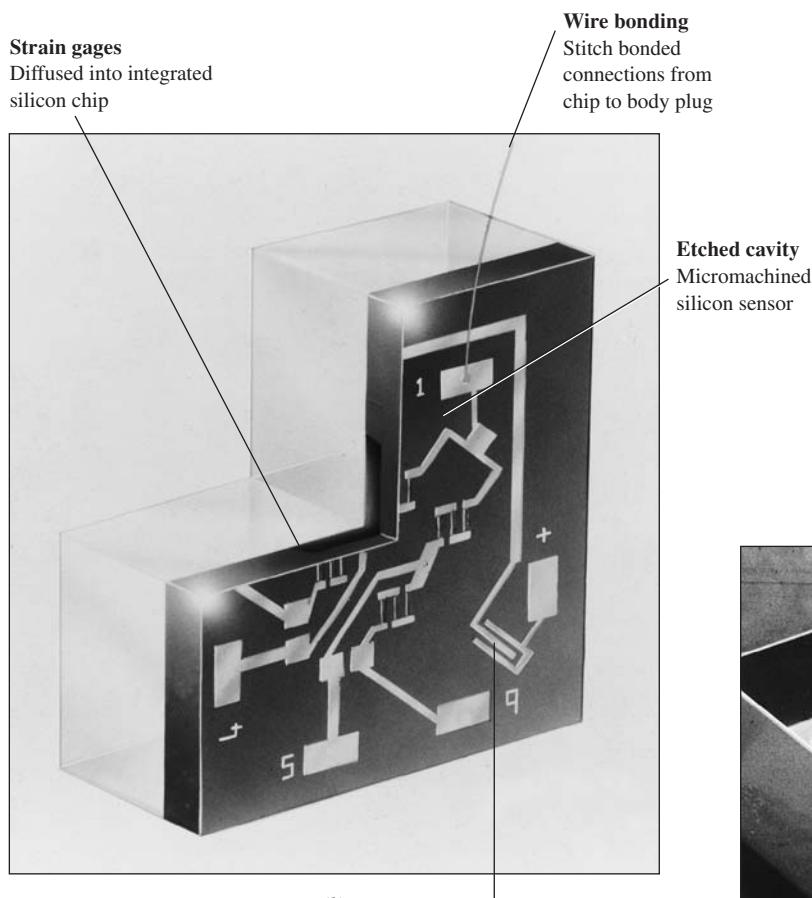


(b)

**Temperature sensor**  
On-chip diode for  
optimum temperature  
performance

**Fig. 2.28** Pressure sensors with electric output: (a) a silicon diaphragm whose deflection changes the cavity capacitance (*Courtesy of Johnson-Yokogawa Inc.*); (b) a silicon strain gage that is stressed by applied pressure; (c) a micromachined silicon element that resonates at a frequency proportional to applied pressure. [(b) and (c) are courtesy of Druck, Inc., Fairfield, CT.]

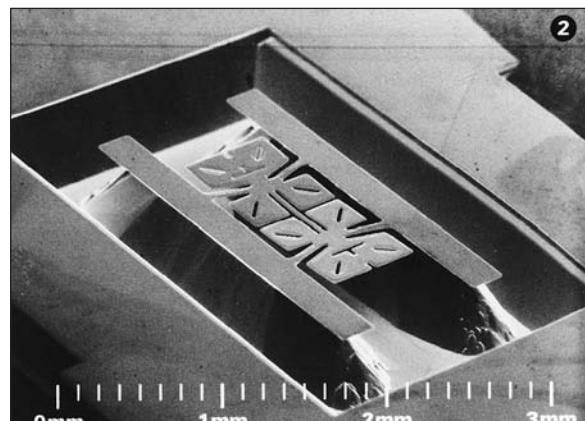

(c)

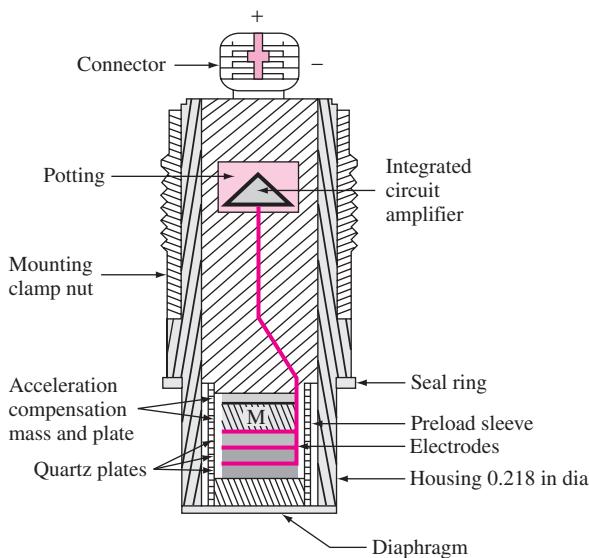

**Fig. 2.29** A piezoelectric transducer measures rapidly changing pressures. (Courtesy of PCB Piezotronics, Inc. Depew, New York.)

## Summary

This chapter has been devoted entirely to the computation of pressure distributions and the resulting forces and moments in a static fluid or a fluid with a known velocity field. All hydrostatic (Secs. 2.3 to 2.8) and rigid-body (Sec. 2.9) problems are solved in this manner and are classic cases that every student should understand. In arbitrary viscous flows, both pressure and velocity are unknowns and are solved together as a system of equations in the chapters that follow.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are indicated with an asterisk, as in Prob. 2.9. Problems labeled with an EES icon (for example, Prob. 2.62) will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon may require the use of a computer. The standard end-of-chapter problems 2.1 to 2.159 (categorized in the problem distribution) are followed by word problems W2.1 to W2.9, fundamentals of engineering exam problems FE2.1 to FE2.10, comprehensive problems C2.1 to C2.9, and design projects D2.1 to D2.3.

### Problem Distribution

Section	Topic	Problems
2.1, 2.2	Stresses; pressure gradient; gage pressure	2.1–2.6
2.3	Hydrostatic pressure; barometers	2.7–2.23
2.3	The atmosphere	2.24–2.29


2.4	Manometers; multiple fluids	2.30–2.47
2.5	Forces on plane surfaces	2.48–2.80
2.6	Forces on curved surfaces	2.81–2.100
2.7	Forces in layered fluids	2.101–2.102
2.8	Buoyancy; Archimedes' principles	2.103–2.126
2.8	Stability of floating bodies	2.127–2.136
2.9	Uniform acceleration	2.137–2.151
2.9	Rigid-body rotation	2.152–2.159
2.10	Pressure measurements	None

### Stresses; pressure gradient; gage pressure

**P2.1** For the two-dimensional stress field shown in Fig. P2.1 it is found that

$$\sigma_{xx} = 3000 \text{ lbf}/\text{ft}^2 \quad \sigma_{yy} = 2000 \text{ lbf}/\text{ft}^2 \quad \sigma_{xy} = 500 \text{ lbf}/\text{ft}^2$$

Find the shear and normal stresses (in  $\text{lbf}/\text{ft}^2$ ) acting on plane AA cutting through the element at a  $30^\circ$  angle as shown.

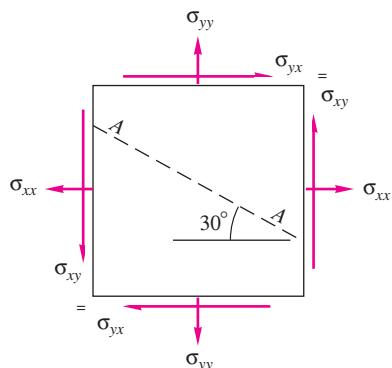

P2.1


- P2.2** For the two-dimensional stress field shown in Fig. P2.1 suppose that

$$\sigma_{xx} = 2000 \text{ lbf/ft}^2 \quad \sigma_{yy} = 3000 \text{ lbf/ft}^2 \quad \sigma_n(AA) = 2500 \text{ lbf/ft}^2$$

Compute (a) the shear stress  $\sigma_{xy}$  and (b) the shear stress on plane AA.

- P2.3** A vertical, clean, glass piezometer tube has an inside diameter of 1 mm. When pressure is applied, water at 20°C rises into the tube to a height of 25 cm. After correcting for surface tension, estimate the applied pressure in Pa.

- P2.4** Pressure gages, such as the Bourdon gage in Fig. P2.4, are calibrated with a deadweight piston. If the Bourdon gage is designed to rotate the pointer 10 degrees for every 2 psig of internal pressure, how many degrees does the pointer rotate if the piston and weight together total 44 newtons?

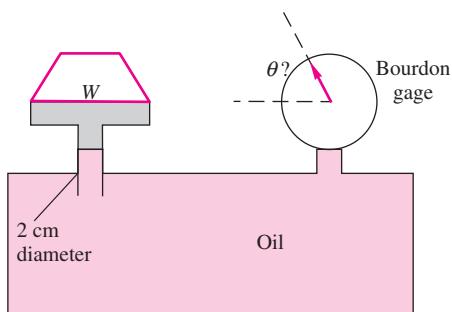

P2.4

- P2.5** Denver, Colorado, has an average altitude of 5300 ft. On a standard day (Table A.6), pressure gage A in a laboratory experiment reads 83 kPa and gage B reads 105 kPa. Express these readings in gage pressure or vacuum pressure (Pa), whichever is appropriate.

- P2.6** Any pressure reading can be expressed as a length or *head*,  $h = p/\rho g$ . What is standard sea-level pressure expressed in (a) ft of glycerin, (b) inHg, (c) m of water, and (d) mm of ethanol? Assume all fluids are at 20°C.

### Hydrostatic pressure; barometers

- P2.7** La Paz, Bolivia is at an altitude of approximately 12,000 ft. Assume a standard atmosphere. How high would the liquid rise in a *methanol* barometer, assumed at 20°C?


*Hint:* Don't forget the vapor pressure.

- P2.8** A diamond mine is two miles below sea level. (a) Estimate the air pressure at this depth. (b) If a barometer, accurate to 1 mm of mercury, is carried into this mine, how accurately can it estimate the depth of the mine? List your assumptions carefully.

- P2.9** A storage tank, 26 ft in diameter and 36 ft high, is fled with SAE 30W oil at 20°C. (a) What is the gage pressure, in lbf/in<sup>2</sup>, at the bottom of the tank? (b) How does your result in (a) change if the tank diameter is reduced to 15 ft? (c) Repeat (a) if leakage has caused a layer of 5 ft of water to rest at the bottom of the (full) tank.


- P2.10** A closed tank contains 1.5 m of SAE 30 oil, 1 m of water, 20 cm of mercury, and an air space on top, all at 20°C. The absolute pressure at the bottom of the tank is 60 kPa. What is the pressure in the air space?

- P2.11** In Fig. P2.11, pressure gage A reads 1.5 kPa (gage). The fluids are at 20°C. Determine the elevations  $z$ , in meters, of the liquid levels in the open piezometer tubes B and C.

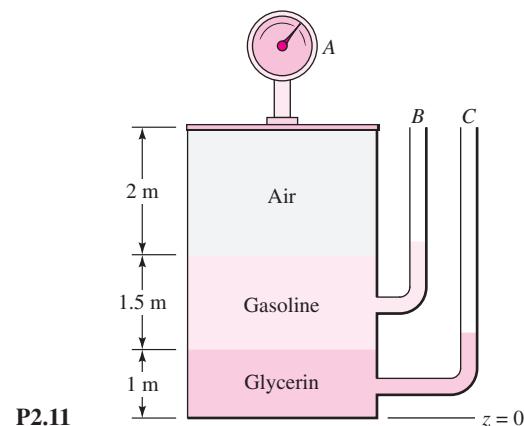


P2.11

- P2.12** In Fig. P2.12 the tank contains water and immiscible oil at 20°C. What is  $h$  in cm if the density of the oil is 898 kg/m<sup>3</sup>?

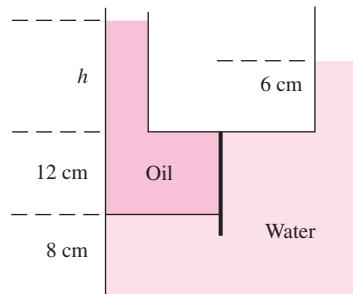


P2.12

- P2.13** In Fig. P2.13 the 20°C water and gasoline surfaces are open to the atmosphere and at the same elevation. What is the height  $h$  of the third liquid in the right leg?

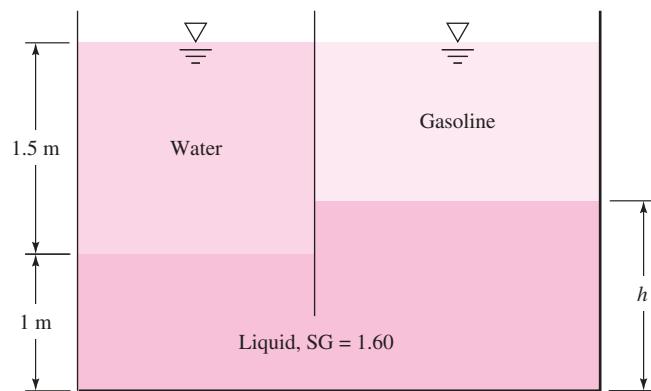


P2.13

- P2.14** For the three-liquid system shown, compute  $h_1$  and  $h_2$ . Neglect the air density.

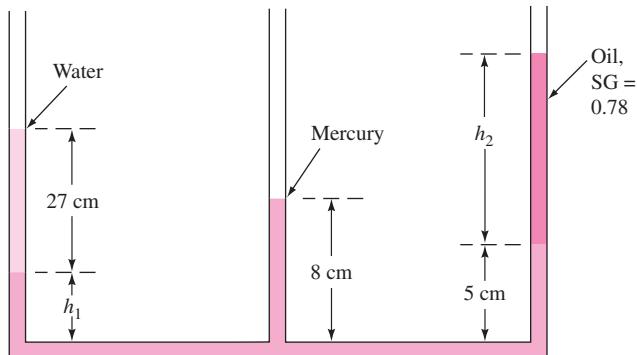


P2.14

- P2.15** The air–oil–water system in Fig. P2.15 is at 20°C. Knowing that gage A reads 15 lbf/in<sup>2</sup> absolute and gage B reads 1.25 lbf/in<sup>2</sup> less than gage C, compute (a) the specific weight of the oil in lbf/ft<sup>3</sup> and (b) the actual reading of gage C in lbf/in<sup>2</sup> absolute.

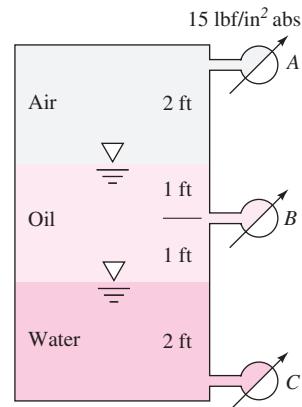


P2.15

- P2.16** If the absolute pressure at the interface between water and mercury in Fig. P2.16 is 93 kPa, what, in lbf/ft<sup>2</sup>, is (a) the pressure at the surface and (b) the pressure at the bottom of the container?

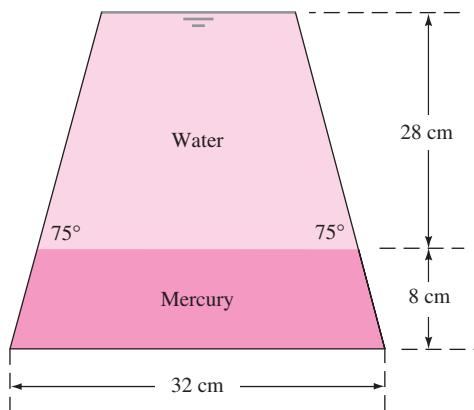


P2.16

- P2.17** The system in Fig. P2.17 is at 20°C. If the pressure at point A is 1900 lbf/ft<sup>2</sup>, determine the pressures at points B, C, and D in lbf/ft<sup>2</sup>.

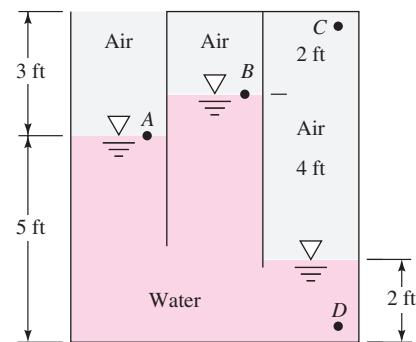


P2.17

- P2.18** The system in Fig. P2.18 is at 20°C. If atmospheric pressure is 101.33 kPa and the pressure at the bottom of the tank is 242 kPa, what is the specific gravity of fluid *X*?


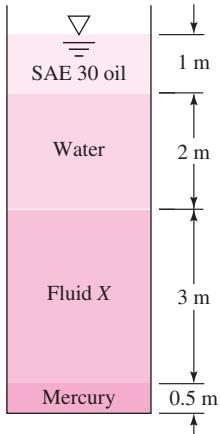


- P2.19** The U-tube in Fig. P2.19 has a 1-cm ID and contains mercury as shown. If 20 cm<sup>3</sup> of water is poured into the right-hand leg, what will the free-surface height in each leg be after the sloshing has died down?

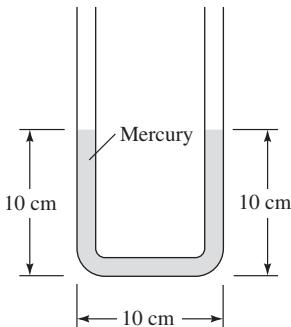


- P2.20** The hydraulic jack in Fig. P2.20 is filled with oil at 56 lbf/ft<sup>3</sup>. Neglecting the weight of the two pistons, what force *F* on the handle is required to support the 2000-lbf weight for this design?


- P2.21** At 20°C gage *A* reads 350 kPa absolute. What is the height *h* of the water in cm? What should gage *B* read in kPa absolute? See Fig. P2.21.

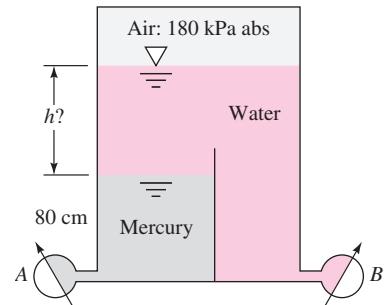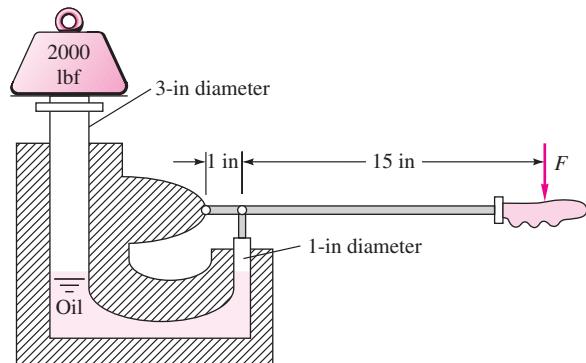

- P2.22** The fuel gage for a gasoline tank in a car reads proportional to the bottom gage pressure as in Fig. P2.22. If the tank is 30 cm deep and accidentally contains 2 cm of water plus gasoline, how many centimeters of air remain at the top when the gage erroneously reads “full”?

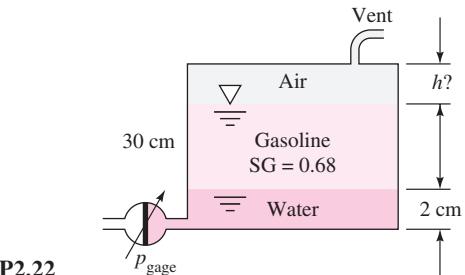

- P2.23** In Fig. P2.23 both fluids are at 20°C. If surface tension effects are negligible, what is the density of the oil, in kg/m<sup>3</sup>?

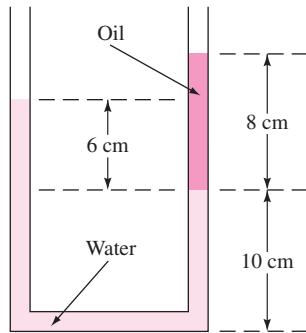

P2.23

### The atmosphere

**P2.24** In Prob. 1.2 we made a crude integration of the density distribution  $\rho(z)$  in Table A.6 and estimated the mass of the earth's atmosphere to be  $m \approx 6 \text{ E}18 \text{ kg}$ . Can this result be used to estimate sea-level pressure on the earth? Conversely, can the actual sea-level pressure of 101.35 kPa be used to make a more accurate estimate of the atmospheric mass?

**\*P2.25** As measured by NASA's Viking landers, the atmosphere of Mars, where  $g \approx 3.71 \text{ m/s}^2$ , is almost entirely carbon dioxide, and the surface pressure averages 700 Pa. The temperature is cold and drops off exponentially:  $T \approx T_0 e^{-Cz}$ , where  $C = 1.3E-5 \text{ m}^{-1}$  and  $T_0 = 250 \text{ K}$ . For example, at 20,000 m altitude,  $T \approx 193 \text{ K}$ . (a) Find an analytic formula for the variation of pressure with altitude. (b) Find the altitude where pressure on Mars has dropped to 1 pascal.


**P2.26** For gases that undergo large changes in height, the linear approximation, Eq. (2.14), is inaccurate. Expand the troposphere power-law, Eq. (2.20), into a power series, and show that the linear approximation  $p \approx p_a - \rho_a g z$  is adequate when

$$\delta z \ll \frac{2T_0}{(n-1)B} \quad \text{where } n = \frac{g}{RB}$$


**P2.27** Conduct an experiment to illustrate atmospheric pressure. *Note:* Do this over a sink or you may get wet! Find a drinking glass with a very smooth, uniform rim at the top. Fill the glass nearly full with water. Place a smooth, light, flat plate on top of the glass such that the entire rim of the glass is covered. A glossy postcard works best. A small index card or one flap of a greeting card will also work. See Fig. P2.27a.

(a) Hold the card against the rim of the glass and turn the glass upside down. Slowly release pressure on the card. Does the water fall out of the glass? Record your experimental observations. (b) Find an expression for

the pressure at points 1 and 2 in Fig. P2.27b. Note that the glass is now inverted, so the original top rim of the glass is at the bottom of the picture, and the original bottom of the glass is at the top of the picture. The weight of the card can be neglected. (c) Estimate the theoretical maximum glass height at which this experiment could still work, such that the water would not fall out of the glass.

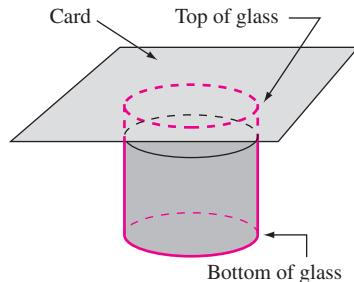

P2.27a

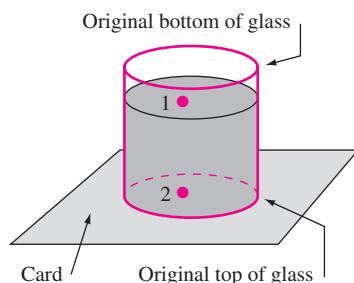

P2.27b


**P2.28** A correlation of numerical calculations indicates that, all other things being equal, the distance traveled by a well-hit baseball varies inversely as the cube root of the air density. If a home-run ball hit in New York City travels 400 ft, estimate the distance it would travel in (a) Denver, Colorado, and (b) La Paz, Bolivia.

**P2.29** An airplane flies at a Mach number of 0.82 at a standard altitude of 24,000 ft. (a) What is the plane's velocity, in mi/h? (b) What is the standard density at that altitude?


### Manometers; multiple fluids

**P2.30** For the traditional equal-level manometer measurement in Fig. E2.3, water at 20°C flows through the plug device from *a* to *b*. The manometer fluid is mercury. If  $L = 12 \text{ cm}$  and  $h = 24 \text{ cm}$ , (a) what is the pressure drop through the device? (b) If the water flows through the pipe at a velocity  $V = 18 \text{ ft/s}$ , what is the *dimensionless loss coefficient* of the device, defined by  $K = \Delta p / (\rho V^2)$ ? We will study loss coefficients in Chap. 6.


- P2.31** In Fig. P2.31 all fluids are at 20°C. Determine the pressure difference ( $\text{Pa}$ ) between points A and B.

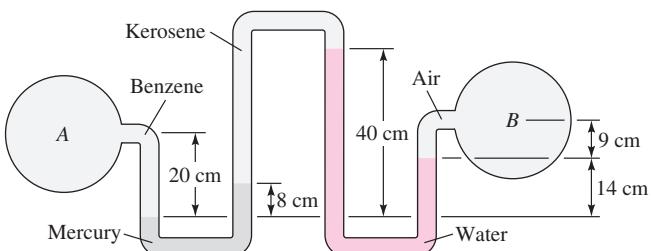**P2.31**


- P2.32** For the inverted manometer of Fig. P2.32, all fluids are at 20°C. If  $p_B - p_A = 97 \text{ kPa}$ , what must the height  $H$  be in cm?

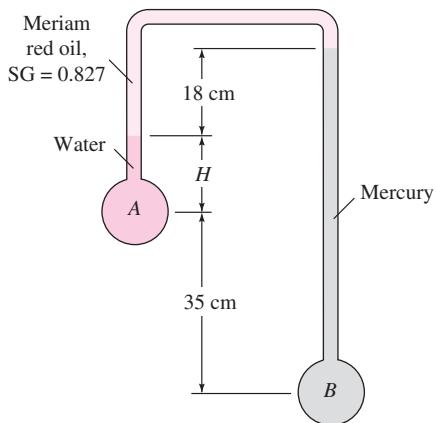**P2.32**


- P2.33** In Fig. P2.33 the pressure at point A is 25 lbf/in<sup>2</sup>. All fluids are at 20°C. What is the air pressure in the closed chamber B, in Pa?

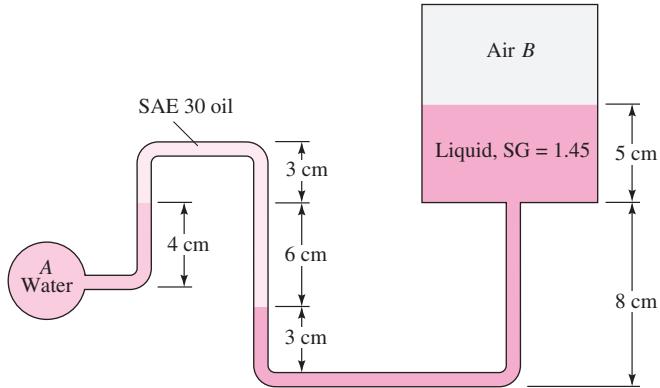**P2.33**

- \*P2.34** Sometimes manometer dimensions have a significant effect. In Fig. P2.34 containers (a) and (b) are cylindrical and conditions are such that  $p_a = p_b$ . Derive a formula for the pressure difference  $p_a - p_b$  when the oil–water interface on the right rises a distance  $\Delta h < h$ , for (a)  $d \ll D$  and (b)  $d = 0.15D$ . What is the percentage change in the value of  $\Delta p$ ?

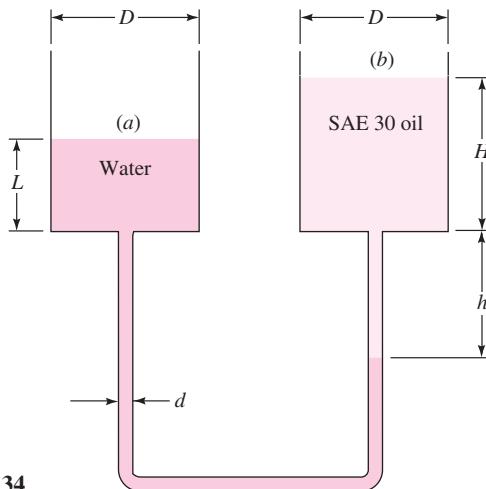
**P2.34**

- P2.35** Water flows upward in a pipe slanted at 30°, as in Fig. P2.35. The mercury manometer reads  $h = 12 \text{ cm}$ . Both fluids are at 20°C. What is the pressure difference  $p_1 - p_2$  in the pipe?

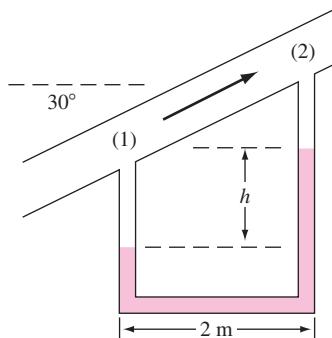
**P2.35**

- P2.36** In Fig. P2.36 both the tank and the tube are open to the atmosphere. If  $L = 2.13 \text{ m}$ , what is the angle of tilt  $\theta$  of the tube?

- P2.37** The inclined manometer in Fig. P2.37 contains Meriam red manometer oil, SG = 0.827. Assume that the reservoir is very large. If the inclined arm is fitted with graduations 1 cm apart, what should the angle  $\theta$  be if each graduation corresponds to 1 lbf/ft<sup>2</sup> gage pressure for  $p_A$ ?

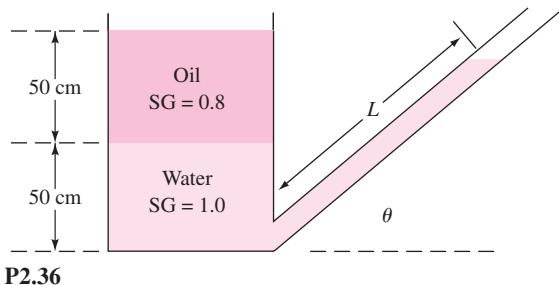


P2.36

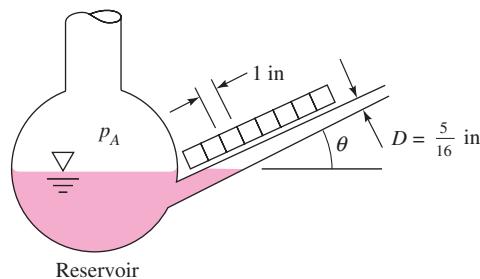


P2.37

- P2.38** If the pressure in container A in Fig. P2.38 is 150 kPa, compute the pressure in container B.

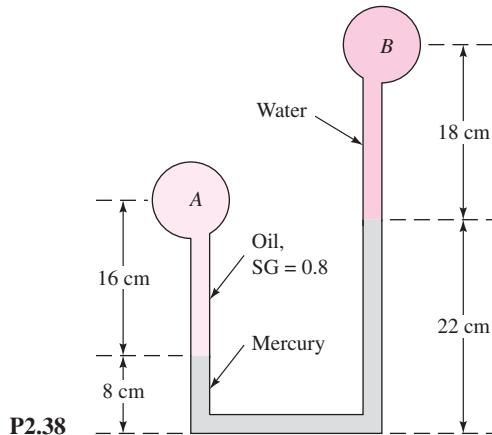


- P2.39** In Fig. P2.39 the right leg of the manometer is open to the atmosphere. Find the gage pressure, in Pa, in the air gap in the tank.

- P2.40** In Fig. P2.40 the pressures at A and B are the same, 100 kPa. If water is introduced at A to increase  $p_A$  to 130 kPa, find and sketch the new positions of the mercury menisci. The connecting tube is a uniform 1-cm diameter. Assume no change in the liquid densities.

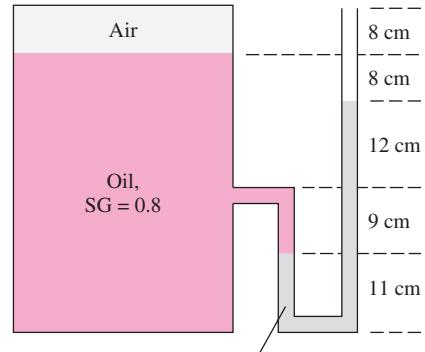


P2.39

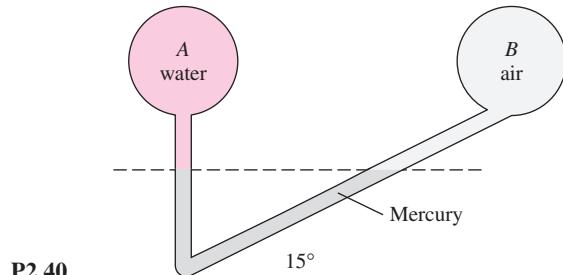


P2.40

- P2.41** The system in Fig. P2.41 is at 20°C. Compute the pressure at point A in lbf/in<sup>2</sup> absolute.

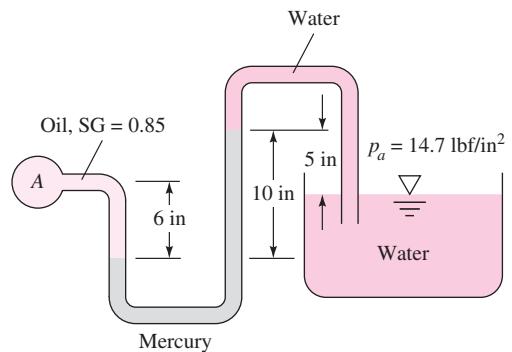

P2.41


- P2.42** Very small pressure differences  $p_A - p_B$  can be measured accurately by the two-fluid differential manometer in Fig. P2.42. Density  $\rho_2$  is only slightly larger than that of the upper fluid  $\rho_1$ . Derive an expression for the proportionality between  $h$  and  $p_A - p_B$  if the reservoirs are very large.

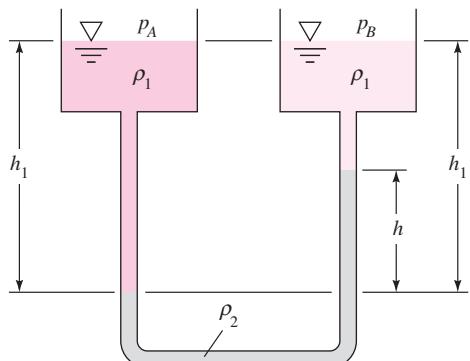

P2.42


- P2.43** The traditional method of measuring blood pressure uses a *sphygmomanometer*, first recording the highest (*systolic*) and then the lowest (*diastolic*) pressure from which flowing “Korotkoff” sounds can be heard. Patients with dangerous hypertension can exhibit systolic pressures as high as 5 lbf/in<sup>2</sup>. Normal levels, however, are 2.7 and 1.7 lbf/in<sup>2</sup>, respectively, for systolic and diastolic pressures. The manometer uses mercury and air as fluids.
- How high in cm should the manometer tube be?
  - Express normal systolic and diastolic blood pressure in millimeters of mercury.

- P2.44** Water flows downward in a pipe at 45°, as shown in Fig. P2.44. The pressure drop  $p_1 - p_2$  is partly due to gravity and partly due to friction. The mercury manometer reads a 6-in height difference. What is the total pressure drop  $p_1 - p_2$  in lbf/in<sup>2</sup>? What is the pressure drop due to friction only between 1 and 2 in lbf/in<sup>2</sup>? Does the manometer reading correspond only to friction drop? Why?

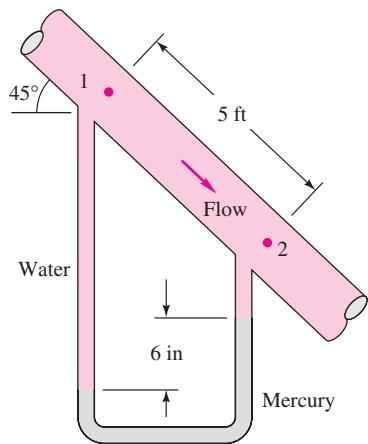


P2.44

- P2.45** In Fig. P2.45, determine the gage pressure at point A in Pa. Is it higher or lower than atmospheric?

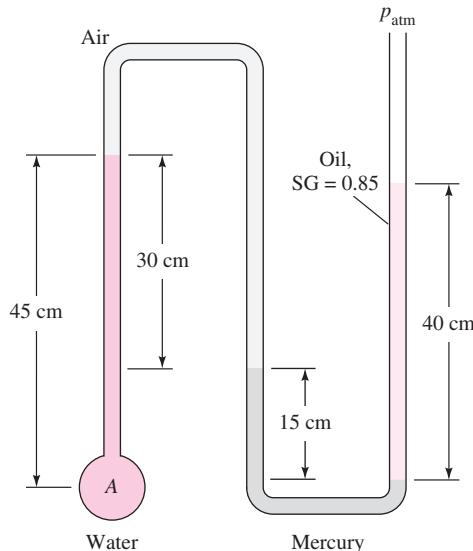


P2.45

- P2.46** In Fig. P2.46 both ends of the manometer are open to the atmosphere. Estimate the specific gravity of fluid X.

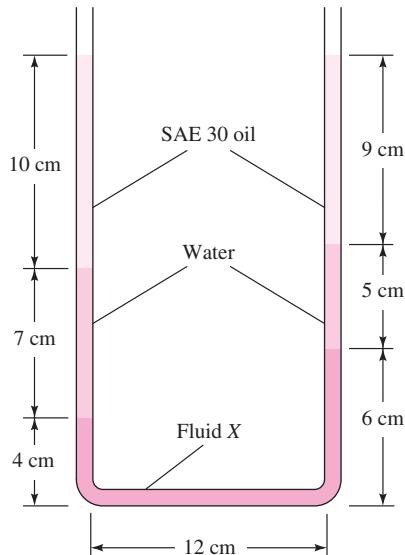


P2.46

- P2.47** The cylindrical tank in Fig. P2.47 is being filled with water at 20°C by a pump developing an exit pressure of 175 kPa. At the instant shown, the air pressure is 110 kPa and  $H = 35$  cm. The pump stops when it can no longer raise the water pressure. For isothermal air compression, estimate  $H$  at that time.

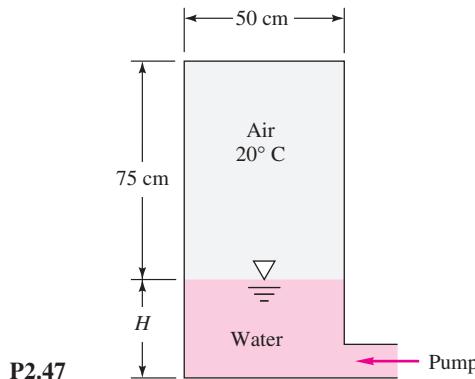


- P2.48** The system in Fig. P2.48 is open to 1 atm on the right side. (a) If  $L = 120$  cm, what is the air pressure in container A? (b) Conversely, if  $p_A = 135$  kPa, what is the length  $L$ ?

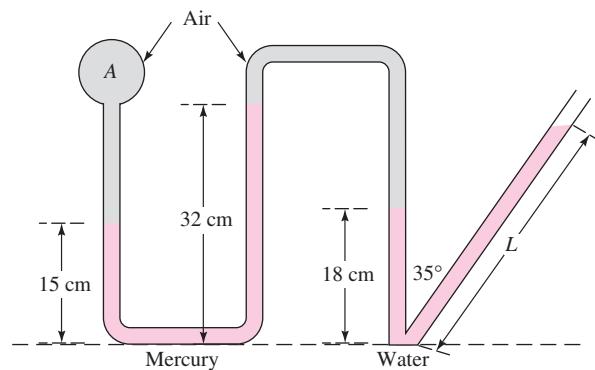


### Forces on plane surfaces


- P2.49** Conduct the following experiment to illustrate air pressure. Find a thin wooden ruler (approximately 1 ft in length) or a thin wooden paint stirrer. Place it on the edge of a desk or table with a little less than half of it hanging over the edge lengthwise. Get two full-size sheets of newspaper; open them up and place them on top of the ruler, covering only the portion of the ruler resting on the desk as illustrated in Fig. P2.49. (a) Estimate the total force on top of the newspaper due to air pressure in the room. (b) *Careful!* To avoid potential injury, make sure nobody is standing directly in front of the desk. Perform a karate chop on the portion of the ruler sticking out over the edge of the desk. Record your results. (c) Explain your results.

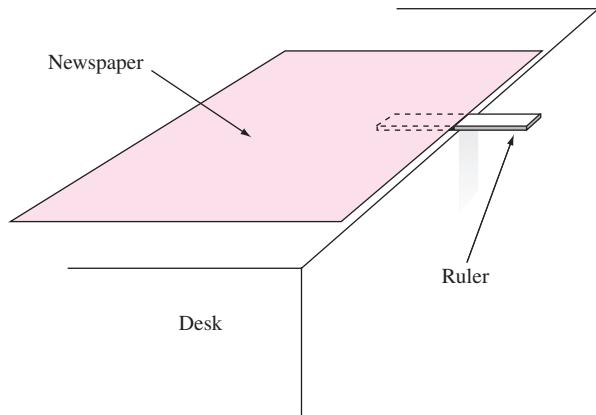


- P2.50** A small submarine, with a hatch door 30 in in diameter, is submerged in seawater. (a) If the water hydrostatic force on the hatch is 69,000 lbf, how deep is the sub? (b) If the sub is 350 ft deep, what is the hydrostatic force on the hatch?
- P2.51** Gate AB in Fig. P2.51 is 1.2 m long and 0.8 m into the paper. Neglecting atmospheric pressure, compute the force  $F$  on the gate and its center-of-pressure position  $X$ .

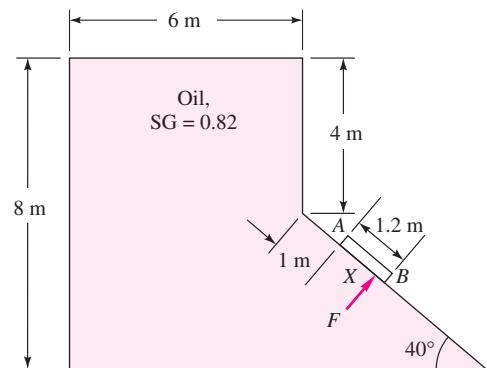


- P2.52** Example 2.5 calculated the force on plate AB and its line of action, using the moment-of-inertia approach. Some teachers say it is more instructive to calculate these by *direct integration* of the pressure forces. Using Figs. P2.52 and E2.5a, (a) find an expression for the pressure variation  $p(\xi)$  along the plate; (b) integrate this expression to find the total force  $F$ ; (c) integrate the moments about point A to find the position of the center of pressure.

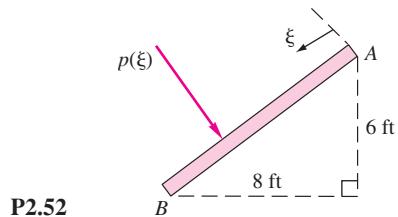

- P2.53** Panel  $ABC$  in the slanted side of a water tank is an isosceles triangle with the vertex at  $A$  and the base  $BC = 2$  m, as in Fig. P2.53. Find the water force on the panel and its line of action.

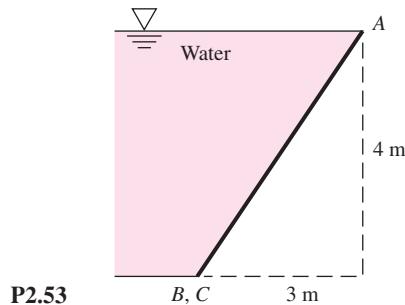



- P2.54** In Fig. P2.54, the hydrostatic force  $F$  is the same on the bottom of all three containers, even though the weights of liquid above are quite different. The three bottom shapes and the fluids are the same. This is called the *hydrostatic paradox*. Explain why it is true and sketch a free body of each of the liquid columns.

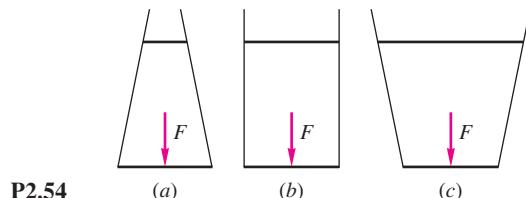


- P2.55** Gate  $AB$  in Fig. P2.55 is 5 ft wide into the paper, hinged at  $A$ , and restrained by a stop at  $B$ . The water is at  $20^\circ\text{C}$ . Compute (a) the force on stop  $B$  and (b) the reactions at  $A$  if the water depth  $h = 9.5$  ft.

- P2.56** In Fig. P2.55, gate  $AB$  is 5 ft wide into the paper, and stop  $B$  will break if the water force on it equals 9200 lbf. For what water depth  $h$  is this condition reached?


- P2.57** The tank in Fig. P2.57 is 2 m wide into the paper. Neglecting atmospheric pressure, find the resultant hydrostatic force on panel  $BC$  (a) from a single formula and (b) by computing horizontal and vertical forces separately, in the spirit of Section 2.6.

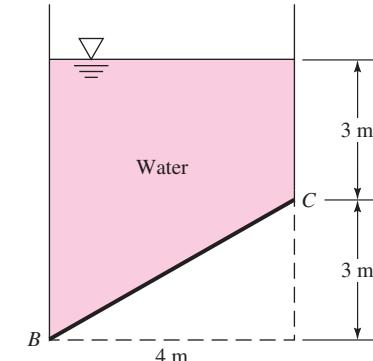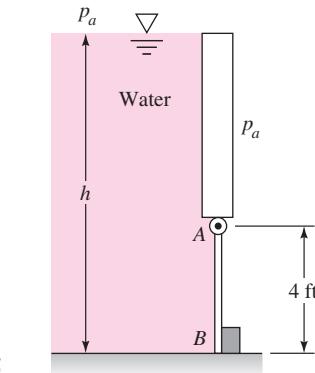


- P2.58** In Fig. P2.58, the cover gate  $AB$  closes a circular opening 80 cm in diameter. The gate is held closed by a 200-kg mass as shown. Assume standard gravity at  $20^\circ\text{C}$ . At what water level  $h$  will the gate be dislodged? Neglect the weight of the gate.

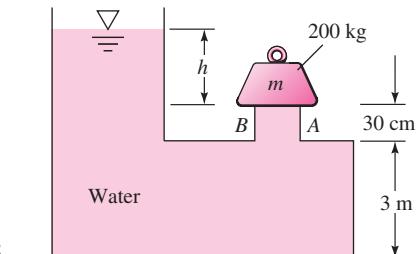


- \*P2.59** Gate  $AB$  has length  $L$  and width  $b$  into the paper, is hinged at  $B$ , and has negligible weight. The liquid level  $h$  remains at the top of the gate for any angle  $\theta$ . Find an analytic expression for the force  $P$ , perpendicular to  $AB$ , required to keep the gate in equilibrium in Fig. P2.59.

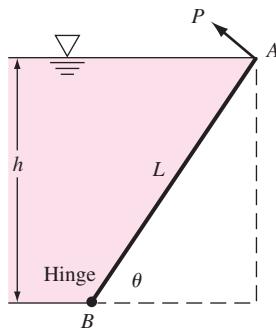


- P2.60** Determine the water hydrostatic force on one side of the vertical equilateral triangle panel BCD in Fig. P2.60. Neglect atmospheric pressure.

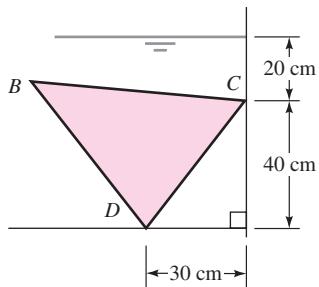


- \***P2.61** Gate AB in Fig. P2.61 is a homogeneous mass of 180 kg, 1.2 m wide into the paper, hinged at A, and resting on a smooth bottom at B. All fluids are at 20°C. For what water depth  $h$  will the force at point B be zero?

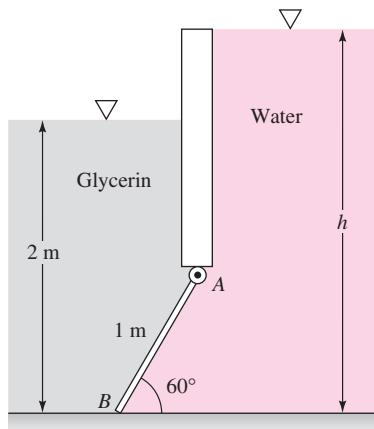


- P2.62** Gate AB in Fig. P2.62 is 15 ft long and 8 ft wide into the paper and is hinged at B with a stop at A. The water is at 20°C. The gate is 1-in-thick steel, SG = 7.85. Compute the water level  $h$  for which the gate will start to fall. EES

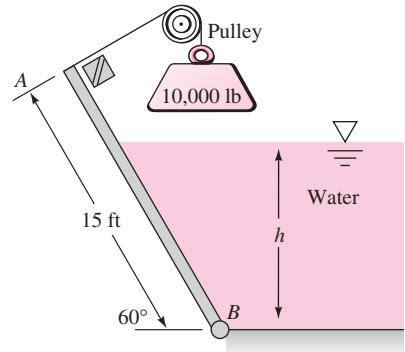


- P2.63** The tank in Fig. P2.63 has a 4-cm-diameter plug at the bottom on the right. All fluids are at 20°C. The plug will pop out if the hydrostatic force on it is 25 N. For this condition, what will be the reading  $h$  on the mercury manometer on the left side?

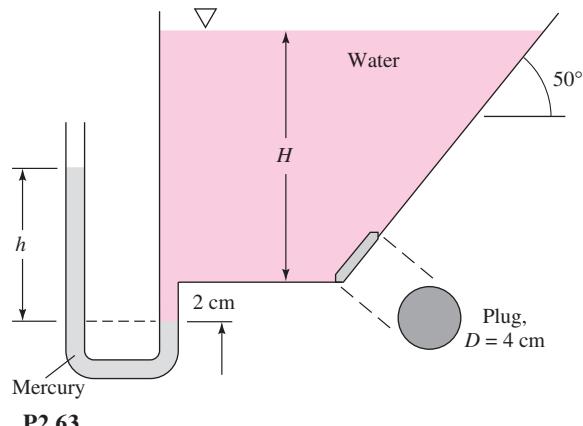


- \***P2.64** Gate ABC in Fig. P2.64 has a fixed hinge line at B and is 2 m wide into the paper. The gate will open at A to release water if the water depth is high enough. Compute the depth  $h$  for which the gate will begin to open.

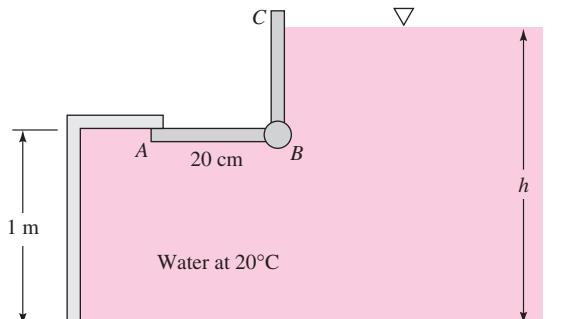

- \*P2.65 Gate  $AB$  in Fig. P2.65 is semicircular, hinged at  $B$ , and held by a horizontal force  $P$  at  $A$ . What force  $P$  is required for equilibrium?

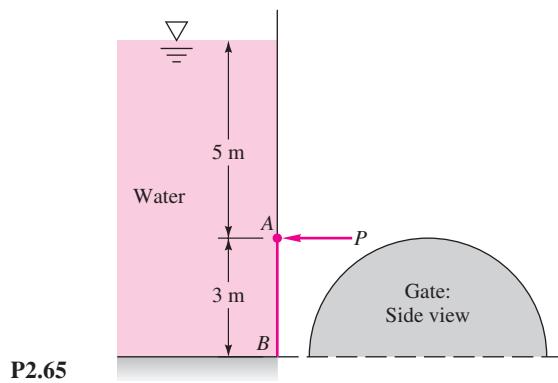


- P2.66 Dam  $ABC$  in Fig. P2.66 is 30 m wide into the paper and made of concrete ( $\text{SG} = 2.4$ ). Find the hydrostatic force on surface  $AB$  and its moment about  $C$ . Assuming no seepage of water under the dam, could this force tip the dam over? How does your argument change if there is seepage under the dam?

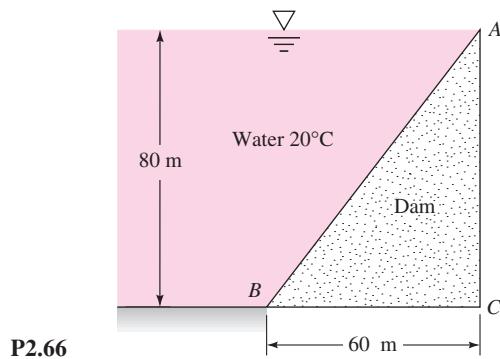


- \*P2.67 Generalize Prob. P2.66 as follows. Denote length  $AB$  as  $H$ , length  $BC$  as  $L$ , and angle  $ABC$  as  $\theta$ . Let the dam material have specific gravity  $\text{SG}$ . The width of the dam is  $b$ . Assume no seepage of water under the dam. Find an analytic relation between  $\text{SG}$  and the critical angle  $\theta_c$  for which the dam will just tip over to the right. Use your relation to compute  $\theta_c$  for the special case  $\text{SG} = 2.4$  (concrete).


- P2.68 Isosceles triangle gate  $AB$  in Fig. P2.68 is hinged at  $A$  and weighs 1500 N. What horizontal force  $P$  is required at point  $B$  for equilibrium?

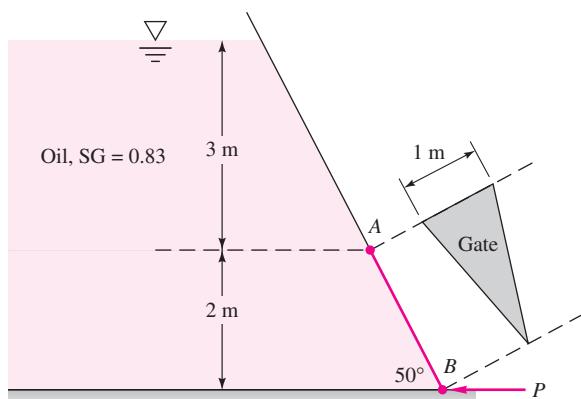


- P2.69 Consider the slanted plate  $AB$  of length  $L$  in Fig. P2.69. (a) Is the hydrostatic force  $F$  on the plate equal to the weight of the missing water above the plate? If not, correct this hypothesis. Neglect the atmosphere. (b) Can a “missing water” theory be generalized to curved surfaces of this type?

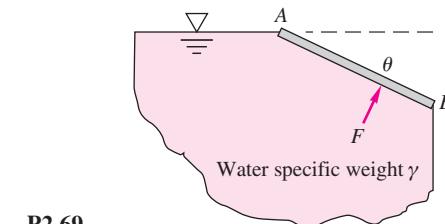


- P2.70 The swing-check valve in Fig. P2.70 covers a 22.86-cm diameter opening in the slanted wall. The hinge is 15 cm from the centerline, as shown. The valve will open when the hinge moment is 50 N · m. Find the value of  $h$  for the water to cause this condition.

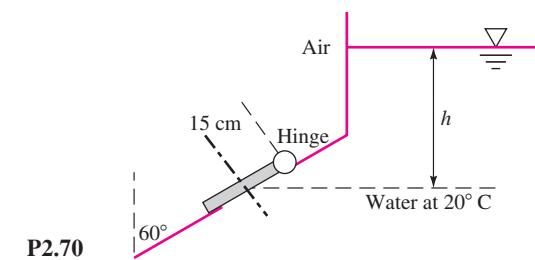


- \*P2.71 In Fig. P2.71 gate  $AB$  is 3 m wide into the paper and is connected by a rod and pulley to a concrete sphere ( $\text{SG} = 2.40$ ). What diameter of the sphere is just sufficient to keep the gate closed?

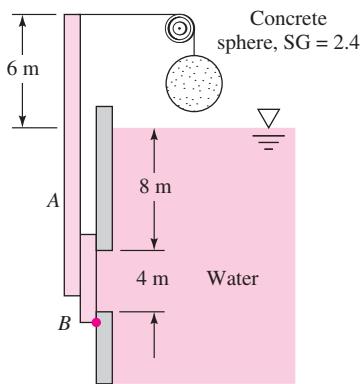

- P2.72** Gate *B* in Fig. P2.72 is 30 cm high, 60 cm wide into the paper, and hinged at the top. What water depth *h* will first cause the gate to open?


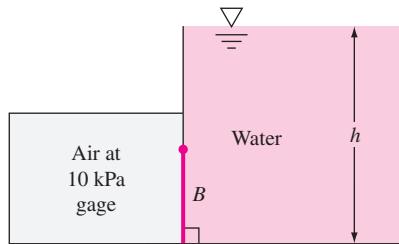


- P2.73** Gate *AB* is 5 ft wide into the paper and opens to let fresh water out when the ocean tide is dropping. The hinge at *A* is 2 ft above the freshwater level. At what ocean level *h* will the gate first open? Neglect the gate weight.

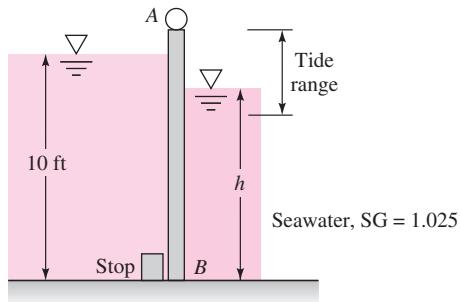


- P2.74** Find the height *H* in Fig. P2.74 for which the hydrostatic force on the rectangular panel is the same as the force on the semicircular panel below.


- P2.75** The cap at point *B* on the 5-cm-diameter tube in Fig. P2.75 will be dislodged when the hydrostatic force on its base reaches 22 lbf. For what water depth *h* does this occur?

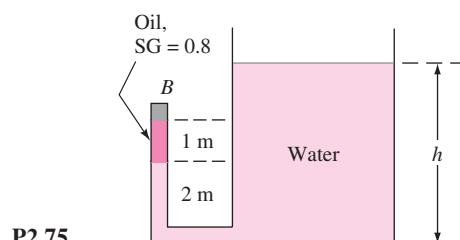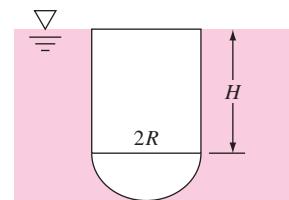


- P2.76** Panel *BC* in Fig. P2.76 is circular. Compute (a) the hydrostatic force of the water on the panel, (b) its center of pressure, and (c) the moment of this force about point *B*.

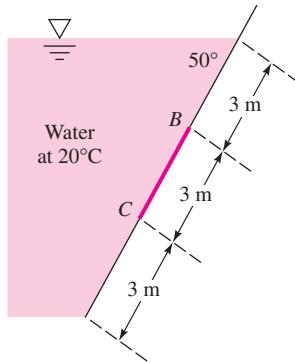

- P2.77** The circular gate *ABC* in Fig. P2.77 has a 1-m radius and is hinged at *B*. Compute the force *P* just sufficient to keep the gate from opening when *h* = 8 m. Neglect atmospheric pressure.

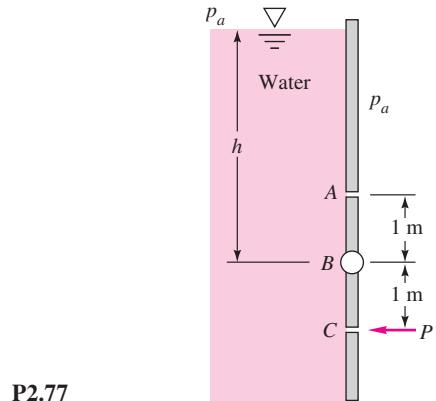


- P2.78** Panels AB and CD in Fig. P2.78 are each 120 cm wide into the paper. (a) Can you deduce, by inspection, which panel has the larger water force? (b) Even if your deduction is brilliant, calculate the panel forces anyway.

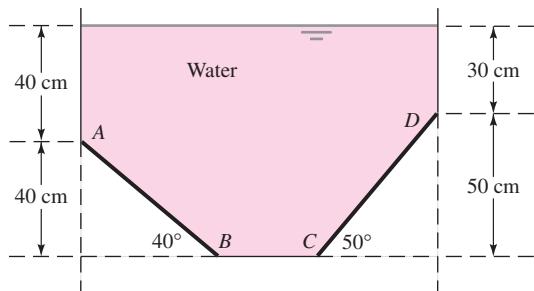


P2.78

- P2.79** Gate ABC in Fig. P2.79 is 1 m square and is hinged at B. It will open automatically when the water level  $h$  becomes high enough. Determine the lowest height for which the gate will open. Neglect atmospheric pressure. Is this result independent of the liquid density?

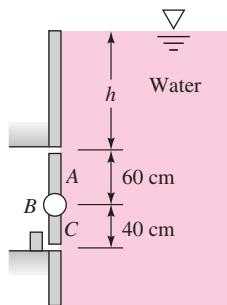

P2.79

- \*P2.80** A concrete dam ( $\text{SG} = 2.5$ ) is made in the shape of an isosceles triangle, as in Fig. P2.80. Analyze this geometry to find the range of angles  $\theta$  for which the hydrostatic force will tend to tip the dam over at point B. The width into the paper is  $b$ .

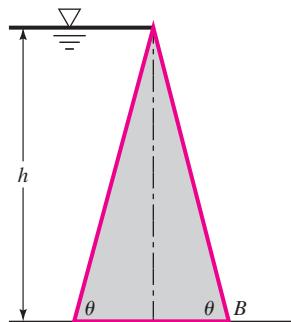


P2.80

### Forces on curved surfaces


- P2.81** For the semicircular cylinder CDE in Example 2.9, find the vertical hydrostatic force by integrating the vertical component of pressure around the surface from  $\theta = 0$  to  $\theta = \pi$ .

- \*P2.82** The dam in Fig. P2.82 is a quarter circle 50 m wide into the paper. Determine the horizontal and vertical components of the hydrostatic force against the dam and the point CP where the resultant strikes the dam.

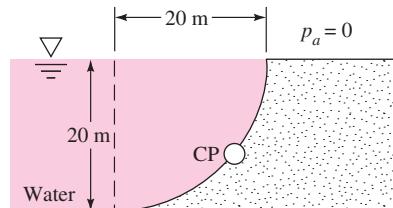


P2.82

- \*P2.83** Gate AB in Fig. P2.83 is a quarter circle 10 ft wide into the paper and hinged at B. Find the force  $F$  just sufficient to keep the gate from opening. The gate is uniform and weighs 3000 lbf.

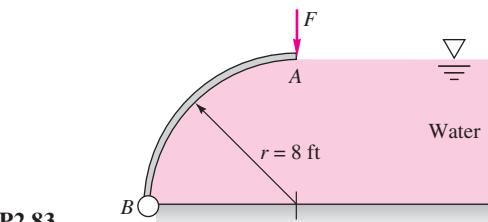


P2.83

- P2.84** Panel AB in Fig. P2.84 is a parabola with its maximum at point A. It is 150 cm wide into the paper. Neglect atmospheric pressure. Find (a) the vertical and (b) the horizontal water forces on the panel.

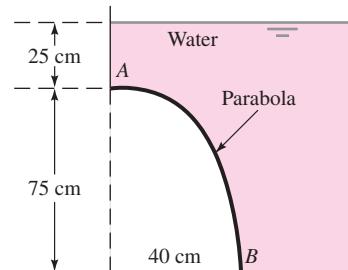


P2.84

- P2.85** Compute the horizontal and vertical components of the hydrostatic force on the quarter-circle panel at the bottom of the water tank in Fig. P2.85.

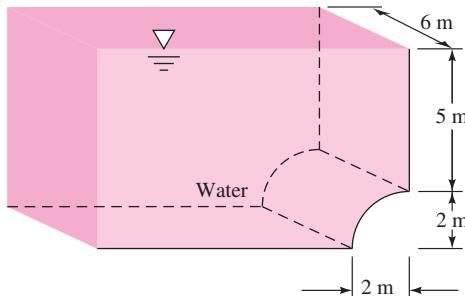


P2.85

- P2.86** The quarter circle gate  $BC$  in Fig. P2.86 is hinged at  $C$ . Find the horizontal force  $P$  required to hold the gate stationary. Neglect the weight of the gate.

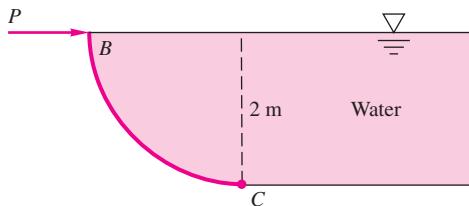


P2.86

- P2.87** The bottle of champagne ( $\text{SG} = 0.96$ ) in Fig. P2.87 is under pressure, as shown by the mercury-manometer reading. Compute the net force on the 2-in-radius hemispherical end cap at the bottom of the bottle.

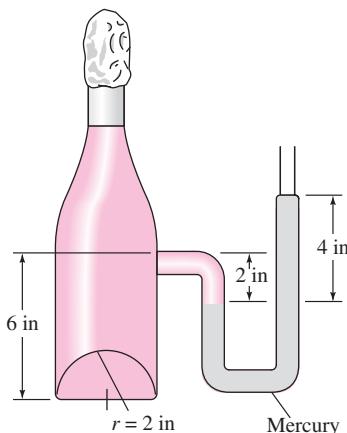


P2.87

- \*P2.88** Gate  $ABC$  is a circular arc, sometimes called a *Tainter gate*, which can be raised and lowered by pivoting about point  $O$ . See Fig. P2.88. For the position shown, determine (a) the hydrostatic force of the water on the gate and (b) its line of action. Does the force pass through point  $O$ ?

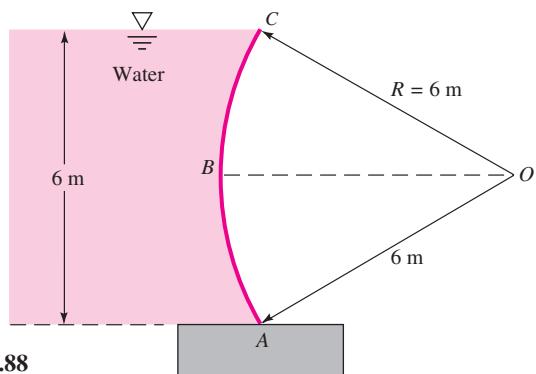


P2.88

- P2.89** The tank in Fig. P2.89 contains benzene and is pressurized to 200 kPa (gage) in the air gap. Determine the vertical hydrostatic force on circular-arc section  $AB$  and its line of action.

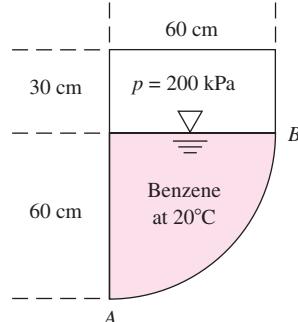


P2.89

- P2.90** The tank in Fig. P2.90 is 120 cm long into the paper. Determine the horizontal and vertical hydrostatic forces on the quarter-circle panel  $AB$ . The fluid is water at  $20^\circ\text{C}$ . Neglect atmospheric pressure.

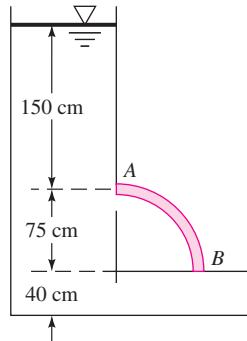


P2.90

- P2.91** The hemispherical dome in Fig. P2.91 weighs 30 kN and is filled with water and attached to the floor by six equally spaced bolts. What is the force in each bolt required to hold down the dome?

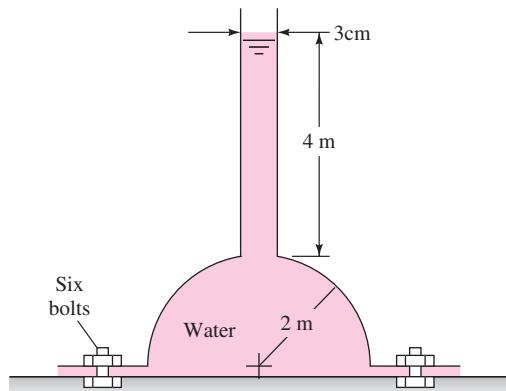


P2.91

- P2.92** A 4-m-diameter water tank consists of two half cylinders, each weighing 4.5 kN/m, bolted together as shown in Fig. P2.92. If the support of the end caps is neglected, determine the force induced in each bolt.

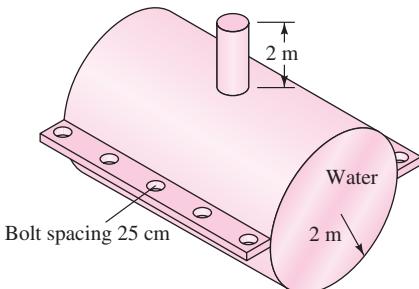


P2.92

- \*P2.93** In Fig. P2.93, a one-quadrant spherical shell of radius  $R$  is submerged in liquid of specific weight  $\gamma$  and depth  $h > R$ . Find an analytic expression for the resultant hydrostatic force, and its line of action, on the shell surface.

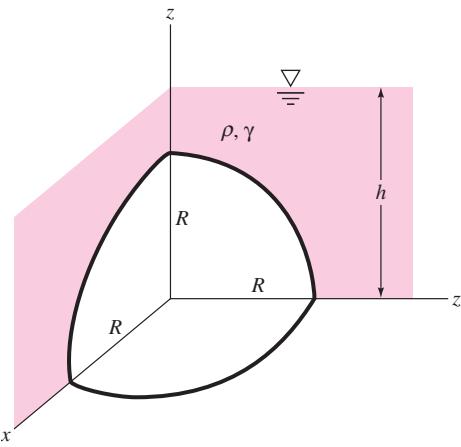


P2.93

- P2.94** Find an analytic formula for the vertical and horizontal forces on each of the semicircular panels  $AB$  in Fig. P2.94. The width into the paper is  $b$ . Which force is larger? Why?

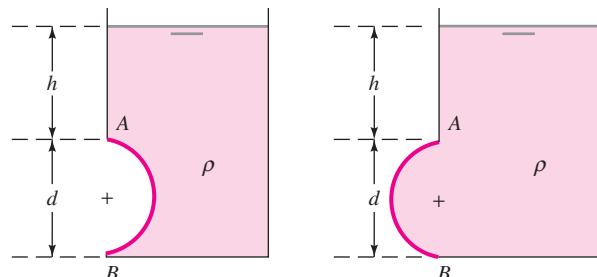


P2.94

- \*P2.95** The uniform body  $A$  in Fig. P2.95 has width  $b$  into the paper and is in static equilibrium when pivoted about hinge  $O$ . What is the specific gravity of this body if (a)  $h = 0$  and (b)  $h = R$ ?

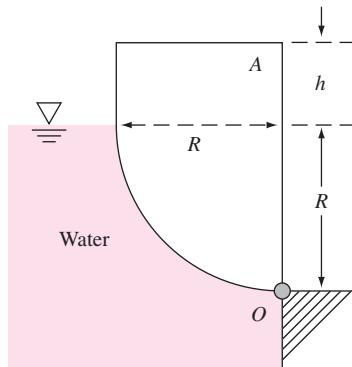


P2.95

- P2.96** Curved panel  $BC$  in Fig. P2.96 is a  $60^\circ$  arc, perpendicular to the bottom at  $C$ . If the panel is 4 m wide into the paper, estimate the resultant hydrostatic force of the water on the panel.

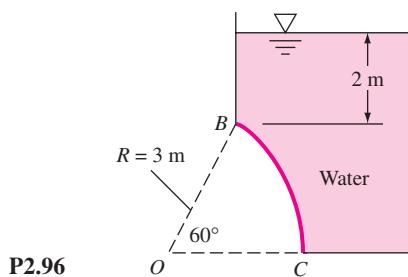


P2.96

- P2.97** The contractor ran out of gunite mixture and finished the deep corner, of a 5-m-wide swimming pool, with a quarter-circle piece of PVC pipe, labeled AB in Fig. P2.97. Compute the horizontal and vertical water forces on the curved panel AB.

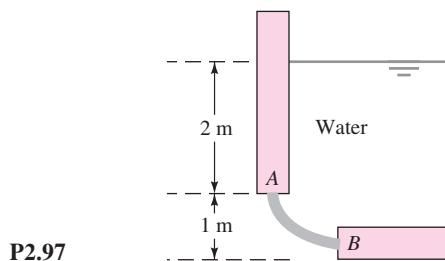


- P2.98** Gate ABC in Fig. P2.98 is a quarter circle 8 ft wide into the paper. Compute the horizontal and vertical hydrostatic forces on the gate and the line of action of the resultant force.

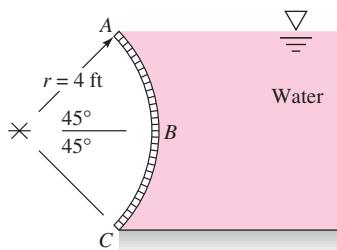


P2.98

- P2.99** The mega-magnum cylinder in Fig. P2.99 has a hemispherical bottom and is pressurized with air to 75 kPa (gage) at the top. Determine (a) the horizontal and (b) the vertical hydrostatic forces on the hemisphere, in lbf.

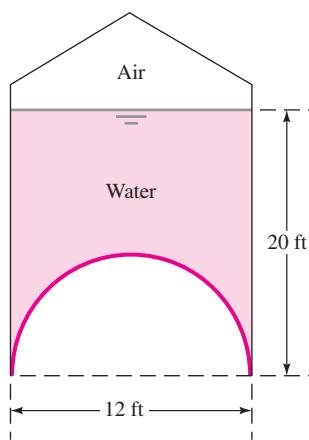


- P2.100** Pressurized water fills the tank in Fig. P2.100. Compute the net hydrostatic force on the conical surface ABC.

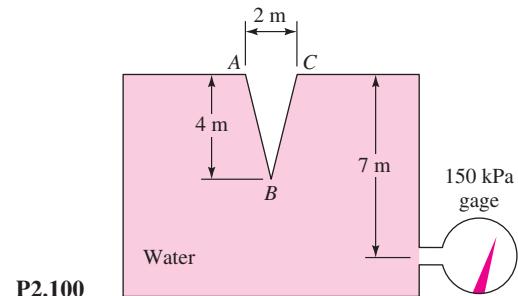

### Forces on layered surfaces

- P2.101** The closed layered box in Fig. P2.101 has square horizontal cross sections everywhere. All fluids are at 20°C. Estimate the gage pressure of the air if (a) the hydrostatic force on panel AB is 48 kN or (b) the hydrostatic force on the bottom panel BC is 97 kN.

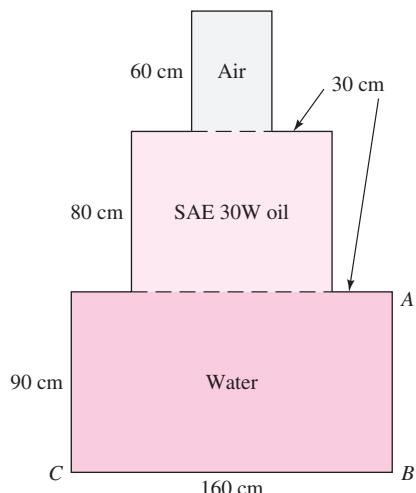


P2.101

- P2.102** A cubical tank is  $3 \times 3 \times 3$  m and is layered with 1 meter of fluid of specific gravity 1.0, 1 meter of fluid with SG = 0.9, and 1 meter of fluid with SG = 0.8. Neglect atmospheric pressure. Find (a) the hydrostatic force on the bottom and (b) the force on a side panel.

### Buoyancy; Archimedes'principles

- P2.103** A solid block, of specific gravity 0.9, floats such that 75 percent of its volume is in water and 25 percent of its volume is in fluid X, which is layered above the water. What is the specific gravity of fluid X?

- P2.104** The can in Fig. P2.104 floats in the position shown. What is its weight in N?

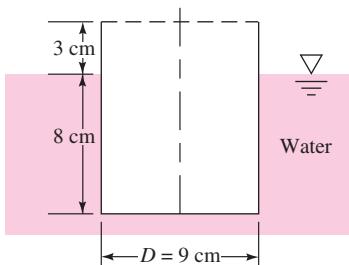


P2.104

- P2.105** It is said that Archimedes discovered the buoyancy laws when asked by King Hiero of Syracuse to determine whether his new crown was pure gold ( $\text{SG} = 19.3$ ). Archimedes measured the weight of the crown in air to be 11.8 N and its weight in water to be 10.9 N. Was it pure gold?

- P2.106** A spherical helium balloon is 2.5 m in diameter and has a total mass of 6.7 kg. When released into the U.S. standard atmosphere, at what altitude will it settle?


- P2.107** Repeat Prob. 2.62, assuming that the 10,000-lbf weight is aluminum ( $\text{SG} = 2.71$ ) and is hanging submerged in the water.

- P2.108** A 7-cm-diameter solid aluminum ball ( $\text{SG} = 2.7$ ) and a solid brass ball ( $\text{SG} = 8.5$ ) balance nicely when submerged in a liquid, as in Fig. P2.108. (a) If the fluid is water at  $20^\circ\text{C}$ , what is the diameter of the brass ball? (b) If the brass ball has a diameter of 3.8 cm, what is the density of the fluid?

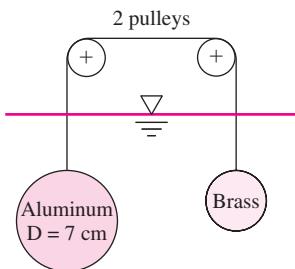

P2.108

- P2.109** A hydrometer floats at a level that is a measure of the specific gravity of the liquid. The stem is of constant diameter  $D$ , and a weight in the bottom stabilizes the body to float vertically, as shown in Fig. P2.109. If the position  $h = 0$  is pure water ( $\text{SG} = 1.0$ ), derive a formula for  $h$  as a function of total weight  $W$ ,  $D$ ,  $\text{SG}$ , and the specific weight  $\gamma_0$  of water.

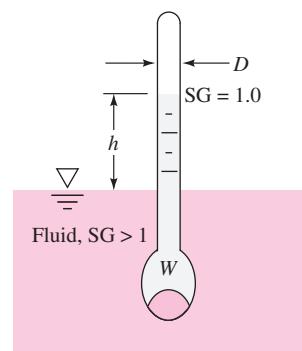


P2.109

- P2.110** A solid sphere, of diameter 18 cm, floats in  $20^\circ\text{C}$  water with 1,527 cubic centimeters exposed above the surface. (a) What are the weight and specific gravity of this sphere? (b) Will it float in  $20^\circ\text{C}$  gasoline? If so, how many cubic centimeters will be exposed?

- P2.111** A hot-air balloon must be designed to support basket, cords, and one person for a total weight of 1300 N. The balloon material has a mass of  $60 \text{ g/m}^2$ . Ambient air is at  $25^\circ\text{C}$  and 1 atm. The hot air inside the balloon is at  $70^\circ\text{C}$  and 1 atm. What diameter spherical balloon will just support the total weight? Neglect the size of the hot-air inlet vent.


- P2.112** The uniform 5-m-long round wooden rod in Fig. P2.112 is tied to the bottom by a string. Determine (a) the tension in the string and (b) the specific gravity of the wood. Is it possible for the given information to determine the inclination angle  $\theta$ ? Explain.

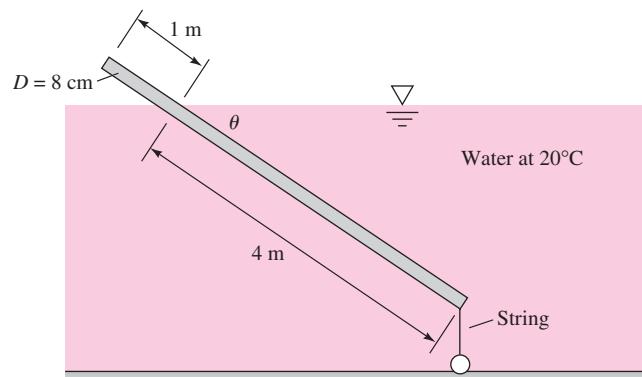

P2.112


- P2.113** A spar buoy is a buoyant rod weighted to float and protrude vertically, as in Fig. P2.113. It can be used for measurements or markers. Suppose that the buoy is maple wood ( $\text{SG} = 0.6$ ), 2 in by 2 in by 12 ft, floating in seawater

(SG = 1.025). How many pounds of steel (SG = 7.85) should be added to the bottom end so that  $h = 18$  in?

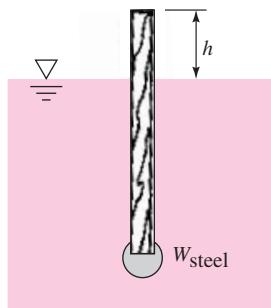


P2.113

- P2.114** The uniform rod in Fig. P2.114 is hinged at point *B* on the waterline and is in static equilibrium as shown when 2 kg of lead (SG = 11.4) are attached to its end. What is the specific gravity of the rod material? What is peculiar about the rest angle  $\theta = 30^\circ$ ?

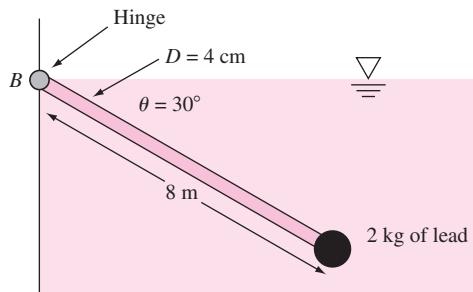

P2.114


- P2.115** The 2-in by 2-in by 12-ft spar buoy from Fig. P2.113 has 5 lbm of steel attached and has gone aground on a rock, as in Fig. P2.115. Compute the angle  $\theta$  at which the buoy will lean, assuming that the rock exerts no moments on the spar.

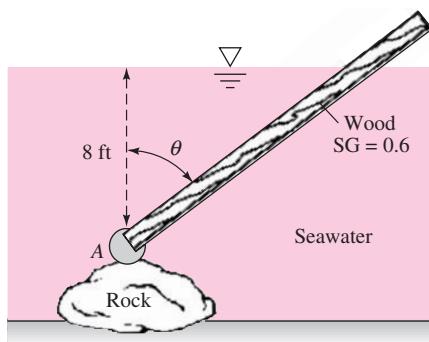

P2.115

- P2.116** The deep submersible vehicle ALVIN in the chapter-opener photo has a hollow titanium (SG = 4.50) spherical passenger compartment with an inside diameter of 78.08 in and a wall thickness of 1.93 in. (a) Would the empty sphere float in seawater? (b) Would it float if it contained 1000 lbm of people and equipment inside? (c) What wall thickness would cause the empty sphere to be neutrally buoyant?


- P2.117** The balloon in Fig. P2.117 is filled with helium and pressurized to 135 kPa and 20°C. The balloon material has a mass of 85 g/m<sup>2</sup>. Estimate (a) the tension in the mooring line and (b) the height in the standard atmosphere to which the balloon will rise if the mooring line is cut.

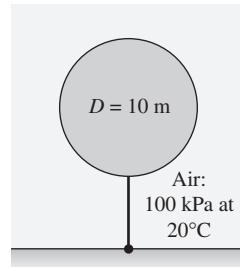

P2.117


- P2.118** An intrepid treasure-salvage group has discovered a steel box, containing gold doubloons and other valuables, resting in 80 ft of seawater. They estimate the weight of the box and treasure (in air) at 7000 lbf. Their plan is to attach the box to a sturdy balloon, inflated with air to 3 atm pressure. The empty balloon weighs 250 lbf. The box is 2 ft wide, 5 ft long, and 18 in high. What is the proper diameter of the balloon to ensure an upward lift force on the box that is 20 percent more than required?

- P2.119** When a 5-lbf weight is placed on the end of the uniform floating wooden beam in Fig. P2.119, the beam tilts at an angle  $\theta$  with its upper right corner at the surface, as shown. Determine (a) the angle  $\theta$  and (b) the specific gravity of the wood. *Hint:* Both the vertical forces and the moments about the beam centroid must be balanced.

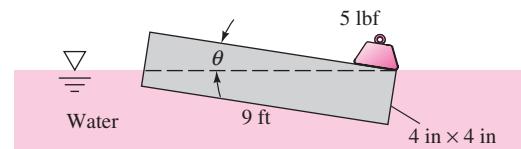


P2.119

- P2.120** A uniform wooden beam (SG = 0.65) is 10 cm by 10 cm by 3 m and is hinged at *A*, as in Fig. P2.120. At what angle  $\theta$  will the beam float in the 20°C water?

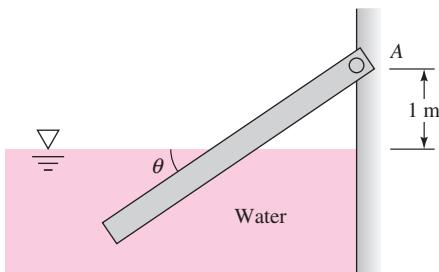

P2.120

- P2.121** The uniform beam in Fig. P2.121, of size  $L$  by  $h$  by  $b$  and with specific weight  $\gamma_b$ , floats exactly on its diagonal when a heavy uniform sphere is tied to the left corner, as

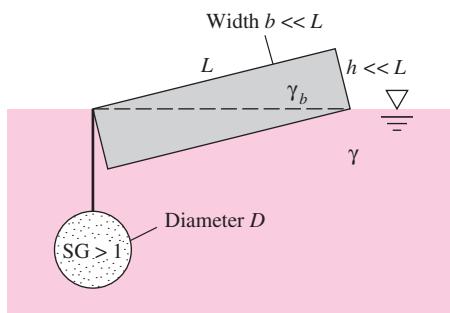


P2.121

shown. Show that this can happen only (a) when  $\gamma_b = \gamma/3$  and (b) when the sphere has size


$$D = \left[ \frac{Lhb}{\pi(\text{SG} - 1)} \right]^{1/3}$$

- P2.122** A uniform block of steel ( $\text{SG} = 7.85$ ) will “float” at a mercury–water interface as in Fig. P2.122. What is the ratio of the distances  $a$  and  $b$  for this condition?

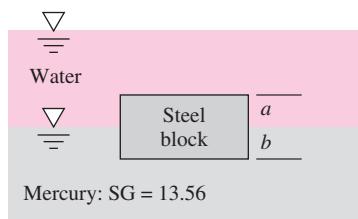

P2.122

- P2.123** A barge has the trapezoidal shape shown in Fig. P2.123 and is 22 m long into the paper. If the total weight of barge and cargo is 350 tons, what is the draft  $H$  of the barge when floating in seawater?

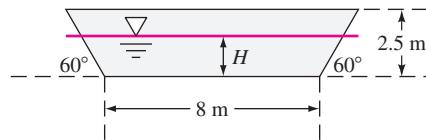


P2.123

- P2.124** A balloon weighing 3.5 lbf is 6 ft in diameter. It is filled with hydrogen at 18 lbf/in<sup>2</sup> absolute and 60°F and is released. At what altitude in the U.S. standard atmosphere will this balloon be neutrally buoyant?

- P2.125** A solid sphere, of diameter 20 cm, has a specific gravity of 0.7. (a) Will this sphere float in 20°C SAE 10W oil? If so, (b) how many cubic centimeters are exposed, and (c) how high will a spherical cap protrude above the surface? Note: If your knowledge of offbeat sphere formulas is lacking, you can “Ask Dr. Math” at Drexel University, <<http://mathforum.org/dr.math/>> EES is recommended for the solution.


- P2.126** A block of wood ( $\text{SG} = 0.6$ ) floats in fluid  $X$  in Fig. P2.126 such that 75 percent of its volume is submerged in fluid  $X$ . Estimate the vacuum pressure of the air in the tank.

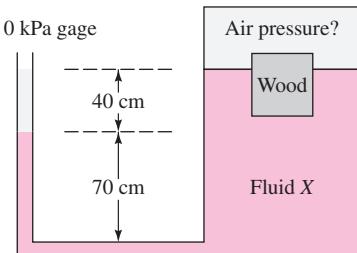

P2.126

### Stability of floating bodies


- \***P2.127** Consider a cylinder of specific gravity  $S < 1$  floating vertically in water ( $S = 1$ ), as in Fig. P2.127. Derive a formula for the stable values of  $D/L$  as a function of  $S$  and apply it to the case  $D/L = 1.2$ .

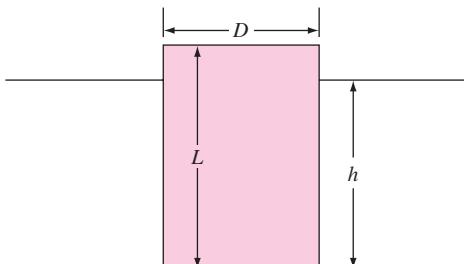

P2.127

- P2.128** An iceberg can be idealized as a cube of side length  $L$ , as in Fig. P2.128. If seawater is denoted by  $S = 1.0$ , then glacier ice (which forms icebergs) has  $S = 0.88$ . Determine if this “cubic” iceberg is stable for the position shown in Fig. P2.128.

P2.128

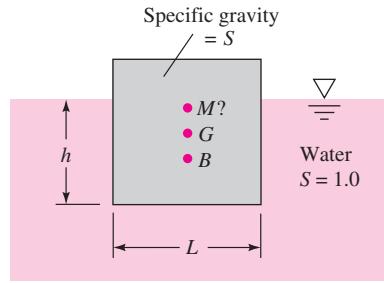


- P2.129** The iceberg idealization in Prob. P2.128 may become unstable if its sides melt and its height exceeds its width. In Fig. P2.128 suppose that the height is  $L$  and the depth into the paper is  $L$ , but the width in the plane of the paper is  $H < L$ . Assuming  $S = 0.88$  for the iceberg, find the ratio  $H/L$  for which it becomes neutrally stable (about to overturn).

- P2.130** Consider a wooden cylinder ( $SG = 0.6$ ) 1 m in diameter and 0.8 m long. Would this cylinder be stable if placed to float with its axis vertical in oil ( $SG = 0.8$ )?

- P2.131** A barge is 15 ft wide and 40 ft long and floats with a draft of 4 ft. It is piled so high with gravel that its center of gravity is 3 ft above the waterline. Is it stable?

- P2.132** A solid right circular cone has  $SG = 0.99$  and floats vertically as in Fig. P2.132. Is this a stable position for the cone?


P2.132

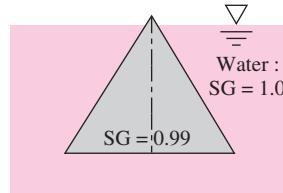

- P2.133** Consider a uniform right circular cone of specific gravity  $S < 1$ , floating with its vertex down in water ( $S = 1$ ). The base radius is  $R$  and the cone height is  $H$ . Calculate and plot the stability  $MG$  of this cone, in dimensionless form, versus  $H/R$  for a range of  $S < 1$ .

- P2.134** When floating in water ( $SG = 1.0$ ), an equilateral triangular body ( $SG = 0.9$ ) might take one of the two

positions shown in Fig. P2.134. Which is the more stable position? Assume large width into the paper.

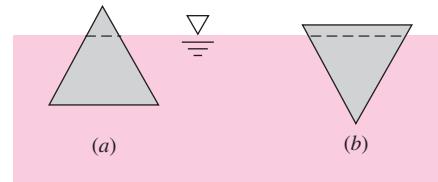

P2.134

- P2.135** Consider a homogeneous right circular cylinder of length  $L$ , radius  $R$ , and specific gravity  $SG$ , floating in water ( $SG = 1$ ). Show that the body will be stable with its axis vertical if

$$\frac{R}{L} > [2SG(1 - SG)]^{1/2}$$


- P2.136** Consider a homogeneous right circular cylinder of length  $L$ , radius  $R$ , and specific gravity  $SG = 0.5$ , floating in water ( $SG = 1$ ). Show that the body will be stable with its axis horizontal if  $L/R > 2.0$ .

### Uniform acceleration

- P2.137** A tank of water 4 m deep receives a constant upward acceleration  $a_z$ . Determine (a) the gage pressure at the tank bottom if  $a_z = 5 \text{ m/s}^2$  and (b) the value of  $a_z$  that causes the gage pressure at the tank bottom to be 1 atm.

- P2.138** A 12-fl-oz glass, of 3-in diameter, partly full of water, is attached to the edge of an 8-ft-diameter merry-go-round, which is rotated at 12 r/min. How full can the glass be before water spills? Hint: Assume that the glass is much smaller than the radius of the merry-go-round.

- P2.139** The tank of liquid in Fig. P2.139 accelerates to the right with the fluid in rigid-body motion. (a) Compute  $a_x$  in  $\text{m/s}^2$ . (b) Why doesn't the solution to part (a) depend on the density of the fluid? (c) Determine the gage pressure at point A if the fluid is glycerin at  $20^\circ\text{C}$ .

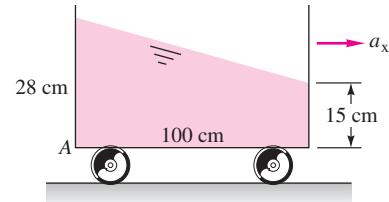


P2.139

- P2.140** Suppose an elliptical-end fuel tank that is 10 m long and has a 3-m horizontal major axis and 2-m vertical major axis is filled completely with fuel oil ( $\rho = 890 \text{ kg/m}^3$ ). Let the tank be pulled along a horizontal road. For rigid-body


motion, find the acceleration, and its direction, for which (a) a constant-pressure surface extends from the top of the front end wall to the bottom of the back end and (b) the top of the back end is at a pressure 0.5 atm lower than the top of the front end.

- P2.141** The same tank from Prob. P2.139 is now moving with constant acceleration up a  $30^\circ$  inclined plane, as in Fig. P2.141. Assuming rigid-body motion, compute (a) the value of the acceleration  $a$ , (b) whether the acceleration is up or down, and (c) the gage pressure at point A if the fluid is mercury at  $20^\circ\text{C}$ .

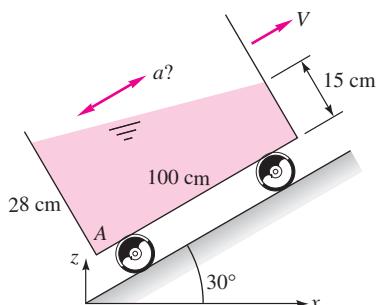


P2.141

- P2.142** The tank of water in Fig. P2.142 is 12 cm wide into the paper. If the tank is accelerated to the right in rigid-body motion at  $6.0 \text{ m/s}^2$ , compute (a) the water depth on side AB and (b) the water-pressure force on panel AB. Assume no spilling.

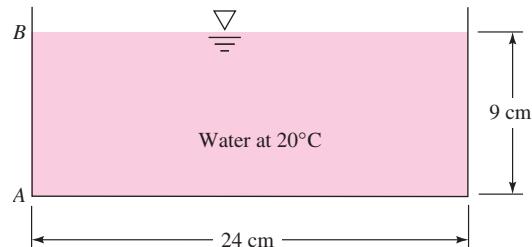

P2.142

- P2.143** The tank of water in Fig. P2.143 is full and open to the atmosphere at point A. For what acceleration  $a_x$  in  $\text{ft/s}^2$  will the pressure at point B be (a) atmospheric and (b) zero absolute?

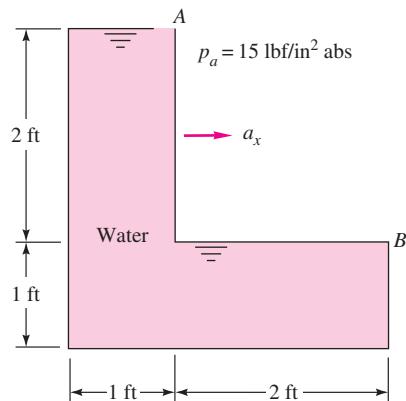


P2.143

- P2.144** Consider a hollow cube of side length 22 cm, filled completely with water at  $20^\circ\text{C}$ . The top surface of the cube is horizontal. One top corner, point A, is open through a small hole to a pressure of 1 atm. Diagonally opposite to point A is top corner B. Determine and discuss the various rigid-body accelerations for which the water at point B begins to cavitate, for (a) horizontal motion and (b) vertical motion.


- P2.145** A fish tank 14 in deep by 27 in is to be carried in a car that may experience accelerations as high as  $6 \text{ m/s}^2$ . What is the maximum water depth that will avoid spilling in rigid-body motion? What is the proper alignment of the tank with respect to the car motion?

- P2.146** The tank in Fig. P2.146 is filled with water and has a vent hole at point A. The tank is 1 m wide into the paper. Inside the tank, a 10-cm balloon, filled with helium at 130 kPa, is tethered centrally by a string. If the tank accelerates to the right at  $5 \text{ m/s}^2$  in rigid-body motion, at what angle will the balloon lean? Will it lean to the right or to the left?

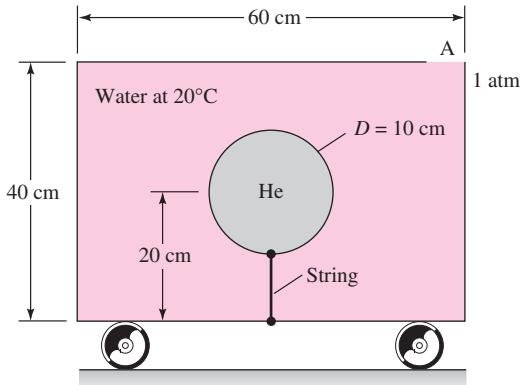

P2.146


- P2.147** The tank of water in Fig. P2.147 accelerates uniformly by freely rolling down a  $30^\circ$  incline. If the wheels are frictionless, what is the angle  $\theta$ ? Can you explain this interesting result?

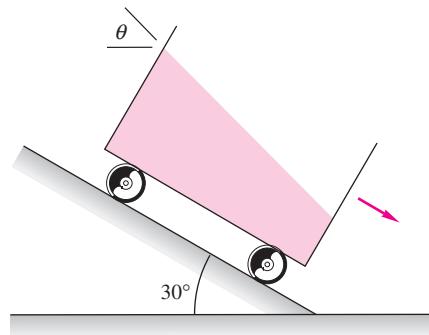

P2.147


- P2.148** A child is holding a string onto which is attached a helium-filled balloon. (a) The child is standing still and suddenly accelerates forward. In a frame of reference moving with the child, which way will the balloon tilt, forward or backward? Explain. (b) The child is now sitting in a car that is stopped at a red light. The helium-filled balloon is not in contact with any part of the car (seats, ceiling, etc.) but is held in place by the string, which is in turn held by the child. All the windows in the car are closed. When the traffic light turns green, the car accelerates forward. In a frame of reference moving with the car and child, which way will the balloon tilt, forward or backward? Explain. (c) Purchase or borrow a helium-filled balloon. Conduct a scientific experiment to see if your predictions in parts (a) and (b) above are correct. If not, explain.

- P2.149** The 6-ft-radius waterwheel in Fig. P2.149 is being used to lift water with its 1-ft-diameter half-cylinder blades. If the wheel rotates at 10 r/min and rigid-body motion is assumed, what is the water surface angle  $\theta$  at position A?

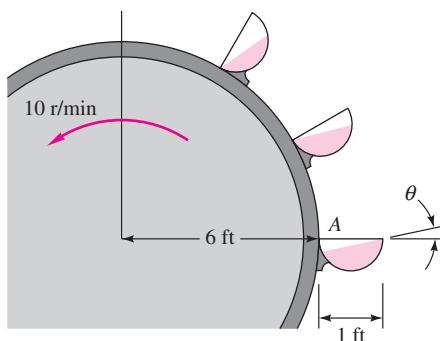


P2.149

- P2.150** A cheap accelerometer, probably worth the price, can be made from a U-tube as in Fig. P2.150. If  $L = 18 \text{ cm}$  and  $D = 5 \text{ mm}$ , what will  $h$  be if  $a_x = 6 \text{ m/s}^2$ ? Can the scale markings on the tube be linear multiples of  $a_x$ ?

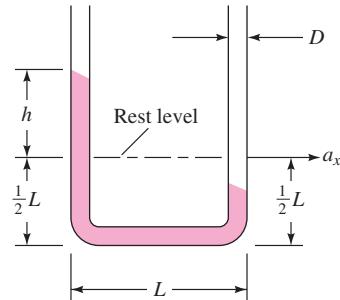

P2.150

- P2.151** The U-tube in Fig. P2.151 is open at A and closed at D. If accelerated to the right at uniform  $a_x$ , what acceleration will cause the pressure at point C to be atmospheric? The fluid is water (SG = 1.0).

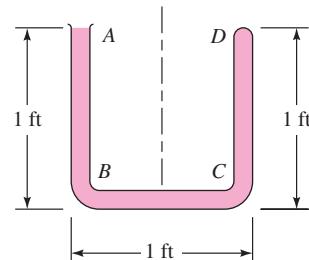

P2.151

### Rigid-body motion


- P2.152** A 16-cm-diameter open cylinder 27 cm high is full of water. Compute the rigid-body rotation rate about its central axis, in r/min, (a) for which one-third of the water will spill out and (b) for which the bottom will be barely exposed.

- P2.153** A tall cylindrical container, 14 in in diameter, is used to make a mold for forming 14-in salad bowls. The bowls are to be 8 in deep. The cylinder is half-filled with molten plastic,  $\mu = 1.6 \text{ kg/(m-s)}$ , rotated steadily about the central axis, then cooled while rotating. What is the appropriate rotation rate, in r/min?

- P2.154** A very tall 10-cm-diameter vase contains  $1178 \text{ cm}^3$  of water. When spun steadily to achieve rigid-body

rotation, a 4-cm-diameter dry spot appears at the bottom of the vase. What is the rotation rate, in r/min, for this condition?

- P2.155** For what uniform rotation rate in r/min about axis C will the U-tube in Fig. P2.155 take the configuration shown? The fluid is mercury at 20°C.

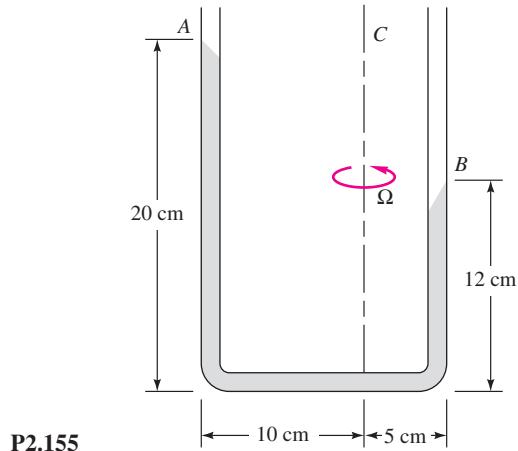


- P2.156** Suppose that the U-tube of Fig. P2.151 is rotated about axis DC. If the fluid is water at 122°F and atmospheric pressure is 2116 lbf/ft<sup>2</sup> absolute, at what rotation rate will the fluid within the tube begin to vaporize? At what point will this occur?

- P2.157** The 45° V-tube in Fig. P2.157 contains water and is open at A and closed at C. What uniform rotation rate in r/min about axis AB will cause the pressure to be equal at points B and C? For this condition, at what point in leg BC will the pressure be a minimum?


## Word Problems

- W2.1** Consider a hollow cone with a vent hole in the vertex at the top, along with a hollow cylinder, open at the top, with the same base area as the cone. Fill both with water to the top. The *hydrostatic paradox* is that both containers have the same force on the bottom due to the water pressure, although the cone contains 67 percent less water. Can you explain the paradox?
- W2.2** Can the temperature ever *rise* with altitude in the real atmosphere? Wouldn't this cause the air pressure to *increase* upward? Explain the physics of this situation.

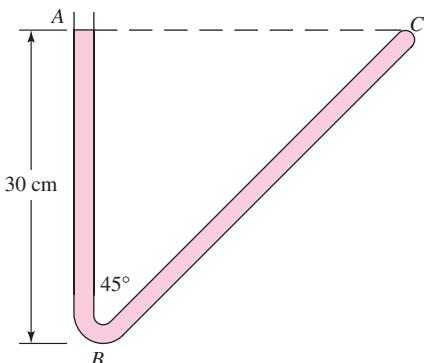

- \*P2.158** It is desired to make a 3-m-diameter parabolic telescope mirror by rotating molten glass in rigid-body motion until the desired shape is achieved and then cooling the glass to a solid. The focus of the mirror is to be 4 m from the mirror, measured along the centerline. What is the proper mirror rotation rate, in r/min, for this task?

- P2.159** The three-legged manometer in Fig. P2.159 is filled with water to a depth of 20 cm. All tubes are long and have equal small diameters. If the system spins at angular velocity  $\Omega$  about the central tube, (a) derive a formula to find the change of height in the tubes; (b) find the height in cm in each tube if  $\Omega = 120$  r/min. Hint: The central tube must supply water to *both* the outer legs.

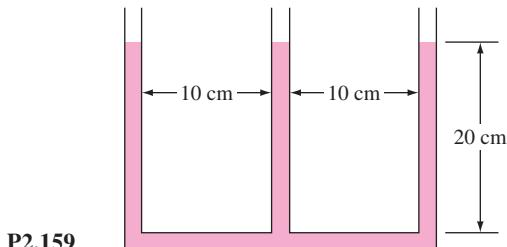

- W2.3** Consider a submerged curved surface that consists of a two-dimensional circular arc of arbitrary angle, arbitrary depth, and arbitrary orientation. Show that the resultant hydrostatic pressure force on this surface must pass through the center of curvature of the arc.

- W2.4** Fill a glass approximately 80 percent with water, and add a large ice cube. Mark the water level. The ice cube, having SG  $\approx 0.9$ , sticks up out of the water. Let the ice cube melt with negligible evaporation from the water surface. Will the water level be higher than, lower than, or the same as before?

- W2.5** A ship, carrying a load of steel, is trapped while floating in a small closed lock. Members of the crew want to get out, but they can't quite reach the top wall of the lock. A crew member suggests throwing the steel overboard in the lock, claiming the ship will then rise and they can climb out. Will this plan work?
- W2.6** Consider a balloon of mass  $m$  floating neutrally in the atmosphere, carrying a person/basket of mass  $M > m$ . Discuss the stability of this system to disturbances.
- W2.7** Consider a helium balloon on a string tied to the seat of your stationary car. The windows are closed, so there is no air motion within the car. The car begins to accelerate

forward. Which way will the balloon lean, forward or backward? *Hint:* The acceleration sets up a horizontal pressure gradient in the air within the car.


- W2.8** Repeat your analysis of Prob. W2.7 to let the car move at constant velocity and go around a curve. Will the balloon lean in, toward the center of curvature, or out?
- W2.9** The deep submersible vehicle ALVIN in the chapter-opener photo weighs approximately 36,000 lbf in air. It carries 800 lbm of steel weights on the sides. After a deep mission and return, two 400-lbm piles of steel are left on the ocean floor. Can you explain, in terms relevant to this chapter, how these steel weights are used?

## Fundamentals of Engineering Exam Problems

- FE2.1** A gage attached to a pressurized nitrogen tank reads a gage pressure of 28 in of mercury. If atmospheric pressure is 14.4 psia, what is the absolute pressure in the tank?  
 (a) 95 kPa, (b) 99 kPa, (c) 101 kPa, (d) 194 kPa,  
 (e) 203 kPa

- FE2.2** On a sea-level standard day, a pressure gage, moored below the surface of the ocean ( $\text{SG} = 1.025$ ), reads an absolute pressure of 1.4 MPa. How deep is the instrument?  
 (a) 4 m, (b) 129 m, (c) 133 m, (d) 140 m,  
 (e) 2080 m

- FE2.3** In Fig. FE2.3, if the oil in region  $B$  has  $\text{SG} = 0.8$  and the absolute pressure at point  $A$  is 1 atm, what is the absolute pressure at point  $B$ ?  
 (a) 5.6 kPa, (b) 10.9 kPa, (c) 107 kPa, (d) 112 kPa,  
 (e) 157 kPa

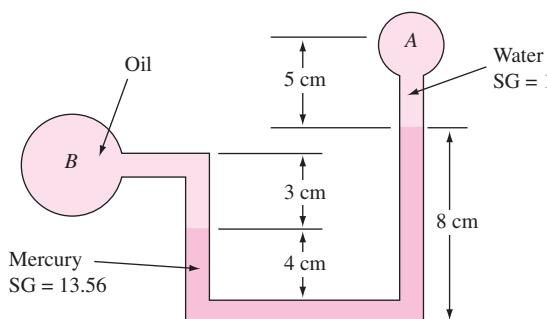

FE2.3

- FE2.4** In Fig. FE2.3, if the oil in region  $B$  has  $\text{SG} = 0.8$  and the absolute pressure at point  $B$  is 14 psia, what is the absolute pressure at point  $A$ ?

- (a) 11 kPa, (b) 41 kPa, (c) 86 kPa, (d) 91 kPa,  
 (e) 101 kPa

- FE2.5** A tank of water ( $\text{SG} = 1.0$ ) has a gate in its vertical wall 5 m high and 3 m wide. The top edge of the gate is 2 m below the surface. What is the hydrostatic force on the gate?  
 (a) 147 kN, (b) 367 kN, (c) 490 kN, (d) 661 kN,  
 (e) 1028 kN

- FE2.6** In Prob. FE2.5, how far below the surface is the center of pressure of the hydrostatic force?  
 (a) 4.50 m, (b) 5.46 m, (c) 6.35 m, (d) 5.33 m,  
 (e) 4.96 m

- FE2.7** A solid 1-m-diameter sphere floats at the interface between water ( $\text{SG} = 1.0$ ) and mercury ( $\text{SG} = 13.56$ ) such that 40 percent is in the water. What is the specific gravity of the sphere?  
 (a) 6.02, (b) 7.28, (c) 7.78, (d) 8.54, (e) 12.56

- FE2.8** A 5-m-diameter balloon contains helium at 125 kPa absolute and  $15^\circ\text{C}$ , moored in sea-level standard air. If the gas constant of helium is  $2077 \text{ m}^2/(\text{s}^2 \cdot \text{K})$  and balloon material weight is neglected, what is the net lifting force of the balloon?  
 (a) 67 N, (b) 134 N, (c) 522 N, (d) 653 N, (e) 787 N


- FE2.9** A square wooden ( $\text{SG} = 0.6$ ) rod, 5 cm by 5 cm by 10 m long, floats vertically in water at  $20^\circ\text{C}$  when 6 kg of steel ( $\text{SG} = 7.84$ ) are attached to one end. How high above the water surface does the wooden end of the rod protrude?  
 (a) 0.6 m, (b) 1.6 m, (c) 1.9 m, (d) 2.4 m, (e) 4.0 m

- FE2.10** A floating body will be stable when its  
 (a) center of gravity is above its center of buoyancy,  
 (b) center of buoyancy is below the waterline, (c) center of buoyancy is above its metacenter, (d) metacenter is above its center of buoyancy, (e) metacenter is above its center of gravity


## Comprehensive Problems

**C2.1** Some manometers are constructed as in Fig. C2.1, where one side is a large reservoir (diameter  $D$ ) and the other side is a small tube of diameter  $d$ , open to the atmosphere. In such a case, the height of manometer liquid on the reservoir side does not change appreciably. This has the advantage that only one height needs to be measured rather than two. The manometer liquid has density  $\rho_m$  while the air has density  $\rho_a$ . Ignore the effects of surface tension. When there is no pressure difference across the manometer, the elevations on both sides are the same, as indicated by the dashed line. Height  $h$  is measured from the zero pressure level as shown. (a) When a high pressure is applied to the left side, the manometer liquid in the large reservoir goes down, while that in the tube at the right goes up to conserve mass. Write an exact expression for  $p_{1\text{gage}}$ , taking into account the movement of the surface of the reservoir. Your equation should give  $p_{1\text{gage}}$  as a function of  $h$ ,  $\rho_m$ , and the physical parameters in the problem,  $h$ ,  $d$ ,  $D$ , and gravity constant  $g$ . (b) Write an approximate expression for  $p_{1\text{gage}}$ , neglecting the change in elevation of the surface of the reservoir liquid. (c) Suppose  $h = 0.26$  m in a certain application. If  $p_a = 101,000$  Pa and the manometer liquid has a density of  $820 \text{ kg/m}^3$ , estimate the ratio  $D/d$  required to keep the error of the approximation of part (b) within 1 percent of the exact measurement of part (a). Repeat for an error within 0.1 percent.


To pressure measurement location

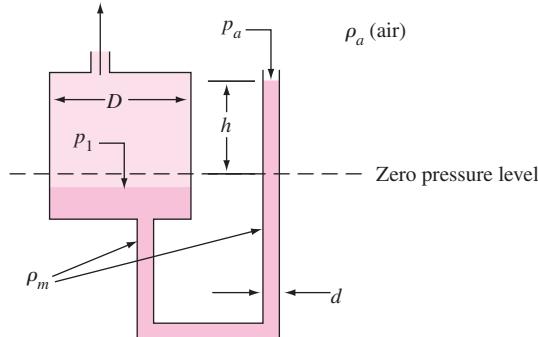

C2.1

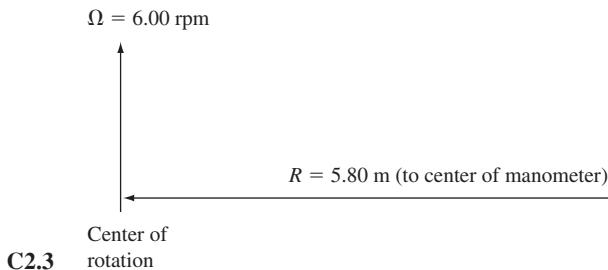


**C2.2** A prankster has added oil, of specific gravity  $\text{SG}_0$ , to the left leg of the manometer in Fig. C2.2. Nevertheless, the U-tube is still useful as a pressure-measuring device. It is attached to a pressurized tank as shown in the figure. (a) Find an expression for  $h$  as a function of  $H$  and other parameters in the problem. (b) Find the special case of your result in (a) when  $p_{\text{tank}} = p_a$ . (c) Suppose  $H = 5.0 \text{ cm}$ ,  $p_a$  is  $101.2 \text{ kPa}$ ,  $p_{\text{tank}}$  is  $1.82 \text{ kPa}$  higher than  $p_a$ , and  $\text{SG}_0 = 0.85$ . Calculate  $h$  in cm, ignoring surface tension effects and neglecting air density effects.

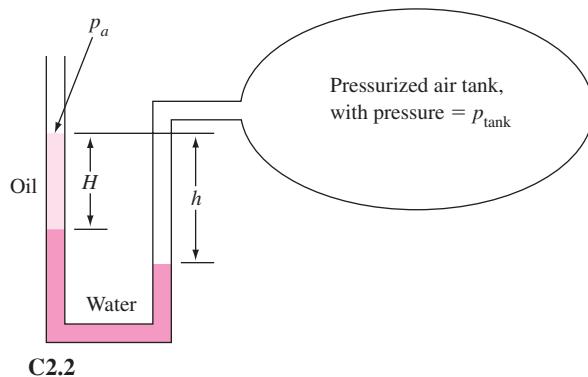

C2.2

**C2.3** Professor F. Dynamics, riding the merry-go-round with his son, has brought along his U-tube manometer. (You never know when a manometer might come in handy.) As shown in Fig. C2.3, the merry-go-round spins at constant angular velocity and the manometer legs are 7 cm apart. The manometer center is 5.8 m from the axis of rotation. Determine the height difference  $h$  in two ways: (a) approximately, by assuming rigid-body translation with  $\mathbf{a}$  equal to the average manometer acceleration; and (b) exactly, using rigid-body rotation theory. How good is the approximation?

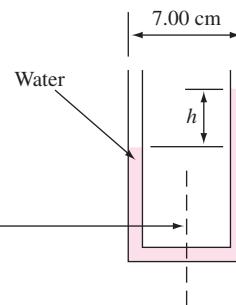

- C2.4** A student sneaks a glass of cola onto a roller coaster ride. The glass is cylindrical, twice as tall as it is wide, and filled to the brim. He wants to know what percent of the cola he should drink before the ride begins, so that none of it spills during the big drop, in which the roller coaster achieves 0.55-g acceleration at a 45° angle below the horizontal. Make the calculation for him, neglecting sloshing and assuming that the glass is vertical at all times.

- C2.5** *Dry adiabatic lapse rate* (DALR) is defined as the negative value of atmospheric temperature gradient,  $dT/dz$ , when temperature and pressure vary in an isentropic fashion. Assuming air is an ideal gas,  $DALR = -dT/dz$  when  $T = T_0(p/p_0)^a$ , where exponent  $a = (k - 1)/k$ ,  $k = c_p/c_v$  is the ratio of specific heats, and  $T_0$  and  $p_0$  are the temperature and pressure at sea level, respectively. (a) Assuming that hydrostatic conditions exist in the atmosphere, show that the dry adiabatic lapse rate is constant and is given by  $DALR = g(k - 1)/(kR)$ , where  $R$  is the ideal gas constant for air. (b) Calculate the numerical value of DALR for air in units of °C/km.


- C2.6** In “soft” liquids (low bulk modulus  $\beta$ ), it may be necessary to account for liquid compressibility in hydrostatic calculations. An approximate density relation would be

$$dp \approx \frac{\beta}{\rho} dp = a^2 dp \quad \text{or} \quad p \approx p_0 + a^2(\rho - \rho_0)$$

where  $a$  is the speed of sound and  $(p_0, \rho_0)$  are the conditions at the liquid surface  $z = 0$ . Use this approximation to show that the density variation with depth in a soft liquid is  $\rho = \rho_0 e^{-gz/a^2}$  where  $g$  is the acceleration of gravity and  $z$  is positive upward. Then consider a vertical wall of width  $b$ , extending from the surface ( $z = 0$ ) down to depth  $z = -h$ . Find an analytic expression for the hydrostatic force  $F$  on this wall, and compare it with the incompressible result  $F = \rho_0 gh^2 b/2$ . Would the center of pressure be below the incompressible position  $z = -2h/3$ ?

- C2.7** Venice, Italy, is slowly sinking, so now, especially in winter, plazas and walkways are flooded during storms. The proposed solution is the floating levee of Fig. C2.7.

When filled with air, it rises to block off the sea. The levee is 30 m high, 5 m wide, and 20 m deep. Assume a uniform density of  $300 \text{ kg/m}^3$  when floating. For the 1-m sea-lagoon difference shown, estimate the angle at which the levee floats.

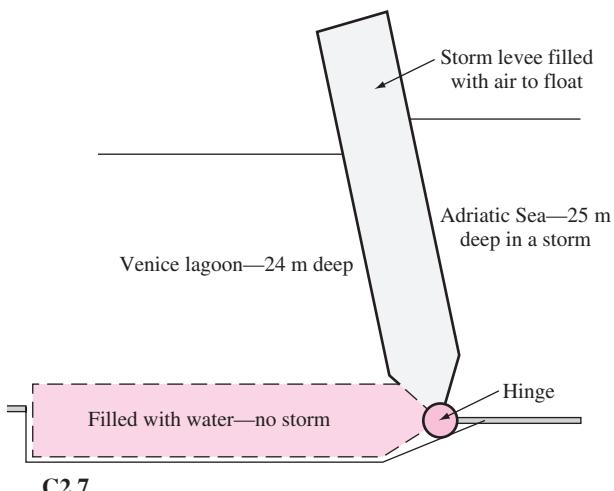

**C2.7**

- C2.8** What is the uncertainty in using pressure measurement as an altimeter? A gage on the side of an airplane measures a local pressure of 54 kPa, with an uncertainty of 3 kPa. The estimated lapse rate that day is 0.007 K/m, with an uncertainty of 0.001 K/m. Effective sea-level temperature is 10°C, with an uncertainty of 4°C. Effective sea-level pressure is 100 kPa, with an uncertainty of 3 kPa. Estimate the airplane’s altitude and its uncertainty.


- C2.9** The ALVIN submersible vehicle in the chapter-opener photo has a passenger compartment which is a titanium sphere of inside diameter 78.08 in and thickness 1.93 in. If the vehicle is submerged to a depth of 3850 m in the ocean, estimate (a) the water pressure outside the sphere, (b) the maximum elastic stress in the sphere, in lbf/in<sup>2</sup>, and (c) the factor of safety of the titanium alloy (6% aluminum, 4% vanadium).

## Design Projects

- D2.1** It is desired to have a bottom-moored, floating system that creates a nonlinear force in the mooring line as the water level rises. The design force  $F$  need only be accurate in the range of seawater depths  $h$  between 6 and 8 m, as shown in the accompanying table. Design a buoyant system that will provide this force distribution. The system should be practical (of inexpensive materials and simple construction).


$h, \text{ m}$	$F, \text{ N}$	$h, \text{ m}$	$F, \text{ N}$
6.00	400	7.25	554
6.25	437	7.50	573
6.50	471	7.75	589
6.75	502	8.00	600
7.00	530		

- D2.2** A laboratory apparatus used in some universities is shown in Fig. D2.2. The purpose is to measure the hydrostatic force on the flat face of the circular-arc block and compare it with the theoretical value for given depth  $h$ . The counterweight is arranged so that the pivot arm is horizontal when the block is not submerged, whence the weight  $W$  can be correlated with the hydrostatic force when the submerged arm is again brought to horizontal. First show that the apparatus concept is valid in principle; then derive a formula for  $W$  as a function of  $h$  in terms of the system parameters. Finally, suggest some appropriate values of  $Y$ ,  $L$ , and so on for a suitable apparatus and plot theoretical  $W$  versus  $h$  for these values.

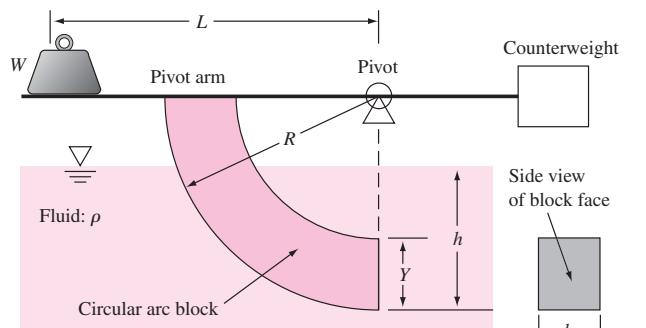

D2.2

D2.3

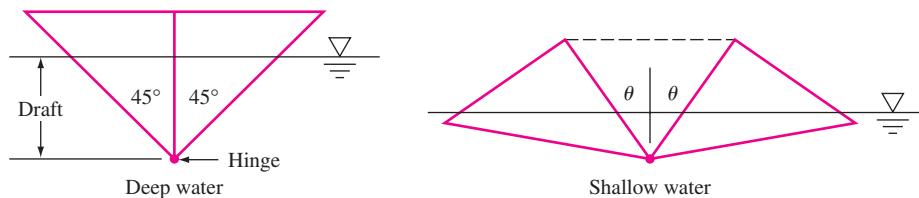

## References

1. U.S. Standard Atmosphere, 1976, Government Printing Office, Washington, DC, 1976.
2. J. A. Knauss, *Introduction to Physical Oceanography*, 2nd ed., Waveland Press, Long Grove, IL, 2005.
3. E. C. Tupper, *Introduction to Naval Architecture*, 4th ed., Elsevier, New York, 2004.
4. D. T. Greenwood, *Advanced Dynamics*, Cambridge University Press, New York, 2006.
5. R. I. Fletcher, "The Apparent Field of Gravity in a Rotating Fluid System," *Am. J. Phys.*, vol. 40, July 1972, pp. 959–965.
6. National Committee for Fluid Mechanics Films, *Illustrated Experiments in Fluid Mechanics*, M.I.T. Press, Cambridge, MA, 1972.
7. J. P. Holman, *Experimental Methods for Engineers*, 7th ed., McGraw-Hill, New York, 2000.
8. R. P. Benedict, *Fundamentals of Temperature, Pressure, and Flow Measurement*, 3d ed., Wiley, New York, 1984.
9. T. G. Beckwith and R. G. Marangoni, *Mechanical Measurements*, 5th ed., Addison-Wesley, Reading, MA, 1993.

- D2.3** The Leary Engineering Company (see *Popular Science*, November 2000, p. 14) has proposed a ship hull with hinges that allow it to open into a flatter shape when entering shallow water. A simplified version is shown in Fig. D2.3. In deep water, the hull cross section would be triangular, with large draft. In shallow water, the hinges would open to an angle as high as  $\theta = 45^\circ$ . The dashed line indicates that the bow and stern would be closed. Make a parametric study of this configuration for various  $\theta$ , assuming a reasonable weight and center of gravity location. Show how the draft, the metacentric height, and the ship's stability vary as the hinges are opened. Comment on the effectiveness of this concept.

10. J. W. Dally, W. F. Riley, and K. G. McConnell, *Instrumentation for Engineering Measurements*, 2d ed., Wiley, New York, 1993.
11. E. N. Gilbert, "How Things Float," *Am. Math. Monthly*, vol. 98, no. 3, 1991, pp. 201–216.
12. R. J. Figliola and D. E. Beasley, *Theory and Design for Mechanical Measurements*, 4th ed., Wiley, New York, 2005.
13. R. W. Miller, *Flow Measurement Engineering Handbook*, 3d ed., McGraw-Hill, New York, 1996.
14. L. D. Clayton, E. P. EerNisse, R. W. Ward, and R. B. Wiggins, "Miniature Crystalline Quartz Electromechanical Structures," *Sensors and Actuators*, vol. 20, Nov. 15, 1989, pp. 171–177.
15. A. Kitai (ed.), *Luminescent Materials and Applications*, John Wiley, New York, 2008.
16. B. G. Liptak (ed.), *Instrument Engineers' Handbook: Process Measurement and Analysis*, 4th ed., vol. 1, CRC Press, Boca Raton, FL, 2003.
17. D. R. Gillum, *Industrial Pressure, Level and Density Measurement*, Instrument Society of America, Research Triangle Park, NC, 1995.

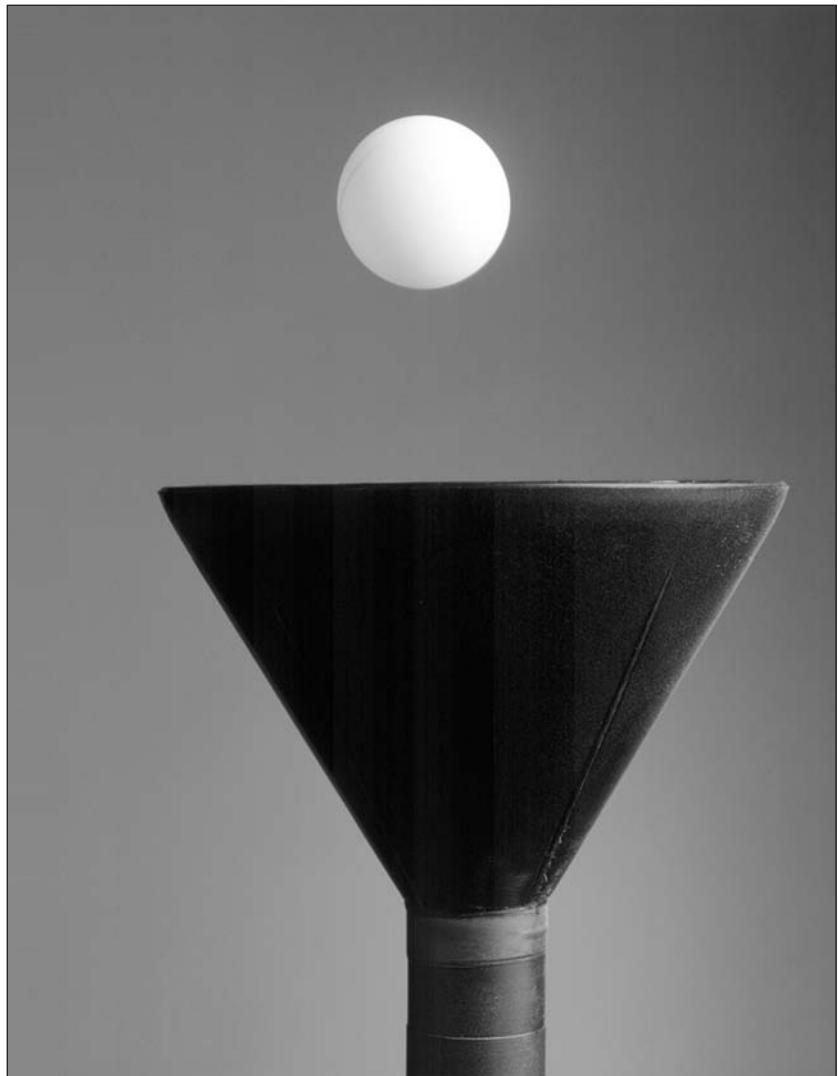


Table tennis ball suspended by an air jet. The control volume momentum principle, studied in this chapter, requires a force to change the direction of a flow. The jet flow deflects around the ball, and the force is the ball's weight. (*Courtesy of Paul Silverman/Fundamental Photographs.*)

# Chapter 3

## Integral Relations for a Control Volume

**Motivation.** In analyzing fluid motion, we might take one of two paths: (1) seeking to describe the detailed flow pattern at every point ( $x, y, z$ ) in the field or (2) working with a finite region, making a balance of flow in versus flow out, and determining gross flow effects such as the force or torque on a body or the total energy exchange. The second is the “control volume” method and is the subject of this chapter. The first is the “differential” approach and is developed in Chap. 4.

We first develop the concept of the control volume, in nearly the same manner as one does in a thermodynamics course, and we find the rate of change of an arbitrary gross fluid property, a result called the *Reynolds transport theorem*. We then apply this theorem, in sequence, to mass, linear momentum, angular momentum, and energy, thus deriving the four basic control volume relations of fluid mechanics. There are many applications, of course. The chapter includes a special case of frictionless, shaft-work-free momentum and energy: the *Bernoulli equation*. The Bernoulli equation is a wonderful, historic relation, but it is extremely restrictive and should always be viewed with skepticism and care in applying it to a real (viscous) fluid motion.

### 3.1 Basic Physical Laws of Fluid Mechanics

It is time now to really get serious about flow problems. The fluid statics applications of Chap. 2 were more like fun than work, at least in this writer’s opinion. Statics problems basically require only the density of the fluid and knowledge of the position of the free surface, but most flow problems require the analysis of an arbitrary state of variable fluid motion defined by the geometry, the boundary conditions, and the laws of mechanics. This chapter and the next two outline the three basic approaches to the analysis of arbitrary flow problems:

1. Control volume, or large-scale, analysis (Chap. 3).
2. Differential, or small-scale, analysis (Chap. 4).
3. Experimental, or dimensional, analysis (Chap. 5).

The three approaches are roughly equal in importance. Control volume analysis, the present topic, is accurate for any flow distribution but is often based on average or “one-dimensional” property values at the boundaries. It always gives useful “engineering” estimates. In principle, the differential equation approach of Chap. 4 can be applied to any problem. Only a few problems, such as straight pipe flow, yield to exact analytical solutions. But the differential equations can be modeled numerically, and the flourishing field of computational fluid dynamics (CFD)[8] can now be used to give good estimates for almost any geometry. Finally, the dimensional analysis of Chap. 5 applies to any problem, whether analytical, numerical, or experimental. It is particularly useful to reduce the cost of experimentation. Differential analysis of hydrodynamics began with Euler and d’Alembert in the late eighteenth century. Lord Rayleigh and E. Buckingham pioneered dimensional analysis at the end of the nineteenth century. The control volume was described in words, on an ad hoc one-case basis, by Daniel Bernoulli in 1753. Ludwig Prandtl, the celebrated founder of modern fluid mechanics (Fig. 1.2), developed the control volume as a systematic tool in the early 1900s. The writer’s teachers at M.I.T. introduced control volume analysis into American textbooks, for thermodynamics by Keenan in 1941 [10], and for fluids by Hunsaker and Rightmire in 1947 [11]. For a complete history of the control volume, see Vincenti [9].

### Systems versus Control Volumes

All the laws of mechanics are written for a *system*, which is defined as an arbitrary quantity of mass of fixed identity. Everything external to this system is denoted by the term *surroundings*, and the system is separated from its surroundings by its *boundaries*. The laws of mechanics then state what happens when there is an interaction between the system and its surroundings.

First, the system is a fixed quantity of mass, denoted by  $m$ . Thus the mass of the system is conserved and does not change.<sup>1</sup> This is a law of mechanics and has a very simple mathematical form, called *conservation of mass*:

$$m_{\text{syst}} = \text{const}$$

or

$$\frac{dm}{dt} = 0 \quad (3.1)$$

This is so obvious in solid mechanics problems that we often forget about it. In fluid mechanics, we must pay a lot of attention to mass conservation, and it takes a little analysis to make it hold.

Second, if the surroundings exert a net force  $\mathbf{F}$  on the system, Newton’s second law states that the mass in the system will begin to accelerate:<sup>2</sup>

$$\mathbf{F} = m\mathbf{a} = m \frac{d\mathbf{V}}{dt} = \frac{d}{dt}(m\mathbf{V}) \quad (3.2)$$

In Eq. (2.8) we saw this relation applied to a differential element of viscous incompressible fluid. In fluid mechanics Newton’s second law is called the linear momentum relation. Note that it is a vector law that implies the three scalar equations  $F_x = ma_x$ ,  $F_y = ma_y$ , and  $F_z = ma_z$ .

<sup>1</sup>We are neglecting nuclear reactions, where mass can be changed to energy.

<sup>2</sup>We are neglecting relativistic effects, where Newton’s law must be modified.

Third, if the surroundings exert a net moment  $\mathbf{M}$  about the center of mass of the system, there will be a rotation effect

$$\mathbf{M} = \frac{d\mathbf{H}}{dt} \quad (3.3)$$

where  $\mathbf{H} = \sum(\mathbf{r} \times \mathbf{V})\delta m$  is the angular momentum of the system about its center of mass. Here we call Eq. (3.3) the angular momentum relation. Note that it is also a vector equation implying three scalar equations such as  $M_x = dH_x/dt$ .

For an arbitrary mass and arbitrary moment,  $\mathbf{H}$  is quite complicated and contains nine terms (see, for example, Ref. 1). In elementary dynamics we commonly treat only a rigid body rotating about a fixed  $x$  axis, for which Eq. (3.3) reduces to

$$M_x = I_x \frac{d}{dt}(\omega_x) \quad (3.4)$$

where  $\omega_x$  is the angular velocity of the body and  $I_x$  is its mass moment of inertia about the  $x$  axis. Unfortunately, fluid systems are not rigid and rarely reduce to such a simple relation, as we shall see in Sec. 3.6.

Fourth, if heat  $\delta Q$  is added to the system or work  $\delta W$  is done by the system, the system energy  $dE$  must change according to the energy relation, or first law of thermodynamics:

$$\delta Q - \delta W = dE$$

or

$$\dot{Q} - \dot{W} = \frac{dE}{dt} \quad (3.5)$$

Like mass conservation, Eq. (3.1), this is a scalar relation having only a single component.

Finally, the second law of thermodynamics relates entropy change  $dS$  to heat added  $dQ$  and absolute temperature  $T$ :

$$dS \geq \frac{\delta Q}{T} \quad (3.6)$$

This is valid for a system and can be written in control volume form, but there are almost no practical applications in fluid mechanics except to analyze flow loss details (see Sec. 9.5).

All these laws involve thermodynamic properties, and thus we must supplement them with state relations  $p = p(\rho, T)$  and  $e = e(\rho, T)$  for the particular fluid being studied, as in Sec. 1.8. Although thermodynamics is not the main topic of this book, it is very important to the general study of fluid mechanics. Thermodynamics is crucial to compressible flow, Chap. 9. The student should review the first law and the state relations, as discussed in Refs. 6 and 7.

The purpose of this chapter is to put our four basic laws into the control volume form suitable for arbitrary regions in a flow:

1. Conservation of mass (Sec. 3.3).
2. The linear momentum relation (Sec. 3.4).
3. The angular momentum relation (Sec. 3.6).
4. The energy equation (Sec. 3.7).

Wherever necessary to complete the analysis we also introduce a state relation such as the perfect-gas law.

Equations (3.1) to (3.6) apply to either fluid or solid systems. They are ideal for solid mechanics, where we follow the same system forever because it represents the product we are designing and building. For example, we follow a beam as it deflects under load. We follow a piston as it oscillates. We follow a rocket system all the way to Mars.

But fluid systems do not demand this concentrated attention. It is rare that we wish to follow the ultimate path of a specific particle of fluid. Instead it is likely that the fluid forms the environment whose effect on our product we wish to know. For the three examples just cited, we wish to know the wind loads on the beam, the fluid pressures on the piston, and the drag and lift loads on the rocket. This requires that the basic laws be rewritten to apply to a specific *region* in the neighborhood of our product. In other words, where the fluid particles in the wind go after they leave the beam is of little interest to a beam designer. The user's point of view underlies the need for the control volume analysis of this chapter.


In analyzing a control volume, we convert the system laws to apply to a specific region, which the system may occupy for only an instant. The system passes on, and other systems come along, but no matter. The basic laws are reformulated to apply to this local region called a control volume. All we need to know is the flow field in this region, and often simple assumptions will be accurate enough (such as uniform inlet and/or outlet flows). The flow conditions away from the control volume are then irrelevant. The technique for making such localized analyses is the subject of this chapter.

### Volume and Mass Rate of Flow

All the analyses in this chapter involve evaluation of the volume flow  $Q$  or mass flow  $\dot{m}$  passing through a surface (imaginary) defined in the flow.

Suppose that the surface  $S$  in Fig. 3.1a is a sort of (imaginary) wire mesh through which the fluid passes without resistance. How much volume of fluid passes through  $S$  in unit time? If, typically,  $V$  varies with position, we must integrate over the elemental surface  $dA$  in Fig. 3.1a. Also, typically  $V$  may pass through  $dA$  at an angle  $\theta$  off the normal. Let  $\mathbf{n}$  be defined as the unit vector normal to  $dA$ . Then the amount of fluid swept through  $dA$  in time  $dt$  is the volume of the slanted parallelepiped in Fig. 3.1b:

$$dV = V dt dA \cos \theta = (\mathbf{V} \cdot \mathbf{n}) dA dt$$

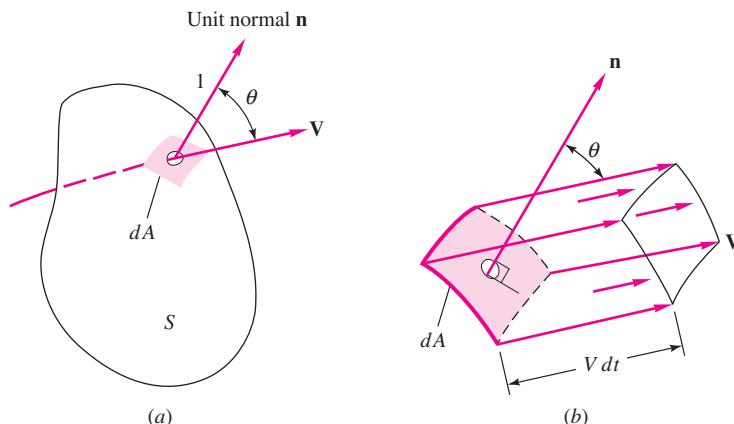

**Fig. 3.1** Volume rate of flow through an arbitrary surface: (a) an elemental area  $dA$  on the surface; (b) the incremental volume swept through  $dA$  equals  $V dt dA \cos \theta$ .

The integral of  $dV/dt$  is the total volume rate of flow  $Q$  through the surface  $S$ :

$$Q = \int_s (\mathbf{V} \cdot \mathbf{n}) dA = \int_s V_n dA \quad (3.7)$$

We could replace  $\mathbf{V} \cdot \mathbf{n}$  by its equivalent,  $V_n$ , the component of  $\mathbf{V}$  normal to  $dA$ , but the use of the dot product allows  $Q$  to have a sign to distinguish between inflow and outflow. By convention throughout this book we consider  $\mathbf{n}$  to be the *outward* normal unit vector. Therefore  $\mathbf{V} \cdot \mathbf{n}$  denotes outflow if it is positive and inflow if negative. This will be an extremely useful housekeeping device when we are computing volume and mass flow in the basic control volume relations.

Volume flow can be multiplied by density to obtain the mass flow  $\dot{m}$ . If density varies over the surface, it must be part of the surface integral:

$$\dot{m} = \int_s \rho(\mathbf{V} \cdot \mathbf{n}) dA = \int_s \rho V_n dA$$


If density and velocity are constant over the surface  $S$ , a simple expression results:

One-dimensional approximation:  $\dot{m} = \rho Q = \rho A V$

### 3.2 The Reynolds Transport Theorem

To convert a system analysis to a control volume analysis, we must convert our mathematics to apply to a specific region rather than to individual masses. This conversion, called the *Reynolds transport theorem*, can be applied to all the basic laws. Examining the basic laws (3.1) to (3.3) and (3.5), we see that they are all concerned with the time derivative of fluid properties  $m$ ,  $\mathbf{V}$ ,  $\mathbf{H}$ , and  $E$ . Therefore what we need is to relate the time derivative of a system property to the rate of change of that property within a certain region.

The desired conversion formula differs slightly according to whether the control volume is fixed, moving, or deformable. Figure 3.2 illustrates these three cases. The fixed control volume in Fig. 3.2a encloses a stationary region of interest to a nozzle designer. The control surface is an abstract concept and does not hinder the flow in any way. It slices through the jet leaving the nozzle, encloses the surrounding atmosphere, and slices through the flange bolts and the fluid within the nozzle. This particular control volume exposes the stresses in the flange bolts,

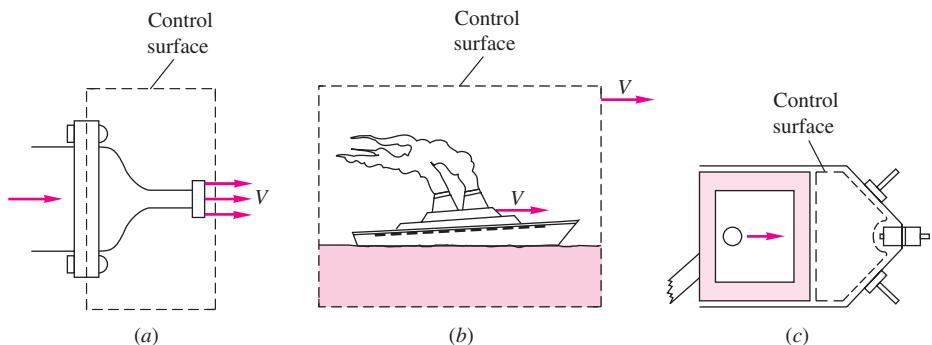

**Fig. 3.2** Fixed, moving, and deformable control volumes:  
(a) fixed control volume for nozzle stress analysis; (b) control volume moving at ship speed for drag force analysis; (c) control volume deforming within cylinder for transient pressure variation analysis.


which contribute to applied forces in the momentum analysis. In this sense the control volume resembles the *free-body* concept, which is applied to systems in solid mechanics analyses.

Figure 3.2b illustrates a moving control volume. Here the ship is of interest, not the ocean, so that the control surface chases the ship at ship speed  $V$ . The control volume is of fixed volume, but the relative motion between water and ship must be considered. If  $V$  is constant, this relative motion is a steady flow pattern, which simplifies the analysis.<sup>3</sup> If  $V$  is variable, the relative motion is unsteady, so that the computed results are time-variable and certain terms enter the momentum analysis to reflect the noninertial (accelerating) frame of reference.

Figure 3.2c shows a deforming control volume. Varying relative motion at the boundaries becomes a factor, and the rate of change of shape of the control volume enters the analysis. We begin by deriving the fixed control volume case, and we consider the other cases as advanced topics. An interesting history of control volume analysis is given by Vincenti [9].

### Arbitrary Fixed Control Volume

Figure 3.3 shows a fixed control volume with an arbitrary flow pattern passing through. There are variable slivers of inflow and outflow of fluid all about the control surface. In general, each differential area  $dA$  of surface will have a different velocity  $\mathbf{V}$  making a different angle  $\theta$  with the local normal to  $dA$ . Some elemental areas will have inflow volume ( $VA \cos \theta$ )<sub>in</sub>  $dt$ , and others will have outflow volume ( $VA \cos \theta$ )<sub>out</sub>  $dt$ ,

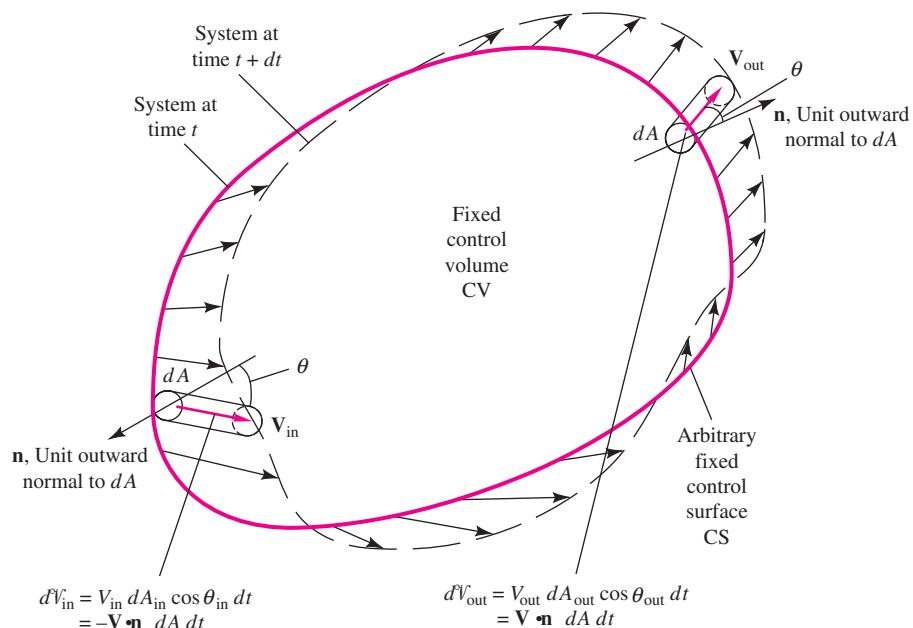

**Fig. 3.3** An arbitrary control volume with an arbitrary flow pattern.

<sup>3</sup>A *wind tunnel* uses a fixed model to simulate flow over a body moving through a fluid. A *tow tank* uses a moving model to simulate the same situation.

as seen in Fig. 3.3. Some surfaces might correspond to streamlines ( $\theta = 90^\circ$ ) or solid walls ( $V = 0$ ) with neither inflow nor outflow.

Let  $B$  be any property of the fluid (energy, momentum, enthalpy, etc.) and let  $\beta = dB/dm$  be the *intensive* value, or the amount of  $B$  per unit mass in any small element of the fluid. The total amount of  $B$  in the control volume (the solid curve in Fig. 3.3) is thus

$$B_{\text{CV}} = \int_{\text{CV}} \beta dm = \int_{\text{CV}} \beta \rho dV \quad \beta = \frac{dB}{dm} \quad (3.8)$$

Examining Fig. 3.3, we see three sources of changes in  $B$  relating to the control volume:

$$\text{A change within the control volume } \frac{d}{dt} \left( \int_{\text{CV}} \beta \rho dV \right)$$

$$\text{Outflow of } \beta \text{ from the control volume } \int_{\text{CS}} \beta \rho V \cos \theta dA_{\text{out}} \quad (3.9)$$

$$\text{Inflow of } \beta \text{ to the control volume } \int_{\text{CS}} \beta \rho V \cos \theta dA_{\text{in}}$$

The notations CV and CS refer to the control volume and control surface, respectively. Note, in Fig. 3.3, that the *system* has moved a bit, gaining the outflow sliver and losing the inflow sliver. In the limit as  $dt \rightarrow 0$ , the instantaneous change of  $B$  in the system is the sum of the change within, plus the outflow, minus the inflow:

$$\boxed{\frac{d}{dt} (B_{\text{syst}}) = \frac{d}{dt} \left( \int_{\text{CV}} \beta \rho dV \right) + \int_{\text{CS}} \beta \rho V \cos \theta dA_{\text{out}} - \int_{\text{CS}} \beta \rho V \cos \theta dA_{\text{in}}} \quad (3.10)$$

This is the *Reynolds transport theorem* for an arbitrary fixed control volume. By letting the property  $B$  be mass, momentum, angular momentum, or energy, we can rewrite all the basic laws in control volume form. Note that all three of the integrals are concerned with the intensive property  $\beta$ . Since the control volume is fixed in space, the elemental volumes  $dV$  do not vary with time, so that the time derivative of the volume integral vanishes unless either  $\beta$  or  $\rho$  varies with time (unsteady flow).

Equation (3.10) expresses the basic formula that a system derivative equals the rate of change of  $B$  within the control volume plus the flux of  $B$  out of the control surface minus the flux of  $B$  into the control surface. The quantity  $B$  (or  $\beta$ ) may be any vector or scalar property of the fluid. Two alternate forms are possible for the flux terms. First we may notice that  $V \cos \theta$  is the component of  $V$  normal to the area element of the control surface. Thus we can write

$$\text{Flux terms} = \int_{\text{CS}} \beta \rho V_n dA_{\text{out}} - \int_{\text{CS}} \beta \rho V_n dA_{\text{in}} = \int_{\text{CS}} \beta dm_{\text{out}} - \int_{\text{CS}} \beta dm_{\text{in}} \quad (3.10a)$$

where  $dm = \rho V_n dA$  is the differential mass flux through the surface. Form (3.10a) helps us visualize what is being calculated.

A second, alternative form offers elegance and compactness as advantages. If  $\mathbf{n}$  is defined as the *outward* normal unit vector everywhere on the control surface, then  $\mathbf{V} \cdot \mathbf{n} = V_n$  for outflow and  $\mathbf{V} \cdot \mathbf{n} = -V_n$  for inflow. Therefore the flux terms can be represented by a single integral involving  $\mathbf{V} \cdot \mathbf{n}$  that accounts for both positive outflow and negative inflow:

$$\text{Flux terms} = \int_{\text{CS}} \beta \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.11)$$

The compact form of the Reynolds transport theorem is thus

$$\frac{d}{dt} (B_{\text{syst}}) = \frac{d}{dt} \left( \int_{\text{CV}} \beta \rho dV \right) + \int_{\text{CS}} \beta \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.12)$$

This is beautiful but only occasionally useful, when the coordinate system is ideally suited to the control volume selected. Otherwise the computations are easier when the flux of  $B$  out is added and the flux of  $B$  in is subtracted, according to (3.10) or (3.11).

The time derivative term can be written in the equivalent form

$$\frac{d}{dt} \left( \int_{\text{CV}} \beta \rho dV \right) = \int_{\text{CV}} \frac{\partial}{\partial t} (\beta \rho) dV \quad (3.13)$$

for the fixed control volume since the volume elements do not vary.

### Control Volume Moving at Constant Velocity

If the control volume is moving uniformly at velocity  $\mathbf{V}_s$ , as in Fig. 3.2b, an observer fixed to the control volume will see a relative velocity  $\mathbf{V}_r$  of fluid crossing the control surface, defined by

$$\mathbf{V}_r = \mathbf{V} - \mathbf{V}_s \quad (3.14)$$

where  $\mathbf{V}$  is the fluid velocity relative to the same coordinate system in which the control volume motion  $\mathbf{V}_s$  is observed. Note that Eq. (3.14) is a vector subtraction. The flux terms will be proportional to  $\mathbf{V}_r$ , but the volume integral of Eq. (3.12) is unchanged because the control volume moves as a fixed shape without deforming. The Reynolds transport theorem for this case of a uniformly moving control volume is

$$\frac{d}{dt} (B_{\text{syst}}) = \frac{d}{dt} \left( \int_{\text{CV}} \beta \rho dV \right) + \int_{\text{CS}} \beta \rho (\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.15)$$

which reduces to Eq. (3.12) if  $\mathbf{V}_s \equiv 0$ .

### Control Volume of Constant Shape but Variable Velocity<sup>4</sup>

If the control volume moves with a velocity  $\mathbf{V}_s(t)$  that retains its shape, then the volume elements do not change with time, but the boundary relative velocity  $\mathbf{V}_r = \mathbf{V}(\mathbf{r}, t) - \mathbf{V}_s(t)$  becomes a somewhat more complicated function. Equation (3.15) is unchanged in form, but the area integral may be more laborious to evaluate.

<sup>4</sup>This section may be omitted without loss of continuity.

### Arbitrarily Moving and Deformable Control Volume<sup>5</sup>


The most general situation is when the control volume is both moving and deforming arbitrarily, as illustrated in Fig. 3.4. The flux of volume across the control surface is again proportional to the relative normal velocity component  $\mathbf{V}_r \cdot \mathbf{n}$ , as in Eq. (3.15). However, since the control surface has a deformation, its velocity  $\mathbf{V}_s = \mathbf{V}_s(\mathbf{r}, t)$ , so that the relative velocity  $\mathbf{V}_r = \mathbf{V}(\mathbf{r}, t) - \mathbf{V}_s(\mathbf{r}, t)$  is or can be a complicated function, even though the flux integral is the same as in Eq. (3.15). Meanwhile, the volume integral in Eq. (3.15) must allow the volume elements to distort with time. Thus the time derivative must be applied *after* integration. For the deforming control volume, then, the transport theorem takes the form

$$\frac{d}{dt}(B_{\text{syst}}) = \frac{d}{dt} \left( \int_{\text{CV}} \beta \rho dV \right) + \int_{\text{CS}} \beta \rho (\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.16)$$

This is the most general case, which we can compare with the equivalent form for a fixed control volume:


$$\frac{d}{dt}(B_{\text{syst}}) = \int_{\text{CV}} \frac{\partial}{\partial t} (\beta \rho) dV + \int_{\text{CS}} \beta \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.17)$$

The moving and deforming control volume, Eq. (3.16), contains only two complications: (1) The time derivative of the first integral on the right must be taken outside, and (2) the second integral involves the *relative* velocity  $\mathbf{V}_r$  between the fluid system and the control surface. These differences and mathematical subtleties are best shown by examples.

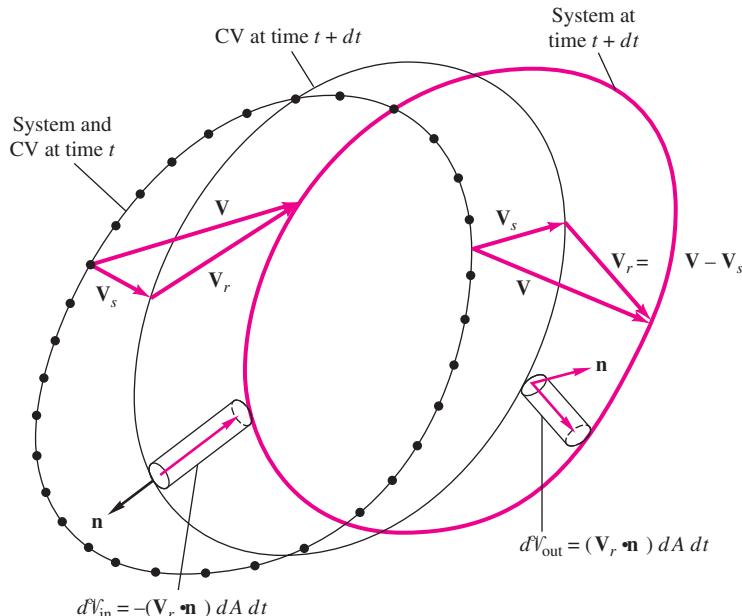

**Fig. 3.4** Relative velocity effects between a system and a control volume when both move and deform. The system boundaries move at velocity  $\mathbf{V}$ , and the control surface moves at velocity  $\mathbf{V}_s$ .

<sup>5</sup>This section may be omitted without loss of continuity.

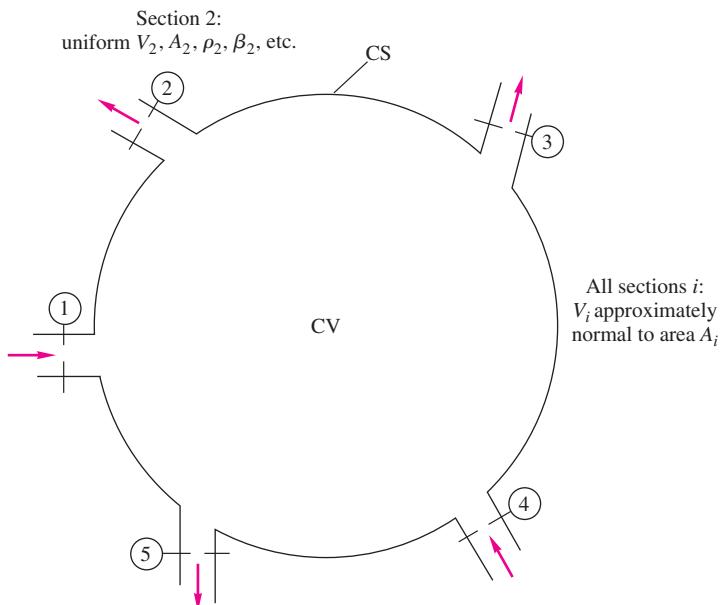

**Fig. 3.5** A control volume with simplified one-dimensional inlets and exits.

### One-Dimensional Flux Term Approximations


In many situations, the flow crosses the boundaries of the control surface only at simplified inlets and exits that are approximately *one-dimensional*; that is, flow properties are nearly uniform over the cross section. For a fixed control volume, the surface integral in Eq. (3.12) reduces to a sum of positive (outlet) and negative (inlet) product terms for each cross section:

$$\frac{d}{dt}(B_{\text{syst}}) = \frac{d}{dt} \left( \int_{\text{CV}} \beta dm \right) + \sum_{\text{outlets}} \beta_i \dot{m}_i |_{\text{out}} - \sum_{\text{inlets}} \beta_i \dot{m}_i |_{\text{in}} \quad \text{where } \dot{m}_i = \rho_i A_i V_i \quad (3.18)$$

To the writer, this is an attractive way to set up a control volume analysis without using the dot product notation. An example of multiple one-dimensional fluxes is shown in Fig. 3.5. There are inlet flows at sections 1 and 4 and outflows at sections 2, 3, and 5. Equation (3.18) becomes

$$\begin{aligned} \frac{d}{dt}(B_{\text{syst}}) = & \frac{d}{dt} \left( \int_{\text{CV}} \beta dm \right) + \beta_2(\rho AV)_2 + \beta_3(\rho AV)_3 + \beta_5(\rho AV)_5 \\ & - \beta_1(\rho AV)_1 - \beta_4(\rho AV)_4 \end{aligned} \quad (3.19)$$

with no contribution from any other portion of the control surface because there is no flow across the boundary.

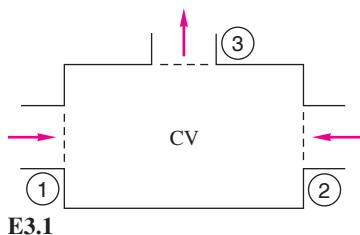

#### EXAMPLE 3.1

A fixed control volume has three one-dimensional boundary sections, as shown in Fig. E3.1. The flow within the control volume is steady. The flow properties at each section are tabulated below. Find the rate of change of energy of the system that occupies the control volume at this instant.

Section	Type	$\rho, \text{ kg/m}^3$	$V, \text{ m/s}$	$A, \text{ m}^2$	$e, \text{ J/kg}$
1	Inlet	800	5.0	2.0	300
2	Inlet	800	8.0	3.0	100
3	Outlet	800	17.0	2.0	150

### Solution

- *System sketch:* Figure E3.1 shows two inlet flows, 1 and 2, and a single outlet flow, 3.
- *Assumptions:* Steady flow, fixed control volume, one-dimensional inlet and exit flows.
- *Approach:* Apply Eq. (3.17) with *energy* as the property, where  $B = E$  and  $\beta = dE/dm = e$ . Use the one-dimensional flux approximation and then insert the data from the table.
- *Solution steps:* Outlet 3 contributes a positive term, and inlets 1 and 2 are negative. The appropriate form of Eq. (3.12) is

$$\left(\frac{dE}{dt}\right)_{\text{syst}} = \frac{d}{dt} \left( \int_{\text{CV}} e \rho dv \right) + e_3 \dot{m}_3 - e_1 \dot{m}_1 - e_2 \dot{m}_2$$

Since the flow is steady, the time-derivative volume integral term is zero. Introducing  $(\rho A V)_i$  as the mass flow grouping, we obtain

$$\left(\frac{dE}{dt}\right)_{\text{syst}} = -e_1 \rho_1 A_1 V_1 - e_2 \rho_2 A_2 V_2 + e_3 \rho_3 A_3 V_3$$

Introducing the numerical values from the table, we have


$$\begin{aligned} \left(\frac{dE}{dt}\right)_{\text{syst}} &= -(300 \text{ J/kg})(800 \text{ kg/m}^3)(2 \text{ m}^2)(5 \text{ m/s}) - 100(800)(3)(8) + 150(800)(2)(17) \\ &= (-2,400,000 - 1,920,000 + 4,080,000) \text{ J/s} \\ &= -240,000 \text{ J/s} = -0.24 \text{ MJ/s} \end{aligned} \quad \text{Ans.}$$

Thus the system is losing energy at the rate of  $0.24 \text{ MJ/s} = 0.24 \text{ MW}$ . Since we have accounted for all fluid energy crossing the boundary, we conclude from the first law that there must be heat loss through the control surface, or the system must be doing work on the environment through some device not shown. Notice that the use of SI units leads to a consistent result in joules per second without any conversion factors. We promised in Chap. 1 that this would be the case.

- *Comments:* This problem involves energy, but suppose we check the balance of mass also. Then  $B = \text{mass } m$ , and  $\beta = dm/dm = \text{unity}$ . Again the volume integral vanishes for steady flow, and Eq. (3.17) reduces to

$$\begin{aligned} \left(\frac{dm}{dt}\right)_{\text{syst}} &= \int_{\text{CS}} \rho (\mathbf{V} \cdot \mathbf{n}) dA = -\rho_1 A_1 V_1 - \rho_2 A_2 V_2 + \rho_3 A_3 V_3 \\ &= -(800 \text{ kg/m}^3)(2 \text{ m}^2)(5 \text{ m/s}) - 800(3)(8) + 800(17)(2) \\ &= (-8000 - 19,200 + 27,200) \text{ kg/s} = 0 \text{ kg/s} \end{aligned}$$

Thus the system mass does not change, which correctly expresses the law of conservation of system mass, Eq. (3.1).

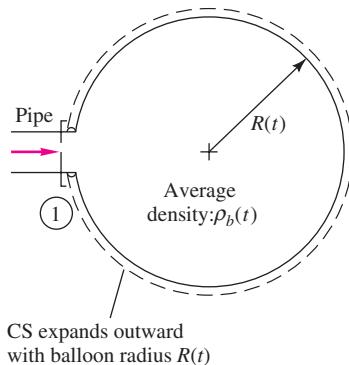

E3.2

**EXAMPLE 3.2**

The balloon in Fig. E3.2 is being filled through section 1, where the area is  $A_1$ , velocity is  $V_1$ , and fluid density is  $\rho_1$ . The average density within the balloon is  $\rho_b(t)$ . Find an expression for the rate of change of system mass within the balloon at this instant.

**Solution**

- System sketch:** Figure E3.2 shows one inlet, no exits. The control volume and system expand together, hence the relative velocity  $V_r = 0$  on the balloon surface.
- Assumptions:** Unsteady flow (the control volume mass increases), deformable control surface, one-dimensional inlet conditions.
- Approach:** Apply Eq. (3.16) with  $V_r = 0$  on the balloon surface and  $V_r = V_1$  at the inlet.
- Solution steps:** The property being studied is *mass*,  $B = m$  and  $\beta = dm/dm = \text{unity}$ . Apply Eq. (3.16). The volume integral is evaluated based on average density  $\rho_b$ , and the surface integral term is negative (for an inlet):

$$\left(\frac{dm}{dt}\right)_{\text{syst}} = \frac{d}{dt} \left( \int_{\text{CV}} \rho dV \right) + \int_{\text{CS}} \rho (\mathbf{V}_r \cdot \mathbf{n}) dA = \frac{d}{dt} \left( \rho_b \frac{4\pi}{3} R^3 \right) - \rho_1 A_1 V_1 \quad \text{Ans.}$$

- Comments:** The relation given is the answer to the question that was asked. Actually, by the conservation law for mass, Eq. (3.1),  $(dm/dt)_{\text{syst}} = 0$ , and the answer could be rewritten as

$$\frac{d}{dt} (\rho_b R^3) = \frac{3}{4\pi} \rho_1 A_1 V_1$$

This is a first-order ordinary differential equation relating gas density and balloon radius. It could form part of an engineering analysis of balloon inflation. It cannot be solved without further use of mechanics and thermodynamics to relate the four unknowns  $\rho_b$ ,  $\rho_1$ ,  $V_1$ , and  $R$ . The pressure and temperature and the elastic properties of the balloon would also have to be brought into the analysis.

For advanced study, many more details of the analysis of deformable control volumes can be found in Hansen [4] and Potter et al. [5].

**3.3 Conservation of Mass**

The Reynolds transport theorem, Eq. (3.16) or (3.17), establishes a relation between system rates of change and control volume surface and volume integrals. But system derivatives are related to the basic laws of mechanics, Eqs. (3.1) to (3.5). Eliminating system derivatives between the two gives the control volume, or *integral*, forms of the laws of mechanics of fluids. The dummy variable  $B$  becomes, respectively, mass, linear momentum, angular momentum, and energy.

For conservation of mass, as discussed in Examples 3.1 and 3.2,  $B = m$  and  $\beta = dm/dm = 1$ . Equation (3.1) becomes

$$\left(\frac{dm}{dt}\right)_{\text{syst}} = 0 = \frac{d}{dt} \left( \int_{\text{CV}} \rho dV \right) + \int_{\text{CS}} \rho (\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.20)$$

This is the integral mass conservation law for a deformable control volume. For a fixed control volume, we have

$$\int_{CV} \frac{\partial \rho}{\partial t} dV + \int_{CS} \rho(\mathbf{V} \cdot \mathbf{n}) dA = 0 \quad (3.21)$$

If the control volume has only a number of one-dimensional inlets and outlets, we can write

$$\int_{CV} \frac{\partial \rho}{\partial t} dV + \sum_i (\rho_i A_i V_i)_{out} - \sum_i (\rho_i A_i V_i)_{in} = 0 \quad (3.22)$$

Other special cases occur. Suppose that the flow within the control volume is steady; then  $\partial \rho / \partial t \equiv 0$ , and Eq. (3.21) reduces to

$$\int_{CS} \rho(\mathbf{V} \cdot \mathbf{n}) dA = 0 \quad (3.23)$$

This states that in steady flow the mass flows entering and leaving the control volume must balance exactly.<sup>6</sup> If, further, the inlets and outlets are one-dimensional, we have for steady flow

$$\sum_i (\rho_i A_i V_i)_{in} = \sum_i (\rho_i A_i V_i)_{out} \quad (3.24)$$

This simple approximation is widely used in engineering analyses. For example, referring to Fig. 3.5, we see that if the flow in that control volume is steady, the three outlet mass fluxes balance the two inlets:

$$\begin{aligned} \text{Outflow} &= \text{inflow} \\ \rho_2 A_2 V_2 + \rho_3 A_3 V_3 + \rho_5 A_5 V_5 &= \rho_1 A_1 V_1 + \rho_4 A_4 V_4 \end{aligned} \quad (3.25)$$

The quantity  $\rho AV$  is called the *mass flow*  $\dot{m}$  passing through the one-dimensional cross section and has consistent units of kilograms per second (or slugs per second) for SI (or BG) units. Equation (3.25) can be rewritten in the short form

$$\dot{m}_2 + \dot{m}_3 + \dot{m}_5 = \dot{m}_1 + \dot{m}_4 \quad (3.26)$$

and, in general, the steady-flow-mass-conservation relation (3.23) can be written as

$$\sum_i (\dot{m}_i)_{out} = \sum_i (\dot{m}_i)_{in} \quad (3.27)$$

If the inlets and outlets are not one-dimensional, one has to compute  $\dot{m}$  by integration over the section

$$\dot{m}_{cs} = \int_{CS} \rho(\mathbf{V} \cdot \mathbf{n}) dA \quad (3.28)$$

where “cs” stands for cross section. An illustration of this is given in Example 3.4.

<sup>6</sup>Throughout this section we are neglecting *sources* or *sinks* of mass that might be embedded in the control volume. Equations (3.20) and (3.21) can readily be modified to add source and sink terms, but this is rarely necessary.

## Incompressible Flow

Still further simplification is possible if the fluid is incompressible, which we may define as having density variations that are negligible in the mass conservation requirement.<sup>7</sup> As we saw in Chap. 1, all liquids are nearly incompressible, and gas flows can *behave* as if they were incompressible, particularly if the gas velocity is less than about 30 percent of the speed of sound of the gas.

Again consider the fixed control volume. For nearly incompressible flow, the term  $\partial\rho/\partial t$  is small, so the time-derivative volume integral in Eq. (3.21) can be neglected. The constant density can then be removed from the surface integral for a nice simplification:

$$\frac{d}{dt} \left( \int_{CV} \frac{\partial \rho}{\partial t} dV \right) + \int_{CS} \rho (\mathbf{V} \cdot \mathbf{n}) dA = 0 = \int_{CS} \rho (\mathbf{V} \cdot \mathbf{n}) dA = \rho \int_{CS} (\mathbf{V} \cdot \mathbf{n}) dA$$

or 
$$\int_{CS} (\mathbf{V} \cdot \mathbf{n}) dA = 0 \quad (3.29)$$

If the inlets and outlets are one-dimensional, we have

$$\sum_i (V_i A_i)_{out} = \sum_i (V_i A_i)_{in} \quad (3.30)$$

or 
$$\sum Q_{out} = \sum Q_{in}$$

where  $Q_i = V_i A_i$  is called the *volume flow* passing through the given cross section.

Again, if consistent units are used,  $Q = VA$  will have units of cubic meters per second (SI) or cubic feet per second (BG). If the cross section is not one-dimensional, we have to integrate

$$Q_{CS} = \int_{CS} (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.31)$$

Equation (3.31) allows us to define an *average velocity*  $V_{av}$  that, when multiplied by the section area, gives the correct volume flow:

$$V_{av} = \frac{Q}{A} = \frac{1}{A} \int_{CS} (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.32)$$

This could be called the *volume-average velocity*. If the density varies across the section, we can define an average density in the same manner:


$$\rho_{av} = \frac{1}{A} \int_{CS} \rho dA \quad (3.33)$$

But the mass flow would contain the product of density and velocity, and the average product  $(\rho V)_{av}$  would in general have a different value from the product of the averages:

$$(\rho V)_{av} = \frac{1}{A} \int_{CS} \rho (\mathbf{V} \cdot \mathbf{n}) dA \approx \rho_{av} V_{av} \quad (3.34)$$

<sup>7</sup>Be warned that there is subjectivity in specifying incompressibility. Oceanographers consider a 0.1 percent density variation very significant, while aerodynamicists may neglect density variations in highly compressible, even hypersonic, gas flows. Your task is to justify the incompressible approximation when you make it.

We illustrate average velocity in Example 3.4. We can often neglect the difference or, if necessary, use a correction factor between mass average and volume average.

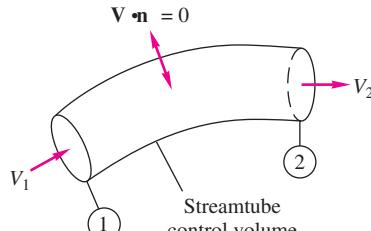

E3.3

### EXAMPLE 3.3

Write the conservation-of-mass relation for steady flow through a streamtube (flow everywhere parallel to the walls) with a single one-dimensional inlet 1 and exit 2 (Fig. E3.3).

#### Solution


For steady flow Eq. (3.24) applies with the single inlet and exit:

$$\dot{m} = \rho_1 A_1 V_1 = \rho_2 A_2 V_2 = \text{const}$$

Thus, in a streamtube in steady flow, the mass flow is constant across every section of the tube. If the density is constant, then

$$Q = A_1 V_1 = A_2 V_2 = \text{const} \quad \text{or} \quad V_2 = \frac{A_1}{A_2} V_1$$

The volume flow is constant in the tube in steady incompressible flow, and the velocity increases as the section area decreases. This relation was derived by Leonardo da Vinci in 1500.

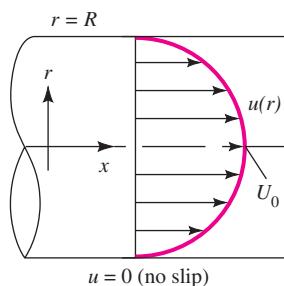

E3.4

### EXAMPLE 3.4

For steady viscous flow through a circular tube (Fig. E3.4), the axial velocity profile is given approximately by

$$u = U_0 \left(1 - \frac{r}{R}\right)^m$$


so that  $u$  varies from zero at the wall ( $r = R$ ), or no slip, up to a maximum  $u = U_0$  at the centerline  $r = 0$ . For highly viscous (laminar) flow  $m \approx \frac{1}{2}$ , while for less viscous (turbulent) flow  $m \approx \frac{1}{7}$ . Compute the average velocity if the density is constant.

#### Solution

The average velocity is defined by Eq. (3.32). Here  $\mathbf{V} = \mathbf{i}u$  and  $\mathbf{n} = \mathbf{i}$ , and thus  $\mathbf{V} \cdot \mathbf{n} = u$ . Since the flow is symmetric, the differential area can be taken as a circular strip  $dA = 2\pi r dr$ . Equation (3.32) becomes

$$V_{av} = \frac{1}{A} \int u dA = \frac{1}{\pi R^2} \int_0^R U_0 \left(1 - \frac{r}{R}\right)^m 2\pi r dr$$

$$\text{or} \quad V_{av} = U_0 \frac{2}{(1+m)(2+m)} \quad \text{Ans.}$$

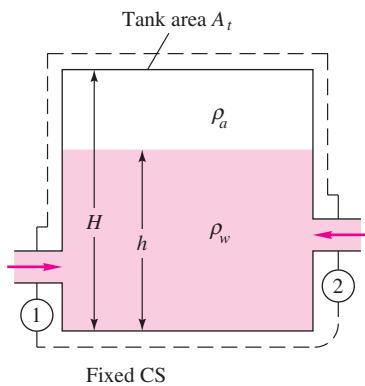

E3.5

**Part (a)**

For the laminar flow approximation,  $m \approx \frac{1}{2}$  and  $V_{av} \approx 0.53U_0$ . (The exact laminar theory in Chap. 6 gives  $V_{av} = 0.50U_0$ .) For turbulent flow,  $m \approx \frac{1}{7}$  and  $V_{av} \approx 0.82U_0$ . (There is no exact turbulent theory, and so we accept this approximation.) The turbulent velocity profile is more uniform across the section, and thus the average velocity is only slightly less than maximum.

**EXAMPLE 3.5**

The tank in Fig. E3.5 is being filled with water by two one-dimensional inlets. Air is trapped at the top of the tank. The water height is  $h$ . (a) Find an expression for the change in water height  $dh/dt$ . (b) Compute  $dh/dt$  if  $D_1 = 1$  in,  $D_2 = 3$  in,  $V_1 = 3$  ft/s,  $V_2 = 2$  ft/s, and  $A_t = 2$  ft<sup>2</sup>, assuming water at 20°C.

**Solution**

A suggested control volume encircles the tank and cuts through the two inlets. The flow within is unsteady, and Eq. (3.22) applies with no outlets and two inlets:

$$\frac{d}{dt} \left( \int_{CV} \rho dV \right) - \rho_1 A_1 V_1 - \rho_2 A_2 V_2 = 0 \quad (1)$$

Now if  $A_t$  is the tank cross-sectional area, the unsteady term can be evaluated as follows:

$$\frac{d}{dt} \left( \int_{CV} \rho dV \right) = \frac{d}{dt} (\rho_w A_t h) + \frac{d}{dt} [\rho_a A_t (H - h)] = \rho_w A_t \frac{dh}{dt} \quad (2)$$

The  $\rho_a$  term vanishes because it is the rate of change of air mass and is zero because the air is trapped at the top. Substituting (2) into (1), we find the change of water height

$$\frac{dh}{dt} = \frac{\rho_1 A_1 V_1 + \rho_2 A_2 V_2}{\rho_w A_t} \quad \text{Ans. (a)}$$

For water,  $\rho_1 = \rho_2 = \rho_w$ , and this result reduces to

$$\frac{dh}{dt} = \frac{A_1 V_1 + A_2 V_2}{A_t} = \frac{Q_1 + Q_2}{A_t} \quad (3)$$

**Part (b)**

The two inlet volume flows are

$$Q_1 = A_1 V_1 = \frac{1}{4}\pi(\frac{1}{12}\text{ ft})^2(3 \text{ ft/s}) = 0.016 \text{ ft}^3/\text{s}$$

$$Q_2 = A_2 V_2 = \frac{1}{4}\pi(\frac{3}{12}\text{ ft})^2(2 \text{ ft/s}) = 0.098 \text{ ft}^3/\text{s}$$

Then, from Eq. (3),

$$\frac{dh}{dt} = \frac{(0.016 + 0.098) \text{ ft}^3/\text{s}}{2 \text{ ft}^2} = 0.057 \text{ ft/s} \quad \text{Ans. (b)}$$

*Suggestion:* Repeat this problem with the top of the tank open.

An illustration of a mass balance with a deforming control volume has already been given in Example 3.2.

The control volume mass relations, Eq. (3.20) or (3.21), are fundamental to all fluid flow analyses. They involve only velocity and density. Vector directions are of no consequence except to determine the normal velocity at the surface and hence whether the flow is *in* or *out*. Although your specific analysis may concern forces or moments or energy, you must always make sure that mass is balanced as part of the analysis; otherwise the results will be unrealistic and probably incorrect. We shall see in the examples that follow how mass conservation is constantly checked in performing an analysis of other fluid properties.

### 3.4 The Linear Momentum Equation

In Newton's second law, Eq. (3.2), the property being differentiated is the linear momentum  $m\mathbf{V}$ . Therefore our dummy variable is  $\mathbf{B} = m\mathbf{V}$  and  $\beta = d\mathbf{B}/dm = \mathbf{V}$ , and application of the Reynolds transport theorem gives the linear momentum relation for a deformable control volume:

$$\frac{d}{dt}(m\mathbf{V})_{\text{syst}} = \sum \mathbf{F} = \frac{d}{dt} \left( \int_{\text{CV}} \mathbf{V}\rho dV \right) + \int_{\text{CS}} \mathbf{V}\rho(\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.35)$$

The following points concerning this relation should be strongly emphasized:

1. The term  $\mathbf{V}$  is the fluid velocity relative to an *inertial* (nonaccelerating) coordinate system; otherwise Newton's second law must be modified to include noninertial relative acceleration terms (see the end of this section).
2. The term  $\sum \mathbf{F}$  is the *vector* sum of all forces acting on the system material considered as a free body; that is, it includes surface forces on all fluids and solids cut by the control surface plus all body forces (gravity and electromagnetic) acting on the masses within the control volume.
3. The entire equation is a vector relation; both the integrals are vectors due to the term  $\mathbf{V}$  in the integrands. The equation thus has three components. If we want only, say, the  $x$  component, the equation reduces to

$$\sum F_x = \frac{d}{dt} \left( \int_{\text{CV}} up dV \right) + \int_{\text{CS}} up(\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.36)$$

and similarly,  $\sum F_y$  and  $\sum F_z$  would involve  $v$  and  $w$ , respectively. Failure to account for the vector nature of the linear momentum relation (3.35) is probably the greatest source of student error in control volume analyses.

For a fixed control volume, the relative velocity  $\mathbf{V}_r \equiv \mathbf{V}$ , and Eq. (3.35) becomes

$$\sum \mathbf{F} = \frac{d}{dt} \left( \int_{\text{CV}} \mathbf{V}\rho dV \right) + \int_{\text{CS}} \mathbf{V}\rho(\mathbf{V} \cdot \mathbf{n}) dA \quad (3.37)$$

Again we stress that this is a vector relation and that  $\mathbf{V}$  must be an inertial-frame velocity. Most of the momentum analyses in this text are concerned with Eq. (3.37).

### One-Dimensional Momentum Flux

By analogy with the term *mass flux* used in Eq. (3.28), the surface integral in Eq. (3.37) is called the *momentum flux term*. If we denote momentum by  $\mathbf{M}$ , then

$$\dot{\mathbf{M}}_{\text{CS}} = \int_{\text{sec}} \mathbf{V} \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.38)$$

Because of the dot product, the result will be negative for inlet momentum flux and positive for outlet flux. If the cross section is one-dimensional,  $\mathbf{V}$  and  $\rho$  are uniform over the area and the integrated result is

$$\dot{\mathbf{M}}_{\text{seci}} = \mathbf{V}_i (\rho_i V_{ni} A_i) = \dot{m}_i \mathbf{V}_i \quad (3.39)$$

for outlet flux and  $-\dot{m}_i \mathbf{V}_i$  for inlet flux. Thus if the control volume has only one-dimensional inlets and outlets, Eq. (3.37) reduces to

$$\sum \mathbf{F} = \frac{d}{dt} \left( \int_{\text{CV}} \mathbf{V} \rho dV \right) + \sum (\dot{m}_i \mathbf{V}_i)_{\text{out}} - \sum (\dot{m}_i \mathbf{V}_i)_{\text{in}} \quad (3.40)$$

This is a commonly used approximation in engineering analyses. It is crucial to realize that we are dealing with vector sums. Equation (3.40) states that the net vector force on a fixed control volume equals the rate of change of vector momentum within the control volume plus the vector sum of outlet momentum fluxes minus the vector sum of inlet fluxes.

### Net Pressure Force on a Closed Control Surface


Generally speaking, the surface forces on a control volume are due to (1) forces exposed by cutting through solid bodies that protrude through the surface and (2) forces due to pressure and viscous stresses of the surrounding fluid. The computation of pressure force is relatively simple, as shown in Fig. 3.6. Recall from Chap. 2 that

**Fig. 3.6** Pressure force computation by subtracting a uniform distribution: (a) uniform pressure,

$$\mathbf{F} = -p_a \int \mathbf{n} dA \equiv 0;$$

(b) nonuniform pressure,

$$\mathbf{F} = - \int (p - p_a) \mathbf{n} dA.$$

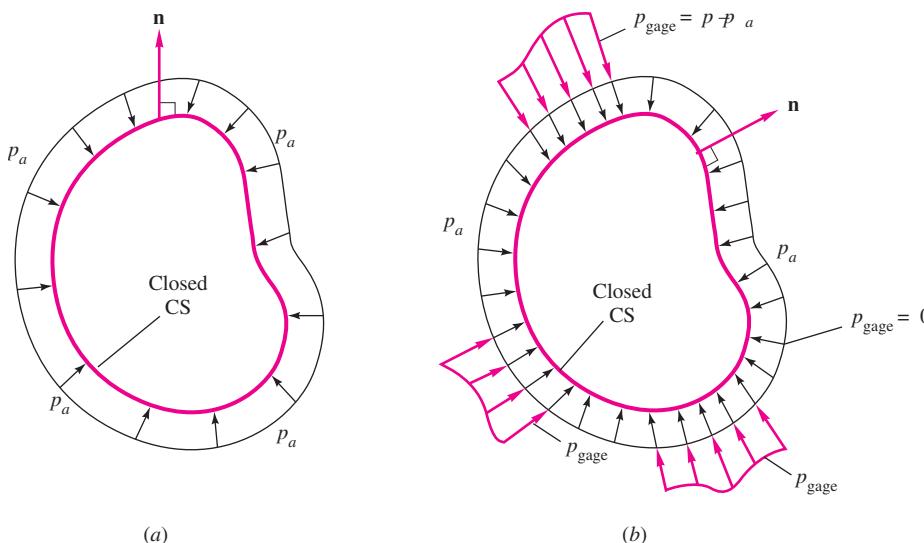

the external pressure force on a surface is normal to the surface and *inward*. Since the unit vector  $\mathbf{n}$  is defined as *outward*, one way to write the pressure force is

$$\mathbf{F}_{\text{press}} = \int_{\text{CS}} p(-\mathbf{n}) dA \quad (3.41)$$

Now if the pressure has a uniform value  $p_a$  all around the surface, as in Fig. 3.7a, the net pressure force is zero:

$$\mathbf{F}_{\text{UP}} = \int p_a(-\mathbf{n}) dA = -p_a \int \mathbf{n} dA \equiv 0 \quad (3.42)$$

where the subscript UP stands for uniform pressure. This result is *independent of the shape of the surface*<sup>8</sup> as long as the surface is closed and all our control volumes are closed. Thus a seemingly complicated pressure force problem can be simplified by subtracting any convenient uniform pressure  $p_a$  and working only with the pieces of gage pressure that remain, as illustrated in Fig. 3.6b. So Eq. (3.41) is entirely equivalent to

$$\mathbf{F}_{\text{press}} = \int_{\text{CS}} (p - p_a)(-\mathbf{n}) dA = \int_{\text{CS}} p_{\text{gage}}(-\mathbf{n}) dA$$


This trick can mean quite a savings in computation.

### EXAMPLE 3.6

A control volume of a nozzle section has surface pressures of  $40 \text{ lbf/in}^2$  absolute at section 1 and atmospheric pressure of  $15 \text{ lbf/in}^2$  absolute at section 2 and on the external rounded part of the nozzle, as in Fig. E3.6a. Compute the net pressure force if  $D_1 = 3 \text{ in}$  and  $D_2 = 1 \text{ in}$ .

#### Solution

- **System sketch:** The control volume is the *outside* of the nozzle, plus the cut sections (1) and (2). There would also be *stresses* in the cut nozzle wall at section 1, which we are neglecting here. The pressures acting on the control volume are shown in Fig. E3.6a. Figure E3.6b shows the pressures after  $15 \text{ lbf/in}^2$  has been subtracted from all sides. Here we compute the net pressure force only.

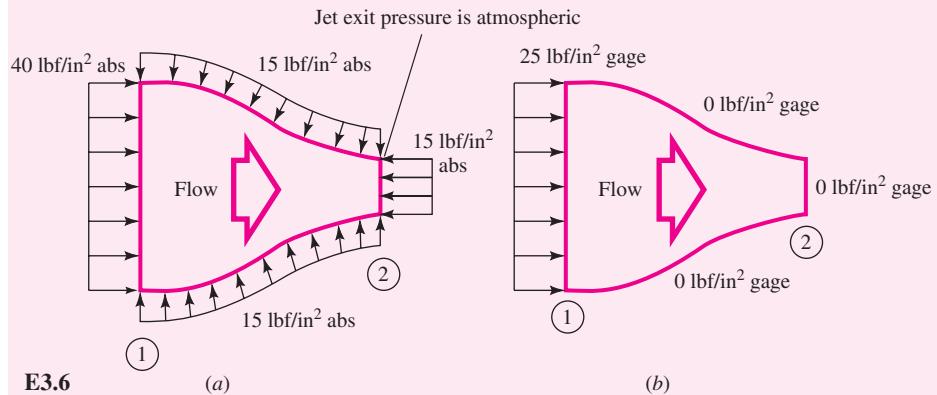

<sup>8</sup>Can you prove this? It is a consequence of Gauss's theorem from vector analysis.

- **Assumptions:** Known pressures, as shown, on all surfaces of the control volume.
- **Approach:** Since three surfaces have  $p = 15 \text{ lbf/in}^2$ , subtract this amount everywhere so that these three sides reduce to zero “gage pressure” for convenience. This is allowable because of Eq. (3.42).
- **Solution steps:** For the modified pressure distribution, Fig. E3.6b, only section 1 is needed:

$$\mathbf{F}_{\text{press}} = p_{\text{gage},1} (-\mathbf{n})_1 A_1 = \left( 25 \frac{\text{lbf}}{\text{in}^2} \right) \left[ -(-\mathbf{i}) \right] \left[ \frac{\pi}{4} (3 \text{ in})^2 \right] = 177\mathbf{i} \text{ lbf} \quad \text{Ans.}$$

- **Comments:** This “uniform subtraction” artifice, which is entirely legal, has greatly simplified the calculation of pressure force. *Note:* We were a bit too informal when multiplying pressure in  $\text{lbf/in}^2$  times area in square inches. We achieved lbf correctly, but it would be better practice to convert all data to standard BG units. *Further note:* In addition to  $\mathbf{F}_{\text{press}}$ , there are other forces involved in this flow, due to tension stresses in the cut nozzle wall and the fluid weight inside the control volume.


### Pressure Condition at a Jet Exit

Figure E3.6 illustrates a pressure boundary condition commonly used for jet exit flow problems. When a fluid flow leaves a confined internal duct and exits into an ambient “atmosphere,” its free surface is exposed to that atmosphere. Therefore the jet itself will essentially be at atmospheric pressure also. This condition was used at section 2 in Fig. E3.6.

Only two effects could maintain a pressure difference between the atmosphere and a free exit jet. The first is surface tension, Eq. (1.31), which is usually negligible. The second effect is a *supersonic* jet, which can separate itself from an atmosphere with expansion or compression waves (Chap. 9). For the majority of applications, therefore, we shall set the pressure in an exit jet as atmospheric.

### EXAMPLE 3.7

A fixed control volume of a streamtube in steady flow has a uniform inlet flow ( $\rho_1, A_1, V_1$ ) and a uniform exit flow ( $\rho_2, A_2, V_2$ ), as shown in Fig. 3.7. Find an expression for the net force on the control volume.

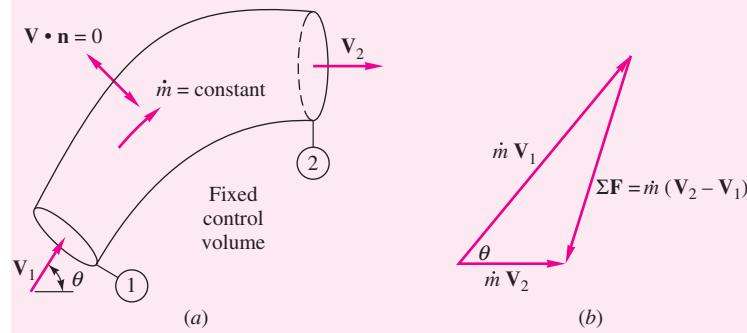

**Fig. 3.7** Net force on a one-dimensional streamtube in steady flow: (a) streamtube in steady flow; (b) vector diagram for computing net force.

### Solution

Equation (3.40) applies with one inlet and exit:

$$\sum \mathbf{F} = \dot{m}_2 \mathbf{V}_2 - \dot{m}_1 \mathbf{V}_1 = (\rho_2 A_2 V_2) \mathbf{V}_2 - (\rho_1 A_1 V_1) \mathbf{V}_1$$

The volume integral term vanishes for steady flow, but from conservation of mass in Example 3.3 we saw that

$$\dot{m}_1 = \dot{m}_2 = \dot{m} = \text{const}$$


Therefore a simple form for the desired result is

$$\sum \mathbf{F} = \dot{m}(\mathbf{V}_2 - \mathbf{V}_1) \quad \text{Ans.}$$

This is a *vector* relation and is sketched in Fig. 3.7b. The term  $\sum \mathbf{F}$  represents the net force acting on the control volume due to all causes; it is needed to balance the change in momentum of the fluid as it turns and decelerates while passing through the control volume.

### EXAMPLE 3.8

As shown in Fig. 3.8a, a fixed vane turns a water jet of area  $A$  through an angle  $\theta$  without changing its velocity magnitude. The flow is steady, pressure is  $p_a$  everywhere, and friction on the vane is negligible. (a) Find the components  $F_x$  and  $F_y$  of the applied vane force. (b) Find expressions for the force magnitude  $F$  and the angle  $\phi$  between  $F$  and the horizontal; plot them versus  $\theta$ .

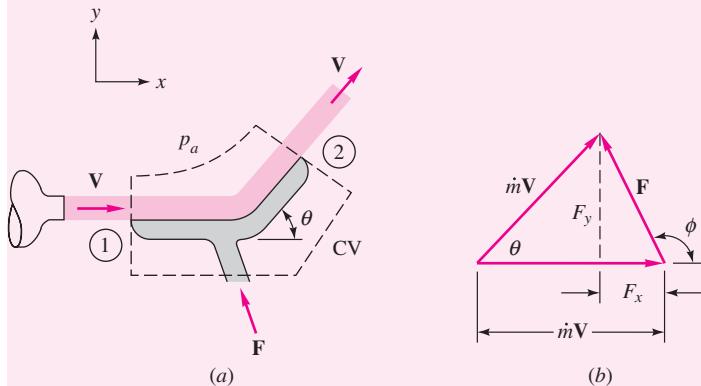

**Fig. 3.8** Net applied force on a fixed jet-turning vane: (a) geometry of the vane turning the water jet; (b) vector diagram for the net force.

### Solution

#### Part (a)

The control volume selected in Fig. 3.8a cuts through the inlet and exit of the jet and through the vane support, exposing the vane force  $\mathbf{F}$ . Since there is no cut along the vane-jet interface, vane friction is internally self-canceling. The pressure force is zero in the uniform atmosphere. We neglect the weight of fluid and the vane weight within the control volume. Then Eq. (3.40) reduces to

$$\mathbf{F}_{\text{vane}} = \dot{m}_2 \mathbf{V}_2 - \dot{m}_1 \mathbf{V}_1$$

But the magnitude  $V_1 = V_2 = V$  as given, and conservation of mass for the streamtube requires  $\dot{m}_1 = \dot{m}_2 = \dot{m} = \rho A V$ . The vector diagram for force and momentum change becomes an isosceles triangle with legs  $\dot{m}V$  and base  $\mathbf{F}$ , as in Fig. 3.8b. We can readily find the force components from this diagram:


$$F_x = \dot{m}V(\cos \theta - 1) \quad F_y = \dot{m}V \sin \theta \quad \text{Ans. (a)}$$

where  $\dot{m}V = \rho AV^2$  for this case. This is the desired result.

### Part (b)

The force magnitude is obtained from part (a):

$$F = (F_x^2 + F_y^2)^{1/2} = \dot{m}V[\sin^2 \theta + (\cos \theta - 1)^2]^{1/2} = 2\dot{m}V \sin \frac{\theta}{2} \quad \text{Ans. (b)}$$

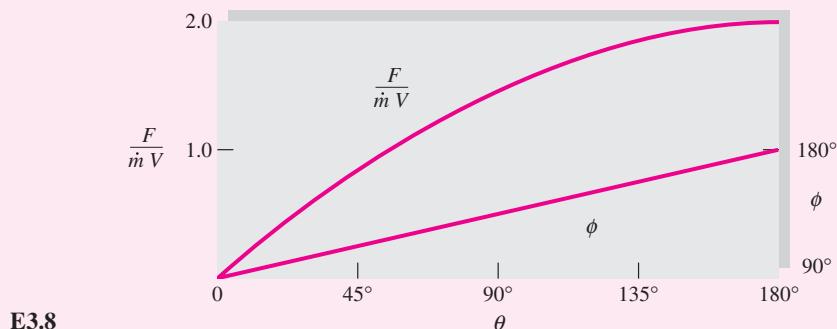

From the geometry of Fig. 3.8b we obtain

$$\phi = 180^\circ - \tan^{-1} \frac{F_y}{F_x} = 90^\circ + \frac{\theta}{2} \quad \text{Ans. (b)}$$

These can be plotted versus  $\theta$  as shown in Fig. E3.8. Two special cases are of interest. First, the maximum force occurs at  $\theta = 180^\circ$  that is, when the jet is turned around and thrown back in the opposite direction with its momentum completely reversed. This force is  $2\dot{m}V$  and acts to the left; that is,  $\phi = 180^\circ$ . Second, at very small turning angles ( $\theta < 10^\circ$ ) we obtain approximately

$$F \approx \dot{m}V\theta \quad \phi \approx 90^\circ$$

The force is linearly proportional to the turning angle and acts nearly normal to the jet. This is the principle of a lifting vane, or airfoil, which causes a slight change in the oncoming flow direction and thereby creates a lift force normal to the basic flow.

### EXAMPLE 3.9

A water jet of velocity  $V_j$  impinges normal to a flat plate that moves to the right at velocity  $V_c$ , as shown in Fig. 3.9a. Find the force required to keep the plate moving at constant velocity if the jet density is  $1000 \text{ kg/m}^3$ , the jet area is  $3 \text{ cm}^2$ , and  $V_j$  and  $V_c$  are 20 and 15 m/s, respectively. Neglect the weight of the jet and plate, and assume steady flow with respect to the moving plate with the jet splitting into an equal upward and downward half-jet.

### Solution

The suggested control volume in Fig. 3.9a cuts through the plate support to expose the desired forces  $R_x$  and  $R_y$ . This control volume moves at speed  $V_c$  and thus is fixed relative to the plate, as in Fig. 3.9b. We must satisfy both mass and momentum conservation for the assumed steady flow pattern in Fig. 3.9b. There are two outlets and one inlet, and Eq. (3.30) applies for mass conservation:

$$\dot{m}_{\text{out}} = \dot{m}_{\text{in}}$$

$$\text{or} \quad \rho_1 A_1 V_1 + \rho_2 A_2 V_2 = \rho_j A_j (V_j - V_c) \quad (1)$$

We assume that the water is incompressible  $\rho_1 = \rho_2 = \rho_j$ , and we are given that  $A_1 = A_2 = \frac{1}{2}A_j$ . Therefore Eq. (1) reduces to

$$V_1 + V_2 = 2(V_j - V_c) \quad (2)$$

Strictly speaking, this is all that mass conservation tells us. However, from the symmetry of the jet deflection and the neglect of gravity on the fluid trajectory, we conclude that the two velocities  $V_1$  and  $V_2$  must be equal, and hence Eq. (2) becomes

$$V_1 = V_2 = V_j - V_c \quad (3)$$

This equality can also be predicted by Bernoulli's equation in Sect 3.5. For the given numerical values, we have


$$V_1 = V_2 = 20 - 15 = 5 \text{ m/s}$$

Now we can compute  $R_x$  and  $R_y$  from the two components of momentum conservation. Equation (3.40) applies with the unsteady term zero:

$$\sum F_x = R_x = \dot{m}_1 u_1 + \dot{m}_2 u_2 - \dot{m}_j u_j \quad (4)$$

where from the mass analysis,  $\dot{m}_1 = \dot{m}_2 = \frac{1}{2}\dot{m}_j = \frac{1}{2}\rho_j A_j (V_j - V_c)$ . Now check the flow directions at each section:  $u_1 = u_2 = 0$ , and  $u_j = V_j - V_c = 5 \text{ m/s}$ . Thus Eq. (4) becomes

$$R_x = -\dot{m}_j u_j = -[\rho_j A_j (V_j - V_c)](V_j - V_c) \quad (5)$$

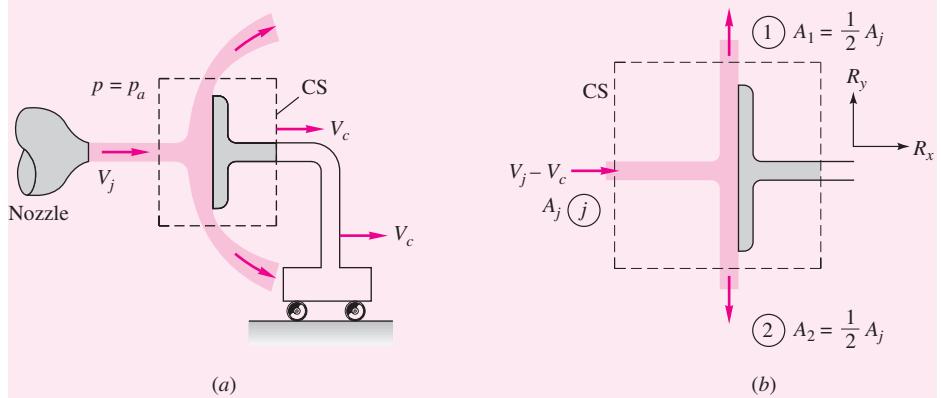

**Fig. 3.9** Force on a plate moving at constant velocity: (a) jet striking a moving plate normally; (b) control volume fixed relative to the plate.

For the given numerical values we have

$$R_x = -(1000 \text{ kg/m}^3)(0.0003 \text{ m}^2)(5 \text{ m/s})^2 = -7.5 \text{ (kg} \cdot \text{m)/s}^2 = -7.5 \text{ N} \quad \text{Ans.}$$

This acts to the *left*; that is, it requires a restraining force to keep the plate from accelerating to the right due to the continuous impact of the jet. The vertical force is

$$F_y = R_y = \dot{m}_1 v_1 + \dot{m}_2 v_2 - \dot{m}_j v_j$$


Check directions again:  $v_1 = V_1$ ,  $v_2 = -V_2$ ,  $v_j = 0$ . Thus

$$R_y = \dot{m}_1(V_1) + \dot{m}_2(-V_2) = \frac{1}{2}\dot{m}_j(V_1 - V_2) \quad (6)$$

But since we found earlier that  $V_1 = V_2$ , this means that  $R_y = 0$ , as we could expect from the symmetry of the jet deflection.<sup>9</sup> Two other results are of interest. First, the relative velocity at section 1 was found to be 5 m/s up, from Eq. (3). If we convert this to absolute motion by adding on the control-volume speed  $V_c = 15$  m/s to the right, we find that the absolute velocity  $V_1 = 15\mathbf{i} + 5\mathbf{j}$  m/s, or 15.8 m/s at an angle of 18.4° upward, as indicated in Fig. 3.9a. Thus the absolute jet speed changes after hitting the plate. Second, the computed force  $R_x$  does not change if we assume the jet deflects in all radial directions along the plate surface rather than just up and down. Since the plate is normal to the  $x$  axis, there would still be zero outlet  $x$ -momentum flux when Eq. (4) was rewritten for a radial deflection condition.

### EXAMPLE 3.10


The sluice gate in Fig. E3.10a controls flow in open channels. At sections 1 and 2, the flow is uniform and the pressure is hydrostatic. Neglecting bottom friction and atmospheric pressure, derive a formula for the horizontal force  $F$  required to hold the gate. Express your final formula in terms of the inlet velocity  $V_1$ , eliminating  $V_2$ .

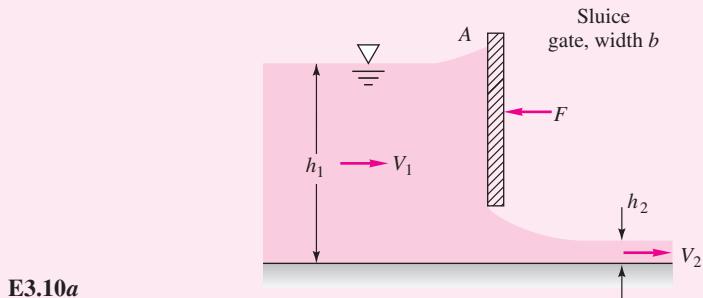

### Solution

Choose a control volume, Fig. E3.10b, that cuts through known regions (section 1 and section 2, the bottom and the atmosphere) and that cuts along regions where unknown information is desired (the gate, with its force  $F$ ).

<sup>9</sup>Symmetry can be a powerful tool if used properly. Try to learn more about the uses and misuses of symmetry conditions.

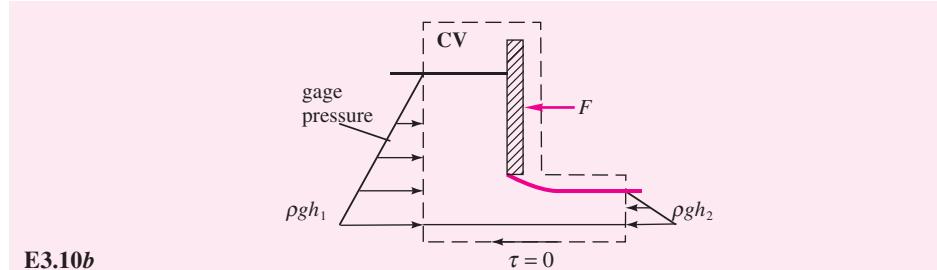

Assume steady incompressible flow with no variation across the width  $b$ . The inlet and outlet mass flows balance:

$$\dot{m} = \rho V_1 h_1 b = \rho V_2 h_2 b \quad \text{or} \quad V_2 = V_1(h_1/h_2)$$

We may use gage pressures for convenience because a uniform atmospheric pressure causes no force, as shown earlier in Fig. 3.6. With  $x$  positive to the right, equate the net horizontal force to the  $x$ -directed momentum change:

$$\begin{aligned}\Sigma F_x &= -F_{\text{gate}} + \frac{\rho}{2}gh_1(h_1b) - \frac{\rho}{2}gh_2(h_2b) = \dot{m}(V_2 - V_1) \\ \dot{m} &= \rho h_1 b V_1\end{aligned}$$

Solve for  $F_{\text{gate}}$ , and eliminate  $V_2$  using the mass flow relation. The desired result is:

$$F_{\text{gate}} = \frac{\rho}{2}gbh_1^2 \left[ 1 - \left( \frac{h_2}{h_1} \right)^2 \right] - \rho h_1 b V_1^2 \left( \frac{h_1}{h_2} - 1 \right) \quad \text{Ans.}$$

This is a powerful result from a relatively simple analysis. Later, in Sec. 10.4, we will be able to calculate the actual flow rate from the water depths and the gate opening height.


### EXAMPLE 3.11

Example 3.9 treated a plate at normal incidence to an oncoming flow. In Fig. 3.10 the plate is parallel to the flow. The stream is not a jet but a broad river, or *free stream*, of uniform velocity  $\mathbf{V} = U_0 \mathbf{i}$ . The pressure is assumed uniform, and so it has no net force on the plate. The plate does not block the flow as in Fig. 3.9, so the only effect is due to boundary shear, which was neglected in the previous example. The no-slip condition at the wall brings the fluid there to a halt, and these slowly moving particles retard their neighbors above, so that at the end of the plate there is a significant retarded shear layer, or *boundary layer*, of thickness  $y = \delta$ . The viscous stresses along the wall can sum to a finite drag force on the plate. These effects are illustrated in Fig. 3.10. The problem is to make an integral analysis and find the drag force  $D$  in terms of the flow properties  $\rho$ ,  $U_0$ , and  $\delta$  and the plate dimensions  $L$  and  $b$ .<sup>10</sup>

### Solution

Like most practical cases, this problem requires a combined mass and momentum balance. A proper selection of control volume is essential, and we select the four-sided region from

<sup>10</sup>The general analysis of such wall shear problems, called *boundary-layer theory*, is treated in Sec. 7.3.

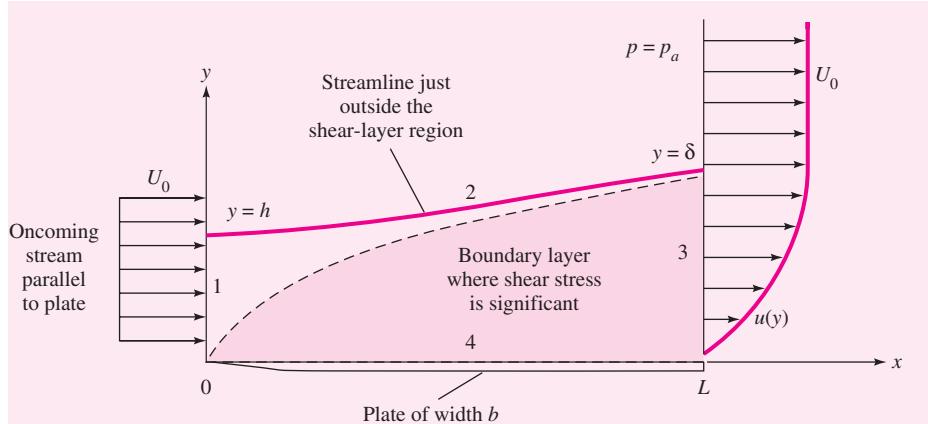

**Fig. 3.10** Control volume analysis of drag force on a flat plate due to boundary shear. The control volume is bounded by sections 1, 2, 3, and 4.

0 to  $h$  to  $\delta$  to  $L$  and back to the origin 0, as shown in Fig. 3.10. Had we chosen to cut across horizontally from left to right along the height  $y = h$ , we would have cut through the shear layer and exposed unknown shear stresses. Instead we follow the streamline passing through  $(x, y) = (0, h)$ , which is outside the shear layer and also has no mass flow across it. The four control volume sides are thus

1. From  $(0, 0)$  to  $(0, h)$ : a one-dimensional inlet,  $\mathbf{V} \cdot \mathbf{n} = -U_0$ .
2. From  $(0, h)$  to  $(L, \delta)$ : a streamline, no shear,  $\mathbf{V} \cdot \mathbf{n} \equiv 0$ .
3. From  $(L, \delta)$  to  $(L, 0)$ : a two-dimensional outlet,  $\mathbf{V} \cdot \mathbf{n} = +u(y)$ .
4. From  $(L, 0)$  to  $(0, 0)$ : a streamline just above the plate surface,  $\mathbf{V} \cdot \mathbf{n} = 0$ , shear forces summing to the drag force  $-D\mathbf{i}$  acting from the plate onto the retarded fluid.

The pressure is uniform, and so there is no net pressure force. Since the flow is assumed incompressible and steady, Eq. (3.37) applies with no unsteady term and fluxes only across sections 1 and 3:

$$\begin{aligned}\sum F_x = -D &= \rho \int_1 u(0, y) (\mathbf{V} \cdot \mathbf{n}) dA + \rho \int_3 u(L, y) (\mathbf{V} \cdot \mathbf{n}) dA \\ &= \rho \int_0^h U_0(-U_0)b dy + \rho \int_0^\delta u(L, y)[+u(L, y)]b dy\end{aligned}$$

Evaluating the first integral and rearranging give

$$D = \rho U_0^2 b h - \rho b \int_0^\delta u^2 dy \Big|_{x=L} \quad (1)$$

This could be considered the answer to the problem, but it is not useful because the height  $h$  is not known with respect to the shear layer thickness  $\delta$ . This is found by applying mass conservation, since the control volume forms a streamtube:

$$\begin{aligned}\rho \int_{CS} (\mathbf{V} \cdot \mathbf{n}) dA &= 0 = \rho \int_0^h (-U_0)b dy + \rho \int_0^\delta ub dy \Big|_{x=L} \\ \text{or} \quad U_0 h &= \int_0^\delta u dy \Big|_{x=L} \quad (2)\end{aligned}$$

after canceling  $b$  and  $\rho$  and evaluating the first integral. Introduce this value of  $h$  into Eq. (1) for a much cleaner result:

$$D = \rho b \int_0^\delta u(U_0 - u) dy \Big|_{x=L} \quad \text{Ans. (3)}$$

This result was first derived by Theodore von Kármán in 1921.<sup>11</sup> It relates the friction drag on one side of a flat plate to the integral of the *momentum deficit*  $\rho u(U_0 - u)$  across the trailing cross section of the flow past the plate. Since  $U_0 - u$  vanishes as  $y$  increases, the integral has a finite value. Equation (3) is an example of *momentum integral theory* for boundary layers, which is treated in Chap. 7.

### Momentum Flux Correction Factor

For flow in a duct, the axial velocity is usually nonuniform, as in Example 3.4. For this case the simple momentum flux calculation  $\int u p(\mathbf{V} \cdot \mathbf{n}) dA = \dot{m}V = \rho AV^2$  is somewhat in error and should be corrected to  $\beta \rho AV^2$ , where  $\beta$  is the dimensionless momentum flux correction factor,  $\beta \geq 1$ .

The factor  $\beta$  accounts for the variation of  $u^2$  across the duct section. That is, we compute the exact flux and set it equal to a flux based on average velocity in the duct:

$$\begin{aligned} \rho \int u^2 dA &= \beta \dot{m} V_{av} = \beta \rho A V_{av}^2 \\ \text{or} \quad \beta &= \frac{1}{A} \int \left( \frac{u}{V_{av}} \right)^2 dA \end{aligned} \quad (3.43a)$$

Values of  $\beta$  can be computed based on typical duct velocity profiles similar to those in Example 3.4. The results are as follows:

$$\text{Laminar flow: } u = U_0 \left( 1 - \frac{r^2}{R^2} \right) \quad \beta = \frac{4}{3} \quad (3.43b)$$

$$\begin{aligned} \text{Turbulent flow: } u &\approx U_0 \left( 1 - \frac{r}{R} \right)^m \quad \frac{1}{9} \leq m \leq \frac{1}{5} \\ \beta &= \frac{(1+m)^2(2+m)^2}{2(1+2m)(2+2m)} \end{aligned} \quad (3.43c)$$

The turbulent correction factors have the following range of values:

Turbulent flow:	$m$	$\frac{1}{5}$	$\frac{1}{6}$	$\frac{1}{7}$	$\frac{1}{8}$	$\frac{1}{9}$
	$\beta$	1.037	1.027	1.020	1.016	1.013

These are so close to unity that they are normally neglected. The laminar correction is often important.

<sup>11</sup>The autobiography of this great twentieth-century engineer and teacher [2] is recommended for its historical and scientific insight.

To illustrate a typical use of these correction factors, the solution to Example 3.8 for nonuniform velocities at sections 1 and 2 would be modified as

$$\sum \mathbf{F} = \dot{m}(\beta_2 \mathbf{V}_2 - \beta_1 \mathbf{V}_1) \quad (3.43d)$$

Note that the basic parameters and vector character of the result are not changed at all by this correction.

### Linear Momentum Tips

The previous examples make it clear that the vector momentum equation is more difficult to handle than the scalar mass and energy equations. Here are some momentum tips to remember:

- The momentum relation is a *vector* equation. The forces and the momentum terms are directional and can have three components. A *sketch* of these vectors will be indispensable for the analysis.
- The momentum flux terms, such as  $\int \mathbf{V}(\rho \mathbf{V} \cdot \mathbf{n}) dA$ , link *two* different sign conventions, so special care is needed. First, the vector coefficient  $\mathbf{V}$  will have a sign depending on its direction. Second, the mass flow term  $(\rho \mathbf{V} \cdot \mathbf{n})$  will have a sign (+, -) depending on whether it is (out, in). For example, in Fig. 3.8, the  $x$ -components of  $\mathbf{V}_2$  and  $\mathbf{V}_1$ ,  $u_2$  and  $u_1$ , are both positive; that is, they both act to the right. Meanwhile, the mass flow at (2) is positive (out) and at (1) is negative (in).
- The *one-dimensional approximation*, Eq. (3.40), is glorious, because non-uniform velocity distributions require laborious integration, as in Eq. 3.11. Thus the momentum flux correction factors  $\beta$  are very useful in avoiding this integration, especially for pipe flow.
- The applied forces  $\Sigma \mathbf{F}$  act on *all the material in the control volume*—that is, the surfaces (pressure and shear stresses), the solid supports that are cut through, and the weight of the interior masses. Stresses on non-control-surface parts of the interior are self-canceling and should be ignored.
- If the fluid exits subsonically to an atmosphere, the fluid pressure there is *atmospheric*.
- Where possible, choose inlet and outlet surfaces *normal to the flow*, so that pressure is the dominant force and the normal velocity equals the actual velocity.


Clearly, with that many helpful tips, substantial practice is needed to achieve momentum skills.

### Noninertial Reference Frame<sup>12</sup>

All previous derivations and examples in this section have assumed that the coordinate system is inertial—that is, at rest or moving at constant velocity. In this case the rate of change of velocity equals the absolute acceleration of the system, and Newton's law applies directly in the form of Eqs. (3.2) and (3.35).

In many cases it is convenient to use a *noninertial*, or accelerating, coordinate system. An example would be coordinates fixed to a rocket during takeoff. A second example is any flow on the earth's surface, which is accelerating relative to the fixed

<sup>12</sup>This section may be omitted without loss of continuity.

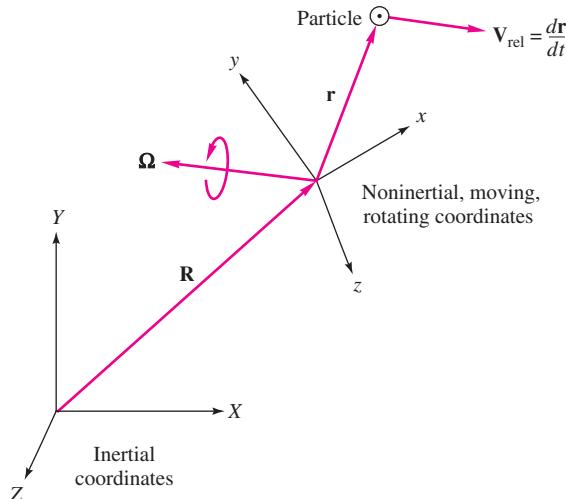

**Fig. 3.11** Geometry of fixed versus accelerating coordinates.

stars because of the rotation of the earth. Atmospheric and oceanographic flows experience the so-called *Coriolis acceleration*, outlined next. It is typically less than  $10^{-5}g$ , where  $g$  is the acceleration of gravity, but its accumulated effect over distances of many kilometers can be dominant in geophysical flows. By contrast, the Coriolis acceleration is negligible in small-scale problems like pipe or airfoil flows.

Suppose that the fluid flow has velocity  $\mathbf{V}$  relative to a noninertial  $xyz$  coordinate system, as shown in Fig. 3.11. Then  $d\mathbf{V}/dt$  will represent a noninertial acceleration that must be added vectorially to a relative acceleration  $\mathbf{a}_{\text{rel}}$  to give the absolute acceleration  $\mathbf{a}_i$  relative to some inertial coordinate system  $XYZ$ , as in Fig. 3.11. Thus

$$\mathbf{a}_i = \frac{d\mathbf{V}}{dt} + \mathbf{a}_{\text{rel}} \quad (3.44)$$

Since Newton's law applies to the absolute acceleration,

$$\sum \mathbf{F} = m\mathbf{a}_i = m\left(\frac{d\mathbf{V}}{dt} + \mathbf{a}_{\text{rel}}\right)$$

$$\text{or} \quad \sum \mathbf{F} - m\mathbf{a}_{\text{rel}} = m \frac{d\mathbf{V}}{dt} \quad (3.45)$$

Thus Newton's law in noninertial coordinates  $xyz$  is analogous to adding more "force" terms  $-m\mathbf{a}_{\text{rel}}$  to account for noninertial effects. In the most general case, sketched in Fig. 3.11, the term  $\mathbf{a}_{\text{rel}}$  contains four parts, three of which account for the angular velocity  $\boldsymbol{\Omega}(t)$  of the inertial coordinates. By inspection of Fig. 3.11, the absolute displacement of a particle is

$$\mathbf{S}_i = \mathbf{r} + \mathbf{R} \quad (3.46)$$

Differentiation gives the absolute velocity

$$\mathbf{V}_i = \mathbf{V} + \frac{d\mathbf{R}}{dt} + \boldsymbol{\Omega} \times \mathbf{r} \quad (3.47)$$

A second differentiation gives the absolute acceleration:

$$\mathbf{a}_i = \frac{d\mathbf{V}}{dt} + \frac{d^2\mathbf{R}}{dt^2} + \frac{d\boldsymbol{\Omega}}{dt} \times \mathbf{r} + 2\boldsymbol{\Omega} \times \mathbf{V} + \boldsymbol{\Omega} \times (\boldsymbol{\Omega} \times \mathbf{r}) \quad (3.48)$$

By comparison with Eq. (3.44), we see that the last four terms on the right represent the additional relative acceleration:

1.  $d^2\mathbf{R}/dt^2$  is the acceleration of the noninertial origin of coordinates  $xyz$ .
2.  $(d\boldsymbol{\Omega}/dt) \times \mathbf{r}$  is the angular acceleration effect.
3.  $2\boldsymbol{\Omega} \times \mathbf{V}$  is the Coriolis acceleration.
4.  $\boldsymbol{\Omega} \times (\boldsymbol{\Omega} \times \mathbf{r})$  is the centripetal acceleration, directed from the particle normal to the axis of rotation with magnitude  $\Omega^2 L$ , where  $L$  is the normal distance to the axis.<sup>13</sup>

Equation (3.45) differs from Eq. (3.2) only in the added inertial forces on the left-hand side. Thus the control volume formulation of linear momentum in noninertial coordinates merely adds inertial terms by integrating the added relative acceleration over each differential mass in the control volume:

$$\sum \mathbf{F} - \int_{CV} \mathbf{a}_{rel} dm = \frac{d}{dt} \left( \int_{CV} \mathbf{V} \rho dV \right) + \int_{CS} \mathbf{V} \rho (\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.49)$$

where

$$\mathbf{a}_{rel} = \frac{d^2\mathbf{R}}{dt^2} + \frac{d\boldsymbol{\Omega}}{dt} \times \mathbf{r} + 2\boldsymbol{\Omega} \times \mathbf{V} + \boldsymbol{\Omega} \times (\boldsymbol{\Omega} \times \mathbf{r})$$

This is the noninertial analog of the inertial form given in Eq. (3.35). To analyze such problems, one must know the displacement  $\mathbf{R}$  and angular velocity  $\boldsymbol{\Omega}$  of the noninertial coordinates.

If the control volume is fixed in a moving frame, Eq. (3.49) reduces to


$$\sum \mathbf{F} - \int_{CV} \mathbf{a}_{rel} dm = \frac{d}{dt} \left( \int_{CV} \mathbf{V} \rho dV \right) + \int_{CS} \mathbf{V} \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.50)$$

In other words, the right-hand side reduces to that of Eq. (3.37).

### EXAMPLE 3.12

A classic example of an accelerating control volume is a rocket moving straight up, as in Fig. E3.12. Let the initial mass be  $M_0$ , and assume a steady exhaust mass flow  $\dot{m}$  and exhaust velocity  $V_e$  relative to the rocket, as shown. If the flow pattern within the rocket motor is steady and air drag is neglected, derive the differential equation of vertical rocket motion  $V(t)$  and integrate using the initial condition  $V = 0$  at  $t = 0$ .

<sup>13</sup>A complete discussion of these noninertial coordinate terms is given, for example, in Ref. 4, pp. 49–51.

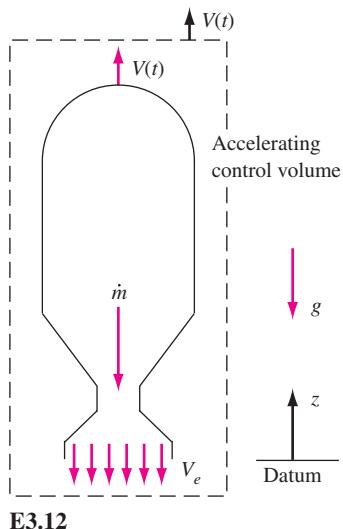

E3.12

**Solution**

The appropriate control volume in Fig. E3.12 encloses the rocket, cuts through the exit jet, and accelerates upward at rocket speed  $V(t)$ . The  $z$ -momentum equation (3.49) becomes

$$\sum F_z - \int a_{\text{rel}} dm = \frac{d}{dt} \left( \int_{\text{CV}} w dm \right) + (\dot{m}w)_e$$

$$\text{or } -mg - m \frac{dV}{dt} = 0 + \dot{m}(-V_e) \quad \text{with } m = m(t) = M_0 - \dot{m}t$$

The term  $a_{\text{rel}} = dV/dt$  of the rocket. The control volume integral vanishes because of the steady rocket flow conditions. Separate the variables and integrate, assuming  $V = 0$  at  $t = 0$ :


$$\int_0^V dV = \dot{m} V_e \int_0^t \frac{dt}{M_0 - \dot{m}t} - g \int_0^t dt \quad \text{or} \quad V(t) = -V_e \ln \left( 1 - \frac{\dot{m}t}{M_0} \right) - gt \quad \text{Ans.}$$

This is a classic approximate formula in rocket dynamics. The first term is positive and, if the fuel mass burned is a large fraction of initial mass, the final rocket velocity can exceed  $V_e$ .

### 3.5 Frictionless Flow: The Bernoulli Equation

A classic linear momentum analysis is a relation between pressure, velocity, and elevation in a frictionless flow, now called the *Bernoulli equation*. It was stated (vaguely) in words in 1738 in a textbook by Daniel Bernoulli. A complete derivation of the equation was given in 1755 by Leonhard Euler. The Bernoulli equation is very famous and very widely used, but one should be wary of its restrictions—all fluids are viscous and thus all flows have friction to some extent. To use the Bernoulli equation correctly, one must confine it to regions of the flow that are nearly frictionless. This section (and, in more detail, Chap. 8) will address the proper use of the Bernoulli relation.

Consider Fig. 3.12, which is an elemental fixed streamtube control volume of variable area  $A(s)$  and length  $ds$ , where  $s$  is the streamline direction. The properties ( $\rho, V, p$ ) may vary with  $s$  and time but are assumed to be uniform over the cross section  $A$ . The streamtube orientation  $\theta$  is arbitrary, with an elevation change  $dz = ds \sin \theta$ . Friction on the streamtube walls is shown and then neglected—a

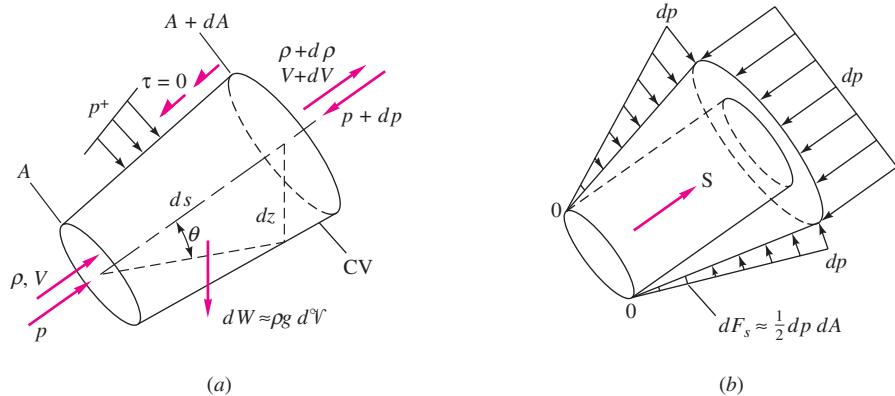

**Fig. 3.12** The Bernoulli equation for frictionless flow along a streamline: (a) forces and fluxes; (b) net pressure force after uniform subtraction of  $p$ .

very restrictive assumption. Note that the limit of a vanishingly small area means that the streamtube is equivalent to a *streamline* of the flow. Bernoulli's equation is valid for both and is usually stated as holding "along a streamline" in frictionless flow.

Conservation of mass [Eq. (3.20)] for this elemental control volume yields

$$\frac{d}{dt} \left( \int_{CV} \rho dV \right) + \dot{m}_{\text{out}} - \dot{m}_{\text{in}} = 0 \approx \frac{\partial \rho}{\partial t} dV + d\dot{m}$$

where  $\dot{m} = \rho A V$  and  $dV \approx A ds$ . Then our desired form of mass conservation is

$$d\dot{m} = d(\rho A V) = -\frac{\partial \rho}{\partial t} A ds \quad (3.51)$$

This relation does not require an assumption of frictionless flow.

Now write the linear momentum relation [Eq. (3.37)] in the streamwise direction:

$$\sum dF_s = \frac{d}{dt} \left( \int_{CV} V \rho dV \right) + (\dot{m}V)_{\text{out}} - (\dot{m}V)_{\text{in}} \approx \frac{\partial}{\partial t} (\rho V) A ds + d(\dot{m}V)$$

where  $V_s = V$  itself because  $s$  is the streamline direction. If we neglect the shear force on the walls (frictionless flow), the forces are due to pressure and gravity. The streamwise gravity force is due to the weight component of the fluid within the control volume:

$$dF_{s,\text{grav}} = -dW \sin \theta = -\gamma A ds \sin \theta = -\gamma A dz$$

The pressure force is more easily visualized, in Fig. 3.12b, by first subtracting a uniform value  $p$  from all surfaces, remembering from Fig. 3.6 that the net force is not changed. The pressure along the slanted side of the streamtube has a streamwise component that acts not on  $A$  itself but on the outer ring of area increase  $dA$ . The net pressure force is thus

$$dF_{s,\text{press}} = \frac{1}{2} dp dA - dp(A + dA) \approx -A dp$$

to first order. Substitute these two force terms into the linear momentum relation:

$$\begin{aligned} \sum dF_s &= -\gamma A dz - A dp = \frac{\partial}{\partial t} (\rho V) A ds + d(\dot{m}V) \\ &= \frac{\partial \rho}{\partial t} VA ds + \frac{\partial V}{\partial t} \rho A ds + \dot{m} dV + V d\dot{m} \end{aligned}$$

The first and last terms on the right cancel by virtue of the continuity relation [Eq. (3.51)]. Divide what remains by  $\rho A$  and rearrange into the final desired relation:

$$\frac{\partial V}{\partial t} ds + \frac{dp}{\rho} + V dV + g dz = 0 \quad (3.52)$$

This is Bernoulli's equation for *unsteady frictionless flow along a streamline*. It is in differential form and can be integrated between any two points 1 and 2 on the streamline:

$$\int_1^2 \frac{\partial V}{\partial t} ds + \int_1^2 \frac{dp}{\rho} + \frac{1}{2} (V_2^2 - V_1^2) + g(z_2 - z_1) = 0 \quad (3.53)$$

## Steady Incompressible Flow

To evaluate the two remaining integrals, one must estimate the unsteady effect  $\partial V/\partial t$  and the variation of density with pressure. At this time we consider only steady ( $\partial V/\partial t = 0$ ) incompressible (constant-density) flow, for which Eq. (3.53) becomes

$$\frac{p_2 - p_1}{\rho} + \frac{1}{2}(V_2^2 - V_1^2) + g(z_2 - z_1) = 0$$

or  $\frac{p_1}{\rho} + \frac{1}{2}V_1^2 + gz_1 = \frac{p_2}{\rho} + \frac{1}{2}V_2^2 + gz_2 = \text{const}$  (3.54)

This is the Bernoulli equation for steady frictionless incompressible flow along a streamline.

## Bernoulli Interpreted as an Energy Relation

The Bernoulli relation, Eq. (3.54), is a classic *momentum* result, Newton's law for a frictionless, incompressible fluid. It may also be interpreted, however, as an idealized *energy* relation. The changes from 1 to 2 in Eq. (3.54) represent reversible pressure work, kinetic energy change, and potential energy change. The fact that the total remains the same means that there is no energy exchange due to viscous dissipation, heat transfer, or shaft work. Section 3.7 will add these effects by making a control volume analysis of the First Law of Thermodynamics.

## Restrictions on the Bernoulli Equation

The Bernoulli equation is a momentum-based force relation and was derived using the following restrictive assumptions:


1. *Steady flow*: a common situation, application to most flows in this text.
2. *Incompressible flow*: appropriate if the flow Mach number is less than 0.3. This restriction is removed in Chap. 9 by allowing for compressibility.
3. *Frictionless flow*: restrictive—solid walls and mixing introduce friction effects.
4. *Flow along a single streamline*: different streamlines may have different “Bernoulli constants”  $w_0 = p/\rho + V^2/2 + gz$ , but this is rare. In most cases, as we shall prove in Chap. 4, a frictionless flow region is *irrotational*; that is,  $\text{curl}(V) = 0$ . For irrotational flow, the Bernoulli constant is the same everywhere.

The Bernoulli derivation does not account for possible energy exchange due to heat or work. These thermodynamic effects are accounted for in the steady flow energy equation. We are thus warned that the Bernoulli equation may be modified by such an energy exchange.

Figure 3.13 illustrates some practical limitations on the use of Bernoulli's equation (3.54). For the wind tunnel model test of Fig. 3.13a, the Bernoulli equation is valid in the core flow of the tunnel but not in the tunnel wall boundary layers, the model surface boundary layers, or the wake of the model, all of which are regions with high friction.

In the propeller flow of Fig. 3.13b, Bernoulli's equation is valid both upstream and downstream, but with a different constant  $w_0 = p/\rho + V^2/2 + gz$ , caused by the work addition of the propeller. The Bernoulli relation (3.54) is not valid near the propeller blades or in the helical vortices (not shown, see Fig. 1.14) shed downstream of the blade edges. Also, the Bernoulli constants are higher in the flowing “slipstream” than in the ambient atmosphere because of the slipstream kinetic energy.

For the chimney flow of Fig. 3.13c, Eq. (3.54) is valid before and after the fire, but with a change in Bernoulli constant that is caused by heat addition. The Bernoulli equation is not valid within the fire itself or in the chimney wall boundary layers.

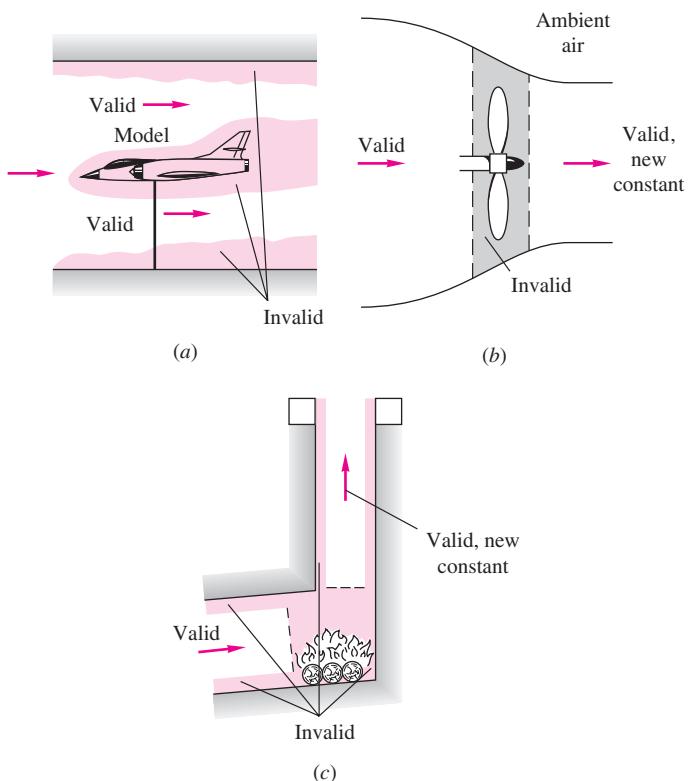

**Fig. 3.13** Illustration of regions of validity and invalidity of the Bernoulli equation: (a) tunnel model, (b) propeller, (c) chimney.

### Jet Exit Pressure Equals Atmospheric Pressure

### Stagnation, Static, and Dynamic Pressures


When a subsonic jet of liquid or gas exits from a duct into the free atmosphere, it immediately takes on the pressure of that atmosphere. This is a very important boundary condition in solving Bernoulli problems, since the pressure at that point is known. The interior of the free jet will also be atmospheric, except for small effects due to surface tension and streamline curvature.

In many incompressible-flow Bernoulli analyses, elevation changes are negligible. Thus Eq. (3.54) reduces to a balance between pressure and kinetic energy. We can write this as

$$p_1 + \frac{1}{2}\rho V_1^2 = p_2 + \frac{1}{2}\rho V_2^2 = p_o = \text{constant}$$

The quantity  $p_o$  is the pressure at any point in the frictionless flow where the velocity is zero. It is called the *stagnation pressure* and is the highest pressure possible in the flow, if elevation changes are neglected. The place where zero-velocity occurs is called a *stagnation point*. For example, on a moving aircraft, the front nose and the wing leading edges are points of highest pressure. The pressures  $p_1$  and  $p_2$  are called *static pressures*, in the moving fluid. The grouping  $(1/2)\rho V^2$  has dimensions of pressure and is called the *dynamic pressure*. A popular device called a *Pitot-static tube* (Fig. 6.30) measures  $(p_o - p)$  and then calculates  $V$  from the dynamic pressure.

Note, however, that one particular zero-velocity condition, no-slip flow along a fixed wall, does *not* result in stagnation pressure. The no-slip condition is a *frictional effect*, and the Bernoulli equation does not apply.

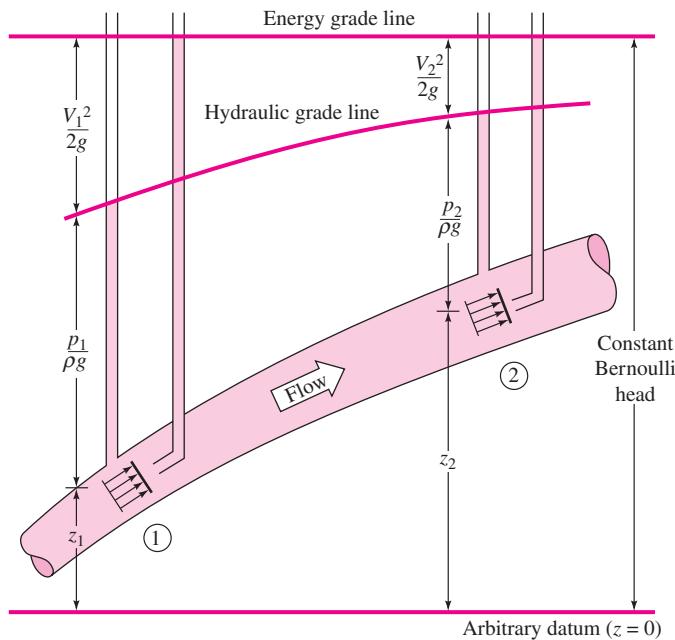

**Fig. 3.14** Hydraulic and energy grade lines for frictionless flow in a duct.

### Hydraulic and Energy Grade Lines

A useful visual interpretation of Bernoulli's equation is to sketch two grade lines of a flow. The *energy grade line* (EGL) shows the height of the total Bernoulli constant  $h_0 = z + p/\gamma + V^2/(2g)$ . In frictionless flow with no work or heat transfer [Eq. (3.54)] the EGL has constant height. The *hydraulic grade line* (HGL) shows the height corresponding to elevation and pressure head  $z + p/\gamma$ —that is, the EGL minus the velocity head  $V^2/(2g)$ . The HGL is the height to which liquid would rise in a piezometer tube (see Prob. 2.11) attached to the flow. In an open-channel flow the HGL is identical to the free surface of the water.

Figure 3.14 illustrates the EGL and HGL for frictionless flow at sections 1 and 2 of a duct. The piezometer tubes measure the static pressure head  $z + p/\gamma$  and thus outline the HGL. The pitot stagnation-velocity tubes measure the total head  $z + p/\gamma + V^2/(2g)$ , which corresponds to the EGL. In this particular case the EGL is constant, and the HGL rises due to a drop in velocity.


In more general flow conditions, the EGL will drop slowly due to friction losses and will drop sharply due to a substantial loss (a valve or obstruction) or due to work extraction (to a turbine). The EGL can rise only if there is work addition (as from a pump or propeller). The HGL generally follows the behavior of the EGL with respect to losses or work transfer, and it rises and/or falls if the velocity decreases and/or increases.

As mentioned before, no conversion factors are needed in computations with the Bernoulli equation if consistent SI or BG units are used, as the following examples will show.

In all Bernoulli-type problems in this text, we consistently take point 1 upstream and point 2 downstream.

**EXAMPLE 3.13**

Find a relation between nozzle discharge velocity  $V_2$  and tank free surface height  $h$  as in Fig. E3.13. Assume steady frictionless flow.

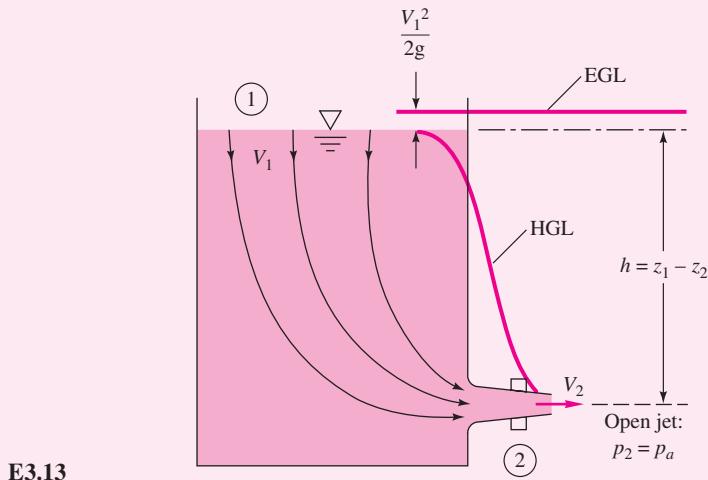

E3.13

**Solution**

As mentioned, we always choose point 1 upstream and point 2 downstream. Try to choose points 1 and 2 where maximum information is known or desired. Here we select point 1 as the tank free surface, where elevation and pressure are known, and point 2 as the nozzle exit, where again pressure and elevation are known. The two unknowns are  $V_1$  and  $V_2$ .

Mass conservation is usually a vital part of Bernoulli analyses. If  $A_1$  is the tank cross section and  $A_2$  the nozzle area, this is approximately a one-dimensional flow with constant density, Eq. (3.30):

$$A_1 V_1 = A_2 V_2 \quad (1)$$

Bernoulli's equation (3.54) gives

$$\frac{p_1}{\rho} + \frac{1}{2} V_1^2 + g z_1 = \frac{p_2}{\rho} + \frac{1}{2} V_2^2 + g z_2$$

But since sections 1 and 2 are both exposed to atmospheric pressure  $p_1 = p_2 = p_a$ , the pressure terms cancel, leaving

$$V_2^2 - V_1^2 = 2g(z_1 - z_2) = 2gh \quad (2)$$

Eliminating  $V_1$  between Eqs. (1) and (2), we obtain the desired result:

$$V_2^2 = \frac{2gh}{1 - A_2^2/A_1^2} \quad \text{Ans. (3)}$$

Generally the nozzle area  $A_2$  is very much smaller than the tank area  $A_1$ , so that the ratio  $A_2^2/A_1^2$  is doubly negligible, and an accurate approximation for the outlet velocity is

$$V_2 \approx (2gh)^{1/2} \quad \text{Ans. (4)}$$

This formula, discovered by Evangelista Torricelli in 1644, states that the discharge velocity equals the speed that a frictionless particle would attain if it fell freely from point 1 to point 2. In other words, the potential energy of the surface fluid is entirely converted to kinetic energy of efflux, which is consistent with the neglect of friction and the fact that no net pressure work is done. Note that Eq. (4) is independent of the fluid density, a characteristic of gravity-driven flows.

Except for the wall boundary layers, the streamlines from 1 to 2 all behave in the same way, and we can assume that the Bernoulli constant  $h_0$  is the same for all the core flow. However, the outlet flow is likely to be nonuniform, not one-dimensional, so that the average velocity is only approximately equal to Torricelli's result. The engineer will then adjust the formula to include a dimensionless *discharge coefficient*  $c_d$ :

$$(V_2)_{av} = \frac{Q}{A_2} = c_d(2gh)^{1/2} \quad (5)$$

As discussed in Sec. 6.12, the discharge coefficient of a nozzle varies from about 0.6 to 1.0 as a function of (dimensionless) flow conditions and nozzle shape.

### Surface Velocity Condition for a Large Tank


Many Bernoulli, and also steady flow energy, problems involve liquid flow from a large tank or reservoir, as in Example 3.13. If the outflow is small compared to the volume of the tank, the surface of the tank hardly moves. Therefore these problems are analyzed assuming *zero velocity* at the tank surface. The *pressure* at the top of the tank or reservoir is assumed to be atmospheric.

Before proceeding with more examples, we should note carefully that a solution by Bernoulli's equation (3.54) does *not* require a second control volume analysis, only a selection of two points 1 and 2 along a given streamline. The control volume was used to derive the differential relation (3.52), but the integrated form (3.54) is valid all along the streamline for frictionless flow with no heat transfer or shaft work, and a control volume is not necessary.

A classical Bernoulli application is the familiar process of siphoning a fluid from one container to another. No pump is involved; a hydrostatic pressure difference provides the motive force. We analyze this in the following example.

#### EXAMPLE 3.14

Consider the water siphon shown in Fig. E3.14. Assuming that Bernoulli's equation is valid, (a) find an expression for the velocity  $V_2$  exiting the siphon tube. (b) If the tube is 1 cm in diameter and  $z_1 = 60$  cm,  $z_2 = -25$  cm,  $z_3 = 90$  cm, and  $z_4 = 35$  cm, estimate the flow rate in  $\text{cm}^3/\text{s}$ .

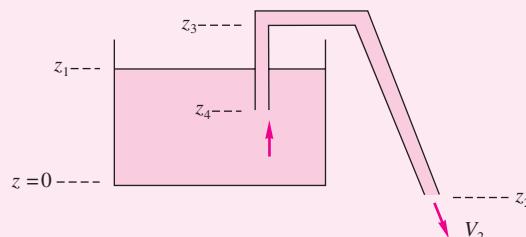

E3.14

**Solution**

- **Assumptions:** Frictionless, steady, incompressible flow. Write Bernoulli's equation starting from where information is known (the surface,  $z_1$ ) and proceeding to where information is desired (the tube exit,  $z_2$ ).

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

Note that the velocity is approximately zero at  $z_1$ , and a streamline goes from  $z_1$  to  $z_2$ . Note further that  $p_1$  and  $p_2$  are both atmospheric,  $p = p_{\text{atm}}$ , and therefore cancel. (a) Solve for the exit velocity from the tube:

$$V_2 = \sqrt{2g(z_1 - z_2)} \quad \text{Ans. (a)}$$

The velocity exiting the siphon increases as the tube exit is lowered below the tank surface. There is no siphon effect if the exit is at or above the tank surface. Note that  $z_3$  and  $z_4$  do not directly enter the analysis. However,  $z_3$  should not be too high because the pressure there will be lower than atmospheric, and the liquid might vaporize. (b) For the given numerical information, we need only  $z_1$  and  $z_2$  and calculate, in SI units,


$$V_2 = \sqrt{2(9.81 \text{ m/s}^2)[0.6 \text{ m} - (-0.25) \text{ m}]} = 4.08 \text{ m/s}$$

$$Q = V_2 A_2 = (4.08 \text{ m/s})(\pi/4)(0.01 \text{ m})^2 = 321 \text{ E} - 6 \text{ m}^3/\text{s} = 321 \text{ cm}^3/\text{s} \quad \text{Ans. (b)}$$

- **Comments:** Note that this result is independent of the density of the fluid. As an exercise, you may check that, for water ( $998 \text{ kg/m}^3$ ),  $p_3$  is 11,300 Pa *below* atmospheric pressure. In Chap. 6 we will modify this example to include friction effects.

**EXAMPLE 3.15**

A constriction in a pipe will cause the velocity to rise and the pressure to fall at section 2 in the throat. The pressure difference is a measure of the flow rate through the pipe. The smoothly necked-down system shown in Fig. E3.15 is called a *venturi tube*. Find an expression for the mass flux in the tube as a function of the pressure change.

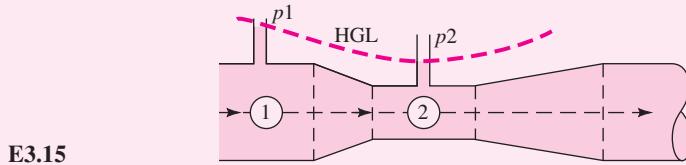**Solution**

Bernoulli's equation is assumed to hold along the center streamline:

$$\frac{p_1}{\rho} + \frac{1}{2} V_1^2 + gz_1 = \frac{p_2}{\rho} + \frac{1}{2} V_2^2 + gz_2$$

If the tube is horizontal,  $z_1 = z_2$  and we can solve for  $V_2$ :

$$V_2^2 - V_1^2 = \frac{2 \Delta p}{\rho} \quad \Delta p = p_1 - p_2 \quad (1)$$

We relate the velocities from the incompressible continuity relation:

$$A_1 V_1 = A_2 V_2$$

or

$$V_1 = \beta^2 V_2 \quad \beta = \frac{D_2}{D_1} \quad (2)$$

Combining (1) and (2), we obtain a formula for the velocity in the throat:

$$V_2 = \left[ \frac{2 \Delta p}{\rho(1 - \beta^4)} \right]^{1/2} \quad (3)$$

The mass flux is given by

$$\dot{m} = \rho A_2 V_2 = A_2 \left( \frac{2 \rho \Delta p}{1 - \beta^4} \right)^{1/2} \quad (4)$$


This is the ideal frictionless mass flux. In practice, we measure  $\dot{m}_{\text{actual}} = c_d \dot{m}_{\text{ideal}}$  and correlate the dimensionless discharge coefficient  $c_d$ .

### EXAMPLE 3.16

A 10-cm fire hose with a 3-cm nozzle discharges 1.5  $\text{m}^3/\text{min}$  to the atmosphere. Assuming frictionless flow, find the force  $F_B$  exerted by the flange bolts to hold the nozzle on the hose.

#### Solution

We use Bernoulli's equation and continuity to find the pressure  $p_1$  upstream of the nozzle, and then we use a control volume momentum analysis to compute the bolt force, as in Fig. E3.16.

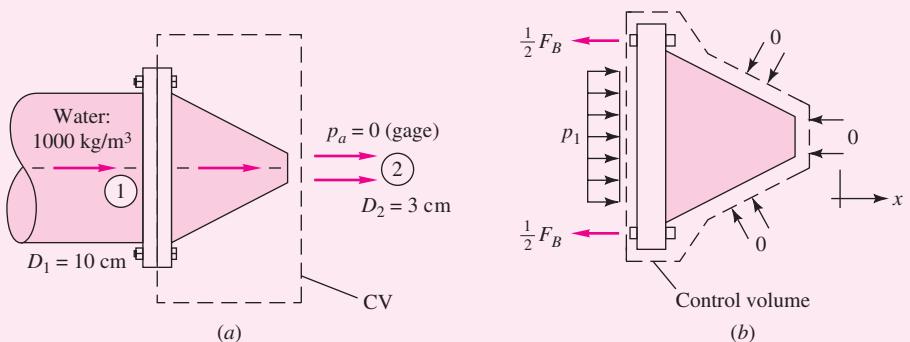

E3.16

The flow from 1 to 2 is a constriction exactly similar in effect to the venturi in Example 3.15, for which Eq. (1) gave

$$p_1 = p_2 + \frac{1}{2}\rho(V_2^2 - V_1^2) \quad (1)$$

The velocities are found from the known flow rate  $Q = 1.5 \text{ m}^3/\text{min}$  or  $0.025 \text{ m}^3/\text{s}$ :

$$V_2 = \frac{Q}{A_2} = \frac{0.025 \text{ m}^3/\text{s}}{(\pi/4)(0.03 \text{ m})^2} = 35.4 \text{ m/s}$$

$$V_1 = \frac{Q}{A_1} = \frac{0.025 \text{ m}^3/\text{s}}{(\pi/4)(0.1 \text{ m})^2} = 3.2 \text{ m/s}$$

We are given  $p_2 = p_a = 0$  gage pressure. Then Eq. (1) becomes

$$\begin{aligned} p_1 &= \frac{1}{2}(1000 \text{ kg/m}^3)[(35.4^2 - 3.2^2)\text{m}^2/\text{s}^2] \\ &= 620,000 \text{ kg/(m} \cdot \text{s}^2\text{)} = 620,000 \text{ Pa gage} \end{aligned}$$

The control volume force balance is shown in Fig. E3.16b:

$$\sum F_x = -F_B + p_1 A_1$$

and the zero gage pressure on all other surfaces contributes no force. The  $x$ -momentum flux is  $+\dot{m}V_2$  at the outlet and  $-\dot{m}V_1$  at the inlet. The steady flow momentum relation (3.40) thus gives

$$-F_B + p_1 A_1 = \dot{m}(V_2 - V_1)$$

or

$$F_B = p_1 A_1 - \dot{m}(V_2 - V_1) \quad (2)$$

Substituting the given numerical values, we find

$$\dot{m} = \rho Q = (1000 \text{ kg/m}^3)(0.025 \text{ m}^3/\text{s}) = 25 \text{ kg/s}$$

$$A_1 = \frac{\pi}{4} D_1^2 = \frac{\pi}{4}(0.1 \text{ m})^2 = 0.00785 \text{ m}^2$$

$$\begin{aligned} F_B &= (620,000 \text{ N/m}^2)(0.00785 \text{ m}^2) - (25 \text{ kg/s})[(35.4 - 3.2)\text{m/s}] \\ &= 4872 \text{ N} - 805 \text{ (kg} \cdot \text{m)/s}^2 = 4067 \text{ N (915 lbf)} \end{aligned}$$

*Ans.*

Notice from these examples that the solution of a typical problem involving Bernoulli's equation almost always leads to a consideration of the continuity equation as an equal partner in the analysis. The only exception is when the complete velocity distribution is already known from a previous or given analysis, but that means the continuity relation has already been used to obtain the given information. The point is that the continuity relation is always an important element in a flow analysis.

### 3.6 The Angular Momentum Theorem<sup>14</sup>

A control volume analysis can be applied to the angular momentum relation, Eq. (3.3), by letting our dummy variable  $\mathbf{B}$  be the angular-momentum vector  $\mathbf{H}$ . However, since the system considered here is typically a group of nonrigid fluid particles of variable velocity, the concept of mass moment of inertia is of no help, and we have to calculate the

<sup>14</sup>This section may be omitted without loss of continuity.

instantaneous angular momentum by integration over the elemental masses  $dm$ . If  $O$  is the point about which moments are desired, the angular momentum about  $O$  is given by

$$\mathbf{H}_o = \int_{\text{syst}} (\mathbf{r} \times \mathbf{V}) dm \quad (3.55)$$

where  $\mathbf{r}$  is the position vector from 0 to the elemental mass  $dm$  and  $\mathbf{V}$  is the velocity of that element. The amount of angular momentum per unit mass is thus seen to be

$$\beta = \frac{d\mathbf{H}_o}{dm} = \mathbf{r} \times \mathbf{V}$$

The Reynolds transport theorem (3.16) then tells us that

$$\frac{d\mathbf{H}_o}{dt} \Big|_{\text{syst}} = \frac{d}{dt} \left[ \int_{\text{CV}} (\mathbf{r} \times \mathbf{V}) \rho dV \right] + \int_{\text{CS}} (\mathbf{r} \times \mathbf{V}) \rho (\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.56)$$

for the most general case of a deformable control volume. But from the angular momentum theorem (3.3), this must equal the sum of all the moments about point  $O$  applied to the control volume

$$\frac{d\mathbf{H}_o}{dt} = \sum \mathbf{M}_o = \sum (\mathbf{r} \times \mathbf{F})_o$$

Note that the total moment equals the summation of moments of all applied forces about point  $O$ . Recall, however, that this law, like Newton's law (3.2), assumes that the particle velocity  $\mathbf{V}$  is relative to an *inertial* coordinate system. If not, the moments about point  $O$  of the relative acceleration terms  $\mathbf{a}_{\text{rel}}$  in Eq. (3.49) must also be included:

$$\sum \mathbf{M}_o = \sum (\mathbf{r} \times \mathbf{F})_o - \int_{\text{CV}} (\mathbf{r} \times \mathbf{a}_{\text{rel}}) dm \quad (3.57)$$

where the four terms constituting  $\mathbf{a}_{\text{rel}}$  are given in Eq. (3.49). Thus the most general case of the angular momentum theorem is for a deformable control volume associated with a noninertial coordinate system. We combine Eqs. (3.56) and (3.57) to obtain

$$\sum (\mathbf{r} \times \mathbf{F})_o - \int_{\text{CV}} (\mathbf{r} \times \mathbf{a}_{\text{rel}}) dm = \frac{d}{dt} \left[ \int_{\text{CV}} (\mathbf{r} \times \mathbf{V}) \rho dV \right] + \int_{\text{CS}} (\mathbf{r} \times \mathbf{V}) \rho (\mathbf{V}_r \cdot \mathbf{n}) dA \quad (3.58)$$

For a nondeformable inertial control volume, this reduces to

$$\sum \mathbf{M}_0 = \frac{\partial}{\partial t} \left[ \int_{\text{CV}} (\mathbf{r} \times \mathbf{V}) \rho dV \right] + \int_{\text{CS}} (\mathbf{r} \times \mathbf{V}) \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.59)$$

Further, if there are only one-dimensional inlets and exits, the angular momentum flux terms evaluated on the control surface become


$$\int_{\text{CS}} (\mathbf{r} \times \mathbf{V}) \rho (\mathbf{V} \cdot \mathbf{n}) dA = \sum (\mathbf{r} \times \mathbf{V})_{\text{out}} \dot{m}_{\text{out}} - \sum (\mathbf{r} \times \mathbf{V})_{\text{in}} \dot{m}_{\text{in}} \quad (3.60)$$

Although at this stage the angular momentum theorem can be considered a supplementary topic, it has direct application to many important fluid flow problems

involving torques or moments. A particularly important case is the analysis of rotating fluid flow devices, usually called *turbomachines* (Chap. 11).

### EXAMPLE 3.17

As shown in Fig. E3.17a, a pipe bend is supported at point *A* and connected to a flow system by flexible couplings at sections 1 and 2. The fluid is incompressible, and ambient pressure  $p_a$  is zero. (a) Find an expression for the torque  $T$  that must be resisted by the support at *A*, in terms of the flow properties at sections 1 and 2 and the distances  $h_1$  and  $h_2$ . (b) Compute this torque if  $D_1 = D_2 = 3$  in,  $p_1 = 100$  lbf/in $^2$  gage,  $p_2 = 80$  lbf/in $^2$  gage,  $V_1 = 40$  ft/s,  $h_1 = 2$  in,  $h_2 = 10$  in, and  $\rho = 1.94$  slugs/ft $^3$ .

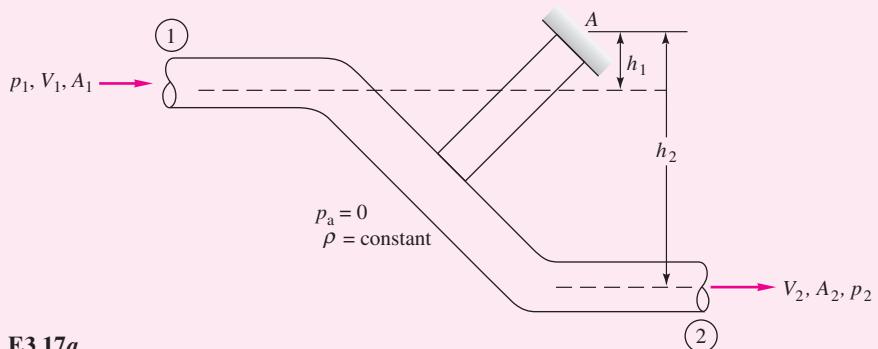

E3.17a

### Solution

#### Part (a)

The control volume chosen in Fig. E3.17b cuts through sections 1 and 2 and through the support at *A*, where the torque  $T_A$  is desired. The flexible couplings description specifies that there is no torque at either section 1 or 2, and so the cuts there expose no moments. For the angular momentum terms  $\mathbf{r} \times \mathbf{V}$ ,  $\mathbf{r}$  should be taken from point *A* to sections 1 and 2. Note that the gage pressure forces  $p_1 A_1$  and  $p_2 A_2$  both have moments about *A*. Equation (3.59) with one-dimensional flux terms becomes

$$\begin{aligned}\sum \mathbf{M}_A &= \mathbf{T}_A + \mathbf{r}_1 \times (-p_1 A_1 \mathbf{n}_1) + \mathbf{r}_2 \times (-p_2 A_2 \mathbf{n}_2) \\ &= (\mathbf{r}_2 \times \mathbf{V}_2)(+\dot{m}_{\text{out}}) + (\mathbf{r}_1 \times \mathbf{V}_1)(-\dot{m}_{\text{in}})\end{aligned}\quad (1)$$

Figure E3.17c shows that all the cross products are associated with either  $r_1 \sin \theta_1 = h_1$  or  $r_2 \sin \theta_2 = h_2$ , the perpendicular distances from point *A* to the pipe axes at 1 and 2. Remember that  $\dot{m}_{\text{in}} = \dot{m}_{\text{out}}$  from the steady flow continuity relation. In terms of counterclockwise moments, Eq. (1) then becomes


$$T_A + p_1 A_1 h_1 - p_2 A_2 h_2 = \dot{m}(h_2 V_2 - h_1 V_1) \quad (2)$$

Rewriting this, we find the desired torque to be

$$T_A = h_2(p_2 A_2 + \dot{m} V_2) - h_1(p_1 A_1 + \dot{m} V_1) \quad \text{Ans. (a)} \quad (3)$$

counterclockwise. The quantities  $p_1$  and  $p_2$  are gage pressures. Note that this result is independent of the shape of the pipe bend and varies only with the properties at sections 1 and 2 and the distances  $h_1$  and  $h_2$ .<sup>15</sup>

<sup>15</sup>Indirectly, the pipe bend shape probably affects the pressure change from  $p_1$  to  $p_2$ .

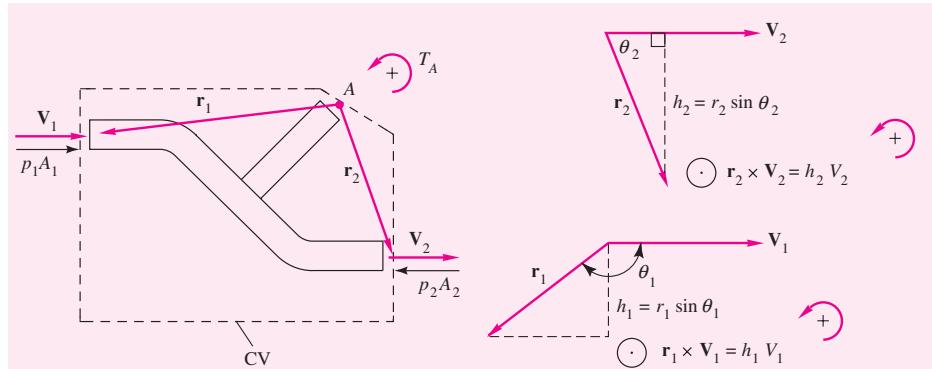

E3.17b

E3.17c

**Part (b)**

For the numerical example, convert all data to BG units:

$$D_1 = D_2 = 3 \text{ in} = 0.25 \text{ ft} \quad p_1 = 100 \frac{\text{lbf}}{\text{in}^2} = 14,400 \frac{\text{lbf}}{\text{ft}^2} \quad p_2 = 80 \frac{\text{lbf}}{\text{in}^2} = 11,520 \frac{\text{lbf}}{\text{ft}^2}$$

$$h_1 = 2 \text{ in} = \frac{2}{12} \text{ ft} \quad h_2 = 10 \text{ in} = \frac{10}{12} \text{ ft} \quad \rho = 1.94 \frac{\text{slug}}{\text{ft}^3}$$

The inlet and exit areas are the same,  $A_1 = A_2 = (\pi/4)(0.25 \text{ ft})^2 = 0.0491 \text{ ft}^2$ . Since the density is constant, we conclude from mass conservation,  $\rho A_1 V_1 = \rho A_2 V_2$ , that  $V_1 = V_2 = 40 \text{ ft/s}$ . The mass flow is

$$\dot{m} = \rho A_1 V_1 = \left( 1.94 \frac{\text{slug}}{\text{ft}^3} \right) (0.0491 \text{ ft}^2) \left( 40 \frac{\text{ft}}{\text{s}} \right) = 3.81 \frac{\text{slug}}{\text{s}}$$

- *Evaluation of the torque:* The data can now be substituted into Eq. (3):

$$\begin{aligned} T_A &= \left( \frac{10}{12} \text{ ft} \right) \left[ \left( 11,520 \frac{\text{lbf}}{\text{ft}^2} \right) (0.0491 \text{ ft}^2) + \left( 3.81 \frac{\text{slug}}{\text{s}} \right) \left( 40 \frac{\text{ft}}{\text{s}} \right) \right] \\ &\quad - \left( \frac{2}{12} \text{ ft} \right) \left[ \left( 14,400 \frac{\text{lbf}}{\text{ft}^2} \right) (0.0491 \text{ ft}^2) + \left( 3.81 \frac{\text{slug}}{\text{s}} \right) \left( 40 \frac{\text{ft}}{\text{s}} \right) \right] \\ &= 598 \text{ ft} \cdot \text{lbf} - 143 \text{ ft} \cdot \text{lbf} = 455 \text{ ft} \cdot \text{lbf} \text{ counterclockwise} \quad \text{Ans. (b)} \end{aligned}$$

- *Comments:* The use of standard BG units is crucial when combining dissimilar terms, such as pressure times area and mass flow times velocity, into proper additive units for a numerical solution.

**EXAMPLE 3.18**

Figure 3.15 shows a schematic of a centrifugal pump. The fluid enters axially and passes through the pump blades, which rotate at angular velocity  $\omega$ ; the velocity of the fluid is changed from  $V_1$  to  $V_2$  and its pressure from  $p_1$  to  $p_2$ . (a) Find an expression for the torque  $T_o$  that must be applied to these blades to maintain this flow. (b) The power supplied to the pump would be  $P = \omega T_o$ . To illustrate numerically, suppose  $r_1 = 0.2 \text{ m}$ ,  $r_2 = 0.5 \text{ m}$ , and

$b = 0.15$  m. Let the pump rotate at 600 r/min and deliver water at  $2.5 \text{ m}^3/\text{s}$  with a density of  $1000 \text{ kg/m}^3$ . Compute the torque and power supplied.

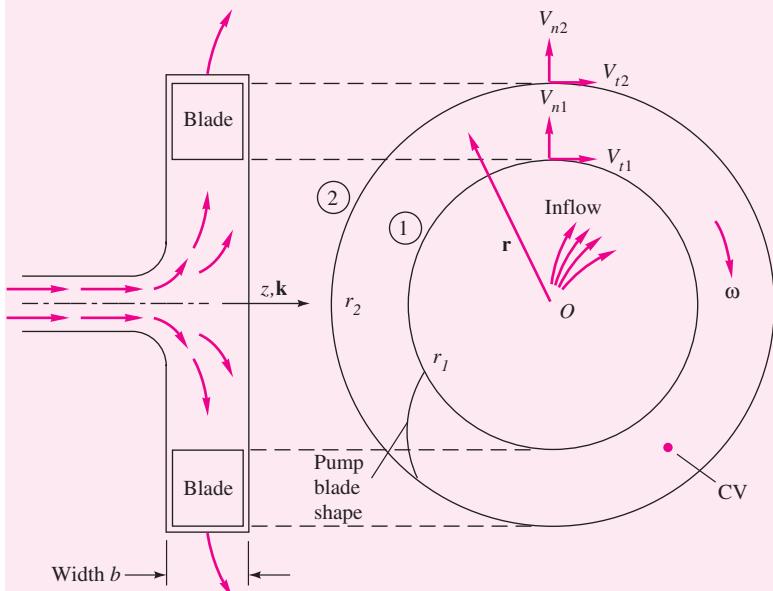


Fig. 3.15 Schematic of a simplified centrifugal pump.

### Solution

#### Part (a)

The control volume is chosen to be the annular region between sections 1 and 2 where the flow passes through the pump blades (see Fig. 3.15). The flow is steady and assumed incompressible. The contribution of pressure to the torque about axis  $O$  is zero since the pressure forces at 1 and 2 act radially through  $O$ . Equation (3.59) becomes

$$\sum \mathbf{M}_o = \mathbf{T}_o = (\mathbf{r}_2 \times \mathbf{V}_2)\dot{m}_{\text{out}} - (\mathbf{r}_1 \times \mathbf{V}_1)\dot{m}_{\text{in}} \quad (1)$$

where steady flow continuity tells us that

$$\dot{m}_{\text{in}} = \rho V_{n1} 2\pi r_1 b = \dot{m}_{\text{out}} = \rho V_{n2} 2\pi r_2 b = \rho Q$$

The cross product  $\mathbf{r} \times \mathbf{V}$  is found to be clockwise about  $O$  at both sections:

$$\mathbf{r}_2 \times \mathbf{V}_2 = r_2 V_{t2} \sin 90^\circ \mathbf{k} = r_2 V_{t2} \mathbf{k} \quad \text{clockwise}$$

$$\mathbf{r}_1 \times \mathbf{V}_1 = r_1 V_{t1} \mathbf{k} \quad \text{clockwise}$$

Equation (1) thus becomes the desired formula for torque:

$$T_o = \rho Q (r_2 V_{t2} - r_1 V_{t1}) \mathbf{k} \quad \text{clockwise} \quad \text{Ans. (a)} \quad (2a)$$

This relation is called *Euler's turbine formula*. In an idealized pump, the inlet and outlet tangential velocities would match the blade rotational speeds  $V_{t1} = \omega r_1$  and  $V_{t2} = \omega r_2$ . Then the formula for torque supplied becomes

$$T_o = \rho Q \omega (r_2^2 - r_1^2) \mathbf{k} \quad \text{clockwise} \quad (2b)$$

**Part (b)**

Convert  $\omega$  to  $600(2\pi/60) = 62.8$  rad/s. The normal velocities are not needed here but follow from the flow rate

$$V_{n1} = \frac{Q}{2\pi r_1 b} = \frac{2.5 \text{ m}^3/\text{s}}{2\pi(0.2 \text{ m})(0.15 \text{ m})} = 13.3 \text{ m/s}$$

$$V_{n2} = \frac{Q}{2\pi r_2 b} = \frac{2.5}{2\pi(0.5)(0.15)} = 5.3 \text{ m/s}$$

For the idealized inlet and outlet, tangential velocity equals tip speed:

$$V_{t1} = \omega r_1 = (62.8 \text{ rad/s})(0.2 \text{ m}) = 12.6 \text{ m/s}$$

$$V_{t2} = \omega r_2 = 62.8(0.5) = 31.4 \text{ m/s}$$

Equation (2a) predicts the required torque to be

$$T_o = (1000 \text{ kg/m}^3)(2.5 \text{ m}^3/\text{s})[(0.5 \text{ m})(31.4 \text{ m/s}) - (0.2 \text{ m})(12.6 \text{ m/s})] \\ = 33,000 (\text{kg} \cdot \text{m}^2)/\text{s}^2 = 33,000 \text{ N} \cdot \text{m}$$

*Ans.*


The power required is

$$P = \omega T_o = (62.8 \text{ rad/s})(33,000 \text{ N} \cdot \text{m}) = 2,070,000 (\text{N} \cdot \text{m})/\text{s}$$

$$= 2.07 \text{ MW} (2780 \text{ hp})$$

*Ans.*

In actual practice the tangential velocities are considerably less than the impeller-tip speeds, and the design power requirements for this pump may be only 1 MW or less.

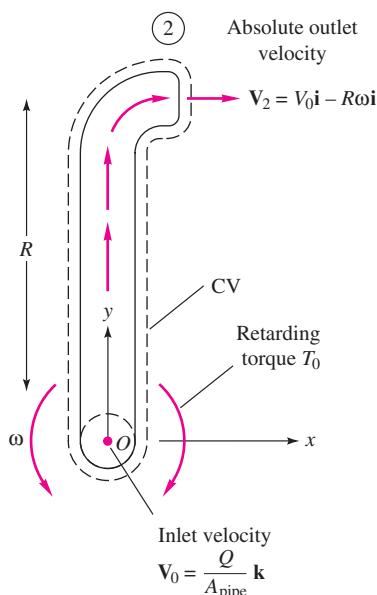

**Fig. 3.16** View from above of a single arm of a rotating lawn sprinkler.

**EXAMPLE 3.19**

Figure 3.16 shows a lawn sprinkler arm viewed from above. The arm rotates about  $O$  at constant angular velocity  $\omega$ . The volume flux entering the arm at  $O$  is  $Q$ , and the fluid is incompressible. There is a retarding torque at  $O$ , due to bearing friction, of amount  $-T_o\mathbf{k}$ . Find an expression for the rotation  $\omega$  in terms of the arm and flow properties.

**Solution**

The entering velocity is  $V_0\mathbf{k}$ , where  $V_0 = Q/A_{\text{pipe}}$ . Equation (3.59) applies to the control volume sketched in Fig. 3.16 only if  $\mathbf{V}$  is the absolute velocity relative to an inertial frame. Thus the exit velocity at section 2 is

$$\mathbf{V}_2 = V_0\mathbf{i} - R\omega\mathbf{i}$$

Equation (3.59) then predicts that, for steady flow,

$$\sum \mathbf{M}_o = -T_o\mathbf{k} = (\mathbf{r}_2 \times \mathbf{V}_2)\dot{m}_{\text{out}} - (\mathbf{r}_1 \times \mathbf{V}_1)\dot{m}_{\text{in}} \quad (1)$$

where, from continuity,  $\dot{m}_{\text{out}} = \dot{m}_{\text{in}} = \rho Q$ . The cross products with reference to point  $O$  are

$$\mathbf{r}_2 \times \mathbf{V}_2 = R\mathbf{j} \times (V_0 - R\omega)\mathbf{i} = (R^2\omega - RV_0)\mathbf{k}$$

$$\mathbf{r}_1 \times \mathbf{V}_1 = 0\mathbf{j} \times V_0\mathbf{k} = 0$$

Equation (1) thus becomes

$$\begin{aligned}-T_o \mathbf{k} &= \rho Q(R^2 \omega - RV_0) \mathbf{k} \\ \omega &= \frac{V_o}{R} - \frac{T_o}{\rho Q R^2}\end{aligned}\quad \text{Ans.}$$

The result may surprise you: Even if the retarding torque  $T_o$  is negligible, the arm rotational speed is limited to the value  $V_o/R$  imposed by the outlet speed and the arm length.

### 3.7 The Energy Equation<sup>16</sup>

As our fourth and final basic law, we apply the Reynolds transport theorem (3.12) to the first law of thermodynamics, Eq. (3.5). The dummy variable  $B$  becomes energy  $E$ , and the energy per unit mass is  $\beta = dE/dm = e$ . Equation (3.5) can then be written for a fixed control volume as follows:<sup>17</sup>

$$\frac{dQ}{dt} - \frac{dW}{dt} = \frac{dE}{dt} = \frac{d}{dt} \left( \int_{CV} e \rho dV \right) + \int_{CS} e \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.61)$$

Recall that positive  $Q$  denotes heat added to the system and positive  $W$  denotes work done by the system.

The system energy per unit mass  $e$  may be of several types:

$$e = e_{\text{internal}} + e_{\text{kinetic}} + e_{\text{potential}} + e_{\text{other}}$$

where  $e_{\text{other}}$  could encompass chemical reactions, nuclear reactions, and electrostatic or magnetic field effects. We neglect  $e_{\text{other}}$  here and consider only the first three terms as discussed in Eq. (1.9), with  $z$  defined as “up”:

$$e = \hat{u} + \frac{1}{2}V^2 + gz \quad (3.62)$$

The heat and work terms could be examined in detail. If this were a heat transfer book,  $dQ/dt$  would be broken down into conduction, convection, and radiation effects and whole chapters written on each (see, for example, Ref. 3). Here we leave the term untouched and consider it only occasionally.

Using for convenience the overdot to denote the time derivative, we divide the work term into three parts:

$$\dot{W} = \dot{W}_{\text{shaft}} + \dot{W}_{\text{press}} + \dot{W}_{\text{viscous stresses}} = \dot{W}_s + \dot{W}_p + \dot{W}_v$$

The work of gravitational forces has already been included as potential energy in Eq. (3.62). Other types of work, such as those due to electromagnetic forces, are excluded here.

The shaft work isolates the portion of the work that is deliberately done by a machine (pump impeller, fan blade, piston, or the like) protruding through the control surface into the control volume. No further specification other than  $\dot{W}_s$  is desired at this point, but calculations of the work done by turbomachines will be performed in Chap. 11.

<sup>16</sup>This section should be read for information and enrichment even if you lack formal background in thermodynamics.

<sup>17</sup>The energy equation for a deformable control volume is rather complicated and is not discussed here. See Refs. 4 and 5 for further details.

The rate of work  $\dot{W}_p$  done by pressure forces occurs at the surface only; all work on internal portions of the material in the control volume is by equal and opposite forces and is self-canceling. The pressure work equals the pressure force on a small surface element  $dA$  times the normal velocity component into the control volume:

$$d\dot{W}_p = -(p dA)V_{n, \text{in}} = -p(-\mathbf{V} \cdot \mathbf{n}) dA$$

The total pressure work is the integral over the control surface:

$$\dot{W}_p = \int_{\text{CS}} p(\mathbf{V} \cdot \mathbf{n}) dA \quad (3.63)$$

A cautionary remark: If part of the control surface is the surface of a machine part, we prefer to delegate that portion of the pressure to the *shaft work* term  $\dot{W}_s$ , not to  $\dot{W}_p$ , which is primarily meant to isolate the fluid flow pressure work terms.

Finally, the shear work due to viscous stresses occurs at the control surface and consists of the product of each viscous stress (one normal and two tangential) and the respective velocity component:

$$\begin{aligned} d\dot{W}_v &= -\tau \cdot \mathbf{V} dA \\ \text{or} \quad \dot{W}_v &= - \int_{\text{CS}} \tau \cdot \mathbf{V} dA \end{aligned} \quad (3.64)$$

where  $\tau$  is the stress vector on the elemental surface  $dA$ . This term may vanish or be negligible according to the particular type of surface at that part of the control volume:

*Solid surface.* For all parts of the control surface that are solid confining walls,  $\mathbf{V} = 0$  from the viscous no-slip condition; hence  $\dot{W}_v = \text{zero identically}$ .

*Surface of a machine.* Here the viscous work is contributed by the machine, and so we absorb this work in the term  $\dot{W}_s$ .

*An inlet or outlet.* At an inlet or outlet, the flow is approximately normal to the element  $dA$ ; hence the only viscous work term comes from the normal stress  $\tau_{nn}V_n dA$ . Since viscous normal stresses are extremely small in all but rare cases, such as the interior of a shock wave, it is customary to neglect viscous work at inlets and outlets of the control volume.

*Streamline surface.* If the control surface is a streamline such as the upper curve in the boundary layer analysis of Fig. 3.11, the viscous work term must be evaluated and retained if shear stresses are significant along this line. In the particular case of Fig. 3.11, the streamline is outside the boundary layer, and viscous work is negligible.

The net result of this discussion is that the rate-of-work term in Eq. (3.61) consists essentially of

$$\dot{W} = \dot{W}_s + \int_{\text{CS}} p(\mathbf{V} \cdot \mathbf{n}) dA - \int_{\text{CS}} (\tau \cdot \mathbf{V})_{ss} dA \quad (3.65)$$

where the subscript SS stands for stream surface. When we introduce (3.65) and (3.62) into (3.61), we find that the pressure work term can be combined with the energy flux

term since both involve surface integrals of  $\mathbf{V} \cdot \mathbf{n}$ . The control volume energy equation thus becomes

$$\dot{Q} - \dot{W}_s - \dot{W}_v = \frac{\partial}{\partial t} \left( \int_{CV} e\rho dV \right) + \int_{CS} \left( e + \frac{p}{\rho} \right) \rho (\mathbf{V} \cdot \mathbf{n}) dA \quad (3.66)$$

Using  $e$  from (3.62), we see that the enthalpy  $\hat{h} = \hat{u} + p/\rho$  occurs in the control surface integral. The final general form for the energy equation for a fixed control volume becomes

$$\boxed{\dot{Q} - \dot{W}_s - \dot{W}_v = \frac{\partial}{\partial t} \left[ \int_{CV} \left( \hat{u} + \frac{1}{2}V^2 + gz \right) \rho dV \right] + \int_{CS} \left( \hat{h} + \frac{1}{2}V^2 + gz \right) \rho (\mathbf{V} \cdot \mathbf{n}) dA} \quad (3.67)$$

As mentioned, the shear work term  $\dot{W}_v$  is rarely important.

### One-Dimensional Energy-Flux Terms

If the control volume has a series of one-dimensional inlets and outlets, as in Fig. 3.5, the surface integral in (3.67) reduces to a summation of outlet fluxes minus inlet fluxes:


$$\begin{aligned} & \int_{CS} (\hat{h} + \frac{1}{2}V^2 + gz) \rho (\mathbf{V} \cdot \mathbf{n}) dA \\ &= \sum (\hat{h} + \frac{1}{2}V^2 + gz)_{out} \dot{m}_{out} - \sum (\hat{h} + \frac{1}{2}V^2 + gz)_{in} \dot{m}_{in} \end{aligned} \quad (3.68)$$

where the values of  $\hat{h}$ ,  $\frac{1}{2}V^2$ , and  $gz$  are taken to be averages over each cross section.

#### EXAMPLE 3.20

A steady flow machine (Fig. E3.20) takes in air at section 1 and discharges it at sections 2 and 3. The properties at each section are as follows:

Section	$A, \text{ ft}^2$	$Q, \text{ ft}^3/\text{s}$	$T, \text{ F}$	$p, \text{ lbf/in}^2 \text{ abs}$	$z, \text{ ft}$
1	0.4	100	70	20	1.0
2	1.0	40	100	30	4.0
3	0.25	50	200	?	1.5

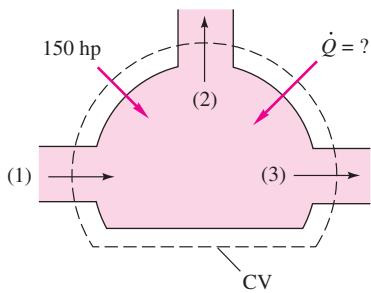

E3.20

Work is provided to the machine at the rate of 150 hp. Find the pressure  $p_3$  in  $\text{lbf/in}^2$  absolute and the heat transfer  $\dot{Q}$  in  $\text{Btu/s}$ . Assume that air is a perfect gas with  $R = 1716$  and  $c_p = 6003 \text{ ft-lbf/(slug} \cdot ^\circ\text{R)}$ .

#### Solution

- System sketch:** Figure E3.20 shows inlet 1 (negative flux) and outlets 2 and 3 (positive fluxes).
- Assumptions:** Steady flow, one-dimensional inlets and outlets, ideal gas, negligible shear work. The flow is *not* incompressible. Note that  $\dot{Q}_1 \neq \dot{Q}_2 + \dot{Q}_3$  because the densities are different.

- **Approach:** Evaluate the velocities and densities and enthalpies and substitute into Eq. (3.67). Use BG units for all properties, including the pressures. With  $Q_i$  given, we evaluate  $V_i = Q_i/A_i$ :

$$V_1 = \frac{Q_1}{A_1} = \frac{100 \text{ ft}^3/\text{s}}{0.4 \text{ ft}^2} = 250 \frac{\text{ft}}{\text{s}} \quad V_2 = \frac{40 \text{ ft}^3/\text{s}}{1.0 \text{ ft}^2} = 40 \frac{\text{ft}}{\text{s}} \quad V_3 = \frac{50 \text{ ft}^3/\text{s}}{0.25 \text{ ft}^2} = 200 \frac{\text{ft}}{\text{s}}$$

The densities at sections 1 and 2 follow from the ideal gas law:

$$\rho_1 = \frac{p_1}{RT_1} = \frac{(20 \times 144) \text{ lbf}/\text{ft}^2}{[1716 \text{ ft-lbf}/(\text{slug}^\circ\text{R})][(70 + 460)^\circ\text{R}]} = 0.00317 \frac{\text{slug}}{\text{ft}^3}$$

$$\rho_2 = \frac{(30 \times 144)}{(1716)(100 + 460)} = 0.00450 \frac{\text{slug}}{\text{ft}^3}$$

However,  $p_3$  is unknown, so how do we find  $\rho_3$ ? Use the steady flow continuity relation:

$$\dot{m}_1 = \dot{m}_2 + \dot{m}_3 \quad \text{or} \quad \rho_1 Q_1 = \rho_2 Q_2 + \rho_3 Q_3 \quad (1)$$

$$\left(0.00317 \frac{\text{slug}}{\text{ft}^3}\right) \left(100 \frac{\text{ft}^3}{\text{s}}\right) = 0.00450(40) + \rho_3(50) \quad \text{solve for } \rho_3 = 0.00274 \frac{\text{slug}}{\text{ft}^3}$$

Knowing  $\rho_3$  enables us to find  $p_3$  from the ideal-gas law:

$$p_3 = \rho_3 RT_3 = \left(0.00274 \frac{\text{slug}}{\text{ft}^3}\right) \left(1716 \frac{\text{ft-lbf}}{\text{slug}^\circ\text{R}}\right) (200 + 460)^\circ\text{R} = 3100 \frac{\text{lbf}}{\text{ft}^2} = 21.5 \frac{\text{lbf}}{\text{in}^2} \quad \text{Ans.}$$

- **Final solution steps:** For an ideal gas, simply approximate enthalpies as  $h_i = c_p T_i$ . The shaft work is *negative* (into the control volume) and viscous work is neglected for this solid-wall machine:

$$\dot{W}_v \approx 0 \quad \dot{W}_s = (-150 \text{ hp}) \left(550 \frac{\text{ft-lbf}}{\text{s-hp}}\right) = -82,500 \frac{\text{ft-lbf}}{\text{s}} \quad (\text{work on the system})$$

For steady flow, the volume integral in Eq. (3.67) vanishes, and the energy equation becomes

$$\dot{Q} - \dot{W}_s = -\dot{m}_1(c_p T_1 + \frac{1}{2} V_1^2 + gz_1) + \dot{m}_2(c_p T_2 + \frac{1}{2} V_2^2 + gz_2) + \dot{m}_3(c_p T_3 + \frac{1}{2} V_3^2 + gz_3) \quad (2)$$

From our continuity calculations in Eq. (1) above, the mass flows are

$$\dot{m}_1 = \rho_1 Q_1 = (0.00317)(100) = 0.317 \frac{\text{slug}}{\text{s}} \quad \dot{m}_2 = \rho_2 Q_2 = 0.180 \frac{\text{slug}}{\text{s}}$$

$$\dot{m}_3 = \rho_3 Q_3 = 0.137 \frac{\text{slug}}{\text{s}}$$

It is instructive to separate the flux terms in the energy equation (2) for examination:

$$\begin{aligned} \text{Enthalpy flux} &= c_p(-\dot{m}_1 T_1 + \dot{m}_2 T_2 + \dot{m}_3 T_3) \\ &= (6003)[(-0.317)(530) + (0.180)(560) + (0.137)(660)] \\ &= -1,009,000 + 605,000 + 543,000 \approx +139,000 \text{ ft-lbf/s} \end{aligned}$$

$$\begin{aligned} \text{Kinetic energy flux} &= \frac{1}{2}(-\dot{m}_1 V_1^2 + \dot{m}_2 V_2^2 + \dot{m}_3 V_3^2) \\ &= \frac{1}{2}[-0.317(250)^2 + (0.180)(40)^2 + (0.137)(200)^2] \\ &= -9900 + 140 + 2740 \approx -7000 \text{ ft-lbf/s} \end{aligned}$$

$$\begin{aligned} \text{Potential energy flux} &= g(-\dot{m}_1 z_1 + \dot{m}_2 z_2 + \dot{m}_3 z_3) \\ &= (32.2)[-0.317(1.0) + 0.180(4.0) + 0.137(1.5)] \\ &= -10 + 23 + 7 \approx +20 \text{ ft-lbf/s} \end{aligned}$$

Equation (2) may now be evaluated for the heat transfer:

$$\dot{Q} - (-82,500) = 139,000 - 7,000 + 20$$

or  $\dot{Q} \approx \left( +49,520 \frac{\text{ft-lbf}}{\text{s}} \right) \left( \frac{1 \text{ Btu}}{778.2 \text{ ft-lbf}} \right) = + 64 \frac{\text{Btu}}{\text{s}}$  Ans.

- *Comments:* The heat transfer is positive, which means *into* the control volume. It is typical of gas flows that potential energy flux is negligible, enthalpy flux is dominant, and kinetic energy flux is small unless the velocities are very high (that is, high subsonic or supersonic).

### The Steady Flow Energy Equation

For steady flow with one inlet and one outlet, both assumed one-dimensional, Eq. (3.67) reduces to a celebrated relation used in many engineering analyses. Let section 1 be the inlet and section 2 the outlet. Then

$$\dot{Q} - \dot{W}_s - \dot{W}_v = -\dot{m}_1(\hat{h}_1 + \frac{1}{2}V_1^2 + gz_1) + \dot{m}_2(\hat{h}_2 + \frac{1}{2}V_2^2 + gz_2) \quad (3.69)$$

But, from continuity,  $\dot{m}_1 = \dot{m}_2 = \dot{m}$ , we can rearrange (3.65) as follows:

$$\hat{h}_1 + \frac{1}{2}V_1^2 + gz_1 = (\hat{h}_2 + \frac{1}{2}V_2^2 + gz_2) - q + w_s + w_v \quad (3.70)$$

where  $q = \dot{Q}/\dot{m} = dQ/dm$ , the heat transferred to the fluid per unit mass. Similarly,  $w_s = \dot{W}_s/\dot{m} = dW_s/dm$  and  $w_v = \dot{W}_v/\dot{m} = dW_v/dm$ . Equation (3.70) is a general form of the *steady flow energy equation*, which states that the upstream stagnation enthalpy  $H_1 = (h + \frac{1}{2}V^2 + gz)_1$  differs from the downstream value  $H_2$  only if there is heat transfer, shaft work, or viscous work as the fluid passes between sections 1 and 2. Recall that  $q$  is positive if heat is added to the control volume and that  $w_s$  and  $w_v$  are positive if work is done by the fluid on the surroundings.

Each term in Eq. (3.70) has the dimensions of energy per unit mass, or velocity squared, which is a form commonly used by mechanical engineers. If we divide through by  $g$ , each term becomes a length, or head, which is a form preferred by civil engineers. The traditional symbol for head is  $h$ , which we do not wish to confuse with enthalpy. Therefore we use internal energy in rewriting the head form of the energy relation:

$$\frac{p_1}{\gamma} + \frac{\hat{u}_1}{g} + \frac{V_1^2}{2g} + z_1 = \frac{p_2}{\gamma} + \frac{\hat{u}_2}{g} + \frac{V_2^2}{2g} + z_2 - h_q + h_s + h_v \quad (3.71)$$

where  $h_q = q/g$ ,  $h_s = w_s/g$ , and  $h_v = w_v/g$  are the head forms of the heat added, shaft work done, and viscous work done, respectively. The term  $p/\gamma$  is called *pressure head*, and the term  $V^2/2g$  is denoted as *velocity head*.

### Friction and Shaft Work in Low-Speed Flow

A common application of the steady flow energy equation is for low-speed (incompressible) flow through a pipe or duct. A pump or turbine may be included in the pipe system. The pipe and machine walls are solid, so the viscous work is zero. Equation (3.71) may be written as

$$\left( \frac{p_1}{\gamma} + \frac{V_1^2}{2g} + z_1 \right) = \left( \frac{p_2}{\gamma} + \frac{V_2^2}{2g} + z_2 \right) + \frac{\hat{u}_2 - \hat{u}_1 - q}{g} \quad (3.72)$$

Every term in this equation is a length, or *head*. The terms in parentheses are the upstream (1) and downstream (2) values of the useful or *available head* or *total head* of the flow, denoted by  $h_0$ . The last term on the right is the difference ( $h_{01} - h_{02}$ ), which can include pump head input, turbine head extraction, and the friction head loss  $h_f$ , always *positive*. Thus, in incompressible flow with one inlet and one outlet, we may write

$$\left( \frac{p}{\gamma} + \frac{V^2}{2g} + z \right)_{in} = \left( \frac{p}{\gamma} + \frac{V^2}{2g} + z \right)_{out} + h_{friction} - h_{pump} + h_{turbine} \quad (3.73)$$

Most of our internal flow problems will be solved with the aid of Eq. (3.73). The  $h$  terms are all positive; that is, friction loss is always positive in real (viscous) flows, a pump adds energy (increases the left-hand side), and a turbine extracts energy from the flow. If  $h_p$  and/or  $h_t$  are included, the pump and/or turbine must lie *between* points 1 and 2. In Chaps. 5 and 6 we shall develop methods of correlating  $h_f$  losses with flow parameters in pipes, valves, fittings, and other internal flow devices.

### EXAMPLE 3.21

Gasoline at 20°C is pumped through a smooth 12-cm-diameter pipe 10 km long, at a flow rate of 75 m<sup>3</sup>/h (330 gal/min). The inlet is fed by a pump at an absolute pressure of 24 atm. The exit is at standard atmospheric pressure and is 150 m higher. Estimate the frictional head loss  $h_f$ , and compare it to the velocity head of the flow  $V^2/(2g)$ . (These numbers are quite realistic for liquid flow through long pipelines.)

#### Solution

- *Property values:* From Table A.3 for gasoline at 20°C,  $\rho = 680 \text{ kg/m}^3$ , or  $\gamma = (680)(9.81) = 6670 \text{ N/m}^3$ .
- *Assumptions:* Steady flow. No shaft work, thus  $h_p = h_t = 0$ . If  $z_1 = 0$ , then  $z_2 = 150 \text{ m}$ .
- *Approach:* Find the velocity and the velocity head. These are needed for comparison. Then evaluate the friction loss from Eq. (3.73).
- *Solution steps:* Since the pipe diameter is constant, the average velocity is the same everywhere:

$$V_{in} = V_{out} = \frac{Q}{A} = \frac{Q}{(\pi/4)D^2} = \frac{(75 \text{ m}^3/\text{h})/(3600 \text{ s/h})}{(\pi/4)(0.12 \text{ m})^2} \approx 1.84 \frac{\text{m}}{\text{s}}$$

$$\text{Velocity head} = \frac{V^2}{2g} = \frac{(1.84 \text{ m/s})^2}{2(9.81 \text{ m/s}^2)} \approx 0.173 \text{ m}$$

Substitute into Eq. (3.73) and solve for the friction head loss. Use pascals for the pressures and note that the velocity heads cancel because of the constant-area pipe.

$$\begin{aligned} \frac{p_{in}}{\gamma} + \frac{V_{in}^2}{2g} + z_{in} &= \frac{p_{out}}{\gamma} + \frac{V_{out}^2}{2g} + z_{out} + h_f \\ \frac{(24)(101,350 \text{ N/m}^2)}{6670 \text{ N/m}^3} + 0.173 \text{ m} + 0 \text{ m} &= \frac{101,350 \text{ N/m}^2}{6670 \text{ N/m}^3} + 0.173 \text{ m} + 150 \text{ m} + h_f \end{aligned}$$

or

$$h_f = 364.7 - 15.2 - 150 \approx 199 \text{ m}$$

*Ans.*


The friction head is larger than the elevation change  $\Delta z$ , and the pump must drive the flow against both changes, hence the high inlet pressure. The ratio of friction to velocity head is

$$\frac{h_f}{V^2/(2g)} \approx \frac{199 \text{ m}}{0.173 \text{ m}} \approx 1150 \quad \text{Ans.}$$

- Comments:* This high ratio is typical of long pipelines. (Note that we did not make direct use of the 10,000-m pipe length, whose effect is hidden within  $h_f$ .) In Chap. 6 we can state this problem in a more direct fashion: Given the flow rate, fluid, and pipe size, what inlet pressure is needed? Our correlations for  $h_f$  will lead to the estimate  $p_{\text{inlet}} \approx 24$  atm, as stated here.

### EXAMPLE 3.22

Air [ $R = 1716$ ,  $c_p = 6003 \text{ ft} \cdot \text{lbf}/(\text{slug} \cdot ^\circ\text{R})$ ] flows steadily, as shown in Fig. E3.22, through a turbine that produces 700 hp. For the inlet and exit conditions shown, estimate (a) the exit velocity  $V_2$  and (b) the heat transferred  $\dot{Q}$  in Btu/h.

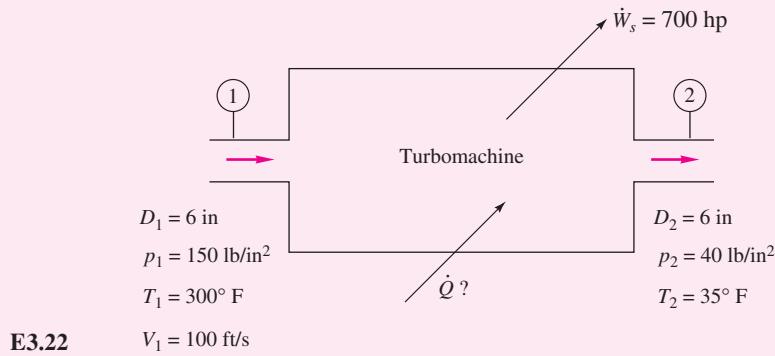

### Solution

#### Part (a)

The inlet and exit densities can be computed from the perfect-gas law:

$$\rho_1 = \frac{p_1}{RT_1} = \frac{150(144)}{1716(460 + 300)} = 0.0166 \text{ slug/ft}^3$$

$$\rho_2 = \frac{p_2}{RT_2} = \frac{40(144)}{1716(460 + 35)} = 0.00679 \text{ slug/ft}^3$$

The mass flow is determined by the inlet conditions

$$\dot{m} = \rho_1 A_1 V_1 = (0.0166) \frac{\pi}{4} \left( \frac{6}{12} \right)^2 (100) = 0.325 \text{ slug/s}$$

Knowing mass flow, we compute the exit velocity

$$\dot{m} = 0.325 = \rho_2 A_2 V_2 = (0.00679) \frac{\pi}{4} \left( \frac{6}{12} \right)^2 V_2$$

or

$$V_2 = 244 \text{ ft/s}$$

Ans. (a)

**Part (b)**

The steady flow energy equation (3.69) applies with  $\dot{W}_v = 0$ ,  $z_1 = z_2$ , and  $\hat{h} = c_p T$ :

$$\dot{Q} - \dot{W}_s = \dot{m}(c_p T_2 + \frac{1}{2}V_2^2 - c_p T_1 - \frac{1}{2}V_1^2)$$

Convert the turbine work to foot-pounds-force per second with the conversion factor 1 hp = 550 ft · lbf/s. The turbine work  $\dot{W}_s$  is positive

$$\begin{aligned}\dot{Q} - 700(550) &= 0.325[6003(495) + \frac{1}{2}(244)^2 - 6003(760) - \frac{1}{2}(100)^2] \\ &= -510,000 \text{ ft · lbf/s}\end{aligned}$$

or

$$\dot{Q} = -125,000 \text{ ft · lbf/s}$$

Convert this to British thermal units as follows:

$$\begin{aligned}\dot{Q} &= (-125,000 \text{ ft · lbf/s}) \frac{3600 \text{ s/h}}{778.2 \text{ ft · lbf/Btu}} \\ &= -578,000 \text{ Btu/h}\end{aligned}$$

*Ans. (b)*

The negative sign indicates that this heat transfer is a *loss* from the control volume.

**Kinetic Energy Correction Factor**

Often the flow entering or leaving a port is not strictly one-dimensional. In particular, the velocity may vary over the cross section, as in Fig. E3.4. In this case the kinetic energy term in Eq. (3.68) for a given port should be modified by a dimensionless correction factor  $\alpha$  so that the integral can be proportional to the square of the average velocity through the port:

$$\int_{\text{port}} (\frac{1}{2} V^2) \rho (\mathbf{V} \cdot \mathbf{n}) dA \equiv \alpha (\frac{1}{2} V_{\text{av}}^2) \dot{m}$$

where  $V_{\text{av}} = \frac{1}{A} \int u dA$  for incompressible flow

If the density is also variable, the integration is very cumbersome; we shall not treat this complication. By letting  $u$  be the velocity normal to the port, the first equation above becomes, for incompressible flow,

$$\begin{aligned}\frac{1}{2} \rho \int u^3 dA &= \frac{1}{2} \rho \alpha V_{\text{av}}^3 A \\ \text{or } \alpha &= \frac{1}{A} \int \left( \frac{u}{V_{\text{av}}} \right)^3 dA\end{aligned}\tag{3.74}$$

The term  $\alpha$  is the kinetic energy correction factor, having a value of about 2.0 for fully developed laminar pipe flow and from 1.04 to 1.11 for turbulent pipe flow. The complete incompressible steady flow energy equation (3.73), including pumps, turbines, and losses, would generalize to

$$\left( \frac{p}{\rho g} + \frac{\alpha}{2g} V^2 + z \right)_{\text{in}} = \left( \frac{p}{\rho g} + \frac{\alpha}{2g} V^2 + z \right)_{\text{out}} + h_{\text{turbine}} - h_{\text{pump}} + h_{\text{friction}}\tag{3.75}$$

where the head terms on the right ( $h_t$ ,  $h_p$ ,  $h_f$ ) are all numerically positive. All additive terms in Eq. (3.75) have dimensions of length  $\{L\}$ . In problems involving turbulent pipe flow, it is common to assume that  $\alpha \approx 1.0$ . To compute numerical values, we can use these approximations to be discussed in Chap. 6:

$$\text{Laminar flow: } u = U_0 \left[ 1 - \left( \frac{r}{R} \right)^2 \right]$$

from which  $V_{av} = 0.5U_0$   
and  $\alpha = 2.0$

$$\text{Turbulent flow: } u \approx U_0 \left( 1 - \frac{r}{R} \right)^m \quad m \approx \frac{1}{7}$$

from which, in Example 3.4,

$$V_{av} = \frac{2U_0}{(1+m)(2+m)}$$

Substituting into Eq. (3.74) gives

$$\alpha = \frac{(1+m)^3(2+m)^3}{4(1+3m)(2+3m)} \quad (3.77)$$

and numerical values are as follows:

Turbulent fw:	$m$	$\frac{1}{5}$	$\frac{1}{6}$	$\frac{1}{7}$	$\frac{1}{8}$	$\frac{1}{9}$
	$\alpha$	1.106	1.077	1.058	1.046	1.037


These values are only slightly different from unity and are often neglected in elementary turbulent flow analyses. However,  $\alpha$  should never be neglected in laminar flow.

### EXAMPLE 3.23

A hydroelectric power plant (Fig. E3.23) takes in  $30 \text{ m}^3/\text{s}$  of water through its turbine and discharges it to the atmosphere at  $V_2 = 2 \text{ m/s}$ . The head loss in the turbine and penstock system is  $h_f = 20 \text{ m}$ . Assuming turbulent flow,  $\alpha \approx 1.06$ , estimate the power in MW extracted by the turbine.

### Solution

We neglect viscous work and heat transfer and take section 1 at the reservoir surface (Fig. E3.23), where  $V_1 \approx 0$ ,  $p_1 = p_{atm}$ , and  $z_1 = 100 \text{ m}$ . Section 2 is at the turbine outlet.

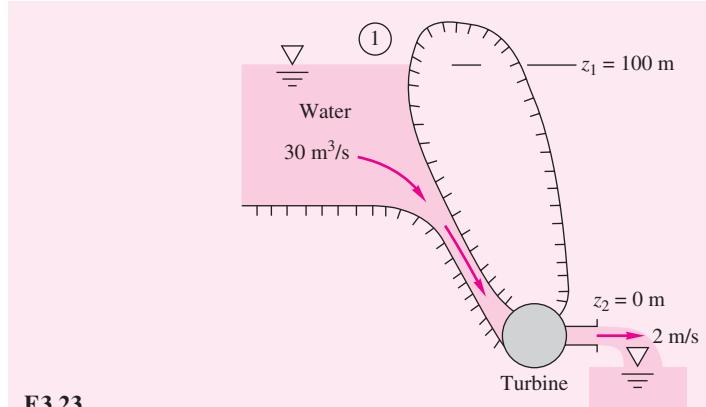

E3.23

The steady flow energy equation (3.75) becomes, in head form,

$$\frac{p_1}{\gamma} + \frac{\alpha_1 V_1^2}{2g} + z_1 = \frac{p_2}{\gamma} + \frac{\alpha_2 V_2^2}{2g} + z_2 + h_t + h_f$$

$$\frac{p_a}{\gamma} + \frac{1.06(0)^2}{2(9.81)} + 100 \text{ m} = \frac{p_a}{\gamma} + \frac{1.06(2.0 \text{ m/s})^2}{2(9.81 \text{ m/s}^2)} + 0 \text{ m} + h_t + 20 \text{ m}$$

The pressure terms cancel, and we may solve for the turbine head (which is positive):

$$h_t = 100 - 20 - 0.2 \approx 79.8 \text{ m}$$

The turbine extracts about 79.8 percent of the 100-m head available from the dam. The total power extracted may be evaluated from the water mass flow:


$$P = \dot{m} w_s = (\rho Q)(gh_t) = (998 \text{ kg/m}^3)(30 \text{ m}^3/\text{s})(9.81 \text{ m/s}^2)(79.8 \text{ m})$$

$$= 23.4 \text{ E}6 \text{ kg} \cdot \text{m}^2/\text{s}^3 = 23.4 \text{ E}6 \text{ N} \cdot \text{m/s} = 23.4 \text{ MW} \quad \text{Ans.}$$

The turbine drives an electric generator that probably has losses of about 15 percent, so the net power generated by this hydroelectric plant is about 20 MW.

#### EXAMPLE 3.24

The pump in Fig. E3.24 delivers water ( $62.4 \text{ lbf/in}^3$ ) at  $1.5 \text{ ft}^3/\text{s}$  to a machine at section 2, which is 20 ft higher than the reservoir surface. The losses between 1 and 2 are given by

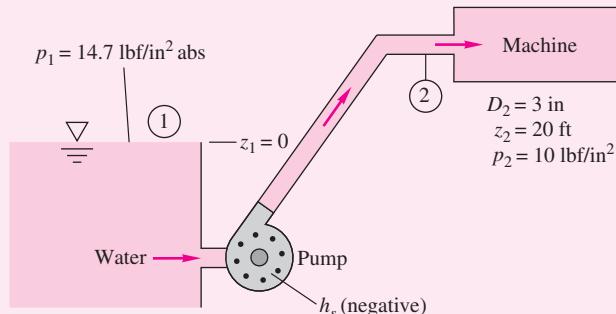

E3.24

$h_f = KV_2^2/(2g)$ , where  $K \approx 7.5$  is a dimensionless loss coefficient (see Sec. 6.7). Take  $\alpha \approx 1.07$ . Find the horsepower required for the pump if it is 80 percent efficient.

### Solution

- *System sketch:* Figure E3.24 shows the proper selection for sections 1 and 2.
- *Assumptions:* Steady flow, negligible viscous work, large reservoir ( $V_1 \approx 0$ ).
- *Approach:* First find the velocity  $V_2$  at the exit, then apply the steady flow energy equation.
- *Solution steps:* Use BG units,  $p_1 = 14.7(144) = 2117 \text{ lbf/ft}^2$  and  $p_2 = 10(144) = 1440 \text{ lbf/ft}^2$ .

Find  $V_2$  from the known flow rate and the pipe diameter:

$$V_2 = \frac{Q}{A_2} = \frac{1.5 \text{ ft}^3/\text{s}}{(\pi/4)(3/12 \text{ ft})^2} = 30.6 \text{ ft/s}$$

The steady flow energy equation (3.75), with a pump (no turbine) plus  $z_1 \approx 0$  and  $V_1 \approx 0$ , becomes

$$\frac{p_1}{\gamma} + \frac{\alpha_1 V_1^2}{2g} + z_1 = \frac{p_2}{\gamma} + \frac{\alpha_2 V_2^2}{2g} + z_2 - h_p + h_f, \quad h_f = K \frac{V_2^2}{2g}$$

or

$$h_p = \frac{p_2 - p_1}{\gamma} + z_2 + (\alpha_2 + K) \frac{V_2^2}{2g}$$

- *Comment:* The pump must balance four different effects: the pressure change, the elevation change, the exit jet kinetic energy, and the friction losses.
- *Final solution:* For the given data, we can evaluate the required pump head:

$$h_p = \frac{(1440 - 2117) \text{ lbf/ft}^2}{62.4 \text{ lbf/ft}^3} + 20 + (1.07 + 7.5) \frac{(30.6 \text{ ft/s})^2}{2(32.2 \text{ ft/s}^2)} = -11 + 20 + 124 = 133 \text{ ft}$$

With the pump head known, the delivered pump power is computed similar to the turbine in Example 3.23:

$$\begin{aligned} P_{\text{pump}} &= \dot{m} w_s = \gamma Q h_p = \left( 62.4 \frac{\text{lbf}}{\text{ft}^3} \right) \left( 1.5 \frac{\text{ft}^3}{\text{s}} \right) (133 \text{ ft}) \\ &= 12450 \frac{\text{ft-lbf}}{\text{s}} = \frac{12,450 \text{ ft-lbf/s}}{550 \text{ ft-lbf/(s-hp)}} = 22.6 \text{ hp} \end{aligned}$$

If the pump is 80 percent efficient, then we divide by the efficiency to find the input power required:

$$P_{\text{input}} = \frac{P_{\text{pump}}}{\text{efficiency}} = \frac{22.6 \text{ hp}}{0.80} = 28.3 \text{ hp} \quad \text{Ans.}$$

- *Comment:* The inclusion of the kinetic energy correction factor  $\alpha$  in this case made a difference of about 1 percent in the result. The friction loss, not the exit jet, was the dominant parameter.

## Summary

This chapter has analyzed the four basic equations of fluid mechanics: conservation of (1) mass, (2) linear momentum, (3) angular momentum, and (4) energy. The equations were attacked “in the large”—that is, applied to whole regions of a flow. As such, the typical analysis will involve an approximation of the flow field within the region, giving somewhat crude but always instructive quantitative results. However, the basic control volume relations are rigorous and correct and will give exact results if applied to the exact flow field.

There are two main points to a control volume analysis. The first is the selection of a proper, clever, workable control volume. There is no substitute for experience, but the following guidelines apply. The control volume should cut through the place where the information or solution is desired. It should cut through places where maximum information is already known. If the momentum equation is to be used, it should *not* cut through solid walls unless absolutely necessary, since this will expose possible unknown stresses and forces and moments that make the solution for the desired force difficult or impossible. Finally, every attempt should be made to place the control volume in a frame of reference where the flow is steady or quasi-steady, since the steady formulation is much simpler to evaluate.

The second main point to a control volume analysis is the reduction of the analysis to a case that applies to the problem at hand. The 24 examples in this chapter give only an introduction to the search for appropriate simplifying assumptions. You will need to solve 24 or 124 more examples to become truly experienced in simplifying the problem just enough and no more. In the meantime, it would be wise for the beginner to adopt a very general form of the control volume conservation laws and then make a series of simplifications to achieve the final analysis. Starting with the general form, one can ask a series of questions:

1. Is the control volume nondeforming or nonaccelerating?
2. Is the flow field steady? Can we change to a steady flow frame?
3. Can friction be neglected?
4. Is the fluid incompressible? If not, is the perfect-gas law applicable?
5. Are gravity or other body forces negligible?
6. Is there heat transfer, shaft work, or viscous work?
7. Are the inlet and outlet flows approximately one-dimensional?
8. Is atmospheric pressure important to the analysis? Is the pressure hydrostatic on any portions of the control surface?
9. Are there reservoir conditions that change so slowly that the velocity and time rates of change can be neglected?

In this way, by approving or rejecting a list of basic simplifications like these, one can avoid pulling Bernoulli’s equation off the shelf when it does not apply.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon  will benefit from the use of the Engineering Equation Solver (EES), while figures with a computer icon  may require the use of a computer. The standard

end-of-chapter problems P3.1 to P3.185 (categorized in the problem list here) are followed by word problems W3.1 to W3.7, fundamentals of engineering (FE) exam problems FE3.1 to FE3.10, comprehensive problems C3.1 to C3.5, and design project D3.1.

**Problem Distribution**

Section	Topic	Problems
3.1	Basic physical laws; volume flow	P3.1–P3.5
3.2	The Reynolds transport theorem	P3.6–P3.9
3.3	Conservation of mass	P3.10–P3.38
3.4	The linear momentum equation	P3.39–P3.109
3.5	The Bernoulli equation	P3.110–P3.148
3.6	The angular momentum theorem	P3.149–P3.164
3.7	The energy equation	P3.165–P3.185

**Basic physical laws; volume flow**

- P3.1** Discuss Newton's second law (the linear momentum relation) in these three forms:

$$\sum \mathbf{F} = m\mathbf{a} \quad \sum \mathbf{F} = \frac{d}{dt}(m\mathbf{V})$$

$$\sum \mathbf{F} = \frac{d}{dt} \left( \int_{\text{system}} \mathbf{V}\rho \, dV \right)$$

Are they all equally valid? Are they equivalent? Are some forms better for fluid mechanics as opposed to solid mechanics?

- P3.2** Consider the angular momentum relation in the form

$$\sum \mathbf{M}_o = \frac{d}{dt} \left[ \int_{\text{system}} (\mathbf{r} \times \mathbf{V})\rho \, dV \right]$$

What does  $\mathbf{r}$  mean in this relation? Is this relation valid in both solid and fluid mechanics? Is it related to the *linear* momentum equation (Prob. 3.1)? In what manner?

- P3.3** For steady low-Reynolds-number (laminar) flow through a long tube (see Prob. 1.12), the axial velocity distribution is given by  $u = C(R^2 - r^2)$ , where  $R$  is the tube radius and  $r \leq R$ . Integrate  $u(r)$  to find the total volume flow  $Q$  through the tube.


- P3.4** A fire hose has a 5-in inside diameter and water is flowing at 600 gal/min. The flow exits through a nozzle contraction with a diameter  $D_n$ . For steady flow, what should  $D_n$  be, in inches, to create an average exit velocity of 25 m/s?

- P3.5** Water at 20°C flows through a 5-in-diameter smooth pipe at a high Reynolds number, for which the velocity profile is approximated by  $u \approx U_o(y/R)^{1/8}$ , where  $U_o$  is the centerline velocity,  $R$  is the pipe radius, and  $y$  is the distance measured from the wall toward the centerline. If the centerline velocity is 25 ft/s, estimate the volume flow rate in gallons per minute.

**The Reynolds transport theorem**

- P3.6** When a gravity-driven liquid jet issues from a slot in a tank, as in Fig. P3.6, an approximation for the exit veloc-


ity distribution is  $u \approx \sqrt{2g(h - z)}$ , where  $h$  is the depth of the jet centerline. Near the slot, the jet is horizontal, two-dimensional, and of thickness  $2L$ , as shown. Find a general expression for the total volume flow  $Q$  issuing from the slot; then take the limit of your result if  $L \ll h$ .

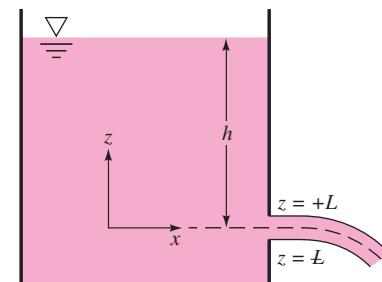

P3.6

- P3.7** A spherical tank, of diameter 35 cm, is leaking air through a 5-mm-diameter hole in its side. The air exits the hole at 360 m/s and a density of 2.5 kg/m<sup>3</sup>. Assuming uniform mixing, (a) find a formula for the rate of change of average density in the tank and (b) calculate a numerical value for  $(dp/dt)$  in the tank for the given data.

- P3.8** Three pipes steadily deliver water at 20°C to a large exit pipe in Fig. P3.8. The velocity  $V_2 = 5$  m/s, and the exit flow rate  $Q_4 = 120$  m<sup>3</sup>/h. Find (a)  $V_1$ , (b)  $V_3$ , and (c)  $V_4$  if it is known that increasing  $Q_3$  by 20 percent would increase  $Q_4$  by 10 percent.

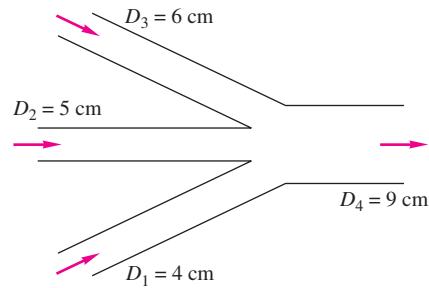


P3.8

A laboratory test tank contains seawater of salinity  $S$  and density  $\rho$ . Water enters the tank at conditions  $(S_1, \rho_1, A_1, V_1)$  and is assumed to mix immediately in the tank. Tank water leaves through an outlet  $A_2$  at velocity  $V_2$ . If salt is a "conservative" property (neither created nor destroyed), use the Reynolds transport theorem to find an expression for the rate of change of salt mass  $M_{\text{salt}}$  within the tank.

**Conservation of mass**


- P3.10** Water flowing through an 8-cm-diameter pipe enters a porous section, as in Fig. P3.10, which allows a uniform

radial velocity  $v_w$  through the wall surfaces for a distance of 1.2 m. If the entrance average velocity  $V_1$  is 12 m/s, find the exit velocity  $V_2$  if (a)  $v_w = 15$  cm/s out of the pipe walls or (b)  $v_w = 10$  cm/s into the pipe. (c) What value of  $v_w$  will make  $V_2 = 9$  m/s?

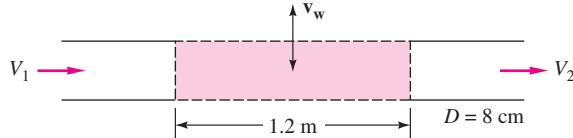


P3.10

- P3.11** The inlet section of a vacuum cleaner is a rectangle, 1 in by 5 in. The blower is able to provide suction at 25 cubic feet per minute. (a) What is the average velocity at the inlet, in m/s? (b) If conditions are sea level standard, what is the mass flow of air, in kg/s?
- P3.12** The pipe flow in Fig. P3.12 fills a cylindrical surge tank as shown. At time  $t = 0$ , the water depth in the tank is 30 cm. Estimate the time required to fill the remainder of the tank.

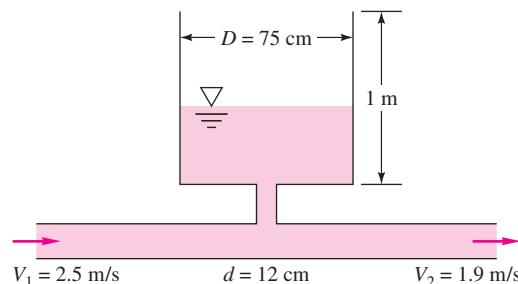


P3.12


- P3.13** The cylindrical container in Fig. P3.13 is 20 cm in diameter and has a conical contraction at the bottom with an exit hole 3 cm in diameter. The tank contains fresh water at standard sea-level conditions. If the water surface is falling at the nearly steady rate  $dh/dt \approx -0.072$  m/s, estimate the average velocity  $V$  out of the bottom exit.
- P3.14** The open tank in Fig. P3.14 contains water at 20°C and is being filled through section 1. Assume incompressible flow. First derive an analytic expression for the water-level change  $dh/dt$  in terms of arbitrary volume flows ( $Q_1$ ,  $Q_2$ ,  $Q_3$ ) and tank diameter  $d$ . Then, if the water level  $h$  is constant, determine the exit velocity  $V_2$  for the given data  $V_1 = 3$  m/s and  $Q_3 = 0.01$  m<sup>3</sup>/s.

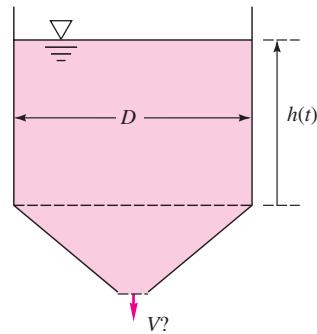

P3.13

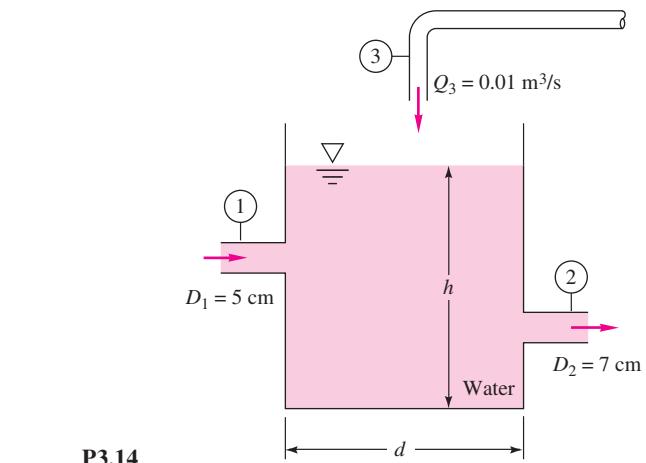

- P3.15** Water, assumed incompressible, flows steadily through the round pipe in Fig. P3.15. The entrance velocity is constant,  $u = U_0$ , and the exit velocity approximates turbulent flow,  $u = u_{\max}(1 - r/R)^{1/7}$ . Determine the ratio  $U_0/u_{\max}$  for this flow.

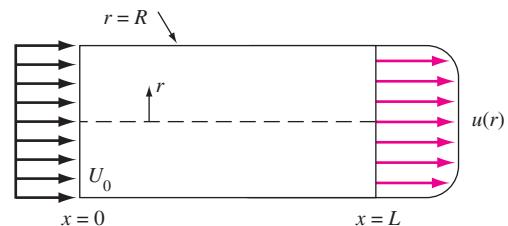


P3.15

- P3.16** An incompressible fluid flows past an impermeable flat plate, as in Fig. P3.16, with a uniform inlet profile  $u = U_0$  and a cubic polynomial exit profile


$$u \approx U_0 \left( \frac{3\eta - \eta^3}{2} \right) \text{ where } \eta = \frac{y}{\delta}$$

Compute the volume flow  $Q$  across the top surface of the control volume.

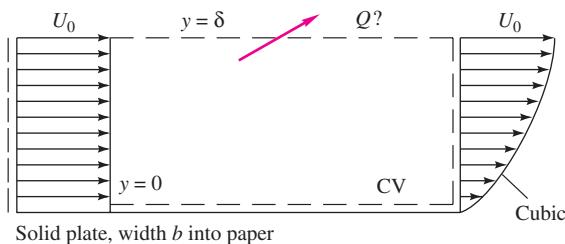

**P3.16**

- P3.17** Incompressible steady flow in the inlet between parallel plates in Fig. P3.17 is uniform,  $u = U_0 = 8 \text{ cm/s}$ , while downstream the flow develops into the parabolic laminar profile  $u = az(z_0 - z)$ , where  $a$  is a constant. If  $z_0 = 4 \text{ cm}$  and the fluid is SAE 30 oil at  $20^\circ\text{C}$ , what is the value of  $u_{\max}$  in cm/s?

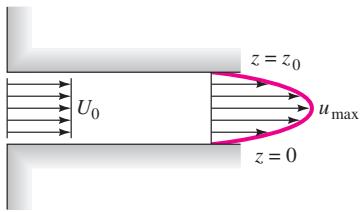


**P3.17**

- P3.18** An incompressible fluid flows steadily through the rectangular duct in Fig. P3.18. The exit velocity profile is given approximately by


$$u = u_{\max} \left( 1 - \frac{y^2}{b^2} \right) \left( 1 - \frac{z^2}{h^2} \right)$$

(a) Does this profile satisfy the correct boundary conditions for viscous fluid flow? (b) Find an analytical expression for the volume flow  $Q$  at the exit. (c) If the inlet flow is  $300 \text{ ft}^3/\text{min}$ , estimate  $u_{\max}$  in m/s for  $b = h = 10 \text{ cm}$ .

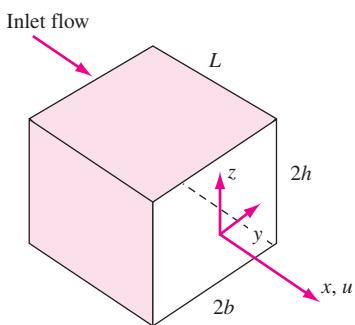


**P3.18**

- P3.19** Water from a storm drain flows over an outfall onto a porous bed that absorbs the water at a uniform vertical velocity of  $8 \text{ mm/s}$ , as shown in Fig. P3.19. The system is  $5 \text{ m}$  deep into the paper. Find the length  $L$  of the bed that will completely absorb the storm water.

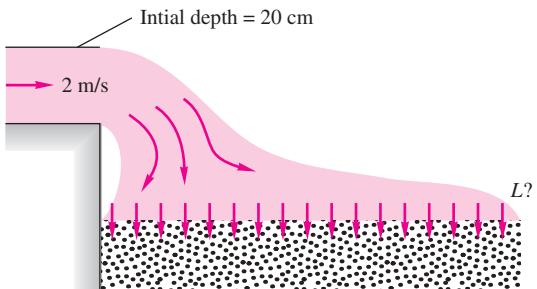

**P3.19**

- P3.20** Oil ( $\text{SG} = 0.89$ ) enters at section 1 in Fig. P3.20 at a weight flow of  $250 \text{ N/h}$  to lubricate a thrust bearing. The steady oil flow exits radially through the narrow clearance between thrust plates. Compute (a) the outlet volume flux in  $\text{mL/s}$  and (b) the average outlet velocity in  $\text{cm/s}$ .

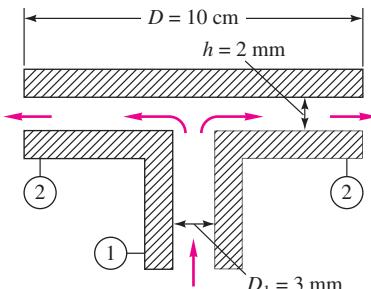


**P3.20**


- P3.21** For the two-port tank in Fig. E3.5, let the dimensions remain the same, but assume  $V_2 = 3 \text{ ft/s}$  and that  $V_1$  is unknown. If the water surface is rising at a rate of  $1 \text{ in/s}$ , (a) determine the average velocity at section 1. (b) Is the flow at section 1 in or out?

- P3.22** The converging-diverging nozzle shown in Fig. P3.22 expands and accelerates dry air to supersonic speeds at the exit, where  $p_2 = 8 \text{ kPa}$  and  $T_2 = 240 \text{ K}$ . At the throat,  $p_1 = 284 \text{ kPa}$ ,  $T_1 = 665 \text{ K}$ , and  $V_1 = 517 \text{ m/s}$ . For steady compressible flow of an ideal gas, estimate (a) the mass flow in  $\text{kg/h}$ , (b) the velocity  $V_2$ , and (c) the Mach number  $\text{Ma}_2$ .


- P3.23** The hypodermic needle in Fig. P3.23 contains a liquid serum ( $\text{SG} = 1.05$ ). If the serum is to be injected steadily at  $6 \text{ cm}^3/\text{s}$ , how fast in  $\text{in/s}$  should the plunger be

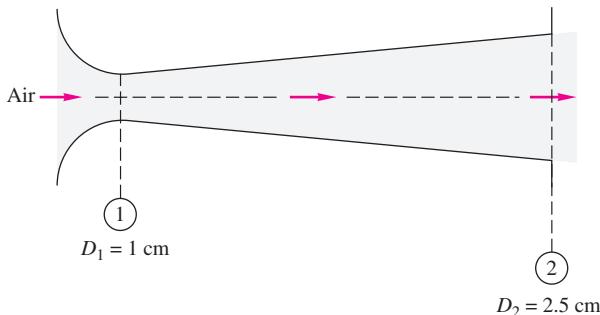

P3.22

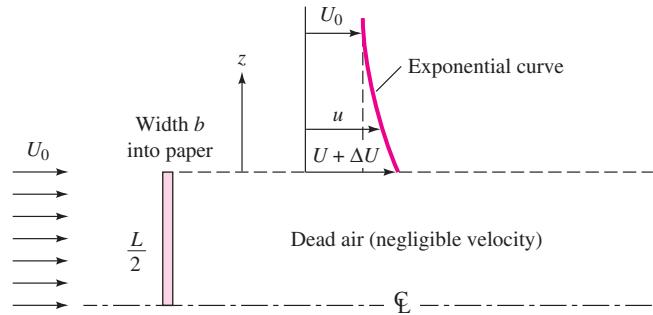


P3.25

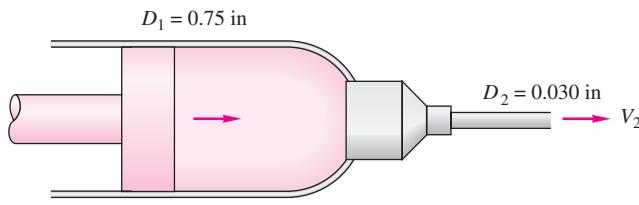

P3.23

advanced (a) if leakage in the plunger clearance is neglected and (b) if leakage is 10 percent of the needle flow?


- \*P3.24 Water enters the bottom of the cone in Fig. P3.24 at a uniformly increasing average velocity  $V = Kt$ . If  $d$  is very small, derive an analytic formula for the water surface rise  $h(t)$  for the condition  $h = 0$  at  $t = 0$ . Assume incompressible flow.

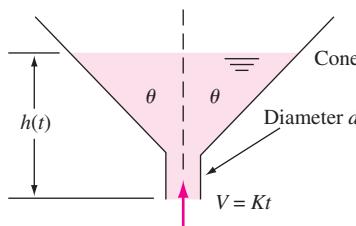

P3.24

- P3.25 As will be discussed in Chaps. 7 and 8, the flow of a stream  $U_0$  past a blunt flat plate creates a broad low-velocity wake behind the plate. A simple model is given in Fig. P3.25, with only half of the flow shown due to symmetry. The velocity profile behind the plate is idealized as "dead air" (near-zero velocity) behind the plate, plus a higher velocity, decaying vertically above the wake according to the variation  $u \approx U_0 + \Delta U e^{-z/L}$ , where  $L$  is the plate height and  $z = 0$  is the top of the wake. Find  $\Delta U$  as a function of stream speed  $U_0$ .

- P3.26 A thin layer of liquid, draining from an inclined plane, as in Fig. P3.26, will have a laminar velocity profile  $u \approx U_0(2y/h - y^2/h^2)$ , where  $U_0$  is the surface velocity. If the

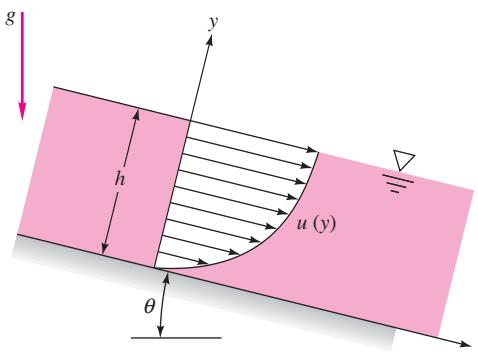

P3.26

plane has width  $b$  into the paper, determine the volume rate of flow in the film. Suppose that  $h = 0.5$  in and the flow rate per foot of channel width is 1.25 gal/min. Estimate  $U_0$  in ft/s.

- P3.27 Consider a highly pressurized air tank at conditions  $(p_0, \rho_0, T_0)$  and volume  $v_0$ . In Chap. 9 we will learn that, if the tank is allowed to exhaust to the atmosphere through a well-designed converging nozzle of exit area  $A$ , the outgoing mass flow rate will be


$$\dot{m} = \frac{\alpha p_0 A}{\sqrt{RT_0}} \quad \text{where } \alpha \approx 0.685 \text{ for air}$$

This rate persists as long as  $p_0$  is at least twice as large as the atmospheric pressure. Assuming constant  $T_0$  and an ideal gas, (a) derive a formula for the change of density  $\rho_0(t)$  within the tank. (b) Analyze the time  $\Delta t$  required for the density to decrease by 25 percent.


- P3.28 Air, assumed to be a perfect gas from Table A.4, flows through a long, 2-cm-diameter insulated tube. At section 1, the pressure is 1.1 MPa and the temperature is 345 K. At section 2, 67 meters further downstream, the density is  $1.34 \text{ kg/m}^3$ , the temperature 298 K, and the Mach

number is 0.90. For one-dimensional flow, calculate (a) the mass flow; (b)  $p_2$ ; (c)  $V_2$ ; and (d) the change in entropy between 1 and 2. (e) How do you explain the entropy change?


- P3.29** In elementary compressible flow theory (Chap. 9), compressed air will exhaust from a small hole in a tank at the mass flow rate  $\dot{m} \approx Cp$ , where  $\rho$  is the air density in the tank and  $C$  is a constant. If  $\rho_0$  is the initial density in a tank of volume  $\mathcal{V}$ , derive a formula for the density change  $\rho(t)$  after the hole is opened. Apply your formula to the following case: a spherical tank of diameter 50 cm, with initial pressure 300 kPa and temperature 100°C, and a hole whose initial exhaust rate is 0.01 kg/s. Find the time required for the tank density to drop by 50 percent.
- P3.30** A hollow conical container, standing point-down, is 1.2 m high and has a total included cone angle of 80°. It is being filled with water from a hose at 50 gallons per minute. How long will it take to fill the cone?
- P3.31** A bellows may be modeled as a deforming wedge-shaped volume as in Fig. P3.31. The check valve on the left (pleated) end is closed during the stroke. If  $b$  is the bellows width into the paper, derive an expression for outlet mass flow  $\dot{m}_0$  as a function of stroke  $\theta(t)$ .

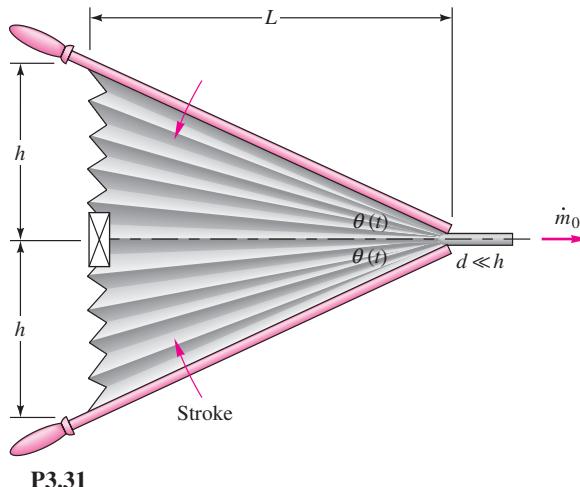

- P3.32** Water at 20°C flows steadily through the piping junction in Fig. P3.32, entering section 1 at 20 gal/min. The average velocity at section 2 is 2.5 m/s. A portion of the flow is diverted through the showerhead, which contains 100 holes of 1-mm diameter. Assuming uniform shower flow, estimate the exit velocity from the showerhead jets.

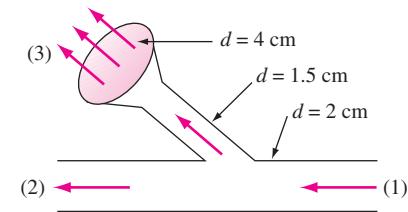


- P3.33** In some wind tunnels the test section is perforated to suck out fluid and provide a thin viscous boundary layer. The test section wall in Fig. P3.33 contains 1200 holes of 5-mm diameter each per square meter of wall area. The suction velocity through each hole is  $V_s = 8$  m/s, and the test-section entrance velocity is  $V_1 = 35$  m/s. Assuming incompressible steady flow of air at 20°C, compute (a)  $V_0$ , (b)  $V_2$ , and (c)  $V_f$ , in m/s.

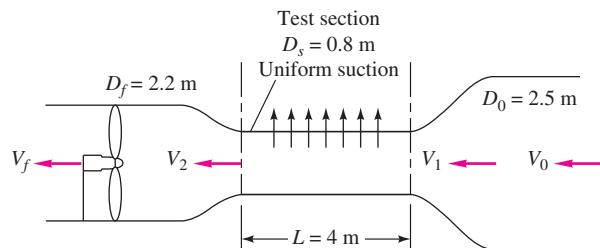

P3.33


- P3.34** A rocket motor is operating steadily, as shown in Fig. P3.34. The products of combustion flowing out the exhaust nozzle approximate a perfect gas with a molecular weight of 28. For the given conditions calculate  $V_2$  in ft/s.

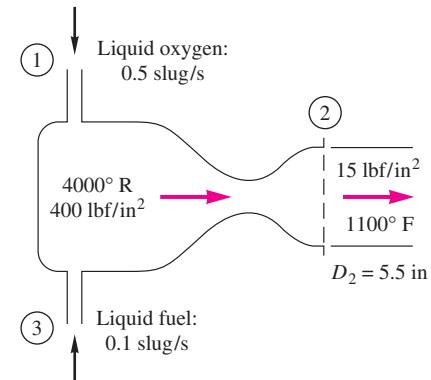

P3.34


- P3.35** In contrast to the liquid rocket in Fig. P3.34, the solid-propellant rocket in Fig. P3.35 is self-contained and has no entrance ducts. Using a control volume analysis for the conditions shown in Fig. P3.35, compute the rate of mass

loss of the propellant, assuming that the exit gas has a molecular weight of 28.

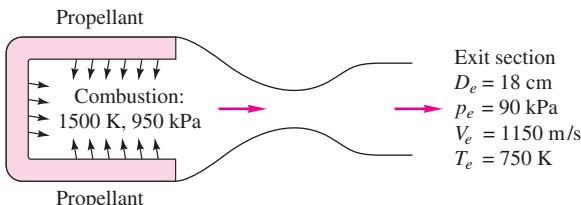

P3.35

- P3.36** The jet pump in Fig. P3.36 injects water at  $U_1 = 40$  m/s through a 3-in-pipe and entrains a secondary flow of water  $U_2 = 3$  m/s in the annular region around the small pipe. The two flows become fully mixed downstream, where  $U_3$  is approximately constant. For steady incompressible flow, compute  $U_3$  in m/s.

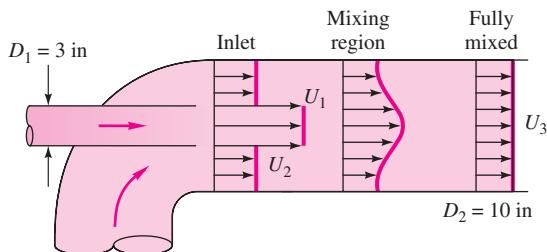


P3.36

- P3.37** If the rectangular tank full of water in Fig. P3.37 has its right-hand wall lowered by an amount  $\delta$ , as shown, water will flow out as it would over a weir or dam. In Prob. P1.14 we deduced that the outflow  $Q$  would be given by


$$Q = C b g^{1/2} \delta^{3/2}$$

where  $b$  is the tank width into the paper,  $g$  is the acceleration of gravity, and  $C$  is a dimensionless constant. Assume that the water surface is horizontal, not slightly curved as in the figure. Let the initial excess water level be  $\delta_0$ . Derive a formula for the time required to reduce the excess water level to (a)  $\delta_0/10$  and (b) zero.

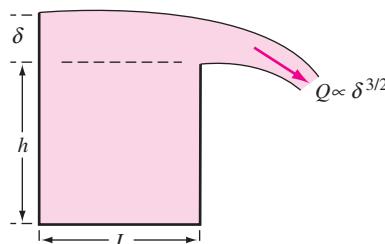

P3.37


- P3.38** An incompressible fluid in Fig. P3.38 is being squeezed outward between two large circular disks by the uniform downward motion  $V_0$  of the upper disk. Assuming one-dimensional radial outflow, use the control volume shown to derive an expression for  $V(r)$ .

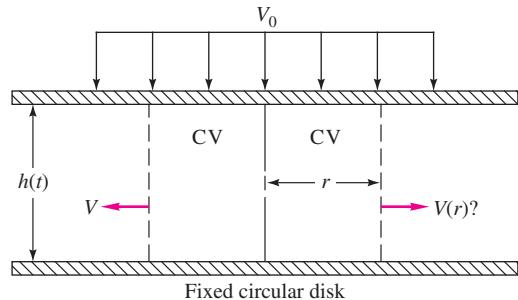

P3.38


### The linear momentum equation

- P3.39** A wedge splits a sheet of 20°C water, as shown in Fig. P3.39. Both wedge and sheet are very long into the paper. If the force required to hold the wedge stationary is  $F = 124$  N per meter of depth into the paper, what is the angle  $\theta$  of the wedge?

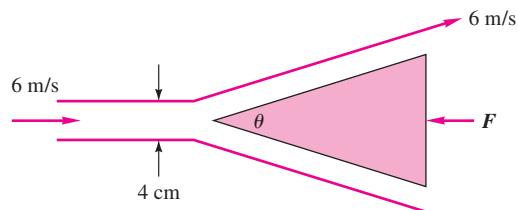


P3.39

- P3.40** The water jet in Fig. P3.40 strikes normal to a fixed plate. Neglect gravity and friction, and compute the force  $F$  in newtons required to hold the plate fixed.

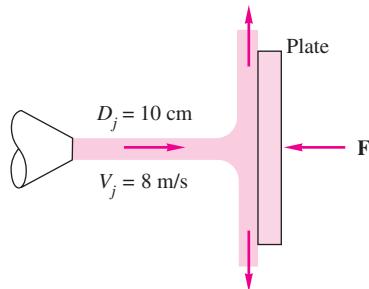


P3.40


- P3.41** In Fig. P3.41 the vane turns the water jet completely around. Find an expression for the maximum jet velocity  $V_0$  if the maximum possible support force is  $F_0$ .

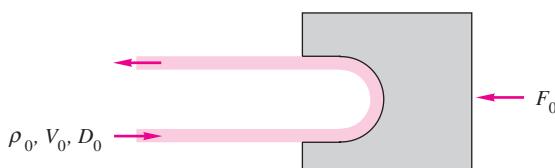**P3.41**

- P3.42** A liquid of density  $\rho$  flows through the sudden contraction in Fig. P3.42 and exits to the atmosphere. Assume uniform conditions ( $p_1, V_1, D_1$ ) at section 1 and ( $p_2, V_2, D_2$ ) at section 2. Find an expression for the force  $F$  exerted by the fluid on the contraction.

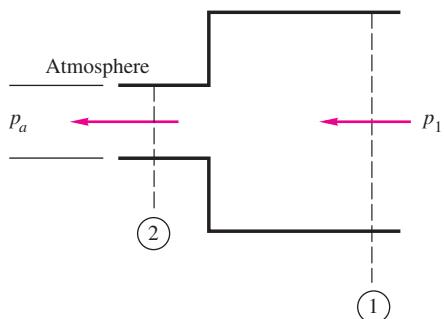
**P3.42**

- P3.43** Water at 20°C flows through a 5-cm-diameter pipe that has a 180° vertical bend, as in Fig. P3.43. The total length of pipe between flanges 1 and 2 is 75 cm. When the weight flow rate is 230 N/s,  $p_1 = 165$  kPa and  $p_2 = 134$  kPa. Neglecting pipe weight, determine the total force that the flanges must withstand for this flow.

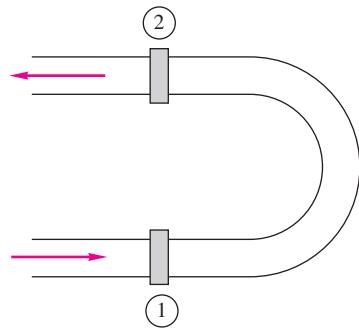
**P3.43**

- \***P3.44** When a uniform stream flows past an immersed thick cylinder, a broad low-velocity wake is created down-

stream, idealized as a V shape in Fig. P3.44. Pressures  $p_1$  and  $p_2$  are approximately equal. If the flow is two-dimensional and incompressible, with width  $b$  into the paper, derive a formula for the drag force  $F$  on the cylinder. Rewrite your result in the form of a dimensionless *drag coefficient* based on body length  $C_D = F/(\rho U^2 b L)$ .


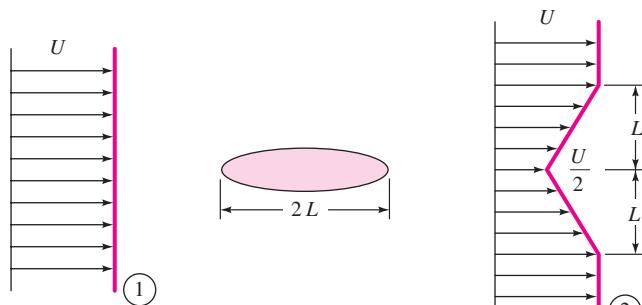
**P3.44**

- P3.45** A 12-cm-diameter pipe, containing water flowing at 200 N/s, is capped by an orifice plate, as in Fig. P3.45. The exit jet is 25 mm in diameter. The pressure in the pipe at section 1 is 800 kPa (gage). Calculate the force  $F$  required to hold the orifice plate.

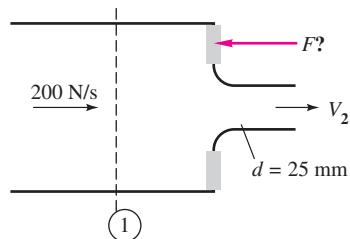
**P3.45**

- P3.46** When a jet strikes an inclined fixed plate, as in Fig. P3.46, it breaks into two jets at 2 and 3 of equal velocity  $V = V_{jet}$  but unequal fluxes  $\alpha Q$  at 2 and  $(1 - \alpha)Q$  at section 3,  $\alpha$  being a fraction. The reason is that for frictionless flow the fluid can exert no tangential force  $F_t$  on the plate. The condition  $F_t = 0$  enables us to solve for  $\alpha$ . Perform this analysis, and find  $\alpha$  as a function of the plate angle  $\theta$ . Why doesn't the answer depend on the properties of the jet?


- P3.47** A liquid jet of velocity  $V_j$  and diameter  $D_j$  strikes a fixed hollow cone, as in Fig. P3.47, and deflects back as a conical sheet at the same velocity. Find the cone angle  $\theta$  for which the restraining force  $F = \frac{3}{2} \rho A_j V_j^2$ .

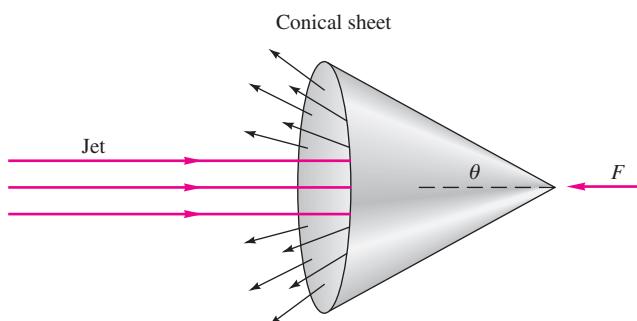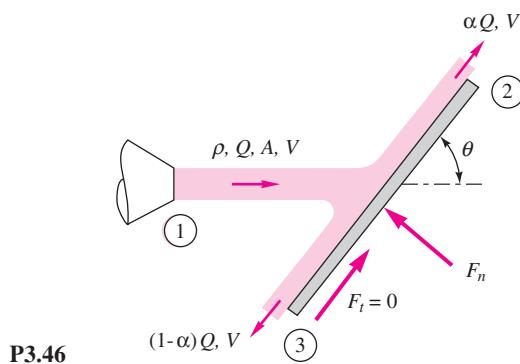


- P3.48** The small boat in Fig. P3.48 is driven at a steady speed  $V_0$  by a jet of compressed air issuing from a 3-cm-diameter hole at  $V_e = 343$  m/s. Jet exit conditions are  $p_e = 1$  atm and  $T_e = 30^\circ\text{C}$ . Air drag is negligible, and the hull drag is  $kV_0^2$ , where  $k \approx 19 \text{ N} \cdot \text{s}^2/\text{m}^2$ . Estimate the boat speed  $V_0$  in m/s.

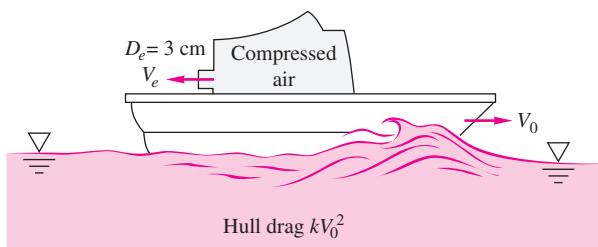


- P3.49** The horizontal nozzle in Fig. P3.49 has  $D_1 = 12$  in and  $D_2 = 6$  in, with inlet pressure  $p_1 = 38 \text{ lbf/in}^2$  absolute and  $V_2 = 56 \text{ ft/s}$ . For water at  $20^\circ\text{C}$ , compute the horizontal force provided by the flange bolts to hold the nozzle fixed.

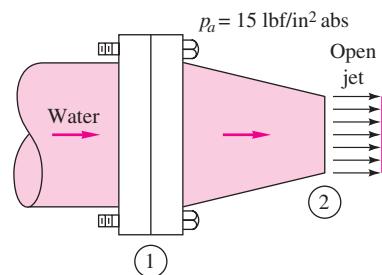

- P3.50** The jet engine on a test stand in Fig. P3.50 admits air at  $20^\circ\text{C}$  and 1 atm at section 1, where  $A_1 = 0.5 \text{ m}^2$  and  $V_1 = 250 \text{ m/s}$ . The fuel-to-air ratio is 1:30. The air leaves section 2 at atmospheric pressure and higher temperature, where  $V_2 = 900 \text{ m/s}$  and  $A_2 = 0.4 \text{ m}^2$ . Compute the horizontal test stand reaction  $R_x$  needed to hold this engine fixed.

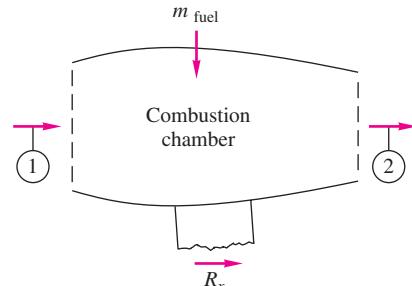


- P3.51** A liquid jet of velocity  $V_j$  and area  $A_j$  strikes a single  $180^\circ$  bucket on a turbine wheel rotating at angular velocity  $\Omega$ , as in Fig. P3.51. Derive an expression for the power  $P$  delivered to this wheel at this instant as a function of the system parameters. At what angular velocity is the maximum power delivered? How would your analysis differ if there were many, many buckets on the wheel, so that the jet was continually striking at least one bucket?

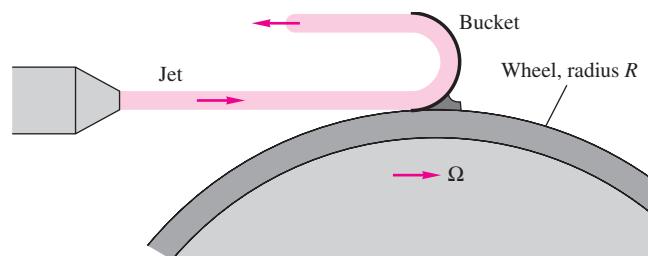


- P3.52** The vertical gate in a water channel is partially open, as in Fig. P3.52. Assuming no change in water level and a

hydrostatic pressure distribution, derive an expression for the streamwise force  $F_x$  on one-half of the gate as a function of  $(\rho, h, w, \theta, V_1)$ . Apply your result to the case of water at 20°C,  $V_1 = 0.8$  m/s,  $h = 2$  m,  $w = 1.5$  m, and  $\theta = 50^\circ$ .

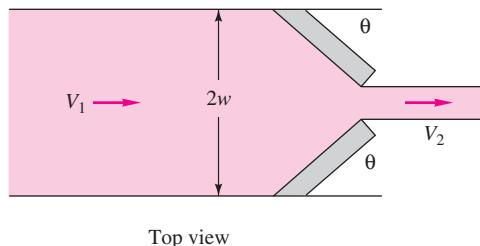

Top view

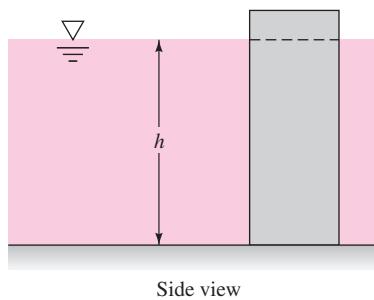


Side view

P3.52

- P3.53** Consider incompressible flow in the entrance of a circular tube, as in Fig. P3.53. The inlet flow is uniform,  $u_1 = U_0$ . The flow at section 2 is developed pipe flow. Find the wall drag force  $F$  as a function of  $(p_1, p_2, \rho, U_0, R)$  if the flow at section 2 is

$$(a) \text{ Laminar: } u_2 = u_{\max} \left( 1 - \frac{r^2}{R^2} \right)$$

$$(b) \text{ Turbulent: } u_2 \approx u_{\max} \left( 1 - \frac{r}{R} \right)^{1/7}$$

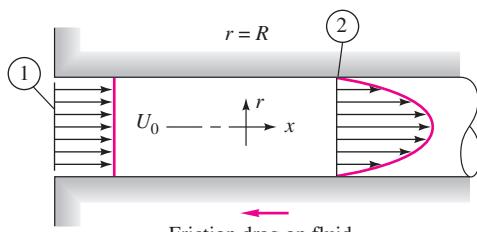


P3.53

Friction drag on fluid


- P3.54** For the pipe-flow-reducing section of Fig. P3.54,  $D_1 = 8$  cm,  $D_2 = 5$  cm, and  $p_2 = 1$  atm. All fluids are

at 20°C. If  $V_1 = 5$  m/s and the manometer reading is  $h = 58$  cm, estimate the total force resisted by the flange bolts.

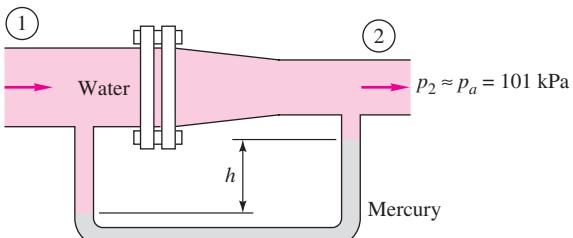


P3.54

- P3.55** In Fig. P3.55 the jet strikes a vane that moves to the right at constant velocity  $V_c$  on a frictionless cart. Compute (a) the force  $F_x$  required to restrain the cart and (b) the power  $P$  delivered to the cart. Also find the cart velocity for which (c) the force  $F_x$  is a maximum and (d) the power  $P$  is a maximum.

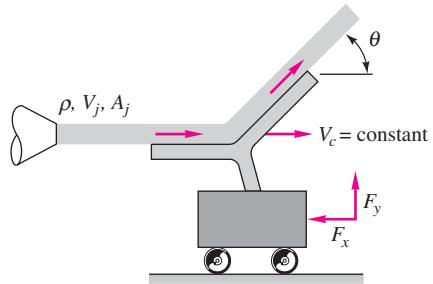

P3.55


- P3.56** Water at 20°C flows steadily through the box in Fig. P3.56, entering station (1) at 2 m/s. Calculate the (a) horizontal and (b) vertical forces required to hold the box stationary against the flow momentum.

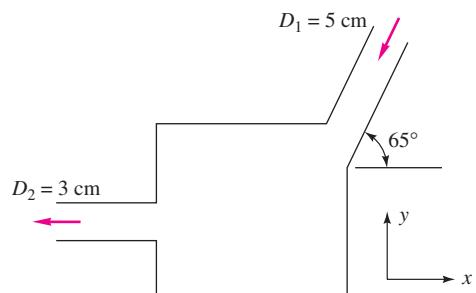

P3.56


- P3.57** Water flows through the duct in Fig. P3.57, which is 50 cm wide and 1 m deep into the paper. Gate BC completely

closes the duct when  $\beta = 90^\circ$ . Assuming one-dimensional flow, for what angle  $\beta$  will the force of the exit jet on the plate be 3 kN?

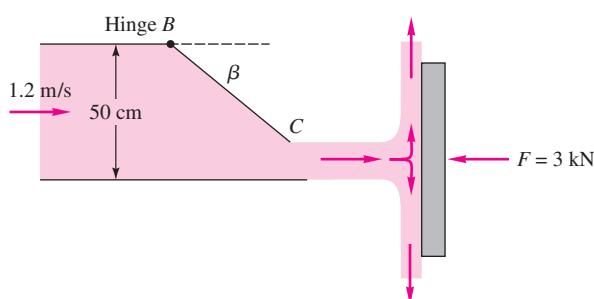


P3.57

- P3.58** The water tank in Fig. P3.58 stands on a frictionless cart and feeds a jet of diameter 4 cm and velocity 8 m/s, which is deflected  $60^\circ$  by a vane. Compute the tension in the supporting cable.

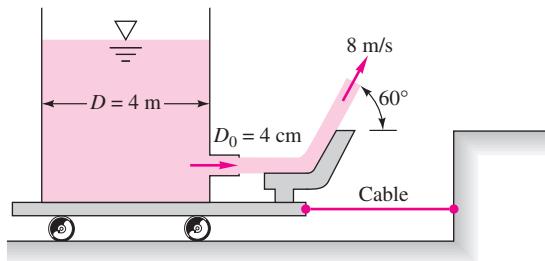

P3.58

- P3.59** When a pipe flow suddenly expands from  $A_1$  to  $A_2$ , as in Fig. P3.59, low-speed, low-friction eddies appear in the corners and the flow gradually expands to  $A_2$  downstream. Using the suggested control volume for incompressible

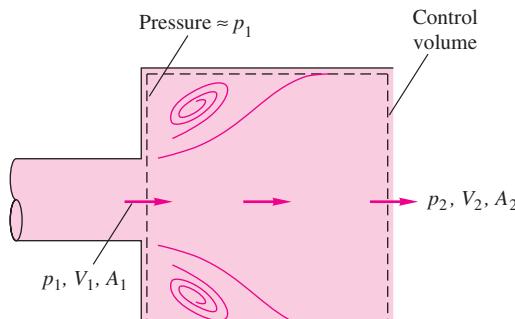


P3.59

steady flow and assuming that  $p \approx p_1$  on the corner annular ring as shown, show that the downstream pressure is given by

$$p_2 = p_1 + \rho V_1^2 \frac{A_1}{A_2} \left( 1 - \frac{A_1}{A_2} \right)$$


Neglect wall friction.

- P3.60** Water at  $20^\circ\text{C}$  flows through the elbow in Fig. P3.60 and exits to the atmosphere. The pipe diameter is  $D_1 = 10\text{ cm}$ , while  $D_2 = 3\text{ cm}$ . At a weight flow rate of  $150\text{ N/s}$ , the pressure  $p_1 = 2.3\text{ atm}$  (gage). Neglecting the weight of water and elbow, estimate the force on the flange bolts at section 1.

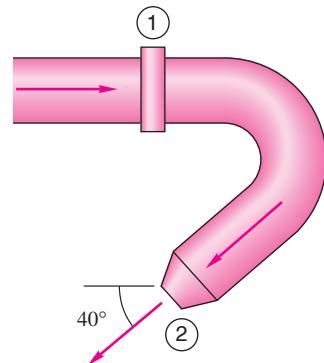


P3.60

- P3.61** A  $20^\circ\text{C}$  water jet strikes a vane mounted on a tank with frictionless wheels, as in Fig. P3.61. The jet turns and falls into the tank without spilling out. If  $\theta = 30^\circ$ , evaluate the horizontal force  $F$  required to hold the tank stationary.

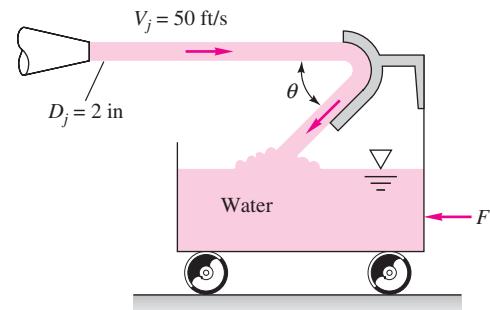


P3.61

- P3.62** Water at  $20^\circ\text{C}$  exits to the standard sea-level atmosphere through the split nozzle in Fig. P3.62. Duct areas are  $A_1 = 0.02\text{ m}^2$  and  $A_2 = A_3 = 0.008\text{ m}^2$ . If  $p_1 = 135\text{ kPa}$  (absolute) and the flow rate is  $Q_2 = Q_3 = 275\text{ m}^3/\text{h}$ , compute the force on the flange bolts at section 1.

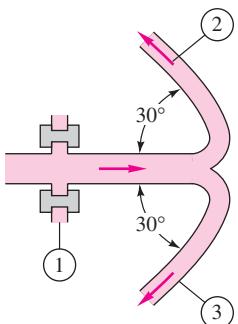


P3.62

- P3.63** A steady two-dimensional water jet, 4 cm thick with a weight flow rate of 1960 N/s, strikes an angled barrier as in Fig. P3.30. Pressure and water velocity are constant everywhere. Thirty percent of the jet passes through the slot. The rest splits symmetrically along the barrier. Calculate the horizontal force  $F$  needed to hold the barrier per unit thickness into the paper.

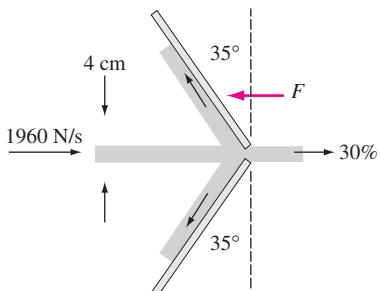


P3.63

- P3.64** The 6-cm-diameter 20°C water jet in Fig. P3.64 strikes a plate containing a hole of 4-cm diameter. Part of the jet passes through the hole, and part is deflected. Determine the horizontal force required to hold the plate.

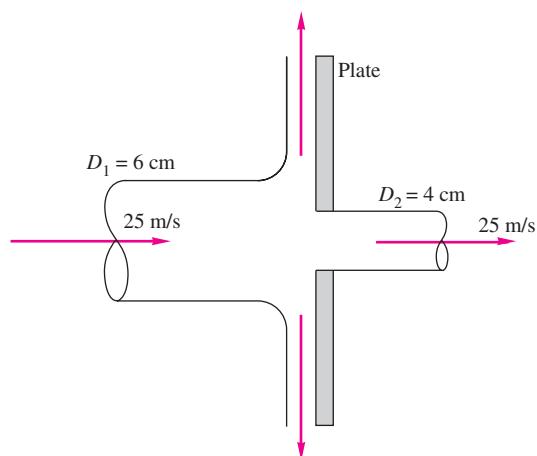


P3.64

- P3.65** The box in Fig. P3.65 has three 0.5-in holes on the right side. The volume flows of 20°C water shown are steady, but the details of the interior are not known. Compute the force, if any, that this water flow causes on the box.

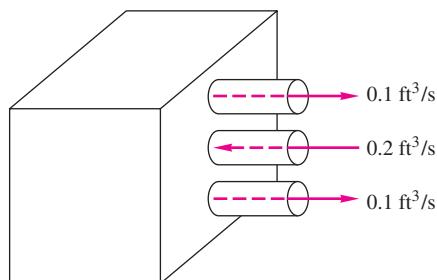


P3.65

- P3.66** The tank in Fig. P3.66 weighs 500 N empty and contains 600 L of water at 20°C. Pipes 1 and 2 have equal diameters of 6 cm and equal steady volume flows of 300 m³/h. What should the scale reading  $W$  be in N?

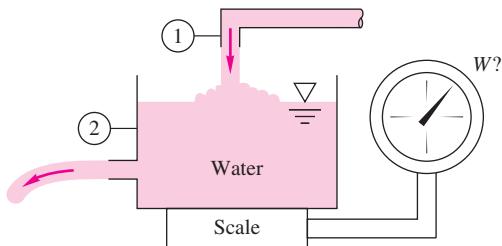


P3.66

- P3.67** Gravel is dumped from a hopper, at a rate of 650 N/s, onto a moving belt, as in Fig. P3.67. The gravel then passes off the end of the belt. The drive wheels are 80 cm in diameter and rotate clockwise at 150 r/min. Neglecting system friction and air drag, estimate the power required to drive this belt.

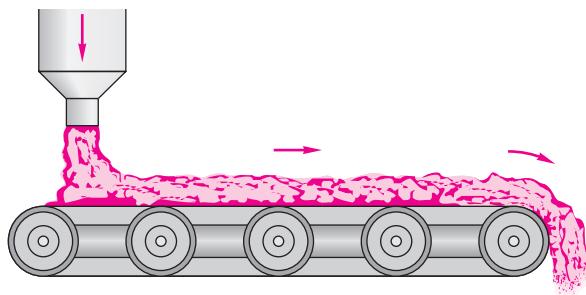


P3.67

- P3.68** The rocket in Fig. P3.68 has a supersonic exhaust, and the exit pressure  $p_e$  is not necessarily equal to  $p_a$ . Show that the force  $F$  required to hold this rocket on the test stand is  $F = \rho_e A_e V_e^2 + A_e(p_e - p_a)$ . Is this force  $F$  what we term the *thrust* of the rocket?

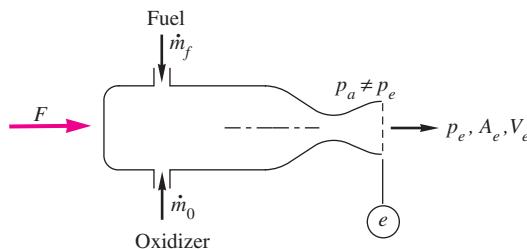
**P3.68**

- P3.69** A uniform rectangular plate, 40 cm long and 30 cm deep into the paper, hangs in air from a hinge at its top (the 30-cm side). It is struck in its center by a horizontal 3-cm-diameter jet of water moving at 8 m/s. If the gate has a mass of 16 kg, estimate the angle at which the plate will hang from the vertical.


- P3.70** The dredger in Fig. P3.70 is loading sand (SG = 2.6) onto a barge. The sand leaves the dredger pipe at 4 ft/s with a weight flux of 850 lbf/s. Estimate the tension on the mooring line caused by this loading process.

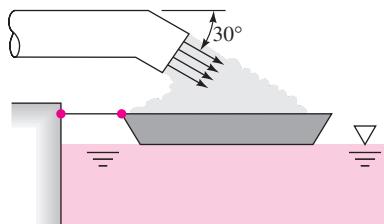**P3.70**

- P3.71** Suppose that a deflector is deployed at the exit of the jet engine of Prob. P3.50, as shown in Fig. P3.71. What will the reaction  $R_x$  on the test stand be now? Is this reaction sufficient to serve as a braking force during airplane landing?

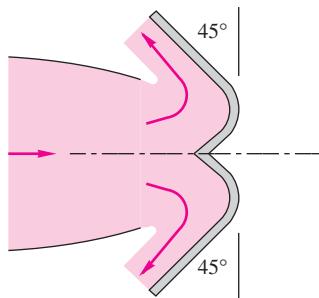
**P3.71**

- \*P3.72** When immersed in a uniform stream, a thick elliptical cylinder creates a broad downstream wake, as idealized in Fig. P3.72. The pressure at the upstream and downstream

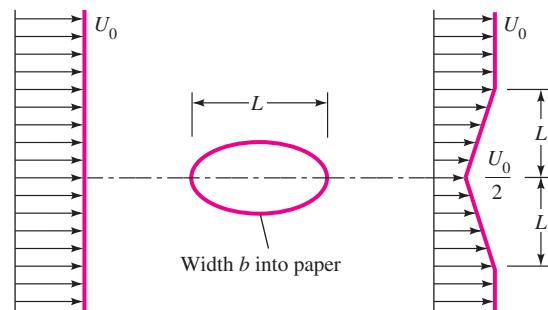
**P3.72**

sections are approximately equal, and the fluid is water at 20°C. If  $U_0 = 4$  m/s and  $L = 80$  cm, estimate the drag force on the cylinder per unit width into the paper. Also compute the dimensionless drag coefficient  $C_D = 2F/(\rho U_0^2 b L)$ .

- P3.73** A pump in a tank of water at 20°C directs a jet at 45 ft/s and 200 gal/min against a vane, as shown in Fig. P3.73. Compute the force  $F$  to hold the cart stationary if the jet follows (a) path A or (b) path B. The tank holds 550 gal of water at this instant.

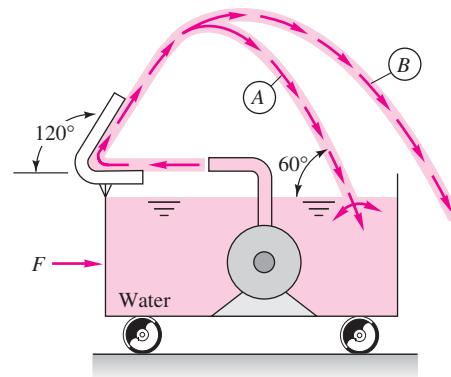
**P3.73**

- P3.74** Water at 20°C flows down through a vertical, 6-cm-diameter tube at 300 gal/min, as in Fig. P3.74. The flow then turns horizontally and exits through a 90° radial duct segment 1 cm thick, as shown. If the radial outflow is uniform and steady, estimate the forces ( $F_x$ ,  $F_y$ ,  $F_z$ ) required to support this system against fluid momentum changes.

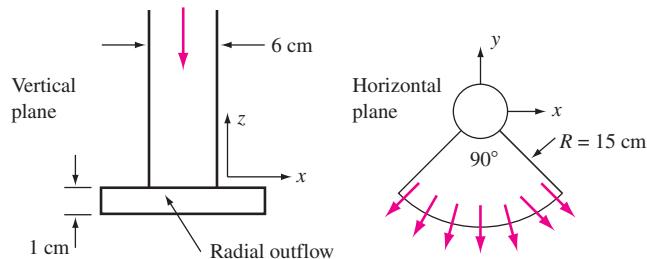

P3.74

- \*P3.75 A jet of liquid of density  $\rho$  and area  $A$  strikes a block and splits into two jets, as in Fig. P3.75. Assume the same velocity  $V$  for all three jets. The upper jet exits at an angle  $\theta$  and area  $\alpha A$ . The lower jet is turned  $90^\circ$  downward. Neglecting fluid weight, (a) derive a formula for the forces ( $F_x, F_y$ ) required to support the block against fluid momentum changes. (b) Show that  $F_y = 0$  only if  $\alpha \geq 0.5$ . (c) Find the values of  $\alpha$  and  $\theta$  for which both  $F_x$  and  $F_y$  are zero.

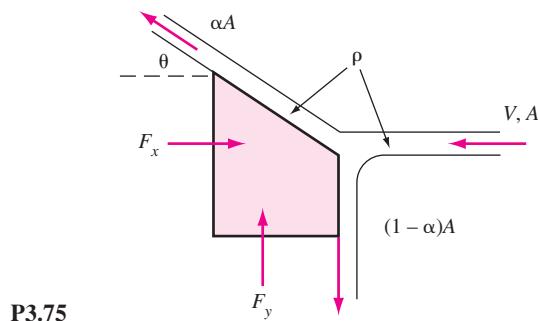


P3.75


- P3.76 A two-dimensional sheet of water, 10 cm thick and moving at 7 m/s, strikes a fixed wall inclined at  $20^\circ$  with respect to the jet direction. Assuming frictionless flow, find (a) the normal force on the wall per meter of depth, and find the widths of the sheet deflected (b) upstream and (c) downstream along the wall.

- P3.77 Water at  $20^\circ\text{C}$  flows steadily through a reducing pipe bend, as in Fig. P3.77. Known conditions are  $p_1 = 350 \text{ kPa}$ ,  $D_1 = 25 \text{ cm}$ ,  $V_1 = 2.2 \text{ m/s}$ ,  $p_2 = 120 \text{ kPa}$ , and  $D_2 = 8 \text{ cm}$ . Neglecting bend and water weight, estimate the total force that must be resisted by the flange bolts.

- P3.78 A fluid jet of diameter  $D_1$  enters a cascade of moving blades at absolute velocity  $V_1$  and angle  $\beta_1$ , and it leaves at absolute velocity  $V_2$  and angle  $\beta_2$ , as in Fig. P3.78. The blades move at velocity  $u$ . Derive a formula for the power  $P$  delivered to the blades as a function of these parameters.

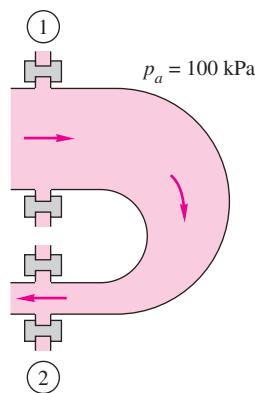


P3.77

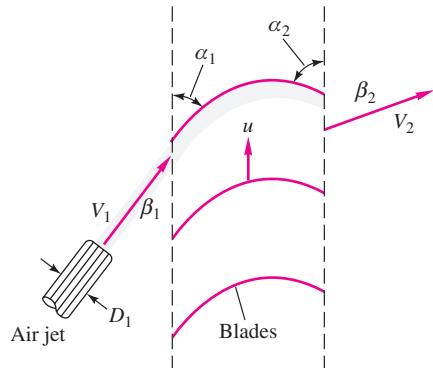

P3.78


- P3.79 Air at  $20^\circ\text{C}$  and 1 atm enters the bottom of an  $85^\circ$  conical flowmeter duct at a mass flow of  $0.3 \text{ kg/s}$ , as shown in Fig. P3.79. It is able to support a centered conical body by steady annular flow around the cone, as shown. The air velocity at the upper edge of the body equals the entering velocity. Estimate the weight of the body, in newtons.

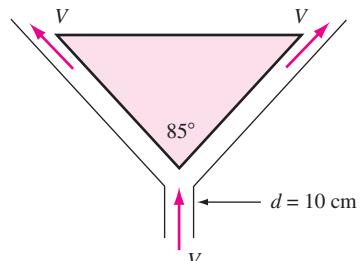

P3.79


- P3.80 A river of width  $b$  and depth  $h_1$  passes over a submerged obstacle, or “drowned weir,” in Fig. P3.80, emerging at a new flow condition  $(V_2, h_2)$ . Neglect atmospheric pressure, and assume that the water pressure is hydrostatic at both sections 1 and 2. Derive an expression for the force exerted

by the river on the obstacle in terms of  $V_1$ ,  $h_1$ ,  $h_2$ ,  $b$ ,  $\rho$ , and  $g$ . Neglect water friction on the river bottom.

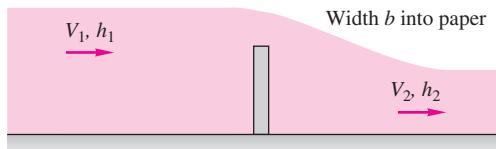


P3.80

- EES** P3.81 Torricelli's idealization of efflux from a hole in the side of a tank is  $V = \sqrt{2gh}$ , as shown in Fig. P3.81. The cylindrical tank weighs 150 N when empty and contains water at 20°C. The tank bottom is on very smooth ice (static friction coefficient  $\zeta \approx 0.01$ ). The hole diameter is 9 cm. For what water depth  $h$  will the tank just begin to move to the right?

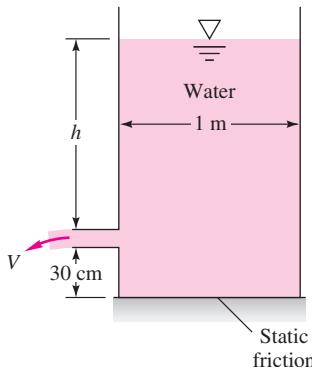

P3.81

- \*P3.82 The model car in Fig. P3.82 weighs 17 N and is to be accelerated from rest by a 1-cm-diameter water jet moving at 75 m/s. Neglecting air drag and wheel friction, estimate the velocity of the car after it has moved forward 1 m.

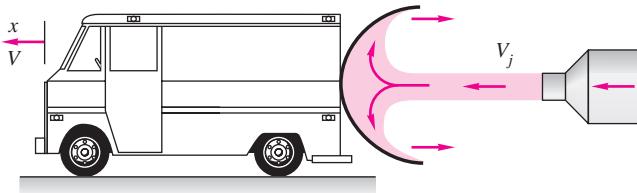


P3.82

- P3.83 Gasoline at 20°C is flowing at  $V_1 = 12$  m/s in a 5-cm-diameter pipe when it encounters a 1 m length of uniform radial wall suction. At the end of this suction region, the


average fluid velocity has dropped to  $V_2 = 10$  m/s. If  $p_1 = 120$  kPa, estimate  $p_2$  if the wall friction losses are neglected.

- P3.84 Air at 20°C and 1 atm flows in a 25-cm-diameter duct at 15 m/s, as in Fig. P3.84. The exit is choked by a 90° cone, as shown. Estimate the force of the airflow on the cone.

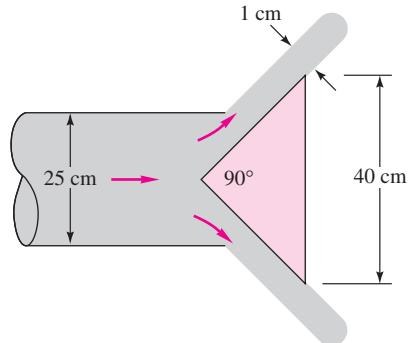

P3.84


- P3.85 The thin-plate orifice in Fig. P3.85 causes a large pressure drop. For 20°C water flow at 500 gal/min, with pipe  $D = 10$  cm and orifice  $d = 6$  cm,  $p_1 - p_2 \approx 145$  kPa. If the wall friction is negligible, estimate the force of the water on the orifice plate.

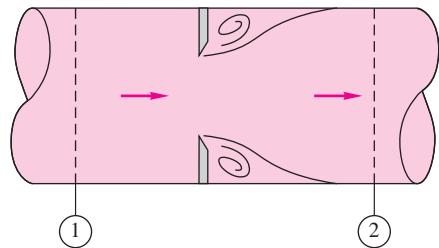

P3.85


- P3.86 For the water jet pump of Prob. P3.36, add the following data:  $p_1 = p_2 = 25$  lbf/in<sup>2</sup>, and the distance between sections 1 and 3 is 80 in. If the average wall shear stress between sections 1 and 3 is 7 lbf/ft<sup>2</sup>, estimate the pressure  $p_3$ . Why is it higher than  $p_1$ ?

- P3.87 A vane turns a water jet through an angle  $\alpha$ , as shown in Fig. P3.87. Neglect friction on the vane walls. (a) What is the angle  $\alpha$  for the support force to be in pure compression? (b) Calculate this compression force if the water velocity is 22 ft/s and the jet cross section is 4 in<sup>2</sup>.

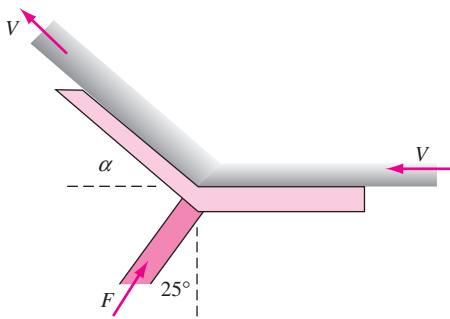


P3.87

- P3.88** The boat in Fig. P3.88 is jet-propelled by a pump that develops a volume flow rate  $Q$  and ejects water out the stern at velocity  $V_j$ . If the boat drag force is  $F = kV^2$ , where  $k$  is a constant, develop a formula for the steady forward speed  $V$  of the boat.

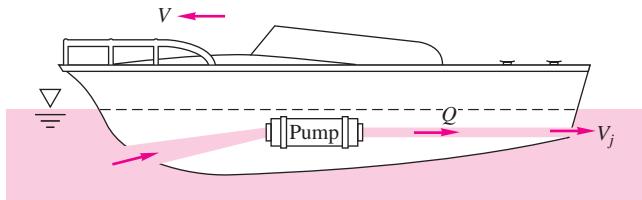

P3.88

- P3.89** Consider Fig. P3.36 as a general problem for analysis of a mixing ejector pump. If all conditions ( $p$ ,  $\rho$ ,  $V$ ) are known at sections 1 and 2 and if the wall friction is negligible, derive formulas for estimating (a)  $V_3$  and (b)  $p_3$ .
- P3.90** As shown in Fig. P3.90, a liquid column of height  $h$  is confined in a vertical tube of cross-sectional area  $A$  by a stopper. At  $t = 0$  the stopper is suddenly removed, exposing the bottom of the liquid to atmospheric pressure.

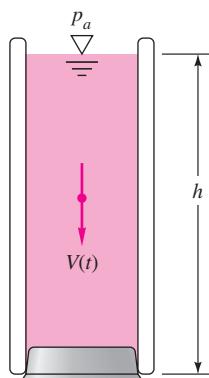

P3.90

Stopper


Using a control volume analysis of mass and vertical momentum, derive the differential equation for the downward motion  $V(t)$  of the liquid. Assume one-dimensional, incompressible, frictionless flow.

**P3.91**

Extend Prob. P3.90 to include a linear (laminar) average wall shear stress resistance of the form  $\tau = cV$ , where  $c$  is a constant. Find the differential equation for  $dV/dt$  and then solve for  $V(t)$ , assuming for simplicity that the wall area remains constant.


**\*P3.92**

A more involved version of Prob. P3.90 is the elbow-shaped tube in Fig. P3.92, with constant cross-sectional area  $A$  and diameter  $D \ll h, L$ . Assume incompressible flow, neglect friction, and derive a differential equation for  $dV/dt$  when the stopper is opened. Hint: Combine two control volumes, one for each leg of the tube.

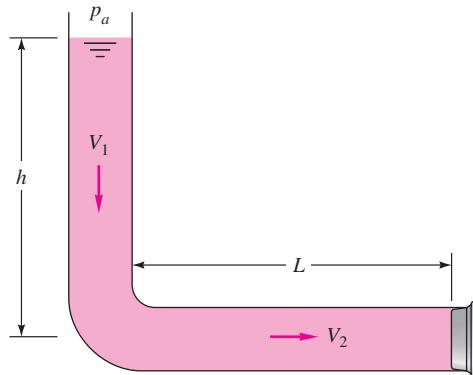


P3.92

- P3.93** According to Torricelli's theorem, the velocity of a fluid draining from a hole in a tank is  $V \approx (2gh)^{1/2}$ , where  $h$  is the depth of water above the hole, as in Fig. P3.93. Let the hole have area  $A_o$  and the cylindrical tank have cross-section area  $A_b \gg A_o$ . Derive a formula for the time to drain the tank completely from an initial depth  $h_0$ .

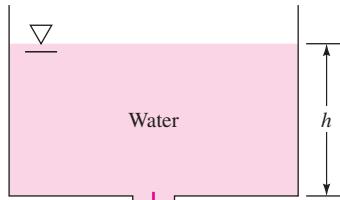


P3.93


- P3.94** A water jet 3 in in diameter strikes a concrete ( $\text{SG} = 2.3$ ) slab which rests freely on a level floor. If the slab is 1 ft wide into the paper, calculate the jet velocity which will just begin to tip the slab over.

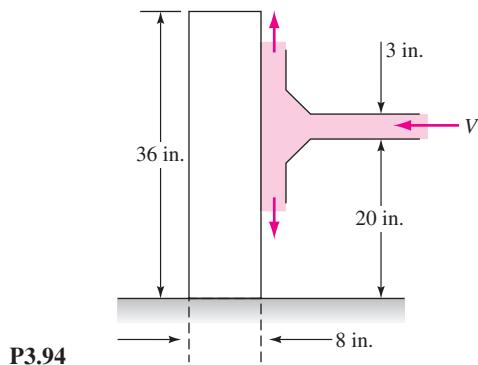

- P3.95** A tall water tank discharges through a well-rounded orifice, as in Fig. P3.95. Use the Torricelli formula of Prob. P3.81 to estimate the exit velocity. (a) If, at this instant, the force  $F$  required to hold the plate is 40 N, what is the depth  $h$ ? (b) If the tank surface is dropping at the rate of 2.5 cm/s, what is the tank diameter  $D$ ?

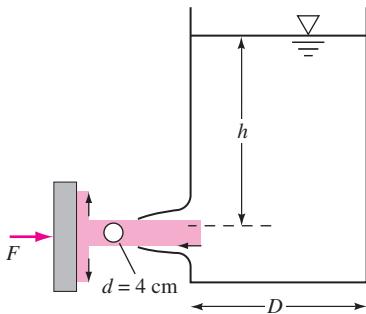

- P3.96** Extend Prob. P3.90 to the case of the liquid motion in a frictionless U-tube whose liquid column is displaced a distance  $Z$  upward and then released, as in Fig. P3.96.

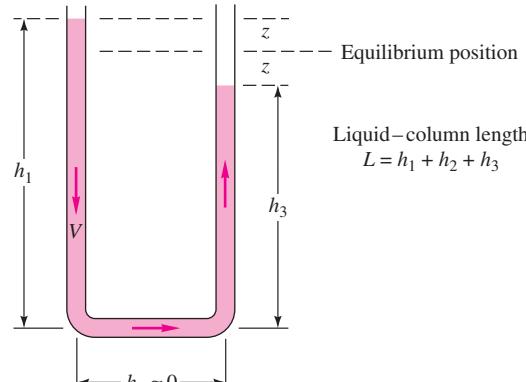

Neglect the short horizontal leg, and combine control volume analyses for the left and right legs to derive a single differential equation for  $V(t)$  of the liquid column.

- \***P3.97** Extend Prob. P3.96 to include a linear (laminar) average wall shear stress resistance of the form  $\tau \approx 8\mu V/D$ , where  $\mu$  is the fluid viscosity. Find the differential equation for  $dV/dt$  and then solve for  $V(t)$ , assuming an initial displacement  $z = z_0$ ,  $V = 0$  at  $t = 0$ . The result should be a damped oscillation tending toward  $z = 0$ .

- \***P3.98** As an extension of Example 3.10, let the plate and its cart (see Fig. 3.10a) be unrestrained horizontally, with frictionless wheels. Derive (a) the equation of motion for cart velocity  $V_c(t)$  and (b) a formula for the time required for the cart to accelerate from rest to 90 percent of the jet velocity (assuming the jet continues to strike the plate horizontally). (c) Compute numerical values for part (b) using the conditions of Example 3.10 and a cart mass of 2 kg.


- P3.99** Let the rocket of Fig. E3.12 start at  $z = 0$ , with constant exit velocity and exit mass flow, and rise vertically with zero drag. (a) Show that, as long as fuel burning continues, the vertical height  $S(t)$  reached is given by

$$S = \frac{V_e M_o}{\dot{m}} [\zeta \ln \zeta - \zeta + 1], \text{ where } \zeta = 1 - \frac{\dot{m}t}{M_o}$$

- (b) Apply this to the case  $V_e = 1500$  m/s and  $M_o = 1000$  kg to find the height reached after a burn of 30 seconds, when the final rocket mass is 400 kg.


- P3.100** Suppose that the solid-propellant rocket of Prob. P3.35 is built into a missile of diameter 70 cm and length 4 m. The system weighs 1800 N, which includes 700 N of propellant. Neglect air drag. If the missile is fired vertically from rest at sea level, estimate (a) its velocity and height at fuel burnout and (b) the maximum height it will attain.

- P3.101** Water at 20°C flows steadily through the tank in Fig. P3.101. Known conditions are  $D_1 = 8$  cm,  $V_1 = 6$  m/s, and  $D_2 = 4$  cm. A rightward force  $F = 70$  N is required to keep the tank fixed. (a) What is the velocity leaving section 2? (b) If the tank cross section is  $1.2 \text{ m}^2$ , how fast is the water surface  $h(t)$  rising or falling?

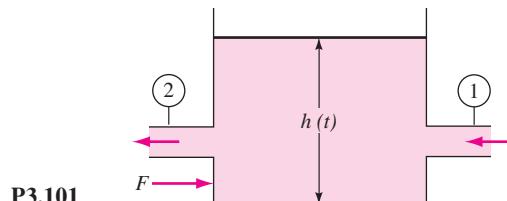

- P3.102** As can often be seen in a kitchen sink when the faucet is running, a high-speed channel flow ( $V_1$ ,  $h_1$ ) may


“jump” to a low-speed, low-energy condition ( $V_2, h_2$ ) as in Fig. P3.102. The pressure at sections 1 and 2 is approximately hydrostatic, and wall friction is negligible. Use the continuity and momentum relations to find  $h_2$  and  $V_2$  in terms of  $(h_1, V_1)$ .

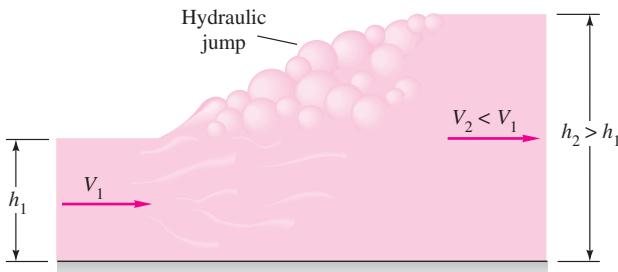

P3.102

**\*P3.103** Suppose that the solid-propellant rocket of Prob. P3.35 is mounted on a 1000-kg car to propel it up a long slope of  $15^\circ$ . The rocket motor weighs 900 N, which includes 500 N of propellant. If the car starts from rest when the rocket is fired, and if air drag and wheel friction are neglected, estimate the maximum distance that the car will travel up the hill.


**P3.104** A rocket is attached to a rigid horizontal rod hinged at the origin as in Fig. P3.104. Its initial mass is  $M_0$ , and its exit properties are  $\dot{m}$  and  $V_e$  relative to the rocket. Set up the differential equation for rocket motion, and solve for the angular velocity  $\omega(t)$  of the rod. Neglect gravity, air drag, and the rod mass.

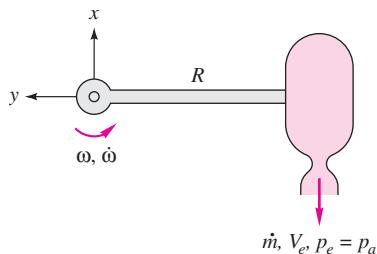

P3.104


**P3.105** Extend Prob. P3.104 to the case where the rocket has a linear air drag force  $F = cV$ , where  $c$  is a constant. Assuming no burnout, solve for  $\omega(t)$  and find the *terminal* angular velocity—that is, the final motion when the angular acceleration is zero. Apply to the case  $M_0 = 6$  kg,  $R = 3$  m,  $\dot{m} = 0.05$  kg/s,  $V_e = 1100$  m/s, and  $c = 0.075$  N · s/m to find the angular velocity after 12 s of burning.

**P3.106** Actual air flow past a parachute creates a variable distribution of velocities and directions. Let us model this as a circular air jet, of diameter half the parachute diameter, which is turned completely around by the parachute, as in Fig. P3.106. (a) Find the force  $F$  required to support the chute. (b) Express this force as a dimensionless *drag coefficient*,  $C_D = F/[(\frac{1}{2})\rho V^2(\pi/4)D^2]$  and compare with Table 7.3.

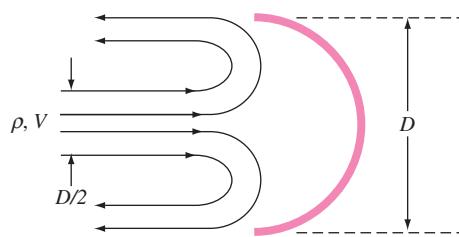

P3.106


**P3.107** The cart in Fig. P3.107 moves at constant velocity  $V_0 = 12$  m/s and takes on water with a scoop 80 cm wide that dips  $h = 2.5$  cm into a pond. Neglect air drag and wheel friction. Estimate the force required to keep the cart moving.

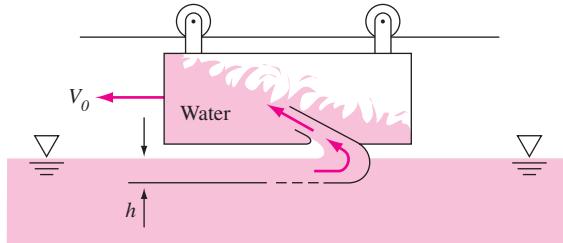

P3.107

**\*P3.108** A rocket sled of mass  $M$  is to be decelerated by a scoop, as in Fig. P3.108, which has width  $b$  into the paper and dips into the water a depth  $h$ , creating an upward jet at  $60^\circ$ . The rocket thrust is  $T$  to the left. Let the initial velocity be  $V_0$ , and neglect air drag and wheel friction. Find an expression for  $V(t)$  of the sled for (a)  $T = 0$  and (b) finite  $T \neq 0$ .

**P3.109** For the boundary layer flow in Fig. 3.10, let the exit velocity profile, at  $x = L$ , simulate turbulent flow,  $u \approx U_0(y/\delta)^{1/7}$ . (a) Find a relation between  $h$  and  $\delta$ . (b) Find an expression for the drag force  $F$  on the plate between 0 and  $L$ .

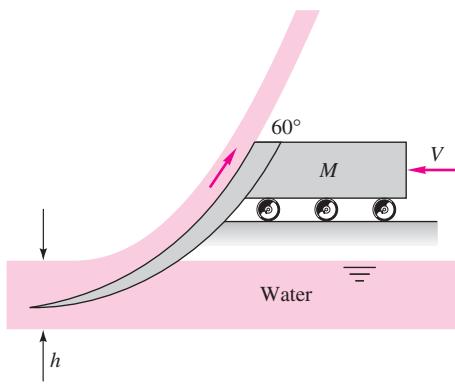


P3.108

**The Bernoulli Equation**

**P3.110** Repeat Prob. P3.49 by assuming that  $p_1$  is unknown and using Bernoulli's equation with no losses. Compute the new bolt force for this assumption. What is the head loss between 1 and 2 for the data of Prob. P3.49?

**P3.111** Extend the siphon analysis of Example 3.22 as follows. Let  $p_1 = 1 \text{ atm}$ , and let the fluid be hot water at  $60^\circ\text{C}$ . Let  $z_1, z_2$ , and  $z_4$  be the same, with  $z_3$  unknown. Find the value of  $z_3$  for which the water might begin to vaporize.


**P3.112** A jet of alcohol strikes the vertical plate in Fig. P3.112. A force  $F \approx 425 \text{ N}$  is required to hold the plate stationary. Assuming there are no losses in the nozzle, estimate (a) the mass flow rate of alcohol and (b) the absolute pressure at section 1.

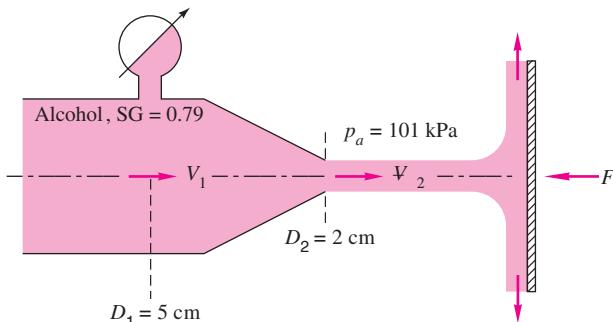

P3.112


**P3.113** An airplane is flying at  $300 \text{ mi/h}$  at  $4000 \text{ m}$  standard altitude. As is typical, the air velocity relative to the upper surface of the wing, near its maximum thickness, is 26 percent higher than the plane's velocity. Using Bernoulli's equation, calculate the absolute pressure at this point on the wing. Neglect elevation changes and compressibility.

**P3.114** Water flows through a circular nozzle, exits into the air as a jet, and strikes a plate, as shown in Fig. P3.114. The force required to hold the plate steady is  $70 \text{ N}$ . Assuming steady, frictionless, one-dimensional flow, estimate (a) the velocities at sections (1) and (2) and (b) the mercury manometer reading  $h$ .

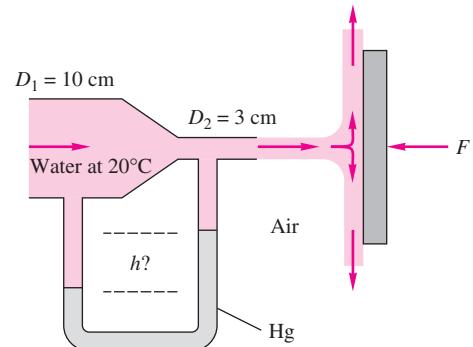


P3.114

**P3.115** A free liquid jet, as in Fig. P3.115, has constant ambient pressure and small losses; hence from Bernoulli's equation  $z + V^2/(2g)$  is constant along the jet. For the fire nozzle in the figure, what are (a) the minimum and (b) the maximum values of  $\theta$  for which the water jet will clear the corner of the building? For which case will the jet velocity be higher when it strikes the roof of the building?

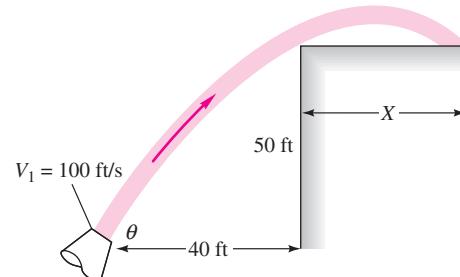

P3.115


**P3.116** For the container of Fig. P3.116 use Bernoulli's equation to derive a formula for the distance  $X$  where the

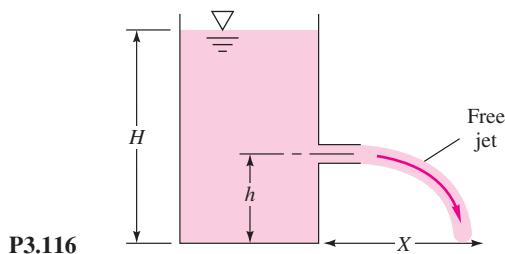


P3.116

free jet leaving horizontally will strike the floor, as a function of  $h$  and  $H$ . For what ratio  $h/H$  will  $X$  be maximum? Sketch the three trajectories for  $h/H = 0.25, 0.5$ , and  $0.75$ .

- P3.117** Water at  $20^\circ\text{C}$ , in the pressurized tank of Fig. P3.117, flows out and creates a vertical jet as shown. Assuming steady frictionless flow, determine the height  $H$  to which the jet rises.

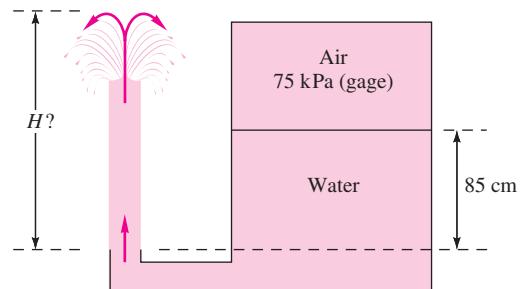**P3.117**


- P3.118** Bernoulli's 1738 treatise *Hydrodynamica* contains many excellent sketches of flow patterns related to his frictionless relation. One, however, redrawn here as Fig. P3.118, seems physically misleading. Can you explain what might be wrong with the figure?

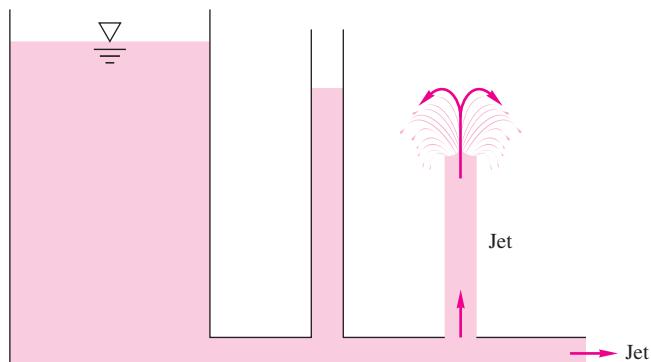**P3.118**


- P3.119** A long fixed tube with a rounded nose, aligned with an oncoming flow, can be used to measure velocity. Measurements are made of the pressure at (1) the front nose and (2) a hole in the side of the tube further along, where the pressure nearly equals stream pressure.

(a) Make a sketch of this device and show how the velocity is calculated. (b) For a particular sea-level air flow, the difference between nose pressure and side pressure is  $1.5 \text{ lbf/in}^2$ . What is the air velocity, in mi/h?


- P3.120** The manometer fluid in Fig. P3.120 is mercury. Estimate the volume flow in the tube if the flowing fluid is (a) gasoline and (b) nitrogen, at  $20^\circ\text{C}$  and 1 atm.

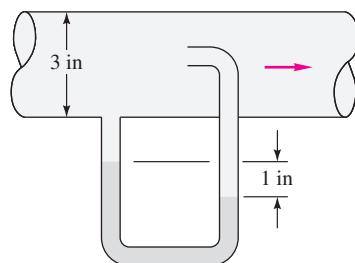**P3.120**

- P3.121** In Fig. P3.121 the flowing fluid is  $\text{CO}_2$  at  $20^\circ\text{C}$ . Neglect losses. If  $p_1 = 170 \text{ kPa}$  and the manometer fluid is Meriam red oil ( $\text{SG} = 0.827$ ), estimate (a)  $p_2$  and (b) the gas flow rate in  $\text{m}^3/\text{h}$ .

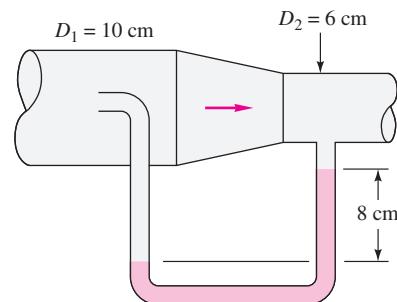
**P3.121**

- P3.122** The cylindrical water tank in Fig. P3.122 is being filled at a volume flow  $Q_1 = 1.0 \text{ gal/min}$ , while the water also

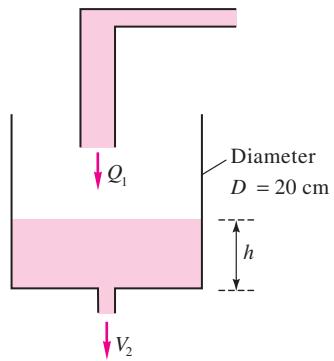**P3.122**


drains from a bottom hole of diameter  $d = 6$  mm. At time  $t = 0$ ,  $h = 0$ . Find and plot the variation  $h(t)$  and the eventual maximum water depth  $h_{\max}$ . Assume that Bernoulli's steady-flow equation is valid.

- P3.123** The air-cushion vehicle in Fig. P3.123 brings in sea-level standard air through a fan and discharges it at high velocity through an annular skirt of 3-cm clearance. If the vehicle weighs 50 kN, estimate (a) the required airflow rate and (b) the fan power in kW.

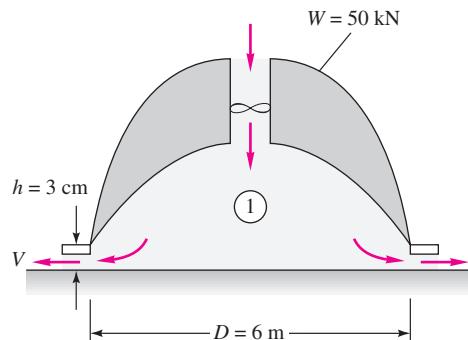

**P3.123**

- P3.124** A necked-down section in a pipe flow, called a *venturi*, develops a low throat pressure that can aspirate fluid upward from a reservoir, as in Fig. P3.124. Using Bernoulli's equation with no losses, derive an expression for the velocity  $V_1$  that is just sufficient to bring reservoir fluid into the throat.

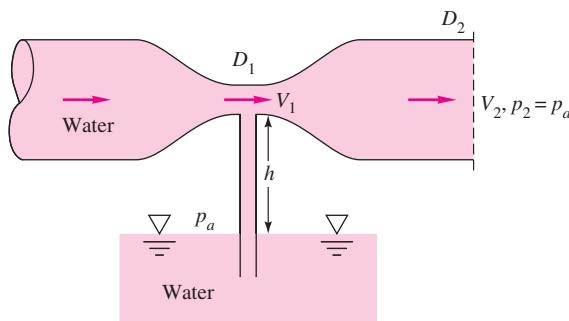


**P3.124**

- P3.125** Suppose you are designing an air hockey table. The table is  $3.0 \times 6.0$  ft in area, with  $\frac{1}{16}$ -in-diameter holes spaced every inch in a rectangular grid pattern (2592 holes total). The required jet speed from each hole is estimated to be 50 ft/s. Your job is to select an appropriate blower that will meet the requirements. Estimate the volumetric flow rate (in  $\text{ft}^3/\text{min}$ ) and pressure rise (in  $\text{lb/in}^2$ ) required of the blower. Hint: Assume that the air is stagnant in the


large volume of the manifold under the table surface, and neglect any frictional losses.

- P3.126** The liquid in Fig. P3.126 is kerosene at 20°C. Estimate the flow rate from the tank for (a) no losses and (b) pipe losses  $h_f \approx 4.5V^2/(2g)$ .

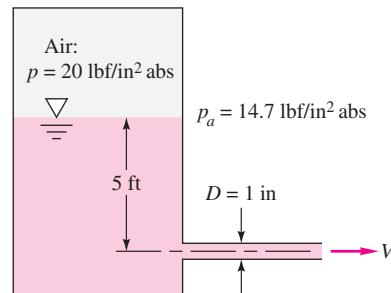

**P3.126**


- P3.127** In Fig. P3.127 the open jet of water at 20°C exits a nozzle into sea-level air and strikes a stagnation tube as shown.

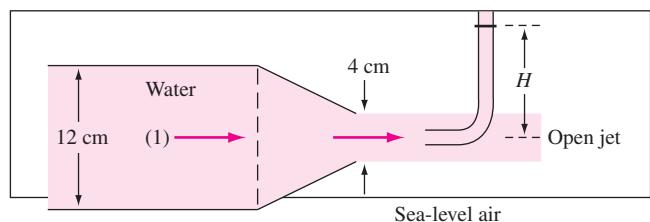

**P3.127**

If the pressure at the centerline at section 1 is 110 kPa, and losses are neglected, estimate (a) the mass flow in kg/s and (b) the height  $H$  of the fluid in the stagnation tube.

- P3.128** A *venturi meter*, shown in Fig. P3.128, is a carefully designed constriction whose pressure difference is a measure of the flow rate in a pipe. Using Bernoulli's equation for

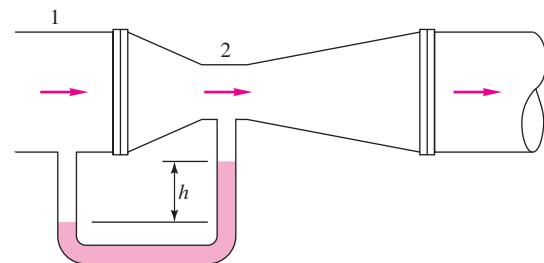

**P3.128**


steady incompressible flow with no losses, show that the flow rate  $Q$  is related to the manometer reading  $h$  by

$$Q = \frac{A_2}{\sqrt{1 - (D_2/D_1)^4}} \sqrt{\frac{2gh(\rho_M - \rho)}{\rho}}$$

where  $\rho_M$  is the density of the manometer fluid.


- P3.129** An open-circuit wind tunnel draws in sea-level standard air and accelerates it through a contraction into a 1-m by 1-m test section. A differential transducer mounted in the test section wall measures a pressure difference of 45 mm of water between the inside and outside. Estimate (a) the test section velocity in mi/h and (b) the absolute pressure on the front nose of a small model mounted in the test section.

- P3.130** In Fig. P3.130 the fluid is gasoline at 20°C at a weight flux of 120 N/s. Assuming no losses, estimate the gage pressure at section 1.

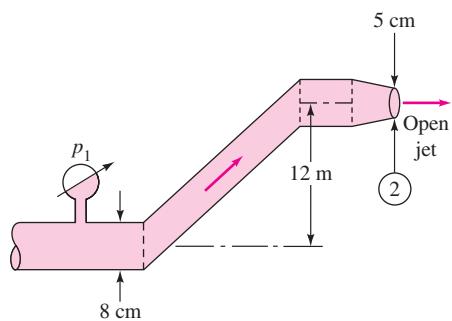

**P3.130**


- P3.131** In Fig. P3.131 both fluids are at 20°C. If  $V_1 = 1.7$  ft/s and losses are neglected, what should the manometer reading  $h$  ft be?

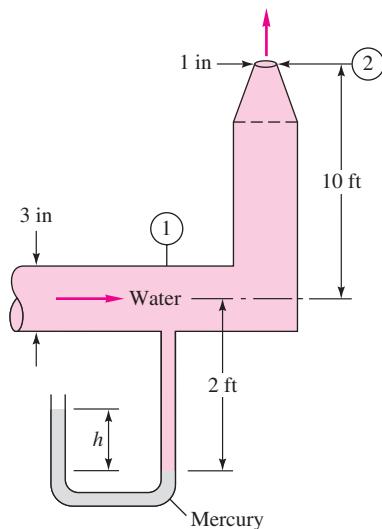

**P3.131**


- P3.132** Extend the siphon analysis of Example 3.14 to account for friction in the tube, as follows. Let the friction head loss in the tube be correlated as  $5.4(V_{\text{tube}})^2/(2g)$ , which approximates turbulent flow in a 2-m-long tube. Calculate the exit velocity in m/s and the volume flow rate in  $\text{cm}^3/\text{s}$ , and compare to Example 3.14.

- P3.133** If losses are neglected in Fig. P3.133, for what water level  $h$  will the flow begin to form vapor cavities at the throat of the nozzle?

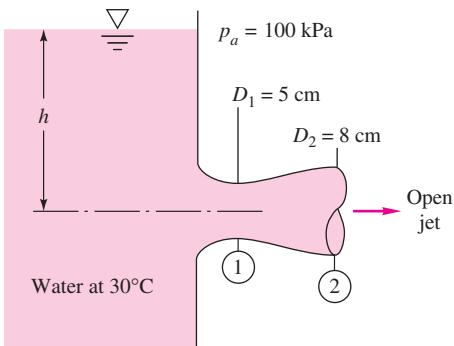


**P3.133**

- \*P3.134** For the 40°C water flow in Fig. P3.134, estimate the volume flow through the pipe, assuming no losses; then explain what is wrong with this seemingly innocent question. If the actual flow rate is  $Q = 40 \text{ m}^3/\text{h}$ , compute (a) the head loss in ft and (b) the constriction diameter  $D$  that causes cavitation, assuming that the throat divides the head loss equally and that changing the constriction causes no additional losses.

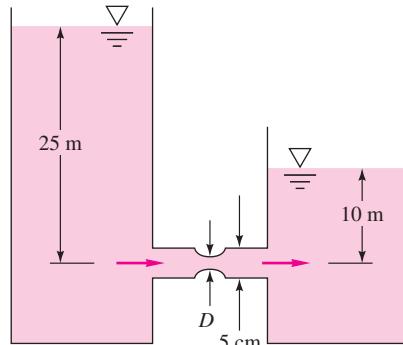


**P3.134**

- P3.135** The 35°C water flow of Fig. P3.135 discharges to sea-level standard atmosphere. Neglecting losses, for what nozzle diameter  $D$  will cavitation begin to occur? To avoid cavitation, should you increase or decrease  $D$  from this critical value?

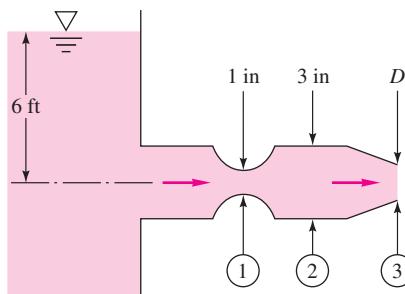


P3.135

- P3.136** Air, assumed frictionless, flows through a tube, exiting to sea-level atmosphere. Diameters at 1 and 3 are 5 cm, while  $D_2 = 3$  cm. What mass flow of air is required to suck water up 10 cm into section 2 of Fig. P3.136?

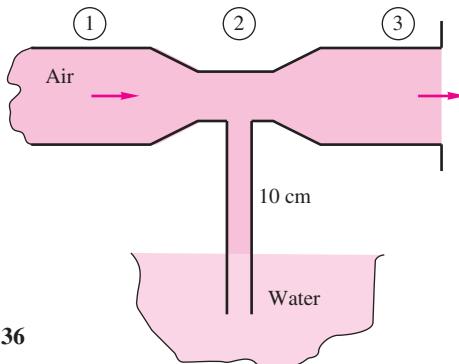

P3.136


- P3.137** In Fig. P3.137 the piston drives water at  $20^\circ\text{C}$ . Neglecting losses, estimate the exit velocity  $V_2$  ft/s. If  $D_2$  is further constricted, what is the maximum possible value of  $V_2$ ?

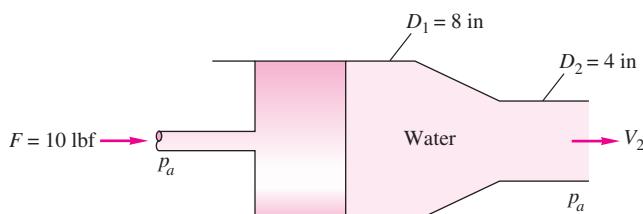

P3.137


- P3.138** For the sluice gate flow of Example 3.10, use Bernoulli's equation, along the surface, to estimate the flow rate  $Q$  as a function of the two water depths. Assume constant width  $b$ .

- P3.139** In the spillway flow of Fig. P3.139, the flow is assumed uniform and hydrostatic at sections 1 and 2. If losses are neglected, compute (a)  $V_2$  and (b) the force per unit width of the water on the spillway.

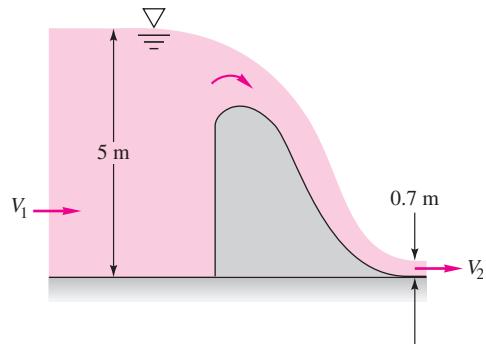


P3.139

- P3.140** For the water channel flow of Fig. P3.140,  $h_1 = 1.5$  m,  $H = 4$  m, and  $V_1 = 3$  m/s. Neglecting losses and assuming uniform flow at sections 1 and 2, find the downstream depth  $h_2$ , and show that *two* realistic solutions are possible.

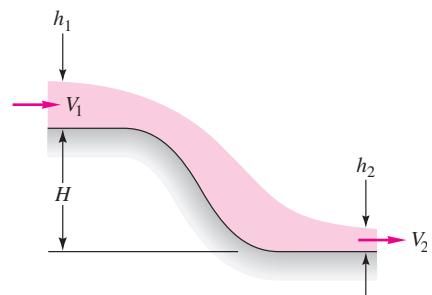

P3.140


- P3.141** For the water channel flow of Fig. P3.141,  $h_1 = 0.45$  ft,  $H = 2.2$  ft, and  $V_1 = 16$  ft/s. Neglecting losses and assuming uniform flow at sections 1 and 2, find the downstream depth  $h_2$ ; show that *two* realistic solutions are possible.

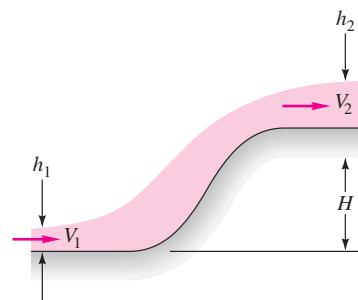

P3.141

**\*P3.142** A cylindrical tank of diameter  $D$  contains liquid to an initial height  $h_0$ . At time  $t = 0$  a small stopper of diameter  $d$  is removed from the bottom. Using Bernoulli's equation with no losses, derive (a) a differential equation for the free-surface height  $h(t)$  during draining and (b) an expression for the time  $t_0$  to drain the entire tank.

**\*P3.143** The large tank of incompressible liquid in Fig. P3.143 is at rest when, at  $t = 0$ , the valve is opened to the atmosphere. Assuming  $h \approx \text{constant}$  (negligible velocities and accelerations in the tank), use the unsteady frictionless Bernoulli equation to derive and solve a differential equation for  $V(t)$  in the pipe.

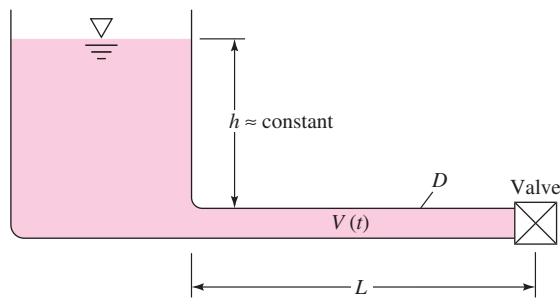


P3.143

**P3.144** A 6-cm-diameter free water jet, in sea-level air at 101,350 Pa, strikes perpendicular to a flat wall. If the water stagnation pressure at the wall is 213,600 Pa, estimate the force required to support the wall against jet momentum.

**P3.145** The incompressible flow form of Bernoulli's relation, Eq. (3.54), is accurate only for Mach numbers less than about 0.3. At higher speeds, variable density must be accounted for. The most common assumption for compressible fluids is *isentropic flow of an ideal gas*, or  $p = C\rho^k$ , where  $k = c_p/c_v$ . Substitute this relation into Eq. (3.52), integrate, and eliminate the constant  $C$ . Compare your compressible result with Eq. (3.54) and comment.


**P3.146** The pump in Fig. P3.146 draws gasoline at 20°C from a reservoir. Pumps are in big trouble if the liquid vaporizes (cavitates) before it enters the pump. (a) Neglecting losses and assuming a flow rate of 65 gal/min, find the limitations on  $(x, y, z)$  for avoiding cavitation. (b) If pipe friction losses are included, what additional limitations might be important?

**P3.147** For the system of Prob P3.146, let the pump exhaust gasoline at 65 gal/min to the atmosphere through a 3-cm-diameter opening, with no cavitation, when  $x = 3$  m,  $y = 2.5$  m, and  $z = 2$  m. If the friction head loss is  $h_{\text{loss}} \approx 3.7(V^2/2g)$ , where  $V$  is the average velocity in the pipe, estimate the horsepower required to be delivered by the pump.

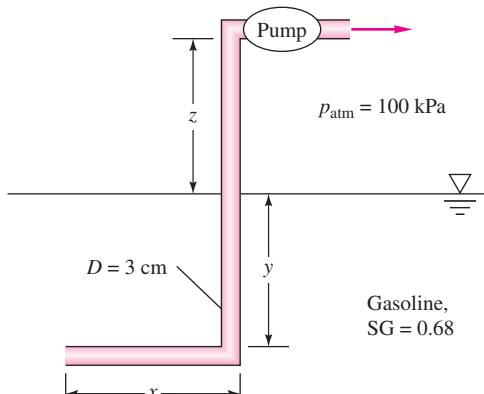

P3.146


**P3.148** By neglecting friction, (a) use the Bernoulli equation between surfaces 1 and 2 to estimate the volume flow through the orifice, whose diameter is 3 cm. (b) Why is the result to part (a) absurd? (c) Suggest a way to resolve this paradox and find the true flow rate.

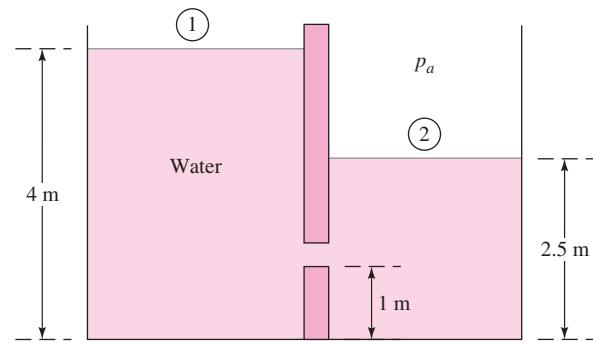

P3.148

### The angular momentum theorem


**P3.149** The horizontal lawn sprinkler in Fig. P3.149 has a water flow rate of 4.0 gal/min introduced vertically through the center. Estimate (a) the retarding torque required to keep the arms from rotating and (b) the rotation rate (r/min) if there is no retarding torque.

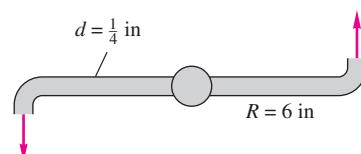

P3.149


**P3.150** In Prob. P3.60 find the torque caused around flange 1 if the center point of exit 2 is 1.2 m directly below the flange center.

- P3.151** The wye joint in Fig. P3.151 splits the pipe flow into equal amounts  $Q/2$ , which exit, as shown, a distance  $R_0$  from the axis. Neglect gravity and friction. Find an expression for the torque  $T$  about the  $x$  axis required to keep the system rotating at angular velocity  $\Omega$ .

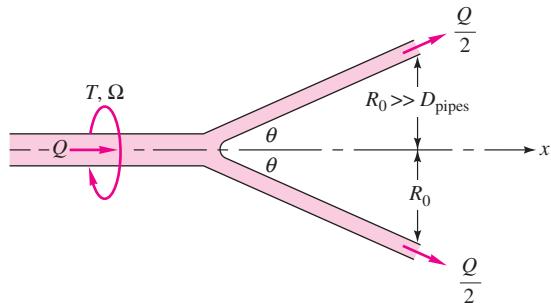**P3.151**



- P3.152** Modify Example 3.19 so that the arm starts from rest and spins up to its final rotation speed. The moment of inertia of the arm about  $O$  is  $I_0$ . Neglecting air drag, find  $d\omega/dt$  and integrate to determine the angular velocity  $\omega(t)$ , assuming  $\omega = 0$  at  $t = 0$ .

- P3.153** The three-arm lawn sprinkler of Fig. P3.153 receives  $20^\circ\text{C}$  water through the center at  $2.7 \text{ m}^3/\text{h}$ . If collar friction is negligible, what is the steady rotation rate in r/min for (a)  $\theta = 0^\circ$  and (b)  $\theta = 40^\circ$ ?

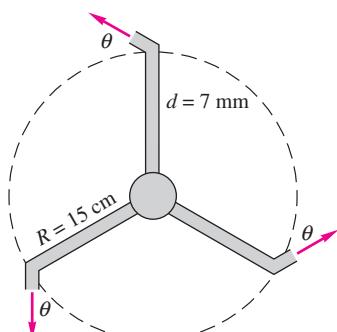
**P3.153**

- P3.154** Water at  $20^\circ\text{C}$  flows at 30 gal/min through the 0.75-in.-diameter double pipe bend of Fig. P3.154. The pressures are  $p_1 = 30 \text{ lbf/in}^2$  and  $p_2 = 24 \text{ lbf/in}^2$ . Compute the torque  $T$  at point  $B$  necessary to keep the pipe from rotating.

- P3.155** The centrifugal pump of Fig. P3.155 has a flow rate  $Q$  and exits the impeller at an angle  $\theta_2$  relative to the blades, as shown. The fluid enters axially at section 1. Assuming incompressible flow at shaft angular velocity  $\omega$ , derive a formula for the power  $P$  required to drive the impeller.

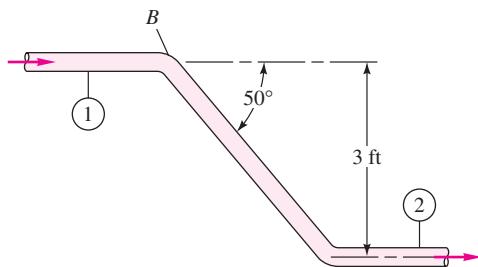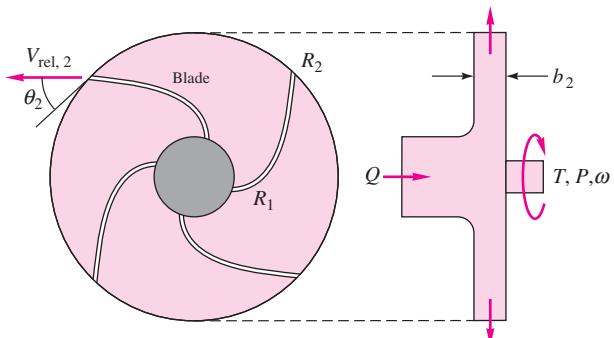**P3.154****P3.155**

- P3.156** A simple turbomachine is constructed from a disk with two internal ducts that exit tangentially through square holes, as in Fig. P3.156. Water at  $20^\circ\text{C}$  enters normal to the disk at the center, as shown. The disk must drive, at 250 r/min, a small device whose retarding torque is  $1.5 \text{ N} \cdot \text{m}$ . What is the proper mass flow of water, in kg/s?

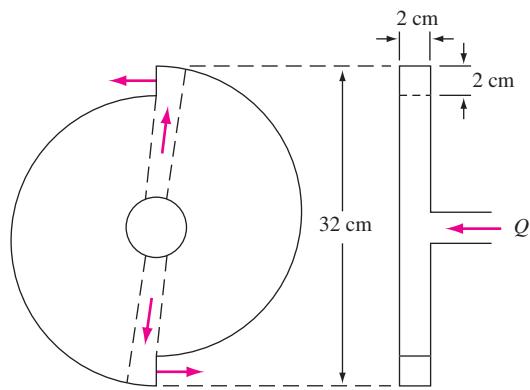
**P3.156**

**P3.157** Reverse the flow in Fig. P3.155, so that the system operates as a radial-inflow *turbine*. Assuming that the outflow into section 1 has no tangential velocity, derive an expression for the power  $P$  extracted by the turbine.

**P3.158** Revisit the turbine cascade system of Prob. P3.78, and derive a formula for the power  $P$  delivered, using the *angular* momentum theorem of Eq. (3.59).


**P3.159** A centrifugal pump impeller delivers 4000 gal/min of water at 20°C with a shaft rotation rate of 1750 r/min. Neglect losses. If  $r_1 = 6$  in,  $r_2 = 14$  in,  $b_1 = b_2 = 1.75$  in,  $V_{t1} = 10$  ft/s, and  $V_{t2} = 110$  ft/s, compute the absolute velocities (a)  $V_1$  and (b)  $V_2$  and (c) the horsepower required. (d) Compare with the ideal horsepower required.

**P3.160** The pipe bend of Fig. P3.160 has  $D_1 = 27$  cm and  $D_2 = 13$  cm. When water at 20°C flows through the pipe at 4000 gal/min,  $p_1 = 194$  kPa (gage). Compute the torque required at point  $B$  to hold the bend stationary.

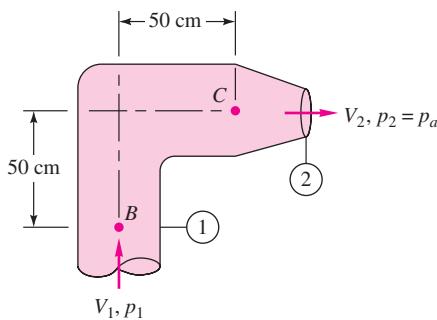


P3.160

**P3.162** The waterwheel in Fig. P3.162 is being driven at 200 r/min by a 150-ft/s jet of water at 20°C. The jet diameter is 2.5 in. Assuming no losses, what is the horsepower developed by the wheel? For what speed  $\Omega$  r/min will the horsepower developed be a maximum? Assume that there are many buckets on the waterwheel.

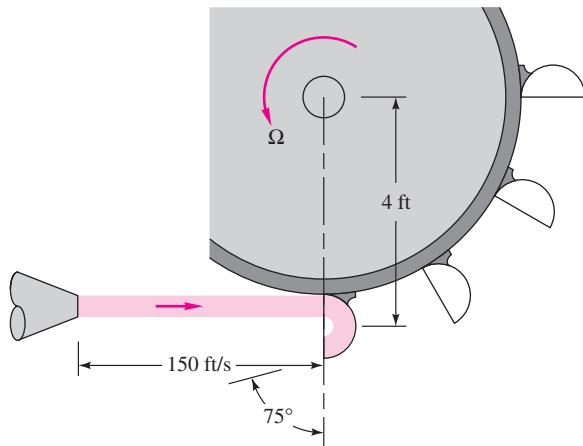


P3.162

**P3.163** A rotating dishwasher arm delivers at 60°C to six nozzles, as in Fig. P3.163. The total flow rate is 3.0 gal/min. Each nozzle has a diameter of  $\frac{3}{16}$  in. If the nozzle flows are equal and friction is neglected, estimate the steady rotation rate of the arm, in r/min.

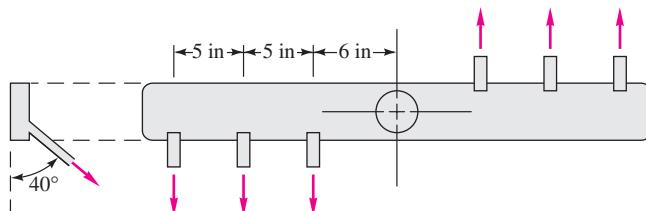


P3.163

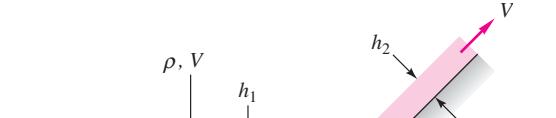


P3.161

**\*P3.164** A liquid of density  $\rho$  flows through a 90° bend as shown in Fig. P3.164 and issues vertically from a uniformly porous section of length  $L$ . Neglecting pipe and liquid weight, derive an expression for the torque  $M$  at point 0 required to hold the pipe stationary.

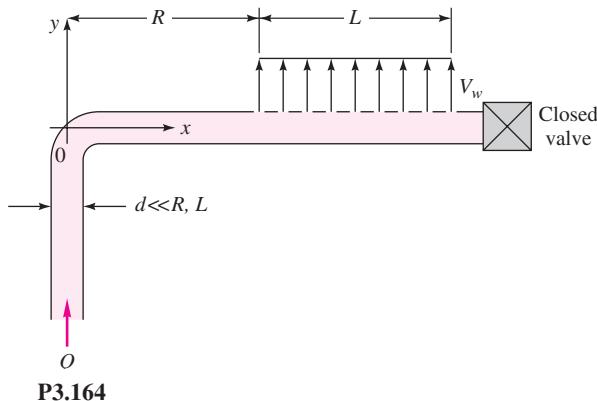

### The energy equation


- P3.165** There is a steady isothermal flow of water at 20°C through the device in Fig. P3.165. Heat-transfer, gravity, and temperature effects are negligible. Known data are  $D_1 = 9\text{ cm}$ ,  $Q_1 = 220\text{ m}^3/\text{h}$ ,  $p_1 = 150\text{ kPa}$ ,  $D_2 = 7\text{ cm}$ ,  $Q_2 = 100\text{ m}^3/\text{h}$ ,  $p_2 = 225\text{ kPa}$ ,  $D_3 = 4\text{ cm}$ , and  $p_3 = 265\text{ kPa}$ . Compute the rate of shaft work done for this device and its direction.

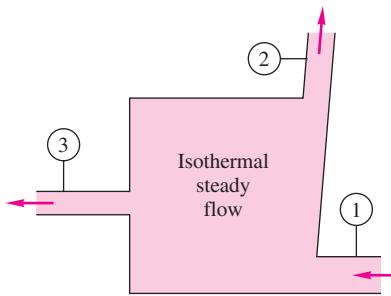


- P3.166** A power plant on a river, as in Fig. P3.166, must eliminate 55 MW of waste heat to the river. The river conditions upstream are  $Q_i = 2.5\text{ m}^3/\text{s}$  and  $T_i = 18^\circ\text{C}$ . The river is 45 m wide and 2.7 m deep. If heat losses to the atmosphere and ground are negligible, estimate the downstream river conditions ( $Q_o, T_o$ ).

- P3.167** For the conditions of Prob. P3.166, if the power plant is to heat the nearby river water by no more than 12°C, what should be the minimum flow rate  $Q$ , in  $\text{m}^3/\text{s}$ , through the plant heat exchanger? How will the value of  $Q$  affect the downstream conditions ( $Q_o, T_o$ )?

- P3.168** Multnomah Falls in the Columbia River Gorge has a sheer drop of 543 ft. Using the steady flow energy equation, estimate the water temperature change in °F caused by this drop.

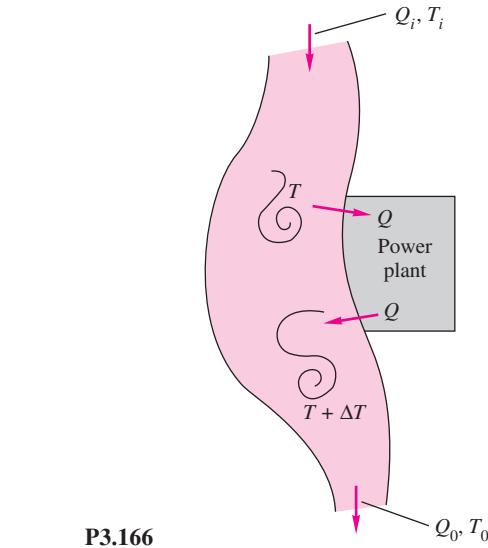


- P3.169** When the pump in Fig. P3.169 draws 220  $\text{m}^3/\text{h}$  of water at 20°C from the reservoir, the total friction head loss is 5 m. The flow discharges through a nozzle to the atmosphere. Estimate the pump power in kW delivered to the water.

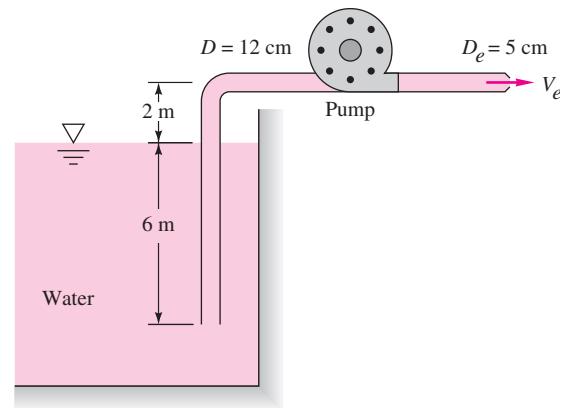

- P3.170** A steam turbine operates steadily under the following conditions. At the inlet,  $p = 2.5\text{ MPa}$ ,  $T = 450^\circ\text{C}$ , and  $V = 40\text{ m/s}$ . At the outlet,  $p = 22\text{ kPa}$ ,  $T = 70^\circ\text{C}$ , and  $V = 225\text{ m/s}$ . (a) If we neglect elevation changes and heat transfer, how much work is delivered to the turbine blades, in  $\text{kJ/kg}$ ? (b) If the mass flow is 10  $\text{kg/s}$ , how much total power is delivered? (c) Is the steam wet as it leaves the exit?


- P3.171** Consider a turbine extracting energy from a penstock in a dam, as in Fig. P3.171. For turbulent pipe flow (Chap. 6),

the friction head loss is approximately  $h_f = CQ^2$ , where the constant  $C$  depends on penstock dimensions and the properties of water. Show that, for a given penstock geometry and variable river flow  $Q$ , the maximum turbine power possible in this case is  $P_{\max} = 2\rho g H Q / 3$  and occurs when the flow rate is  $Q = \sqrt{H/(3C)}$ .

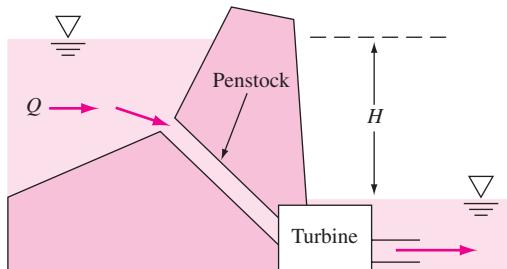

P3.171


- P3.172** The long pipe in Fig. P3.172 is filled with water at 20°C. When valve A is closed,  $p_1 - p_2 = 75$  kPa. When the valve is open and water flows at 500 m<sup>3</sup>/h,  $p_1 - p_2 = 160$  kPa. What is the friction head loss between 1 and 2, in m, for the flowing condition?

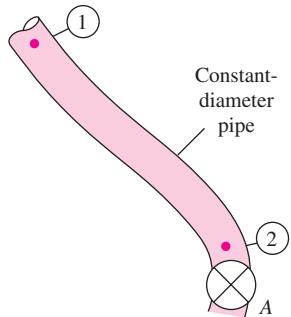

P3.172


- P3.173** A 36-in-diameter pipeline carries oil (SG = 0.89) at 1 million barrels per day (bbl/day) (1 bbl = 42 U.S. gal). The friction head loss is 13 ft/1000 ft of pipe. It is planned to place pumping stations every 10 mi along the pipe. Estimate the horsepower that must be delivered to the oil by each pump.

- P3.174** The *pump-turbine* system in Fig. P3.174 draws water from the upper reservoir in the daytime to produce power for a city. At night, it pumps water from lower to upper reservoirs to restore the situation. For a design flow rate of 15,000 gal/min in either direction, the friction head loss is 17 ft. Estimate the power in kW (a) extracted by the turbine and (b) delivered by the pump.

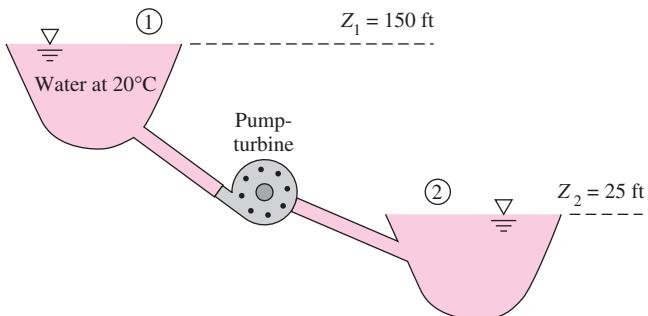

P3.174


- P3.175** Water at 20°C is delivered from one reservoir to another through a long 8-cm-diameter pipe. The lower reservoir has a surface elevation  $z_2 = 80$  m. The friction loss in the pipe is correlated by the formula  $h_{\text{loss}} \approx 17.5(V^2/2g)$ , where  $V$  is the average velocity in the pipe. If the steady flow rate through the pipe is 500 gallons per minute, estimate the surface elevation of the higher reservoir.
- P3.176** A fireboat draws seawater (SG = 1.025) from a submerged pipe and discharges it through a nozzle, as in Fig. P3.176. The total head loss is 6.5 ft. If the pump efficiency is 75 percent, what horsepower motor is required to drive it?

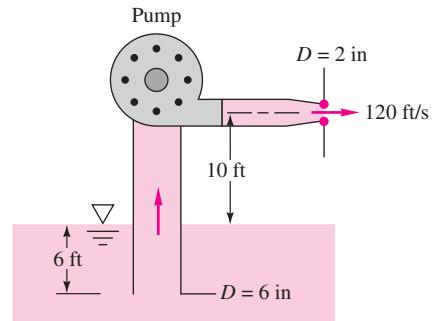


P3.176

- P3.177** A device for measuring liquid viscosity is shown in Fig. P3.177. With the parameters ( $\rho$ ,  $L$ ,  $H$ ,  $d$ ) known, the flow rate  $Q$  is measured and the viscosity calculated, assuming a laminar-flow pipe loss from Chap. 6,  $h_f = (32\mu L)/(\rho gd^2)$ . Heat transfer and all other losses are negligible. (a) Derive a formula for the viscosity  $\mu$  of the fluid. (b) Calculate  $\mu$  for the case  $d = 2$  mm,  $\rho = 800$  kg/m<sup>3</sup>,  $L = 95$  cm,  $H = 30$  cm, and  $Q = 760$  cm<sup>3</sup>/h. (c) What is your guess of the fluid in part (b)? (d) Verify that the Reynolds number  $Re_d$  is less than 2000 (laminar pipe flow).

- P3.178** The horizontal pump in Fig. P3.178 discharges 20°C water at 57 m<sup>3</sup>/h. Neglecting losses, what power in kW is delivered to the water by the pump?

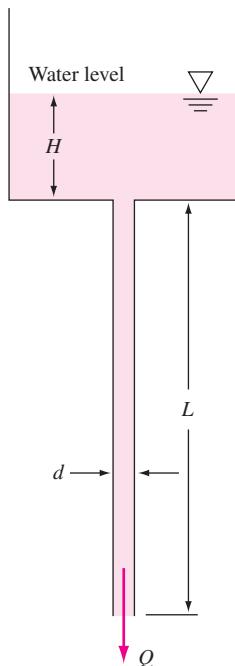


P3.177

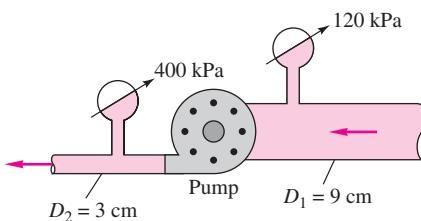

P3.178

- P3.179** Steam enters a horizontal turbine at 350 lbf/in<sup>2</sup> absolute, 580°C, and 12 ft/s and is discharged at 110 ft/s and 25°C saturated conditions. The mass flow is 2.5 lbm/s, and the heat losses are 7 Btu/lb of steam. If head losses are negligible, how much horsepower does the turbine develop?


- P3.180** Water at 20°C is pumped at 1500 gal/min from the lower to the upper reservoir, as in Fig. P3.180. Pipe friction losses are approximated by  $h_f \approx 27V^2/(2g)$ , where  $V$  is the

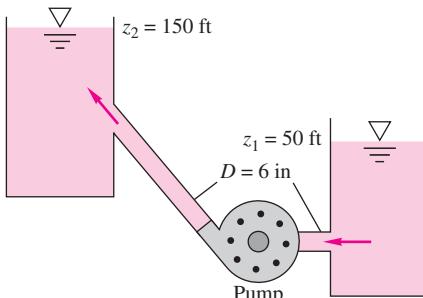

P3.180


average velocity in the pipe. If the pump is 75 percent efficient, what horsepower is needed to drive it?

- P3.181** A typical pump has a head that, for a given shaft rotation rate, varies with the flow rate, resulting in a *pump performance curve* as in Fig. P3.181. Suppose that this pump is 75 percent efficient and is used for the system in Prob. 3.180. Estimate (a) the flow rate, in gal/min, and (b) the horsepower needed to drive the pump.

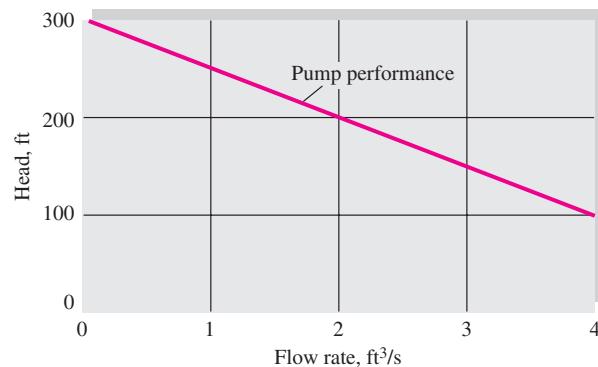


P3.181

- P3.182** The insulated tank in Fig. P3.182 is to be filled from a high-pressure air supply. Initial conditions in the tank are  $T = 20^\circ\text{C}$  and  $p = 200\text{ kPa}$ . When the valve is opened, the initial mass flow rate into the tank is 0.013 kg/s. Assuming an ideal gas, estimate the initial rate of temperature rise of the air in the tank.

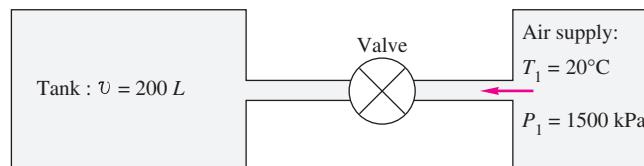


P3.182

- P3.183** The pump in Fig. P3.183 creates a 20°C water jet oriented to travel a maximum horizontal distance. System friction head losses are 6.5 m. The jet may be approximated by the trajectory of frictionless particles. What power must be delivered by the pump?

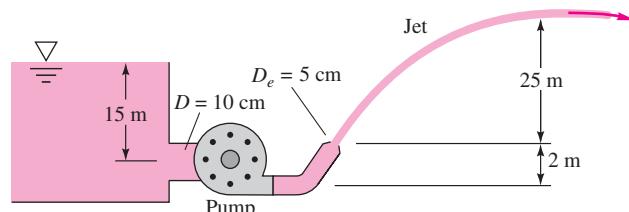


P3.183

- P3.184** The large turbine in Fig. P3.184 diverts the river flow under a dam as shown. System friction losses are  $h_f = 3.5V^2/(2g)$ , where  $V$  is the average velocity in the supply pipe. For what river flow rate in  $\text{m}^3/\text{s}$  will the power extracted by 25 MW? Which of the two possible solutions has a better “conversion efficiency”?

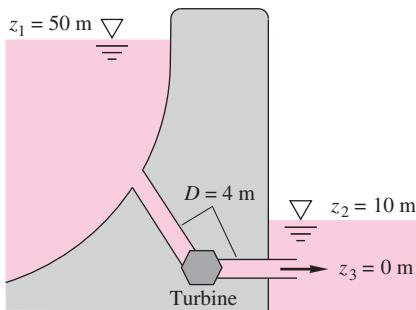

P3.184

- P3.185** Kerosine at 20°C flows through the pump in Fig. P3.185 at  $2.3 \text{ ft}^3/\text{s}$ . Head losses between 1 and 2 are 8 ft, and the pump delivers 8 hp to the flow. What should the mercury manometer reading  $h$  ft be?

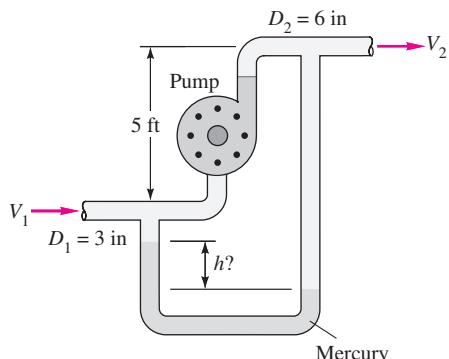

P3.185

## Word Problems

- W3.1** Derive a control volume form of the *second* law of thermodynamics. Suggest some practical uses for your relation in analyzing real fluid flows.
- W3.2** Suppose that it is desired to estimate volume flow  $Q$  in a pipe by measuring the axial velocity  $u(r)$  at specific points. For cost reasons only *three* measuring points are to be used. What are the best radii selections for these three points?
- W3.3** Consider water flowing by gravity through a short pipe connecting two reservoirs whose surface levels differ by an amount  $\Delta z$ . Why does the incompressible frictionless Bernoulli equation lead to an absurdity when the flow rate through the pipe is computed? Does the paradox have something to do with the length of the short pipe? Does the paradox disappear if we round the entrance and exit edges of the pipe?
- W3.4** Use the steady flow energy equation to analyze flow through a water faucet whose supply pressure is  $p_0$ .

What physical mechanism causes the flow to vary continuously from zero to maximum as we open the faucet valve?

- W3.5** Consider a long sewer pipe, half full of water, sloping downward at angle  $\theta$ . Antoine Chézy in 1768 determined that the average velocity of such an open channel flow should be  $V \approx C\sqrt{R \tan \theta}$ , where  $R$  is the pipe radius and  $C$  is a constant. How does this famous formula relate to the steady flow energy equation applied to a length  $L$  of the channel?

- W3.6** Put a table tennis ball in a funnel, and attach the small end of the funnel to an air supply. You probably won't be able to blow the ball either up or down out of the funnel. Explain why.

- W3.7** How does a *siphon* work? Are there any limitations (such as how high or how low can you siphon water away from a tank)? Also, how far—could you use a flexible tube to siphon water from a tank to a point 100 ft away?


## Fundamentals of Engineering Exam Problems

- FE3.1** In Fig. FE3.1 water exits from a nozzle into atmospheric pressure of 101 kPa. If the flow rate is 160 gal/min, what is the average velocity at section 1?  
 (a) 2.6 m/s, (b) 0.81 m/s, (c) 93 m/s, (d) 23 m/s,  
 (e) 1.62 m/s

- FE3.2** In Fig. FE3.1 water exits from a nozzle into atmospheric pressure of 101 kPa. If the flow rate is 160 gal/min and friction is neglected, what is the gage pressure at section 1?

- (a) 1.4 kPa, (b) 32 kPa, (c) 43 kPa, (d) 29 kPa,  
(e) 123 kPa

**FE3.3** In Fig. FE3.1 water exits from a nozzle into atmospheric pressure of 101 kPa. If the exit velocity is  $V_2 = 8 \text{ m/s}$  and friction is neglected, what is the axial flange force required to keep the nozzle attached to pipe 1?  
(a) 11 N, (b) 56 N, (c) 83 N, (d) 123 N, (e) 110 N

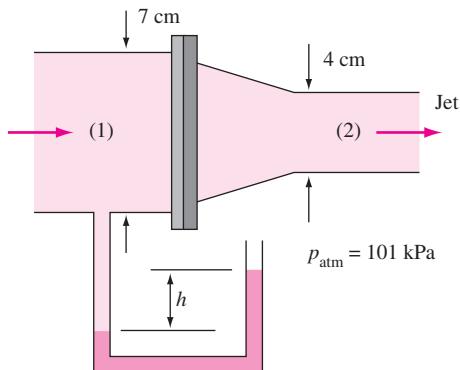
**FE3.1**

**FE3.4** In Fig. FE3.1 water exits from a nozzle into atmospheric pressure of 101 kPa. If the manometer fluid has a specific gravity of 1.6 and  $h = 66 \text{ cm}$ , with friction neglected, what is the average velocity at section 2?


- (a) 4.55 m/s, (b) 2.4 m/s, (c) 2.95 m/s, (d) 5.55 m/s,  
(e) 3.4 m/s

**FE3.5** A jet of water 3 cm in diameter strikes normal to a plate as in Fig. FE3.5. If the force required to hold the plate is 23 N, what is the jet velocity?

- (a) 2.85 m/s, (b) 5.7 m/s, (c) 8.1 m/s, (d) 4.0 m/s,  
(e) 23 m/s

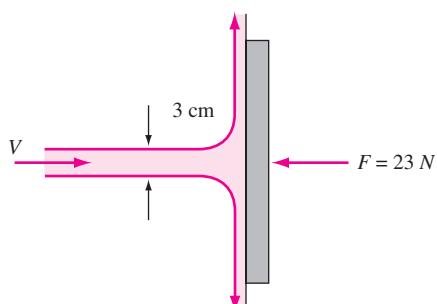**FE3.5**

**FE3.6** A fireboat pump delivers water to a vertical nozzle with a 3:1 diameter ratio, as in Fig. FE3.6. If friction

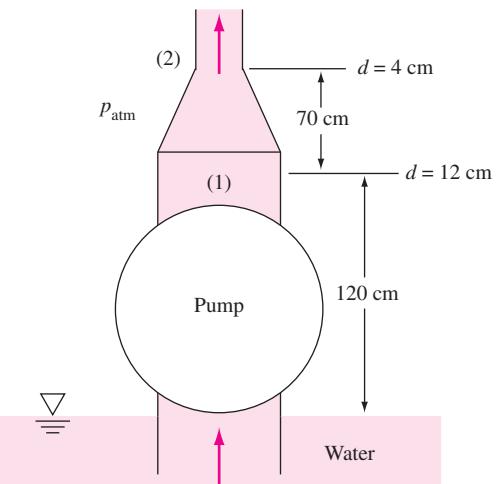**FE3.6**

is neglected and the flow rate is 500 gal/min, how high will the outlet water jet rise?

- (a) 2.0 m, (b) 9.8 m, (c) 32 m, (d) 64 m, (e) 98 m

**FE3.7** A fireboat pump delivers water to a vertical nozzle with a 3:1 diameter ratio, as in Fig. FE3.6. If friction is neglected and the pump increases the pressure at section 1 to 51 kPa (gage), what will be the resulting flow rate?  
(a) 187 gal/min, (b) 199 gal/min, (c) 214 gal/min,  
(d) 359 gal/min, (e) 141 gal/min

**FE3.8** A fireboat pump delivers water to a vertical nozzle with a 3:1 diameter ratio, as in Fig. FE3.6. If duct and nozzle friction are neglected and the pump provides 12.3 ft of head to the flow, what will be the outlet flow rate?

- (a) 85 gal/min, (b) 120 gal/min, (c) 154 gal/min,  
(d) 217 gal/min, (e) 285 gal/min

**FE3.9** Water flowing in a smooth 6-cm-diameter pipe enters a venturi contraction with a throat diameter of 3 cm. Upstream pressure is 120 kPa. If cavitation occurs in the throat at a flow rate of 155 gal/min, what is the estimated fluid vapor pressure, assuming ideal frictionless flow?


- (a) 6 kPa, (b) 12 kPa, (c) 24 kPa, (d) 31 kPa,  
(e) 52 kPa

**FE3.10** Water flowing in a smooth 6-cm-diameter pipe enters a venturi contraction with a throat diameter of 4 cm. Upstream pressure is 120 kPa. If the pressure in the throat is 50 kPa, what is the flow rate, assuming ideal frictionless flow?

- (a) 7.5 gal/min, (b) 236 gal/min, (c) 263 gal/min,  
(d) 745 gal/min, (e) 1053 gal/min


## Comprehensive Problems

- C3.1** In a certain industrial process, oil of density  $\rho$  flows through the inclined pipe in Fig. C3.1. A U-tube manometer, with fluid density  $\rho_m$ , measures the pressure difference between points 1 and 2, as shown. The pipe flow is steady, so that the fluids in the manometer are stationary. (a) Find an analytic expression for  $p_1 - p_2$  in terms of the system parameters. (b) Discuss the conditions on  $h$  necessary for there to be no flow in the pipe. (c) What about flow *up*, from 1 to 2? (d) What about flow *down*, from 2 to 1?

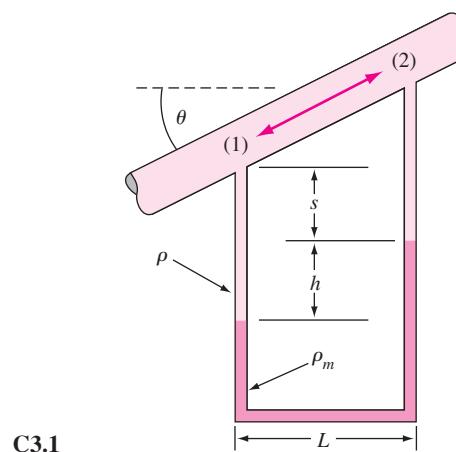


- C3.2** A rigid tank of volume  $\mathcal{V} = 1.0 \text{ m}^3$  is initially filled with air at  $20^\circ\text{C}$  and  $p_0 = 100 \text{ kPa}$ . At time  $t = 0$ , a vacuum pump is turned on and evacuates air at a constant volume flow rate  $Q = 80 \text{ L/min}$  (regardless of the pressure). Assume an ideal gas and an isothermal process. (a) Set up a differential equation for this flow. (b) Solve this equation for  $t$  as a function of  $(\mathcal{V}, Q, p, p_0)$ . (c) Compute the time in minutes to pump the tank down to  $p = 20 \text{ kPa}$ . Hint: Your answer should lie between 15 and 25 min.

- C3.3** Suppose the same steady water jet as in Prob. P3.40 (jet velocity 8 m/s and jet diameter 10 cm) impinges instead on a cup cavity as shown in Fig. C3.3. The water is turned  $180^\circ$  and exits, due to friction, at lower velocity,  $V_e = 4 \text{ m/s}$ . (Looking from the left, the exit jet is a circular annulus of outer radius  $R$  and thickness  $h$ , flowing toward the viewer.) The cup has a radius of curvature of 25 cm. Find (a) the thickness  $h$  of the exit jet and (b) the force  $F$  required to hold the cupped object in place. (c) Compare part (b) to Prob. 3.40, where  $F \approx 500 \text{ N}$ , and give a physical explanation as to why  $F$  has changed.

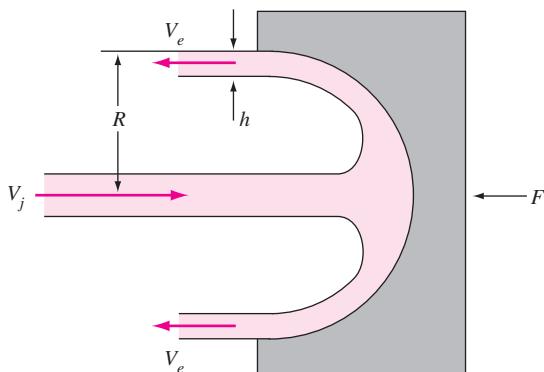

- C3.4** The air flow underneath an air hockey puck is very complex, especially since the air jets from the air hockey table impinge on the underside of the puck at various points nonsymmetrically. A reasonable approximation is that at any given time, the gage pressure on the bottom of the puck is halfway between zero (atmospheric pressure) and the stagnation pressure of the impinging jets. (Stagnation pressure is defined as  $p_0 = \frac{1}{2} \rho V_{jet}^2$ ) (a) Find the jet velocity  $V_{jet}$  required to support an air hockey puck of weight  $W$  and diameter  $d$ . Give your answer in terms of  $W$ ,  $d$ , and the density  $\rho$  of the air. (b) For  $W = 0.05 \text{ lbf}$  and  $d = 2.5 \text{ in}$ , estimate the required jet velocity in ft/s.

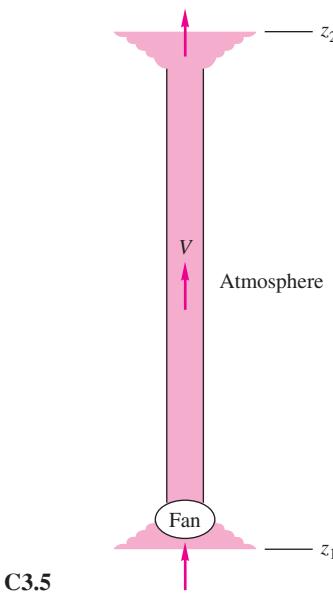

- C3.5** Neglecting friction sometimes leads to odd results. You are asked to analyze and discuss the following example in Fig. C3.5. A fan blows air through a duct from section 1 to section 2, as shown. Assume constant air

density  $\rho$ . Neglecting frictional losses, find a relation between the required fan head  $h_p$  and the flow rate and the elevation change. Then explain what may be an unexpected result.

## Design Project

- D3.1** Let us generalize Probs. P3.180 and P3.181, in which a pump performance curve was used to determine the flow rate between reservoirs. The particular pump in Fig. P3.181 is one of a family of pumps of similar shape, whose dimensionless performance is as follows:

Head:

$$\phi \approx 6.04 - 161\zeta \quad \phi = \frac{gh}{n^2 D_p^2} \quad \text{and} \quad \zeta = \frac{Q}{nD_p^3}$$

Efficiency:


$$\eta \approx 70\zeta - 91,500\zeta^3 \quad \eta = \frac{\text{power to water}}{\text{power input}}$$

where  $h_p$  is the pump head (ft),  $n$  is the shaft rotation rate (r/s), and  $D_p$  is the impeller diameter (ft). The range of validity is  $0 < \zeta < 0.027$ . The pump of Fig. P3.181 had  $D_p = 2$  ft in diameter and rotated at  $n = 20$  r/s (1200 r/min). The solution to Prob. P3.181, namely,  $Q \approx 2.57 \text{ ft}^3/\text{s}$  and  $h_p \approx 172 \text{ ft}$ , corresponds to  $\phi \approx 3.46$ ,  $\zeta \approx 0.016$ ,  $\eta \approx 0.75$  (or 75 percent), and power to the water =  $\rho g Q h_p \approx 27,500 \text{ ft} \cdot \text{lbf/s}$  (50 hp). Please check these numerical values before beginning this project.

Now revisit Prob. P3.181 and select a *low-cost* pump that rotates at a rate no slower than 600 r/min and delivers no less than  $1.0 \text{ ft}^3/\text{s}$  of water. Assume that the cost of the pump is linearly proportional to the power input required. Comment on any limitations to your results.

## References

1. D. T. Greenwood, *Advanced Dynamics*, Cambridge University Press, New York, 2006.
2. T. von Kármán, *The Wind and Beyond*, Little, Brown, Boston, 1967.
3. J. P. Holman, *Heat Transfer*, 9th ed., McGraw-Hill, New York, 2001.
4. A. G. Hansen, *Fluid Mechanics*, Wiley, New York, 1967.
5. M. C. Potter, D. C. Wiggert, and M. Hondzo, *Mechanics of Fluids*, Brooks/Cole, Chicago, 2001.
6. R. E. Sonntag, C. Borgnakke, and G. J. Van Wylen, *Fundamentals of Thermodynamics*, 7th ed., John Wiley, New York, 2008.
7. Y. A. Cengel and M. A. Boles, *Thermodynamics: An Engineering Approach*, 6th ed., McGraw-Hill, New York, 2008.
8. J. D. Anderson, *Computational Fluid Dynamics: The Basics with Applications*, McGraw-Hill, New York, 1995.
9. W. G. Vincenti, “Control Volume Analysis: A Difference in Thinking between Engineering and Physics,” *Technology and Culture*, vol. 23, no. 2, 1982, pp. 145–174.
10. J. Keenan, *Thermodynamics*, Wiley, New York, 1941.
11. J. Hunsaker and B. Rightmire, *Engineering Applications of Fluid Mechanics*, McGraw-Hill, New York, 1947.

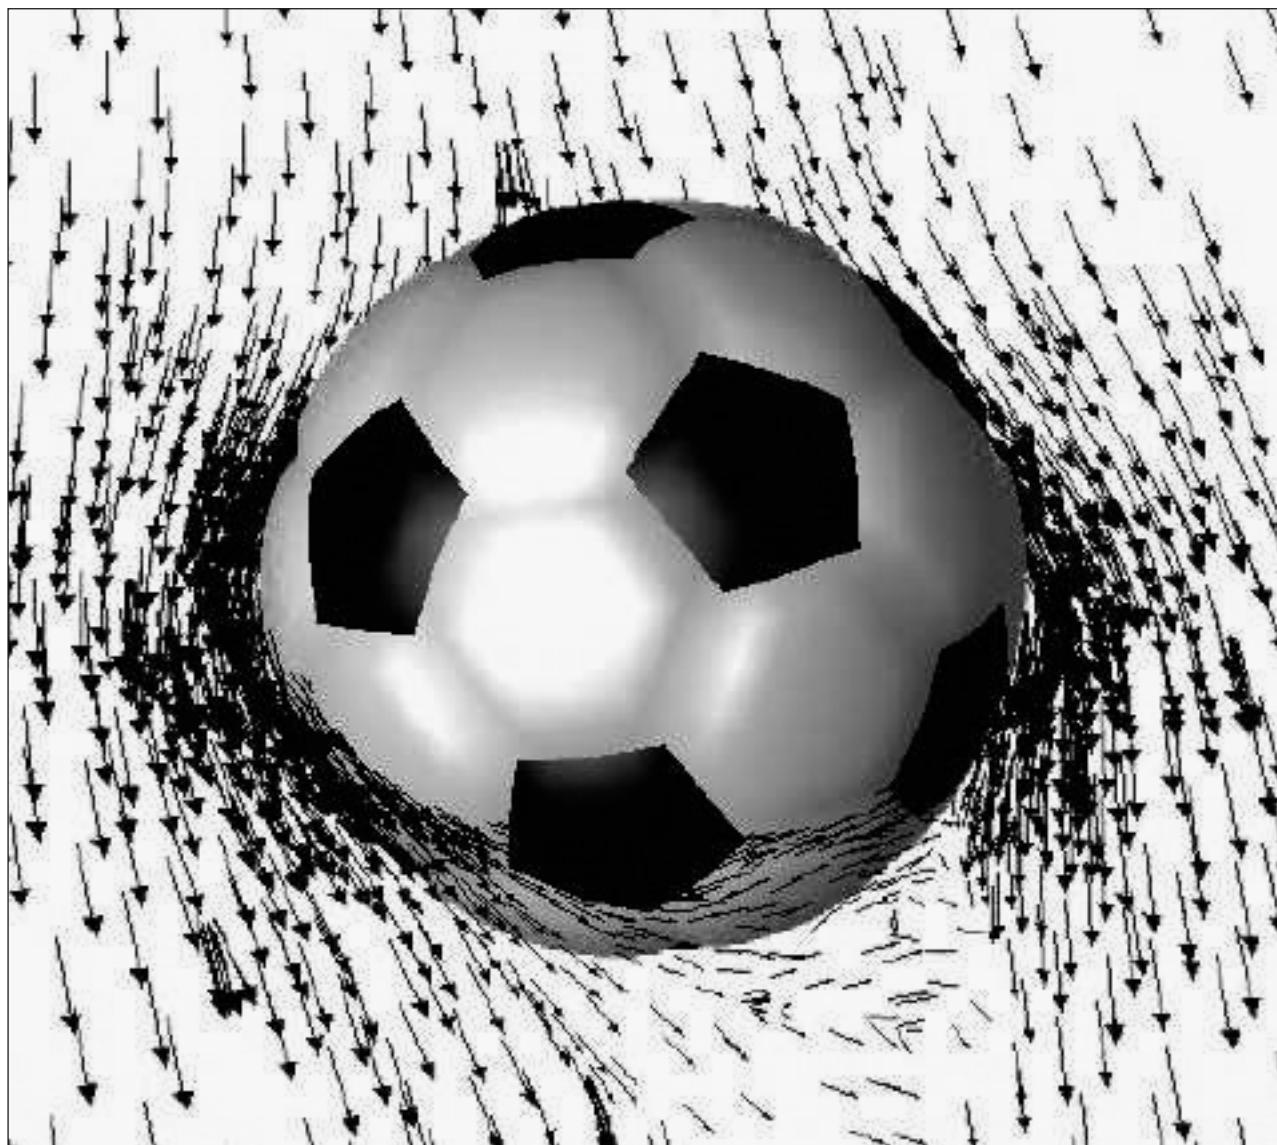

The differential equations of this chapter may be modeled by Computational Fluid Dynamics (CFD) for almost any flow problem. The example above shows the computed velocity vectors for flow past a curving, spinning soccer ball. This CFD project, headed by Dr. Keith Hanna of FLUENT Inc., was inspired by a miraculous free kick by Brazil's Roberto Carlos at the World Cup. Carlos' kick sailed high and wide to the right and then curved down over the defenders' heads into the net. The curved trajectory is called the *Magnus effect* (Heinrich Magnus, 1853). The velocities in the figure are used to compute the surface pressures and shear stresses, which are then summed to yield the transient force on the ball.

(Image Courtesy of ANSYS, Inc.)

# Chapter 4

## Differential Relations for Fluid Flow

**Motivation.** In analyzing fluid motion, we might take one of two paths: (1) seeking an estimate of gross effects (mass flow, induced force, energy change) over a *finite* region or control volume or (2) seeking the point-by-point details of a flow pattern by analyzing an *infinitesimal* region of the flow. The former or gross-average viewpoint was the subject of Chap. 3.

This chapter treats the second in our trio of techniques for analyzing fluid motion: small-scale, or *differential*, analysis. That is, we apply our four basic conservation laws to an infinitesimally small control volume or, alternately, to an infinitesimal fluid system. In either case the results yield the basic *differential equations* of fluid motion. Appropriate *boundary conditions* are also developed.

In their most basic form, these differential equations of motion are quite difficult to solve, and very little is known about their general mathematical properties. However, certain things can be done that have great educational value. First, as shown in Chap. 5, the equations (even if unsolved) reveal the basic dimensionless parameters that govern fluid motion. Second, as shown in Chap. 6, a great number of useful solutions can be found if one makes two simplifying assumptions: (1) steady flow and (2) incompressible flow. A third and rather drastic simplification, frictionless flow, makes our old friend the Bernoulli equation valid and yields a wide variety of idealized, or *perfect-fluid*, possible solutions. These idealized flows are treated in Chap. 8, and we must be careful to ascertain whether such solutions are in fact realistic when compared with actual fluid motion. Finally, even the difficult general differential equations now yield to the approximating technique known as computational fluid dynamics (CFD) whereby the derivatives are simulated by algebraic relations between a finite number of grid points in the flow field, which are then solved on a computer. Reference 1 is an example of a textbook devoted entirely to numerical analysis of fluid motion.

## 4.1 The Acceleration Field of a Fluid

In Sec. 1.7 we established the cartesian vector form of a velocity field that varies in space and time:

$$\mathbf{V}(\mathbf{r}, t) = \mathbf{i}u(x, y, z, t) + \mathbf{j}v(x, y, z, t) + \mathbf{k}w(x, y, z, t) \quad (1.4)$$

This is the most important variable in fluid mechanics: Knowledge of the velocity vector field is nearly equivalent to *solving* a fluid flow problem. Our coordinates are fixed in space, and we observe the fluid as it passes by—as if we had scribed a set of coordinate lines on a glass window in a wind tunnel. This is the *eulerian* frame of reference, as opposed to the *lagrangian* frame, which follows the moving position of individual particles.

To write Newton's second law for an infinitesimal fluid system, we need to calculate the acceleration vector field  $\mathbf{a}$  of the flow. Thus we compute the total time derivative of the velocity vector:

$$\mathbf{a} = \frac{d\mathbf{V}}{dt} = \mathbf{i} \frac{du}{dt} + \mathbf{j} \frac{dv}{dt} + \mathbf{k} \frac{dw}{dt}$$

Since each scalar component ( $u, v, w$ ) is a function of the four variables ( $x, y, z, t$ ), we use the chain rule to obtain each scalar time derivative. For example,

$$\frac{du(x, y, z, t)}{dt} = \frac{\partial u}{\partial t} + \frac{\partial u}{\partial x} \frac{dx}{dt} + \frac{\partial u}{\partial y} \frac{dy}{dt} + \frac{\partial u}{\partial z} \frac{dz}{dt}$$

But, by definition,  $dx/dt$  is the local velocity component  $u$ , and  $dy/dt = v$ , and  $dz/dt = w$ . The total time derivative of  $u$  may thus be written as follows, with exactly similar expressions for the time derivatives of  $v$  and  $w$ :

$$\begin{aligned} a_x &= \frac{du}{dt} = \frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} = \frac{\partial u}{\partial t} + (\mathbf{V} \cdot \nabla)u \\ a_y &= \frac{dv}{dt} = \frac{\partial v}{\partial t} + u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} + w \frac{\partial v}{\partial z} = \frac{\partial v}{\partial t} + (\mathbf{V} \cdot \nabla)v \\ a_z &= \frac{dw}{dt} = \frac{\partial w}{\partial t} + u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} + w \frac{\partial w}{\partial z} = \frac{\partial w}{\partial t} + (\mathbf{V} \cdot \nabla)w \end{aligned} \quad (4.1)$$

Summing these into a vector, we obtain the total acceleration:

$$\boxed{\mathbf{a} = \frac{d\mathbf{V}}{dt} = \frac{\partial \mathbf{V}}{\partial t} + \left( u \frac{\partial \mathbf{V}}{\partial x} + v \frac{\partial \mathbf{V}}{\partial y} + w \frac{\partial \mathbf{V}}{\partial z} \right) = \frac{\partial \mathbf{V}}{\partial t} + (\mathbf{V} \cdot \nabla) \mathbf{V}} \quad (4.2)$$

Local                      Convective

The term  $\partial \mathbf{V} / \partial t$  is called the *local acceleration*, which vanishes if the flow is steady—that is, independent of time. The three terms in parentheses are called the *convective acceleration*, which arises when the particle moves through regions of spatially varying velocity, as in a nozzle or diffuser. Flows that are nominally “steady” may have large accelerations due to the convective terms.

Note our use of the compact dot product involving  $\mathbf{V}$  and the gradient operator  $\nabla$ :

$$u \frac{\partial}{\partial x} + v \frac{\partial}{\partial y} + w \frac{\partial}{\partial z} = \mathbf{V} \cdot \nabla \quad \text{where} \quad \nabla = \mathbf{i} \frac{\partial}{\partial x} + \mathbf{j} \frac{\partial}{\partial y} + \mathbf{k} \frac{\partial}{\partial z}$$

The total time derivative—sometimes called the *substantial* or *material* derivative—concept may be applied to any variable, such as the pressure:

$$\frac{dp}{dt} = \frac{\partial p}{\partial t} + u \frac{\partial p}{\partial x} + v \frac{\partial p}{\partial y} + w \frac{\partial p}{\partial z} = \frac{\partial p}{\partial t} + (\mathbf{V} \cdot \nabla)p \quad (4.3)$$

Wherever convective effects occur in the basic laws involving mass, momentum, or energy, the basic differential equations become nonlinear and are usually more complicated than flows that do not involve convective changes.

We emphasize that this total time derivative follows a particle of fixed identity, making it convenient for expressing laws of particle mechanics in the eulerian fluid field description. The operator  $d/dt$  is sometimes assigned a special symbol such as  $D/Dt$  as a further reminder that it contains four terms and follows a fixed particle.

As another reminder of the special nature of  $d/dt$ , some writers give it the name *substantial* or *material derivative*.

### EXAMPLE 4.1

Given the eulerian velocity vector field

$$\mathbf{V} = 3t\mathbf{i} + xz\mathbf{j} + ty^2\mathbf{k}$$

find the total acceleration of a particle.

#### Solution

- Assumptions:** Given three known unsteady velocity components,  $u = 3t$ ,  $v = xz$ , and  $w = ty^2$ .
- Approach:** Carry out all the required derivatives with respect to  $(x, y, z, t)$ , substitute into the total acceleration vector, Eq. (4.2), and collect terms.
- Solution step 1:** First work out the local acceleration  $\partial\mathbf{V}/\partial t$ :

$$\frac{\partial\mathbf{V}}{\partial t} = \mathbf{i} \frac{\partial u}{\partial t} + \mathbf{j} \frac{\partial v}{\partial t} + \mathbf{k} \frac{\partial w}{\partial t} = \mathbf{i} \frac{\partial}{\partial t}(3t) + \mathbf{j} \frac{\partial}{\partial t}(xz) + \mathbf{k} \frac{\partial}{\partial t}(ty^2) = 3\mathbf{i} + 0\mathbf{j} + y^2\mathbf{k}$$

- Solution step 2:** In a similar manner, the convective acceleration terms, from Eq. (4.2), are

$$u \frac{\partial\mathbf{V}}{\partial x} = (3t) \frac{\partial}{\partial x}(3t\mathbf{i} + xz\mathbf{j} + ty^2\mathbf{k}) = (3t)(0\mathbf{i} + z\mathbf{j} + 0\mathbf{k}) = 3tz\mathbf{j}$$


$$v \frac{\partial\mathbf{V}}{\partial y} = (xz) \frac{\partial}{\partial y}(3t\mathbf{i} + xz\mathbf{j} + ty^2\mathbf{k}) = (xz)(0\mathbf{i} + 0\mathbf{j} + 2ty\mathbf{k}) = 2txyz\mathbf{k}$$

$$w \frac{\partial\mathbf{V}}{\partial z} = (ty^2) \frac{\partial}{\partial z}(3t\mathbf{i} + xz\mathbf{j} + ty^2\mathbf{k}) = (ty^2)(0\mathbf{i} + x\mathbf{j} + 0\mathbf{k}) = txy^2\mathbf{j}$$

- Solution step 3:** Combine all four terms above into the single “total” or “substantial” derivative:

$$\begin{aligned} \frac{d\mathbf{V}}{dt} &= \frac{\partial\mathbf{V}}{\partial t} + u \frac{\partial\mathbf{V}}{\partial x} + v \frac{\partial\mathbf{V}}{\partial y} + w \frac{\partial\mathbf{V}}{\partial z} = (3\mathbf{i} + y^2\mathbf{k}) + 3tz\mathbf{j} + 2txyz\mathbf{k} + txy^2\mathbf{j} \\ &= 3\mathbf{i} + (3tz + txy^2)\mathbf{j} + (y^2 + 2txyz)\mathbf{k} \quad Ans. \end{aligned}$$

- Comments:** Assuming that  $\mathbf{V}$  is valid everywhere as given, this total acceleration vector  $d\mathbf{V}/dt$  applies to all positions and times within the flow field.

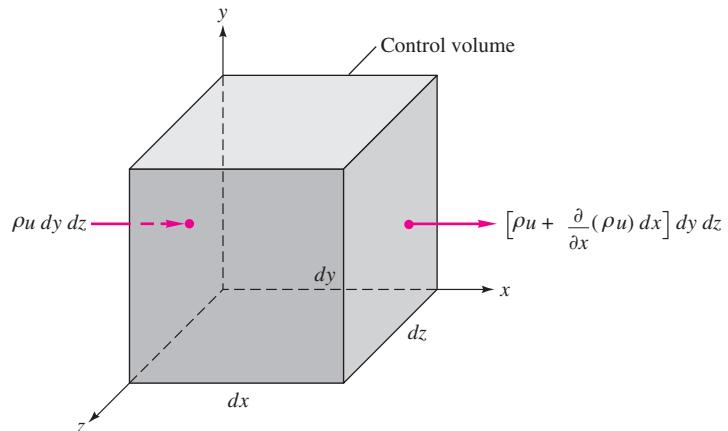

**Fig. 4.1** Elemental cartesian fixed control volume showing the inlet and outlet mass flows on the  $x$  faces.

## 4.2 The Differential Equation of Mass Conservation

Conservation of mass, often called the *continuity relation*, states that the fluid mass cannot change. We apply this concept to a very small region. All the basic differential equations can be derived by considering either an elemental control volume or an elemental system. We choose an infinitesimal fixed control volume ( $dx, dy, dz$ ), as in Fig. 4.1, and use our basic control volume relations from Chap. 3. The flow through each side of the element is approximately one-dimensional, and so the appropriate mass conservation relation to use here is

$$\int_{CV} \frac{\partial \rho}{\partial t} dV + \sum_i (\rho_i A_i V_i)_{out} - \sum_i (\rho_i A_i V_i)_{in} = 0 \quad (3.22)$$

The element is so small that the volume integral simply reduces to a differential term:

$$\int_{CV} \frac{\partial \rho}{\partial t} dV \approx \frac{\partial \rho}{\partial t} dx dy dz$$

The mass flow terms occur on all six faces, three inlets and three outlets. We make use of the field or continuum concept from Chap. 1, where all fluid properties are considered to be uniformly varying functions of time and position, such as  $\rho = \rho(x, y, z, t)$ . Thus, if  $T$  is the temperature on the left face of the element in Fig. 4.1, the right face will have a slightly different temperature  $T + (\partial T / \partial x) dx$ . For mass conservation, if  $\rho u$  is known on the left face, the value of this product on the right face is  $\rho u + (\partial \rho u / \partial x) dx$ .

Figure 4.1 shows only the mass flows on the  $x$  or left and right faces. The flows on the  $y$  (bottom and top) and the  $z$  (back and front) faces have been omitted to avoid cluttering up the drawing. We can list all these six flows as follows:

Face	Inlet mass fw	Outlet mass fw
$x$	$\rho u \, dy \, dz$	$\left[ \rho u + \frac{\partial}{\partial x}(\rho u) \, dx \right] \, dy \, dz$
$y$	$\rho v \, dx \, dz$	$\left[ \rho v + \frac{\partial}{\partial y}(\rho v) \, dy \right] \, dx \, dz$
$z$	$\rho w \, dx \, dy$	$\left[ \rho w + \frac{\partial}{\partial z}(\rho w) \, dz \right] \, dx \, dy$

Introduce these terms into Eq. (3.22) and we have

$$\frac{\partial \rho}{\partial t} dx dy dz + \frac{\partial}{\partial x} (\rho u) dx dy dz + \frac{\partial}{\partial y} (\rho v) dx dy dz + \frac{\partial}{\partial z} (\rho w) dx dy dz = 0$$

The element volume cancels out of all terms, leaving a partial differential equation involving the derivatives of density and velocity:

$$\frac{\partial \rho}{\partial t} + \frac{\partial}{\partial x} (\rho u) + \frac{\partial}{\partial y} (\rho v) + \frac{\partial}{\partial z} (\rho w) = 0 \quad (4.4)$$

This is the desired result: conservation of mass for an infinitesimal control volume. It is often called the *equation of continuity* because it requires no assumptions except that the density and velocity are continuum functions. That is, the flow may be either steady or unsteady, viscous or frictionless, compressible or incompressible.<sup>1</sup> However, the equation does not allow for any source or sink singularities within the element.

The vector gradient operator

$$\nabla = \mathbf{i} \frac{\partial}{\partial x} + \mathbf{j} \frac{\partial}{\partial y} + \mathbf{k} \frac{\partial}{\partial z}$$

enables us to rewrite the equation of continuity in a compact form, not that it helps much in finding a solution. The last three terms of Eq. (4.4) are equivalent to the divergence of the vector  $\rho \mathbf{V}$

$$\frac{\partial}{\partial x} (\rho u) + \frac{\partial}{\partial y} (\rho v) + \frac{\partial}{\partial z} (\rho w) \equiv \nabla \cdot (\rho \mathbf{V}) \quad (4.5)$$

so that the compact form of the continuity relation is

$$\frac{\partial \rho}{\partial t} + \nabla \cdot (\rho \mathbf{V}) = 0 \quad (4.6)$$

In this vector form the equation is still quite general and can readily be converted to other coordinate systems.


## Cylindrical Polar Coordinates

The most common alternative to the cartesian system is the *cylindrical polar* coordinate system, sketched in Fig. 4.2. An arbitrary point  $P$  is defined by a distance  $z$  along the axis, a radial distance  $r$  from the axis, and a rotation angle  $\theta$  about the axis. The three independent orthogonal velocity components are an axial velocity  $v_z$ , a radial velocity  $v_r$ , and a circumferential velocity  $v_\theta$ , which is positive counterclockwise—that is, in the direction of increasing  $\theta$ . In general, all components, as well as pressure and density and other fluid properties, are continuous functions of  $r$ ,  $\theta$ ,  $z$ , and  $t$ .

The divergence of any vector function  $\mathbf{A}(r, \theta, z, t)$  is found by making the transformation of coordinates

$$r = (x^2 + y^2)^{1/2} \quad \theta = \tan^{-1} \frac{y}{x} \quad z = z \quad (4.7)$$

<sup>1</sup>One case where Eq. (4.4) might need special care is *two-phase flow*, where the density is discontinuous between the phases. For further details on this case, see Ref. 2, for example.

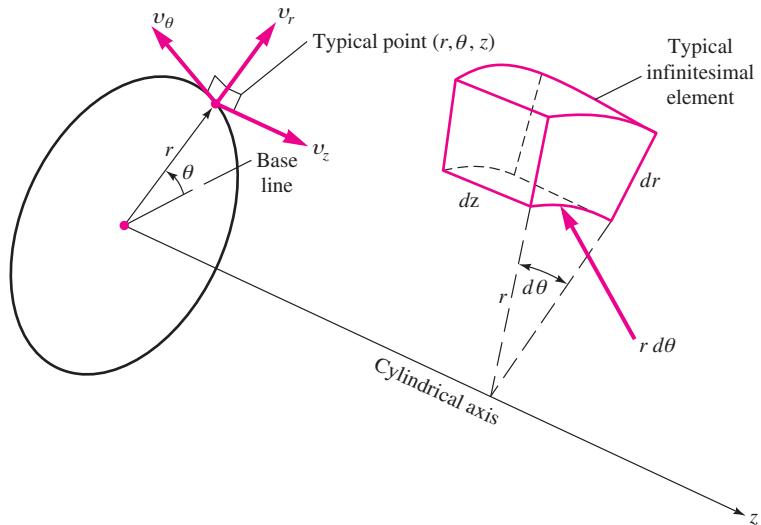

**Fig. 4.2** Definition sketch for the cylindrical coordinate system.

and the result is given here without proof<sup>2</sup>

$$\nabla \cdot \mathbf{A} = \frac{1}{r} \frac{\partial}{\partial r} (r A_r) + \frac{1}{r} \frac{\partial}{\partial \theta} (A_\theta) + \frac{\partial}{\partial z} (A_z) \quad (4.8)$$

The general continuity equation (4.6) in cylindrical polar coordinates is thus

$$\frac{\partial \rho}{\partial t} + \frac{1}{r} \frac{\partial}{\partial r} (r \rho v_r) + \frac{1}{r} \frac{\partial}{\partial \theta} (\rho v_\theta) + \frac{\partial}{\partial z} (\rho v_z) = 0 \quad (4.9)$$

There are other orthogonal curvilinear coordinate systems, notably *spherical polar* coordinates, which occasionally merit use in a fluid mechanics problem. We shall not treat these systems here except in Prob. P4.12.

There are also other ways to derive the basic continuity equation (4.6) that are interesting and instructive. One example is the use of the divergence theorem. Ask your instructor about these alternative approaches.

### Steady Compressible Flow

If the flow is steady,  $\partial/\partial t \equiv 0$  and all properties are functions of position only. Equation (4.6) reduces to

$$\begin{aligned} \text{Cartesian: } & \frac{\partial}{\partial x} (\rho u) + \frac{\partial}{\partial y} (\rho v) + \frac{\partial}{\partial z} (\rho w) = 0 \\ \text{Cylindrical: } & \frac{1}{r} \frac{\partial}{\partial r} (r \rho v_r) + \frac{1}{r} \frac{\partial}{\partial \theta} (\rho v_\theta) + \frac{\partial}{\partial z} (\rho v_z) = 0 \end{aligned} \quad (4.10)$$

Since density and velocity are both variables, these are still nonlinear and rather formidable, but a number of special-case solutions have been found.

<sup>2</sup>See, for example, Ref. 3, p. 783.

## Incompressible Flow

A special case that affords great simplification is incompressible flow, where the density changes are negligible. Then  $\partial\rho/\partial t \approx 0$  regardless of whether the flow is steady or unsteady, and the density can be slipped out of the divergence in Eq. (4.6) and divided out. The result

$$\nabla \cdot \mathbf{V} = 0 \quad (4.11)$$

is valid for steady or unsteady incompressible flow. The two coordinate forms are

Cartesian:  $\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} + \frac{\partial w}{\partial z} = 0 \quad (4.12a)$

Cylindrical:  $\frac{1}{r} \frac{\partial}{\partial r} (rv_r) + \frac{1}{r} \frac{\partial}{\partial \theta} (v_\theta) + \frac{\partial}{\partial z} (v_z) = 0 \quad (4.12b)$

These are *linear* differential equations, and a wide variety of solutions are known, as discussed in Chaps. 6 to 8. Since no author or instructor can resist a wide variety of solutions, it follows that a great deal of time is spent studying incompressible flows. Fortunately, this is exactly what should be done, because most practical engineering flows are approximately incompressible, the chief exception being the high-speed gas flows treated in Chap. 9.

When is a given flow approximately incompressible? We can derive a nice criterion by using some density approximations. In essence, we wish to slip the density out of the divergence in Eq. (4.6) and approximate a typical term such as

$$\frac{\partial}{\partial x} (\rho u) \approx \rho \frac{\partial u}{\partial x} \quad (4.13)$$

This is equivalent to the strong inequality

$$\left| u \frac{\partial \rho}{\partial x} \right| \ll \left| \rho \frac{\partial u}{\partial x} \right|$$

or

$$\left| \frac{\delta \rho}{\rho} \right| \ll \left| \frac{\delta V}{V} \right| \quad (4.14)$$

As shown in Eq. (1.38), the pressure change is approximately proportional to the density change and the square of the speed of sound  $a$  of the fluid:

$$\delta p \approx a^2 \delta \rho \quad (4.15)$$

Meanwhile, if elevation changes are negligible, the pressure is related to the velocity change by Bernoulli's equation (3.52):

$$\delta p \approx -\rho V \delta V \quad (4.16)$$

Combining Eqs. (4.14) to (4.16), we obtain an explicit criterion for incompressible flow:

$$\frac{V^2}{a^2} = Ma^2 \ll 1 \quad (4.17)$$

where  $Ma = V/a$  is the dimensionless *Mach number* of the flow. How small is small? The commonly accepted limit is

$$Ma \leq 0.3 \quad (4.18)$$

For air at standard conditions, a flow can thus be considered incompressible if the velocity is less than about 100 m/s (330 ft/s). This encompasses a wide variety of air-flows: automobile and train motions, light aircraft, landing and takeoff of high-speed aircraft, most pipe flows, and turbomachinery at moderate rotational speeds. Further, it is clear that almost all liquid flows are incompressible, since flow velocities are small and the speed of sound is very large.<sup>3</sup>

Before attempting to analyze the continuity equation, we shall proceed with the derivation of the momentum and energy equations, so that we can analyze them as a group. A very clever device called the *stream function* can often make short work of the continuity equation, but we shall save it until Sec. 4.7.

One further remark is appropriate: The continuity equation is always important and must always be satisfied for a rational analysis of a flow pattern. Any newly discovered momentum or energy “solution” will ultimately fail when subjected to critical analysis if it does not also satisfy the continuity equation.

### EXAMPLE 4.2

Under what conditions does the velocity field

$$\mathbf{V} = (a_1x + b_1y + c_1z)\mathbf{i} + (a_2x + b_2y + c_2z)\mathbf{j} + (a_3x + b_3y + c_3z)\mathbf{k}$$

where  $a_1$ ,  $b_1$ , etc. = const, represent an incompressible flow that conserves mass?

### Solution

Recalling that  $\mathbf{V} = u\mathbf{i} + v\mathbf{j} + w\mathbf{k}$ , we see that  $u = (a_1x + b_1y + c_1z)$ , etc. Substituting into Eq. (4.12a) for incompressible continuity, we obtain

$$\frac{\partial}{\partial x}(a_1x + b_1y + c_1z) + \frac{\partial}{\partial y}(a_2x + b_2y + c_2z) + \frac{\partial}{\partial z}(a_3x + b_3y + c_3z) = 0$$

or 
$$a_1 + b_2 + c_3 = 0 \quad \text{Ans.}$$

At least two of constants  $a_1$ ,  $b_2$ , and  $c_3$  must have opposite signs. Continuity imposes no restrictions whatever on constants  $b_1$ ,  $c_1$ ,  $a_2$ ,  $c_2$ ,  $a_3$ , and  $b_3$ , which do not contribute to a volume increase or decrease of a differential element.

### EXAMPLE 4.3

An incompressible velocity field is given by

$$u = a(x^2 - y^2) \quad v \text{ unknown} \quad w = b$$

where  $a$  and  $b$  are constants. What must the form of the velocity component  $v$  be?

<sup>3</sup>An exception occurs in geophysical flows, where a density change is imposed thermally or mechanically rather than by the flow conditions themselves. An example is fresh water layered upon saltwater or warm air layered upon cold air in the atmosphere. We say that the fluid is *stratified*, and we must account for vertical density changes in Eq. (4.6) even if the velocities are small.

**Solution**

Again Eq. (4.12a) applies:

$$\frac{\partial}{\partial x}(ax^2 - ay^2) + \frac{\partial v}{\partial y} + \frac{\partial b}{\partial z} = 0$$

or

$$\frac{\partial v}{\partial y} = -2ax \quad (1)$$

This is easily integrated partially with respect to  $y$ :

$$v(x, y, z, t) = -2axy + f(x, z, t)$$

*Ans.*

This is the only possible form for  $v$  that satisfies the incompressible continuity equation. The function of integration  $f$  is entirely arbitrary since it vanishes when  $v$  is differentiated with respect to  $y$ .<sup>4</sup>

**EXAMPLE 4.4**

A centrifugal impeller of 40-cm diameter is used to pump hydrogen at 15°C and 1-atm pressure. Estimate the maximum allowable impeller rotational speed to avoid compressibility effects at the blade tips.

**Solution**

- *Assumptions:* The maximum fluid velocity is approximately equal to the impeller tip speed:

$$V_{\max} \approx \Omega r_{\max} \quad \text{where } r_{\max} = D/2 = 0.20 \text{ m}$$

- *Approach:* Find the speed of sound of hydrogen and make sure that  $V_{\max}$  is much less.
- *Property values:* From Table A.4 for hydrogen,  $R = 4124 \text{ m}^2/(\text{s}^2 - \text{K})$  and  $k = 1.41$ . From Eq. (1.39) at 15°C = 288K, compute the speed of sound:

$$a_{\text{H}_2} = \sqrt{kRT} = \sqrt{1.41[4124 \text{ m}^2/(\text{s}^2 - \text{K})](288 \text{ K})} \approx 1294 \text{ m/s}$$

- *Final solution step:* Use our rule of thumb, Eq. (4.18), to estimate the maximum impeller speed:

$$V = \Omega r_{\max} \leq 0.3a \quad \text{or} \quad \Omega(0.2 \text{ m}) \leq 0.3(1294 \text{ m/s})$$

$$\text{Solve for } \Omega \leq 1940 \frac{\text{rad}}{\text{s}} \approx 18,500 \frac{\text{rev}}{\text{min}} \quad \text{Ans.}$$

- *Comments:* This is a high rate because the speed of sound of hydrogen, a light gas, is nearly four times greater than that of air. An impeller moving at this speed in air would create tip shock waves.

<sup>4</sup>This is a very realistic flow that simulates the turning of an inviscid fluid through a 60° angle; see Examples 4.7 and 4.9.

### 4.3 The Differential Equation of Linear Momentum

This section uses an elemental volume to derive Newton's Law for a moving fluid. An alternate approach, which the reader might pursue, would be a force balance on an elemental moving particle. Having done it once in Sec. 4.2 for mass conservation, we can move along a little faster this time. We use the same elemental control volume as in Fig. 4.1, for which the appropriate form of the linear momentum relation is

$$\sum \mathbf{F} = \frac{\partial}{\partial t} \left( \int_{CV} \mathbf{V} \rho dV \right) + \sum (\dot{m}_i \mathbf{V}_i)_{out} - \sum (\dot{m}_i \mathbf{V}_i)_{in} \quad (3.40)$$

Again the element is so small that the volume integral simply reduces to a derivative term:

$$\frac{\partial}{\partial t} (\mathbf{V} \rho dV) \approx \frac{\partial}{\partial t} (\rho \mathbf{V}) dx dy dz \quad (4.19)$$

The momentum fluxes occur on all six faces, three inlets and three outlets. Referring again to Fig. 4.1, we can form a table of momentum fluxes by exact analogy with the discussion that led up to the equation for net mass flux:

Faces	Inlet momentum flux	Outlet momentum flux
$x$	$\rho u \mathbf{V} dy dz$	$\left[ \rho u \mathbf{V} + \frac{\partial}{\partial x} (\rho u \mathbf{V}) dx \right] dy dz$
$y$	$\rho v \mathbf{V} dx dz$	$\left[ \rho v \mathbf{V} + \frac{\partial}{\partial y} (\rho v \mathbf{V}) dy \right] dx dz$
$z$	$\rho w \mathbf{V} dx dy$	$\left[ \rho w \mathbf{V} + \frac{\partial}{\partial z} (\rho w \mathbf{V}) dz \right] dx dy$

Introduce these terms and Eq. (4.19) into Eq. (3.40), and get this intermediate result:

$$\sum \mathbf{F} = dx dy dz \left[ \frac{\partial}{\partial t} (\rho \mathbf{V}) + \frac{\partial}{\partial x} (\rho u \mathbf{V}) + \frac{\partial}{\partial y} (\rho v \mathbf{V}) + \frac{\partial}{\partial z} (\rho w \mathbf{V}) \right] \quad (4.20)$$

Note that this is a vector relation. A simplification occurs if we split up the term in brackets as follows:

$$\begin{aligned} & \frac{\partial}{\partial t} (\rho \mathbf{V}) + \frac{\partial}{\partial x} (\rho u \mathbf{V}) + \frac{\partial}{\partial y} (\rho v \mathbf{V}) + \frac{\partial}{\partial z} (\rho w \mathbf{V}) \\ &= \mathbf{V} \left[ \frac{\partial \rho}{\partial t} + \nabla \cdot (\rho \mathbf{V}) \right] + \rho \left( \frac{\partial \mathbf{V}}{\partial t} + u \frac{\partial \mathbf{V}}{\partial x} + v \frac{\partial \mathbf{V}}{\partial y} + w \frac{\partial \mathbf{V}}{\partial z} \right) \end{aligned} \quad (4.21)$$

The term in brackets on the right-hand side is seen to be the equation of continuity, Eq. (4.6), which vanishes identically. The long term in parentheses on the right-hand side is seen from Eq. (4.2) to be the total acceleration of a particle that instantaneously occupies the control volume:

$$\frac{\partial \mathbf{V}}{\partial t} + u \frac{\partial \mathbf{V}}{\partial x} + v \frac{\partial \mathbf{V}}{\partial y} + w \frac{\partial \mathbf{V}}{\partial z} = \frac{d \mathbf{V}}{dt} \quad (4.2)$$

Thus we have now reduced Eq. (4.20) to

$$\sum \mathbf{F} = \rho \frac{d \mathbf{V}}{dt} dx dy dz \quad (4.22)$$

It might be good for you to stop and rest now and think about what we have just done. What is the relation between Eqs. (4.22) and (3.40) for an infinitesimal control volume? Could we have *begun* the analysis at Eq. (4.22)?

Equation (4.22) points out that the net force on the control volume must be of differential size and proportional to the element volume. These forces are of two types, *body* forces and *surface* forces. Body forces are due to external fields (gravity, magnetism, electric potential) that act on the entire mass within the element. The only body force we shall consider in this book is gravity. The gravity force on the differential mass  $\rho dx dy dz$  within the control volume is

$$d\mathbf{F}_{\text{grav}} = \rho \mathbf{g} dx dy dz \quad (4.23)$$

where  $\mathbf{g}$  may in general have an arbitrary orientation with respect to the coordinate system. In many applications, such as Bernoulli's equation, we take  $z$  "up," and  $\mathbf{g} = -g\mathbf{k}$ .

The surface forces are due to the stresses on the sides of the control surface. These stresses are the sum of hydrostatic pressure plus viscous stresses  $\tau_{ij}$  that arise from motion with velocity gradients:

$$\sigma_{ij} = \begin{vmatrix} -p + \tau_{xx} & \tau_{yx} & \tau_{zx} \\ \tau_{xy} & -p + \tau_{yy} & \tau_{zy} \\ \tau_{xz} & \tau_{yz} & -p + \tau_{zz} \end{vmatrix} \quad (4.24)$$

The subscript notation for stresses is given in Fig. 4.3. Unlike velocity  $\mathbf{V}$ , which is a three-component *vector*, stresses  $\sigma_{ij}$  and  $\tau_{ij}$  and strain rates  $\varepsilon_{ij}$  are nine-component *tensors* and require two subscripts to define each component. For further study of *tensor analysis*, see Refs. 6, 11, or 13.

It is not these stresses but their *gradients*, or differences, that cause a net force on the differential control surface. This is seen by referring to Fig. 4.4, which shows only


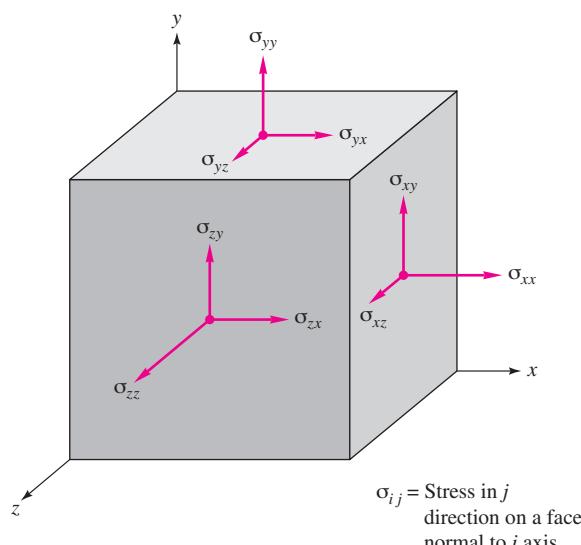


Fig. 4.3 Notation for stresses.

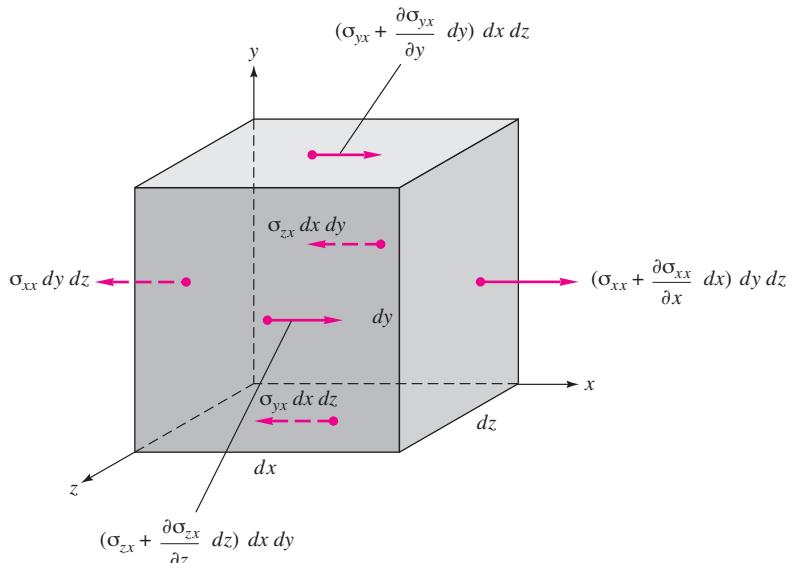

**Fig. 4.4** Elemental cartesian fixed control volume showing the surface forces in the \$x\$ direction only.

the \$x\$-directed stresses to avoid cluttering up the drawing. For example, the leftward force \$\sigma\_{xx} dy dz\$ on the left face is balanced by the rightward force \$\sigma\_{xx} dy dz\$ on the right face, leaving only the net rightward force \$(\partial \sigma\_{xx}/\partial x) dx dy dz\$ on the right face. The same thing happens on the other four faces, so that the net surface force in the \$x\$ direction is given by

$$dF_{x,\text{surf}} = \left[ \frac{\partial}{\partial x} (\sigma_{xx}) + \frac{\partial}{\partial y} (\sigma_{yx}) + \frac{\partial}{\partial z} (\sigma_{zx}) \right] dx dy dz \quad (4.25)$$

We see that this force is proportional to the element volume. Notice that the stress terms are taken from the *top row* of the array in Eq. (4.24). Splitting this row into pressure plus viscous stresses, we can rewrite Eq. (4.25) as

$$\frac{dF_x}{dV} = -\frac{\partial p}{\partial x} + \frac{\partial}{\partial x} (\tau_{xx}) + \frac{\partial}{\partial y} (\tau_{yx}) + \frac{\partial}{\partial z} (\tau_{zx}) \quad (4.26)$$

where \$dV = dx dy dz\$. In exactly similar manner, we can derive the \$y\$ and \$z\$ forces per unit volume on the control surface:

$$\begin{aligned} \frac{dF_y}{dV} &= -\frac{\partial p}{\partial y} + \frac{\partial}{\partial x} (\tau_{xy}) + \frac{\partial}{\partial y} (\tau_{yy}) + \frac{\partial}{\partial z} (\tau_{zy}) \\ \frac{dF_z}{dV} &= -\frac{\partial p}{\partial z} + \frac{\partial}{\partial x} (\tau_{xz}) + \frac{\partial}{\partial y} (\tau_{yz}) + \frac{\partial}{\partial z} (\tau_{zz}) \end{aligned} \quad (4.27)$$

Now we multiply Eqs. (4.26) and (4.27) by \$\mathbf{i}\$, \$\mathbf{j}\$, and \$\mathbf{k}\$, respectively, and add to obtain an expression for the net vector surface force:

$$\left( \frac{d\mathbf{F}}{dV} \right)_{\text{surf}} = -\nabla p + \left( \frac{d\mathbf{F}}{dV} \right)_{\text{viscous}} \quad (4.28)$$

where the viscous force has a total of nine terms:

$$\begin{aligned} \left( \frac{d\mathbf{F}}{dV} \right)_{\text{viscous}} &= \mathbf{i} \left( \frac{\partial \tau_{xx}}{\partial x} + \frac{\partial \tau_{yx}}{\partial y} + \frac{\partial \tau_{zx}}{\partial z} \right) \\ &+ \mathbf{j} \left( \frac{\partial \tau_{xy}}{\partial x} + \frac{\partial \tau_{yy}}{\partial y} + \frac{\partial \tau_{zy}}{\partial z} \right) \\ &+ \mathbf{k} \left( \frac{\partial \tau_{xz}}{\partial x} + \frac{\partial \tau_{yz}}{\partial y} + \frac{\partial \tau_{zz}}{\partial z} \right) \end{aligned} \quad (4.29)$$

Since each term in parentheses in (4.29) represents the divergence of a stress component vector acting on the  $x$ ,  $y$ , and  $z$  faces, respectively, Eq. (4.29) is sometimes expressed in divergence form:

$$\left( \frac{d\mathbf{F}}{dV} \right)_{\text{viscous}} = \nabla \cdot \boldsymbol{\tau}_{ij} \quad (4.30)$$

where  $\boldsymbol{\tau}_{ij} = \begin{bmatrix} \tau_{xx} & \tau_{yx} & \tau_{zx} \\ \tau_{xy} & \tau_{yy} & \tau_{zy} \\ \tau_{xz} & \tau_{yz} & \tau_{zz} \end{bmatrix}$  (4.31)

is the viscous stress tensor acting on the element. The surface force is thus the sum of the *pressure gradient* vector and the divergence of the viscous stress tensor. Substituting into Eq. (4.22) and utilizing Eq. (4.23), we have the basic differential momentum equation for an infinitesimal element:

$$\rho \mathbf{g} - \nabla p + \nabla \cdot \boldsymbol{\tau}_{ij} = \rho \frac{d\mathbf{V}}{dt} \quad (4.32)$$

where  $\frac{d\mathbf{V}}{dt} = \frac{\partial \mathbf{V}}{\partial t} + u \frac{\partial \mathbf{V}}{\partial x} + v \frac{\partial \mathbf{V}}{\partial y} + w \frac{\partial \mathbf{V}}{\partial z}$  (4.33)

We can also express Eq. (4.32) in words:

$$\begin{aligned} &\text{Gravity force per unit volume} + \text{pressure force per unit volume} \\ &+ \text{viscous force per unit volume} = \text{density} \times \text{acceleration} \end{aligned} \quad (4.34)$$

Equation (4.32) is so brief and compact that its inherent complexity is almost invisible. It is a *vector* equation, each of whose component equations contains nine terms. Let us therefore write out the component equations in full to illustrate the mathematical difficulties inherent in the momentum equation:

$$\begin{aligned} \rho g_x - \frac{\partial p}{\partial x} + \frac{\partial \tau_{xx}}{\partial x} + \frac{\partial \tau_{yx}}{\partial y} + \frac{\partial \tau_{zx}}{\partial z} &= \rho \left( \frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} \right) \\ \rho g_y - \frac{\partial p}{\partial y} + \frac{\partial \tau_{xy}}{\partial x} + \frac{\partial \tau_{yy}}{\partial y} + \frac{\partial \tau_{zy}}{\partial z} &= \rho \left( \frac{\partial v}{\partial t} + u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} + w \frac{\partial v}{\partial z} \right) \\ \rho g_z - \frac{\partial p}{\partial z} + \frac{\partial \tau_{xz}}{\partial x} + \frac{\partial \tau_{yz}}{\partial y} + \frac{\partial \tau_{zz}}{\partial z} &= \rho \left( \frac{\partial w}{\partial t} + u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} + w \frac{\partial w}{\partial z} \right) \end{aligned} \quad (4.35)$$

This is the differential momentum equation in its full glory, and it is valid for any fluid in any general motion, particular fluids being characterized by particular viscous stress terms. Note that the last three “convective” terms on the right-hand side of each component equation in (4.35) are nonlinear, which complicates the general mathematical analysis.

### Inviscid Flow: Euler's Equation

Equation (4.35) is not ready to use until we write the viscous stresses in terms of velocity components. The simplest assumption is frictionless flow  $\tau_{ij} = 0$ , for which Eq. (4.32) reduces to

$$\rho \mathbf{g} - \nabla p = \rho \frac{d\mathbf{V}}{dt} \quad (4.36)$$

This is *Euler's equation* for inviscid flow. We show in Sec. 4.9 that Euler's equation can be integrated along a streamline to yield the frictionless Bernoulli equation, (3.52) or (3.54). The complete analysis of inviscid flow fields, using continuity and the Bernoulli relation, is given in Chap. 8.

### Newtonian Fluid: Navier-Stokes Equations

For a newtonian fluid, as discussed in Sec. 1.9, the viscous stresses are proportional to the element strain rates and the coefficient of viscosity. For incompressible flow, the generalization of Eq. (1.23) to three-dimensional viscous flow is<sup>5</sup>

$$\begin{aligned} \tau_{xx} &= 2\mu \frac{\partial u}{\partial x} & \tau_{yy} &= 2\mu \frac{\partial v}{\partial y} & \tau_{zz} &= 2\mu \frac{\partial w}{\partial z} \\ \tau_{xy} &= \tau_{yx} = \mu \left( \frac{\partial u}{\partial y} + \frac{\partial v}{\partial x} \right) & \tau_{xz} &= \tau_{zx} = \mu \left( \frac{\partial w}{\partial x} + \frac{\partial u}{\partial z} \right) \\ \tau_{yz} &= \tau_{zy} = \mu \left( \frac{\partial v}{\partial z} + \frac{\partial w}{\partial y} \right) \end{aligned} \quad (4.37)$$

where  $\mu$  is the viscosity coefficient. Substitution into Eq. (4.35) gives the differential momentum equation for a newtonian fluid with constant density and viscosity:

$$\begin{aligned} \rho g_x - \frac{\partial p}{\partial x} + \mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} + \frac{\partial^2 u}{\partial z^2} \right) &= \rho \frac{du}{dt} \\ \rho g_y - \frac{\partial p}{\partial y} + \mu \left( \frac{\partial^2 v}{\partial x^2} + \frac{\partial^2 v}{\partial y^2} + \frac{\partial^2 v}{\partial z^2} \right) &= \rho \frac{dv}{dt} \\ \rho g_z - \frac{\partial p}{\partial z} + \mu \left( \frac{\partial^2 w}{\partial x^2} + \frac{\partial^2 w}{\partial y^2} + \frac{\partial^2 w}{\partial z^2} \right) &= \rho \frac{dw}{dt} \end{aligned} \quad (4.38)$$

These are the incompressible flow *Navier-Stokes equations*, named after C. L. M. H. Navier (1785–1836) and Sir George G. Stokes (1819–1903), who are credited with their derivation. They are second-order nonlinear partial differential equations and are quite formidable, but solutions have been found to a variety of interesting viscous

<sup>5</sup>When compressibility is significant, additional small terms arise containing the element volume expansion rate and a second coefficient of viscosity; see Refs. 4 and 5 for details.

flow problems, some of which are discussed in Sec. 4.11 and in Chap. 6 (see also Refs. 4 and 5). For compressible flow, see Eq. (2.29) of Ref. 5.

Equations (4.38) have four unknowns:  $p$ ,  $u$ ,  $v$ , and  $w$ . They should be combined with the incompressible continuity relation [Eqs. (4.12)] to form four equations in these four unknowns. We shall discuss this again in Sec. 4.6, which presents the appropriate boundary conditions for these equations.

Even though the Navier-Stokes equations have only a limited number of known analytical solutions, they are amenable to fine-gridded computer modeling [1]. The field of CFD is maturing fast, with many commercial software tools available. It is possible now to achieve approximate, but realistic, CFD results for a wide variety of complex two- and three-dimensional viscous flows.

### EXAMPLE 4.5

Take the velocity field of Example 4.3, with  $b = 0$  for algebraic convenience

$$u = a(x^2 - y^2) \quad v = -2axy \quad w = 0$$

and determine under what conditions it is a solution to the Navier-Stokes momentum equations (4.38). Assuming that these conditions are met, determine the resulting pressure distribution when  $z$  is “up” ( $g_x = 0$ ,  $g_y = 0$ ,  $g_z = -g$ ).

#### Solution

- *Assumptions:* Constant density and viscosity, steady flow ( $u$  and  $v$  independent of time).
- *Approach:* Substitute the known  $(u, v, w)$  into Eqs. (4.38) and solve for the pressure gradients. If a unique pressure function  $p(x, y, z)$  can then be found, the given solution is exact.
- *Solution step 1:* Substitute  $(u, v, w)$  into Eqs. (4.38) in sequence:

$$\begin{aligned} \rho(0) - \frac{\partial p}{\partial x} + \mu(2a - 2a + 0) &= \rho \left( u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} \right) = 2a^2 \rho(x^3 + xy^2) \\ \rho(0) - \frac{\partial p}{\partial y} + \mu(0 + 0 + 0) &= \rho \left( u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} \right) = 2a^2 \rho(x^2y + y^3) \\ \rho(-g) - \frac{\partial p}{\partial z} + \mu(0 + 0 + 0) &= \rho \left( u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} \right) = 0 \end{aligned}$$

Rearrange and solve for the three pressure gradients:

$$\frac{\partial p}{\partial x} = -2a^2 \rho(x^3 + xy^2) \quad \frac{\partial p}{\partial y} = -2a^2 \rho(x^2y + y^3) \quad \frac{\partial p}{\partial z} = -\rho g \quad (1)$$

- *Comment 1:* The vertical pressure gradient is *hydrostatic*. (Could you have predicted this by noting in Eqs. (4.38) that  $w = 0$ ? However, the pressure is velocity-dependent in the  $xy$  plane.)
- *Solution step 2:* To determine if the  $x$  and  $y$  gradients of pressure in Eq. (1) are compatible, evaluate the mixed derivative,  $(\partial^2 p / \partial x \partial y)$ ; that is, cross-differentiate these two equations:

$$\begin{aligned} \frac{\partial}{\partial y} \left( \frac{\partial p}{\partial x} \right) &= \frac{\partial}{\partial y} [-2a^2 \rho(x^3 + xy^2)] = -4a^2 \rho xy \\ \frac{\partial}{\partial x} \left( \frac{\partial p}{\partial y} \right) &= \frac{\partial}{\partial x} [-2a^2 \rho(x^2y + y^3)] = -4a^2 \rho xy \end{aligned}$$

- *Comment 2:* Since these are equal, the given velocity distribution is indeed an *exact* solution of the Navier-Stokes equations.
- *Solution step 3:* To find the pressure, integrate Eqs. (1), collect, and compare. Start with  $\partial p/\partial x$ . The procedure requires care! Integrate *partially* with respect to  $x$ , holding  $y$  and  $z$  constant:

$$p = \int \frac{\partial p}{\partial x} dx|_{y,z} = \int -2a^2\rho(x^3 + xy^2) dx|_{y,z} = -2a^2\rho\left(\frac{x^4}{4} + \frac{x^2y^2}{2}\right) + f_1(y, z) \quad (2)$$

Note that the “constant” of integration  $f_1$  is a *function* of the variables that were not integrated. Now differentiate Eq. (2) with respect to  $y$  and compare with  $\partial p/\partial y$  from Eq. (1):

$$\begin{aligned} \frac{\partial p}{\partial y}|_{(2)} &= -2a^2\rho x^2y + \frac{\partial f_1}{\partial y} = \frac{\partial p}{\partial y}|_{(1)} = -2a^2\rho(x^2y + y^3) \\ \text{Compare: } \frac{\partial f_1}{\partial y} &= -2a^2\rho y^3 \quad \text{or} \quad f_1 = \int \frac{\partial f_1}{\partial y} dy|_z = -2a^2\rho \frac{y^4}{4} + f_2(z) \\ \text{Collect terms: So far } p &= -2a^2\rho\left(\frac{x^4}{4} + \frac{x^2y^2}{2} + \frac{y^4}{4}\right) + f_2(z) \end{aligned} \quad (3)$$

This time the “constant” of integration  $f_2$  is a function of  $z$  only (the variable not integrated). Now differentiate Eq. (3) with respect to  $z$  and compare with  $\partial p/\partial z$  from Eq. (1):

$$\frac{\partial p}{\partial z}|_{(3)} = \frac{df_2}{dz} = \frac{\partial p}{\partial z}|_{(1)} = -\rho g \quad \text{or} \quad f_2 = -\rho gz + C \quad (4)$$

where  $C$  is a constant. This completes our three integrations. Combine Eqs. (3) and (4) to obtain the full expression for the pressure distribution in this flow:

$$p(x, y, z) = -\rho gz - \frac{1}{2}a^2\rho(x^4 + y^4 + 2x^2y^2) + C \quad \text{Ans. (5)}$$

This is the desired solution. Do you recognize it? Not unless you go back to the beginning and square the velocity components:

$$u^2 + v^2 + w^2 = V^2 = a^2(x^4 + y^4 + 2x^2y^2) \quad (6)$$

Comparing with Eq. (5), we can rewrite the pressure distribution as


$$p + \frac{1}{2}\rho V^2 + pgz = C \quad (7)$$

- *Comment:* This is Bernoulli’s equation (3.54). That is no accident, because the velocity distribution given in this problem is one of a family of flows that are solutions to the Navier-Stokes equations and that satisfy Bernoulli’s incompressible equation everywhere in the flow field. They are called *irrotational flows*, for which  $\text{curl } \mathbf{V} = \nabla \times \mathbf{V} \equiv 0$ . This subject is discussed again in Sec. 4.9.

## 4.4 The Differential Equation of Angular Momentum

Having now been through the same approach for both mass and linear momentum, we can go rapidly through a derivation of the differential angular momentum relation. The appropriate form of the integral angular momentum equation for a fixed control volume is

$$\sum \mathbf{M}_o = \frac{\partial}{\partial t} \left[ \int_{CV} (\mathbf{r} \times \mathbf{V})\rho dV \right] + \int_{CS} (\mathbf{r} \times \mathbf{V})\rho(\mathbf{V} \cdot \mathbf{n}) dA \quad (3.59)$$

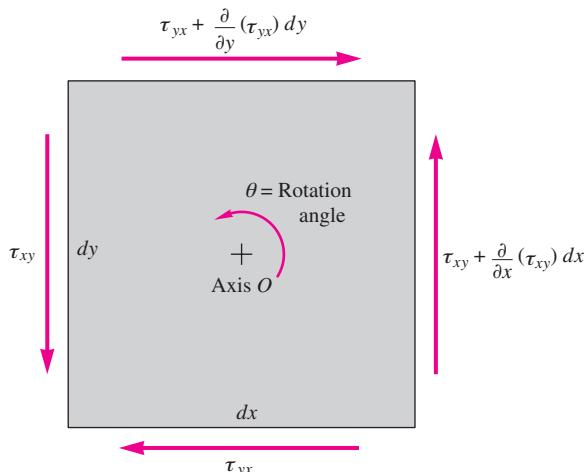

**Fig. 4.5** Elemental cartesian fixed control volume showing shear stresses that may cause a net angular acceleration about axis  $O$ .

We shall confine ourselves to an axis through  $O$  that is parallel to the  $z$  axis and passes through the centroid of the elemental control volume. This is shown in Fig. 4.5. Let  $\theta$  be the angle of rotation about  $O$  of the fluid within the control volume. The only stresses that have moments about  $O$  are the shear stresses  $\tau_{xy}$  and  $\tau_{yx}$ . We can evaluate the moments about  $O$  and the angular momentum terms about  $O$ . A lot of algebra is involved, and we give here only the result:

$$\begin{aligned} & \left[ \tau_{xy} - \tau_{yx} + \frac{1}{2} \frac{\partial}{\partial x}(\tau_{xy}) dx - \frac{1}{2} \frac{\partial}{\partial y}(\tau_{yx}) dy \right] dx dy dz \\ &= \frac{1}{12} \rho(dx dy dz)(dx^2 + dy^2) \frac{d^2\theta}{dt^2} \quad (4.39) \end{aligned}$$

Assuming that the angular acceleration  $d^2\theta/dt^2$  is not infinite, we can neglect all higher-order differential terms, which leaves a finite and interesting result:

$$\tau_{xy} \approx \tau_{yx} \quad (4.40)$$

Had we summed moments about axes parallel to  $y$  or  $x$ , we would have obtained exactly analogous results:

$$\tau_{xz} \approx \tau_{zx} \quad \tau_{yz} \approx \tau_{zy} \quad (4.41)$$

There is *no* differential angular momentum equation. Application of the integral theorem to a differential element gives the result, well known to students of stress analysis or strength of materials, that the shear stresses are symmetric:  $\tau_{ij} = \tau_{ji}$ . This is the only result of this section.<sup>6</sup> There is no differential equation to remember, which leaves room in your brain for the next topic, the differential energy equation.

<sup>6</sup>We are neglecting the possibility of a finite *couple* being applied to the element by some powerful external force field. See, for example, Ref. 6.

## 4.5 The Differential Equation of Energy<sup>7</sup>

We are now so used to this type of derivation that we can race through the energy equation at a bewildering pace. The appropriate integral relation for the fixed control volume of Fig. 4.1 is

$$\dot{Q} - \dot{W}_s - \dot{W}_v = \frac{\partial}{\partial t} \left( \int_{CV} ep \, dV \right) + \int_{CS} \left( e + \frac{p}{\rho} \right) \rho (\mathbf{V} \cdot \mathbf{n}) \, dA \quad (3.66)$$

where  $\dot{W}_s = 0$  because there can be no infinitesimal shaft protruding into the control volume. By analogy with Eq. (4.20), the right-hand side becomes, for this tiny element,

$$\dot{Q} - \dot{W}_v = \left[ \frac{\partial}{\partial t} (\rho e) + \frac{\partial}{\partial x} (\rho u \zeta) + \frac{\partial}{\partial y} (\rho v \zeta) + \frac{\partial}{\partial z} (\rho w \zeta) \right] dx \, dy \, dz$$

where  $\zeta = e + p/\rho$ . When we use the continuity equation by analogy with Eq. (4.21), this becomes

$$\dot{Q} - \dot{W}_v = \left( \rho \frac{de}{dt} + \mathbf{V} \cdot \nabla p + p \nabla \cdot \mathbf{V} \right) dx \, dy \, dz \quad (4.42)$$

### Thermal Conductivity; Fourier's Law

To evaluate  $\dot{Q}$ , we neglect radiation and consider only heat conduction through the sides of the element. Experiments for both fluids and solids show that the vector heat transfer per unit area,  $\mathbf{q}$ , is proportional to the vector gradient of temperature,  $\nabla T$ . This proportionality is called *Fourier's law of conduction*, which is analogous to Newton's viscosity law:


$$\begin{aligned} \mathbf{q} &= -k \nabla T \\ \text{or: } q_x &= -k \frac{\partial T}{\partial x}, \quad q_y = -k \frac{\partial T}{\partial y}, \quad q_z = -k \frac{\partial T}{\partial z} \end{aligned} \quad (4.43)$$

where  $k$  is called the *thermal conductivity*, a fluid property that varies with temperature and pressure in much the same way as viscosity. The minus sign satisfies the convention that heat flux is positive in the direction of decreasing temperature. Fourier's law is dimensionally consistent, and  $k$  has SI units of joules per (sec-meter-kelvin) and can be correlated with  $T$  in much the same way as Eqs. (1.27) and (1.28) for gases and liquids, respectively.

Figure 4.6 shows the heat flow passing through the  $x$  faces, the  $y$  and  $z$  heat flows being omitted for clarity. We can list these six heat flux terms:

Faces	Inlet heat flux	Outlet heat flux
$x$	$q_x \, dy \, dz$	$\left[ q_x + \frac{\partial}{\partial x} (q_x) \, dx \right] dy \, dz$
$y$	$q_y \, dx \, dz$	$\left[ q_y + \frac{\partial}{\partial y} (q_y) \, dy \right] dx \, dz$
$z$	$q_z \, dx \, dy$	$\left[ q_z + \frac{\partial}{\partial z} (q_z) \, dz \right] dx \, dy$

<sup>7</sup>This section may be omitted without loss of continuity.

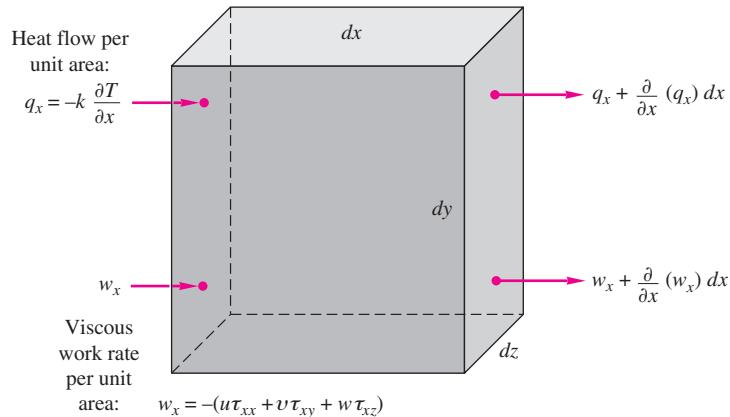

**Fig. 4.6** Elemental cartesian control volume showing heat flow and viscous work rate terms in the  $x$  direction.

By adding the inlet terms and subtracting the outlet terms, we obtain the net heat added to the element:

$$\dot{Q} = - \left[ \frac{\partial}{\partial x}(q_x) + \frac{\partial}{\partial y}(q_y) + \frac{\partial}{\partial z}(q_z) \right] dx dy dz = -\nabla \cdot \mathbf{q} dx dy dz \quad (4.44)$$

As expected, the heat flux is proportional to the element volume. Introducing Fourier's law from Eq. (4.43), we have

$$\dot{Q} = \nabla \cdot (k \nabla T) dx dy dz \quad (4.45)$$

The rate of work done by viscous stresses equals the product of the stress component, its corresponding velocity component, and the area of the element face. Figure 4.6 shows the work rate on the left  $x$  face is

$$\dot{W}_{v,LF} = w_x dy dz \quad \text{where } w_x = -(u\tau_{xx} + v\tau_{xy} + w\tau_{xz}) \quad (4.46)$$

(where the subscript LF stands for left face) and a slightly different work on the right face due to the gradient in  $w_x$ . These work fluxes could be tabulated in exactly the same manner as the heat fluxes in the previous table, with  $w_x$  replacing  $q_x$ , and so on. After outlet terms are subtracted from inlet terms, the net viscous work rate becomes

$$\begin{aligned} \dot{W}_v &= - \left[ \frac{\partial}{\partial x}(u\tau_{xx} + v\tau_{xy} + w\tau_{xz}) + \frac{\partial}{\partial y}(u\tau_{yx} + v\tau_{yy} + w\tau_{yz}) \right. \\ &\quad \left. + \frac{\partial}{\partial z}(u\tau_{zx} + v\tau_{zy} + w\tau_{zz}) \right] dx dy dz \\ &= -\nabla \cdot (\mathbf{V} \cdot \boldsymbol{\tau}_{ij}) dx dy dz \end{aligned} \quad (4.47)$$

We now substitute Eqs. (4.45) and (4.47) into Eq. (4.43) to obtain one form of the differential energy equation:

$$\rho \frac{de}{dt} + \mathbf{V} \cdot \nabla p + p \nabla \cdot \mathbf{V} = \nabla \cdot (k \nabla T) + \nabla \cdot (\mathbf{V} \cdot \boldsymbol{\tau}_{ij}) \quad (4.48)$$

where  $e = \hat{u} + \frac{1}{2}V^2 + gz$

A more useful form is obtained if we split up the viscous work term:

$$\nabla \cdot (\mathbf{V} \cdot \boldsymbol{\tau}_{ij}) \equiv \mathbf{V} \cdot (\nabla \cdot \boldsymbol{\tau}_{ij}) + \Phi \quad (4.49)$$

where  $\Phi$  is short for the *viscous-dissipation function*.<sup>8</sup> For a newtonian incompressible viscous fluid, this function has the form

$$\begin{aligned} \Phi = \mu & \left[ 2\left(\frac{\partial u}{\partial x}\right)^2 + 2\left(\frac{\partial v}{\partial y}\right)^2 + 2\left(\frac{\partial w}{\partial z}\right)^2 + \left(\frac{\partial v}{\partial x} + \frac{\partial u}{\partial y}\right)^2 \right. \\ & \left. + \left(\frac{\partial w}{\partial y} + \frac{\partial v}{\partial z}\right)^2 + \left(\frac{\partial u}{\partial z} + \frac{\partial w}{\partial x}\right)^2 \right] \end{aligned} \quad (4.50)$$

Since all terms are quadratic, viscous dissipation is always positive, so that a viscous flow always tends to lose its available energy due to dissipation, in accordance with the second law of thermodynamics.

Now substitute Eq. (4.49) into Eq. (4.48), using the linear momentum equation (4.32) to eliminate  $\nabla \cdot \boldsymbol{\tau}_{ij}$ . This will cause the kinetic and potential energies to cancel, leaving a more customary form of the general differential energy equation:

$$\rho \frac{d\hat{u}}{dt} + p(\nabla \cdot \mathbf{V}) = \nabla \cdot (k \nabla T) + \Phi \quad (4.51)$$

This equation is valid for a newtonian fluid under very general conditions of unsteady, compressible, viscous, heat-conducting flow, except that it neglects radiation heat transfer and internal *sources* of heat that might occur during a chemical or nuclear reaction.

Equation (4.51) is too difficult to analyze except on a digital computer [1]. It is customary to make the following approximations:

$$d\hat{u} \approx c_v dT \quad c_v, \mu, k, \rho \approx \text{const} \quad (4.52)$$

Equation (4.51) then takes the simpler form, for  $\nabla \cdot \mathbf{V} = 0$ ,

$$\rho c_v \frac{dT}{dt} = k \nabla^2 T + \Phi \quad (4.53)$$

which involves temperature  $T$  as the sole primary variable plus velocity as a secondary variable through the total time-derivative operator:

$$\frac{dT}{dt} = \frac{\partial T}{\partial t} + u \frac{\partial T}{\partial x} + v \frac{\partial T}{\partial y} + w \frac{\partial T}{\partial z} \quad (4.54)$$

A great many interesting solutions to Eq. (4.53) are known for various flow conditions, and extended treatments are given in advanced books on viscous flow [4, 5] and books on heat transfer [7, 8].

One well-known special case of Eq. (4.53) occurs when the fluid is at rest or has negligible velocity, where the dissipation  $\Phi$  and convective terms become negligible:

$$\rho c_p \frac{\partial T}{\partial t} = k \nabla^2 T \quad (4.55)$$

The change from  $c_v$  to  $c_p$  is correct and justified by the fact that, when pressure terms are neglected from a gas flow energy equation [4, 5], what remains is approximately an

<sup>8</sup>For further details, see, e.g., Ref. 5, p. 72.

enthalpy change, not an internal energy change. This is called the *heat conduction equation* in applied mathematics and is valid for solids and fluids at rest. The solution to Eq. (4.55) for various conditions is a large part of courses and books on heat transfer.

This completes the derivation of the basic differential equations of fluid motion.

## 4.6 Boundary Conditions for the Basic Equations

There are three basic differential equations of fluid motion, just derived. Let us summarize them here:

$$\text{Continuity:} \quad \frac{\partial \rho}{\partial t} + \nabla \cdot (\rho \mathbf{V}) = 0 \quad (4.56)$$

$$\text{Momentum:} \quad \rho \frac{d\mathbf{V}}{dt} = \rho \mathbf{g} - \nabla p + \nabla \cdot \boldsymbol{\tau}_{ij} \quad (4.57)$$

$$\text{Energy:} \quad \rho \frac{d\hat{u}}{dt} + p(\nabla \cdot \mathbf{V}) = \nabla \cdot (k \nabla T) + \Phi \quad (4.58)$$

where  $\Phi$  is given by Eq. (4.50). In general, the density is variable, so that these three equations contain five unknowns,  $\rho$ ,  $V$ ,  $p$ ,  $\hat{u}$ , and  $T$ . Therefore we need two additional relations to complete the system of equations. These are provided by data or algebraic expressions for the state relations of the thermodynamic properties:

$$\rho = \rho(p, T) \quad \hat{u} = \hat{u}(p, T) \quad (4.59)$$

For example, for a perfect gas with constant specific heats, we complete the system with

$$\rho = \frac{p}{RT} \quad \hat{u} = \int c_v dT \approx c_v T + \text{const} \quad (4.60)$$

It is shown in advanced books [4, 5] that this system of equations (4.56) to (4.59) is well posed and can be solved analytically or numerically, subject to the proper boundary conditions.

What are the proper boundary conditions? First, if the flow is unsteady, there must be an *initial condition* or initial spatial distribution known for each variable:

$$\text{At } t = 0: \quad \rho, V, p, \hat{u}, T = \text{known } f(x, y, z) \quad (4.61)$$

Thereafter, for all times  $t$  to be analyzed, we must know something about the variables at each *boundary* enclosing the flow.

Figure 4.7 illustrates the three most common types of boundaries encountered in fluid flow analysis: a solid wall, an inlet or outlet, and a liquid–gas interface.

First, for a solid, impermeable wall, there is no slip and no temperature jump in a viscous heat-conducting fluid:


$$\text{Solid wall:} \quad \mathbf{V}_{\text{fluid}} = \mathbf{V}_{\text{wall}} \quad T_{\text{fluid}} = T_{\text{wall}} \quad (4.62)$$

The only exception to Eq. (4.62) occurs in an extremely rarefied gas flow, where slippage can be present [5].

Second, at any inlet or outlet section of the flow, the complete distribution of velocity, pressure, and temperature must be known for all times:

$$\text{Inlet or outlet:} \quad \text{Known } \mathbf{V}, p, T \quad (4.63)$$

These inlet and outlet sections can be and often are at  $\pm \infty$ , simulating a body immersed in an infinite expanse of fluid.

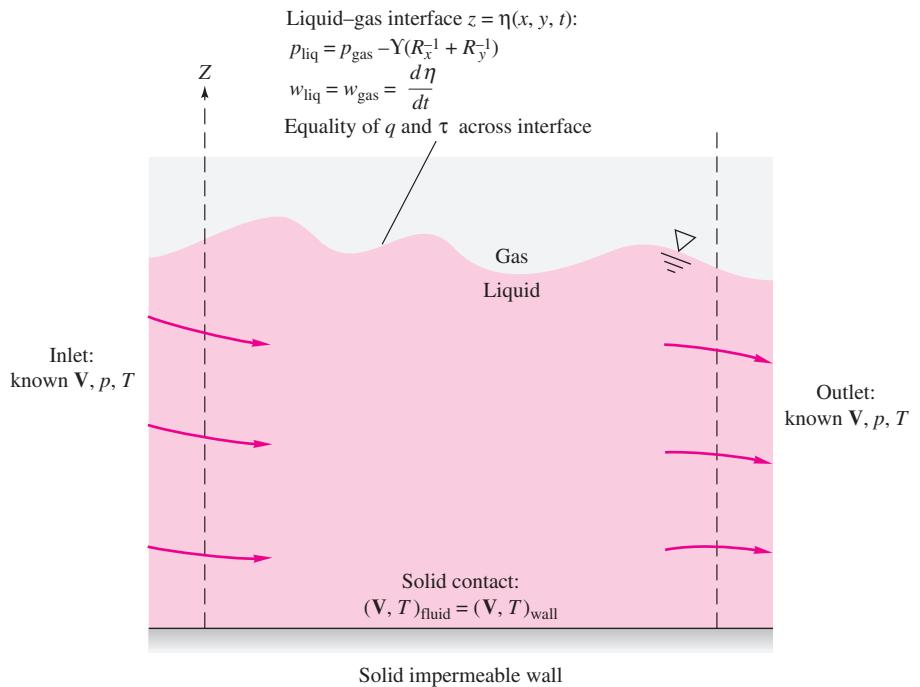

**Fig. 4.7** Typical boundary conditions in a viscous heat-conducting fluid flow analysis.

Finally, the most complex conditions occur at a liquid–gas interface, or free surface, as sketched in Fig. 4.7. Let us denote the interface by

$$\text{Interface: } z = \eta(x, y, t) \quad (4.64)$$

Then there must be equality of vertical velocity across the interface, so that no holes appear between liquid and gas:

$$w_{\text{liq}} = w_{\text{gas}} = \frac{d\eta}{dt} = \frac{\partial\eta}{\partial t} + u \frac{\partial\eta}{\partial x} + v \frac{\partial\eta}{\partial y} \quad (4.65)$$

This is called the *kinematic boundary condition*.

There must be mechanical equilibrium across the interface. The viscous shear stresses must balance:

$$(\tau_{zy})_{\text{liq}} = (\tau_{zy})_{\text{gas}} \quad (\tau_{zx})_{\text{liq}} = (\tau_{zx})_{\text{gas}} \quad (4.66)$$

Neglecting the viscous normal stresses, the pressures must balance at the interface except for surface tension effects:

$$p_{\text{liq}} = p_{\text{gas}} - Y(R_x^{-1} + R_y^{-1}) \quad (4.67)$$

which is equivalent to Eq. (1.33). The radii of curvature can be written in terms of the free surface position  $\eta$ :

$$\begin{aligned} R_x^{-1} + R_y^{-1} &= \frac{\partial}{\partial x} \left[ \frac{\partial\eta/\partial x}{\sqrt{1 + (\partial\eta/\partial x)^2 + (\partial\eta/\partial y)^2}} \right] \\ &+ \frac{\partial}{\partial y} \left[ \frac{\partial\eta/\partial y}{\sqrt{1 + (\partial\eta/\partial x)^2 + (\partial\eta/\partial y)^2}} \right] \end{aligned} \quad (4.68)$$

Finally, the heat transfer must be the same on both sides of the interface, since no heat can be stored in the infinitesimally thin interface:

$$(q_z)_{\text{liq}} = (q_z)_{\text{gas}} \quad (4.69)$$

Neglecting radiation, this is equivalent to

$$\left( k \frac{\partial T}{\partial z} \right)_{\text{liq}} = \left( k \frac{\partial T}{\partial z} \right)_{\text{gas}} \quad (4.70)$$

This is as much detail as we wish to give at this level of exposition. Further and even more complicated details on fluid flow boundary conditions are given in Refs. 5 and 9.

### Simplified Free Surface Conditions

In the introductory analyses given in this book, such as open-channel flows in Chap. 10, we shall back away from the exact conditions (4.65) to (4.69) and assume that the upper fluid is an “atmosphere” that merely exerts pressure on the lower fluid, with shear and heat conduction negligible. We also neglect nonlinear terms involving the slopes of the free surface. We then have a much simpler and linear set of conditions at the surface:

$$\begin{aligned} p_{\text{liq}} &\approx p_{\text{gas}} - Y \left( \frac{\partial^2 \eta}{\partial x^2} + \frac{\partial^2 \eta}{\partial y^2} \right) & w_{\text{liq}} &\approx \frac{\partial \eta}{\partial t} \\ \left( \frac{\partial V}{\partial z} \right)_{\text{liq}} &\approx 0 & \left( \frac{\partial T}{\partial z} \right)_{\text{liq}} &\approx 0 \end{aligned} \quad (4.71)$$

In many cases, such as open-channel flow, we can also neglect surface tension, so that

$$p_{\text{liq}} \approx p_{\text{atm}} \quad (4.72)$$

These are the types of approximations that will be used in Chap. 10. The nondimensional forms of these conditions will also be useful in Chap. 5.

### Incompressible Flow with Constant Properties

Flow with constant  $\rho$ ,  $\mu$ , and  $k$  is a basic simplification that will be used, for example, throughout Chap. 6. The basic equations of motion (4.56) to (4.58) reduce to

$$\text{Continuity:} \quad \nabla \cdot \mathbf{V} = 0 \quad (4.73)$$

$$\text{Momentum:} \quad \rho \frac{d\mathbf{V}}{dt} = \rho \mathbf{g} - \nabla p + \mu \nabla^2 \mathbf{V} \quad (4.74)$$

$$\text{Energy:} \quad \rho c_p \frac{dT}{dt} = k \nabla^2 T + \Phi \quad (4.75)$$

Since  $\rho$  is constant, there are only three unknowns:  $p$ ,  $\mathbf{V}$ , and  $T$ . The system is closed.<sup>9</sup> Not only that, the system splits apart: Continuity and momentum are independent of  $T$ . Thus we can solve Eqs. (4.73) and (4.74) entirely separately for the pressure and velocity, using such boundary conditions as

$$\text{Solid surface:} \quad \mathbf{V} = \mathbf{V}_{\text{wall}} \quad (4.76)$$

$$\text{Inlet or outlet:} \quad \text{Known } \mathbf{V}, p \quad (4.77)$$

<sup>9</sup>For this system, what are the thermodynamic equivalents to Eq. (4.59)?

$$\text{Free surface:} \quad p \approx p_a \quad w \approx \frac{\partial \eta}{\partial t} \quad (4.78)$$

Later, usually in another course,<sup>10</sup> we can solve for the temperature distribution from Eq. (4.75), which depends on velocity  $\mathbf{V}$  through the dissipation  $\Phi$  and the total time-derivative operator  $d/dt$ .

## Inviscid Flow Approximations

Chapter 8 assumes inviscid flow throughout, for which the viscosity  $\mu = 0$ . The momentum equation (4.74) reduces to

$$\rho \frac{d\mathbf{V}}{dt} = \rho \mathbf{g} - \nabla p \quad (4.79)$$

This is *Euler's equation*; it can be integrated along a streamline to obtain Bernoulli's equation (see Sec. 4.9). By neglecting viscosity we have lost the second-order derivative of  $\mathbf{V}$  in Eq. (4.74); therefore we must relax one boundary condition on velocity. The only mathematically sensible condition to drop is the no-slip condition at the wall. We let the flow slip parallel to the wall but do not allow it to flow into the wall. The proper inviscid condition is that the normal velocities must match at any solid surface:

$$\text{Inviscid flow:} \quad (V_n)_{\text{fluid}} = (V_n)_{\text{wall}} \quad (4.80)$$

In most cases the wall is fixed; therefore the proper inviscid flow condition is

$$V_n = 0 \quad (4.81)$$

There is *no* condition whatever on the tangential velocity component at the wall in inviscid flow. The tangential velocity will be part of the solution to an inviscid flow analysis (see Chap. 8).

### EXAMPLE 4.6

For steady incompressible laminar flow through a long tube, the velocity distribution is given by

$$v_z = U \left( 1 - \frac{r^2}{R^2} \right) \quad v_r = v_\theta = 0$$

where  $U$  is the maximum, or centerline, velocity and  $R$  is the tube radius. If the wall temperature is constant at  $T_w$  and the temperature  $T = T(r)$  only, find  $T(r)$  for this flow.

### Solution

With  $T = T(r)$ , Eq. (4.75) reduces for steady flow to

$$\rho c_p v_r \frac{dT}{dr} = \frac{k}{r} \frac{d}{dr} \left( r \frac{dT}{dr} \right) + \mu \left( \frac{dv_z}{dr} \right)^2 \quad (1)$$

But since  $v_r = 0$  for this flow, the convective term on the left vanishes. Introduce  $v_z$  into Eq. (1) to obtain

$$\frac{k}{r} \frac{d}{dr} \left( r \frac{dT}{dr} \right) = -\mu \left( \frac{dv_z}{dr} \right)^2 = -\frac{4U^2 \mu r^2}{R^4} \quad (2)$$

<sup>10</sup>Since temperature is entirely *uncoupled* by this assumption, we may never get around to solving for it here and may ask you to wait until you take a course on heat transfer.

Multiply through by  $r/k$  and integrate once:

$$r \frac{dT}{dr} = -\frac{\mu U^2 r^4}{kR^4} + C_1 \quad (3)$$

Divide through by  $r$  and integrate once again:

$$T = -\frac{\mu U^2 r^4}{4kR^4} + C_1 \ln r + C_2 \quad (4)$$

Now we are in position to apply our boundary conditions to evaluate  $C_1$  and  $C_2$ .

First, since the logarithm of zero is  $-\infty$ , the temperature at  $r = 0$  will be infinite unless

$$C_1 = 0 \quad (5)$$

Thus we eliminate the possibility of a logarithmic singularity. The same thing will happen if we apply the *symmetry* condition  $dT/dr = 0$  at  $r = 0$  to Eq. (3). The constant  $C_2$  is then found by the wall-temperature condition at  $r = R$ :

$$T = T_w = -\frac{\mu U^2}{4k} + C_2$$

$$\text{or} \quad C_2 = T_w + \frac{\mu U^2}{4k} \quad (6)$$

The correct solution is thus

$$T(r) = T_w + \frac{\mu U^2}{4k} \left( 1 - \frac{r^4}{R^4} \right) \quad \text{Ans. (7)}$$

which is a fourth-order parabolic distribution with a maximum value  $T_0 = T_w + \mu U^2/(4k)$  at the centerline.

## 4.7 The Stream Function

We have seen in Sec. 4.6 that even if the temperature is uncoupled from our system of equations of motion, we must solve the continuity and momentum equations simultaneously for pressure and velocity. The *stream function*  $\psi$  is a clever device that allows us to satisfy the continuity equation and then solve the momentum equation directly for the single variable  $\psi$ . Lines of constant  $\psi$  are streamlines of the flow.

The stream function idea works only if the continuity equation (4.56) can be reduced to *two* terms. In general, we have *four* terms:

$$\text{Cartesian: } \frac{\partial \rho}{\partial t} + \frac{\partial}{\partial x}(\rho u) + \frac{\partial}{\partial y}(\rho v) + \frac{\partial}{\partial z}(\rho w) = 0 \quad (4.82a)$$

$$\text{Cylindrical: } \frac{\partial \rho}{\partial t} + \frac{1}{r} \frac{\partial}{\partial r}(r \rho v_r) + \frac{1}{r} \frac{\partial}{\partial \theta}(\rho v_\theta) + \frac{\partial}{\partial z}(\rho v_z) = 0 \quad (4.82b)$$

First, let us eliminate unsteady flow, which is a peculiar and unrealistic application of the stream function idea. Reduce either of Eqs. (4.82) to any *two* terms. The most common application is incompressible flow in the  $xy$  plane:

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0 \quad (4.83)$$

This equation is satisfied *identically* if a function  $\psi(x, y)$  is defined such that Eq. (4.83) becomes

$$\frac{\partial}{\partial x} \left( \frac{\partial \psi}{\partial y} \right) + \frac{\partial}{\partial y} \left( -\frac{\partial \psi}{\partial x} \right) = 0 \quad (4.84)$$

Comparison of (4.83) and (4.84) shows that this new function  $\psi$  must be defined such that

$$u = \frac{\partial \psi}{\partial y} \quad v = -\frac{\partial \psi}{\partial x} \quad (4.85)$$

or

$$\mathbf{V} = \mathbf{i} \frac{\partial \psi}{\partial y} - \mathbf{j} \frac{\partial \psi}{\partial x}$$

Is this legitimate? Yes, it is just a mathematical trick of replacing two variables ( $u$  and  $v$ ) by a single higher-order function  $\psi$ . The vorticity<sup>11</sup> or curl  $\mathbf{V}$ , is an interesting function:

$$\text{curl } \mathbf{V} = -k \nabla^2 \psi \quad \text{where} \quad \nabla^2 \psi = \frac{\partial^2 \psi}{\partial x^2} + \frac{\partial^2 \psi}{\partial y^2} \quad (4.86)$$

Thus, if we take the curl of the momentum equation (4.74) and utilize Eq. (4.86), we obtain a single equation for  $\psi$  for incompressible flow:

$$\frac{\partial \psi}{\partial y} \frac{\partial}{\partial x} (\nabla^2 \psi) - \frac{\partial \psi}{\partial x} \frac{\partial}{\partial y} (\nabla^2 \psi) = \nu \nabla^2 (\nabla^2 \psi) \quad (4.87)$$

where  $\nu = \mu/\rho$  is the kinematic viscosity. This is partly a victory and partly a defeat: Eq. (4.87) is scalar and has only one variable,  $\psi$ , but it now contains *fourth*-order derivatives and probably will require computer analysis. There will be four boundary conditions required on  $\psi$ . For example, for the flow of a uniform stream in the  $x$  direction past a solid body, the four conditions would be

$$\begin{aligned} \text{At infinity:} \quad & \frac{\partial \psi}{\partial y} = U_\infty \quad \frac{\partial \psi}{\partial x} = 0 \\ \text{At the body:} \quad & \frac{\partial \psi}{\partial y} = \frac{\partial \psi}{\partial x} = 0 \end{aligned} \quad (4.88)$$

Many examples of numerical solution of Eqs. (4.87) and (4.88) are given in Ref. 1.

One important application is inviscid, incompressible, *irrotational* flow<sup>12</sup> in the  $xy$  plane, where  $\text{curl } \mathbf{V} \equiv 0$ . Equations (4.86) and (4.87) reduce to

$$\nabla^2 \psi = \frac{\partial^2 \psi}{\partial x^2} + \frac{\partial^2 \psi}{\partial y^2} = 0 \quad (4.89)$$

<sup>11</sup>See Section 4.8.

<sup>12</sup>See Section 4.8.

This is the second-order *Laplace equation* (Chap. 8), for which many solutions and analytical techniques are known. Also, boundary conditions like Eq. (4.88) reduce to

$$\text{At infinity: } \psi = U_\infty y + \text{const} \quad (4.90)$$

$$\text{At the body: } \psi = \text{const}$$

It is well within our capability to find some useful solutions to Eqs. (4.89) and (4.90), which we shall do in Chap. 8.

### Geometric Interpretation of $\psi$

The fancy mathematics above would serve alone to make the stream function immortal and always useful to engineers. Even better, though,  $\psi$  has a beautiful geometric interpretation: Lines of constant  $\psi$  are *streamlines* of the flow. This can be shown as follows. From Eq. (1.41) the definition of a streamline in two-dimensional flow is

$$\frac{dx}{u} = \frac{dy}{v}$$

$$\text{or } u \, dy - v \, dx = 0 \quad \text{streamline} \quad (4.91)$$


Introducing the stream function from Eq. (4.85), we have

$$\frac{\partial \psi}{\partial x} dx + \frac{\partial \psi}{\partial y} dy = 0 = d\psi \quad (4.92)$$


Thus the change in  $\psi$  is zero along a streamline, or

$$\psi = \text{const along a streamline} \quad (4.93)$$

Having found a given solution  $\psi(x, y)$ , we can plot lines of constant  $\psi$  to give the streamlines of the flow.

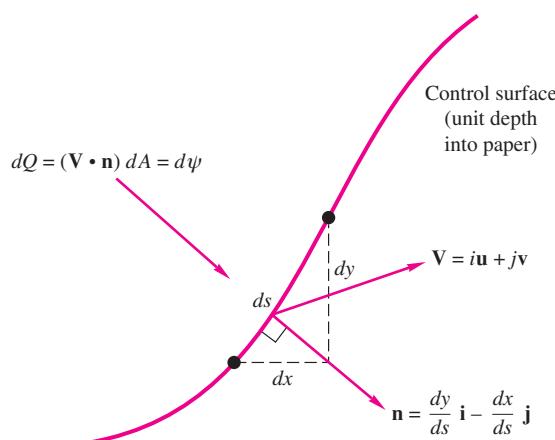

**Fig. 4.8** Geometric interpretation of stream function: volume flow through a differential portion of a control surface.

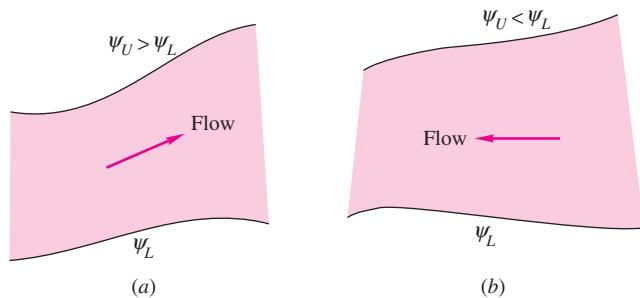

**Fig. 4.9** Sign convention for flow in terms of change in stream function: (a) flow to the right if  $\psi_U$  is greater; (b) flow to the left if  $\psi_L$  is greater.

There is also a physical interpretation that relates  $\psi$  to volume flow. From Fig. 4.8, we can compute the volume flow  $dQ$  through an element  $ds$  of control surface of unit depth:

$$\begin{aligned} dQ &= (\mathbf{V} \cdot \mathbf{n}) dA = \left( \mathbf{i} \frac{\partial \psi}{\partial y} - \mathbf{j} \frac{\partial \psi}{\partial x} \right) \cdot \left( \mathbf{i} \frac{dy}{ds} - \mathbf{j} \frac{dx}{ds} \right) ds \quad (1) \\ &= \frac{\partial \psi}{\partial x} dx + \frac{\partial \psi}{\partial y} dy = d\psi \end{aligned} \quad (4.94)$$

Thus the change in  $\psi$  across the element is numerically equal to the volume flow through the element. The volume flow between any two streamlines in the flow field is equal to the change in stream function between those streamlines:

$$Q_{1 \rightarrow 2} = \int_1^2 (\mathbf{V} \cdot \mathbf{n}) dA = \int_1^2 d\psi = \psi_2 - \psi_1 \quad (4.95)$$

Further, the direction of the flow can be ascertained by noting whether  $\psi$  increases or decreases. As sketched in Fig. 4.9, the flow is to the right if  $\psi_U$  is greater than  $\psi_L$ , where the subscripts stand for upper and lower, as before; otherwise the flow is to the left.

Both the stream function and the velocity potential were invented by the French mathematician Joseph Louis Lagrange and published in his treatise on fluid mechanics in 1781.

### EXAMPLE 4.7

If a stream function exists for the velocity field of Example 4.5

$$u = a(x^2 - y^2) \quad v = -2axy \quad w = 0$$

find it, plot it, and interpret it.

### Solution

- **Assumptions:** Incompressible, two-dimensional flow.
- **Approach:** Use the definition of stream function derivatives, Eqs. (4.85), to find  $\psi(x, y)$ .

- *Solution step 1:* Note that this velocity distribution was also examined in Example 4.3. It satisfies continuity, Eq. (4.83), but let's check that; otherwise  $\psi$  will not exist:

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = \frac{\partial}{\partial x}[a(x^2 - y^2)] + \frac{\partial}{\partial y}(-2axy) = 2ax + (-2ax) \equiv 0 \quad \text{checks}$$

Thus we are certain that a stream function exists.

- *Solution step 2:* To find  $\psi$ , write out Eqs. (4.85) and integrate:

$$u = \frac{\partial \psi}{\partial y} = ax^2 - ay^2 \quad (1)$$

$$v = -\frac{\partial \psi}{\partial x} = -2axy \quad (2)$$

and work from either one toward the other. Integrate (1) partially

$$\psi = ax^2y - \frac{ay^3}{3} + f(x) \quad (3)$$

Differentiate (3) with respect to  $x$  and compare with (2)

$$\frac{\partial \psi}{\partial x} = 2axy + f'(x) = 2axy \quad (4)$$


Therefore  $f'(x) = 0$ , or  $f = \text{constant}$ . The complete stream function is thus found:

$$\psi = a\left(x^2y - \frac{y^3}{3}\right) + C \quad \text{Ans. (5)}$$


To plot this, set  $C = 0$  for convenience and plot the function

$$3x^2y - y^3 = \frac{3\psi}{a} \quad (6)$$

for constant values of  $\psi$ . The result is shown in Fig. E4.7a to be six  $60^\circ$  wedges of circulating motion, each with identical flow patterns except for the arrows. Once the streamlines are labeled, the flow directions follow from the sign convention of Fig. 4.9. How

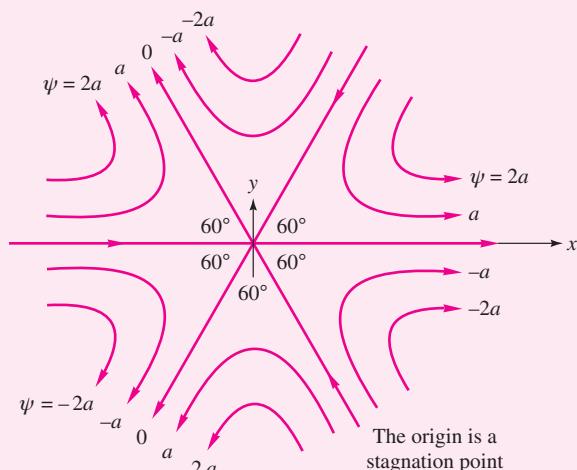

E4.7a

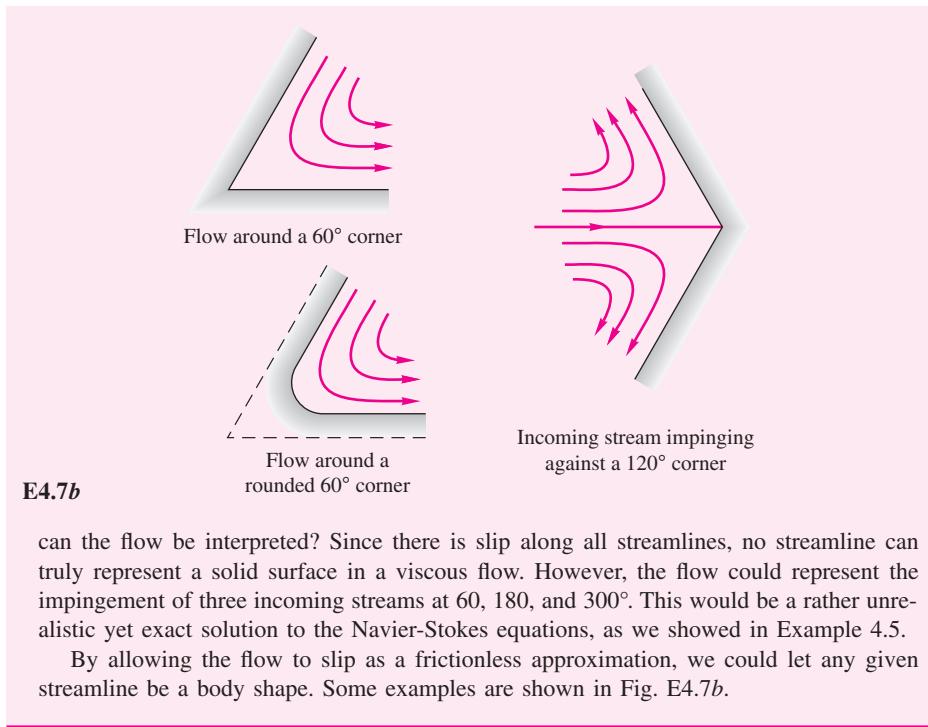

can the flow be interpreted? Since there is slip along all streamlines, no streamline can truly represent a solid surface in a viscous flow. However, the flow could represent the impingement of three incoming streams at 60, 180, and 300°. This would be a rather unrealistic yet exact solution to the Navier-Stokes equations, as we showed in Example 4.5.

By allowing the flow to slip as a frictionless approximation, we could let any given streamline be a body shape. Some examples are shown in Fig. E4.7b.

A stream function also exists in a variety of other physical situations where only two coordinates are needed to define the flow. Three examples are illustrated here.

### Steady Plane Compressible Flow

Suppose now that the density is variable but that  $w = 0$ , so that the flow is in the  $xy$  plane. Then the equation of continuity becomes

$$\frac{\partial}{\partial x}(\rho u) + \frac{\partial}{\partial y}(\rho v) = 0 \quad (4.96)$$

We see that this is in exactly the same form as Eq. (4.84). Therefore a compressible flow stream function can be defined such that

$$\rho u = \frac{\partial \psi}{\partial y} \quad \rho v = -\frac{\partial \psi}{\partial x} \quad (4.97)$$

Again lines of constant  $\psi$  are streamlines of the flow, but the change in  $\psi$  is now equal to the mass flow, not the volume flow:

$$d\dot{m} = \rho(\mathbf{V} \cdot \mathbf{n}) dA = d\psi$$

or

$$\dot{m}_{1 \rightarrow 2} = \int_1^2 \rho(\mathbf{V} \cdot \mathbf{n}) dA = \psi_2 - \psi_1 \quad (4.98)$$

The sign convention on flow direction is the same as in Fig. 4.9. This particular stream function combines density with velocity and must be substituted into not only momentum but also the energy and state relations (4.58) and (4.59) with pressure and temperature as companion variables. Thus the compressible stream function is

not a great victory, and further assumptions must be made to effect an analytical solution to a typical problem (see, for instance, Ref. 5, Chap. 7).

### Incompressible Plane Flow in Polar Coordinates

Suppose that the important coordinates are  $r$  and  $\theta$ , with  $v_z = 0$ , and that the density is constant. Then Eq. (4.82b) reduces to

$$\frac{1}{r} \frac{\partial}{\partial r}(rv_r) + \frac{1}{r} \frac{\partial}{\partial \theta}(v_\theta) = 0 \quad (4.99)$$

After multiplying through by  $r$ , we see that this is the analogous form of Eq. (4.84):

$$\frac{\partial}{\partial r}\left(\frac{\partial \psi}{\partial \theta}\right) + \frac{\partial}{\partial \theta}\left(-\frac{\partial \psi}{\partial r}\right) = 0 \quad (4.100)$$

By comparison of (4.99) and (4.100) we deduce the form of the incompressible polar coordinate stream function:

$$v_r = \frac{1}{r} \frac{\partial \psi}{\partial \theta} \quad v_\theta = -\frac{\partial \psi}{\partial r} \quad (4.101)$$

Once again lines of constant  $\psi$  are streamlines, and the change in  $\psi$  is the *volume flow*  $Q_{1 \rightarrow 2} = \psi_2 - \psi_1$ . The sign convention is the same as in Fig. 4.9. This type of stream function is very useful in analyzing flows with cylinders, vortices, sources, and sinks (Chap. 8).

### Incompressible Axisymmetric Flow

As a final example, suppose that the flow is three-dimensional ( $v_r, v_z$ ) but with no circumferential variations,  $v_\theta = \partial/\partial\theta = 0$  (see Fig. 4.2 for definition of coordinates). Such a flow is termed *axisymmetric*, and the flow pattern is the same when viewed on any meridional plane through the axis of revolution  $z$ . For incompressible flow, Eq. (4.82b) becomes

$$\frac{1}{r} \frac{\partial}{\partial r}(rv_r) + \frac{\partial}{\partial z}(v_z) = 0 \quad (4.102)$$

This doesn't seem to work: Can't we get rid of the one  $r$  outside? But when we realize that  $r$  and  $z$  are independent coordinates, Eq. (4.102) can be rewritten as

$$\frac{\partial}{\partial r}(rv_r) + \frac{\partial}{\partial z}(rv_z) = 0 \quad (4.103)$$

By analogy with Eq. (4.84), this has the form

$$\frac{\partial}{\partial r}\left(-\frac{\partial \psi}{\partial z}\right) + \frac{\partial}{\partial z}\left(\frac{\partial \psi}{\partial r}\right) = 0 \quad (4.104)$$

By comparing (4.103) and (4.104), we deduce the form of an incompressible axisymmetric stream function  $\psi(r, z)$

$$v_r = -\frac{1}{r} \frac{\partial \psi}{\partial z} \quad v_z = \frac{1}{r} \frac{\partial \psi}{\partial r} \quad (4.105)$$

Here again lines of constant  $\psi$  are streamlines, but there is a factor ( $2\pi$ ) in the volume flow:  $Q_{1 \rightarrow 2} = 2\pi(\psi_2 - \psi_1)$ . The sign convention on flow is the same as in Fig. 4.9.

**EXAMPLE 4.8**

Investigate the stream function in polar coordinates

$$\psi = U \sin \theta \left( r - \frac{R^2}{r} \right) \quad (1)$$

where  $U$  and  $R$  are constants, a velocity and a length, respectively. Plot the streamlines. What does the flow represent? Is it a realistic solution to the basic equations?

**Solution**

The streamlines are lines of constant  $\psi$ , which has units of square meters per second. Note that  $\psi/(UR)$  is dimensionless. Rewrite Eq. (1) in dimensionless form


$$\frac{\psi}{UR} = \sin \theta \left( \eta - \frac{1}{\eta} \right) \quad \eta = \frac{r}{R} \quad (2)$$

Of particular interest is the special line  $\psi = 0$ . From Eq. (1) or (2) this occurs when (a)  $\theta = 0$  or  $180^\circ$  and (b)  $r = R$ . Case (a) is the  $x$  axis, and case (b) is a circle of radius  $R$ , both of which are plotted in Fig. E4.8.

For any other nonzero value of  $\psi$  it is easiest to pick a value of  $r$  and solve for  $\theta$ :

$$\sin \theta = \frac{\psi/(UR)}{r/R - R/r} \quad (3)$$

In general, there will be two solutions for  $\theta$  because of the symmetry about the  $y$  axis. For example, take  $\psi/(UR) = +1.0$ :

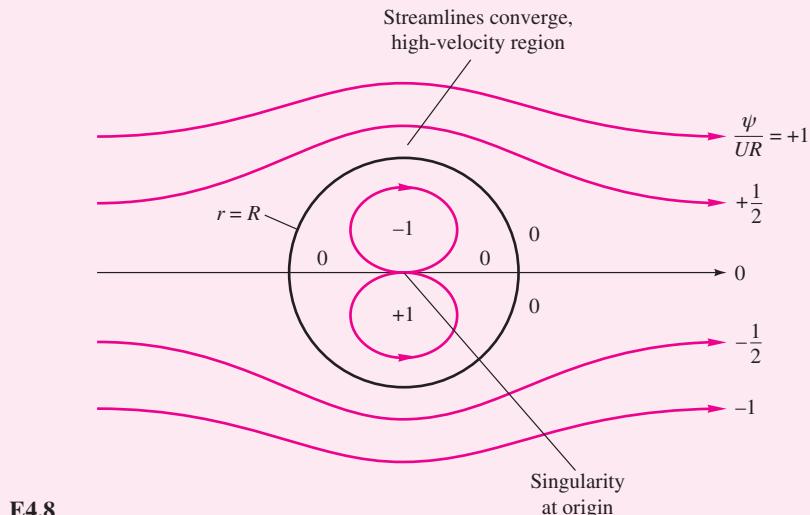

Guess $r/R$	3.0	2.5	2.0	1.8	1.7	1.618
Compute $\theta$	$22^\circ$ $158^\circ$	$28^\circ$ $152^\circ$	$42^\circ$ $138^\circ$	$53^\circ$ $127^\circ$	$64^\circ$ $116^\circ$	$90^\circ$

This line is plotted in Fig. E4.8 and passes over the circle  $r = R$ . Be careful, though, because there is a second curve for  $\psi/(UR) = +1.0$  for small  $r < R$  below the  $x$  axis:

Guess $r/R$	0.618	0.6	0.5	0.4	0.3	0.2	0.1
Compute $\theta$	$-90^\circ$	$-70^\circ$	$-42^\circ$	$-28^\circ$	$-19^\circ$	$-12^\circ$	$-6^\circ$
		$-110^\circ$	$-138^\circ$	$-152^\circ$	$-161^\circ$	$-168^\circ$	$-174^\circ$


This second curve plots as a closed curve inside the circle  $r = R$ . There is a singularity of infinite velocity and indeterminate flow direction at the origin. Figure E4.8 shows the full pattern.

The given stream function, Eq. (1), is an exact and classic solution to the momentum equation (4.38) for frictionless flow. Outside the circle  $r = R$  it represents two-dimensional inviscid flow of a uniform stream past a circular cylinder (Sec. 8.4). Inside the circle it represents a rather unrealistic trapped circulating motion of what is called a *line doublet*.

## 4.8 Vorticity and Irrotationality

The assumption of zero fluid angular velocity, or irrotationality, is a very useful simplification. Here we show that angular velocity is associated with the curl of the local velocity vector.

The differential relations for deformation of a fluid element can be derived by examining Fig. 4.10. Two fluid lines  $AB$  and  $BC$ , initially perpendicular at time  $t$ , move and deform so that at  $t + dt$  they have slightly different lengths  $A'B'$  and  $B'C'$

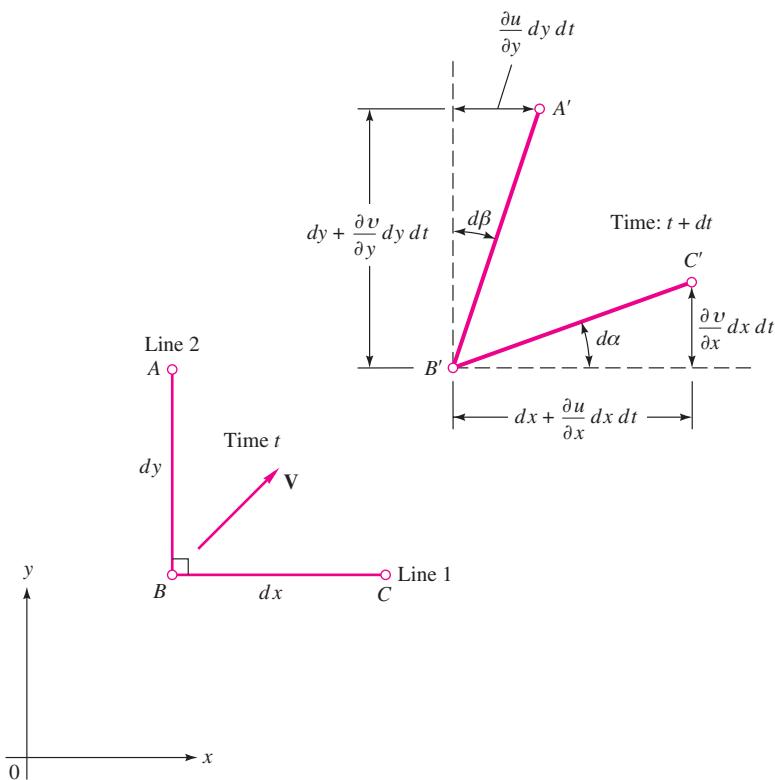

**Fig. 4.10** Angular velocity and strain rate of two fluid lines deforming in the  $xy$  plane.

and are slightly off the perpendicular by angles  $d\alpha$  and  $d\beta$ . Such deformation occurs kinematically because  $A$ ,  $B$ , and  $C$  have slightly different velocities when the velocity field  $\mathbf{V}$  has spatial gradients. All these differential changes in the motion of  $A$ ,  $B$ , and  $C$  are noted in Fig. 4.10.

We define the angular velocity  $\omega_z$  about the  $z$  axis as the average rate of counter-clockwise turning of the two lines:

$$\omega_z = \frac{1}{2} \left( \frac{d\alpha}{dt} - \frac{d\beta}{dt} \right) \quad (4.106)$$

But from Fig. 4.10,  $d\alpha$  and  $d\beta$  are each directly related to velocity derivatives in the limit of small  $dt$ :

$$\begin{aligned} d\alpha &= \lim_{dt \rightarrow 0} \left[ \tan^{-1} \frac{(\partial v / \partial x) dx dt}{dx + (\partial u / \partial x) dx dt} \right] = \frac{\partial v}{\partial x} dt \\ d\beta &= \lim_{dt \rightarrow 0} \left[ \tan^{-1} \frac{(\partial u / \partial y) dy dt}{dy + (\partial v / \partial y) dy dt} \right] = \frac{\partial u}{\partial y} dt \end{aligned} \quad (4.107)$$

Combining Eqs. (4.106) and (4.107) gives the desired result:

$$\omega_z = \frac{1}{2} \left( \frac{\partial v}{\partial x} - \frac{\partial u}{\partial y} \right) \quad (4.108)$$

In exactly similar manner we determine the other two rates:

$$\omega_x = \frac{1}{2} \left( \frac{\partial w}{\partial y} - \frac{\partial v}{\partial z} \right) \quad \omega_y = \frac{1}{2} \left( \frac{\partial u}{\partial z} - \frac{\partial w}{\partial x} \right) \quad (4.109)$$

The vector  $\boldsymbol{\omega} = \mathbf{i}\omega_x + \mathbf{j}\omega_y + \mathbf{k}\omega_z$  is thus one-half the curl of the velocity vector

$$\boldsymbol{\omega} = \frac{1}{2} (\text{curl } \mathbf{V}) = \frac{1}{2} \begin{vmatrix} \mathbf{i} & \mathbf{j} & \mathbf{k} \\ \frac{\partial}{\partial x} & \frac{\partial}{\partial y} & \frac{\partial}{\partial z} \\ u & v & w \end{vmatrix} \quad (4.110)$$

Since the factor of  $\frac{1}{2}$  is annoying, many workers prefer to use a vector twice as large, called the *vorticity*:

$$\zeta = 2\boldsymbol{\omega} = \text{curl } \mathbf{V} \quad (4.111)$$

Many flows have negligible or zero vorticity and are called *irrotational*:

$$\text{curl } \mathbf{V} \equiv 0 \quad (4.112)$$

The next section expands on this idea. Such flows can be incompressible or compressible, steady or unsteady.

We may also note that Fig. 4.10 demonstrates the *shear strain rate* of the element, which is defined as the rate of closure of the initially perpendicular lines:

$$\dot{\varepsilon}_{xy} = \frac{d\alpha}{dt} + \frac{d\beta}{dt} = \frac{\partial v}{\partial x} + \frac{\partial u}{\partial y} \quad (4.113)$$

When multiplied by viscosity  $\mu$ , this equals the shear stress  $\tau_{xy}$  in a newtonian fluid, as discussed earlier in Eqs. (4.37). Appendix D lists strain rate and vorticity components in cylindrical coordinates.

## 4.9 Frictionless Irrotational Flows

When a flow is both frictionless and irrotational, pleasant things happen. First, the momentum equation (4.38) reduces to Euler's equation:

$$\rho \frac{d\mathbf{V}}{dt} = \rho\mathbf{g} - \nabla p \quad (4.114)$$

Second, there is a great simplification in the acceleration term. Recall from Sec. 4.1 that acceleration has two terms:

$$\frac{d\mathbf{V}}{dt} = \frac{\partial \mathbf{V}}{\partial t} + (\mathbf{V} \cdot \nabla) \mathbf{V} \quad (4.2)$$

A beautiful vector identity exists for the second term [11]:

$$(\mathbf{V} \cdot \nabla) \mathbf{V} \equiv \nabla\left(\frac{1}{2}V^2\right) + \boldsymbol{\zeta} \times \mathbf{V} \quad (4.115)$$

where  $\boldsymbol{\zeta} = \text{curl } \mathbf{V}$  from Eq. (4.111) is the fluid vorticity.

Now combine (4.114) and (4.115), divide by  $\rho$ , and rearrange on the left-hand side. Dot the entire equation into an arbitrary vector displacement  $d\mathbf{r}$ :

$$\left[ \frac{\partial \mathbf{V}}{\partial t} + \nabla\left(\frac{1}{2}V^2\right) + \boldsymbol{\zeta} \times \mathbf{V} + \frac{1}{\rho} \nabla p - \mathbf{g} \right] \cdot d\mathbf{r} = 0 \quad (4.116)$$

Nothing works right unless we can get rid of the third term. We want

$$(\boldsymbol{\zeta} \times \mathbf{V}) \cdot (d\mathbf{r}) \equiv 0 \quad (4.117)$$

This will be true under various conditions:

1.  $\mathbf{V}$  is zero; trivial, no flow (hydrostatics).
2.  $\boldsymbol{\zeta}$  is zero; irrotational flow.
3.  $d\mathbf{r}$  is perpendicular to  $\boldsymbol{\zeta} \times \mathbf{V}$ ; this is rather specialized and rare.
4.  $d\mathbf{r}$  is parallel to  $\mathbf{V}$ ; we integrate *along a streamline* (see Sec. 3.5).

Condition 4 is the common assumption. If we integrate along a streamline in frictionless compressible flow and take, for convenience,  $\mathbf{g} = -g\mathbf{k}$ , Eq. (4.116) reduces to

$$\frac{\partial \mathbf{V}}{\partial t} \cdot d\mathbf{r} + d\left(\frac{1}{2}V^2\right) + \frac{dp}{\rho} + g dz = 0 \quad (4.118)$$

Except for the first term, these are exact differentials. Integrate between any two points 1 and 2 along the streamline:

$$\int_1^2 \frac{\partial V}{\partial t} ds + \int_1^2 \frac{dp}{\rho} + \frac{1}{2}(V_2^2 - V_1^2) + g(z_2 - z_1) = 0 \quad (4.119)$$

where  $ds$  is the arc length along the streamline. Equation (4.119) is Bernoulli's equation for frictionless unsteady flow along a streamline and is identical to Eq. (3.53). For incompressible steady flow, it reduces to

$$\frac{p}{\rho} + \frac{1}{2} V^2 + gz = \text{constant along streamline} \quad (4.120)$$

The constant may vary from streamline to streamline unless the flow is also irrotational (assumption 2). For irrotational flow  $\zeta = 0$ , the offending term Eq. (4.117) vanishes regardless of the direction of  $d\mathbf{r}$ , and Eq. (4.120) then holds all over the flow field with the same constant.

### Velocity Potential

Irrotationality gives rise to a scalar function  $\phi$  similar and complementary to the stream function  $\psi$ . From a theorem in vector analysis [11], a vector with zero curl must be the gradient of a scalar function

$$\text{If } \nabla \times \mathbf{V} \equiv 0 \quad \text{then} \quad \mathbf{V} = \nabla\phi \quad (4.121)$$

where  $\phi = \phi(x, y, z, t)$  is called the *velocity potential function*. Knowledge of  $\phi$  thus immediately gives the velocity components

$$u = \frac{\partial \phi}{\partial x}, \quad v = \frac{\partial \phi}{\partial y}, \quad w = \frac{\partial \phi}{\partial z} \quad (4.122)$$

Lines of constant  $\phi$  are called the *potential lines* of the flow.

Note that  $\phi$ , unlike the stream function, is fully three-dimensional and not limited to two coordinates. It reduces a velocity problem with three unknowns  $u$ ,  $v$ , and  $w$  to a single unknown potential  $\phi$ ; many examples are given in Chap. 8. The velocity potential also simplifies the unsteady Bernoulli equation (4.118) because if  $\phi$  exists, we obtain

$$\frac{\partial \mathbf{V}}{\partial t} \cdot d\mathbf{r} = \frac{\partial}{\partial t} (\nabla\phi) \cdot d\mathbf{r} = d\left(\frac{\partial \phi}{\partial t}\right) \quad (4.123)$$

along any arbitrary direction. Equation (4.118) then becomes a relation between  $\phi$  and  $p$ :

$$\frac{\partial \phi}{\partial t} + \int \frac{dp}{\rho} + \frac{1}{2} |\nabla\phi|^2 + gz = \text{const} \quad (4.124)$$

This is the unsteady irrotational Bernoulli equation. It is very important in the analysis of accelerating flow fields (see Refs. 10 and 15), but the only application in this text will be in Sec. 9.3 for steady flow.

### Orthogonality of Streamlines and Potential Lines

If a flow is both irrotational and described by only two coordinates,  $\psi$  and  $\phi$  both exist and the streamlines and potential lines are everywhere mutually perpendicular except at a stagnation point. For example, for incompressible flow in the  $xy$  plane, we would have

$$u = \frac{\partial \psi}{\partial y} = \frac{\partial \phi}{\partial x} \quad (4.125)$$

$$v = -\frac{\partial \psi}{\partial x} = \frac{\partial \phi}{\partial y} \quad (4.126)$$

Can you tell by inspection not only that these relations imply orthogonality but also that  $\phi$  and  $\psi$  satisfy Laplace's equation?<sup>13</sup> A line of constant  $\phi$  would be such that the change in  $\phi$  is zero:

$$d\phi = \frac{\partial \phi}{\partial x} dx + \frac{\partial \phi}{\partial y} dy = 0 = u dx + v dy \quad (4.127)$$

Solving, we have

$$\left(\frac{dy}{dx}\right)_{\phi=\text{const}} = -\frac{u}{v} = -\frac{1}{(dy/dx)_{\psi=\text{const}}} \quad (4.128)$$

Equation (4.128) is the mathematical condition that lines of constant  $\phi$  and  $\psi$  be mutually orthogonal. It may not be true at a stagnation point, where both  $u$  and  $v$  are zero, so that their ratio in Eq. (4.128) is indeterminate.

### Generation of Rotationality<sup>14</sup>

This is the second time we have discussed Bernoulli's equation under different circumstances (the first was in Sec. 3.5). Such reinforcement is useful, since this is probably the most widely used equation in fluid mechanics. It requires frictionless flow with no shaft work or heat transfer between sections 1 and 2. The flow may or may not be irrotational, the latter being an easier condition, allowing a universal Bernoulli constant.

The only remaining question is this: *When* is a flow irrotational? In other words, when does a flow have negligible angular velocity? The exact analysis of fluid rotationality under arbitrary conditions is a topic for advanced study (for example, Ref. 10, Sec. 8.5; Ref. 9, Sec. 5.2; and Ref. 5, Sec. 2.10). We shall simply state those results here without proof.

A fluid flow that is initially irrotational may become rotational if


1. There are significant viscous forces induced by jets, wakes, or solid boundaries. In this case Bernoulli's equation will not be valid in such viscous regions.
2. There are entropy gradients caused by curved shock waves (see Fig. 4.11b).
3. There are density gradients caused by *stratification* (uneven heating) rather than by pressure gradients.
4. There are significant *noninertial* effects such as the earth's rotation (the Coriolis acceleration).

In cases 2 to 4, Bernoulli's equation still holds along a streamline if friction is negligible. We shall not study cases 3 and 4 in this book. Case 2 will be treated briefly in Chap. 9 on gas dynamics. Primarily we are concerned with case 1, where rotation is induced by viscous stresses. This occurs near solid surfaces, where the no-slip condition creates a boundary layer through which the stream velocity drops to zero, and in jets and wakes, where streams of different velocities meet in a region of high shear.

Internal flows, such as pipes and ducts, are mostly viscous, and the wall layers grow to meet in the core of the duct. Bernoulli's equation does not hold in such flows unless it is modified for viscous losses.

<sup>13</sup>Equations (4.125) and (4.126) are called the *Cauchy-Riemann equations* and are studied in complex variable theory.

<sup>14</sup>This section may be omitted without loss of continuity.

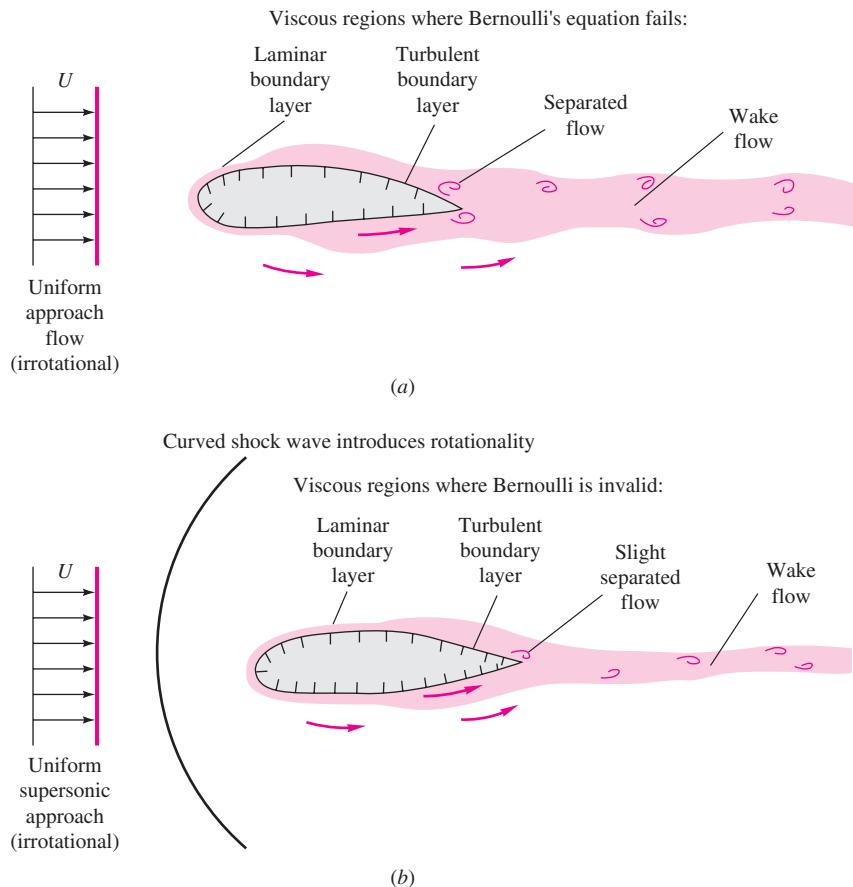

**Fig. 4.11** Typical flow patterns illustrating viscous regions patched onto nearly frictionless regions: (a) low subsonic flow past a body ( $U \ll a$ ); frictionless, irrotational potential flow outside the boundary layer (Bernoulli and Laplace equations valid); (b) supersonic flow past a body ( $U > a$ ); frictionless, rotational flow outside the boundary layer (Bernoulli equation valid, potential flow invalid).

External flows, such as a body immersed in a stream, are partly viscous and partly inviscid, the two regions being patched together at the edge of the shear layer or boundary layer. Two examples are shown in Fig. 4.11. Figure 4.11a shows a low-speed subsonic flow past a body. The approach stream is irrotational; that is, the curl of a constant is zero, but viscous stresses create a rotational shear layer beside and downstream of the body. Generally speaking (see Chap. 7), the shear layer is laminar, or smooth, near the front of the body and turbulent, or disorderly, toward the rear. A separated, or deadwater, region usually occurs near the trailing edge, followed by an unsteady turbulent wake extending far downstream. Some sort of laminar or turbulent viscous theory must be applied to these viscous regions; they are then patched onto the outer flow, which is frictionless and irrotational. If the stream Mach number is less than about 0.3, we can combine Eq. (4.122) with the incompressible continuity equation (4.73):

$$\nabla \cdot \mathbf{V} = \nabla \cdot (\nabla\phi) = 0$$

or

$$\nabla^2\phi = 0 = \frac{\partial^2\phi}{\partial x^2} + \frac{\partial^2\phi}{\partial y^2} + \frac{\partial^2\phi}{\partial z^2} \quad (4.129)$$

This is Laplace's equation in three dimensions, there being no restraint on the number of coordinates in potential flow. A great deal of Chap. 8 will be concerned with solving Eq. (4.129) for practical engineering problems; it holds in the entire region of Fig. 4.11a outside the shear layer.

Figure 4.11b shows a supersonic flow past a round-nosed body. A curved shock wave generally forms in front, and the flow downstream is *rotational* due to entropy gradients (case 2). We can use Euler's equation (4.114) in this frictionless region but not potential theory. The shear layers have the same general character as in Fig. 4.11a except that the separation zone is slight or often absent and the wake is usually thinner. Theory of separated flow is presently qualitative, but we can make quantitative estimates of laminar and turbulent boundary layers and wakes.

### EXAMPLE 4.9

If a velocity potential exists for the velocity field of Example 4.5

$$u = a(x^2 - y^2) \quad v = -2axy \quad w = 0$$

find it, plot it, and compare with Example 4.7.

### Solution

Since  $w = 0$ , the curl of  $\mathbf{V}$  has only one  $z$  component, and we must show that it is zero:

$$\begin{aligned} (\nabla \times \mathbf{V})_z &= 2\omega_z = \frac{\partial v}{\partial x} - \frac{\partial u}{\partial y} = \frac{\partial}{\partial x}(-2axy) - \frac{\partial}{\partial y}(ax^2 - ay^2) \\ &= -2ay + 2ay = 0 \quad \text{checks} \end{aligned} \quad \text{Ans.}$$

The flow is indeed irrotational. A velocity potential exists.

To find  $\phi(x, y)$ , set

$$u = \frac{\partial \phi}{\partial x} = ax^2 - ay^2 \quad (1)$$

$$v = \frac{\partial \phi}{\partial y} = -2axy \quad (2)$$

Integrate (1)


$$\phi = \frac{ax^3}{3} - axy^2 + f(y) \quad (3)$$

Differentiate (3) and compare with (2)

$$\frac{\partial \phi}{\partial y} = -2axy + f'(y) = -2axy \quad (4)$$

Therefore  $f' = 0$ , or  $f = \text{constant}$ . The velocity potential is

$$\phi = \frac{ax^3}{3} - axy^2 + C \quad \text{Ans.}$$

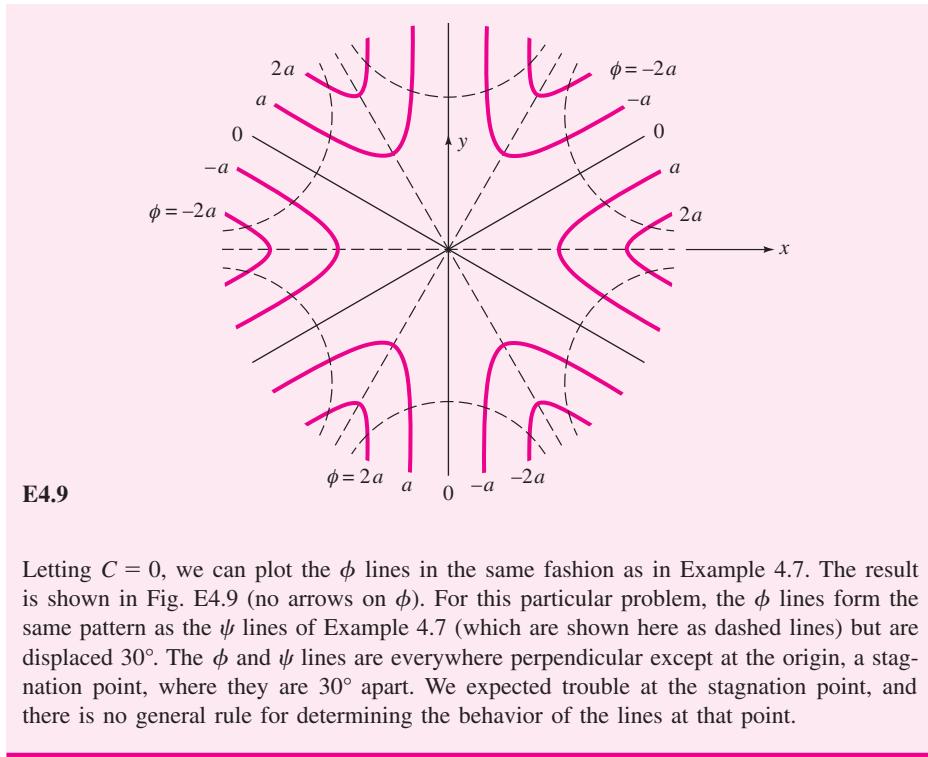

Letting  $C = 0$ , we can plot the  $\phi$  lines in the same fashion as in Example 4.7. The result is shown in Fig. E4.9 (no arrows on  $\phi$ ). For this particular problem, the  $\phi$  lines form the same pattern as the  $\psi$  lines of Example 4.7 (which are shown here as dashed lines) but are displaced  $30^\circ$ . The  $\phi$  and  $\psi$  lines are everywhere perpendicular except at the origin, a stagnation point, where they are  $30^\circ$  apart. We expected trouble at the stagnation point, and there is no general rule for determining the behavior of the lines at that point.

## 4.10 Some Illustrative Incompressible Viscous Flows


Inviscid flows do *not* satisfy the no-slip condition. They “slip” at the wall but do not flow through the wall. To look at fully viscous no-slip conditions, we must attack the complete Navier-Stokes equation (4.74), and the result is usually not at all irrotational, nor does a velocity potential exist. We look here at three cases: (1) flow between parallel plates due to a moving upper wall, (2) flow between parallel plates due to pressure gradient, and (3) flow between concentric cylinders when the inner one rotates. Other cases will be given as problem assignments or considered in Chap. 6. Extensive solutions for viscous flows are discussed in Refs. 4 and 5. All flows in this section are viscous and rotational.

### Couette Flow between a Fixed and a Moving Plate

Consider two-dimensional incompressible plane ( $\partial/\partial z = 0$ ) viscous flow between parallel plates a distance  $2h$  apart, as shown in Fig. 4.12. We assume that the plates are very wide and very long, so that the flow is essentially axial,  $u \neq 0$  but  $v = w = 0$ . The present case is Fig. 4.12a, where the upper plate moves at velocity  $V$  but there is no pressure gradient. Neglect gravity effects. We learn from the continuity equation (4.73) that

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} + \frac{\partial w}{\partial z} = 0 = \frac{\partial u}{\partial x} + 0 + 0 \quad \text{or} \quad u = u(y) \text{ only}$$

Thus there is a single nonzero axial velocity component that varies only across the channel. The flow is said to be *fully developed* (far downstream of the entrance).

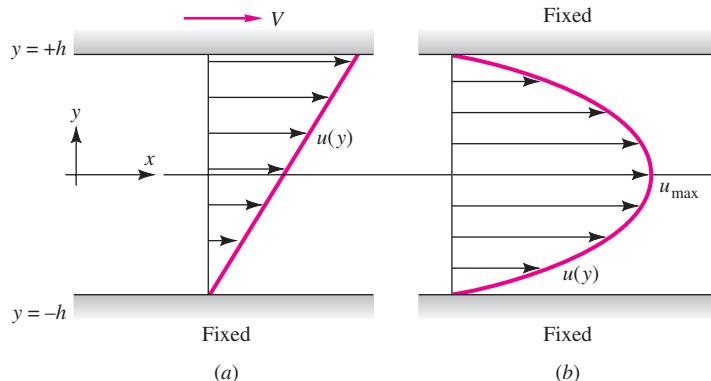

**Fig. 4.12** Incompressible viscous flow between parallel plates: (a) no pressure gradient, upper plate moving; (b) pressure gradient  $\partial p / \partial x$  with both plates fixed.

Substitute  $u = u(y)$  into the  $x$  component of the Navier-Stokes momentum equation (4.74) for two-dimensional ( $x, y$ ) flow:

$$\rho \left( u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} \right) = -\frac{\partial p}{\partial x} + \rho g_x + \mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} \right)$$

or

$$\rho(0 + 0) = 0 + 0 + \mu \left( 0 + \frac{d^2 u}{dy^2} \right) \quad (4.130)$$

Most of the terms drop out, and the momentum equation reduces to simply

$$\frac{d^2 u}{dy^2} = 0 \quad \text{or} \quad u = C_1 y + C_2$$

The two constants are found by applying the no-slip condition at the upper and lower plates:

$$\begin{aligned} \text{At } y = +h: \quad u &= V = C_1 h + C_2 \\ \text{At } y = -h: \quad u &= 0 = C_1(-h) + C_2 \end{aligned}$$

$$\text{or} \quad C_1 = \frac{V}{2h} \quad \text{and} \quad C_2 = \frac{V}{2}$$

Therefore the solution for this case (a), flow between plates with a moving upper wall, is

$$u = \frac{V}{2h} y + \frac{V}{2} \quad -h \leq y \leq +h \quad (4.131)$$

This is *Couette flow* due to a moving wall: a linear velocity profile with no slip at each wall, as anticipated and sketched in Fig. 4.12a. Note that the origin has been placed in the center of the channel for convenience in case (b) which follows.

What we have just presented is a rigorous derivation of the more informally discussed flow of Fig. 1.8 (where  $y$  and  $h$  were defined differently).

### Flow Due to Pressure Gradient between Two Fixed Plates

Case (b) is sketched in Fig. 4.12b. Both plates are fixed ( $V = 0$ ), but the pressure varies in the  $x$  direction. If  $v = w = 0$ , the continuity equation leads to the same

conclusion as case (a)—namely, that  $u = u(y)$  only. The  $x$ -momentum equation (4.130) changes only because the pressure is variable:

$$\mu \frac{d^2u}{dy^2} = \frac{\partial p}{\partial x} \quad (4.132)$$

Also, since  $v = w = 0$  and gravity is neglected, the  $y$ - and  $z$ -momentum equations lead to

$$\frac{\partial p}{\partial y} = 0 \quad \text{and} \quad \frac{\partial p}{\partial z} = 0 \quad \text{or} \quad p = p(x) \text{ only}$$

Thus the pressure gradient in Eq. (4.132) is the total and only gradient:

$$\mu \frac{d^2u}{dy^2} = \frac{dp}{dx} = \text{const} < 0 \quad (4.133)$$

Why did we add the fact that  $dp/dx$  is *constant*? Recall a useful conclusion from the theory of separation of variables: If two quantities are equal and one varies only with  $y$  and the other varies only with  $x$ , then they must both equal the same constant. Otherwise they would not be independent of each other.

Why did we state that the constant is *negative*? Physically, the pressure must decrease in the flow direction in order to drive the flow against resisting wall shear stress. Thus the velocity profile  $u(y)$  must have negative curvature everywhere, as anticipated and sketched in Fig. 4.12b.

The solution to Eq. (4.133) is accomplished by double integration:

$$u = \frac{1}{\mu} \frac{dp}{dx} \frac{y^2}{2} + C_1 y + C_2$$

The constants are found from the no-slip condition at each wall:

$$\text{At } y = \pm h: \quad u = 0 \quad \text{or} \quad C_1 = 0 \quad \text{and} \quad C_2 = -\frac{dp}{dx} \frac{h^2}{2\mu}$$

Thus the solution to case (b), flow in a channel due to pressure gradient, is

$$u = -\frac{dp}{dx} \frac{h^2}{2\mu} \left( 1 - \frac{y^2}{h^2} \right) \quad (4.134)$$

The flow forms a *Poiseuille* parabola of constant negative curvature. The maximum velocity occurs at the centerline  $y = 0$ :

$$u_{\max} = -\frac{dp}{dx} \frac{h^2}{2\mu} \quad (4.135)$$

Other (laminar) flow parameters are computed in the following example.

#### EXAMPLE 4.10

For case (b) in Fig. 4.12b, flow between parallel plates due to the pressure gradient, compute (a) the wall shear stress, (b) the stream function, (c) the vorticity, (d) the velocity potential, and (e) the average velocity.

**Solution**

All parameters can be computed from the basic solution, Eq. (4.134), by mathematical manipulation.

**Part (a)**

The wall shear follows from the definition of a newtonian fluid, Eq. (4.37):

$$\begin{aligned}\tau_w = \tau_{xy\text{ wall}} &= \mu \left( \frac{\partial u}{\partial y} + \frac{\partial v}{\partial x} \right) \Big|_{y=\pm h} = \mu \frac{\partial}{\partial y} \left[ \left( -\frac{dp}{dx} \right) \left( \frac{h^2}{2\mu} \right) \left( 1 - \frac{y^2}{h^2} \right) \right] \Big|_{y=\pm h} \\ &= \pm \frac{dp}{dx} h = \mp \frac{2\mu u_{\max}}{h}\end{aligned}\quad \text{Ans. (a)}$$

The wall shear has the same magnitude at each wall, but by our sign convention of Fig. 4.3, the upper wall has negative shear stress.

**Part (b)**

Since the flow is plane, steady, and incompressible, a stream function exists:

$$u = \frac{\partial \psi}{\partial y} = u_{\max} \left( 1 - \frac{y^2}{h^2} \right) \quad v = -\frac{\partial \psi}{\partial x} = 0$$

Integrating and setting  $\psi = 0$  at the centerline for convenience, we obtain

$$\psi = u_{\max} \left( y - \frac{y^3}{3h^2} \right) \quad \text{Ans. (b)}$$

At the walls,  $y = \pm h$  and  $\psi = \pm 2u_{\max}h/3$ , respectively.

**Part (c)**

In plane flow, there is only a single nonzero vorticity component:

$$\zeta_z = (\text{curl } \mathbf{V})_z = \frac{\partial v}{\partial x} - \frac{\partial u}{\partial y} = \frac{2u_{\max}}{h^2} y \quad \text{Ans. (c)}$$

The vorticity is highest at the wall and is positive (counterclockwise) in the upper half and negative (clockwise) in the lower half of the fluid. Viscous flows are typically full of vorticity and are not at all irrotational.

**Part (d)**

From part (c), the vorticity is finite. Therefore the flow is not irrotational, and the velocity potential *does not exist*.  
Ans. (d)

**Part (e)**

The average velocity is defined as  $V_{\text{av}} = Q/A$ , where  $Q = \int u dA$  over the cross section. For our particular distribution  $u(y)$  from Eq. (4.134), we obtain

$$V_{\text{av}} = \frac{1}{A} \int u dA = \frac{1}{b(2h)} \int_{-h}^{+h} u_{\max} \left( 1 - \frac{y^2}{h^2} \right) b dy = \frac{2}{3} u_{\max} \quad \text{Ans. (e)}$$

In plane Poiseuille flow between parallel plates, the average velocity is two-thirds of the maximum (or centerline) value. This result could also have been obtained from the stream function derived in part (b). From Eq. (4.95),

$$Q_{\text{channel}} = \psi_{\text{upper}} - \psi_{\text{lower}} = \frac{2u_{\max}h}{3} - \left( -\frac{2u_{\max}h}{3} \right) = \frac{4}{3} u_{\max}h \text{ per unit width}$$

whence  $V_{\text{av}} = Q/A_{b=1} = (4u_{\max}h/3)/(2h) = 2u_{\max}/3$ , the same result.

This example illustrates a statement made earlier: Knowledge of the velocity vector  $\mathbf{V}$  [as in Eq. (4.134)] is essentially the *solution* to a fluid mechanics problem, since all other flow properties can then be calculated.

### Fully Developed Laminar Pipe Flow

Perhaps the most useful exact solution of the Navier-Stokes equation is for incompressible flow in a straight circular pipe of radius  $R$ , first studied experimentally by G. Hagen in 1839 and J. L. Poiseuille in 1840. By *fully developed* we mean that the region studied is far enough from the entrance that the flow is purely axial,  $v_z \neq 0$ , while  $v_r$  and  $v_\theta$  are zero. We neglect gravity and also assume axial symmetry—that is,  $\partial/\partial\theta = 0$ . The equation of continuity in cylindrical coordinates, Eq. (4.12b), reduces to

$$\frac{\partial}{\partial z}(v_z) = 0 \quad \text{or} \quad v_z = v_z(r) \quad \text{only}$$

The flow proceeds straight down the pipe without radial motion. The  $r$ -momentum equation in cylindrical coordinates, Eq. (D.5), simplifies to  $\partial p/\partial r = 0$ , or  $p = p(z)$  only. The  $z$ -momentum equation in cylindrical coordinates, Eq. (D.7), reduces to

$$\rho v_z \frac{\partial v_z}{\partial z} = -\frac{dp}{dz} + \mu \nabla^2 v_z = -\frac{dp}{dz} + \frac{\mu}{r} \frac{d}{dr} \left( r \frac{dv_z}{dr} \right)$$

The convective acceleration term on the left vanishes because of the previously given continuity equation. Thus the momentum equation may be rearranged as follows:

$$\frac{\mu}{r} \frac{d}{dr} \left( r \frac{dv_z}{dr} \right) = \frac{dp}{dz} = \text{const} < 0 \quad (4.136)$$

This is exactly the situation that occurred for flow between flat plates in Eq. (4.132). Again the “separation” constant is negative, and pipe flow will look much like the plate flow in Fig. 4.12b.

Equation (4.136) is linear and may be integrated twice, with the result

$$v_z = \frac{dp}{dz} \frac{r^2}{4\mu} + C_1 \ln(r) + C_2$$

where  $C_1$  and  $C_2$  are constants. The boundary conditions are no slip at the wall and finite velocity at the centerline:

$$\text{No slip at } r = R: \quad v_z = 0 = \frac{dp}{dz} \frac{R^2}{4\mu} + C_1 \ln(R) + C_2$$

$$\text{Finite velocity at } r = 0: \quad v_z = \text{finite} = 0 + C_1 \ln(0) + C_2$$

To avoid a logarithmic singularity, the centerline condition requires that  $C_1 = 0$ . Then, from no slip,  $C_2 = (-dp/dz)(R^2/4\mu)$ . The final, and famous, solution for fully developed *Hagen-Poiseuille flow* is

$$v_z = \left( -\frac{dp}{dz} \right) \frac{1}{4\mu} (R^2 - r^2) \quad (4.137)$$

The velocity profile is a paraboloid with a maximum at the centerline. Just as in Example 4.10, knowledge of the velocity distribution enables other parameters to be calculated:

$$\begin{aligned} V_{\max} &= v_z(r = 0) = \left(-\frac{dp}{dz}\right) \frac{R^2}{4\mu} \\ V_{\text{avg}} &= \frac{1}{A} \int v_z dA = \frac{1}{\pi R^2} \int_0^R V_{\max} \left(1 - \frac{r^2}{R^2}\right) 2\pi r dr = \frac{V_{\max}}{2} = \left(-\frac{dp}{dz}\right) \frac{R^2}{8\mu} \\ Q &= \int v_z dA = \int_0^R V_{\max} \left(1 - \frac{r^2}{R^2}\right) 2\pi r dr = \pi R^2 V_{\text{avg}} = \frac{\pi R^4}{8\mu} \left(-\frac{dp}{dz}\right) = \frac{\pi R^4 \Delta p}{8\mu L} \\ \tau_{\text{wall}} &= \mu \left| \frac{\partial v_z}{\partial r} \right|_{r=R} = \frac{4\mu V_{\text{avg}}}{R} = \frac{R}{2} \left(-\frac{dp}{dz}\right) = \frac{R \Delta p}{2 L} \end{aligned} \quad (4.138)$$

Note that we have substituted the equality  $(-dp/dz) = \Delta p/L$ , where  $\Delta p$  is the pressure drop along the entire length  $L$  of the pipe.

These formulas are valid as long as the flow is *laminar*—that is, when the dimensionless Reynolds number of the flow,  $Re_D = \rho V_{\text{avg}}(2R)/\mu$ , is less than about 2100. Note also that the formulas do not depend on density, the reason being that the convective acceleration of this flow is zero.

### EXAMPLE 4.11

SAE 10W oil at 20°C flows at  $1.1 \text{ m}^3/\text{h}$  through a horizontal pipe with  $d = 2 \text{ cm}$  and  $L = 12 \text{ m}$ . Find (a) the average velocity, (b) the Reynolds number, (c) the pressure drop, and (d) the power required.

#### Solution

- *Assumptions:* Laminar, steady, Hagen-Poiseuille pipe flow.
- *Approach:* The formulas of Eqs. (4.138) are appropriate for this problem. Note that  $R = 0.01 \text{ m}$ .
- *Property values:* From Table A.3 for SAE 10W oil,  $\rho = 870 \text{ kg/m}^3$  and  $\mu = 0.104 \text{ kg/(m-s)}$ .
- *Solution steps:* The average velocity follows easily from the flow rate and the pipe area:

$$V_{\text{avg}} = \frac{Q}{\pi R^2} = \frac{(1.1/3600) \text{ m}^3/\text{s}}{\pi(0.01 \text{ m})^2} = 0.973 \frac{\text{m}}{\text{s}} \quad \text{Ans. (a)}$$

We had to convert  $Q$  to  $\text{m}^3/\text{s}$ . The (diameter) Reynolds number follows from the average velocity:

$$Re_d = \frac{\rho V_{\text{avg}} d}{\mu} = \frac{(870 \text{ kg/m}^3)(0.973 \text{ m/s})(0.02 \text{ m})}{0.104 \text{ kg/(m-s)}} = 163 \quad \text{Ans. (b)}$$

This is less than the “transition” value of 2100; so the flow is indeed *laminar*, and the formulas are valid. The pressure drop is computed from the third of Eqs. (4.138):

$$Q = \frac{1.1 \text{ m}^3}{3600 \text{ s}} = \frac{\pi R^4 \Delta p}{8\mu L} = \frac{\pi(0.01 \text{ m})^4 \Delta p}{8(0.104 \text{ kg/(m-s)})(12 \text{ m})} \quad \text{solve for } \Delta p = 97,100 \text{ Pa} \quad \text{Ans. (c)}$$

When using SI units, the answer returns in pascals; no conversion factors are needed. Finally, the power required is the product of flow rate and pressure drop:

$$\text{Power} = Q\Delta p = \left( \frac{1.1}{3600} \text{ m}^3/\text{s} \right) (97,100 \text{ N/m}^2) = 29.7 \frac{\text{N}\cdot\text{m}}{\text{s}} = 29.7 \text{ W} \quad \text{Ans. (d)}$$

- *Comments:* Pipe flow problems are straightforward algebraic exercises if the data are compatible. Note again that SI units can be used in the formulas without conversion factors.

### Flow between Long Concentric Cylinders


Consider a fluid of constant ( $\rho, \mu$ ) between two concentric cylinders, as in Fig. 4.13. There is no axial motion or end effect  $v_z = \partial/\partial z = 0$ . Let the inner cylinder rotate at angular velocity  $\Omega_i$ . Let the outer cylinder be fixed. There is circular symmetry, so the velocity does not vary with  $\theta$  and varies only with  $r$ .

The continuity equation for this problem is Eq. (4.12b) with  $v_z = 0$ :

$$\frac{1}{r} \frac{\partial}{\partial r}(rv_r) + \frac{1}{r} \frac{\partial v_\theta}{\partial \theta} = 0 = \frac{1}{r} \frac{d}{dr}(rv_r) \quad \text{or} \quad rv_r = \text{const}$$

Note that  $v_\theta$  does not vary with  $\theta$ . Since  $v_r = 0$  at both the inner and outer cylinders, it follows that  $v_r = 0$  everywhere and the motion can only be purely circumferential,  $v_\theta = v_\theta(r)$ . The  $\theta$ -momentum equation (D.6) becomes

$$\rho(\mathbf{V} \cdot \nabla)v_\theta + \frac{\rho v_r v_\theta}{r} = -\frac{1}{r} \frac{\partial p}{\partial \theta} + \rho g_\theta + \mu \left( \nabla^2 v_\theta - \frac{v_\theta}{r^2} \right)$$

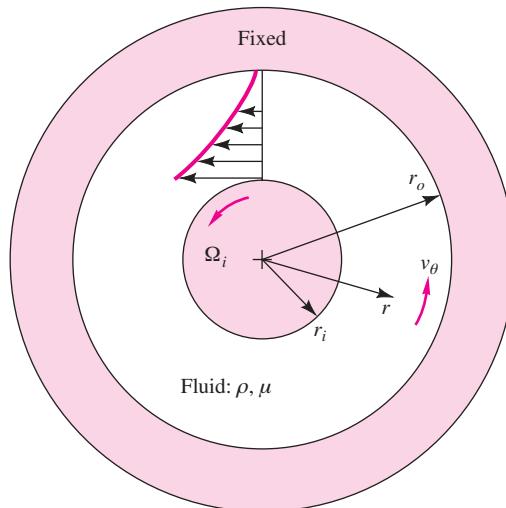

**Fig. 4.13** Coordinate system for incompressible viscous flow between a fixed outer cylinder and a steadily rotating inner cylinder.

For the conditions of the present problem, all terms are zero except the last. Therefore the basic differential equation for flow between rotating cylinders is

$$\nabla^2 v_\theta = \frac{1}{r} \frac{d}{dr} \left( r \frac{dv_\theta}{dr} \right) = \frac{v_\theta}{r^2} \quad (4.139)$$

This is a linear second-order ordinary differential equation with the solution

$$v_\theta = C_1 r + \frac{C_2}{r}$$

The constants are found by the no-slip condition at the inner and outer cylinders:

$$\text{Outer, at } r = r_o: \quad v_\theta = 0 = C_1 r_o + \frac{C_2}{r_o}$$

$$\text{Inner, at } r = r_i: \quad v_\theta = \Omega_i r_i = C_1 r_i + \frac{C_2}{r_i}$$

The final solution for the velocity distribution is

$$\text{Rotating inner cylinder: } v_\theta = \Omega_i r_i \frac{r_o/r - r/r_o}{r_o/r_i - r_i/r_o} \quad (4.140)$$

The velocity profile closely resembles the sketch in Fig. 4.13. Variations of this case, such as a rotating outer cylinder, are given in the problem assignments.

### Instability of Rotating Inner<sup>15</sup> Cylinder Flow


The classic *Couette flow* solution<sup>16</sup> of Eq. (4.140) describes a physically satisfying concave, two-dimensional, laminar flow velocity profile as in Fig. 4.13. The solution is mathematically exact for an incompressible fluid. However, it becomes unstable at a relatively low rate of rotation of the inner cylinder, as shown in 1923 in a classic paper by G. I. Taylor [17]. At a critical value of what is now called the dimensionless *Taylor number*, denoted  $\text{Ta}$ ,

$$\text{Ta}_{\text{crit}} = \frac{r_i(r_o - r_i)^3 \Omega_i^2}{\nu^2} \approx 1700 \quad (4.141)$$

the plane flow of Fig. 4.13 vanishes and is replaced by a laminar *three-dimensional* flow pattern consisting of rows of nearly square alternating toroidal vortices. An experimental demonstration of toroidal “Taylor vortices” is shown in Fig. 4.14a, measured at  $\text{Ta} \approx 1.16 \text{ Ta}_{\text{crit}}$  by Koschmieder [18]. At higher Taylor numbers, the vortices also develop a circumferential periodicity but are still laminar, as illustrated in Fig. 4.14b. At still higher  $\text{Ta}$ , turbulence ensues. This interesting instability reminds us that the Navier-Stokes equations, being nonlinear, do admit to multiple (nonunique) laminar solutions in addition to the usual instabilities associated with turbulence and chaotic dynamic systems.

<sup>15</sup>This section may be omitted without loss of continuity.

<sup>16</sup>Named after M. Couette, whose pioneering paper in 1890 established rotating cylinders as a method, still used today, for measuring the viscosity of fluids.

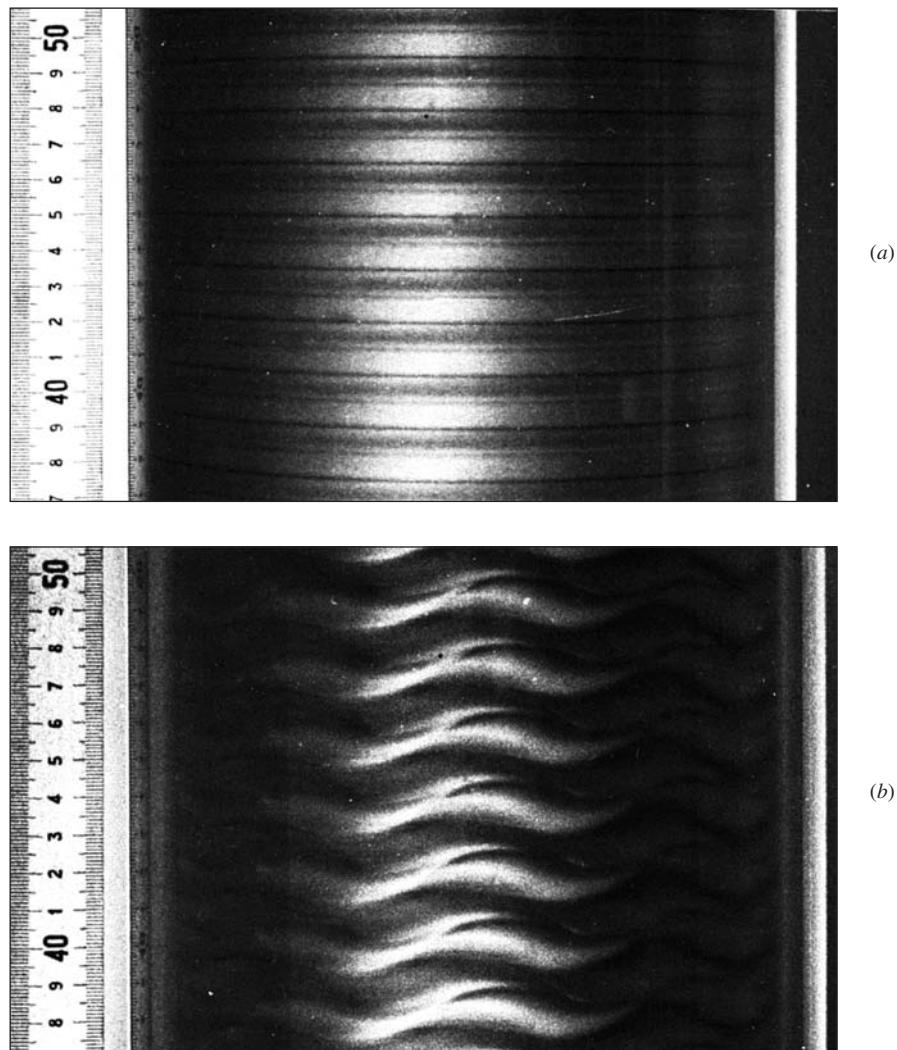

**Fig. 4.14** Experimental verification of the instability of flow between a fixed outer and a rotating inner cylinder. (a) Toroidal Taylor vortices exist at 1.16 times the critical speed; (b) at 8.5 times the critical speed, the vortices are doubly periodic. (*Courtesy of Cambridge University Press E.-L. Koschmieder, Turbulent Taylor Vortex Flow,"Journal of Fluid Mechanics, vol. 93, pt. 3, 1979, pp. 515-527.*) This instability does not occur if only the outer cylinder rotates.

## Summary

This chapter complements Chap. 3 by using an infinitesimal control volume to derive the basic partial differential equations of mass, momentum, and energy for a fluid. These equations, together with thermodynamic state relations for the fluid and appropriate boundary conditions, in principle can be solved for the complete flow field in any given fluid mechanics problem. Except for Chap. 9, in most of the problems to be studied here an incompressible fluid with constant viscosity is assumed.

In addition to deriving the basic equations of mass, momentum, and energy, this chapter introduced some supplementary ideas—the stream function, vorticity, irrotationality, and the velocity potential—which will be useful in coming chapters, especially Chap. 8. Temperature and density variations will be neglected except in Chap. 9, where compressibility is studied.

This chapter ended by discussing a few classical solutions for laminar viscous flows (Couette flow due to moving walls, Poiseuille duct flow due to pressure gradient, and flow between rotating cylinders). Whole books [4, 5, 9–11, 15] discuss classical approaches to fluid mechanics, and other texts [6, 12–14] extend these studies to the realm of continuum mechanics. This does not mean that all problems can be solved analytically. The new field of computational fluid dynamics [1] shows great promise of achieving approximate solutions to a wide variety of flow problems. In addition, when the geometry and boundary conditions are truly complex, experimentation (Chap. 5) is a preferred alternative.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon  will benefit from the use of the Engineering Equation Solver (EES), while problems with a computer icon  may require the use of a computer. The standard end-of-chapter problems P4.1 to P4.98 (categorized in the problem list here) are followed by word problems W4.1 to W4.10, fundamentals of engineering exam problems FE4.1 to FE4.6, and comprehensive problems C4.1 and C4.2.

### Problem Distribution

Section	Topic	Problems
4.1	The acceleration of a fluid	P4.1–P4.8
4.2	The continuity equation	P4.9–P4.25
4.3	Linear momentum: Navier-Stokes	P4.26–P4.38
4.4	Angular momentum: couple stresses	P4.39
4.5	The differential energy equation	P4.40–P4.41
4.6	Boundary conditions	P4.42–P4.46
4.7	Stream function	P4.47–P4.55
4.8 and 4.9	Velocity potential, vorticity	P4.56–P4.67
4.7 and 4.9	Stream function and velocity potential	P4.68–P4.78
4.10	Incompressible viscous flows	P4.79–P4.96
4.10	Slip flows	P4.97–P4.98

### The acceleration of a fluid

**P4.1** An idealized velocity field is given by the formula


$$\mathbf{V} = 4tx\mathbf{i} - 2t^2y\mathbf{j} + 4xz\mathbf{k}$$

Is this flow field steady or unsteady? Is it two- or three-dimensional? At the point  $(x, y, z) = (-1, 1, 0)$ , compute (a) the acceleration vector and (b) any unit vector normal to the acceleration.

**P4.2** Flow through the converging nozzle in Fig. P4.2 can be approximated by the one-dimensional velocity distribution

$$u \approx V_0 \left(1 + \frac{2x}{L}\right) \quad v \approx 0 \quad w \approx 0$$

(a) Find a general expression for the fluid acceleration in the nozzle. (b) For the specific case  $V_0 = 10 \text{ ft/s}$  and  $L = 6 \text{ in.}$ , compute the acceleration, in  $g$ 's, at the entrance and at the exit.

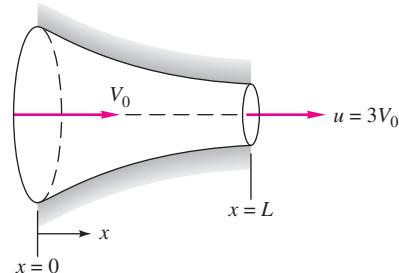

**P4.2**

**P4.3**

A two-dimensional velocity field is given by

$$\mathbf{V} = (x^2 - y^2 + x)\mathbf{i} - (2xy + y)\mathbf{j}$$

in arbitrary units. At  $(x, y) = (1, 2)$ , compute (a) the accelerations  $a_x$  and  $a_y$ , (b) the velocity component in the direction  $\theta = 40^\circ$ , (c) the direction of maximum velocity, and (d) the direction of maximum acceleration.

**P4.4**

A simple flow model for a two-dimensional converging nozzle is the distribution

$$u = U_0 \left(1 + \frac{x}{L}\right) \quad v = -U_0 \frac{y}{L} \quad w = 0$$

(a) Sketch a few streamlines in the region  $0 < x/L < 1$  and  $0 < y/L < 1$ , using the method of Section 1.11. (b) Find expressions for the horizontal and vertical accelerations. (c) Where is the largest resultant acceleration and its numerical value?

**P4.5**

The velocity field near a stagnation point (see Example 1.12) may be written in the form

$$u = \frac{U_0 x}{L} \quad v = -\frac{U_0 y}{L} \quad U_0 \text{ and } L \text{ are constants}$$


- (a) Show that the acceleration vector is purely radial.  
 (b) For the particular case  $L = 1.5 \text{ m}$ , if the acceleration at  $(x, y) = (1 \text{ m}, 1 \text{ m})$  is  $25 \text{ m/s}^2$ , what is the value of  $U_0$ ?

**P4.6** An incompressible plane flow has the velocity components  $u = 2y$ ,  $v = 8x$ ,  $w = 0$ . (a) Find the acceleration components. (b) Determine if the vector acceleration is radial. (c) Which two streamlines of this flow are straight lines?

**P4.7** Consider a sphere of radius  $R$  immersed in a uniform stream  $U_0$ , as shown in Fig. P4.7. According to the theory of Chap. 8, the fluid velocity along streamline  $AB$  is given by

$$\mathbf{V} = u\mathbf{i} = U_0 \left( 1 + \frac{R^3}{x^3} \right) \mathbf{i}$$


Find (a) the position of maximum fluid acceleration along  $AB$  and (b) the time required for a fluid particle to travel from  $A$  to  $B$ .

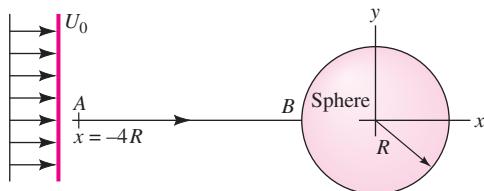**P4.7**

**P4.8** When a valve is opened, fluid flows in the expansion duct of Fig. P4.8 according to the approximation

$$\mathbf{V} = \mathbf{i}U \left( 1 - \frac{x}{2L} \right) \tanh \frac{Ut}{L}$$

Find (a) the fluid acceleration at  $(x, t) = (L, L/U)$  and (b) the time for which the fluid acceleration at  $x = L$  is zero. Why does the fluid acceleration become negative after condition (b)?

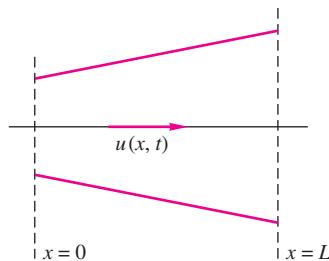**P4.8**

### The continuity equation

**P4.9** An idealized incompressible flow has the proposed three-dimensional velocity distribution

$$\mathbf{V} = 4xy^2\mathbf{i} + f(y)\mathbf{j} - zy^2\mathbf{k}$$

Find the appropriate form of the function  $f(y)$  that satisfies the continuity relation.

**P4.10** Consider the simple incompressible plane flow pattern  $u = U$ ,  $v = V$ , and  $w = 0$ , where  $U$  and  $V$  are constants. (a) Convert these velocities into polar coordinate components,  $v_r$ , and  $v_\theta$ . Hint: Make a sketch of the velocity components. (b) Determine whether these new components satisfy the continuity equation in polar coordinates.

**P4.11** Derive Eq. (4.12b) for cylindrical coordinates by considering the flux of an incompressible fluid in and out of the elemental control volume in Fig. 4.2.

**P4.12** Spherical polar coordinates  $(r, \theta, \phi)$  are defined in Fig. P4.12. The cartesian transformations are

$$x = r \sin \theta \cos \phi$$


$$y = r \sin \theta \sin \phi$$

$$z = r \cos \theta$$

Do not show that the cartesian incompressible continuity relation [Eq. (4.12a)] can be transformed to the spherical polar form

$$\frac{1}{r^2} \frac{\partial}{\partial r} (r^2 v_r) + \frac{1}{r \sin \theta} \frac{\partial}{\partial \theta} (v_\theta \sin \theta) + \frac{1}{r \sin \theta} \frac{\partial}{\partial \phi} (v_\phi) = 0$$

What is the most general form of  $v_r$  when the flow is purely radial—that is,  $v_\theta$  and  $v_\phi$  are zero?

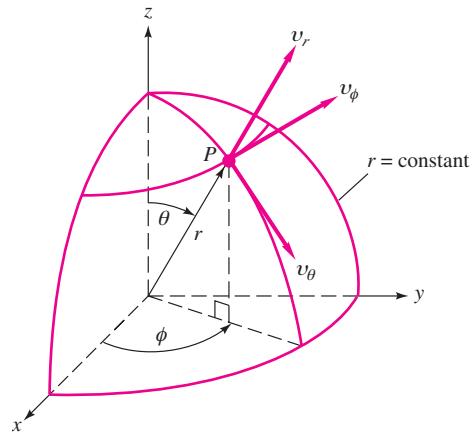**P4.12**

**P4.13** For an incompressible plane flow in polar coordinates, we are given

$$v_r = r^3 \cos \theta + r^2 \sin \theta$$

Find the appropriate form of circumferential velocity for which continuity is satisfied.

- P4.14** For incompressible polar coordinate flow, what is the most general form of a purely circulatory motion,  $v_\theta = v_\theta(r, \theta, t)$  and  $v_r = 0$ , that satisfies continuity?

- P4.15** What is the most general form of a purely radial polar coordinate incompressible flow pattern,  $v_r = v_r(r, \theta, t)$  and  $v_\theta = 0$ , that satisfies continuity?

- P4.16** Consider the plane polar coordinate velocity distribution

$$v_r = \frac{C}{r} \quad v_\theta = \frac{K}{r} \quad v_z = 0$$


where  $C$  and  $K$  are constants. (a) Determine if the equation of continuity is satisfied. (b) By sketching some velocity vector directions, plot a single streamline for  $C = K$ . What might this flow field simulate?

- P4.17** An excellent approximation for the two-dimensional incompressible laminar boundary layer on the flat surface in Fig. P4.17 is

$$u \approx U \left( 2 \frac{y}{\delta} - 2 \frac{y^3}{\delta^3} + \frac{y^4}{\delta^4} \right) \quad \text{for } y \leq \delta$$


where  $\delta = Cx^{1/2}$ ,  $C = \text{const}$

- (a) Assuming a no-slip condition at the wall, find an expression for the velocity component  $v(x, y)$  for  $y \leq \delta$ .  
 (b) Then find the maximum value of  $v$  at the station  $x = 1$  m, for the particular case of airflow, when  $U = 3$  m/s and  $\delta = 1.1$  cm.

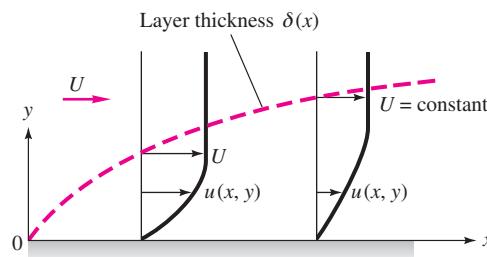

**P4.17**

- P4.18** A piston compresses gas in a cylinder by moving at constant speed  $V$ , as in Fig. P4.18. Let the gas density and

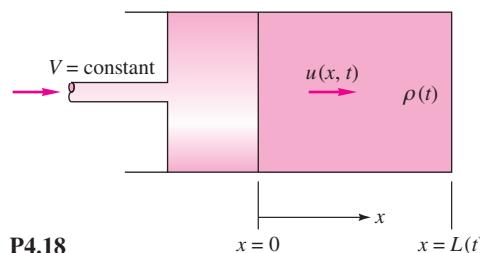


**P4.18**

length at  $t = 0$  be  $\rho_0$  and  $L_0$ , respectively. Let the gas velocity vary linearly from  $u = V$  at the piston face to  $u = 0$  at  $x = L$ . If the gas density varies only with time, find an expression for  $\rho(t)$ .

- P4.19** An incompressible flow field has the cylindrical components  $v_\theta = Cr$ ,  $v_z = K(R^2 - r^2)$ ,  $v_r = 0$ , where  $C$  and  $K$  are constants and  $r \leq R$ ,  $z \leq L$ . Does this flow satisfy continuity? What might it represent physically?

- P4.20** A two-dimensional incompressible velocity field has  $u = K(1 - e^{-ay})$ , for  $x \leq L$  and  $0 \leq y \leq \infty$ . What is the most general form of  $v(x, y)$  for which continuity is satisfied and  $v = v_0$  at  $y = 0$ ? What are the proper dimensions for constants  $K$  and  $a$ ?

- P4.21** Air flows under steady, approximately one-dimensional conditions through the conical nozzle in Fig. P4.21. If the speed of sound is approximately 340 m/s, what is the minimum nozzle-diameter ratio  $D_e/D_0$  for which we can safely neglect compressibility effects if  $V_0 = (a)$  10 m/s and (b) 30 m/s?

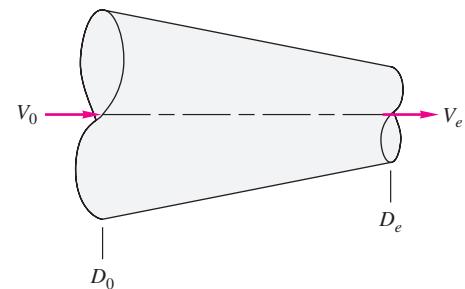

**P4.21**

- P4.22** In an *axisymmetric* flow, nothing varies with  $\theta$ , the only nonzero velocities are  $v_r$  and  $v_z$  (see Fig. 4.2). If the flow is steady and incompressible and  $v_z = Bz$ , where  $B$  is constant, find the most general form of  $v_r$  which satisfies continuity.

- P4.23** A tank volume  $\mathcal{V}$  contains gas at conditions  $(\rho_0, p_0, T_0)$ . At time  $t = 0$  it is punctured by a small hole of area  $A$ . According to the theory of Chap. 9, the mass flow out of such a hole is approximately proportional to  $A$  and to the tank pressure. If the tank temperature is assumed constant and the gas is ideal, find an expression for the variation of density within the tank.

- P4.24** For laminar flow between parallel plates (see Fig. 4.12b), the flow is two-dimensional ( $v \neq 0$ ) if the walls are porous. A special case solution is  $u = (A - Bx)(h^2 - y^2)$ , where  $A$  and  $B$  are constants. (a) Find a general formula for velocity  $v$  if  $v = 0$  at  $y = 0$ . (b) What is the value of the constant  $B$  if  $v_w$  at  $y = +h$ ?

- P4.25** An incompressible flow in polar coordinates is given by

$$v_r = K \cos \theta \left( 1 - \frac{b}{r^2} \right)$$

$$v_\theta = -K \sin \theta \left( 1 + \frac{b}{r^2} \right)$$

Does this field satisfy continuity? For consistency, what should the dimensions of constants  $K$  and  $b$  be? Sketch the surface where  $v_r = 0$  and interpret.


### Linear momentum: Navier-Stokes

- \*P4.26** Curvilinear, or streamline, coordinates are defined in Fig. P4.26, where  $n$  is normal to the streamline in the plane of the radius of curvature  $R$ . Euler's frictionless momentum equation (4.36) in streamline coordinates becomes

$$\frac{\partial V}{\partial t} + V \frac{\partial V}{\partial s} = -\frac{1}{\rho} \frac{\partial p}{\partial s} + g_s \quad (1)$$

$$-V \frac{\partial \theta}{\partial t} - \frac{V^2}{R} = -\frac{1}{\rho} \frac{\partial p}{\partial n} + g_n \quad (2)$$

Show that the integral of Eq. (1) with respect to  $s$  is none other than our old friend Bernoulli's equation (3.54).

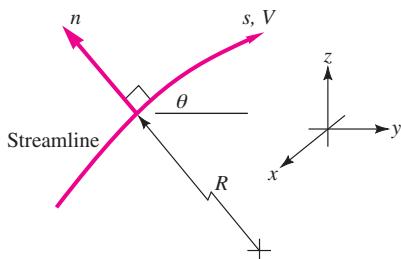

P4.26

- P4.27** A frictionless, incompressible steady flow field is given by

$$\mathbf{V} = 2xy\mathbf{i} - y^2\mathbf{j}$$

in arbitrary units. Let the density be  $\rho_0 = \text{constant}$  and neglect gravity. Find an expression for the pressure gradient in the  $x$  direction.


- P4.28** Consider the incompressible flow field of Prob. P4.6, with velocity components  $u = 2y$ ,  $v = 8x$ ,  $w = 0$ . Neglect gravity and assume constant viscosity. (a) Determine whether this flow satisfies the Navier-Stokes equations. (b) If so, find the pressure distribution  $p(x, y)$  if the pressure at the origin is  $p_o$ .

- P4.29** Consider a steady, two-dimensional, incompressible flow of a newtonian fluid in which the velocity field is known:  $u = -2xy$ ,  $v = y^2 - x^2$ ,  $w = 0$ . (a) Does this flow satisfy conservation of mass? (b) Find the pressure

field,  $p(x, y)$  if the pressure at the point  $(x = 0, y = 0)$  is equal to  $p_a$ .

- P4.30** For the velocity distribution of Prob. P4.4, determine if (a) the equation of continuity and (b) the Navier-Stokes equation are satisfied. (c) If the latter is true, find the pressure distribution  $p(x, y)$  when the pressure at the origin equals  $p_o$ .

- P4.31** According to potential theory (Chap. 8) for the flow approaching a rounded two-dimensional body, as in Fig. P4.31, the velocity approaching the stagnation point is given by  $u = U(1 - a^2/x^2)$ , where  $a$  is the nose radius and  $U$  is the velocity far upstream. Compute the value and position of the maximum viscous normal stress along this streamline.

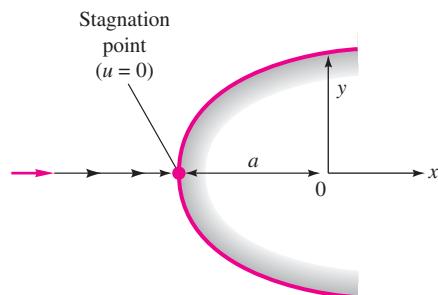


P4.31

Is this also the position of maximum fluid deceleration? Evaluate the maximum viscous normal stress if the fluid is SAE 30 oil at 20°C, with  $U = 2$  m/s and  $a = 6$  cm.

- P4.32** The answer to Prob. P4.14 is  $v_\theta = f(r)$  only. Do not reveal this to your friends if they are still working on Prob. P4.14. Show that this flow field is an exact solution to the Navier-Stokes equations (4.38) for only two special cases of the function  $f(r)$ . Neglect gravity. Interpret these two cases physically.

- P4.33** Consider incompressible flow at a volume rate  $Q$  toward a drain at the vertex of a  $45^\circ$  wedge of width  $b$ , as in Fig. P4.33. Neglect gravity and friction and assume purely radial inflow. (a) Find an expression for  $v_r(r)$ . (b) Show that the viscous term in the  $r$ -momentum equation is zero. (c) Find the pressure distribution  $p(r)$  if  $p = p_o$  at  $r = R$ .

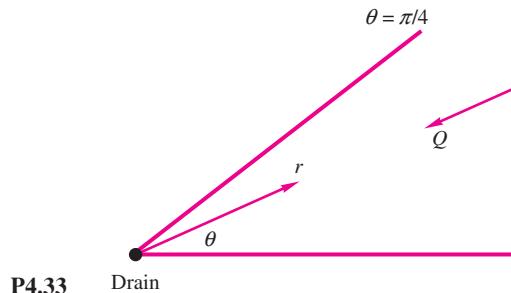


P4.33

- P4.34** A proposed three-dimensional incompressible flow field has the following vector form:

$$\mathbf{V} = Kx\mathbf{i} + Ky\mathbf{j} - Kz\mathbf{k}$$

(a) Determine if this field is a valid solution to continuity and Navier-Stokes. (b) If  $\mathbf{g} = -g\mathbf{k}$ , find the pressure field  $p(x, y, z)$ . (c) Is the flow irrotational?

- P4.35** From the Navier-Stokes equations for incompressible flow in polar coordinates (App. D for cylindrical coordinates), find the most general case of purely circulating motion  $v_\theta(r)$ ,  $v_r = v_z = 0$ , for flow with no slip between two fixed concentric cylinders, as in Fig. P4.35.

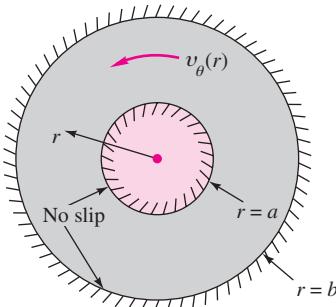


**P4.35**

- P4.36** A constant-thickness film of viscous liquid flows in laminar motion down a plate inclined at angle  $\theta$ , as in Fig. P4.36. The velocity profile is

$$u = Cy(2h - y) \quad v = w = 0$$


Find the constant  $C$  in terms of the specific weight and viscosity and the angle  $\theta$ . Find the volume flux  $Q$  per unit width in terms of these parameters.

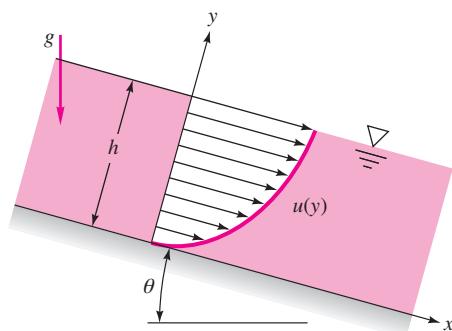

**P4.36**

- \*P4.37** A viscous liquid of constant  $\rho$  and  $\mu$  falls due to gravity between two plates a distance  $2h$  apart, as in Fig. P4.37. The flow is fully developed, with a single velocity component  $w = w(x)$ . There are no applied

pressure gradients, only gravity. Solve the Navier-Stokes equation for the velocity profile between the plates.

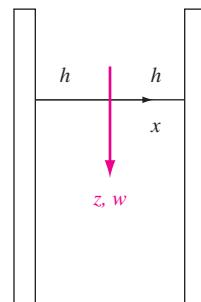

**P4.37**

- P4.38** Show that the incompressible flow distribution, in cylindrical coordinates,

$$v_r = 0 \quad v_\theta = Cr^n \quad v_z = 0$$

where  $C$  is a constant, (a) satisfies the Navier-Stokes equation for only two values of  $n$ . Neglect gravity. (b) Knowing that  $p = p(r)$  only, find the pressure distribution for each case, assuming that the pressure at  $r = R$  is  $p_0$ . What might these two cases represent?


### Angular momentum: couple stresses

- P4.39** Reconsider the angular momentum balance of Fig. 4.5 by adding a concentrated *body couple*  $C_z$  about the  $z$  axis [6]. Determine a relation between the body couple and shear stress for equilibrium. What are the proper dimensions for  $C_z$ ? (Body couples are important in continuous media with microstructure, such as granular materials.)

### The differential energy equation

- P4.40** For pressure-driven laminar flow between parallel plates (see Fig. 4.12b), the velocity components are  $u = U(1 - y^2/h^2)$ ,  $v = 0$ , and  $w = 0$ , where  $U$  is the centerline velocity. In the spirit of Ex. 4.6, find the temperature distribution  $T(y)$  for a constant wall temperature  $T_w$ .

- P4.41** As mentioned in Sec. 4.10, the velocity profile for laminar flow between two plates, as in Fig. P4.41, is

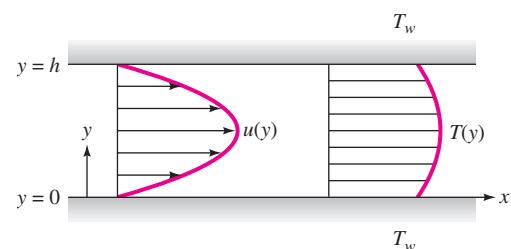

**P4.41**

$$u = \frac{4u_{\max}y(h-y)}{h^2} \quad v = w = 0$$

If the wall temperature is  $T_w$  at both walls, use the incompressible flow energy equation (4.75) to solve for the temperature distribution  $T(y)$  between the walls for steady flow.

### Boundary conditions

**P4.42** Suppose we wish to analyze the rotating, partly full cylinder of Fig. 2.23 as a *spin-up* problem, starting from rest and continuing until solid-body rotation is achieved. What are the appropriate boundary and initial conditions for this problem?

**P4.43** For the draining liquid film of Fig. P4.36, what are the appropriate boundary conditions (a) at the bottom  $y = 0$  and (b) at the surface  $y = h$ ?

**P4.44** Suppose that we wish to analyze the sudden pipe expansion flow of Fig. P3.59, using the full continuity and Navier-Stokes equations. What are the proper boundary conditions to handle this problem?

**P4.45** For the sluice gate problem of Example 3.10, list all the boundary conditions needed to solve this flow exactly by, say, Computational Fluid Dynamics.

**P4.46** Fluid from a large reservoir at temperature  $T_0$  flows into a circular pipe of radius  $R$ . The pipe walls are wound with an electric resistance coil that delivers heat to the fluid at a rate  $q_w$  (energy per unit wall area). If we wish to analyze this problem by using the full continuity, Navier-Stokes, and energy equations, what are the proper boundary conditions for the analysis?

### Stream function

**P4.47** A two-dimensional incompressible flow is given by the velocity field  $\mathbf{V} = 3yi + 2xj$ , in arbitrary units. Does this flow satisfy continuity? If so, find the stream function  $\psi(x, y)$  and plot a few streamlines, with arrows.

**P4.48** Consider the following two-dimensional incompressible flow, which clearly satisfies continuity:

$$u = U_0 = \text{constant}, \quad v = V_0 = \text{constant}$$

Find the stream function  $\psi(r, \theta)$  of this flow using *polar coordinates*.

**P4.49** Investigate the stream function  $\psi = K(x^2 - y^2)$ ,  $K = \text{constant}$ . Plot the streamlines in the full  $xy$  plane, find any stagnation points, and interpret what the flow could represent.

**P4.50** In 1851, George Stokes (of Navier-Stokes fame) solved the problem of steady incompressible low-Reynolds-number flow past a sphere, using *spherical polar coordinates*  $(r, \theta)$  [Ref. 5, page 168]. In these coordinates, the equation of continuity is

$$\frac{\partial}{\partial r}(r^2 v_r \sin \theta) + \frac{\partial}{\partial \theta}(r v_\theta \sin \theta) = 0$$


- (a) Does a stream function exist for these coordinates?  
(b) If so, find its form.

**P4.51**

The velocity profile for pressure-driven laminar flow between parallel plates (see Fig. 4.12b) has the form  $u = C(h^2 - y^2)$ , where  $C$  is a constant. (a) Determine if a stream function exists. (b) If so, find a formula for the stream function.

**P4.52**

A two-dimensional, incompressible, frictionless fluid is guided by wedge-shaped walls into a small slot at the origin, as in Fig. P4.52. The width into the paper is  $b$ ,

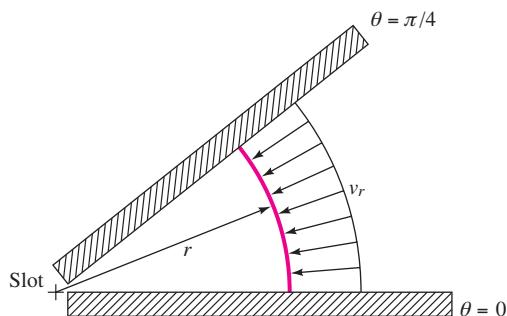

**P4.52**

and the volume flow rate is  $Q$ . At any given distance  $r$  from the slot, the flow is radial inward, with constant velocity. Find an expression for the polar coordinate stream function of this flow.

**P4.53** For the fully developed laminar pipe flow solution of Eq. (4.137), find the axisymmetric stream function  $\psi(r, z)$ . Use this result to determine the average velocity  $V = Q/A$  in the pipe as a ratio of  $u_{\max}$ .

**P4.54** An incompressible stream function is defined by

$$\psi(x, y) = \frac{U}{L^2} (3x^2y - y^3)$$

where  $U$  and  $L$  are (positive) constants. Where in this chapter are the streamlines of this flow plotted? Use this stream function to find the volume flow  $Q$  passing through the rectangular surface whose corners are defined by  $(x, y, z) = (2L, 0, 0), (2L, 0, b), (0, L, b)$ , and  $(0, L, 0)$ . Show the direction of  $Q$ .

**P4.55** For the incompressible plane flow of Prob. P4.6, with velocity components  $u = 2y, v = 8x, w = 0$ , determine (a) if a stream function exists. (b) If so, determine the form of the stream function, and (c) plot a few representative streamlines.

### Velocity potential, vorticity

- P4.56** Investigate the velocity potential  $\phi = Kxy$ ,  $K = \text{constant}$ . Sketch the potential lines in the full  $xy$  plane, find any stagnation points, and sketch in by eye the orthogonal streamlines. What could the flow represent?
- P4.57** A two-dimensional incompressible flow field is defined by the velocity components

$$u = 2V\left(\frac{x}{L} - \frac{y}{L}\right) \quad v = -2V\frac{y}{L}$$

where  $V$  and  $L$  are constants. If they exist, find the stream function and velocity potential.


- P4.58** Show that the incompressible velocity potential in plane polar coordinates  $\phi(r, \theta)$  is such that

$$v_r = \frac{\partial \phi}{\partial r} \quad v_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta}$$

Finally show that  $\phi$  as defined here satisfies Laplace's equation in polar coordinates for incompressible flow.

- P4.59** Consider the two-dimensional incompressible velocity potential  $\phi = xy + x^2 - y^2$ . (a) Is it true that  $\nabla^2 \phi = 0$ , and, if so, what does this mean? (b) If it exists, find the stream function  $\psi(x, y)$  of this flow. (c) Find the equation of the streamline that passes through  $(x, y) = (2, 1)$ .

- P4.60** Liquid drains from a small hole in a tank, as shown in Fig. P4.60, such that the velocity field set up is given by  $v_r \approx 0$ ,  $v_z \approx 0$ ,  $v_\theta = KR^2/r$ , where  $z = H$  is the depth of the water far from the hole. Is this flow pattern rotational or irrotational? Find the depth  $z_C$  of the water at the radius  $r = R$ .

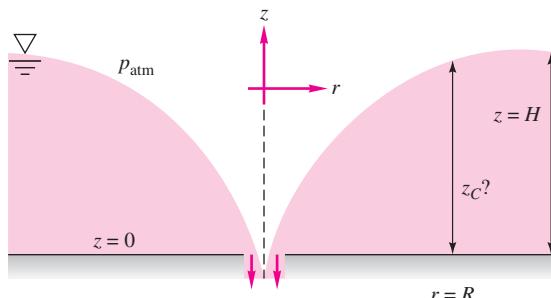

**P4.60**

- P4.61** For the incompressible plane flow of Prob. P4.6, with velocity components  $u = 2y$ ,  $v = 8x$ ,  $w = 0$ , determine (a) if a velocity potential exists, (b) If so, determine the form of the velocity potential, and (c) plot a few representative potential lines.

- P4.62** Show that the linear Couette flow between plates in Fig. 1.6 has a stream function but no velocity potential. Why is this so?

- P4.63** Find the two-dimensional velocity potential  $\phi(r, \theta)$  for the polar coordinate flow pattern  $v_r = Q/r$ ,  $v_\theta = K/r$ , where  $Q$  and  $K$  are constants.

- P4.64** Show that the velocity potential  $\phi(r, z)$  in axisymmetric cylindrical coordinates (see Fig. 4.2) is defined such that

$$v_r = \frac{\partial \phi}{\partial r} \quad v_z = \frac{\partial \phi}{\partial z}$$

Further show that for incompressible flow this potential satisfies Laplace's equation in  $(r, z)$  coordinates.

- P4.65** A two-dimensional incompressible flow is defined by

$$u = -\frac{Ky}{x^2 + y^2} \quad v = \frac{Kx}{x^2 + y^2}$$

where  $K = \text{constant}$ . Is this flow irrotational? If so, find its velocity potential, sketch a few potential lines, and interpret the flow pattern.

- P4.66** A plane polar coordinate velocity potential is defined by

$$\phi = \frac{K \cos \theta}{r} \quad K = \text{const}$$

Find the stream function for this flow, sketch some streamlines and potential lines, and interpret the flow pattern.

- P4.67** A stream function for a plane, irrotational, polar coordinate flow is

$$\psi = C\theta - K \ln r \quad C \text{ and } K = \text{const}$$

Find the velocity potential for this flow. Sketch some streamlines and potential lines, and interpret the flow pattern.

### Stream function and velocity potential

- P4.68** For the velocity distribution of Prob. P4.4, (a) determine if a velocity potential exists, and (b), if it does, find an expression for  $\phi(x, y)$  and sketch the potential line which passes through the point  $(x, y) = (L/2, L/2)$ .


- P4.69** A steady, two-dimensional flow has the following polar-coordinate velocity potential:

$$\phi = C r \cos \theta + K \ln r$$

where  $C$  and  $K$  are constants. Determine the stream function  $\psi(r, \theta)$  for this flow. For extra credit, let  $C$  be a velocity scale  $U$  and let  $K = UL$ , sketch what the flow might represent.

- P4.70** A CFD model of steady two-dimensional incompressible flow has printed out the values of stream function  $\psi(x, y)$ , in  $\text{m}^2/\text{s}$ , at each of the four corners of a small

10-cm-by-10-cm cell, as shown in Fig. P4.70. Use these numbers to estimate the resultant velocity in the center of the cell and its angle  $\alpha$  with respect to the  $x$  axis.

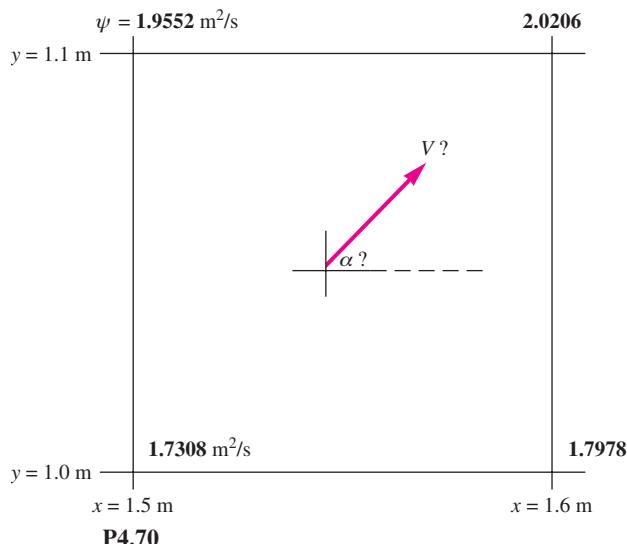


- P4.71** Consider the following two-dimensional function  $f(x, y)$ :

$$f = Ax^3 + Bxy^2 + Cx^2 + D \quad \text{where } A > 0$$


- (a) Under what conditions, if any, on  $(A, B, C, D)$  can this function be a steady plane-flow velocity potential?  
 (b) If you find a  $\phi(x, y)$  to satisfy part (a), also find the associated stream function  $\psi(x, y)$ , if any, for this flow.

- P4.72** Water flows through a two-dimensional narrowing wedge at 9.96 gal/min per meter of width into the paper (Fig. P4.72). If this inward flow is purely radial, find an expression, in SI units, for (a) the stream function and (b) the velocity potential of the flow. Assume one-dimensional flow. The included angle of the wedge is  $45^\circ$ .

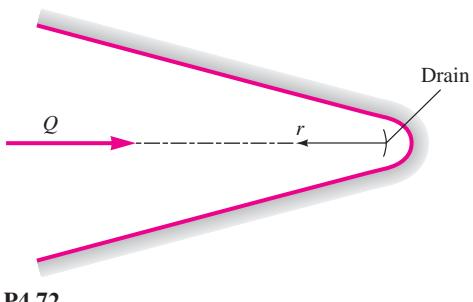

- P4.73** A CFD model of steady two-dimensional incompressible flow has printed out the values of velocity potential  $\phi(x, y)$ , in  $\text{m}^2/\text{s}$ , at each of the four corners of a small

10-cm-by-10-cm cell, as shown in Fig. P4.73. Use these numbers to estimate the resultant velocity in the center of the cell and its angle  $\alpha$  with respect to the  $x$  axis.

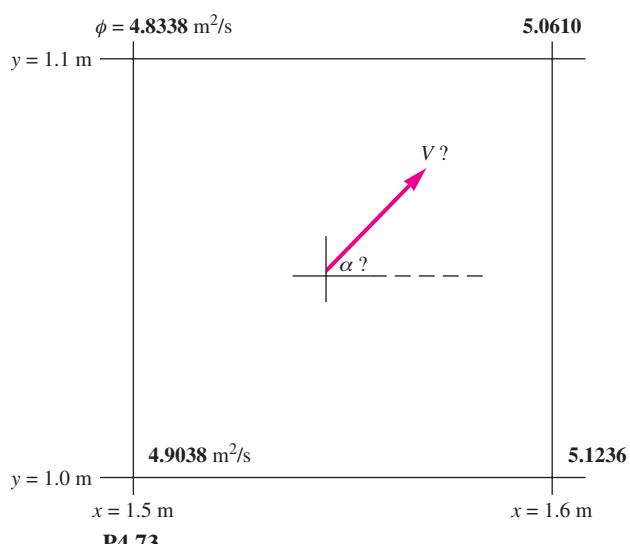

- P4.74** Consider the two-dimensional incompressible polar-coordinate velocity potential

$$\phi = Br \cos\theta + BL\theta$$

where  $B$  is a constant and  $L$  is a constant length scale.

- (a) What are the dimensions of  $B$ ? (b) Locate the only stagnation point in this flow field. (c) Prove that a stream function exists and then find the function  $\psi(r, \theta)$ .

- P4.75** Given the following steady *axisymmetric* stream function:

$$\psi = \frac{B}{2} \left( r^2 - \frac{r^4}{2R^2} \right) \quad \text{where } B \text{ and } R \text{ are constants}$$

valid in the region  $0 \leq r \leq R$  and  $0 \leq z \leq L$ . (a) What are the dimensions of the constant  $B$ ? (b) Show whether this flow possesses a velocity potential, and, if so, find it. (c) What might this flow represent? Hint: Examine the axial velocity  $v_z$ .

- \*P4.76** A two-dimensional incompressible flow has the velocity potential

$$\phi = K(x^2 - y^2) + C \ln(x^2 + y^2)$$

where  $K$  and  $C$  are constants. In this discussion, avoid the origin, which is a singularity (infinite velocity). (a) Find the sole stagnation point of this flow, which is somewhere in the upper half plane. (b) Prove that a stream function exists, and then find  $\psi(x, y)$ , using the hint that  $\int dx/(a^2 + x^2) = (1/a)\tan^{-1}(x/a)$ .

- P4.77** Outside an inner, intense-activity circle of radius  $R$ , a tropical storm can be simulated by a polar-coordinate velocity potential  $\phi(r, \theta) = U_o R \theta$ , where  $U_o$  is the wind velocity at radius  $R$ . (a) Determine the velocity components outside  $r = R$ . (b) If, at  $R = 25$  mi, the velocity is 100 mi/h and the pressure 99 kPa, calculate the velocity and pressure at  $r = 100$  mi.
- P4.78** An incompressible, irrotational, two-dimensional flow has the following stream function in polar coordinates:


$$\psi = A r^n \sin(n\theta) \quad \text{where } A \text{ and } n \text{ are constants.}$$

Find an expression for the velocity potential of this flow.

### Incompressible viscous flows

- \*P4.79** Study the combined effect of the two viscous flows in Fig. 4.12. That is, find  $u(y)$  when the upper plate moves at speed  $V$  and there is also a constant pressure gradient  $(dp/dx)$ . Is superposition possible? If so, explain why. Plot representative velocity profiles for (a) zero, (b) positive, and (c) negative pressure gradients for the same upper-wall speed  $V$ .


- \*P4.80** Oil, of density  $\rho$  and viscosity  $\mu$ , drains steadily down the side of a vertical plate, as in Fig. P4.80. After a development region near the top of the plate, the oil film will become independent of  $z$  and of constant thickness  $\delta$ . Assume that  $w = w(x)$  only and that the atmosphere offers no shear resistance to the surface of the film. (a) Solve the Navier-Stokes equation for  $w(x)$ , and sketch its approximate shape. (b) Suppose that film thickness  $\delta$  and the slope of the velocity profile at the wall  $[\partial w/\partial x]_{\text{wall}}$  are measured with a laser-Doppler anemometer (Chap. 6). Find an expression for oil viscosity  $\mu$  as a function of  $(\rho, \delta, g, [\partial w/\partial x]_{\text{wall}})$ .

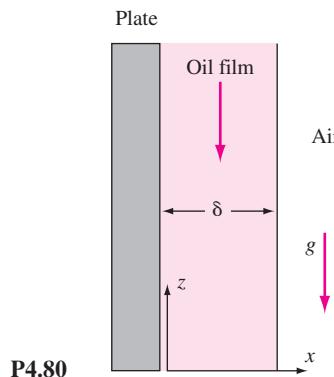

- P4.81** Modify the analysis of Fig. 4.13 to find the velocity  $u_\theta$  when the inner cylinder is fixed and the outer cylinder rotates at angular velocity  $\Omega_0$ . May this solution be

added to Eq. (4.140) to represent the flow caused when both inner and outer cylinders rotate? Explain your conclusion.


- \*P4.82** A solid circular cylinder of radius  $R$  rotates at angular velocity  $\Omega$  in a viscous incompressible fluid that is at rest far from the cylinder, as in Fig. P4.82. Make simplifying assumptions and derive the governing differential equation and boundary conditions for the velocity field  $v_\theta$  in the fluid. Do not solve unless you are obsessed with this problem. What is the steady-state flow field for this problem?

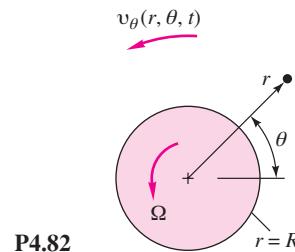


- P4.83** The flow pattern in bearing lubrication can be illustrated by Fig. P4.83, where a viscous oil ( $\rho, \mu$ ) is forced into the gap  $h(x)$  between a fixed slipper block and a wall moving at velocity  $U$ . If the gap is thin,  $h \ll L$ , it can be shown that the pressure and velocity distributions are of the form  $p = p(x)$ ,  $u = u(y)$ ,  $v = w = 0$ . Neglecting gravity, reduce the Navier-Stokes equations (4.38) to a single differential equation for  $u(y)$ . What are the proper boundary conditions? Integrate and show that

$$u = \frac{1}{2\mu} \frac{dp}{dx} (y^2 - yh) + U \left( 1 - \frac{y}{h} \right)$$

where  $h = h(x)$  may be an arbitrary, slowly varying gap width. (For further information on lubrication theory, see Ref. 16.)

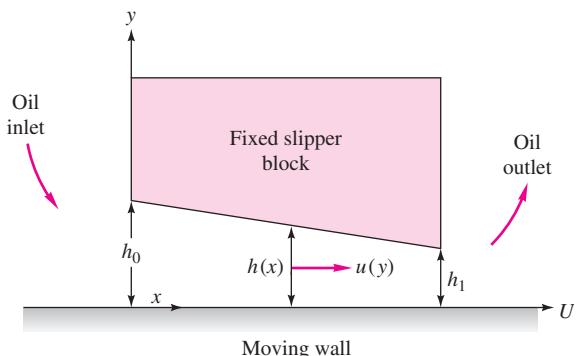


**\*P4.84** Consider a viscous film of liquid draining uniformly down the side of a vertical rod of radius  $a$ , as in Fig. P4.84. At some distance down the rod the film will approach a terminal or *fully developed* draining flow of constant outer radius  $b$ , with  $v_z = v_z(r)$ ,  $v_\theta = v_r = 0$ . Assume that the atmosphere offers no shear resistance to the film motion. Derive a differential equation for  $v_z$ , state the proper boundary conditions, and solve for the film velocity distribution. How does the film radius  $b$  relate to the total film volume flow rate  $Q$ ?

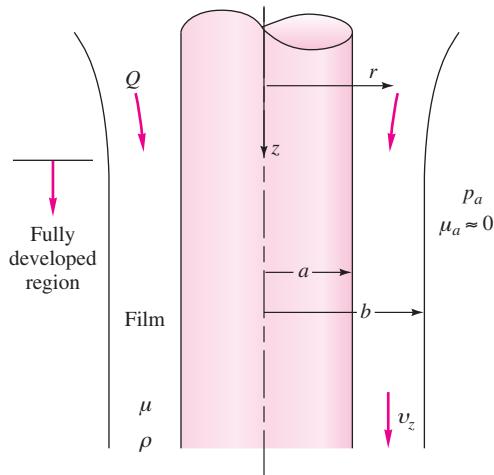

P4.84


**P4.85** A flat plate of essentially infinite width and breadth oscillates sinusoidally in its own plane beneath a viscous fluid, as in Fig. P4.85. The fluid is at rest far above the plate. Making as many simplifying assumptions as you can, set up the governing differential equation and boundary conditions for finding the velocity field  $u$  in the fluid. Do not solve (if you *can* solve it immediately, you might be able to get exempted from the balance of this course with credit).

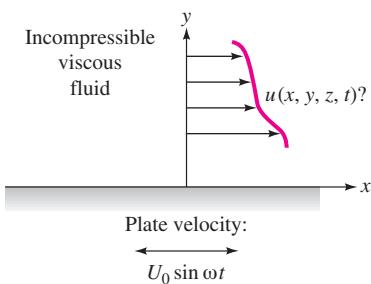

P4.85


**EES** **P4.86** SAE 10 oil at 20°C flows between parallel plates 8 mm apart, as in Fig. P4.86. A mercury manometer, with wall

pressure taps 1 m apart, registers a 6-cm height, as shown. Estimate the flow rate of oil for this condition.

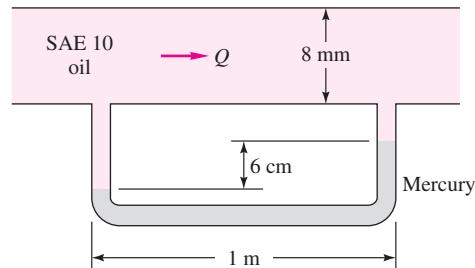

P4.86


**P4.87** SAE 30W oil at 20°C flows through the 9-cm-diameter pipe in Fig. P4.87 at an average velocity of 4.3 m/s.

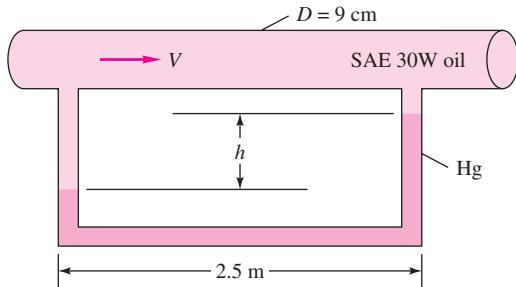

P4.87

(a) Verify that the flow is laminar. (b) Determine the volume flow rate in  $\text{m}^3/\text{h}$ . (c) Calculate the expected reading  $h$  of the mercury manometer, in cm.

**P4.88** The viscous oil in Fig. P4.88 is set into steady motion by a concentric inner cylinder moving axially at velocity  $U$  inside a fixed outer cylinder. Assuming constant pressure and density and a purely axial fluid motion, solve Eqs. (4.38) for the fluid velocity distribution  $v_z(r)$ . What are the proper boundary conditions?

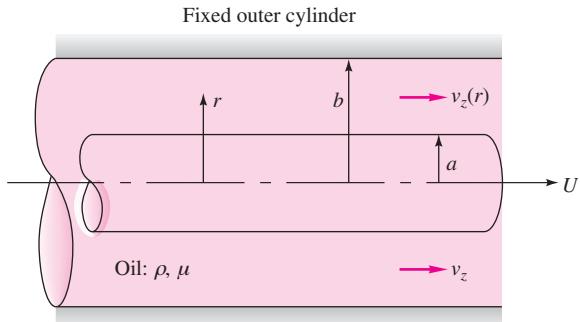

P4.88

- \*P4.89** Modify Prob. P4.88 so that the outer cylinder also moves to the *left* at constant speed  $V$ . Find the velocity distribution  $v_z(r)$ . For what ratio  $V/U$  will the wall shear stress be the same at both cylinder surfaces?


- P4.90** It is desired to pump ethanol at 20°C through 25 m of straight smooth tubing under laminar-flow conditions,  $\text{Re}_d = \rho V d / \mu < 2300$ . The available pressure drop is 10 kPa. (a) What is the maximum possible mass flow, in kg/h? (b) What is the appropriate diameter?

- \*P4.91** Consider two-dimensional, incompressible, steady Couette flow (flow between two infinite parallel plates with the upper plate moving at constant speed and the lower plate stationary, as in Fig. 4.12a). Let the fluid be *nonnewtonian*, with its viscous stresses given by

$$\begin{aligned}\tau_{xx} &= a\left(\frac{\partial u}{\partial x}\right)^c & \tau_{yy} &= a\left(\frac{\partial v}{\partial y}\right)^c & \tau_{zz} &= a\left(\frac{\partial w}{\partial z}\right)^c \\ \tau_{xy} = \tau_{yx} &= \frac{1}{2}a\left(\frac{\partial u}{\partial y} + \frac{\partial v}{\partial x}\right)^c & \tau_{xz} = \tau_{zx} &= \frac{1}{2}a\left(\frac{\partial u}{\partial z} + \frac{\partial w}{\partial x}\right)^c \\ \tau_{yz} = \tau_{zy} &= \frac{1}{2}a\left(\frac{\partial v}{\partial z} + \frac{\partial w}{\partial y}\right)^c\end{aligned}$$

where  $a$  and  $c$  are constants of the fluid. Make all the same assumptions as in the derivation of Eq. (4.131). (a) Find the velocity profile  $u(y)$ . (b) How does the velocity profile for this case compare to that of a newtonian fluid?


- P4.92** A tank of area  $A_0$  is draining in laminar flow through a pipe of diameter  $D$  and length  $L$ , as shown in Fig. P4.92. Neglecting the exit jet kinetic energy and assuming the pipe flow is driven by the hydrostatic pressure at its entrance, derive a formula for the tank level  $h(t)$  if its initial level is  $h_0$ .

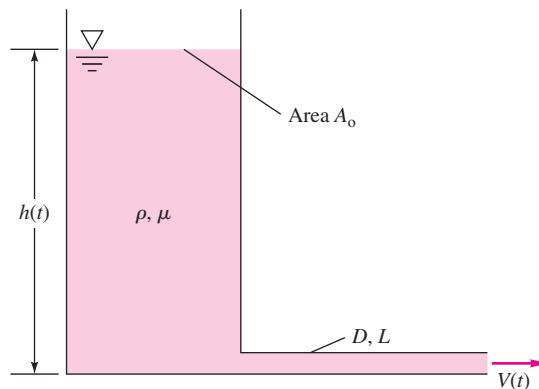

P4.92


- P4.93** A number of straight 25-cm-long microtubes of diameter  $d$  are bundled together into a “honeycomb” whose total cross-sectional area is 0.0006 m<sup>2</sup>. The pressure drop from entrance to exit is 1.5 kPa. It is desired that the total volume flow rate be 5 m<sup>3</sup>/h of water at 20°C. (a) What is the appropriate microtube diameter? (b) How many microtubes are in the bundle? (c) What is the Reynolds number of each microtube?

- P4.94** A long solid cylinder rotates steadily in a very viscous fluid, as in Fig. P4.94. Assuming laminar flow, solve the Navier-Stokes equation in polar coordinates to determine the resulting velocity distribution. The fluid is at rest far from the cylinder. [Hint: the cylinder does not induce any radial motion.]

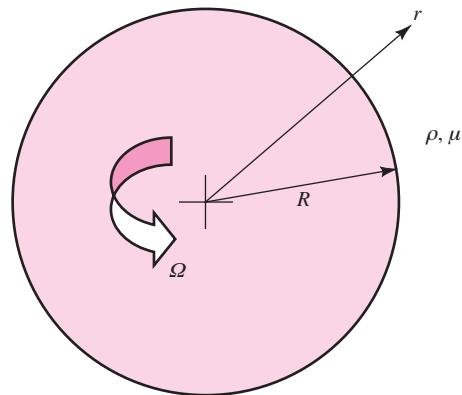

P4.94

- \*P4.95** Two immiscible liquids of equal thickness  $h$  are being sheared between a fixed and a moving plate, as in Fig. P4.95. Gravity is neglected, and there is no variation with  $x$ . Find an expression for (a) the velocity at the interface and (b) the shear stress in each fluid. Assume steady laminar flow.

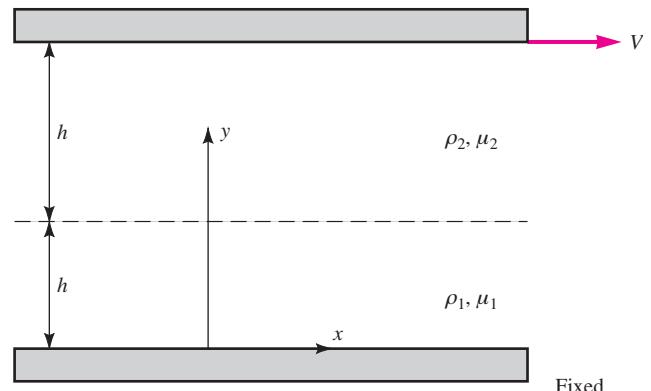

P4.95

- P4.96** Reconsider Prob. P1.44 and calculate (a) the inner shear stress and (b) the power required, if the exact laminar-flow formula, Eq. (4.140) is used. (c) Determine whether this flow pattern is stable. Hint: The shear stress in  $(r, \theta)$  coordinates is *not* like plane flow.

### Slip flows

- P4.97** For the pressure-gradient flow between two parallel plates of Fig. 4.12(b), reanalyze for the case of *slip fw* at both walls. Use the simple slip condition  $u_{\text{wall}} = \ell (du/dy)_{\text{wall}}$ , where  $\ell$  is the mean free path of the fluid.

### Word Problems

- W4.1** The total acceleration of a fluid particle is given by Eq. (4.2) in the eulerian system, where  $\mathbf{V}$  is a known function of space and time. Explain how we might evaluate particle acceleration in the lagrangian frame, where particle position  $\mathbf{r}$  is a known function of time and initial position,  $\mathbf{r} = \text{fcn}(\mathbf{r}_0, t)$ . Can you give an illustrative example?
- W4.2** Is it true that the continuity relation, Eq. (4.6), is valid for both viscous and inviscid, newtonian and nonnewtonian, compressible and incompressible flow? If so, are there *any* limitations on this equation?
- W4.3** Consider a CD (compact disc) rotating at angular velocity  $\Omega$ . Does it have *vorticity* in the sense of this chapter? If so, how much vorticity?
- W4.4** How much acceleration can fluids endure? Are fluids like astronauts, who feel that  $5g$  is severe? Perhaps use the flow pattern of Example 4.8, at  $r = R$ , to make some estimates of fluid acceleration magnitudes.
- W4.5** State the conditions (there are more than one) under which the analysis of temperature distribution in a flow field can be completely uncoupled, so that a separate analysis for velocity and pressure is possible. Can we do this for both laminar and turbulent flow?

### Fundamentals of Engineering Exam Problems

This chapter is not a favorite of the people who prepare the FE Exam. Probably not a single problem from this chapter will appear on the exam, but if some did, they might be like these.

- FE4.1** Given the steady, incompressible velocity distribution  $\mathbf{V} = 3x\mathbf{i} + Cy\mathbf{j} + 0\mathbf{k}$ , where  $C$  is a constant, if conservation of mass is satisfied, the value of  $C$  should be  
 (a) 3, (b) 3/2, (c) 0, (d) -3/2, (e) -3
- FE4.2** Given the steady velocity distribution  $\mathbf{V} = 3x\mathbf{i} + 0\mathbf{j} + Cy\mathbf{k}$ , where  $C$  is a constant, if the flow is irrotational, the value of  $C$  should be  
 (a) 3, (b) 3/2, (c) 0, (d) -3/2, (e) -3

- (a) Sketch the expected velocity profile. (b) Find an expression for the shear stress at each wall. (c) Find the volume flow between the plates.

- P4.98** For the pressure-gradient flow in a circular tube, in Sect. 4.10, reanalyze for the case of *slip fw* at the wall. Use the simple slip condition  $v_{z,\text{wall}} = \ell (dv_z/dr)_{\text{wall}}$ , where  $\ell$  is the mean free path of the fluid. (a) Sketch the expected velocity profile. (b) Find an expression for the shear stress at the wall. (c) Find the volume flow through the tube.

- W4.6** Consider liquid flow over a dam or weir. How might the boundary conditions and the flow pattern change when we compare water flow over a large prototype to SAE 30 oil flow over a tiny scale model?
- W4.7** What is the difference between the stream function  $\psi$  and our method of finding the streamlines from Sec. 1.11? Or are they essentially the same?
- W4.8** Under what conditions do both the stream function  $\psi$  and the velocity potential  $\phi$  exist for a flow field? When does one exist but not the other?
- W4.9** How might the remarkable three-dimensional Taylor instability of Fig. 4.14 be predicted? Discuss a general procedure for examining the stability of a given flow pattern.
- W4.10** Consider an irrotational, incompressible, axisymmetric ( $\partial/\partial\theta = 0$ ) flow in  $(r, z)$  coordinates. Does a stream function exist? If so, does it satisfy Laplace's equation? Are lines of constant  $\psi$  equal to the flow streamlines? Does a velocity potential exist? If so, does it satisfy Laplace's equation? Are lines of constant  $\phi$  everywhere perpendicular to the  $\psi$  lines?

- FE4.3** Given the steady, incompressible velocity distribution  $\mathbf{V} = 3x\mathbf{i} + Cy\mathbf{j} + 0\mathbf{k}$ , where  $C$  is a constant, the shear stress  $\tau_{xy}$  at the point  $(x, y, z)$  is given by  
 (a)  $3\mu$ , (b)  $(3x + Cy)\mu$ , (c) 0, (d)  $C\mu$ ,  
 (e)  $(3 + C)\mu$
- FE4.4** Given the steady incompressible velocity distribution  $u = Ax$ ,  $v = By$ , and  $w = Cxy$ , where  $(A, B, C)$  are constants. This flow satisfies the equation of continuity if  $A$  equals  
 (a)  $B$ , (b)  $B + C$ , (c)  $B - C$ , (d)  $-B$ ,  
 (e)  $-(B + C)$

- FE4.5** For the velocity field in Prob. FE4.4, the convective acceleration in the  $x$  direction is  
 (a)  $Ax^2$ , (b)  $A^2x$ , (c)  $B^2y$ , (d)  $By^2$ , (e)  $Cx^2y$
- FE4.6** If, for laminar flow in a smooth straight tube, the tube diameter and length both double, while everything else


remains the same, the volume flow rate will increase by a factor of  
 (a) 2, (b) 4, (c) 8, (d) 12, (e) 16

## Comprehensive Problems


- C4.1** In a certain medical application, water at room temperature and pressure flows through a rectangular channel of length  $L = 10$  cm, width  $s = 1.0$  cm, and gap thickness  $b = 0.30$  mm as in Fig. C4.1. The volume flow rate is sinusoidal with amplitude  $\hat{Q} = 0.50$  mL/s and frequency  $f = 20$  Hz, i.e.,  $Q = \hat{Q} \sin(2\pi ft)$ .

(a) Calculate the maximum Reynolds number ( $Re = Vb/\nu$ ) based on maximum average velocity and gap thickness. Channel flow like this remains laminar for  $Re$  less than about 2000. If  $Re$  is greater than about 2000, the flow will be turbulent. Is this flow laminar or turbulent? (b) In this problem, the frequency is low enough that at any given time, the flow can be solved as if it were steady at the given flow rate. (This is called a *quasi-steady assumption*.) At any arbitrary instant of time, find an expression for streamwise velocity  $u$  as a function of  $y$ ,  $\mu$ ,  $dp/dx$ , and  $b$ , where  $dp/dx$  is the pressure gradient required to push the flow through the channel at volume flow rate  $Q$ . In addition, estimate the maximum magnitude of velocity component  $u$ . (c) At any instant of time, find a relationship between volume flow rate  $Q$  and pressure gradient  $dp/dx$ . Your answer should be given as an expression for  $Q$  as a function of  $dp/dx$ ,  $s$ ,  $b$ , and viscosity  $\mu$ . (d) Estimate the wall shear stress,  $\tau_w$  as a function of  $\hat{Q}$ ,  $f$ ,  $\mu$ ,  $b$ ,  $s$ , and time ( $t$ ). (e) Finally, for the numbers given in the problem statement, estimate the amplitude of the wall shear stress,  $\hat{\tau}_w$ , in  $N/m^2$ .

- C4.2** A belt moves upward at velocity  $V$ , dragging a film of viscous liquid of thickness  $h$ , as in Fig. C4.2. Near the belt, the film moves upward due to no slip. At its outer edge, the film moves downward due to gravity. Assuming that the only nonzero velocity is  $v(x)$ , with zero shear stress at the outer film edge, derive a formula for (a)  $v(x)$ , (b) the average velocity  $V_{avg}$  in the film, and (c) the velocity  $V_c$  for which there is no net flow either up or down. (d) Sketch  $v(x)$  for case (c).

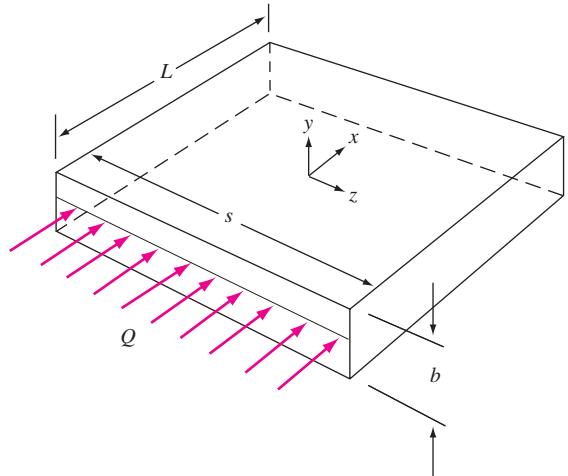

C4.1

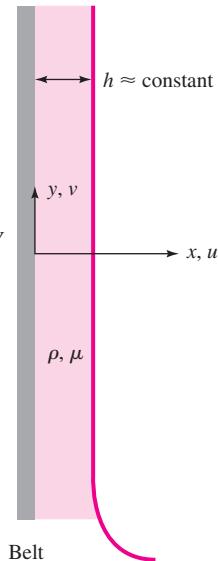


C4.2 Belt

## References

1. J. D. Anderson, *Computational Fluid Dynamics: The Basics with Applications*, McGraw-Hill, New York, 1995.
2. C. E. Brennen, *Fundamentals of Multiphase Flow*, Cambridge University Press, New York, 2005. See also URL <<http://caltechbook.library.caltech.edu/51/01/multiph.htm>>
3. S. M. Selby, *CRC Handbook of Tables for Mathematics*, 4th ed., CRC Press Inc., Cleveland, OH, 1976.
4. H. Schlichting et al., *Boundary Layer Theory*, Springer, New York, 2000.
5. F. M. White, *Viscous Fluid Flow*, 3d ed., McGraw-Hill, New York, 2005.
6. J. N. Reddy, *An Introduction to Continuum Mechanics*, Cambridge University Press, New York, 2007.
7. J. P. Holman, *Heat Transfer*, 10th ed., McGraw-Hill, New York, 2005.
8. W. M. Kays and M. E. Crawford, *Convective Heat and Mass Transfer*, 4th ed., McGraw-Hill, New York, 2004.
9. G. K. Batchelor, *An Introduction to Fluid Dynamics*, Cambridge University Press, Cambridge, England, 1967.
10. L. Prandtl and O. G. Tietjens, *Fundamentals of Hydro-and Aeromechanics*, Dover, New York, 1957.
11. R. Aris, *Vectors, Tensors, and the Basic Equations of Fluid Mechanics*, Dover, New York, 1989.
12. O. Gonzalez and A. M. Stuart, *A First Course in Continuum Mechanics*, Cambridge University Press, New York, 2008.
13. D. A. Danielson, *Vectors and Tensors in Engineering and Physics*, 2d ed., Westview (Perseus) Press, Boulder, CO, 2003.
14. R. I. Tanner, *Engineering Rheology*, 2d ed., Oxford University Press, New York, 2000.
15. H. Lamb, *Hydrodynamics*, 6th ed., Dover, New York, 1945.
16. M. M. Khonsari and E. R. Booser, *Applied Tribology: Bearing Design and Lubrication*, Wiley, New York, 2008.
17. G. I. Taylor, “Stability of a Viscous Liquid Contained between Two Rotating Cylinders,” *Philos. Trans. Roy. Soc. London Ser. A*, vol. 223, 1923, pp. 289–343.
18. E. L. Koschmieder, “Turbulent Taylor Vortex Flow,” *J. Fluid Mech.*, vol. 93, pt. 3, 1979, pp. 515–527.
19. M. T. Nair, T. K. Sengupta, and U. S. Chauhan, “Flow Past Rotating Cylinders at High Reynolds Numbers Using Higher Order Upwind Scheme,” *Computers and Fluids*, vol. 27, no. 1, 1998, pp. 47–70.
20. M. Constanceau and C. Menard, “Influence of Rotation on the Near-Wake Development behind an Impulsively Started Circular Cylinder,” *J. Fluid Mechanics*, vol. 1258, 1985, pp. 399–446.

*This page intentionally left blank*

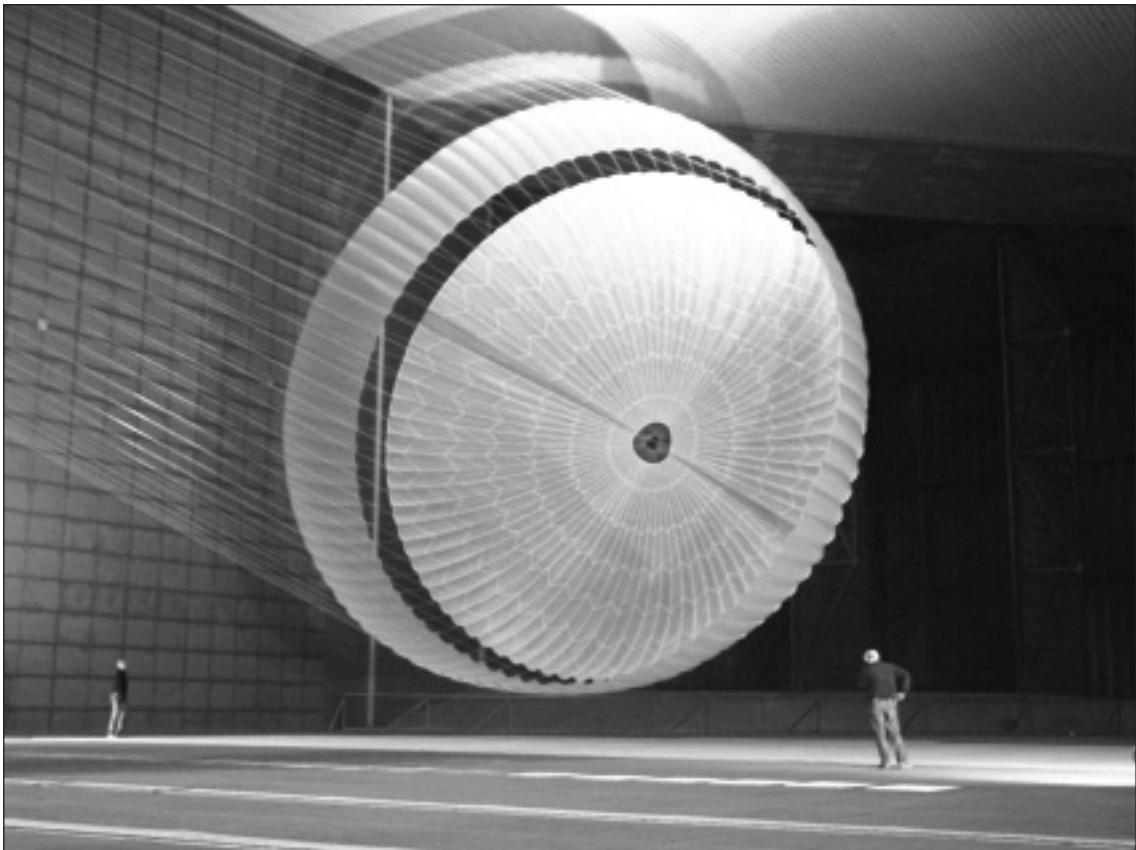

Two engineers are dwarfed by a full-scale parachute being tested in 2007 at the NASA Ames Research Center in Moffett Field, California. The wind tunnel, 80 ft high and 120 ft wide, is the largest such facility in the world. The parachute, 55 ft in diameter, is intended to help land an analytical roving laboratory on Mars in 2010. It has 80 suspension lines and is the largest disk-gap-band type parachute [41] ever built. It was designed by Pioneer Aerospace of South Windsor, Connecticut and can withstand loads in excess of 80,000 lbf. (*Photo courtesy of NASA/JPL-Caltech.*)

# Chapter 5

## Dimensional Analysis and Similarity

**Motivation.** In this chapter we discuss the planning, presentation, and interpretation of experimental data. We shall try to convince you that such data are best presented in *dimensionless* form. Experiments that might result in tables of output, or even multiple volumes of tables, might be reduced to a single set of curves—or even a single curve—when suitably nondimensionalized. The technique for doing this is *dimensional analysis*. It is also effective in theoretical studies.

Chapter 3 presented large-scale control volume balances of mass, momentum, and energy, which led to global results: mass flow, force, torque, total work done, or heat transfer. Chapter 4 presented infinitesimal balances that led to the basic partial differential equations of fluid flow and some particular solutions for both inviscid and viscous (laminar) flow. These straight *analytical* techniques are limited to simple geometries and uniform boundary conditions. Only a fraction of engineering flow problems can be solved by direct analytical formulas.

Most practical fluid flow problems are too complex, both geometrically and physically, to be solved analytically. They must be tested by experiment or approximated by computational fluid dynamics (CFD) [2]. These results are typically reported as experimental or numerical data points and smoothed curves. Such data have much more generality if they are expressed in compact, economic form. This is the motivation for dimensional analysis. The technique is a mainstay of fluid mechanics and is also widely used in all engineering fields plus the physical, biological, medical, and social sciences. The present chapter shows how dimensional analysis improves the presentation of both data and theory.

### 5.1 Introduction

Basically, dimensional analysis is a method for reducing the number and complexity of experimental variables that affect a given physical phenomenon, by using a sort of compacting technique. If a phenomenon depends on  $n$  dimensional variables, dimensional analysis will reduce the problem to only  $k$  *dimensionless* variables, where the reduction  $n - k = 1, 2, 3$ , or 4, depending on the problem complexity. Generally

$n - k$  equals the number of different dimensions (sometimes called basic or primary or fundamental dimensions) that govern the problem. In fluid mechanics, the four basic dimensions are usually taken to be mass  $M$ , length  $L$ , time  $T$ , and temperature  $\Theta$ , or an  $MLT\Theta$  system for short. Alternatively, one uses an  $FLT\Theta$  system, with force  $F$  replacing mass.

Although its purpose is to reduce variables and group them in dimensionless form, dimensional analysis has several side benefits. The first is enormous savings in time and money. Suppose one knew that the force  $F$  on a particular body shape immersed in a stream of fluid depended only on the body length  $L$ , stream velocity  $V$ , fluid density  $\rho$ , and fluid viscosity  $\mu$ ; that is,

$$F = f(L, V, \rho, \mu) \quad (5.1)$$

Suppose further that the geometry and flow conditions are so complicated that our integral theories (Chap. 3) and differential equations (Chap. 4) fail to yield the solution for the force. Then we must find the function  $f(L, V, \rho, \mu)$  experimentally or numerically.

Generally speaking, it takes about 10 points to define a curve. To find the effect of body length in Eq. (5.1), we have to run the experiment for 10 lengths  $L$ . For each  $L$  we need 10 values of  $V$ , 10 values of  $\rho$ , and 10 values of  $\mu$ , making a grand total of  $10^4$ , or 10,000, experiments. At \$100 per experiment—well, you see what we are getting into. However, with dimensional analysis, we can immediately reduce Eq. (5.1) to the equivalent form

$$\frac{F}{\rho V^2 L^2} = g\left(\frac{\rho VL}{\mu}\right) \quad (5.2)$$

or

$$C_F = g(\text{Re})$$

That is, the dimensionless *force coefficient*  $F / (\rho V^2 L^2)$  is a function only of the dimensionless *Reynolds number*  $\rho VL / \mu$ . We shall learn exactly how to make this reduction in Secs. 5.2 and 5.3.

Note that Eq. (5.2) is just an *example*, not the full story, of forces caused by fluid flows. Some fluid forces have a very weak or negligible Reynolds number dependence in wide regions (Fig. 5.3a). Other groups may also be important. The force coefficient may depend, in high-speed gas flow, on the *Mach number*,  $\text{Ma} = V/a$ , where  $a$  is the speed of sound. In free-surface flows, such as ship drag,  $C_F$  may depend upon *Froude number*,  $\text{Fr} = V^2/(gL)$ , where  $g$  is the acceleration of gravity. In turbulent flow, force may depend upon the *roughness ratio*,  $\epsilon/L$ , where  $\epsilon$  is the roughness height of the surface.

The function  $g$  is different mathematically from the original function  $f$ , but it contains all the same information. Nothing is lost in a dimensional analysis. And think of the savings: We can establish  $g$  by running the experiment for only 10 values of the single variable called the Reynolds number. We do not have to vary  $L$ ,  $V$ ,  $\rho$ , or  $\mu$  separately but only the grouping  $\rho VL / \mu$ . This we do merely by varying velocity  $V$  in, say, a wind tunnel or drop test or water channel, and there is no need to build 10 different bodies or find 100 different fluids with 10 densities and 10 viscosities. The cost is now about \$1000, maybe less.

A second side benefit of dimensional analysis is that it helps our thinking and planning for an experiment or theory. It suggests dimensionless ways of writing equations before we spend money on computer analysis to find solutions. It suggests variables

that can be discarded; sometimes dimensional analysis will immediately reject variables, and at other times it groups them off to the side, where a few simple tests will show them to be unimportant. Finally, dimensional analysis will often give a great deal of insight into the form of the physical relationship we are trying to study.

A third benefit is that dimensional analysis provides *scaling laws* that can convert data from a cheap, small *model* to design information for an expensive, large *prototype*. We do not build a million-dollar airplane and see whether it has enough lift force. We measure the lift on a small model and use a scaling law to predict the lift on the full-scale prototype airplane. There are rules we shall explain for finding scaling laws. When the scaling law is valid, we say that a condition of *similarity* exists between the model and the prototype. In the simple case of Eq. (5.1), similarity is achieved if the Reynolds number is the same for the model and prototype because the function  $g$  then requires the force coefficient to be the same also:

$$\text{If } \text{Re}_m = \text{Re}_p \text{ then } C_{Fm} = C_{Fp} \quad (5.3)$$

where subscripts  $m$  and  $p$  mean model and prototype, respectively. From the definition of force coefficient, this means that

$$\frac{F_p}{F_m} = \frac{\rho_p}{\rho_m} \left( \frac{V_p}{V_m} \right)^2 \left( \frac{L_p}{L_m} \right)^2 \quad (5.4)$$

for data taken where  $\rho_p V_p L_p / \mu_p = \rho_m V_m L_m / \mu_m$ . Equation (5.4) is a scaling law: If you measure the model force at the model Reynolds number, the prototype force at the same Reynolds number equals the model force times the density ratio times the velocity ratio squared times the length ratio squared. We shall give more examples later.

Do you understand these introductory explanations? Be careful; learning dimensional analysis is like learning to play tennis: There are levels of the game. We can establish some ground rules and do some fairly good work in this brief chapter, but dimensional analysis in the broad view has many subtleties and nuances that only time, practice, and maturity enable you to master. Although dimensional analysis has a firm physical and mathematical foundation, considerable art and skill are needed to use it effectively.

### EXAMPLE 5.1

A copepod is a water crustacean approximately 1 mm in diameter. We want to know the drag force on the copepod when it moves slowly in fresh water. A scale model 100 times larger is made and tested in glycerin at  $V = 30$  cm/s. The measured drag on the model is 1.3 N. For similar conditions, what are the velocity and drag of the actual copepod in water? Assume that Eq. (5.2) applies and the temperature is 20°C.

### Solution

- *Property values:* From Table A.3, the densities and viscosities at 20°C are

$$\text{Water (prototype): } \mu_p = 0.001 \text{ kg/(m-s)} \quad \rho_p = 998 \text{ kg/m}^3$$

$$\text{Glycerin (model): } \mu_m = 1.5 \text{ kg/(m-s)} \quad \rho_m = 1263 \text{ kg/m}^3$$

- *Assumptions:* Equation (5.2) is appropriate and *similarity* is achieved; that is, the model and prototype have the same Reynolds number and, therefore, the same force coefficient.

- **Approach:** The length scales are  $L_m = 100 \text{ mm}$  and  $L_p = 1 \text{ mm}$ . Calculate the Reynolds number and force coefficient of the model and set them equal to prototype values:

$$\text{Re}_m = \frac{\rho_m V_m L_m}{\mu_m} = \frac{(1263 \text{ kg/m}^3)(0.3 \text{ m/s})(0.1 \text{ m})}{1.5 \text{ kg/(m-s)}} = 25.3 = \text{Re}_p = \frac{(998 \text{ kg/m}^3)V_p(0.001 \text{ m})}{0.001 \text{ kg/(m-s)}}$$

Solve for  $V_p = 0.0253 \text{ m/s} = 2.53 \text{ cm/s}$  Ans.

In like manner, using the prototype velocity just found, equate the force coefficients:

$$C_{Fm} = \frac{F_m}{\rho_m V_m^2 L_m^2} = \frac{1.3 \text{ N}}{(1263 \text{ kg/m}^3)(0.3 \text{ m/s})^2(0.1 \text{ m})^2} = 1.14$$

$$= C_{Fp} = \frac{F_p}{(998 \text{ kg/m}^3)(0.0253 \text{ m/s})^2(0.001 \text{ m})^2}$$

Solve for  $F_p = 7.3 \times 10^{-7} \text{ N}$  Ans.

- **Comments:** Assuming we modeled the Reynolds number correctly, the model test is a very good idea, as it would obviously be difficult to measure such a tiny copepod drag force.

Historically, the first person to write extensively about units and dimensional reasoning in physical relations was Euler in 1765. Euler's ideas were far ahead of his time, as were those of Joseph Fourier, whose 1822 book *Analytical Theory of Heat* outlined what is now called the *principle of dimensional homogeneity* and even developed some similarity rules for heat flow. There were no further significant advances until Lord Rayleigh's book in 1877, *Theory of Sound*, which proposed a "method of dimensions" and gave several examples of dimensional analysis. The final breakthrough that established the method as we know it today is generally credited to E. Buckingham in 1914 [1], whose paper outlined what is now called the *Buckingham Pi Theorem* for describing dimensionless parameters (see Sec. 5.3). However, it is now known that a Frenchman, A. Vaschy, in 1892 and a Russian, D. Riabouchinsky, in 1911 had independently published papers reporting results equivalent to the pi theorem. Following Buckingham's paper, P. W. Bridgeman published a classic book in 1922 [3], outlining the general theory of dimensional analysis.

Dimensional analysis is so valuable and subtle, with both skill and art involved, that it has spawned a wide variety of textbooks and treatises. The writer is aware of more than 30 books on the subject, of which his engineering favorites are listed here [3–10]. Dimensional analysis is not confined to fluid mechanics, or even to engineering. Specialized books have been published on the application of dimensional analysis to metrology [11], astrophysics [12], economics [13], chemistry [14], hydrology [15], medications [16], clinical medicine [17], chemical processing pilot plants [18], social sciences [19], biomedical sciences [20], pharmacy [21], fractal geometry [22], and even the growth of plants [23]. Clearly this is a subject well worth learning for many career paths.

## 5.2 The Principle of Dimensional Homogeneity

In making the remarkable jump from the five-variable Eq. (5.1) to the two-variable Eq. (5.2), we were exploiting a rule that is almost a self-evident axiom in physics. This rule, the *principle of dimensional homogeneity* (PDH), can be stated as follows:

If an equation truly expresses a proper relationship between variables in a physical process, it will be *dimensionally homogeneous*; that is, each of its additive terms will have the same dimensions.

All the equations that are derived from the theory of mechanics are of this form. For example, consider the relation that expresses the displacement of a falling body:

$$S = S_0 + V_0 t + \frac{1}{2} g t^2 \quad (5.5)$$

Each term in this equation is a displacement, or length, and has dimensions  $\{L\}$ . The equation is dimensionally homogeneous. Note also that any consistent set of units can be used to calculate a result.

Consider Bernoulli's equation for incompressible flow:

$$\frac{p}{\rho} + \frac{1}{2} V^2 + gz = \text{const} \quad (5.6)$$

Each term, including the constant, has dimensions of velocity squared, or  $\{L^2 T^{-2}\}$ . The equation is dimensionally homogeneous and gives proper results for any consistent set of units.

Students count on dimensional homogeneity and use it to check themselves when they cannot quite remember an equation during an exam. For example, which is it:

$$S = \frac{1}{2} g t^2? \quad \text{or} \quad S = \frac{1}{2} g^2 t? \quad (5.7)$$

By checking the dimensions, we reject the second form and back up our faulty memory. We are exploiting the principle of dimensional homogeneity, and this chapter simply exploits it further.

## Variables and Constants

Equations (5.5) and (5.6) also illustrate some other factors that often enter into a dimensional analysis:

*Dimensional variables* are the quantities that actually vary during a given case and would be plotted against each other to show the data. In Eq. (5.5), they are  $S$  and  $t$ ; in Eq. (5.6) they are  $p$ ,  $V$ , and  $z$ . All have dimensions, and all can be nondimensionalized as a dimensional analysis technique.

*Dimensional constants* may vary from case to case but are held constant during a given run. In Eq. (5.5) they are  $S_0$ ,  $V_0$ , and  $g$ , and in Eq. (5.6) they are  $\rho$ ,  $g$ , and  $C$ . They all have dimensions and conceivably could be nondimensionalized, but they are normally used to help nondimensionalize the variables in the problem.

*Pure constants* have no dimensions and never did. They arise from mathematical manipulations. In both Eqs. (5.5) and (5.6) they are  $\frac{1}{2}$  and the exponent 2, both of which came from an integration:  $\int t dt = \frac{1}{2}t^2$ ,  $\int V dV = \frac{1}{2}V^2$ . Other common dimensionless constants are  $\pi$  and  $e$ . Also, the argument of any mathematical function, such as  $\ln$ ,  $\exp$ ,  $\cos$ , or  $J_0$ , is dimensionless.

*Angles and revolutions* are dimensionless. The preferred unit for an angle is the radian, which makes it clear that an angle is a ratio. In like manner, a revolution is  $2\pi$  radians.

*Counting numbers* are dimensionless. For example, if we triple the energy  $E$  to  $3E$ , the coefficient 3 is dimensionless.

Note that integration and differentiation of an equation may change the dimensions but not the homogeneity of the equation. For example, integrate or differentiate Eq. (5.5):

$$\int S \, dt = S_0 t + \frac{1}{2} V_0 t^2 + \frac{1}{6} g t^3 \quad (5.8a)$$

$$\frac{dS}{dt} = V_0 + gt \quad (5.8b)$$

In the integrated form (5.8a) every term has dimensions of  $\{LT\}$ , while in the derivative form (5.8b) every term is a velocity  $\{LT^{-1}\}$ .

Finally, some physical variables are naturally dimensionless by virtue of their definition as ratios of dimensional quantities. Some examples are strain (change in length per unit length), Poisson's ratio (ratio of transverse strain to longitudinal strain), and specific gravity (ratio of density to standard water density).

The motive behind dimensional analysis is that any dimensionally homogeneous equation can be written in an entirely equivalent nondimensional form that is more compact. Usually there are multiple methods of presenting one's dimensionless data or theory. Let us illustrate these concepts more thoroughly by using the falling-body relation (5.5) as an example.

### Ambiguity: The Choice of Variables and Scaling Parameters<sup>1</sup>

Equation (5.5) is familiar and simple, yet illustrates most of the concepts of dimensional analysis. It contains five terms ( $S$ ,  $S_0$ ,  $V_0$ ,  $t$ ,  $g$ ), which we may divide, in our thinking, into variables and parameters. The *variables* are the things we wish to plot, the basic output of the experiment or theory: in this case,  $S$  versus  $t$ . The *parameters* are those quantities whose effect on the variables we wish to know: in this case  $S_0$ ,  $V_0$ , and  $g$ . Almost any engineering study can be subdivided in this manner.

To nondimensionalize our results, we need to know how many dimensions are contained among our variables and parameters: in this case, only two, length  $\{L\}$  and time  $\{T\}$ . Check each term to verify this:

$$\{S\} = \{S_0\} = \{L\} \quad \{t\} = \{T\} \quad \{V_0\} = \{LT^{-1}\} \quad \{g\} = \{LT^{-2}\}$$

Among our parameters, we therefore select two to be *scaling parameters* (also called *repeating variables*), used to define dimensionless variables. What remains will be the "basic" parameter(s) whose effect we wish to show in our plot. These choices will not affect the content of our data, only the form of their presentation. Clearly there is ambiguity in these choices, something that often vexes the beginning experimenter. But the ambiguity is deliberate. Its purpose is to show a particular effect, and the choice is yours to make.

For the falling-body problem, we select any two of the three parameters to be scaling parameters. Thus we have three options. Let us discuss and display them in turn.

<sup>1</sup>I am indebted to Prof. Jacques Lewalle of Syracuse University for suggesting, outlining, and clarifying this entire discussion.

**Option 1:** Scaling parameters  $S_0$  and  $V_0$ : the effect of gravity  $g$ .

First use the scaling parameters  $(S_0, V_0)$  to define dimensionless (\*) displacement and time. There is only one suitable definition for each:<sup>2</sup>

$$S^* = \frac{S}{S_0} \quad t^* = \frac{V_0 t}{S_0} \quad (5.9)$$

Substitute these variables into Eq. (5.5) and clean everything up until each term is dimensionless. The result is our first option:

$$S^* = 1 + t^* + \frac{1}{2}\alpha t^{*2} \quad \alpha = \frac{g S_0}{V_0^2} \quad (5.10)$$

This result is shown plotted in Fig. 5.1a. There is a single dimensionless parameter  $\alpha$ , which shows here the effect of gravity. It cannot show the direct effects of  $S_0$  and  $V_0$ , since these two are hidden in the ordinate and abscissa. We see that gravity increases the parabolic rate of fall for  $t^* > 0$ , but not the initial slope at  $t^* = 0$ . We would learn the same from falling-body data, and the plot, within experimental accuracy, would look like Fig. 5.1a.

**Option 2:** Scaling parameters  $V_0$  and  $g$ : the effect of initial displacement  $S_0$ .

Now use the new scaling parameters  $(V_0, g)$  to define dimensionless (\*\*) displacement and time. Again there is only one suitable definition:

$$S^{**} = \frac{Sg}{V_0^2} \quad t^{**} = t \frac{g}{V_0} \quad (5.11)$$

Substitute these variables into Eq. (5.5) and clean everything up again. The result is our second option:

$$S^{**} = \alpha + t^{**} + \frac{1}{2}t^{**2} \quad \alpha = \frac{g S_0}{V_0^2} \quad (5.12)$$

This result is plotted in Fig. 5.1b. The same single parameter  $\alpha$  again appears and here shows the effect of initial *displacement*, which merely moves the curves upward without changing their shape.

**Option 3:** Scaling parameters  $S_0$  and  $g$ : the effect of initial speed  $V_0$ .


Finally use the scaling parameters  $(S_0, g)$  to define dimensionless (\*\*\*) displacement and time. Again there is only one suitable definition:

$$S^{***} = \frac{S}{S_0} \quad t^{***} = t \left( \frac{g}{S_0} \right)^{1/2} \quad (5.13)$$

Substitute these variables into Eq. (5.5) and clean everything up as usual. The result is our third and final option:

$$S^{***} = 1 + \beta t^{***} + \frac{1}{2}t^{***2} \quad \beta = \frac{1}{\sqrt{\alpha}} = \frac{V_0}{\sqrt{g S_0}} \quad (5.14)$$

<sup>2</sup>Make them *proportional* to  $S$  and  $t$ . Do not define dimensionless terms upside down:  $S_0/S$  or  $S_0/(V_0 t)$ . The plots will look funny, users of your data will be confused, and your supervisor will be angry. It is not a good idea.

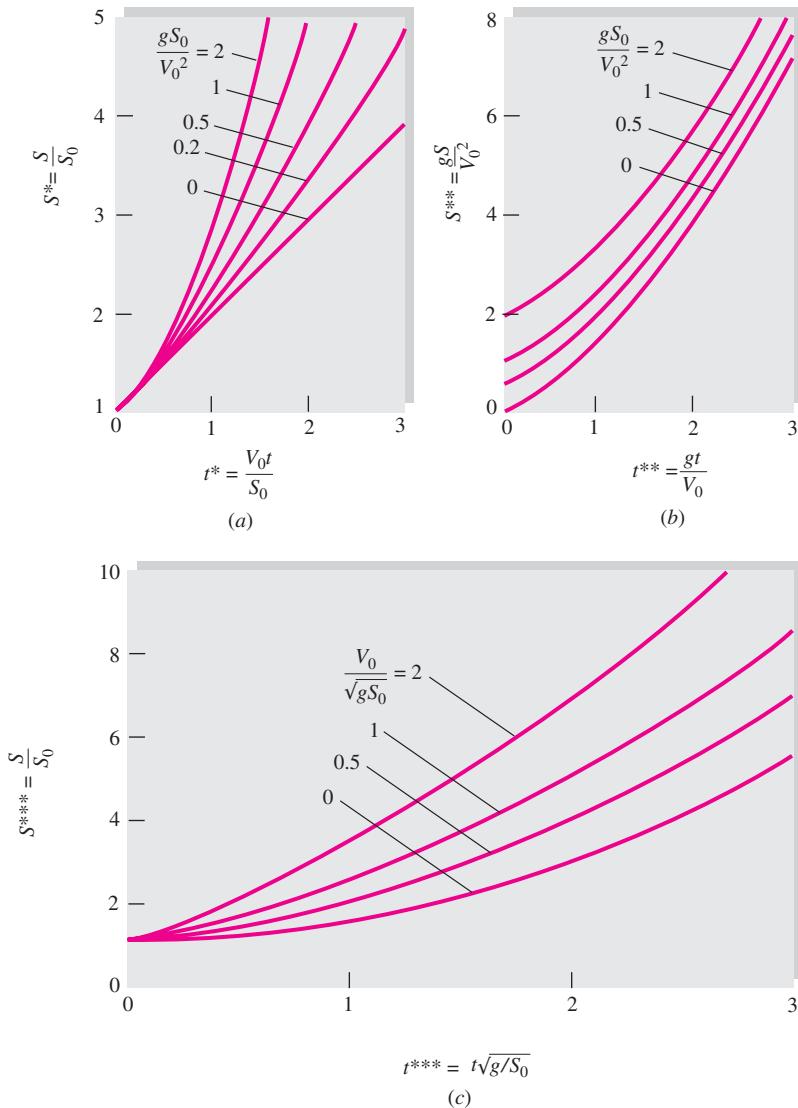

**Fig. 5.1** Three entirely equivalent dimensionless presentations of the falling-body problem, Eq. (5.5): the effect of (a) gravity, (b) initial displacement, and (c) initial velocity. All plots contain the same information.

This final presentation is shown in Fig. 5.1c. Once again the parameter  $\alpha$  appears, but we have redefined it upside down,  $\beta = 1/\sqrt{\alpha}$ , so that our display parameter  $V_0$  is in the numerator and is linear. This is our free choice and simply improves the display. Figure 5.1c shows that initial velocity increases the falling displacement.

Note that, in all three options, the same parameter  $\alpha$  appears but has a different meaning: dimensionless gravity, initial displacement, and initial velocity. The graphs, which contain exactly the same information, change their appearance to reflect these differences.

Whereas the original problem, Eq. (5.5), involved five quantities, the dimensionless presentations involve only three, having the form

$$S' = \text{fcn}(t', \alpha) \quad \alpha = \frac{gS_0}{V_0^2} \quad (5.15)$$

The reduction  $5 - 3 = 2$  should equal the number of fundamental dimensions involved in the problem  $\{L, T\}$ . This idea led to the pi theorem (Sec. 5.3).

### Selection of Scaling (Repeating) Variables

The selection of scaling variables is left to the user, but there are some guidelines. In Eq. (5.2), it is now clear that the scaling variables were  $\rho$ ,  $V$ , and  $L$ , since they appear in both force coefficient and Reynolds number. We could then interpret data from Eq. (5.2) as the variation of dimensionless *force* versus dimensionless *viscosity*, since each appears in only one dimensionless group. Similarly, in Eq. (5.5) the scaling variables were selected from  $(S_0, V_0, g)$ , not  $(S, t)$ , because we wished to plot  $S$  versus  $t$  in the final result.

The following are some guidelines for selecting scaling variables:

1. They must *not* form a dimensionless group among themselves, but adding one more variable *will* form a dimensionless quantity. For example, test powers of  $\rho$ ,  $V$ , and  $L$ :

$$\rho^a V^b L^c = (ML^{-3})^a (L/T)^b (L)^c = M^0 L^0 T^0 \quad \text{only if } a = 0, b = 0, c = 0$$

In this case, we can see why this is so: Only  $\rho$  contains the dimension  $\{M\}$ , and only  $V$  contains the dimension  $\{T\}$ , so no cancellation is possible. If, now, we add  $\mu$  to the scaling group, we will obtain the Reynolds number. If we add  $F$  to the group, we form the force coefficient.

2. Do not select output variables for your scaling parameters. In Eq. (5.1), certainly do not select  $F$ , which you wish to isolate for your plot. Nor was  $\mu$  selected, for we wished to plot force versus viscosity.
3. If convenient, select *popular*, not obscure, scaling variables because they will appear in all of your dimensionless groups. Select density, not surface tension. Select body length, not surface roughness. Select stream velocity, not speed of sound.

The examples that follow will make this clear. Problem assignments might give hints.

Suppose we wish to study drag force versus *velocity*. Then we would not use  $V$  as a scaling parameter in Eq. (5.1). We would use  $(\rho, \mu, L)$  instead, and the final dimensionless function would become

$$C'_F = \frac{\rho F}{\mu^2} = f(\text{Re}) \quad \text{Re} = \frac{\rho VL}{\mu} \quad (5.16)$$

In plotting these data, we would not be able to discern the effect of  $\rho$  or  $\mu$ , since they appear in both dimensionless groups. The grouping  $C'_F$  again would mean dimensionless force, and  $\text{Re}$  is now interpreted as either dimensionless velocity or size.<sup>3</sup> The plot would be quite different compared to Eq. (5.2), although it contains exactly the same information. The development of parameters such as  $C'_F$  and  $\text{Re}$  from the initial variables is the subject of the pi theorem (Sec. 5.3).

### Some Peculiar Engineering Equations

The foundation of the dimensional analysis method rests on two assumptions: (1) The proposed physical relation is dimensionally homogeneous, and (2) all the relevant variables have been included in the proposed relation.

If a relevant variable is missing, dimensional analysis will fail, giving either algebraic difficulties or, worse, yielding a dimensionless formulation that does not

<sup>3</sup>We were lucky to achieve a size effect because in this case  $L$ , a scaling parameter, did not appear in the drag coefficient.

resolve the process. A typical case is Manning's open-channel formula, discussed in Example 1.4:

$$V = \frac{1.49}{n} R^{2/3} S^{1/2} \quad (1)$$

Since  $V$  is velocity,  $R$  is a radius, and  $n$  and  $S$  are dimensionless, the formula is not dimensionally homogeneous. This should be a warning that (1) the formula changes if the *units* of  $V$  and  $R$  change and (2) if valid, it represents a very special case. Equation (1) in Example 1.4 predates the dimensional analysis technique and is valid only for water in rough channels at moderate velocities and large radii in BG units.

Such dimensionally inhomogeneous formulas abound in the hydraulics literature. Another example is the Hazen-Williams formula [24] for volume flow of water through a straight smooth pipe:

$$Q = 61.9 D^{2.63} \left( \frac{dp}{dx} \right)^{0.54} \quad (5.17)$$

where  $D$  is diameter and  $dp/dx$  is the pressure gradient. Some of these formulas arise because numbers have been inserted for fluid properties and other physical data into perfectly legitimate homogeneous formulas. We shall not give the units of Eq. (5.17) to avoid encouraging its use.

On the other hand, some formulas are "constructs" that cannot be made dimensionally homogeneous. The "variables" they relate cannot be analyzed by the dimensional analysis technique. Most of these formulas are raw empiricisms convenient to a small group of specialists. Here are three examples:

$$B = \frac{25,000}{100 - R} \quad (5.18)$$

$$S = \frac{140}{130 + \text{API}} \quad (5.19)$$

$$0.0147 D_E - \frac{3.74}{D_E} = 0.26 t_R - \frac{172}{t_R} \quad (5.20)$$

Equation (5.18) relates the Brinell hardness  $B$  of a metal to its Rockwell hardness  $R$ . Equation (5.19) relates the specific gravity  $S$  of an oil to its density in degrees API. Equation (5.20) relates the viscosity of a liquid in  $D_E$ , or degrees Engler, to its viscosity  $t_R$  in Saybolt seconds. Such formulas have a certain usefulness when communicated between fellow specialists, but we cannot handle them here. Variables like Brinell hardness and Saybolt viscosity are not suited to an  $MLT^\Theta$  dimensional system.

### 5.3 The Pi Theorem

There are several methods of reducing a number of dimensional variables into a smaller number of dimensionless groups. The first scheme given here was proposed in 1914 by Buckingham [1] and is now called the *Buckingham Pi Theorem*. The name *pi* comes from the mathematical notation  $\Pi$ , meaning a product of variables. The dimensionless groups found from the theorem are power products denoted by  $\Pi_1$ ,  $\Pi_2$ ,  $\Pi_3$ , etc. The method allows the pi groups to be found in sequential order without resorting to free exponents.

The first part of the pi theorem explains what reduction in variables to expect:

If a physical process satisfies the PDH and involves  $n$  dimensional variables, it can be reduced to a relation between only  $k$  dimensionless variables or  $\Pi$ s. The reduction  $j = n - k$  equals the maximum number of variables that do not form a pi among themselves and is always less than or equal to the number of dimensions describing the variables.

Take the specific case of force on an immersed body: Eq. (5.1) contains five variables  $F$ ,  $L$ ,  $U$ ,  $\rho$ , and  $\mu$  described by three dimensions  $\{MLT\}$ . Thus  $n = 5$  and  $j \leq 3$ . Therefore it is a good guess that we can reduce the problem to  $k$  pi groups, with  $k = n - j \geq 5 - 3 = 2$ . And this is exactly what we obtained: two dimensionless variables  $\Pi_1 = C_F$  and  $\Pi_2 = \text{Re}$ . On rare occasions it may take more pi groups than this minimum (see Example 5.5).

The second part of the theorem shows how to find the pi groups one at a time:

Find the reduction  $j$ , then select  $j$  scaling variables that do not form a pi among themselves.<sup>4</sup> Each desired pi group will be a power product of these  $j$  variables plus one additional variable, which is assigned any convenient nonzero exponent. Each pi group thus found is independent.

To be specific, suppose the process involves five variables:

$$v_1 = f(v_2, v_3, v_4, v_5)$$

Suppose there are three dimensions  $\{MLT\}$  and we search around and find that indeed  $j = 3$ . Then  $k = 5 - 3 = 2$  and we expect, from the theorem, two and only two pi groups. Pick out three convenient variables that do *not* form a pi, and suppose these turn out to be  $v_2$ ,  $v_3$ , and  $v_4$ . Then the two pi groups are formed by power products of these three plus one additional variable, either  $v_1$  or  $v_5$ :

$$\Pi_1 = (v_2)^a(v_3)^b(v_4)^c v_1 = M^0 L^0 T^0 \quad \Pi_2 = (v_2)^a(v_3)^b(v_4)^c v_5 = M^0 L^0 T^0$$

Here we have arbitrarily chosen  $v_1$  and  $v_5$ , the added variables, to have unit exponents. Equating exponents of the various dimensions is guaranteed by the theorem to give unique values of  $a$ ,  $b$ , and  $c$  for each pi. And they are independent because only  $\Pi_1$  contains  $v_1$  and only  $\Pi_2$  contains  $v_5$ . It is a very neat system once you get used to the procedure. We shall illustrate it with several examples.

Typically, six steps are involved:

1. List and count the  $n$  variables involved in the problem. If any important variables are missing, dimensional analysis will fail.
2. List the dimensions of each variable according to  $\{MLT\}$  or  $\{FLT\}$ . A list is given in Table 5.1.
3. Find  $j$ . Initially guess  $j$  equal to the number of different dimensions present, and look for  $j$  variables that do not form a pi product. If no luck, reduce  $j$  by 1 and look again. With practice, you will find  $j$  rapidly.
4. Select  $j$  scaling parameters that do not form a pi product. Make sure they please you and have some generality if possible, because they will then appear

<sup>4</sup>Make a clever choice here because all pi groups will contain these  $j$  variables in various groupings.

**Table 5.1** Dimensions of Fluid-Mechanics Properties

Quantity	Symbol	$MLT\Theta$	Dimensions
Length	$L$	$L$	$L$
Area	$A$	$L^2$	$L^2$
Volume	$V$	$L^3$	$L^3$
Velocity	$V$	$LT^{-1}$	$LT^{-1}$
Acceleration	$dV/dt$	$LT^{-2}$	$LT^{-2}$
Speed of sound	$a$	$LT^{-1}$	$LT^{-1}$
Volume flow	$Q$	$L^3T^{-1}$	$L^3T^{-1}$
Mass flow	$\dot{m}$	$MT^{-1}$	$FTL^{-1}$
Pressure, stress	$p, \sigma, \tau$	$ML^{-1}T^{-2}$	$FL^{-2}$
Strain rate	$\dot{\epsilon}$	$T^{-1}$	$T^{-1}$
Angle	$\theta$	None	None
Angular velocity	$\omega, \Omega$	$T^{-1}$	$T^{-1}$
Viscosity	$\mu$	$ML^{-1}T^{-1}$	$FTL^{-2}$
Kinematic viscosity	$\nu$	$L^2T^{-1}$	$L^2T^{-1}$
Surface tension	$\gamma$	$MT^{-2}$	$FL^{-1}$
Force	$F$	$MLT^{-2}$	$F$
Moment, torque	$M$	$ML^2T^{-2}$	$FL$
Power	$P$	$ML^2T^{-3}$	$FLT^{-1}$
Work, energy	$W, E$	$ML^2T^{-2}$	$FL$
Density	$\rho$	$ML^{-3}$	$FT^2L^{-4}$
Temperature	$T$	$\Theta$	$\Theta$
Specific heat	$c_p, c_v$	$L^2T^{-2}\Theta^{-1}$	$L^2T^{-2}\Theta^{-1}$
Specific weight	$\gamma$	$ML^{-2}T^{-2}$	$FL^{-3}$
Thermal conductivity	$k$	$MLT^{-3}\Theta^{-1}$	$FT^{-1}\Theta^{-1}$
Thermal expansion coefficient	$\beta$	$\Theta^{-1}$	$\Theta^{-1}$

in every one of your pi groups. Pick density or velocity or length. Do not pick surface tension, for example, or you will form six different independent Weber-number parameters and thoroughly annoy your colleagues.

- Add one additional variable to your  $j$  repeating variables, and form a power product. Algebraically find the exponents that make the product dimensionless. Try to arrange for your output or *dependent* variables (force, pressure drop, torque, power) to appear in the numerator, and your plots will look better. Do this sequentially, adding one new variable each time, and you will find all  $n - j = k$  desired pi products.
- Write the final dimensionless function, and check the terms to make sure all pi groups are dimensionless.

### EXAMPLE 5.2

Repeat the development of Eq. (5.2) from Eq. (5.1), using the pi theorem.

#### Solution

##### Step 1

Write the function and count variables:

$$F = f(L, U, \rho, \mu) \quad \text{there are five variables } (n = 5)$$

**Step 2**

List dimensions of each variable. From Table 5.1

$F$	$L$	$U$	$\rho$	$\mu$
$\{MLT^{-2}\}$	$\{L\}$	$\{LT^{-1}\}$	$\{ML^{-3}\}$	$\{ML^{-1}T^{-1}\}$

**Step 3**

Find  $j$ . No variable contains the dimension  $\Theta$ , and so  $j$  is less than or equal to 3 ( $MLT$ ). We inspect the list and see that  $L$ ,  $U$ , and  $\rho$  cannot form a pi group because only  $\rho$  contains mass and only  $U$  contains time. Therefore  $j$  does equal 3, and  $n - j = 5 - 3 = 2 = k$ . The pi theorem guarantees for this problem that there will be exactly two independent dimensionless groups.

**Step 4**

Select repeating  $j$  variables. The group  $L$ ,  $U$ ,  $\rho$  we found in step 3 will do fine.

**Step 5**

Combine  $L$ ,  $U$ ,  $\rho$  with one additional variable, in sequence, to find the two pi products.

First add force to find  $\Pi_1$ . You may select *any* exponent on this additional term as you please, to place it in the numerator or denominator to any power. Since  $F$  is the output, or dependent, variable, we select it to appear to the first power in the numerator:

$$\Pi_1 = L^a U^b \rho^c F = (L)^a (LT^{-1})^b (ML^{-3})^c (MLT^{-2}) = M^0 L^0 T^0$$

Equate exponents:

$$\text{Length: } a + b - 3c + 1 = 0$$

$$\text{Mass: } c + 1 = 0$$

$$\text{Time: } -b - 2 = 0$$

We can solve explicitly for

$$a = -2 \quad b = -2 \quad c = -1$$

$$\text{Therefore } \Pi_1 = L^{-2} U^{-2} \rho^{-1} F = \frac{F}{\rho U^2 L^2} = C_F \quad \text{Ans.}$$

This is exactly the right pi group as in Eq. (5.2). By varying the exponent on  $F$ , we could have found other equivalent groups such as  $UL\rho^{1/2}/F^{1/2}$ .

Finally, add viscosity to  $L$ ,  $U$ , and  $\rho$  to find  $\Pi_2$ . Select any power you like for viscosity. By hindsight and custom, we select the power  $-1$  to place it in the denominator:

$$\Pi_2 = L^a U^b \rho^c \mu^{-1} = L^a (LT^{-1})^b (ML^{-3})^c (ML^{-1}T^{-1})^{-1} = M^0 L^0 T^0$$

Equate exponents:

$$\text{Length: } a + b - 3c + 1 = 0$$

$$\text{Mass: } c - 1 = 0$$

$$\text{Time: } -b + 1 = 0$$

from which we find

$$a = b = c = 1$$

$$\text{Therefore } \Pi_2 = L^1 U^1 \rho^1 \mu^{-1} = \frac{\rho UL}{\mu} = \text{Re} \quad \text{Ans.}$$

**Step 6**

We know we are finished; this is the second and last pi group. The theorem guarantees that the functional relationship must be of the equivalent form

$$\frac{F}{\rho U^2 L^2} = g\left(\frac{\rho U L}{\mu}\right) \quad \text{Ans.}$$

which is exactly Eq. (5.2).

**EXAMPLE 5.3**

The power input  $P$  to a centrifugal pump is a function of the volume flow  $Q$ , impeller diameter  $D$ , rotational rate  $\Omega$ , and the density  $\rho$  and viscosity  $\mu$  of the fluid:

$$P = f(Q, D, \Omega, \rho, \mu)$$

Rewrite this as a dimensionless relationship. Hint: Use  $\Omega$ ,  $\rho$ , and  $D$  as repeating variables.

**Solution****Step 1**

Count the variables. There are six (don't forget the one on the left,  $P$ ).

**Step 2**

List the dimensions of each variable from Table 5.1. Use the  $\{FLT\Theta\}$  system:

$P$	$Q$	$D$	$\Omega$	$\rho$	$\mu$
$\{FLT^{-1}\}$	$\{L^3 T^{-1}\}$	$\{L\}$	$\{T^{-1}\}$	$\{FT^2 L^{-4}\}$	$\{FTL^{-2}\}$

**Step 3**

Find  $j$ . Lucky us, we were told to use  $(\Omega, \rho, D)$  as repeating variables, so surely  $j = 3$ , the number of dimensions ( $FLT$ )? Check that these three do *not* form a pi group:

$$\Omega^a \rho^b D^c = (T^{-1})^a (FT^2 L^{-4})^b (L)^c = F^0 L^0 T^0 \quad \text{only if } a = 0, b = 0, c = 0$$

Yes,  $j = 3$ . This was not as obvious as the scaling group ( $L, U, \rho$ ) in Example 5.2, but it is true. We now know, from the theorem, that adding one more variable will indeed form a pi group.

**Step 4a**

Combine  $(\Omega, \rho, D)$  with power  $P$  to find the first pi group:

$$\Pi_1 = \Omega^a \rho^b D^c P = (T^{-1})^a (FT^2 L^{-4})^b (L)^c (FLT^{-1}) = F^0 L^0 T^0$$

Equate exponents:

$$\text{Force:} \quad b + 1 = 0$$

$$\text{Length:} \quad -4b + c + 1 = 0$$

$$\text{Time:} \quad -a + 2b - 1 = 0$$

Solve algebraically to obtain  $a = -3$ ,  $b = -1$ , and  $c = -5$ . This first pi group, the output dimensionless variable, is called the *power coefficient* of a pump,  $C_P$ :

$$\Pi_1 = \Omega^{-3} \rho^{-1} D^{-5} P = \frac{P}{\rho \Omega^3 D^5} = C_P$$

**Step 4b**

Combine  $(\Omega, \rho, D)$  with flow rate  $Q$  to find the second pi group:

$$\Pi_2 = \Omega^a \rho^b D^c Q = (T^{-1})^a (FT^2 L^{-4})^b (L)^c (L^3 T^{-1}) = F^0 L^0 T^0$$

After equating exponents, we now find  $a = -1$ ,  $b = 0$ , and  $c = -3$ . This second pi group is called the *f<sub>w</sub> coefficient* of a pump,  $C_Q$ :

$$\Pi_2 = \Omega^{-1} \rho^0 D^{-3} Q = \frac{Q}{\Omega D^3} = C_Q$$

**Step 4c**

Combine  $(\Omega, \rho, D)$  with viscosity  $\mu$  to find the third and last pi group:

$$\Pi_3 = \Omega^a \rho^b D^c \mu = (T^{-1})^a (FT^2 L^{-4})^b (L)^c (FTL^{-2}) = F^0 L^0 T^0$$

This time,  $a = -1$ ,  $b = -1$ , and  $c = -2$ ; or  $\Pi_3 = \mu / (\rho \Omega D^2)$ , a sort of Reynolds number.

**Step 5**

The original relation between six variables is now reduced to three dimensionless groups:

$$\frac{P}{\rho \Omega^2 D^5} = f\left(\frac{Q}{\Omega D^3}, \frac{\mu}{\rho \Omega D^2}\right) \quad \text{Ans.}$$

*Comment:* These three are the classical coefficients used to correlate pump power in Chap. 11.

**EXAMPLE 5.4**

At low velocities (laminar flow), the volume flow  $Q$  through a small-bore tube is a function only of the tube radius  $R$ , the fluid viscosity  $\mu$ , and the pressure drop per unit tube length  $dp/dx$ . Using the pi theorem, find an appropriate dimensionless relationship.

**Solution**

Write the given relation and count variables:

$$Q = f\left(R, \mu, \frac{dp}{dx}\right) \quad \text{four variables } (n = 4)$$

Make a list of the dimensions of these variables from Table 5.1 using the {MLT} system:

$Q$	$R$	$\mu$	$dp/dx$
$\{L^3 T^{-1}\}$	$\{L\}$	$\{ML^{-1} T^{-1}\}$	$\{ML^{-2} T^{-2}\}$

There are three primary dimensions ( $M, L, T$ ), hence  $j \leq 3$ . By trial and error we determine that  $R$ ,  $\mu$ , and  $dp/dx$  cannot be combined into a pi group. Then  $j = 3$ , and  $n - j = 4 - 3 = 1$ . There is only one pi group, which we find by combining  $Q$  in a power product with the other three:

$$\begin{aligned} \Pi_1 &= R^a \mu^b \left(\frac{dp}{dx}\right)^c Q^1 = (L)^a (ML^{-1} T^{-1})^b (ML^{-2} T^{-2})^c (L^3 T^{-1}) \\ &= M^0 L^0 T^0 \end{aligned}$$

Equate exponents:

$$\text{Mass:} \quad b + c = 0$$

$$\text{Length:} \quad a - b - 2c + 3 = 0$$

$$\text{Time:} \quad -b - 2c - 1 = 0$$

Solving simultaneously, we obtain  $a = -4$ ,  $b = 1$ , and  $c = -1$ . Then

$$\Pi_1 = R^{-4}\mu^1\left(\frac{dp}{dx}\right)^{-1}Q$$

or

$$\Pi_1 = \frac{Q\mu}{R^4(dp/dx)} = \text{const} \quad \text{Ans.}$$

Since there is only one pi group, it must equal a dimensionless constant. This is as far as dimensional analysis can take us. The laminar flow theory of Sec. 4.10 shows that the value of the constant is  $-\frac{\pi}{8}$ .

### EXAMPLE 5.5

Assume that the tip deflection  $\delta$  of a cantilever beam is a function of the tip load  $P$ , beam length  $L$ , area moment of inertia  $I$ , and material modulus of elasticity  $E$ ; that is,  $\delta = f(P, L, I, E)$ . Rewrite this function in dimensionless form, and comment on its complexity and the peculiar value of  $j$ .

#### Solution

List the variables and their dimensions:

$\delta$	$P$	$L$	$I$	$E$
$\{L\}$	$\{MLT^{-2}\}$	$\{L\}$	$\{L^4\}$	$\{ML^{-1}T^{-2}\}$

There are five variables ( $n = 5$ ) and three primary dimensions ( $M, L, T$ ), hence  $j \leq 3$ . But try as we may, we *cannot* find any combination of three variables that does not form a pi group. This is because  $\{M\}$  and  $\{T\}$  occur only in  $P$  and  $E$  and only in the same form,  $\{MT^{-2}\}$ . Thus we have encountered a special case of  $j = 2$ , which is less than the number of dimensions ( $M, L, T$ ). To gain more insight into this peculiarity, you should rework the problem, using the  $(F, L, T)$  system of dimensions. You will find that only  $\{F\}$  and  $\{L\}$  occur in these variables, hence  $j = 2$ .

With  $j = 2$ , we select  $L$  and  $E$  as two variables that cannot form a pi group and then add other variables to form the three desired pis:

$$\Pi_1 = L^aE^bI^1 = (L)^a(ML^{-1}T^{-2})^b(L^4) = M^0L^0T^0$$

from which, after equating exponents, we find that  $a = -4$ ,  $b = 0$ , or  $\Pi_1 = I/L^4$ . Then

$$\Pi_2 = L^aE^bP^1 = (L)^a(ML^{-1}T^{-2})^b(MLT^{-2}) = M^0L^0T^0$$

from which we find  $a = -2$ ,  $b = -1$ , or  $\Pi_2 = P/(EL^2)$ , and

$$\Pi_3 = L^aE^b\delta^1 = (L)^a(ML^{-1}T^{-2})^b(L) = M^0L^0T^0$$

from which  $a = -1$ ,  $b = 0$ , or  $\Pi_3 = \delta/L$ . The proper dimensionless function is  $\Pi_3 = f(\Pi_2, \Pi_1)$ , or

$$\frac{\delta}{L} = f\left(\frac{P}{EL^2}, \frac{I}{L^4}\right) \quad \text{Ans. (1)}$$

This is a complex three-variable function, but dimensional analysis alone can take us no further.

*Comments:* We can “improve” Eq. (1) by taking advantage of some physical reasoning, as Langhaar points out [4, p. 91]. For small elastic deflections,  $\delta$  is proportional to load  $P$  and inversely proportional to moment of inertia  $I$ . Since  $P$  and  $I$  occur separately in Eq. (1), this means that  $\Pi_3$  must be proportional to  $\Pi_2$  and inversely proportional to  $\Pi_1$ . Thus, for these conditions,

$$\frac{\delta}{L} = (\text{const}) \frac{P}{EL^2} \frac{L^4}{I}$$

or 
$$\delta = (\text{const}) \frac{PL^3}{EI} \quad (2)$$

This could not be predicted by a pure dimensional analysis. Strength-of-materials theory predicts that the value of the constant is  $\frac{1}{3}$ .

### An Alternate Step-by-Step Method by Ipsen (1960)<sup>5</sup>

The pi theorem method, just explained and illustrated, is often called the *repeating variable method* of dimensional analysis. Select the repeating variables, add one more, and you get a pi group. The writer likes it. This method is straightforward and systematically reveals all the desired pi groups. However, there are drawbacks: (1) All pi groups contain the same repeating variables and might lack variety or effectiveness, and (2) one must (sometimes laboriously) check that the selected repeating variables do *not* form a pi group among themselves (see Prob. P5.21).

Ipsen [5] suggests an entirely different procedure, a step-by-step method that obtains all of the pi groups at once, without any counting or checking. One simply successively eliminates each dimension in the desired function by division or multiplication. Let us illustrate with the same classical drag function proposed in Eq. (5.1). Underneath the variables, write out the dimensions of each quantity.

$$\begin{array}{cccccc} F & = \text{fcn}(L, & V, & \rho, & \mu) \\ \{MLT^{-2}\} & \{L\} & \{LT^{-1}\} & \{ML^{-3}\} & \{ML^{-1}T^{-1}\} \end{array} \quad (5.1)$$

There are three dimensions,  $\{MLT\}$ . Eliminate them successively by division or multiplication by a variable. Start with mass  $\{M\}$ . Pick a variable that contains mass and divide it into all the other variables with mass dimensions. We select  $\rho$ , divide, and rewrite the function (5.1);

$$\begin{array}{cccccc} \frac{F}{\rho} & = \text{fcn}\left(L, & V, & \cancel{\rho}, & \frac{\mu}{\rho}\right) \\ \{L^4T^{-2}\} & \{L\} & \{LT^{-1}\} & \{ML^{-3}\} & \{L^2T^{-1}\} \end{array} \quad (5.1a)$$

<sup>5</sup>These two methods (the pi theorem versus Ipsen) are quite different. Both are useful and interesting.

We did not divide into  $L$  or  $V$ , which do not contain  $\{M\}$ . Equation (5.1a) at first looks strange, but it contains five distinct variables and the same information as Eq. (5.1).

We see that  $\rho$  is no longer important because no other variable contains  $\{M\}$ . Thus *discard*  $\rho$ , and now there are only four variables. Next, eliminate time  $\{T\}$  by dividing the time-containing variables by suitable powers of, say,  $V$ . The result is

$$\frac{F}{\rho V^2} = \text{fcn}\left(L, \cancel{V}, \frac{\mu}{\rho V}\right) \quad (5.1b)$$

$\{L^2\}$	$\{L\}$	$\{LT^{-1}\}$	$\{L\}$
-----------	---------	---------------	---------

Now we see that  $V$  is no longer relevant since only  $V$  contains time  $\{T\}$ . Finally, eliminate  $\{L\}$  through division by, say, appropriate powers of  $L$  itself:

$$\frac{F}{\rho V^2 L^2} = \text{fcn}\left(\cancel{L}, \frac{\mu}{\rho VL}\right) \quad (5.1c)$$

$\{1\}$	$\{L\}$	$\{1\}$
---------	---------	---------

Now  $L$  by itself is no longer relevant and so discard it also. The result is equivalent to Eq. (5.2):

$$\frac{F}{\rho V^2 L^2} = \text{fcn}\left(\frac{\mu}{\rho VL}\right) \quad (5.2)$$

In Ipsen's step-by-step method, we find the force coefficient is a function solely of the Reynolds number. We did no counting and did not find  $j$ . We just successively eliminated each primary dimension by division with the appropriate variables.

Recall Example 5.5, where we discovered, awkwardly, that the number of repeating variables was *less* than the number of primary dimensions. Ipsen's method avoids this preliminary check. Recall the beam-deflection problem proposed in Example 5.5 and the various dimensions:

$$\frac{\delta}{L} = f(P, \cancel{L}, I, \cancel{E})$$

$\{L\}$	$\{MLT^{-2}\}$	$\{L\}$	$\{L^4\}$	$\{ML^{-1}T^{-2}\}$
---------	----------------	---------	-----------	---------------------

For the first step, let us eliminate  $\{M\}$  by dividing by  $E$ . We only have to divide into  $P$ :

$$\delta = f\left(\frac{P}{E}, L, I, \cancel{E}\right)$$

$\{L\}$	$\{L^2\}$	$\{L\}$	$\{L^4\}$	$\{ML^{-1}T^{-2}\}$
---------	-----------	---------	-----------	---------------------

We see that we may discard  $E$  as no longer relevant, and the dimension  $\{T\}$  has vanished along with  $\{M\}$ . We need only eliminate  $\{L\}$  by dividing by, say, powers of  $L$  itself:

$$\frac{\delta}{L} = \text{fcn}\left(\frac{P}{EL^2}, \cancel{L}, \frac{I}{L^4}\right)$$

$\{1\}$	$\{1\}$	$\{L\}$	$\{1\}$
---------	---------	---------	---------


Discard  $L$  itself as now irrelevant, and we obtain *Answer* (1) to Example 5.5:

$$\frac{\delta}{L} = \text{fcn}\left(\frac{P}{EL^2}, \frac{I}{L^4}\right)$$

Ipsen's approach is again successful. The fact that  $\{M\}$  and  $\{T\}$  vanished in the same division is proof that there are only *two* repeating variables this time, not the three that would be inferred by the presence of  $\{M\}$ ,  $\{L\}$ , and  $\{T\}$ .

### EXAMPLE 5.6

The leading-edge aerodynamic moment  $M_{LE}$  on a supersonic airfoil is a function of its chord length  $C$ , angle of attack  $\alpha$ , and several air parameters: approach velocity  $V$ , density  $\rho$ , speed of sound  $a$ , and specific heat ratio  $k$  (Fig. E5.6). There is a very weak effect of air viscosity, which is neglected here.

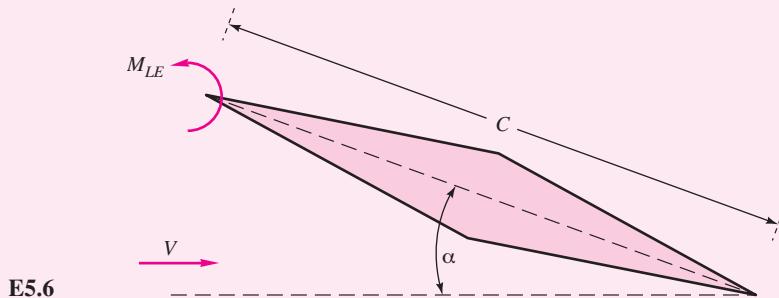

Use Ipsen's method to rewrite this function in dimensionless form.

### Solution

Write out the given function and list the variables' dimensions  $\{MLT\}$  underneath:

$$\frac{M_{LE}}{\{ML^2/T^2\}} = \text{fcn}(C, \alpha, V, \rho, a, k)$$

$$\quad \quad \quad \{L\} \quad \{1\} \quad \{L/T\} \quad \{M/L^3\} \quad \{L/T\} \quad \{1\}$$

Two of them,  $\alpha$  and  $k$ , are already dimensionless. Leave them alone; they will be pi groups in the final function. You can eliminate any dimension. We choose mass  $\{M\}$  and divide by  $\rho$ :

$$\frac{M_{LE}}{\rho \{L^5/T^2\}} = \text{fcn}(C, \alpha, V, a, k)$$

$$\quad \quad \quad \{L\} \quad \{1\} \quad \{L/T\} \quad \{L/T\} \quad \{1\}$$

Recall Ipsen's rules: Only divide into variables containing mass, in this case only  $M_{LE}$ , and then discard the divisor,  $\rho$ . Now eliminate time  $\{T\}$  by dividing by appropriate powers of  $a$ :

$$\frac{M_{LE}}{\rho a^2 \{L^3\}} = \text{fcn}\left(C, \alpha, \frac{V}{a}, k\right)$$

$$\quad \quad \quad \{L\} \quad \{1\} \quad \{1\} \quad \{1\}$$

Finally, eliminate  $\{L\}$  on the left side by dividing by  $C^3$ :

$$\frac{M_{LE}}{\rho a^2 C^3} = \text{fcn}\left(\frac{V}{a}, \alpha, \frac{V}{a}, k\right)$$

We end up with four pi groups and recognize  $V/a$  as the Mach number,  $\text{Ma}$ . In aerodynamics, the dimensionless moment is often called the *moment coefficient*,  $C_M$ . Thus our final result could be written in the compact form

$$C_M = \text{fcn}(\alpha, \text{Ma}, k)$$

*Ans.*

*Comments:* Our analysis is fine, but experiment and theory and physical reasoning all indicate that  $M_{LE}$  varies more strongly with  $V$  than with  $a$ . Thus aerodynamicists commonly define the moment coefficient as  $C_M = M_{LE}/(\rho V^2 C^3)$  or something similar. We will study the analysis of supersonic forces and moments in Chap. 9.

## 5.4 Nondimensionalization of the Basic Equations

We could use the pi theorem method of the previous section to analyze problem after problem after problem, finding the dimensionless parameters that govern in each case. Textbooks on dimensional analysis [for example, 5] do this. An alternative and very powerful technique is to attack the basic equations of flow from Chap. 4. Even though these equations cannot be solved in general, they will reveal basic dimensionless parameters, such as the Reynolds number, in their proper form and proper position, giving clues to when they are negligible. The boundary conditions must also be non-dimensionalized.

Let us briefly apply this technique to the incompressible flow continuity and momentum equations with constant viscosity:

$$\text{Continuity:} \quad \nabla \cdot \mathbf{V} = 0 \quad (5.21a)$$

$$\text{Navier-Stokes:} \quad \rho \frac{d\mathbf{V}}{dt} = \rho \mathbf{g} - \nabla p + \mu \nabla^2 \mathbf{V} \quad (5.21b)$$

Typical boundary conditions for these two equations are (Sect. 4.6)

$$\text{Fixed solid surface:} \quad \mathbf{V} = 0$$

$$\text{Inlet or outlet:} \quad \text{Known } \mathbf{V}, p \quad (5.22)$$

$$\text{Free surface, } z = \eta: \quad w = \frac{d\eta}{dt} \quad p = p_a - \gamma(R_x^{-1} + R_y^{-1})$$

We omit the energy equation (4.75) and assign its dimensionless form in the problems (Prob. P5.43).

Equations (5.21) and (5.22) contain the three basic dimensions  $M$ ,  $L$ , and  $T$ . All variables  $p$ ,  $\mathbf{V}$ ,  $x$ ,  $y$ ,  $z$ , and  $t$  can be nondimensionalized by using density and two reference constants that might be characteristic of the particular fluid flow:

$$\text{Reference velocity} = U \quad \text{Reference length} = L$$

For example,  $U$  may be the inlet or upstream velocity and  $L$  the diameter of a body immersed in the stream.

Now define all relevant dimensionless variables, denoting them by an asterisk:

$$\begin{aligned}\mathbf{V}^* &= \frac{\mathbf{V}}{U} & \nabla^* &= L\mathbf{V} \\ x^* &= \frac{x}{L} & y^* &= \frac{y}{L} & z^* &= \frac{z}{L} & R^* &= \frac{R}{L} \\ t^* &= \frac{tU}{L} & p^* &= \frac{p + \rho g z}{\rho U^2}\end{aligned}\quad (5.23)$$

All these are fairly obvious except for  $p^*$ , where we have introduced the piezometric pressure, assuming that  $z$  is up. This is a hindsight idea suggested by Bernoulli's equation (3.54).

Since  $\rho$ ,  $U$ , and  $L$  are all constants, the derivatives in Eqs. (5.21) can all be handled in dimensionless form with dimensional coefficients. For example,

$$\frac{\partial u}{\partial x} = \frac{\partial(Uu^*)}{\partial(Lx^*)} = \frac{U}{L} \frac{\partial u^*}{\partial x^*}$$

Substitute the variables from Eqs. (5.23) into Eqs. (5.21) and (5.22) and divide through by the leading dimensional coefficient, in the same way as we handled Eq. (5.12). Here are the resulting dimensionless equations of motion:

Continuity: 
$$\nabla^* \cdot \mathbf{V}^* = 0 \quad (5.24a)$$

Momentum: 
$$\frac{d\mathbf{V}^*}{dt^*} = -\nabla^* p^* + \frac{\mu}{\rho UL} \nabla^{*2}(\mathbf{V}^*) \quad (5.24b)$$

The dimensionless boundary conditions are:

Fixed solid surface: 
$$\mathbf{V}^* = 0$$

Inlet or outlet: 
$$\text{Known } \mathbf{V}^*, p^*$$

Free surface,  $z^* = \eta^*$ : 
$$\begin{aligned}w^* &= \frac{d\eta^*}{dt^*} \\ p^* &= \frac{p_a}{\rho U^2} + \frac{gL}{U^2} z^* - \frac{Y}{\rho U^2 L} (R_x^{*-1} + R_y^{*-1})\end{aligned}\quad (5.25)$$

These equations reveal a total of four dimensionless parameters, one in the Navier-Stokes equation and three in the free-surface-pressure boundary condition.

### Dimensionless Parameters

In the continuity equation there are no parameters. The Navier-Stokes equation contains one, generally accepted as the most important parameter in fluid mechanics:

$$\text{Reynolds number } \text{Re} = \frac{\rho UL}{\mu}$$

It is named after Osborne Reynolds (1842–1912), a British engineer who first proposed it in 1883 (Ref. 4 of Chap. 6). The Reynolds number is always important, with or without a free surface, and can be neglected only in flow regions away from high-velocity gradients—for example, away from solid surfaces, jets, or wakes.

The no-slip and inlet-exit boundary conditions contain no parameters. The free-surface-pressure condition contains three:

$$\text{Euler number (pressure coefficient)} \text{ Eu} = \frac{p_a}{\rho U^2}$$

This is named after Leonhard Euler (1707–1783) and is rarely important unless the pressure drops low enough to cause vapor formation (cavitation) in a liquid. The Euler number is often written in terms of pressure differences:  $\text{Eu} = \Delta p / (\rho U^2)$ . If  $\Delta p$  involves vapor pressure  $p_v$ , it is called the *cavitation number*  $\text{Ca} = (p_a - p_v) / (\rho U^2)$ .

The second free-surface parameter is much more important:

$$\text{Froude number Fr} = \frac{U^2}{gL}$$

It is named after William Froude (1810–1879), a British naval architect who, with his son Robert, developed the ship-model towing-tank concept and proposed similarity rules for free-surface flows (ship resistance, surface waves, open channels). The Froude number is the dominant effect in free-surface flows and is totally unimportant if there is no free surface. Chapter 10 investigates Froude number effects in detail.

The final free-surface parameter is

$$\text{Weber number We} = \frac{\rho U^2 L}{\gamma}$$

It is named after Moritz Weber (1871–1951) of the Polytechnic Institute of Berlin, who developed the laws of similitude in their modern form. It was Weber who named Re and Fr after Reynolds and Froude. The Weber number is important only if it is of order unity or less, which typically occurs when the surface curvature is comparable in size to the liquid depth, such as in droplets, capillary flows, ripple waves, and very small hydraulic models. If We is large, its effect may be neglected.

If there is no free surface, Fr, Eu, and We drop out entirely, except for the possibility of cavitation of a liquid at very small Eu. Thus, in low-speed viscous flows with no free surface, the Reynolds number is the only important dimensionless parameter.

## Compressibility Parameters

In high-speed flow of a gas there are significant changes in pressure, density, and temperature that must be related by an equation of state such as the perfect-gas law, Eq. (1.10). These thermodynamic changes introduce two additional dimensionless parameters mentioned briefly in earlier chapters:

$$\text{Mach number Ma} = \frac{U}{a} \quad \text{Specific-heat ratio } k = \frac{c_p}{c_v}$$

The Mach number is named after Ernst Mach (1838–1916), an Austrian physicist. The effect of  $k$  is only slight to moderate, but  $\text{Ma}$  exerts a strong effect on compressible flow properties if it is greater than about 0.3. These effects are studied in Chap. 9.

## Oscillating Flows

If the flow pattern is oscillating, a seventh parameter enters through the inlet boundary condition. For example, suppose that the inlet stream is of the form

$$u = U \cos \omega t$$

Nondimensionalization of this relation results in

$$\frac{u}{U} = u^* = \cos\left(\frac{\omega L}{U}t^*\right)$$

The argument of the cosine contains the new parameter

$$\text{Strouhal number } \text{St} = \frac{\omega L}{U}$$


The dimensionless forces and moments, friction, and heat transfer, and so on of such an oscillating flow would be a function of both Reynolds and Strouhal numbers. This parameter is named after V. Strouhal, a German physicist who experimented in 1878 with wires singing in the wind.

Some flows that you might guess to be perfectly steady actually have an oscillatory pattern that is dependent on the Reynolds number. An example is the periodic vortex shedding behind a blunt body immersed in a steady stream of velocity  $U$ . Figure 5.2a shows an array of alternating vortices shed from a circular cylinder immersed in a steady crossflow. This regular, periodic shedding is called a *Kármán vortex street*, after T. von Kármán, who explained it theoretically in 1912. The shedding occurs in the range  $10^2 < \text{Re} < 10^7$ , with an average Strouhal number  $\omega d/(2\pi U) \approx 0.21$ . Figure 5.2b shows measured shedding frequencies.

Resonance can occur if a vortex shedding frequency is near a body's structural vibration frequency. Electric transmission wires sing in the wind, undersea mooring lines gallop at certain current speeds, and slender structures flutter at critical wind or vehicle speeds. A striking example is the disastrous failure of the Tacoma Narrows suspension bridge in 1940, when wind-excited vortex shedding caused resonance with the natural torsional oscillations of the bridge. The problem was magnified by the bridge deck nonlinear stiffness, which occurred when the hangers went slack during the oscillation.

## Other Dimensionless Parameters

We have discussed seven important parameters in fluid mechanics, and there are others. Four additional parameters arise from nondimensionalization of the energy equation (4.75) and its boundary conditions. These four (Prandtl number, Eckert number, Grashof number, and wall temperature ratio) are listed in Table 5.2 just in case you fail to solve Prob. P5.43. Another important and perhaps surprising parameter is the

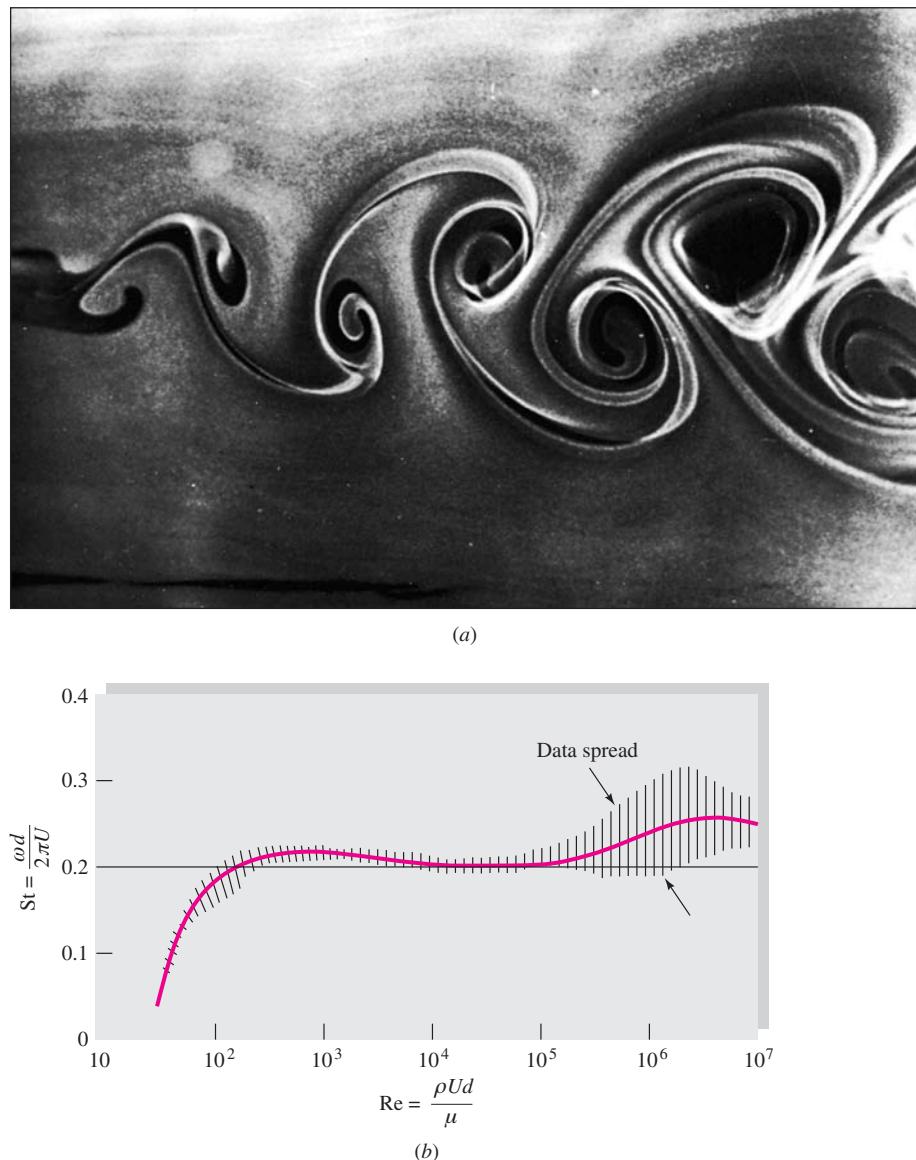

**Fig. 5.2** Vortex shedding from a circular cylinder: (a) vortex street behind a circular cylinder (*Courtesy of U.S. Navy*); (b) experimental shedding frequencies (*data from Refs. 25 and 26*).


wall roughness ratio  $\epsilon/L$  (in Table 5.2).<sup>6</sup> Slight changes in surface roughness have a striking effect in the turbulent flow or high-Reynolds-number range, as we shall see in Chap. 6 and in Fig. 5.3.

This book is primarily concerned with Reynolds-, Mach-, and Froude-number effects, which dominate most flows. Note that we discovered these parameters (except  $\epsilon/L$ ) simply by nondimensionalizing the basic equations without actually solving them.

<sup>6</sup>Roughness is easy to overlook because it is a slight geometric effect that does not appear in the equations of motion. It is a boundary condition that one might forget.

**Table 5.2** Dimensionless Groups in Fluid Mechanics

Parameter	Definition	Qualitative ratio of effects	Importance
Reynolds number	$Re = \frac{\rho UL}{\mu}$	Inertia Viscosity	Almost always
Mach number	$Ma = \frac{U}{a}$	Flow speed Sound speed	Compressible flow
Froude number	$Fr = \frac{U^2}{gL}$	Inertia Gravity	Free-surface flow
Weber number	$We = \frac{\rho U^2 L}{\gamma}$	Inertia Surface tension	Free-surface flow
Rossby number	$Ro = \frac{U}{\Omega_{\text{earth}} L}$	Flow velocity Coriolis effect	Geophysical flows
Cavitation number (Euler number)	$Ca = \frac{p - p_v}{\rho U^2}$	Pressure Inertia	Cavitation
Prandtl number	$Pr = \frac{\mu c_p}{k}$	Dissipation Conduction	Heat convection
Eckert number	$Ec = \frac{U^2}{c_p T_0}$	Kinetic energy Enthalpy	Dissipation
Specific-heat ratio	$k = \frac{c_p}{c_v}$	Enthalpy Internal energy	Compressible flow
Strouhal number	$St = \frac{\omega L}{U}$	Oscillation Mean speed	Oscillating flow
Roughness ratio	$\frac{\epsilon}{L}$	Wall roughness Body length	Turbulent, rough walls
Grashof number	$Gr = \frac{\beta \Delta T g L^3 \rho^2}{\mu^2}$	Buoyancy Viscosity	Natural convection
Rayleigh number	$Ra = \frac{\beta \Delta T g L^3 \rho^2 c_p}{\mu k}$	Buoyancy Viscosity	Natural convection
Temperature ratio	$\frac{T_w}{T_0}$	Wall temperature Stream temperature	Heat transfer
Pressure coefficient	$C_p = \frac{p - p_\infty}{\frac{1}{2} \rho U^2}$	Static pressure Dynamic pressure	Aerodynamics, hydrodynamics
Lift coefficient	$C_L = \frac{L}{\frac{1}{2} \rho U^2 A}$	Lift force Dynamic force	Aerodynamics, hydrodynamics
Drag coefficient	$C_D = \frac{D}{\frac{1}{2} \rho U^2 A}$	Drag force Dynamic force	Aerodynamics, hydrodynamics
Friction factor	$f = \frac{h_f}{(V^2/2g)(L/d)}$	Friction head loss Velocity head	Pipe flow
Skin friction coefficient	$c_f = \frac{\tau_{\text{wall}}}{\rho V^2/2}$	Wall shear stress Dynamic pressure	Boundary layer flow

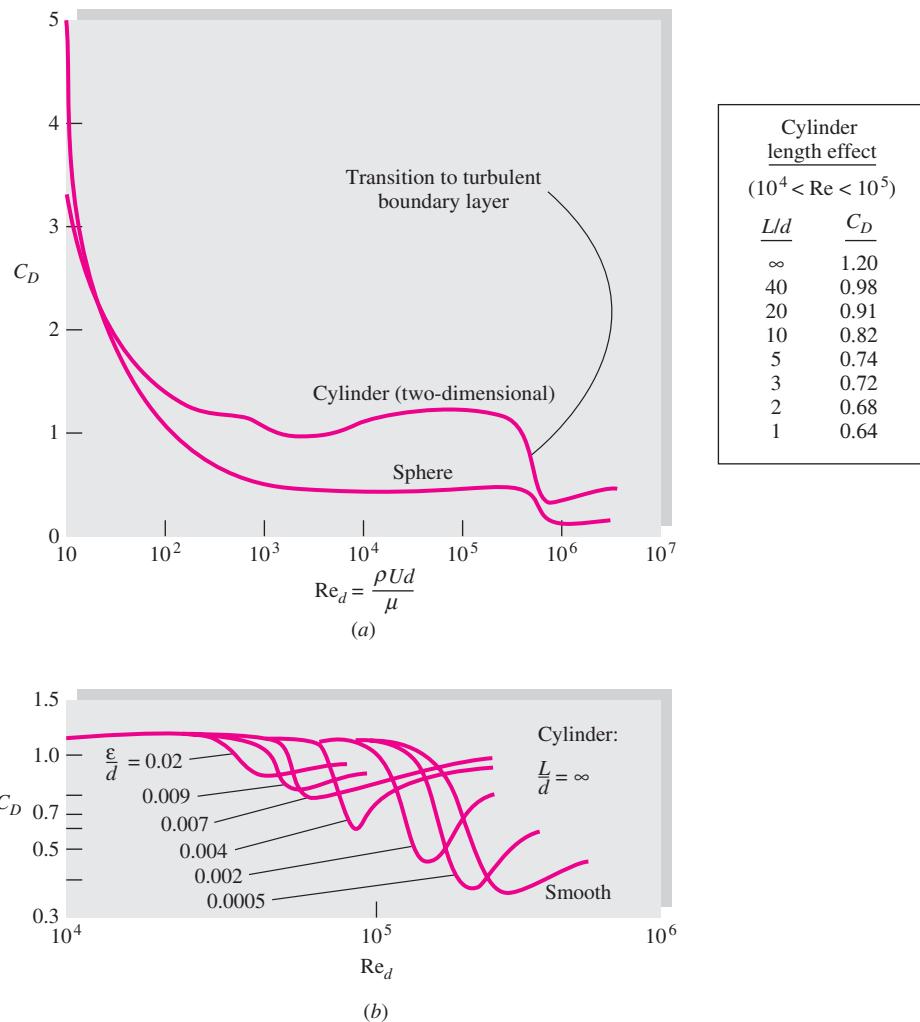

**Fig. 5.3** The proof of practical dimensional analysis: drag coefficients of a cylinder and sphere: (a) drag coefficient of a smooth cylinder and sphere (data from many sources); (b) increased roughness causes earlier transition to a turbulent boundary layer.

If the reader is not satiated with the 19 parameters given in Table 5.2, Ref. 29 contains a list of over 300 dimensionless parameters in use in engineering.

### A Successful Application

Dimensional analysis is fun, but does it work? Yes, if all important variables are included in the proposed function, the dimensionless function found by dimensional analysis will collapse all the data onto a single curve or set of curves.

An example of the success of dimensional analysis is given in Fig. 5.3 for the measured drag on smooth cylinders and spheres. The flow is normal to the axis of the cylinder, which is extremely long,  $L/d \rightarrow \infty$ . The data are from many sources, for both liquids and gases, and include bodies from several meters in diameter down to fine wires and balls less than 1 mm in size. Both curves in Fig. 5.3a are entirely experimental; the analysis of immersed body drag is one of the weakest areas of

modern fluid mechanics theory. Except for digital computer calculations, there is little theory for cylinder and sphere drag except *creeping flow*,  $\text{Re} < 1$ .

The Reynolds number of both bodies is based on diameter, hence the notation  $\text{Re}_d$ . But the drag coefficients are defined differently:

$$C_D = \begin{cases} \frac{\text{drag}}{\frac{1}{2}\rho U^2 L d} & \text{cylinder} \\ \frac{\text{drag}}{\frac{1}{2}\rho U^2 \frac{1}{4}\pi d^2} & \text{sphere} \end{cases} \quad (5.26)$$

They both have a factor  $\frac{1}{2}$  because the term  $\frac{1}{2}\rho U^2$  occurs in Bernoulli's equation, and both are based on the projected area—that is, the area one sees when looking toward the body from upstream. The usual definition of  $C_D$  is thus

$$C_D = \frac{\text{drag}}{\frac{1}{2}\rho U^2 (\text{projected area})} \quad (5.27)$$

However, one should carefully check the definitions of  $C_D$ ,  $\text{Re}$ , and the like before using data in the literature. Airfoils, for example, use the planform area.

Figure 5.3a is for long, smooth cylinders. If wall roughness and cylinder length are included as variables, we obtain from dimensional analysis a complex three-parameter function:

$$C_D = f\left(\text{Re}_d, \frac{\epsilon}{d}, \frac{L}{d}\right) \quad (5.28)$$

To describe this function completely would require 1000 or more experiments or CFD results. Therefore it is customary to explore the length and roughness effects separately to establish trends.

The table with Fig. 5.3a shows the length effect with zero wall roughness. As length decreases, the drag decreases by up to 50 percent. Physically, the pressure is “relieved” at the ends as the flow is allowed to skirt around the tips instead of deflecting over and under the body.

Figure 5.3b shows the effect of wall roughness for an infinitely long cylinder. The sharp drop in drag occurs at lower  $\text{Re}_d$  as roughness causes an earlier transition to a turbulent boundary layer on the surface of the body. Roughness has the same effect on sphere drag, a fact that is exploited in sports by deliberate dimpling of golf balls to give them less drag at their flight  $\text{Re}_d \approx 10^5$ . See Fig. D5.2.

Figure 5.3 is a typical experimental study of a fluid mechanics problem, aided by dimensional analysis. As time and money and demand allow, the complete three-parameter relation (5.28) could be filled out by further experiments.

### EXAMPLE 5.7

A smooth cylinder, 1 cm in diameter and 20 cm long, is tested in a wind tunnel for a cross-flow of 45 m/s of air at 20°C and 1 atm. The measured drag is  $2.2 \pm 0.1$  N. (a) Does this data point agree with the data in Fig. 5.3? (b) Can this data point be used to predict the drag of a chimney 1 m in diameter and 20 m high in winds at 20°C and 1 atm? If so, what

is the recommended range of wind velocities and drag forces for this data point? (c) Why are the answers to part (b) always the same, regardless of the chimney height, as long as  $L = 20d$ ?

### Solution

(a) For air at 20°C and 1 atm, take  $\rho = 1.2 \text{ kg/m}^3$  and  $\mu = 1.8 \times 10^{-5} \text{ kg/(m}\cdot\text{s)}$ . Since the test cylinder is short,  $L/d = 20$ , it should be compared with the tabulated value  $C_D \approx 0.91$  in the table to the right of Fig. 5.3a. First calculate the Reynolds number of the test cylinder:

$$\text{Re}_d = \frac{\rho U d}{\mu} = \frac{(1.2 \text{ kg/m}^3)(45 \text{ m/s})(0.01 \text{ m})}{1.8 \times 10^{-5} \text{ kg/(m}\cdot\text{s)}} = 30,000$$

Yes, this is in the range  $10^4 < \text{Re} < 10^5$  listed in the table. Now calculate the test drag coefficient:

$$C_{D,\text{test}} = \frac{F}{(1/2)\rho U^2 L d} = \frac{2.2 \text{ N}}{(1/2)(1.2 \text{ kg/m}^3)(45 \text{ m/s})^2(0.2 \text{ m})(0.01 \text{ m})} = 0.905$$

Yes, this is close, and certainly within the range of  $\pm 5$  percent stated by the test results.  
Ans. (a)

(b) Since the chimney has  $L/d = 20$ , we can use the data if the Reynolds number range is correct:

$$10^4 < \frac{(1.2 \text{ kg/m}^3)U_{\text{chimney}}(1 \text{ m})}{1.8 \times 10^{-5} \text{ kg/(m}\cdot\text{s)}} < 10^5 \quad \text{if} \quad 0.15 \frac{\text{m}}{\text{s}} < U_{\text{chimney}} < 1.5 \frac{\text{m}}{\text{s}}$$

These are negligible winds, so the test data point is not very useful.  
Ans. (b)  
The drag forces in this range are also negligibly small:

$$F_{\min} = C_D \frac{\rho}{2} U_{\min}^2 L d = (0.91) \left( \frac{1.2 \text{ kg/m}^3}{2} \right) (0.15 \text{ m/s})^2 (20 \text{ m}) (1 \text{ m}) = 0.25 \text{ N}$$

$$F_{\max} = C_D \frac{\rho}{2} U_{\max}^2 L d = (0.91) \left( \frac{1.2 \text{ kg/m}^3}{2} \right) (1.5 \text{ m/s})^2 (20 \text{ m}) (1 \text{ m}) = 25 \text{ N}$$

(c) Try this yourself. Choose any 20:1 size for the chimney, even something silly like 20 mm:1 mm. You will get the same results for  $U$  and  $F$  as in part (b) above. This is because the product  $Ud$  occurs in  $\text{Re}_d$  and, if  $L = 20d$ , the same product occurs in the drag force. For example, for  $\text{Re} = 10^4$ ,

$$Ud = 10^4 \frac{\mu}{\rho} \quad \text{then } F = C_D \frac{\rho}{2} U^2 L d = C_D \frac{\rho}{2} U^2 (20d) d = 20C_D \frac{\rho}{2} (Ud)^2 = 20C_D \frac{\rho}{2} \left( \frac{10^4 \mu}{\rho} \right)^2$$

The answer is always  $F_{\min} = 0.25 \text{ N}$ . This is an algebraic quirk that seldom occurs.

### EXAMPLE 5.8

Telephone wires are said to “sing” in the wind. Consider a wire of diameter 8 mm. At what sea-level wind velocity, if any, will the wire sing a middle C note?

### Solution

For sea-level air take  $\nu \approx 1.5 \text{ E}-5 \text{ m}^2/\text{s}$ . For nonmusical readers, middle C is 262 Hz. Measured shedding rates are plotted in Fig. 5.2b. Over a wide range, the Strouhal number is approximately 0.2, which we can take as a first guess. Note that  $(\omega/2\pi) = f$ , the shedding frequency. Thus

$$\text{St} = \frac{fd}{U} = \frac{(262 \text{ s}^{-1})(0.008 \text{ m})}{U} \approx 0.2$$

$$U \approx 10.5 \frac{\text{m}}{\text{s}}$$

Now check the Reynolds number to see if we fall into the appropriate range:

$$\text{Re}_d = \frac{Ud}{\nu} = \frac{(10.5 \text{ m/s})(0.008 \text{ m})}{1.5 \text{ E}-5 \text{ m}^2/\text{s}} \approx 5600$$

In Fig. 5.2b, at  $\text{Re} = 5600$ , maybe St is a little higher, at about 0.21. Thus a slightly improved estimate is

$$U_{\text{wind}} = (262)(0.008)/(0.21) \approx 10.0 \text{ m/s}$$

*Ans.*

## 5.5 Modeling and Its Pitfalls

So far we have learned about dimensional homogeneity and the pi theorem method, using power products, for converting a homogeneous physical relation to dimensionless form. This is straightforward mathematically, but certain engineering difficulties need to be discussed.

First, we have more or less taken for granted that the variables that affect the process can be listed and analyzed. Actually, selection of the important variables requires considerable judgment and experience. The engineer must decide, for example, whether viscosity can be neglected. Are there significant temperature effects? Is surface tension important? What about wall roughness? Each pi group that is retained increases the expense and effort required. Judgment in selecting variables will come through practice and maturity; this book should provide some of the necessary experience.

Once the variables are selected and the dimensional analysis is performed, the experimenter seeks to achieve *similarity* between the model tested and the prototype to be designed. With sufficient testing, the model data will reveal the desired dimensionless function between variables:

$$\Pi_1 = f(\Pi_2, \Pi_3, \dots, \Pi_k) \quad (5.29)$$

With Eq. (5.29) available in chart, graphical, or analytical form, we are in a position to ensure complete similarity between model and prototype. A formal statement would be as follows:

Flow conditions for a model test are completely similar if all relevant dimensionless parameters have the same corresponding values for the model and the prototype.

This follows mathematically from Eq. (5.29). If  $\Pi_{2m} = \Pi_{2p}$ ,  $\Pi_{3m} = \Pi_{3p}$ , and so forth, Eq. (5.29) guarantees that the desired output  $\Pi_{1m}$  will equal  $\Pi_{1p}$ . But this is

easier said than done, as we now discuss. There are specialized texts on model testing [30–32].

Instead of complete similarity, the engineering literature speaks of particular types of similarity, the most common being geometric, kinematic, dynamic, and thermal. Let us consider each separately.

### Geometric Similarity

Geometric similarity concerns the length dimension  $\{L\}$  and must be ensured before any sensible model testing can proceed. A formal definition is as follows:


A model and prototype are *geometrically similar* if and only if all body dimensions in all three coordinates have the same linear scale ratio.

Note that *all* length scales must be the same. It is as if you took a photograph of the prototype and reduced it or enlarged it until it fitted the size of the model. If the model is to be made one-tenth the prototype size, its length, width, and height must each be one-tenth as large. Not only that, but also its entire shape must be one-tenth as large, and technically we speak of *homologous* points, which are points that have the same relative location. For example, the nose of the prototype is homologous to the nose of the model. The left wingtip of the prototype is homologous to the left wingtip of the model. Then geometric similarity requires that all homologous points be related by the same linear scale ratio. This applies to the fluid geometry as well as the model geometry.


All angles are preserved in geometric similarity. All flow directions are preserved. The orientations of model and prototype with respect to the surroundings must be identical.

Figure 5.4 illustrates a prototype wing and a one-tenth-scale model. The model lengths are all one-tenth as large, but its angle of attack with respect to the free stream is the same for both model and prototype:  $10^\circ$  not  $1^\circ$ . All physical details on the model must be scaled, and some are rather subtle and sometimes overlooked:

1. The model nose radius must be one-tenth as large.
2. The model surface roughness must be one-tenth as large.

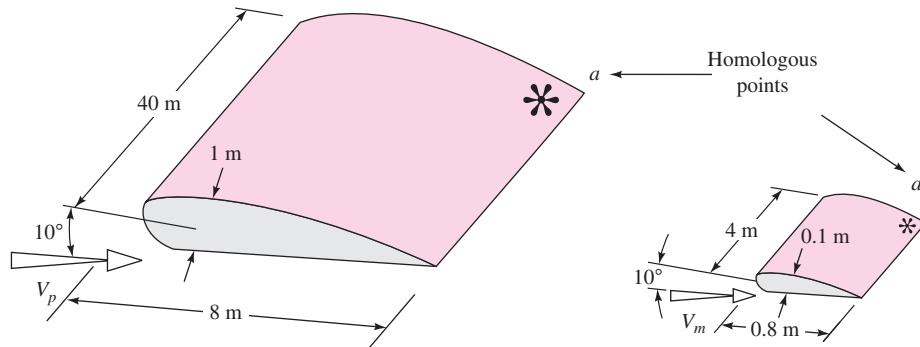

**Fig. 5.4** Geometric similarity in model testing: (a) prototype; (b) one-tenth-scale model.

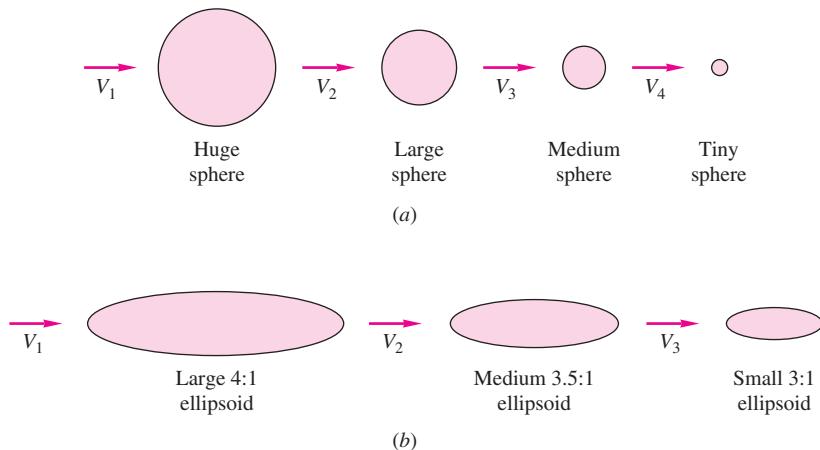

**Fig. 5.5** Geometric similarity and dissimilarity of flows: (a) similar; (b) dissimilar.

3. If the prototype has a 5-mm boundary layer trip wire 1.5 m from the leading edge, the model should have a 0.5-mm trip wire 0.15 m from its leading edge.
4. If the prototype is constructed with protruding fasteners, the model should have homologous protruding fasteners one-tenth as large.

And so on. Any departure from these details is a violation of geometric similarity and must be justified by experimental comparison to show that the prototype behavior was not significantly affected by the discrepancy.

Models that appear similar in shape but that clearly violate geometric similarity should not be compared except at your own risk. Figure 5.5 illustrates this point. The spheres in Fig. 5.5a are all geometrically similar and can be tested with a high expectation of success if the Reynolds number, Froude number, or the like is matched. But the ellipsoids in Fig. 5.5b merely *look* similar. They actually have different linear scale ratios and therefore cannot be compared in a rational manner, even though they may have identical Reynolds and Froude numbers and so on. The data will not be the same for these ellipsoids, and any attempt to “compare” them is a matter of rough engineering judgment.



## Kinematic Similarity

Kinematic similarity requires that the model and prototype have the same length scale ratio and the same time scale ratio. The result is that the velocity scale ratio will be the same for both. As Langhaar [4] states it:

The motions of two systems are kinematically similar if homologous particles lie at homologous points at homologous times.

Length scale equivalence simply implies geometric similarity, but time scale equivalence may require additional dynamic considerations such as equivalence of the Reynolds and Mach numbers.

One special case is incompressible frictionless flow with no free surface, as sketched in Fig. 5.6a. These perfect-fluid flows are kinematically similar with independent length and time scales, and no additional parameters are necessary (see Chap. 8 for further details).

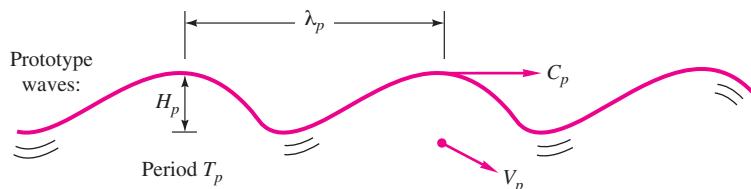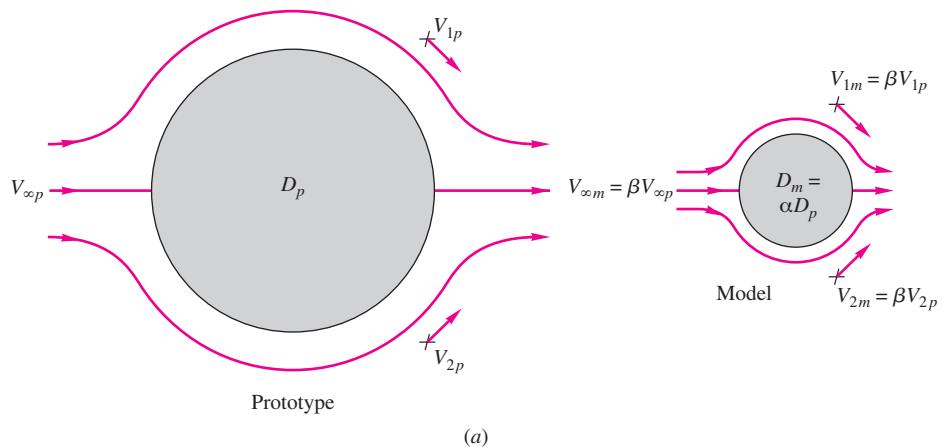

**Fig. 5.6** Frictionless low-speed flows are kinematically similar: (a) Flows with no free surface are kinematically similar with independent length and time scale ratios; (b) free-surface flows are kinematically similar with length and time scales related by the Froude number.

Frictionless flows with a free surface, as in Fig. 5.6b, are kinematically similar if their Froude numbers are equal:

$$\text{Fr}_m = \frac{V_m^2}{gL_m} = \frac{V_p^2}{gL_p} = \text{Fr}_p \quad (5.30)$$

Note that the Froude number contains only length and time dimensions and hence is a purely kinematic parameter that fixes the relation between length and time. From Eq. (5.30), if the length scale is

$$L_m = \alpha L_p \quad (5.31)$$

where  $\alpha$  is a dimensionless ratio, the velocity scale is

$$\frac{V_m}{V_p} = \left( \frac{L_m}{L_p} \right)^{1/2} = \sqrt{\alpha} \quad (5.32)$$

and the time scale is

$$\frac{T_m}{T_p} = \frac{L_m/V_m}{L_p/V_p} = \sqrt{\alpha} \quad (5.33)$$

These Froude-scaling kinematic relations are illustrated in Fig. 5.6b for wave motion modeling. If the waves are related by the length scale  $\alpha$ , then the wave period, propagation speed, and particle velocities are related by  $\sqrt{\alpha}$ .

If viscosity, surface tension, or compressibility is important, kinematic similarity depends on the achievement of dynamic similarity.

## Dynamic Similarity


Dynamic similarity exists when the model and the prototype have the same length scale ratio, time scale ratio, and force scale (or mass scale) ratio. Again geometric similarity is a first requirement; without it, proceed no further. Then dynamic similarity exists, simultaneous with kinematic similarity, if the model and prototype force and pressure coefficients are identical. This is ensured if

1. For compressible flow, the model and prototype Reynolds number and Mach number and specific-heat ratio are correspondingly equal.
2. For incompressible flow
  - a. With no free surface: model and prototype Reynolds numbers are equal.
  - b. With a free surface: model and prototype Reynolds number, Froude number, and (if necessary) Weber number and cavitation number are correspondingly equal.

Mathematically, Newton's law for any fluid particle requires that the sum of the pressure force, gravity force, and friction force equal the acceleration term, or inertia force,

$$\mathbf{F}_p + \mathbf{F}_g + \mathbf{F}_f = \mathbf{F}_i$$

The dynamic similarity laws listed above ensure that each of these forces will be in the same ratio and have equivalent directions between model and prototype. Figure 5.7

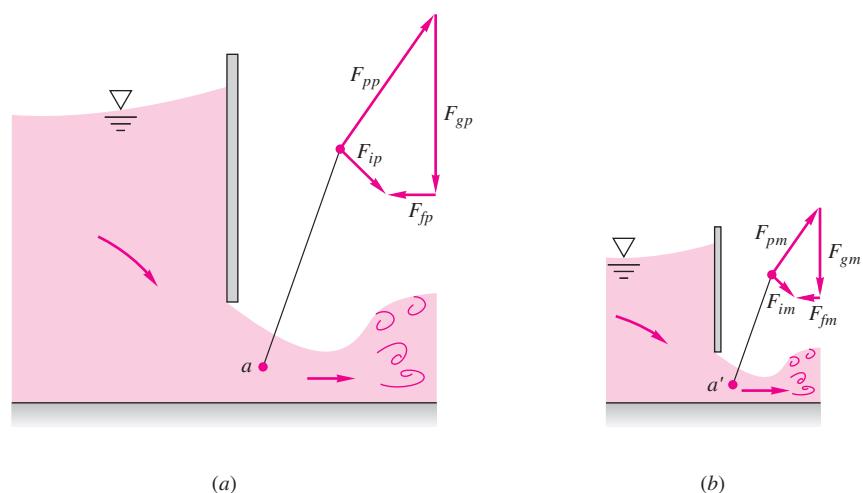

**Fig. 5.7** Dynamic similarity in sluice gate flow. Model and prototype yield identical homologous force polygons if the Reynolds and Froude numbers are the same corresponding values: (a) prototype; (b) model.

shows an example for flow through a sluice gate. The force polygons at homologous points have exactly the same shape if the Reynolds and Froude numbers are equal (neglecting surface tension and cavitation, of course). Kinematic similarity is also ensured by these model laws.

### Discrepancies in Water and Air Testing

The perfect dynamic similarity shown in Fig. 5.7 is more of a dream than a reality because true equivalence of Reynolds and Froude numbers can be achieved only by dramatic changes in fluid properties, whereas in fact most model testing is simply done with water or air, the cheapest fluids available.


First consider hydraulic model testing with a free surface. Dynamic similarity requires equivalent Froude numbers, Eq. (5.30), and equivalent Reynolds numbers:

$$\frac{V_m L_m}{\nu_m} = \frac{V_p L_p}{\nu_p} \quad (5.34)$$

But both velocity and length are constrained by the Froude number, Eqs. (5.31) and (5.32). Therefore, for a given length scale ratio  $\alpha$ , Eq. (5.34) is true only if

$$\frac{\nu_m}{\nu_p} = \frac{L_m}{L_p} \frac{V_m}{V_p} = \alpha \sqrt{\alpha} = \alpha^{3/2} \quad (5.35)$$

For example, for a one-tenth-scale model,  $\alpha = 0.1$  and  $\alpha^{3/2} = 0.032$ . Since  $\nu_p$  is undoubtedly water, we need a fluid with only 0.032 times the kinematic viscosity of water to achieve dynamic similarity. Referring to Table 1.4, we see that this is impossible: Even mercury has only one-ninth the kinematic viscosity of water, and a mercury hydraulic model would be expensive and bad for your health. In practice, water is used for both the model and the prototype, and the Reynolds number similarity (5.34) is unavoidably violated. The Froude number is held constant since it is the dominant parameter in free-surface flows. Typically the Reynolds number of the model flow is too small by a factor of 10 to 1000. As shown in Fig. 5.8, the low-Reynolds-number model data are used to estimate by extrapolation the desired high-Reynolds-number prototype data. As the figure indicates, there is obviously considerable uncertainty in using such an extrapolation, but there is no other practical alternative in hydraulic model testing.

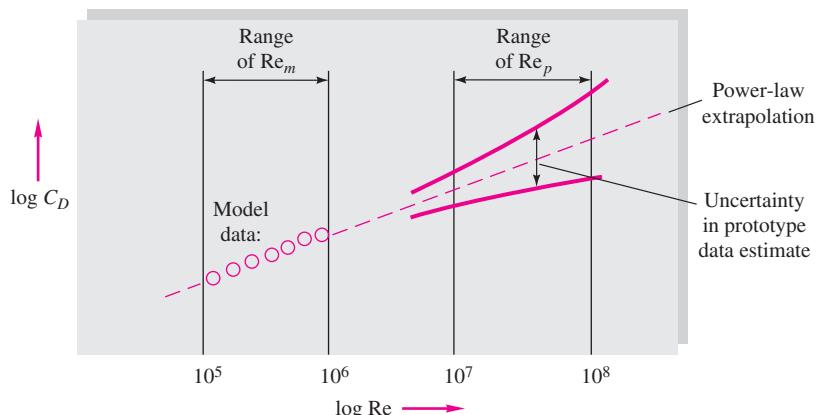

**Fig. 5.8** Reynolds-number extrapolation, or scaling, of hydraulic data with equal Froude numbers.

Second, consider aerodynamic model testing in air with no free surface. The important parameters are the Reynolds number and the Mach number. Equation (5.34) should be satisfied, plus the compressibility criterion

$$\frac{V_m}{a_m} = \frac{V_p}{a_p} \quad (5.36)$$

Elimination of  $V_m/V_p$  between (5.34) and (5.36) gives

$$\frac{\nu_m}{\nu_p} = \frac{L_m}{L_p} \frac{a_m}{a_p} \quad (5.37)$$

Since the prototype is no doubt an air operation, we need a wind-tunnel fluid of low viscosity and high speed of sound. Hydrogen is the only practical example, but clearly it is too expensive and dangerous. Therefore wind tunnels normally operate with air as the working fluid. Cooling and pressurizing the air will bring Eq. (5.37) into better agreement but not enough to satisfy a length scale reduction of, say, one-tenth. Therefore Reynolds number scaling is also commonly violated in aerodynamic testing, and an extrapolation like that in Fig. 5.8 is required here also.

There are specialized monographs devoted entirely to wind tunnel testing: low speed [38], high speed [39], and a detailed general discussion [40]. The following example illustrates modeling discrepancies in aeronautical testing.

### EXAMPLE 5.9

A prototype airplane, with a chord length of 1.6 m, is to fly at  $\text{Ma} = 2$  at 10 km standard altitude. A one-eighth scale model is to be tested in a helium wind tunnel at 100°C and 1 atm. Find the helium test section velocity that will match (a) the Mach number or (b) the Reynolds number of the prototype. In each case criticize the lack of dynamic similarity. (c) What high pressure in the helium tunnel will match both the Mach and Reynolds numbers? (d) Why does part (c) still not achieve dynamic similarity?

#### Solution

For helium, from Table A.4,  $R = 2077 \text{ m}^2/(\text{s}^2\text{-K})$ ,  $k = 1.66$ , and estimate  $\mu_{\text{He}} \approx 2.32 \times 10^{-5} \text{ kg}/(\text{m} \cdot \text{s})$  from the power-law,  $n = 0.67$ , in the table. (a) Calculate the helium speed of sound and velocity:

$$a_{\text{He}} = \sqrt{(kRT)_{\text{He}}} = \sqrt{(1.66)(2077 \text{ m}^2/\text{s}^2\text{K}) \times (373 \text{ K})} = 1134 \text{ m/s}$$

$$\text{Ma}_{\text{air}} = \text{Ma}_{\text{He}} = 2.0 = \frac{V_{\text{He}}}{a_{\text{He}}} = \frac{V_{\text{He}}}{1134 \text{ m/s}}$$

$$V_{\text{He}} = 2268 \frac{\text{m}}{\text{s}} \quad \text{Ans. (a)}$$

For dynamic similarity, the Reynolds numbers should also be equal. From Table A.6 at an altitude of 10,000 m, read  $\rho_{\text{air}} = 0.4125 \text{ kg/m}^3$ ,  $a_{\text{air}} = 299.5 \text{ m/s}$ , and estimate  $\mu_{\text{air}} \approx 1.48 \times 10^{-5} \text{ kg/m} \cdot \text{s}$  from the power-law,  $n = 0.7$ , in Table A.4. The air velocity is  $V_{\text{air}} = (\text{Ma})(a_{\text{air}}) = 2(299.5) = 599 \text{ m/s}$ . The model chord length is  $(1.6 \text{ m})/8 = 0.2 \text{ m}$ . The helium density

is  $\rho_{\text{He}} = (p/RT)_{\text{He}} = (101,350 \text{ Pa})/[(2077 \text{ m}^2/\text{s}^2 \text{ K})(373 \text{ K})] = 0.131 \text{ kg/m}^3$ . Now calculate the two Reynolds numbers:

$$\text{Re}_{C,\text{air}} = \frac{\rho VC}{\mu} \Big|_{\text{air}} = \frac{(0.4125 \text{ kg/m}^3)(599 \text{ m/s})(1.6 \text{ m})}{1.48 \times 10^{-5} \text{ kg/(m \cdot s)}} = 26.6 \text{ E6}$$

$$\text{Re}_{C,\text{He}} = \frac{\rho VC}{\mu} \Big|_{\text{He}} = \frac{(0.131 \text{ kg/m}^3)(2268 \text{ m/s})(0.2 \text{ m})}{2.32 \times 10^{-5} \text{ kg/(m \cdot s)}} = 2.56 \text{ E6}$$

The model Reynolds number is 10 times less than the prototype. This is typical when using small-scale models. The test results must be extrapolated for Reynolds number effects.

(b) Now ignore Mach number and let the model Reynolds number match the prototype:

$$\text{Re}_{\text{He}} = \text{Re}_{\text{air}} = 26.6 \text{ E6} = \frac{(0.131 \text{ kg/m}^3)V_{\text{He}}(0.2 \text{ m})}{2.32 \times 10^{-5} \text{ kg/(m \cdot s)}}$$

$$V_{\text{He}} = 23,600 \frac{\text{m}}{\text{s}} \quad \text{Ans. (b)}$$

This is ridiculous: a hypersonic Mach number of 21, suitable for escaping from the earth's gravity. One should match the Mach numbers and correct for a lower Reynolds number.

(c) Match both Reynolds and Mach numbers by increasing the helium density:  
Ma matches if

$$V_{\text{He}} = 2268 \frac{\text{m}}{\text{s}}$$

Then

$$\text{Re}_{\text{He}} = 26.6 \text{ E6} = \frac{\rho_{\text{He}}(2268 \text{ m/s})(0.2 \text{ m})}{2.32 \times 10^{-5} \text{ kg/(m \cdot s)}}$$

Solve for

$$\rho_{\text{He}} = 1.36 \frac{\text{kg}}{\text{m}^3} \quad p_{\text{He}} = \rho RT \Big|_{\text{He}} = (1.36)(2077)(373) = 1.05 \text{ E6 Pa} \quad \text{Ans. (c)}$$

A match is possible if we increase the tunnel pressure by a factor of ten, a daunting task.

(d) Even with Ma and Re matched, we are *still* not dynamically similar because the two gases have different specific heat ratios:  $k_{\text{He}} = 1.66$  and  $k_{\text{air}} = 1.40$ . This discrepancy will cause substantial differences in pressure, density, and temperature throughout supersonic flow.

Figure 5.9 shows a hydraulic model of the Bluestone Lake Dam in West Virginia. The model itself is located at the U.S. Army Waterways Experiment Station in Vicksburg, MS. The horizontal scale is 1:65, which is sufficient that the vertical scale can also be 1:65 without incurring significant surface tension (Weber number) effects. Velocities are scaled by the Froude number. However, the prototype Reynolds number, which is of order 1E7, cannot be matched here. The engineers set the Reynolds number at about 2E4, high enough for a reasonable approximation of prototype turbulent flow viscous effects. Note the intense turbulence below the dam. The downstream bed, or *apron*, of a dam must be strengthened structurally to avoid bed erosion.



**Fig. 5.9** Hydraulic model of the Bluestone Lake Dam on the New River near Hinton, West Virginia. The model scale is 1:65 both vertically and horizontally, and the Reynolds number, though far below the prototype value, is set high enough for the flow to be turbulent. (*Courtesy of the U.S. Army Corps of Engineers Waterways Experiment Station.*)

For hydraulic models of larger scale, such as harbors, estuaries, and embayments, geometric similarity may be violated of necessity. The vertical scale will be distorted to avoid Weber number effects. For example, the horizontal scale may be 1:1000, while the vertical scale is only 1:100. Thus the model channel may be *deeper* relative to its horizontal dimensions. Since deeper passages flow more efficiently, the model channel bottom may be deliberately roughened to create the friction level expected in the prototype.

#### EXAMPLE 5.10

The pressure drop due to friction for flow in a long smooth pipe is a function of average flow velocity, density, viscosity, and pipe length and diameter:  $\Delta p = \text{fcn}(V, \rho, \mu, L, D)$ . We wish to know how  $\Delta p$  varies with  $V$ . (a) Use the pi theorem to rewrite this function in

dimensionless form. (b) Then plot this function, using the following data for three pipes and three fluids:

D, cm	L, m	Q, m <sup>3</sup> /h	Δp, Pa	ρ, kg/m <sup>3</sup>	μ, kg/(m · s)	V, m/s*
1.0	5.0	0.3	4,680	680†	2.92 E-4†	1.06
1.0	7.0	0.6	22,300	680†	2.92 E-4†	2.12
1.0	9.0	1.0	70,800	680†	2.92 E-4†	3.54
2.0	4.0	1.0	2,080	998‡	0.0010‡	0.88
2.0	6.0	2.0	10,500	998‡	0.0010‡	1.77
2.0	8.0	3.1	30,400	998‡	0.0010‡	2.74
3.0	3.0	0.5	540	13,550§	1.56 E-3§	0.20
3.0	4.0	1.0	2,480	13,550§	1.56 E-3§	0.39
3.0	5.0	1.7	9,600	13,550§	1.56 E-3§	0.67

\* $V = Q/A$ ,  $A = \pi D^2/4$ .

†Gasoline.

‡Water.

§Mercury.

(c) Suppose it is further known that  $\Delta p$  is proportional to  $L$  (which is quite true for long pipes with well-rounded entrances). Use this information to simplify and improve the pi theorem formulation. Plot the dimensionless data in this improved manner and comment on the results.

### Solution

There are six variables with three primary dimensions involved {MLT}. Therefore we expect that  $j = 6 - 3 = 3$  pi groups. We are correct, for we can find three variables that do not form a pi product, for example,  $(\rho, V, L)$ . Carefully select three ( $j$ ) repeating variables, but not including  $\Delta p$  or  $V$ , which we plan to plot versus each other. We select  $(\rho, \mu, D)$ , and the pi theorem guarantees that three independent power-product groups will occur:

$$\Pi_1 = \rho^a \mu^b D^c \Delta p \quad \Pi_2 = \rho^d \mu^e D^f V \quad \Pi_3 = \rho^g \mu^h D^i L$$

or

$$\Pi_1 = \frac{\rho D^2 \Delta p}{\mu^2} \quad \Pi_2 = \frac{\rho V D}{\mu} \quad \Pi_3 = \frac{L}{D}$$

We have omitted the algebra of finding  $(a, b, c, d, e, f, g, h, i)$  by setting all exponents to zero  $M^0, L^0, T^0$ . Therefore we wish to plot the dimensionless relation


$$\frac{\rho D^2 \Delta p}{\mu^2} = \text{fcn}\left(\frac{\rho V D}{\mu}, \frac{L}{D}\right) \quad \text{Ans. (a)}$$

We plot  $\Pi_1$  versus  $\Pi_2$  with  $\Pi_3$  as a parameter. There will be nine data points. For example, the first row in the data here yields

$$\frac{\rho D^2 \Delta p}{\mu^2} = \frac{(680)(0.01)^2(4680)}{(2.92 \text{ E-}4)^2} = 3.73 \text{ E9}$$

$$\frac{\rho V D}{\mu} = \frac{(680)(1.06)(0.01)}{2.92 \text{ E-}4} = 24,700 \quad \frac{L}{D} = 500$$

The nine data points are plotted as the open circles in Fig. 5.10. The values of  $L/D$  are listed for each point, and we see a significant length effect. In fact, if we connect the only two points that have the same  $L/D$  ( $= 200$ ), we could see (and cross-plot to verify) that  $\Delta p$  increases linearly with  $L$ , as stated in the last part of the problem. Since  $L$  occurs only in

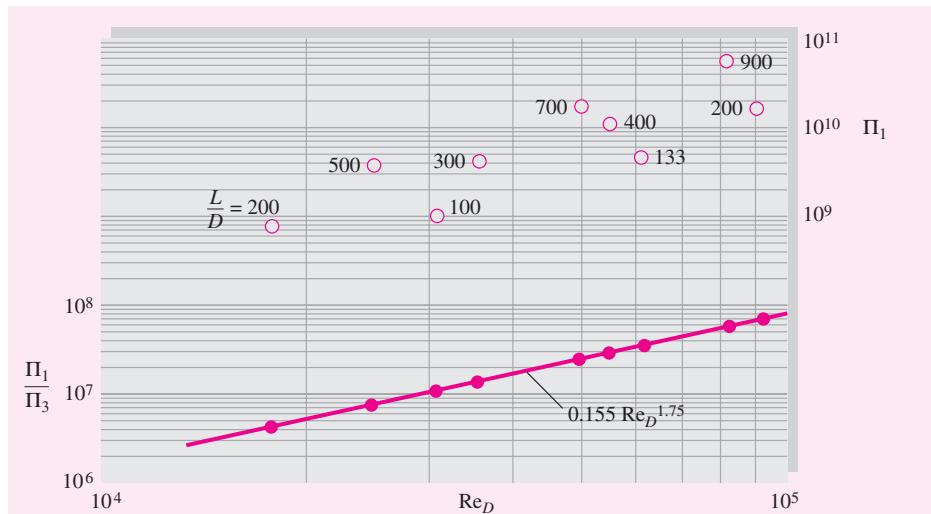

**Fig. 5.10** Two different correlations of the data in Example 5.10: Open circles when plotting  $\rho D^2 \Delta p / \mu^2$  versus  $\text{Re}_D$ ,  $L/D$  is a parameter; once it is known that  $\Delta p$  is proportional to  $L$ , a replot (solid circles) of  $\rho D^3 \Delta p / (L \mu^2)$  versus  $\text{Re}_D$  collapses into a single power-law curve.

$\Pi_3 = L/D$ , the function  $\Pi_1 = \text{fcn}(\Pi_2, \Pi_3)$  must reduce to  $\Pi_1 = (L/D) \text{fcn}(\Pi_2)$ , or simply a function involving only two parameters:

$$\frac{\rho D^3 \Delta p}{L \mu^2} = \text{fcn}\left(\frac{\rho V D}{\mu}\right) \quad \text{flow in a long pipe} \quad \text{Ans. (c)}$$

We now modify each data point in Fig. 5.10 by dividing it by its  $L/D$  value. For example, for the first row of data,  $\rho D^3 \Delta p / (L \mu^2) = (3.73 \times 10^6)/500 = 7.46 \times 10^6$ . We replot these new data points as solid circles in Fig. 5.10. They correlate almost perfectly into a straight-line power-law function:

$$\frac{\rho D^3 \Delta p}{L \mu^2} \approx 0.155 \left(\frac{\rho V D}{\mu}\right)^{1.75} \quad \text{Ans. (c)}$$

All newtonian smooth pipe flows should correlate in this manner. This example is a variation of the first completely successful dimensional analysis, pipe-flow friction, performed by Prandtl's student Paul Blasius, who published a related plot in 1911. For this range of (turbulent flow) Reynolds numbers, the pressure drop increases approximately as  $V^{1.75}$ .

### EXAMPLE 5.11

The smooth sphere data plotted in Fig. 5.3a represent dimensionless drag versus dimensionless viscosity, since  $(\rho, V, d)$  were selected as scaling or repeating variables. (a) Replot these data to display the effect of dimensionless velocity on the drag. (b) Use your new figure to predict the terminal (zero-acceleration) velocity of a 1-cm-diameter steel ball ( $\text{SG} = 7.86$ ) falling through water at 20°C.

### Solution

- **Assumptions:** Fig 5.3a is valid for any smooth sphere in that Reynolds number range.
- **Approach (a):** Form pi groups from the function  $F = \text{fcn}(d, V, \rho, \mu)$  in such a way that  $F$  is plotted versus  $V$ . The answer was already given as Eq. (5.16), but let us review the


steps. The proper scaling variables are  $(\rho, \mu, d)$ , which do *not* form a pi. Therefore  $j = 3$ , and we expect  $n - j = 5 - 3 = 2$  pi groups. Skipping the algebra, they arise as follows:

$$\Pi_1 = \rho^a \mu^b d^c F = \frac{\rho F}{\mu^2} \quad \Pi_2 = \rho^a \mu^b d^c V = \frac{\rho V d}{\mu} \quad \text{Ans. (a)}$$

We may replot the data of Fig. 5.3a in this new form, noting that  $\Pi_1 \equiv (\pi/8)(C_D)(Re)^2$ . This replot is shown as Fig. 5.11. The drag increases rapidly with velocity up to transition, where there is a slight drop, after which it increases more than ever. If force is known, we may predict velocity from the figure, and vice versa.

- *Property values for part (b):*  $\rho_{\text{water}} = 998 \text{ kg/m}^3 \quad \mu_{\text{water}} = 0.001 \text{ kg/(m-s)}$   
 $\rho_{\text{steel}} = 7.86 \rho_{\text{water}} = 7844 \text{ kg/m}^3$ .
- *Solution to part (b):* For terminal velocity, the drag force equals the net weight of the sphere in water:

$$F = W_{\text{net}} = (\rho_s - \rho_w)g \frac{\pi}{6} d^3 = (7840 - 998)(9.81)\left(\frac{\pi}{6}\right)(0.01)^3 = 0.0351 \text{ N}$$

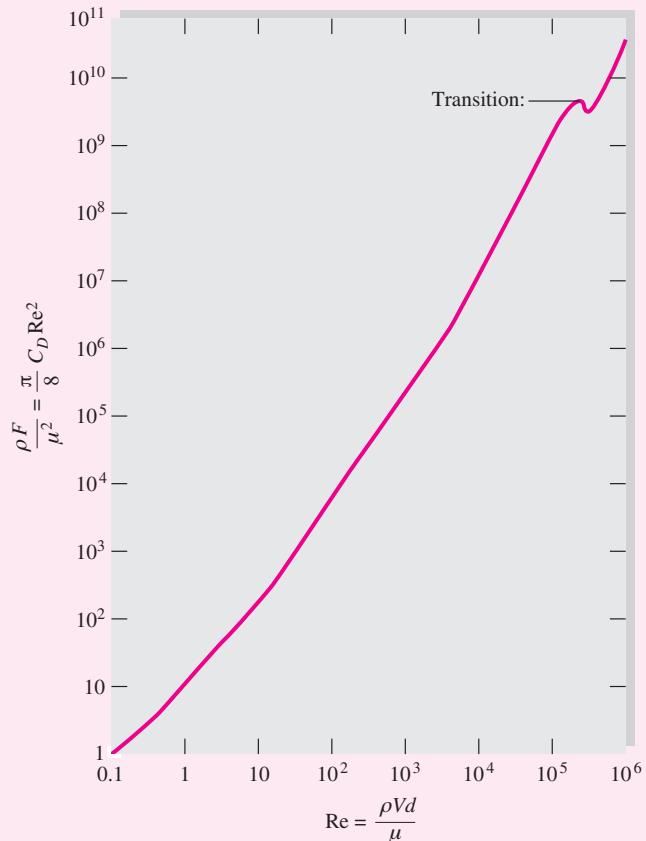

**Fig. 5.11** Cross-plot of sphere drag data from Fig. 5.3a to show dimensionless force versus dimensionless velocity.

Therefore the ordinate of Fig. 5.11 is known:

$$\text{Falling steel sphere: } \frac{\rho F}{\mu^2} = \frac{(998 \text{ kg/m}^3)(0.0351 \text{ N})}{[0.001 \text{ kg/(m} \cdot \text{s)}]^2} \approx 3.5 \text{ E7}$$

From Fig. 5.11, at  $\rho F/\mu^2 \approx 3.5 \text{ E7}$ , a magnifying glass reveals that  $\text{Re}_d \approx 2 \text{ E4}$ . Then a crude estimate of the terminal fall velocity is

$$\frac{\rho Vd}{\mu} \approx 20,000 \quad \text{or} \quad V \approx \frac{20,000[0.001 \text{ kg/(m} \cdot \text{s)}]}{(998 \text{ kg/m}^3)(0.01 \text{ m})} \approx 2.0 \frac{\text{m}}{\text{s}} \quad \text{Ans. (b)}$$

- *Comments:* Better accuracy could be obtained by expanding the scale of Fig. 5.11 in the region of the given force coefficient. However, there is considerable uncertainty in published drag data for spheres, so the predicted fall velocity is probably uncertain by at least  $\pm 10$  percent.

Note that we found the answer directly from Fig. 5.11. We could use Fig. 5.3a also but would have to iterate between the ordinate and abscissa to obtain the final result, since  $V$  is contained in both plotted variables.

## Summary

Chapters 3 and 4 presented integral and differential methods of mathematical analysis of fluid flow. This chapter introduces the third and final method: experimentation, as supplemented by the technique of dimensional analysis. Tests and experiments are used both to strengthen existing theories and to provide useful engineering results when theory is inadequate.

The chapter begins with a discussion of some familiar physical relations and how they can be recast in dimensionless form because they satisfy the principle of dimensional homogeneity. A general technique, the pi theorem, is then presented for systematically finding a set of dimensionless parameters by grouping a list of variables that govern any particular physical process. A second technique, Ipsen's method, is also described. Alternately, direct application of dimensional analysis to the basic equations of fluid mechanics yields the fundamental parameters governing flow patterns: Reynolds number, Froude number, Prandtl number, Mach number, and others.

It is shown that model testing in air and water often leads to scaling difficulties for which compromises must be made. Many model tests do not achieve true dynamic similarity. The chapter ends by pointing out that classic dimensionless charts and data can be manipulated and recast to provide direct solutions to problems that would otherwise be quite cumbersome and laboriously iterative.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon  will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon  may require the use of a com-

puter. The standard end-of-chapter problems P5.1 to P5.91 (categorized in the problem list here) are followed by word problems W5.1 to W5.10, fundamentals of engineering exam problems FE5.1 to FE5.12, comprehensive applied problems C5.1 to C5.5, and design projects D5.1 and D5.2.

**Problem Distribution**

Section	Topic	Problems
5.1	Introduction	P5.1–P5.9
5.2	The principle of dimensional homogeneity	P5.10–P5.13
5.3	The pi theorem; Ipsen's method	P5.14–P5.42
5.4	Nondimensionalizing the basic equations	P5.43–P5.47
5.4	Data for spheres, cylinders, other bodies	P5.48–P5.59
5.5	Scaling of model data	P5.60–P5.74
5.5	Froude and Mach number scaling	P5.75–P5.84
5.5	Inventive rescaling of the data	P5.85–P5.91

**Introduction; dynamic similarity**

**P5.1** For axial flow through a circular tube, the Reynolds number for transition to turbulence is approximately 2300 [see Eq. (6.2)], based on the diameter and average velocity. If  $d = 5$  cm and the fluid is kerosene at 20°C, find the volume flow rate in  $\text{m}^3/\text{h}$  that causes transition.

**P5.2** A prototype automobile is designed for cold weather in Denver, CO ( $-10^\circ\text{C}$ , 83 kPa). Its drag force is to be tested on a one-seventh-scale model in a wind tunnel at 150 mi/h, 20°C and 1 atm. If the model and prototype are to satisfy dynamic similarity, what prototype velocity, in mi/h, needs to be matched? Comment on your result.

**P5.3** The transfer of energy by viscous dissipation is dependent upon viscosity  $\mu$ , thermal conductivity  $k$ , stream velocity  $U$ , and stream temperature  $T_0$ . Group these quantities, if possible, into the dimensionless *Brinkman number*, which is proportional to  $\mu$ .

**P5.4** When tested in water at 20°C flowing at 2 m/s, an 8-cm-diameter sphere has a measured drag of 5 N. What will be the velocity and drag force on a 1.5-m-diameter weather balloon moored in sea-level standard air under dynamically similar conditions?

**P5.5** An automobile has a characteristic length and area of 8 ft and 60  $\text{ft}^2$ , respectively. When tested in sea-level standard air, it has the following measured drag force versus speed:

V, mi/h	20	40	60
Drag, lbf	31	115	249

The same car travels in Colorado at 65 mi/h at an altitude of 3500 m. Using dimensional analysis, estimate (a) its drag force and (b) the horsepower required to overcome air drag.

**P5.6** The full-scale parachute in the chapter-opener photo had a drag force of approximately 950 lbf when tested at a velocity of 12 mi/h in air at 20°C and 1 atm. Earlier, a model parachute of diameter 1.7 m was tested in the same tunnel. (a) For dynamic similarity, what should be the air velocity for the model? (b) What is the expected drag

force of the model? (c) Is there anything surprising about your result to part (b)?

**P5.7** A body is dropped on the moon ( $g = 1.62 \text{ m/s}^2$ ) with an initial velocity of 12 m/s. By using option 2 variables, Eq. (5.11), the ground impact occurs at  $t^{**} = 0.34$  and  $S^{**} = 0.84$ . Estimate (a) the initial displacement, (b) the final displacement, and (c) the time of impact.

**P5.8** The *Morton number*  $Mo$ , used to correlate bubble dynamics studies, is a dimensionless combination of acceleration of gravity  $g$ , viscosity  $\mu$ , density  $\rho$ , and surface tension coefficient  $\gamma$ . If  $Mo$  is proportional to  $g$ , find its form.

**P5.9** The *Richardson number*,  $Ri$ , which correlates the production of turbulence by buoyancy, is a dimensionless combination of the acceleration of gravity  $g$ , the fluid temperature  $T_0$ , the local temperature gradient  $\partial T / \partial z$ , and the local velocity gradient  $\partial u / \partial z$ . Determine the form of the Richardson number if it is proportional to  $g$ .

**The principle of dimensional homogeneity**

**P5.10** Determine the dimension  $\{MLT^\Theta\}$  of the following quantities:

- (a)  $\rho u \frac{\partial u}{\partial x}$  (b)  $\int_1^2 (p - p_0) dA$  (c)  $\rho c_p \frac{\partial^2 T}{\partial x \partial y}$   
 (d)  $\iiint \rho \frac{\partial u}{\partial t} dx dy dz$

All quantities have their standard meanings; for example,  $\rho$  is density.

**P5.11** During World War II, Sir Geoffrey Taylor, a British fluid dynamicist, used dimensional analysis to estimate the wave speed of an atomic bomb explosion. He assumed that the blast wave radius  $R$  was a function of energy released  $E$ , air density  $\rho$ , and time  $t$ . Use dimensional reasoning to show how wave radius must vary with time.

**P5.12** The *Stokes number*,  $St$ , used in particle dynamics studies, is a dimensionless combination of *five* variables: acceleration of gravity  $g$ , viscosity  $\mu$ , density  $\rho$ , particle velocity  $U$ , and particle diameter  $D$ . (a) If  $St$  is proportional to  $\mu$  and inversely proportional to  $g$ , find its form. (b) Show that  $St$  is actually the quotient of two more traditional dimensionless groups.

**P5.13** The speed of propagation  $C$  of a capillary wave in deep water is known to be a function only of density  $\rho$ , wavelength  $\lambda$ , and surface tension  $\gamma$ . Find the proper functional relationship, completing it with a dimensionless constant. For a given density and wavelength, how does the propagation speed change if the surface tension is doubled?

### The pi theorem; Ippen's method

**P5.14** In forced convection, the heat transfer coefficient  $h$  is a function of thermal conductivity  $k$ , density  $\rho$ , viscosity  $\mu$ , specific heat  $c_p$ , body length  $L$ , and velocity  $V$ . Heat transfer coefficient has units of  $\text{W}/(\text{m}^2\text{-K})$  and dimensions  $\{\text{MT}^{-3}\Theta^{-1}\}$ . Rewrite this relation in dimensionless form, using  $(k, \rho, c_p, L)$  as repeating variables.

**P5.15** The wall shear stress  $\tau_w$  in a boundary layer is assumed to be a function of stream velocity  $U$ , boundary layer thickness  $\delta$ , local turbulence velocity  $u'$ , density  $\rho$ , and local pressure gradient  $dp/dx$ . Using  $(\rho, U, \delta)$  as repeating variables, rewrite this relationship as a dimensionless function.

**P5.16** Convection heat transfer data are often reported as a *heat transfer coefficient*  $h$ , defined by

$$\dot{Q} = hA \Delta T$$

where  $\dot{Q}$  = heat flow,  $\text{J/s}$

$A$  = surface area,  $\text{m}^2$

$\Delta T$  = temperature difference,  $\text{K}$

The dimensionless form of  $h$ , called the *Stanton number*, is a combination of  $h$ , fluid density  $\rho$ , specific heat  $c_p$ , and flow velocity  $V$ . Derive the Stanton number if it is proportional to  $h$ . What are the units of  $h$ ?

**P5.17** If you disturb a tank of length  $L$  and water depth  $h$ , the surface will oscillate back and forth at frequency  $\Omega$ , assumed here to depend also upon water density  $\rho$  and the acceleration of gravity  $g$ . (a) Rewrite this as a dimensionless function. (b) If a tank of water sloshes at 2.0 Hz on earth, how fast would it oscillate on Mars ( $g \approx 3.7 \text{ m/s}^2$ )?

**P5.18** Under laminar conditions, the volume flow  $Q$  through a small triangular-section pore of side length  $b$  and length  $L$  is a function of viscosity  $\mu$ , pressure drop per unit length  $\Delta p/L$ , and  $b$ . Using the pi theorem, rewrite this relation in dimensionless form. How does the volume flow change if the pore size  $b$  is doubled?

**P5.19** The period of oscillation  $T$  of a water surface wave is assumed to be a function of density  $\rho$ , wavelength  $\lambda$ , depth  $h$ , gravity  $g$ , and surface tension  $\gamma$ . Rewrite this relationship in dimensionless form. What results if  $\gamma$  is negligible? Hint: Take  $\lambda, \rho$ , and  $g$  as repeating variables.

**P5.20** A fixed cylinder of diameter  $D$  and length  $L$ , immersed in a stream flowing normal to its axis at velocity  $U$ , will experience zero average lift. However, if the cylinder is rotating at angular velocity  $\Omega$ , a lift force  $F$  will arise. The fluid density  $\rho$  is important, but viscosity is secondary and can be neglected. Formulate this lift behavior as a dimensionless function.

**P5.21** In Example 5.1 we used the pi theorem to develop Eq. (5.2) from Eq. (5.1). Instead of merely listing the primary dimensions of each variable, some workers list the powers of each primary dimension for each variable in an array:

	$F$	$L$	$U$	$\rho$	$\mu$
$M$	1	0	0	1	1
$L$	1	1	1	-3	-1
$T$	-2	0	-1	0	-1

This array of exponents is called the *dimensional matrix* for the given function. Show that the *rank* of this matrix (the size of the largest nonzero determinant) is equal to  $j = n - k$ , the desired reduction between original variables and the pi groups. This is a general property of dimensional matrices, as noted by Buckingham [1].

**P5.22** When freewheeling, the angular velocity  $\Omega$  of a windmill is found to be a function of the windmill diameter  $D$ , the wind velocity  $V$ , the air density  $\rho$ , the windmill height  $H$  as compared to the atmospheric boundary layer height  $L$ , and the number of blades  $N$ :

$$\Omega = \text{fcn}\left(D, V, \rho, \frac{H}{L}, N\right)$$

Viscosity effects are negligible. Find appropriate pi groups for this problem and rewrite the function in dimensionless form.

**P5.23** The period  $T$  of vibration of a beam is a function of its length  $L$ , area moment of inertia  $I$ , modulus of elasticity  $E$ , density  $\rho$ , and Poisson's ratio  $\sigma$ . Rewrite this relation in dimensionless form. What further reduction can we make if  $E$  and  $I$  can occur only in the product form  $EI$ ? Hint: Take  $L, \rho$ , and  $E$  as repeating variables.

**P5.24** The lift force  $F$  on a missile is a function of its length  $L$ , velocity  $V$ , diameter  $D$ , angle of attack  $\alpha$ , density  $\rho$ , viscosity  $\mu$ , and speed of sound  $a$  of the air. Write out the dimensional matrix of this function and determine its rank. (See Prob. P5.21 for an explanation of this concept.) Rewrite the function in terms of pi groups.

**P5.25** The thrust  $F$  of a propeller is generally thought to be a function of its diameter  $D$  and angular velocity  $\Omega$ , the forward speed  $V$ , and the density  $\rho$  and viscosity  $\mu$  of the fluid. Rewrite this relationship as a dimensionless function.

**P5.26** A pendulum has an oscillation period  $T$  which is assumed to depend on its length  $L$ , bob mass  $m$ , angle

of swing  $\theta$ , and the acceleration of gravity. A pendulum 1 m long, with a bob mass of 200 g, is tested on earth and found to have a period of 2.04 s when swinging at  $20^\circ$ . (a) What is its period when it swings at  $45^\circ$ ? A similarly constructed pendulum, with  $L = 30$  cm and  $m = 100$  g, is to swing on the moon ( $g = 1.62 \text{ m/s}^2$ ) at  $\theta = 20^\circ$ . (b) What will be its period?

- P5.27** In studying sand transport by ocean waves, A. Shields in 1936 postulated that the threshold wave-induced bottom shear stress  $\tau$  required to move particles depends on gravity  $g$ , particle size  $d$  and density  $\rho_p$ , and water density  $\rho$  and viscosity  $\mu$ . Find suitable dimensionless groups of this problem, which resulted in 1936 in the celebrated Shields sand transport diagram.


- P5.28** A simply supported beam of diameter  $D$ , length  $L$ , and modulus of elasticity  $E$  is subjected to a fluid crossflow of velocity  $V$ , density  $\rho$ , and viscosity  $\mu$ . Its center deflection  $\delta$  is assumed to be a function of all these variables. (a) Rewrite this proposed function in dimensionless form. (b) Suppose it is known that  $\delta$  is independent of  $\mu$ , inversely proportional to  $E$ , and dependent only on  $\rho V^2$ , not  $\rho$  and  $V$  separately. Simplify the dimensionless function accordingly. Hint: Take  $L$ ,  $\rho$ , and  $V$  as repeating variables.

- P5.29** When fluid in a pipe is accelerated linearly from rest, it begins as laminar flow and then undergoes transition to turbulence at a time  $t_{tr}$  that depends on the pipe diameter  $D$ , fluid acceleration  $a$ , density  $\rho$ , and viscosity  $\mu$ . Arrange this into a dimensionless relation between  $t_{tr}$  and  $D$ .

- P5.30** When a large tank of high-pressure gas discharges through a nozzle, the exit mass flow  $\dot{m}$  is a function of tank pressure  $p_0$  and temperature  $T_0$ , gas constant  $R$ , specific heat  $c_p$ , and nozzle diameter  $D$ . Rewrite this as a dimensionless function. Check to see if you can use  $(p_0, T_0, R, D)$  as repeating variables.

- P5.31** The heat transfer rate per unit area  $q$  to a body from a fluid in natural or gravitational convection is a function of the temperature difference  $\Delta T$ , gravity  $g$ , body length  $L$ , and three fluid properties: kinematic viscosity  $\nu$ , conductivity  $k$ , and thermal expansion coefficient  $\beta$ . Rewrite in dimensionless form if it is known that  $g$  and  $\beta$  appear only as the product  $g\beta$ .


- P5.32** A *weir* is an obstruction in a channel flow that can be calibrated to measure the flow rate, as in Fig. P5.32. The volume flow  $Q$  varies with gravity  $g$ , weir width  $b$  into the paper, and upstream water height  $H$  above the weir crest. If it is known that  $Q$  is proportional to  $b$ , use the pi theorem to find a unique functional relationship  $Q(g, b, H)$ .

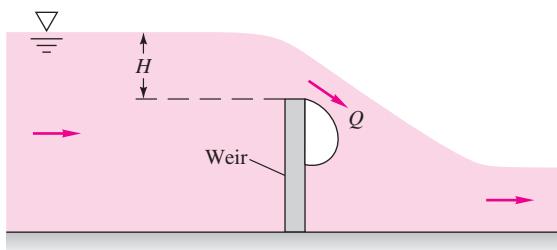**P5.32**

- P5.33** A spar buoy (see Prob. P2.113) has a period  $T$  of vertical (heave) oscillation that depends on the waterline cross-sectional area  $A$ , buoy mass  $m$ , and fluid specific weight  $\gamma$ . How does the period change due to doubling of (a) the mass and (b) the area? Instrument buoys should have long periods to avoid wave resonance. Sketch a possible long-period buoy design.

- P5.34** To good approximation, the thermal conductivity  $k$  of a gas (see Ref. 30 of Chap. 1) depends only on the density  $\rho$ , mean free path  $l$ , gas constant  $R$ , and absolute temperature  $T$ . For air at  $20^\circ\text{C}$  and 1 atm,  $k \approx 0.026 \text{ W/(m} \cdot \text{K)}$  and  $l \approx 6.5 \text{ E-8 m}$ . Use this information to determine  $k$  for hydrogen at  $20^\circ\text{C}$  and 1 atm if  $l \approx 1.2 \text{ E-7 m}$ .

- P5.35** The torque  $M$  required to turn the cone-plate viscometer in Fig. P5.35 depends on the radius  $R$ , rotation rate  $\Omega$ , fluid viscosity  $\mu$ , and cone angle  $\theta$ . Rewrite this relation in dimensionless form. How does the relation simplify if it is known that  $M$  is proportional to  $\theta$ ?

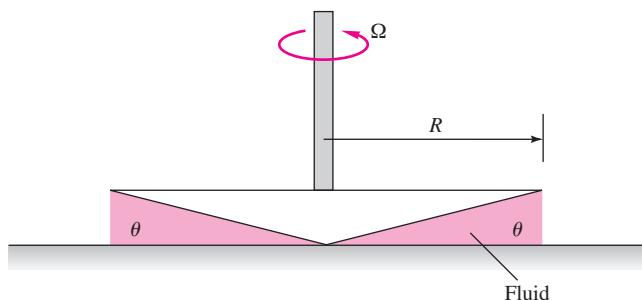**P5.35**

- P5.36** The rate of heat loss  $\dot{Q}_{loss}$  through a window or wall is a function of the temperature difference between inside and outside  $\Delta T$ , the window surface area  $A$ , and the  $R$  value of the window, which has units of  $(\text{ft}^2 \cdot \text{h} \cdot ^\circ\text{F})/\text{Btu}$ . (a) Using the Buckingham Pi Theorem, find an expression for rate of heat loss as a function of the other three parameters in the problem. (b) If the temperature difference  $\Delta T$  doubles, by what factor does the rate of heat loss increase?

- P5.37** The volume flow  $Q$  through an orifice plate is a function of pipe diameter  $D$ , pressure drop  $\Delta p$  across the orifice, fluid density  $\rho$  and viscosity  $\mu$ , and orifice diameter  $d$ . Using  $D$ ,  $\rho$ , and  $\Delta p$  as repeating variables, express this relationship in dimensionless form.
- P5.38** The size  $d$  of droplets produced by a liquid spray nozzle is thought to depend on the nozzle diameter  $D$ , jet velocity  $U$ , and the properties of the liquid  $\rho$ ,  $\mu$ , and  $\gamma$ . Rewrite this relation in dimensionless form. Hint: Take  $D$ ,  $\rho$ , and  $U$  as repeating variables.
- P5.39** Consider natural convection in a rotating, fluid-filled enclosure. The average wall shear stress  $\tau$  in the enclosure is assumed to be a function of rotation rate  $\Omega$ , enclosure height  $H$ , density  $\rho$ , temperature difference  $\Delta T$ , viscosity  $\mu$ , and thermal expansion coefficient  $\beta$ .  
(a) Rewrite this relationship as a dimensionless function.  
(b) Do you see a severe  $f_w$  in the analysis?
- P5.40** The time  $t_d$  to drain a liquid from a hole in the bottom of a tank is a function of the hole diameter  $d$ , the initial fluid volume  $v_0$ , the initial liquid depth  $h_0$ , and the density  $\rho$  and viscosity  $\mu$  of the fluid. Rewrite this relation as a dimensionless function, using Ipsen's method.
- P5.41** A certain axial flow turbine has an output torque  $M$  that is proportional to the volume flow rate  $Q$  and also depends on the density  $\rho$ , rotor diameter  $D$ , and rotation rate  $\Omega$ . How does the torque change due to a doubling of (a)  $D$  and (b)  $\Omega$ ?
- P5.42** When disturbed, a floating buoy will bob up and down at frequency  $f$ . Assume that this frequency varies with buoy mass  $m$ , waterline diameter  $d$ , and the specific weight  $\gamma$  of the liquid. (a) Express this as a dimensionless function.  
(b) If  $d$  and  $\gamma$  are constant and the buoy mass is halved, how will the frequency change?

### Nondimensionalizing the basic equations

- P5.43** Nondimensionalize the energy equation (4.75) and its boundary conditions (4.62), (4.63), and (4.70) by defining  $T^* = T/T_0$ , where  $T_0$  is the inlet temperature, assumed constant. Use other dimensionless variables as needed from Eqs. (5.23). Isolate all dimensionless parameters you find, and relate them to the list given in Table 5.2.
- P5.44** The differential energy equation for incompressible two-dimensional flow through a "Darcy-type" porous medium is approximately

$$\rho c_p \frac{\sigma}{\mu} \frac{\partial p}{\partial x} \frac{\partial T}{\partial x} + \rho c_p \frac{\sigma}{\mu} \frac{\partial p}{\partial y} \frac{\partial T}{\partial y} + k \frac{\partial^2 T}{\partial y^2} = 0$$

where  $\sigma$  is the permeability of the porous medium. All other symbols have their usual meanings. (a) What are the appropriate dimensions for  $\sigma$ ? (b) Nondimensionalize this

equation, using  $(L, U, \rho, T_0)$  as scaling constants, and discuss any dimensionless parameters that arise.

- P5.45** A model differential equation, for chemical reaction dynamics in a plug reactor, is as follows:

$$u \frac{\partial C}{\partial x} = D \frac{\partial^2 C}{\partial x^2} - kC - \frac{\partial C}{\partial t}$$

where  $u$  is the velocity,  $D$  is a diffusion coefficient,  $k$  is a reaction rate,  $x$  is distance along the reactor, and  $C$  is the (dimensionless) concentration of a given chemical in the reactor. (a) Determine the appropriate dimensions of  $D$  and  $k$ . (b) Using a characteristic length scale  $L$  and average velocity  $V$  as parameters, rewrite this equation in dimensionless form and comment on any pi groups appearing.

- P5.46** If a vertical wall at temperature  $T_w$  is surrounded by a fluid at temperature  $T_0$ , a natural convection boundary layer flow will form. For laminar flow, the momentum equation is

$$\rho(u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y}) = \rho\beta(T - T_0)g + \mu \frac{\partial^2 u}{\partial y^2}$$

to be solved, along with continuity and energy, for  $(u, v, T)$  with appropriate boundary conditions. The quantity  $\beta$  is the thermal expansion coefficient of the fluid. Use  $\rho, g, L$ , and  $(T_w - T_0)$  to nondimensionalize this equation. Note that there is no "stream" velocity in this type of flow.

- P5.47** The differential equation for small-amplitude vibrations  $y(x, t)$  of a simple beam is given by

$$\rho A \frac{\partial^2 y}{\partial t^2} + EI \frac{\partial^4 y}{\partial x^4} = 0$$

where  $\rho$  = beam material density

$A$  = cross-sectional area

$I$  = area moment of inertia

$E$  = Young's modulus

Use only the quantities  $\rho, E$ , and  $A$  to nondimensionalize  $y, x$ , and  $t$ , and rewrite the differential equation in dimensionless form. Do any parameters remain? Could they be removed by further manipulation of the variables?

### Data for spheres, cylinders, other bodies

- P5.48** A smooth steel ( $SG = 7.86$ ) sphere is immersed in a stream of ethanol at  $20^\circ\text{C}$  moving at 1.5 m/s. Estimate its drag in N from Fig. 5.3a. What stream velocity would quadruple its drag? Take  $D = 2.5$  cm.
- P5.49** The sphere in Prob. P5.48 is dropped in gasoline at  $20^\circ\text{C}$ . Ignoring its acceleration phase, what will its terminal (constant) fall velocity be, from Fig. 5.3a?

**P5.50** The parachute in the chapter-opener photo is, of course, meant to decelerate the payload on Mars. The wind tunnel test gave a drag coefficient of about 1.1, based upon the projected area of the parachute. Suppose it was falling on earth and, at an altitude of 1000 m, showed a steady descent rate of about 18 mi/h. Estimate the weight of the payload.

**P5.51** A ship is towing a sonar array that approximates a submerged cylinder 1 ft in diameter and 30 ft long with its axis normal to the direction of tow. If the tow speed is 12 kn (1 kn = 1.69 ft/s), estimate the horsepower required to tow this cylinder. What will be the frequency of vortices shed from the cylinder? Use Figs. 5.2 and 5.3.

**P5.52** When fluid in a long pipe starts up from rest at a uniform acceleration  $a$ , the initial flow is laminar. The flow undergoes transition to turbulence at a time  $t^*$  which depends, to first approximation, only upon  $a$ ,  $\rho$ , and  $\mu$ . Experiments by P. J. Lefebvre, on water at 20°C starting from rest with 1-g acceleration in a 3-cm-diameter pipe, showed transition at  $t^* = 1.02$  s. Use this data to estimate (a) the transition time and (b) the transition Reynolds number  $Re_D$  for water flow accelerating at 35 m/s<sup>2</sup> in a 5-cm-diameter pipe.

**P5.53** Vortex shedding can be used to design a *vortex flowmeter* (Fig. 6.33). A blunt rod stretched across the pipe sheds vortices whose frequency is read by the sensor downstream. Suppose the pipe diameter is 5 cm and the rod is a cylinder of diameter 8 mm. If the sensor reads 5400 counts per minute, estimate the volume flow rate of water in m<sup>3</sup>/h. How might the meter react to other liquids?

**P5.54** A fishnet is made of 1-mm-diameter strings knotted into  $2 \times 2$  cm squares. Estimate the horsepower required to tow 300 ft<sup>2</sup> of this netting at 3 kn in seawater at 20°C. The net plane is normal to the flow direction.


**P5.55** The radio antenna on a car begins to vibrate wildly at 8 Hz when the car is driven at 45 mi/h over a rutted road that approximates a sine wave of amplitude 2 cm and wavelength  $\lambda = 2.5$  m. The antenna diameter is 4 mm. Is the vibration due to the road or to vortex shedding?

**P5.56** Flow past a long cylinder of square cross-section results in more drag than the comparable round cylinder. Here are data taken in a water tunnel for a square cylinder of side length  $b = 2$  cm:

$V$ , m/s	1.0	2.0	3.0	4.0
Drag, N/(m of depth)	21	85	191	335

(a) Use these data to predict the drag force per unit depth of wind blowing at 6 m/s, in air at 20°C, over a tall square chimney of side length  $b = 55$  cm. (b) Is there any uncertainty in your estimate?

**P5.57** The simply supported 1040 carbon-steel rod of Fig. P5.57 is subjected to a crossflow stream of air at 20°C and 1 atm. For what stream velocity  $U$  will the rod center deflection be approximately 1 cm?

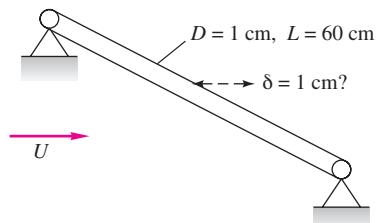

P5.57

**P5.58** For the steel rod of Prob. P5.57, at what airstream velocity  $U$  will the rod begin to vibrate laterally in resonance in its first mode (a half sine wave)? Hint: Consult a vibration text [34,35] under "lateral beam vibration."

**P5.59** A long, slender, smooth 3-cm-diameter flagpole bends alarmingly in 20 mi/h sea-level winds, causing patriotic citizens to gasp. An engineer claims that the pole will bend less if its surface is deliberately roughened. Is she correct, at least qualitatively?


### Scaling of model data

\***P5.60** The thrust  $F$  of a free propeller, either aircraft or marine, depends upon density  $\rho$ , the rotation rate  $n$  in r/s, the diameter  $D$ , and the forward velocity  $V$ . Viscous effects are slight and neglected here. Tests of a 25-cm-diameter model aircraft propeller, in a sea-level wind tunnel, yield the following thrust data at a velocity of 20 m/s:

Rotation rate, r/min	4800	6000	8000
Measured thrust, N	6.1	19	47

(a) Use this data to make a crude but effective dimensionless plot. (b) Use the dimensionless data to predict the thrust, in newtons, of a similar 1.6-m-diameter prototype propeller when rotating at 3800 r/min and flying at 225 mi/h at 4000-m standard altitude.

**P5.61** If viscosity is neglected, typical pump flow results from Example 5.3 are shown in Fig. P5.61 for a model pump tested in water. The pressure rise decreases and the power required increases with the dimensionless flow coefficient. Curve-fit expressions are given for the data. Suppose a similar pump of 12-cm diameter is built to move gasoline at 20°C and a flow rate of 25 m<sup>3</sup>/h. If the pump rotation speed is 30 r/s, find (a) the pressure rise and (b) the power required.

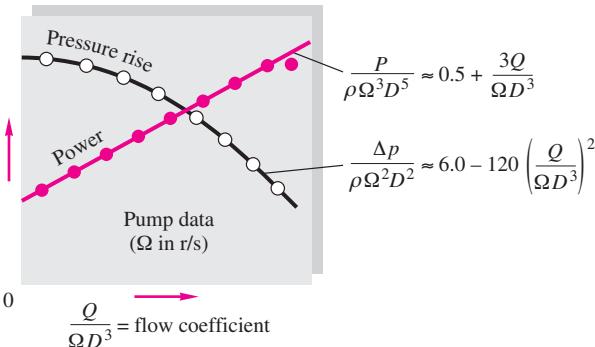**P5.61**


- P5.62** Extend Prob. P5.30 as follows. Let the maximum mass flow  $\dot{m}$  again be a function of tank pressure  $p_0$  and temperature  $T_0$ , gas constant  $R$ , and nozzle diameter  $D$ , but replace  $c_p$  by the specific heat ratio,  $k$ . For an air tank at 190 kPa and 330 K, with a 2-cm nozzle diameter, experiments show a mass flow of 0.133 kg/s. (a) Can this data be used to correlate an *oxygen* tank? (b) If so, estimate the oxygen mass flow if the tank conditions are 300 kPa and 450 K, with a nozzle diameter of 3 cm.

- \*P5.63** The pressure drop per unit length  $\Delta p/L$  in smooth pipe flow is known to be a function only of the average velocity  $V$ , diameter  $D$ , and fluid properties  $\rho$  and  $\mu$ . The following data were obtained for flow of water at 20°C in an 8-cm-diameter pipe 50 m long:

$Q, \text{m}^3/\text{s}$	0.005	0.01	0.015	0.020
$\Delta p, \text{Pa}$	5800	20,300	42,100	70,800

Verify that these data are slightly outside the range of Fig. 5.10. What is a suitable power-law curve fit for the present data? Use these data to estimate the pressure drop for flow of kerosene at 20°C in a smooth pipe of diameter 5 cm and length 200 m if the flow rate is 50  $\text{m}^3/\text{h}$ .

- P5.64** The natural frequency  $\omega$  of vibration of a mass  $M$  attached to a rod, as in Fig. P5.64, depends only on  $M$

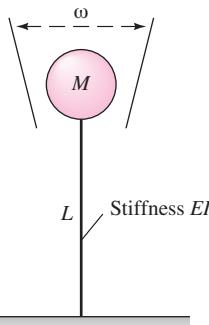**P5.64**

and the stiffness  $EI$  and length  $L$  of the rod. Tests with a 2-kg mass attached to a 1040 carbon steel rod of diameter 12 mm and length 40 cm reveal a natural frequency of 0.9 Hz. Use these data to predict the natural frequency of a 1-kg mass attached to a 2024 aluminum alloy rod of the same size.

**P5.65**

In turbulent flow near a flat wall, the local velocity  $u$  varies only with distance  $y$  from the wall, wall shear stress  $\tau_w$ , and fluid properties  $\rho$  and  $\mu$ . The following data were taken in the University of Rhode Island wind tunnel for airflow,  $\rho = 0.0023 \text{ slug}/\text{ft}^3$ ,  $\mu = 3.81 \times 10^{-7} \text{ slug}/(\text{ft} \cdot \text{s})$ , and  $\tau_w = 0.029 \text{ lbf}/\text{ft}^2$ :

$y, \text{in}$	0.021	0.035	0.055	0.080	0.12	0.16
$u, \text{ft/s}$	50.6	54.2	57.6	59.7	63.5	65.9

- (a) Plot these data in the form of dimensionless  $u$  versus dimensionless  $y$ , and suggest a suitable power-law curve fit. (b) Suppose that the tunnel speed is increased until  $u = 90 \text{ ft/s}$  at  $y = 0.11 \text{ in}$ . Estimate the new wall shear stress, in  $\text{lbf}/\text{ft}^2$ .

**P5.66**

A torpedo 8 m below the surface in 20°C seawater cavitates at a speed of 21 m/s when atmospheric pressure is 101 kPa. If Reynolds number and Froude number effects are negligible, at what speed will it cavitate when running at a depth of 20 m? At what depth should it be to avoid cavitation at 30 m/s?

**P5.67**

A student needs to measure the drag on a prototype of characteristic dimension  $d_p$ , moving at velocity  $U_p$  in air at standard atmospheric conditions. He constructs a model of characteristic dimension  $d_m$ , such that the ratio  $d_p/d_m$  is some factor  $f$ . He then measures the drag on the model at dynamically similar conditions (also with air at standard atmospheric conditions). The student claims that the drag force on the prototype will be identical to that measured on the model. Is this claim correct? Explain.

**P5.68**

For the rotating-cylinder function of Prob. P5.20, if  $L \gg D$ , the problem can be reduced to only two groups,  $F/(\rho U^2 LD)$  versus  $(\Omega D/U)$ . Here are experimental data for a cylinder 30 cm in diameter and 2 m long, rotating in sea-level air, with  $U = 25 \text{ m/s}$ .

$\Omega, \text{rev/min}$	0	3000	6000	9000	12000	15000
$F, \text{N}$	0	850	2260	2900	3120	3300

- (a) Reduce this data to the two dimensionless groups and make a plot. (b) Use this plot to predict the lift of a cylinder with  $D = 5 \text{ cm}$ ,  $L = 80 \text{ cm}$ , rotating at 3800 rev/min in water at  $U = 4 \text{ m/s}$ .


**P5.69**

A simple flow measurement device for streams and channels is a notch, of angle  $\alpha$ , cut into the side of a dam, as shown in Fig. P5.69. The volume flow  $Q$  depends only on

$\alpha$ , the acceleration of gravity  $g$ , and the height  $\delta$  of the upstream water surface above the notch vertex. Tests of a model notch, of angle  $\alpha = 55^\circ$ , yield the following flow rate data:

$\delta$ , cm	10	20	30	40
$Q$ , $\text{m}^3/\text{h}$	8	47	126	263

(a) Find a dimensionless correlation for the data (b) Use the model data to predict the flow rate of a prototype notch, also of angle  $\alpha = 55^\circ$ , when the upstream height  $\delta$  is 3.2 m.

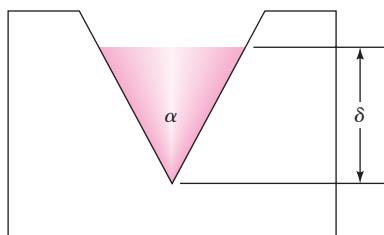

P5.69

- P5.70** A diamond-shaped body, of characteristic length 9 in, has the following measured drag forces when placed in a wind tunnel at sea-level standard conditions:

$V$ , ft/s	30	38	48	56	61
$F$ , lbf	1.25	1.95	3.02	4.05	4.81

Use these data to predict the drag force of a similar 15-in diamond placed at similar orientation in  $20^\circ\text{C}$  water flowing at 2.2 m/s.

- P5.71** The pressure drop in a venturi meter (Fig. P3.128) varies only with the fluid density, pipe approach velocity, and diameter ratio of the meter. A model venturi meter tested in water at  $20^\circ\text{C}$  shows a 5-kPa drop when the approach velocity is 4 m/s. A geometrically similar prototype meter is used to measure gasoline at  $20^\circ\text{C}$  and a flow rate of  $9 \text{ m}^3/\text{min}$ . If the prototype pressure gage is most accurate at 15 kPa, what should the upstream pipe diameter be?

- P5.72** A one-twelfth-scale model of a large commercial aircraft is tested in a wind tunnel at  $20^\circ\text{C}$  and 1 atm. The model chord length is 27 cm, and its wing area is  $0.63 \text{ m}^2$ . Test results for the drag of the model are as follows:

$V$ , mi/h	50	75	100	125
Drag, N	15	32	53	80

In the spirit of Fig. 5.8, use this data to estimate the drag of the full-scale aircraft when flying at 550 mi/h, for the same angle of attack, at 32,800 ft standard altitude.

- P5.73** The power  $P$  generated by a certain windmill design depends on its diameter  $D$ , the air density  $\rho$ , the wind velocity  $V$ , the rotation rate  $\Omega$ , and the number of blades  $n$ . (a) Write this relationship in dimensionless form. A model windmill, of diameter 50 cm, develops 2.7 kW at sea level when  $V = 40 \text{ m/s}$  and when rotating at 4800 r/min. (b) What power will be developed by a geometrically and dynamically similar prototype, of diameter 5 m, in winds of 12 m/s at 2000 m standard altitude? (c) What is the appropriate rotation rate of the prototype?

- P5.74** A one-tenth-scale model of a supersonic wing tested at 700 m/s in air at  $20^\circ\text{C}$  and 1 atm shows a pitching moment of  $0.25 \text{ kN} \cdot \text{m}$ . If Reynolds number effects are negligible, what will the pitching moment of the prototype wing be if it is flying at the same Mach number at 8-km standard altitude?

### Froude and Mach number scaling

- P5.75** According to the web site *USGS Daily Water Data for the Nation*, the mean flow rate in the New River near Hinton, WV, is  $10,100 \text{ ft}^3/\text{s}$ . If the hydraulic model in Fig. 5.9 is to match this condition with Froude number scaling, what is the proper model flow rate?

- \*P5.76** A 2-ft-long model of a ship is tested in a freshwater tow tank. The measured drag may be split into “friction” drag (Reynolds scaling) and “wave” drag (Froude scaling). The model data are as follows:

Tow speed, ft/s	0.8	1.6	2.4	3.2	4.0	4.8
Friction drag, lbf	0.016	0.057	0.122	0.208	0.315	0.441
Wave drag, lbf	0.002	0.021	0.083	0.253	0.509	0.697

The prototype ship is 150 ft long. Estimate its total drag when cruising at 15 kn in seawater at  $20^\circ\text{C}$ .

- P5.77** A dam spillway is to be tested by using Froude scaling with a one-thirtieth-scale model. The model flow has an average velocity of 0.6 m/s and a volume flow of  $0.05 \text{ m}^3/\text{s}$ . What will the velocity and flow of the prototype be? If the measured force on a certain part of the model is 1.5 N, what will the corresponding force on the prototype be?

- P5.78** A prototype spillway has a characteristic velocity of 3 m/s and a characteristic length of 10 m. A small model is constructed by using Froude scaling. What is the minimum scale ratio of the model that will ensure that its minimum Weber number is 100? Both flows use water at  $20^\circ\text{C}$ .

- P5.79** An East Coast estuary has a tidal period of 12.42 h (the semidiurnal lunar tide) and tidal currents of approximately

80 cm/s. If a one-five-hundredth-scale model is constructed with tides driven by a pump and storage apparatus, what should the period of the model tides be and what model current speeds are expected?

- P5.80** A prototype ship is 35 m long and designed to cruise at 11 m/s (about 21 kn). Its drag is to be simulated by a 1-m-long model pulled in a tow tank. For Froude scaling find (a) the tow speed, (b) the ratio of prototype to model drag, and (c) the ratio of prototype to model power.

- P5.81** An airplane, of overall length 55 ft, is designed to fly at 680 m/s at 8000-m standard altitude. A one-thirtieth-scale model is to be tested in a pressurized helium wind tunnel at 20°C. What is the appropriate tunnel pressure in atm? Even at this (high) pressure, exact dynamic similarity is not achieved. Why?

- P5.82** A one-fiftieth scale model of a military airplane is tested at 1020 m/s in a wind tunnel at sea-level conditions. The model wing area is 180 cm<sup>2</sup>. The angle of attack is 3 degrees. If the measured model lift is 860 N, what is the prototype lift, using Mach number scaling, when it flies at 10,000 m standard altitude under dynamically similar conditions? *Note:* Be careful with the area scaling.

- P5.83** A one-fortieth-scale model of a ship's propeller is tested in a tow tank at 1200 r/min and exhibits a power output of 1.4 ft · lbf/s. According to Froude scaling laws, what should the revolutions per minute and horsepower output of the prototype propeller be under dynamically similar conditions?

- P5.84** A prototype ocean platform piling is expected to encounter currents of 150 cm/s and waves of 12-s period and 3-m height. If a one-fifteenth-scale model is tested in a wave channel, what current speed, wave period, and wave height should be encountered by the model?

### Inventive rescaling of the data

- \***P5.85** As shown in Example 5.3, pump performance data can be nondimensionalized. Problem P5.61 gave typical dimensionless data for centrifugal pump "head,"  $H = \Delta p/\rho g$ , as follows:

$$\frac{gH}{n^2 D^2} \approx 6.0 - 120 \left( \frac{Q}{nD^3} \right)^2$$

where  $Q$  is the volume flow rate,  $n$  the rotation rate in r/s, and  $D$  the impeller diameter. This type of correlation allows one to compute  $H$  when  $(\rho, Q, D)$  are known. (a) Show how to rearrange these pi groups so that one can size the pump, that is, compute  $D$  directly when  $(Q, H, n)$  are known. (b) Make a crude but effective plot of your new function. (c) Apply part (b) to the

following example: Find  $D$  when  $H = 37$  m,  $Q = 0.14$  m<sup>3</sup>/s, and  $n = 35$  r/s. Find the pump diameter for this condition.

- P5.86** Solve Prob. P5.49 for glycerin at 20°C, using the modified sphere-drag plot of Fig. 5.11.

- P5.87** In Prob. P5.61 it would be difficult to solve for  $\Omega$  because it appears in all three of the dimensionless pump coefficients. Suppose that, in Prob. 5.61,  $\Omega$  is unknown but  $D = 12$  cm and  $Q = 25$  m<sup>3</sup>/h. The fluid is gasoline at 20°C. Rescale the coefficients, using the data of Prob. P5.61, to make a plot of dimensionless power versus dimensionless rotation speed. Enter this plot to find the maximum rotation speed  $\Omega$  for which the power will not exceed 300 W.

- P5.88** Modify Prob. P5.61 as follows: Let  $\Omega = 32$  r/s and  $Q = 24$  m<sup>3</sup>/h for a geometrically similar pump. What is the maximum diameter if the power is not to exceed 340 W? Solve this problem by rescaling the data of Fig. P5.61 to make a plot of dimensionless power versus dimensionless diameter. Enter this plot directly to find the desired diameter.

- P5.89** Wall friction  $\tau_w$ , for turbulent flow at velocity  $U$  in a pipe of diameter  $D$ , was correlated, in 1911, with a dimensionless correlation by Ludwig Prandtl's student H. Blasius:

$$\frac{\tau_w}{\rho U^2} \approx \frac{0.632}{(\rho U D / \mu)^{1/4}}$$

Suppose that  $(\rho, U, \mu, \tau_w)$  were all known and it was desired to find the unknown velocity  $U$ . Rearrange and rewrite the formula so that  $U$  can be immediately calculated.

- P5.90** Knowing that  $\Delta p$  is proportional to  $L$ , rescale the data of Example 5.10 to plot dimensionless  $\Delta p$  versus dimensionless viscosity. Use this plot to find the viscosity required in the first row of data in Example 5.10 if the pressure drop is increased to 10 kPa for the same flow rate, length, and density.

- \***P5.91** The traditional "Moody-type" pipe friction correlation in Chap. 6 is of the form

$$f = \frac{2\Delta p D}{\rho V^2 L} = \text{fcn}\left(\frac{\rho V D}{\mu}, \frac{\varepsilon}{D}\right)$$

where  $D$  is the pipe diameter,  $L$  the pipe length, and  $\varepsilon$  the wall roughness. Note that pipe average velocity  $V$  is used on both sides. This form is meant to find  $\Delta p$  when  $V$  is known. (a) Suppose that  $\Delta p$  is known, and we wish to find  $V$ . Rearrange the above function so that  $V$  is isolated on the left-hand side. Use the following data, for  $\varepsilon/D = 0.005$ , to make a plot of your new function, with your velocity parameter as the ordinate of the plot.

$f$	0.0356	0.0316	0.0308	0.0305	0.0304
$\rho V D / \mu$	15,000	75,000	250,000	900,000	3,330,000

(b) Use your plot to determine  $V$ , in m/s, for the following pipe flow:  $D = 5$  cm,  $\varepsilon = 0.025$  cm,  $L = 10$  m, for water flow at 20°C and 1 atm. The pressure drop  $\Delta p$  is 110 kPa.

## Word Problems

- W5.1** In 98 percent of data analysis cases, the “reducing factor”  $j$ , which lowers the number  $n$  of dimensional variables to  $n - j$  dimensionless groups, exactly equals the number of relevant dimensions ( $M, L, T, \Theta$ ). In one case (Example 5.5) this was not so. Explain in words why this situation happens.
- W5.2** Consider the following equation: 1 dollar bill  $\approx$  6 in. Is this relation dimensionally inconsistent? Does it satisfy the PDH? Why?
- W5.3** In making a dimensional analysis, what rules do you follow for choosing your scaling variables?
- W5.4** In an earlier edition, the writer asked the following question about Fig. 5.1: “Which of the three graphs is a more effective presentation?” Why was this a dumb question?
- W5.5** This chapter discusses the difficulty of scaling Mach and Reynolds numbers together (an airplane) and Froude and Reynolds numbers together (a ship). Give an example of a flow that would combine Mach and Froude numbers. Would there be scaling problems for common fluids?
- W5.6** What is different about a very *small* model of a weir or dam (Fig. P5.32) that would make the test results difficult to relate to the prototype?
- W5.7** What else are you studying this term? Give an example of a popular equation or formula from another course (thermodynamics, strength of materials, or the like) that does not satisfy the principle of dimensional homogeneity. Explain what is wrong and whether it can be modified to be homogeneous.
- W5.8** Some colleges (such as Colorado State University) have environmental wind tunnels that can be used to study phenomena like wind flow over city buildings. What details of scaling might be important in such studies?
- W5.9** If the model scale ratio is  $\alpha = L_m/L_p$ , as in Eq. (5.31), and the Weber number is important, how must the model and prototype surface tension be related to  $\alpha$  for dynamic similarity?
- W5.10** For a typical incompressible velocity potential analysis in Chap. 8 we solve  $\nabla^2\phi = 0$ , subject to known values of  $\partial\phi/\partial n$  on the boundaries. What dimensionless parameters govern this type of motion?

## Fundamentals of Engineering Exam Problems

- FE5.1** Given the parameters ( $U, L, g, \rho, \mu$ ) that affect a certain liquid flow problem, the ratio  $V^2/(Lg)$  is usually known as the  
 (a) velocity head, (b) Bernoulli head, (c) Froude number, (d) kinetic energy, (e) impact energy
- FE5.2** A ship 150 m long, designed to cruise at 18 kn, is to be tested in a tow tank with a model 3 m long. The appropriate tow velocity is  
 (a) 0.19 m/s, (b) 0.35 m/s, (c) 1.31 m/s,  
 (d) 2.55 m/s, (e) 8.35 m/s
- FE5.3** A ship 150 m long, designed to cruise at 18 kn, is to be tested in a tow tank with a model 3 m long. If the model wave drag is 2.2 N, the estimated full-size ship wave drag is  
 (a) 5500 N, (b) 8700 N, (c) 38,900 N,  
 (d) 61,800 N, (e) 275,000 N
- FE5.4** A tidal estuary is dominated by the semidiurnal lunar tide, with a period of 12.42 h. If a 1:500 model of the estuary is tested, what should be the model tidal period?  
 (a) 4.0 s, (b) 1.5 min, (c) 17 min, (d) 33 min,  
 (e) 64 min
- FE5.5** A football, meant to be thrown at 60 mi/h in sea-level air ( $\rho = 1.22 \text{ kg/m}^3$ ,  $\mu = 1.78 \times 10^{-5} \text{ N} \cdot \text{s/m}^2$ ), is to be tested using a one-quarter scale model in a water tunnel ( $\rho = 998 \text{ kg/m}^3$ ,  $\mu = 0.0010 \text{ N} \cdot \text{s/m}^2$ ). For dynamic similarity, what is the proper model water velocity?  
 (a) 7.5 mi/h, (b) 15.0 mi/h, (c) 15.6 mi/h,  
 (d) 16.5 mi/h, (e) 30 mi/h
- FE5.6** A football, meant to be thrown at 60 mi/h in sea-level air ( $\rho = 1.22 \text{ kg/m}^3$ ,  $\mu = 1.78 \times 10^{-5} \text{ N} \cdot \text{s/m}^2$ ), is to be tested using a one-quarter scale model in a water tunnel ( $\rho = 998 \text{ kg/m}^3$ ,  $\mu = 0.0010 \text{ N} \cdot \text{s/m}^2$ ). For dynamic similarity, what is the ratio of prototype force to model force?  
 (a) 3.86:1, (b) 16:1, (c) 32:1, (d) 56:1, (e) 64:1

- FE5.7** Consider liquid flow of density  $\rho$ , viscosity  $\mu$ , and velocity  $U$  over a very small model spillway of length scale  $L$ , such that the liquid surface tension coefficient  $\gamma$  is important. The quantity  $\rho U^2 L / \gamma$  in this case is important and is called the  
 (a) capillary rise, (b) Froude number, (c) Prandtl number, (d) Weber number, (e) Bond number
- FE5.8** If a stream flowing at velocity  $U$  past a body of length  $L$  causes a force  $F$  on the body that depends only on  $U$ ,  $L$ , and fluid viscosity  $\mu$ , then  $F$  must be proportional to  
 (a)  $\rho U L / \mu$ , (b)  $\rho U^2 L^2$ , (c)  $\mu U L$ , (d)  $\mu U L$ , (e)  $U L / \mu$
- FE5.9** In supersonic wind tunnel testing, if different gases are used, dynamic similarity requires that the model and prototype have the same Mach number and the same  
 (a) Euler number, (b) speed of sound, (c) stagnation enthalpy, (d) Froude number, (e) specific-heat ratio
- FE5.10** The Reynolds number for a 1-ft-diameter sphere moving at 2.3 mi/h through seawater (specific gravity 1.027, viscosity 1.07 E-3 N · s/m<sup>2</sup>) is approximately  
 (a) 300, (b) 3000, (c) 30,000, (d) 300,000, (e) 3,000,000
- FE5.11** The Ekman number, important in physical oceanography, is a dimensionless combination of  $\mu$ ,  $L$ ,  $\rho$ , and the earth's rotation rate  $\Omega$ . If the Ekman number is proportional to  $\Omega$ , it should take the form  
 (a)  $\rho \Omega^2 L^2 / \mu$ , (b)  $\mu \Omega L / \rho$ , (c)  $\rho \Omega L / \mu$ , (d)  $\rho \Omega L^2 / \mu$ , (e)  $\rho \Omega / L \mu$
- FE5.12** A valid, but probably useless, dimensionless group is given by  $(\mu T_{0g}) / (\gamma L \alpha)$ , where everything has its usual meaning, except  $\alpha$ . What are the dimensions of  $\alpha$ ?  
 (a)  $\Theta L^{-1} T^{-1}$ , (b)  $\Theta L^{-1} T^{-2}$ , (c)  $\Theta M L^{-1}$ , (d)  $\Theta^{-1} L T^{-1}$ , (e)  $\Theta L T^{-1}$

## Comprehensive Problems

- C5.1** Estimating pipe wall friction is one of the most common tasks in fluids engineering. For long circular rough pipes in turbulent flow, wall shear  $\tau_w$  is a function of density  $\rho$ , viscosity  $\mu$ , average velocity  $V$ , pipe diameter  $d$ , and wall roughness height  $\epsilon$ . Thus, functionally, we can write  $\tau_w = fcn(\rho, \mu, V, d, \epsilon)$ . (a) Using dimensional analysis, rewrite this function in dimensionless form. (b) A certain pipe has  $d = 5$  cm and  $\epsilon = 0.25$  mm. For flow of water at 20°C, measurements show the following values of wall shear stress:

$Q$ , gal/min	1.5	3.0	6.0	9.0	12.0	14.0
$\tau_w$ , Pa	0.05	0.18	0.37	0.64	0.86	1.25

Plot these data using the dimensionless form obtained in part (a) and suggest a curve-fit formula. Does your plot reveal the entire functional relation obtained in part (a)?

- C5.2** When the fluid exiting a nozzle, as in Fig. P3.49, is a gas, instead of water, compressibility may be important, especially if upstream pressure  $p_1$  is large and exit diameter  $d_2$  is small. In this case, the difference  $p_1 - p_2$  is no longer controlling, and the gas mass flow  $\dot{m}$  reaches a maximum value that depends on  $p_1$  and  $d_2$  and also on the absolute upstream temperature  $T_1$  and the gas constant  $R$ . Thus, functionally,  $\dot{m} = fcn(p_1, d_2, T_1, R)$ . (a) Using dimensional analysis, rewrite this function in dimensionless form. (b) A certain pipe has  $d_2 = 1$  cm. For flow of air, measurements show the following values of mass flow through the nozzle:

$T_1$ , K	300	300	300	500	800
$p_1$ , kPa	200	250	300	300	300
$\dot{m}$ , kg/s	0.037	0.046	0.055	0.043	0.034

Plot these data in the dimensionless form obtained in part (a). Does your plot reveal the entire functional relation obtained in part (a)?

- C5.3** Reconsider the fully developed draining vertical oil film problem (see Fig. P4.80) as an exercise in dimensional analysis. Let the vertical velocity be a function only of distance from the plate, fluid properties, gravity, and film thickness. That is,  $w = fcn(x, \rho, \mu, g, \delta)$ . (a) Use the pi theorem to rewrite this function in terms of dimensionless parameters. (b) Verify that the exact solution from Prob. P4.80 is consistent with your result in part (a).
- C5.4** The Taco Inc. model 4013 centrifugal pump has an impeller of diameter  $D = 12.95$  in. When pumping 20°C water at  $\Omega = 1160$  r/min, the measured flow rate  $Q$  and pressure rise  $\Delta p$  are given by the manufacturer as follows:

$Q$ , gal/min	200	300	400	500	600	700
$\Delta p$ , lb/in <sup>2</sup>	36	35	34	32	29	23

(a) Assuming that  $\Delta p = fcn(\rho, Q, D, \Omega)$ , use the pi theorem to rewrite this function in terms of dimensionless parameters and then plot the given data in dimensionless form. (b) It is desired to use the same pump, running at 900 r/min, to pump 20°C gasoline at 400 gal/min. According to your dimensionless correlation, what pressure rise  $\Delta p$  is expected, in lbf/in<sup>2</sup>?

- C5.5** Does an automobile radio antenna vibrate in resonance due to vortex shedding? Consider an antenna of length  $L$  and diameter  $D$ . According to beam vibration theory [see [34, 35], p. 401], the first mode natural frequency of a solid circular cantilever beam is  $\omega_n = 3.516[EI/(\rho AL^4)]^{1/2}$ ,

where  $E$  is the modulus of elasticity,  $I$  is the area moment of inertia,  $\rho$  is the beam material density, and  $A$  is the beam cross-section area. (a) Show that  $\omega_n$  is proportional to the antenna radius  $R$ . (b) If the antenna

## Design Projects

- D5.1** We are given laboratory data, taken by Prof. Robert Kirchhoff and his students at the University of Massachusetts, for the spin rate of a 2-cup anemometer. The anemometer was made of ping-pong balls ( $d = 1.5$  in) split in half, facing in opposite directions, and glued to thin ( $\frac{1}{2}$ -in) rods pegged to a center axle. (See Fig. P7.91 for a sketch.) There were four rods, of lengths  $l = 0.212, 0.322, 0.458$ , and  $0.574$  ft. The experimental data, for wind tunnel velocity  $U$  and rotation rate  $\Omega$ , are as follows:

$l$ , ft/s	$\Omega$ , r/min	$U$ , ft/s	$\Omega$ , r/min	$U$ , ft/s	$\Omega$ , r/min	$U$ , ft/s	$\Omega$ , r/min
18.95	435	18.95	225	20.10	140	23.21	115
22.20	545	23.19	290	26.77	215	27.60	145
25.90	650	29.15	370	31.37	260	32.07	175
29.94	760	32.79	425	36.05	295	36.05	195
38.45	970	38.45	495	39.03	327	39.60	215

Assume that the angular velocity  $\Omega$  of the device is a function of wind speed  $U$ , air density  $\rho$  and viscosity  $\mu$ , rod length  $l$ , and cup diameter  $d$ . For all data, assume air is at 1 atm and 20°C. Define appropriate pi groups for this problem, and plot the data in this dimensionless manner. Comment on the possible uncertainty of the results.

As a design application, suppose we are to use this anemometer geometry for a large-scale ( $d = 30$  cm) airport wind anemometer. If wind speeds vary up to 25 m/s and we desire an average rotation rate  $\Omega = 120$  r/min, what should be the proper rod length? What are possible limitations of your design? Predict the expected  $\Omega$  (in r/min) of your design as affected by wind speeds from 0 to 25 m/s.

- D5.2** By analogy with the cylinder drag data in Fig. 5.3b, spheres also show a strong roughness effect on drag, at least in the Reynolds number range  $4 \times 10^4 < Re_D < 3 \times 10^5$ , which accounts for the dimpling of golf balls to increase their distance traveled. Some experimental data for roughened spheres [33] are given in Fig. D5.2. The figure


is steel, with  $L = 60$  cm and  $D = 4$  mm, estimate the natural vibration frequency, in Hz. (c) Compare with the shedding frequency if the car moves at 65 mi/h.

also shows typical golf ball data. We see that some roughened spheres are better than golf balls in some regions. For the present study, let us neglect the ball's *spin*, which causes the very important side-force or *Magnus effect* (see Fig. 8.15) and assume that the ball is hit without spin and follows the equations of motion for plane motion ( $x, z$ ):

$$m\ddot{x} = -F \cos \theta \quad m\ddot{z} = -F \sin \theta - W$$

$$\text{where } F = C_D \frac{\rho}{2} \frac{\pi}{4} D^2 (\dot{x}^2 + \dot{z}^2) \quad \theta = \tan^{-1} \frac{\dot{z}}{\dot{x}}$$

The ball has a particular  $C_D(Re_D)$  curve from Fig. D5.2 and is struck with an initial velocity  $V_0$  and angle  $\theta_0$ . Take the ball's average mass to be 46 g and its diameter to be 4.3 cm. Assuming sea-level air and a modest but finite range of initial conditions, integrate the equations of motion to compare the trajectory of "roughened spheres" to actual golf ball calculations. Can the rough sphere outdrive a normal golf ball for any conditions? What roughness-effect differences occur between a low-impact duffer and, say, Tiger Woods?

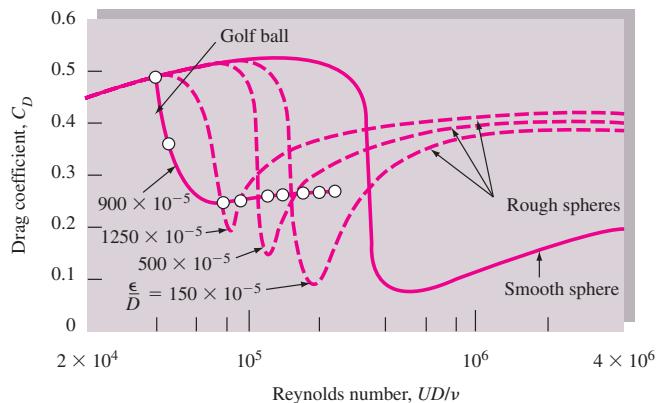

D5.2

## References

1. E. Buckingham, "On Physically Similar Systems: Illustrations of the Use of Dimensional Equations," *Phys. Rev.*, vol. 4, no. 4, 1914, pp. 345–376.
2. J. D. Anderson, *Computational Fluid Dynamics: The Basics with Applications*, McGraw-Hill, New York, 1995.

3. P. W. Bridgman, *Dimensional Analysis*, Yale University Press, New Haven, CT, 1922, rev. ed., 1963.
4. H. L. Langhaar, *Dimensional Analysis and the Theory of Models*, Wiley, New York, 1951.
5. E. C. Ipsen, *Units, Dimensions, and Dimensionless Numbers*, McGraw-Hill, New York, 1960.
6. H. G. Hornung, *Dimensional Analysis: Examples of the Use of Symmetry*, Dover, New York, 2006.
7. E. S. Taylor, *Dimensional Analysis for Engineers*, Clarendon Press, Oxford, England, 1974.
8. G. I. Barenblatt, *Dimensional Analysis*, Gordon and Breach, New York, 1987.
9. A. C. Palmer, *Dimensional Analysis and Intelligent Experimentation*, World Scientific Publishing, Hackensack, NJ, 2008.
10. T. Szirtes and P. Rozsa, *Applied Dimensional Analysis and Modeling*, McGraw-Hill, New York, 1997.
11. R. Esnault-Pelterie, *Dimensional Analysis and Metrology*, F. Rouge, Lausanne, Switzerland, 1950.
12. R. Kurth, *Dimensional Analysis and Group Theory in Astrophysics*, Pergamon, New York, 1972.
13. F. J. de-Jong, *Dimensional Analysis for Economists*, North Holland, Amsterdam, 1967.
14. R. Nakon, *Chemical Problem Solving Using Dimensional Analysis*, Prentice-Hall, Upper Saddle River, NJ, 1990.
15. D. R. Maidment (ed.), *Hydrologic and Hydraulic Modeling Support: With Geographic Information Systems*, Environmental Systems Research Institute, Redlands, CA, 2000.
16. A. M. Curren and L. D. Munday, *Dimensional Analysis for Meds*, 3d ed., Delmar Thomson Learning, Albany, NY, 2005.
17. G. P. Craig, *Clinical Calculations Made Easy: Solving Problems Using Dimensional Analysis*, 4th ed. Lippincott Williams and Wilkins, Baltimore, MD, 2008.
18. M. Zlokarnik, *Dimensional Analysis and Scale-Up in Chemical Engineering*, Springer-Verlag, New York, 1991.
19. W. G. Jacoby, *Data Theory and Dimensional Analysis*, Sage, Newbury Park, CA, 1991.
20. B. Schepartz, *Dimensional Analysis in the Biomedical Sciences*, Thomas, Springfield, IL, 1980.
21. A. J. Smith, *Dosage and Solution Calculations: The Dimensional Analysis Way*, Mosby, St. Louis, MO, 1989.
22. J. B. Bassingthwaigte et al., *Fractal Physiology*, Oxford Univ. Press, New York, 1994.
23. K. J. Niklas, *Plant Allometry: The Scaling of Form and Process*, Univ. of Chicago Press, Chicago, 1994.
24. "Flow of Fluids through Valves, Fittings, and Pipes," Crane Valve Group, Long Beach, CA, 1957 (now updated as a CD-ROM; see <<http://www.cranevalves.com>>).
25. A. Roshko, "On the Development of Turbulent Wakes from Vortex Streets," *NACA Rep.* 1191, 1954.
26. G. W. Jones, Jr., "Unsteady Lift Forces Generated by Vortex Shedding about a Large, Stationary, Oscillating Cylinder at High Reynolds Numbers," *ASME Symp. Unsteady Flow*, 1968.
27. O. M. Griffin and S. E. Ramberg, "The Vortex Street Wakes of Vibrating Cylinders," *J. Fluid Mech.*, vol. 66, pt. 3, 1974, pp. 553–576.
28. *Encyclopedia of Science and Technology*, 10th ed., McGraw-Hill, New York, 2007.
29. H. A. Becker, *Dimensionless Parameters*, Wiley, New York, 1976.
30. V. P. Singh et al. (eds.), *Hydraulic Modeling*, Water Resources Publications LLC, Highlands Ranch, CO, 1999.
31. J. J. Sharp, *Hydraulic Modeling*, Butterworth, London, 1981.
32. R. Ettema, *Hydraulic Modeling: Concepts and Practice*, American Society of Civil Engineers, Reston, VA, 2000.
33. R. D. Blevins, *Applied Fluid Dynamics Handbook*, van Nostrand Reinhold, New York, 1984.
34. W. J. Palm III, *Mechanical Vibration*, Wiley, New York, 2006.
35. S. S. Rao, *Mechanical Vibrations*, 4th ed., Prentice-Hall, Upper Saddle River, NJ, 2003.
36. G. I. Barenblatt, *Scaling*, Cambridge University Press, Cambridge, UK, 2003.
37. L. J. Fingersh, "Unsteady Aerodynamics Experiment," *Journal of Solar Energy Engineering*, vol. 123, Nov. 2001, p. 267.
38. J. B. Barlow, W. H. Rae, and A. Pope, *Low-Speed Wind Tunnel Testing*, Wiley, New York, 1999.
39. B. H. Goethert, *Transonic Wind Tunnel Testing*, Dover, New York, 2007.
40. American Institute of Aeronautics and Astronautics, *Recommended Practice: Wind Tunnel Testing*, 2 vols., Reston, VA, 2003.
41. P. N. Desai, J. T. Schofield, and M. E. Lisano, "Flight Reconstruction of the Mars Pathfinder Disk-Gap-Band Parachute Drag Coefficients," *J. Spacecraft and Rockets*, vol. 42, no. 4, July–August 2005, pp. 672–676.



This chapter is mostly about pipe flow. The photo shows a dramatic pipe-engineering achievement: the Trans-Alaska Pipeline System (TAPS). The pipeline runs almost 800 miles (1300 km), from Prudhoe Bay in the north to the port of Valdez in the south. It was built between 1975 and 1977 at a cost of eight billion dollars. There are 11 pumping stations, each with four pumps. The single pipe is 48 in (1.22 m) in diameter and is capable of carrying up to two million barrels ( $333,000 \text{ m}^3$ ) of oil per day, on a trip that takes almost six days. Since the oil temperature is typically about  $60^\circ\text{C}$ , many portions are cooled by an ammonia system to avoid damage to the permafrost. Why does the pipeline zigzag? Shoddy construction? No, the zigzag allows for flexible pipeline movement if disturbed by earthquakes, avalanches, or sudden temperature changes. (Photo ©Corbis RF )

# Chapter 6

## Viscous Flow in Ducts

**Motivation.** This chapter is completely devoted to an important practical fluids engineering problem: flow in ducts with various velocities, various fluids, and various duct shapes. Piping systems are encountered in almost every engineering design and thus have been studied extensively. There is a small amount of theory plus a large amount of experimentation.


The basic piping problem is this: Given the pipe geometry and its added components (such as fittings, valves, bends, and diffusers) plus the desired flow rate and fluid properties, what pressure drop is needed to drive the flow? Of course, it may be stated in alternative form: Given the pressure drop available from a pump, what flow rate will ensue? The correlations discussed in this chapter are adequate to solve most such piping problems.

### 6.1 Reynolds Number Regimes

Now that we have derived and studied the basic flow equations in Chap. 4, you would think that we could just whip off myriad beautiful solutions illustrating the full range of fluid behavior, of course expressing all these educational results in dimensionless form, using our new tool from Chap. 5, dimensional analysis.

The fact of the matter is that no general analysis of fluid motion yet exists. There are several dozen known particular solutions, there are many approximate digital computer solutions, and there are a great many experimental data. There is a lot of theory available if we neglect such important effects as viscosity and compressibility (Chap. 8), but there is no general theory and there may never be. The reason is that a profound and vexing change in fluid behavior occurs at moderate Reynolds numbers. The flow ceases being smooth and steady (*laminar*) and becomes fluctuating and agitated (*turbulent*). The changeover is called *transition* to turbulence. In Fig. 5.3a we saw that transition on the cylinder and sphere occurred at about  $Re = 3 \times 10^5$ , where the sharp drop in the drag coefficient appeared. Transition depends on many effects, such as wall roughness (Fig. 5.3b) or fluctuations in the inlet stream, but the primary parameter is the Reynolds number. There are a great many data on transition but only a small amount of theory [1 to 3].

Turbulence can be detected from a measurement by a small, sensitive instrument such as a hot-wire anemometer (Fig. 6.29e) or a piezoelectric pressure transducer. The

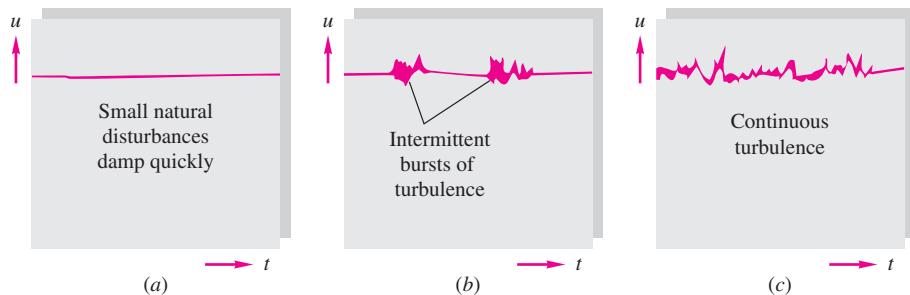

**Fig. 6.1** The three regimes of viscous flow: (a) laminar flow at low  $Re$ ; (b) transition at intermediate  $Re$ ; (c) turbulent flow at high  $Re$ .

flow will appear steady on average but will reveal rapid, random fluctuations if turbulence is present, as sketched in Fig. 6.1. If the flow is laminar, there may be occasional natural disturbances that damp out quickly (Fig. 6.1a). If transition is occurring, there will be sharp bursts of intermittent turbulent fluctuation (Fig. 6.1b) as the increasing Reynolds number causes a breakdown or instability of laminar motion. At sufficiently large  $Re$ , the flow will fluctuate continually (Fig. 6.1c) and is termed *fully turbulent*. The fluctuations, typically ranging from 1 to 20 percent of the average velocity, are not strictly periodic but are random and encompass a continuous range, or spectrum, of frequencies. In a typical wind tunnel flow at high  $Re$ , the turbulent frequency ranges from 1 to 10,000 Hz, and the wavelength ranges from about 0.01 to 400 cm.

### EXAMPLE 6.1

The accepted transition Reynolds number for flow in a circular pipe is  $Re_{d,\text{crit}} \approx 2300$ . For flow through a 5-cm-diameter pipe, at what velocity will this occur at 20°C for (a) airflow and (b) water flow?

#### Solution


Almost all pipe flow formulas are based on the *average* velocity  $V = Q/A$ , not centerline or any other point velocity. Thus transition is specified at  $\rho V d / \mu \approx 2300$ . With  $d$  known, we introduce the appropriate fluid properties at 20°C from Tables A.3 and A.4:

$$(a) \text{ Air: } \frac{\rho V d}{\mu} = \frac{(1.205 \text{ kg/m}^3)V(0.05 \text{ m})}{1.80 \times 10^{-5} \text{ kg/(m} \cdot \text{s)}} = 2300 \quad \text{or} \quad V \approx 0.7 \frac{\text{m}}{\text{s}}$$


$$(b) \text{ Water: } \frac{\rho V d}{\mu} = \frac{(998 \text{ kg/m}^3)V(0.05 \text{ m})}{0.001 \text{ kg/(m} \cdot \text{s)}} = 2300 \quad \text{or} \quad V = 0.046 \frac{\text{m}}{\text{s}}$$

These are very low velocities, so most engineering air and water pipe flows are turbulent, not laminar. We might expect laminar duct flow with more viscous fluids such as lubricating oils or glycerin.

In free-surface flows, turbulence can be observed directly. Figure 6.2 shows liquid flow issuing from the open end of a tube. The low-Reynolds-number jet (Fig. 6.2a) is smooth and laminar, with the fast center motion and slower wall flow forming different

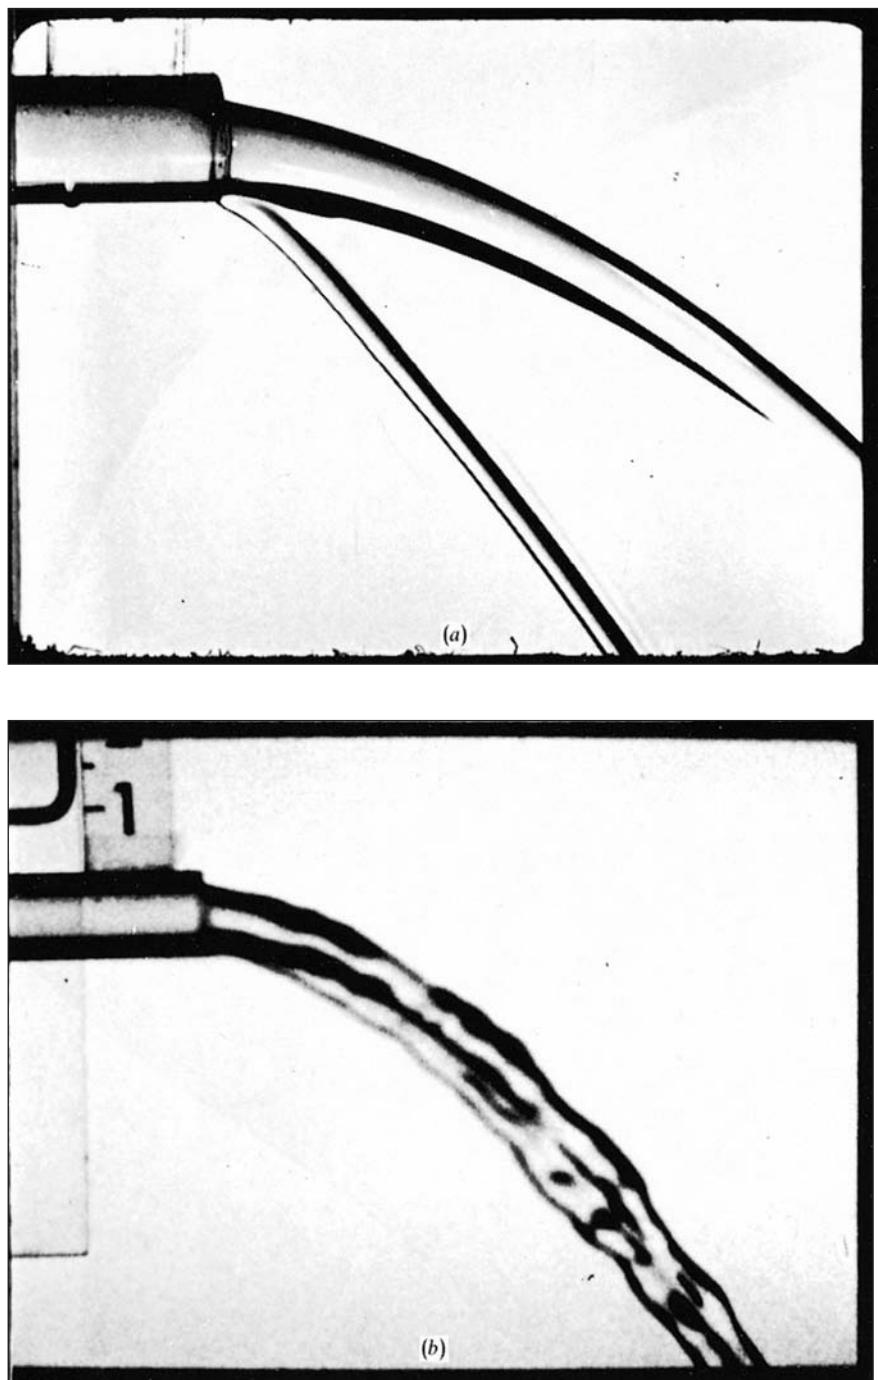

**Fig. 6.2** Flow issuing at constant speed from a pipe: (a) high-viscosity, low-Reynolds-number, laminar flow; (b) low-viscosity, high-Reynolds-number, turbulent flow. (National Committee for Fluid Mechanics Films, Education Development Center, Inc., ©1972.)

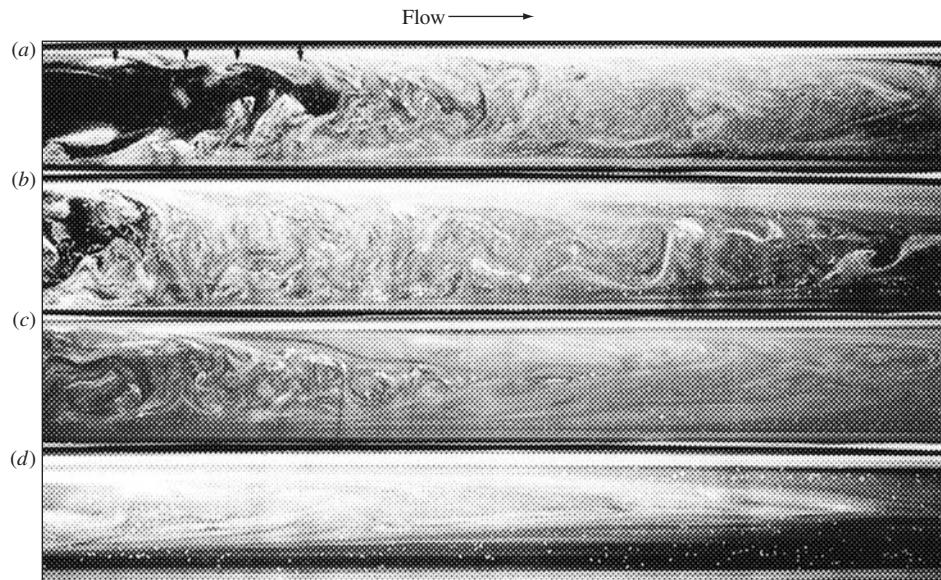

**Fig. 6.3** Formation of a turbulent puff in pipe flow: (a) and (b) near the entrance; (c) somewhat downstream; (d) far downstream. (*Courtesy of Cambridge University PressP. R. Bandyopadhyay, "Aspects of the Equilibrium Puff in Transitional Pipe Flow," Journal of Fluid Mechanics, vol. 163, 1986, pp. 439-458.*)

trajectories joined by a liquid sheet. The higher-Reynolds-number turbulent flow (Fig. 6.2b) is unsteady and irregular but, when averaged over time, is steady and predictable.

How did turbulence form inside the pipe? The laminar parabolic flow profile, which is similar to Eq. (4.146), became unstable and, at  $Re_d \approx 2300$ , began to form “slugs” or “puffs” of intense turbulence. A puff has a fast-moving front and a slow-moving rear and may be visualized by experimenting with glass tube flow. Figure 6.3 shows a puff as photographed by Bandyopadhyay [45]. Near the entrance (Fig. 6.3a and b) there is an irregular laminar-turbulent interface, and vortex roll-up is visible. Further downstream (Fig. 6.3c) the puff becomes fully turbulent and very active, with helical motions visible. Far downstream (Fig. 6.3d) the puff is cone-shaped and less active, with a fuzzy ill-defined interface, sometimes called the “relaminarization” region.

A complete description of the statistical aspects of turbulence is given in Ref. 1, while theory and data on transition effects are given in Refs. 2 and 3. At this introductory level we merely point out that the primary parameter affecting transition is the Reynolds number. If  $Re = UL/\nu$ , where  $U$  is the average stream velocity and  $L$  is the “width,” or transverse thickness, of the shear layer, the following approximate ranges occur:

- $0 < Re < 1$ : highly viscous laminar “creeping” motion
- $1 < Re < 100$ : laminar, strong Reynolds number dependence
- $100 < Re < 10^3$ : laminar, boundary layer theory useful
- $10^3 < Re < 10^4$ : transition to turbulence
- $10^4 < Re < 10^6$ : turbulent, moderate Reynolds number dependence
- $10^6 < Re < \infty$ : turbulent, slight Reynolds number dependence

These representative ranges vary somewhat with flow geometry, surface roughness, and the level of fluctuations in the inlet stream. The great majority of our analyses are concerned with laminar flow or with turbulent flow, and one should not normally design a flow operation in the transition region.

## Historical Outline


Since turbulent flow is more prevalent than laminar flow, experimenters have observed turbulence for centuries without being aware of the details. Before 1930 flow instruments were too insensitive to record rapid fluctuations, and workers simply reported mean values of velocity, pressure, force, and so on. But turbulence can change the mean values dramatically, as with the sharp drop in drag coefficient in Fig. 5.3. A German engineer named G. H. L. Hagen first reported in 1839 that there might be *two* regimes of viscous flow. He measured water flow in long brass pipes and deduced a pressure-drop law:

$$\Delta p = (\text{const}) \frac{LQ}{R^4} + \text{entrance effect} \quad (6.1)$$


This is exactly our laminar flow scaling law from Example 5.4, but Hagen did not realize that the constant was proportional to the fluid viscosity.

The formula broke down as Hagen increased  $Q$  beyond a certain limit—that is, past the critical Reynolds number—and he stated in his paper that there must be a second mode of flow characterized by “strong movements of water for which  $\Delta p$  varies as the second power of the discharge. . . .” He admitted that he could not clarify the reasons for the change.

A typical example of Hagen’s data is shown in Fig. 6.4. The pressure drop varies linearly with  $V = Q/A$  up to about 1.1 ft/s, where there is a sharp change. Above about  $V = 2.2$  ft/s the pressure drop is nearly quadratic with  $V$ . The actual power

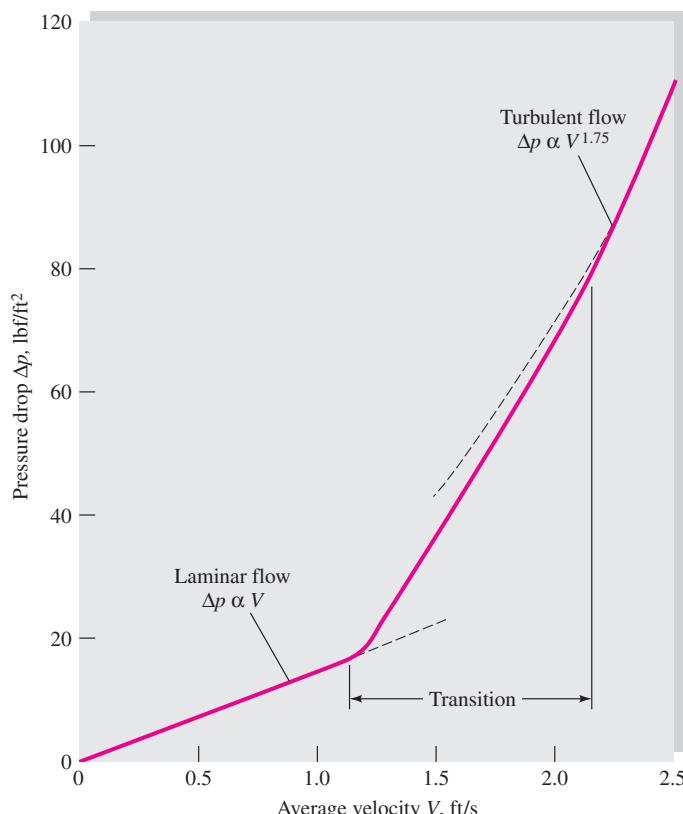

**Fig. 6.4** Experimental evidence of transition for water flow in a  $\frac{1}{4}$ -in smooth pipe 10 ft long.

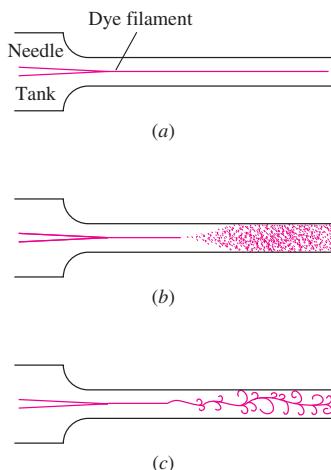

**Fig. 6.5** Reynolds' sketches of pipe flow transition: (a) low-speed, laminar flow; (b) high-speed, turbulent flow; (c) spark photograph of condition (b). (From Ref. 4.)

$\Delta p \propto V^{1.75}$  seems impossible on dimensional grounds but is easily explained when the dimensionless pipe flow data (Fig. 5.10) are displayed.

In 1883 Osborne Reynolds, a British engineering professor, showed that the change depended on the parameter  $\rho V d / \mu$ , now named in his honor. By introducing a dye streak into a pipe flow, Reynolds could observe transition and turbulence. His sketches [4] of the flow behavior are shown in Fig. 6.5.

If we examine Hagen's data and compute the Reynolds number at  $V = 1.1$  ft/s, we obtain  $Re_d = 2100$ . The flow became fully turbulent,  $V = 2.2$  ft/s, at  $Re_d = 4200$ . The accepted design value for pipe flow transition is now taken to be

$$Re_{d,\text{crit}} \approx 2300 \quad (6.2)$$

This is accurate for commercial pipes (Fig. 6.13), although with special care in providing a rounded entrance, smooth walls, and a steady inlet stream,  $Re_{d,\text{crit}}$  can be delayed until much higher values. The study of transition in pipe flow, both experimentally and theoretically, continues to be a fascinating topic for researchers, as discussed in a recent review article [55]. Note: The value of 2300 is for transition in *pipes*. Other geometries, such as plates, airfoils, cylinders, and spheres, have completely different transition Reynolds numbers.

Transition also occurs in external flows around bodies such as the sphere and cylinder in Fig. 5.3. Ludwig Prandtl, a German engineering professor, showed in 1914 that the thin boundary layer surrounding the body was undergoing transition from laminar to turbulent flow. Thereafter the force coefficient of a body was acknowledged to be a function of the Reynolds number [Eq. (5.2)].

There are now extensive theories and experiments of laminar flow instability that explain why a flow changes to turbulence. Reference 5 is an advanced textbook on this subject.


Laminar flow theory is now well developed, and many solutions are known [2, 3], but no analyses can simulate the fine-scale random fluctuations of turbulent flow.<sup>1</sup> Therefore most turbulent flow theory is semiempirical, based on dimensional analysis and physical reasoning; it is concerned with the mean flow properties only and the mean of the fluctuations, not their rapid variations. The turbulent flow "theory" presented here in Chaps. 6 and 7 is unbelievably crude yet surprisingly effective. We shall attempt a rational approach that places turbulent flow analysis on a firm physical basis.

## 6.2 Internal versus External Viscous Flows

Both laminar and turbulent flow may be either internal (that is, "bounded" by walls) or external and unbounded. This chapter treats internal flows, and Chap. 7 studies external flows.

An internal flow is constrained by the bounding walls, and the viscous effects will grow and meet and permeate the entire flow. Figure 6.6 shows an internal flow in a long duct. There is an *entrance region* where a nearly inviscid upstream flow converges and enters the tube. Viscous boundary layers grow downstream, retarding the axial flow  $u(r, x)$  at the wall and thereby accelerating the center core flow

<sup>1</sup>However, direct numerical simulation (DNS) of low-Reynolds-number turbulence is now quite common [32].

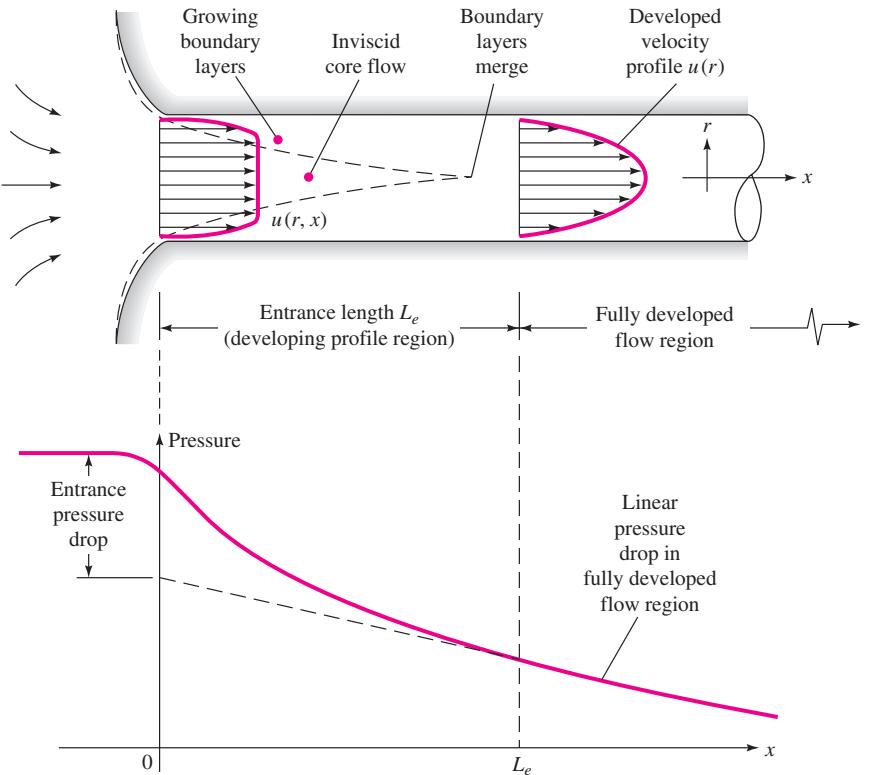

**Fig. 6.6** Developing velocity profiles and pressure changes in the entrance of a duct flow.

to maintain the incompressible continuity requirement

$$Q = \int u \, dA = \text{const} \quad (6.3)$$

At a finite distance from the entrance, the boundary layers merge and the inviscid core disappears. The tube flow is then entirely viscous, and the axial velocity adjusts slightly further until at  $x = L_e$  it no longer changes with  $x$  and is said to be *fully developed*,  $u \approx u(r)$  only. Downstream of  $x = L_e$  the velocity profile is constant, the wall shear is constant, and the pressure drops linearly with  $x$ , for either laminar or turbulent flow. All these details are shown in Fig. 6.6.

Dimensional analysis shows that the Reynolds number is the only parameter affecting entrance length. If

$$L_e = f(d, V, \rho, \mu) \quad V = \frac{Q}{A}$$

$$\text{then} \quad \frac{L_e}{d} = g\left(\frac{\rho V d}{\mu}\right) = g(\text{Re}_d) \quad (6.4)$$

For laminar flow [2, 3], the accepted correlation is

$$\frac{L_e}{d} \approx 0.06 \text{ Re}_d \quad \text{laminar} \quad (6.5)$$

The maximum laminar entrance length, at  $\text{Re}_{d,\text{crit}} = 2300$ , is  $L_e = 138d$ , which is the longest development length possible.

In turbulent flow, the boundary layers grow faster, and  $L_e$  is relatively shorter. For decades, the writer has favored a sixth-power-law estimate,  $L_e/d \approx 4.4 \text{ Re}_d^{1/6}$ , but recent CFD results, communicated by Fabien Anselmet, and separately by Sukanta Dash, indicate that a better turbulent entrance-length correlation is

$$\frac{L_e}{d} \approx 1.6 \text{ Re}_d^{1/4} \quad \text{for } \text{Re}_d \leq 10^7 \quad (6.6)$$

Some computed turbulent entrance-length estimates are thus

$\text{Re}_d$	4000	$10^4$	$10^5$	$10^6$	$10^7$
$L_e/d$	13	16	28	51	90

Now 90 diameters may seem “long,” but typical pipe flow applications involve an  $L/d$  value of 1000 or more, in which case the entrance effect may be neglected and a simple analysis made for fully developed flow. This is possible for both laminar and turbulent flows, including rough walls and noncircular cross sections.

### EXAMPLE 6.2

A  $\frac{1}{2}$ -in-diameter water pipe is 60 ft long and delivers water at 5 gal/min at  $20^\circ\text{C}$ . What fraction of this pipe is taken up by the entrance region?

### Solution

Convert

$$Q = (5 \text{ gal/min}) \frac{0.00223 \text{ ft}^3/\text{s}}{1 \text{ gal/min}} = 0.0111 \text{ ft}^3/\text{s}$$

The average velocity is

$$V = \frac{Q}{A} = \frac{0.0111 \text{ ft}^3/\text{s}}{(\pi/4)[(\frac{1}{2}/12) \text{ ft}]^2} = 8.17 \text{ ft/s}$$

From Table 1.4 read for water  $\nu = 1.01 \times 10^{-6} \text{ m}^2/\text{s} = 1.09 \times 10^{-5} \text{ ft}^2/\text{s}$ . Then the pipe Reynolds number is

$$\text{Re}_d = \frac{Vd}{\nu} = \frac{(8.17 \text{ ft/s})[(\frac{1}{2}/12) \text{ ft}]}{1.09 \times 10^{-5} \text{ ft}^2/\text{s}} = 31,300$$

This is greater than 4000; hence the flow is fully turbulent, and Eq. (6.6) applies for entrance length:

$$\frac{L_e}{d} \approx 1.6 \text{ Re}_d^{1/4} = (1.6)(31,300)^{1/4} = 21$$

The actual pipe has  $L/d = (60 \text{ ft})/[(\frac{1}{2}/12)\text{ft}] = 1440$ . Hence the entrance region takes up the fraction

$$\frac{L_e}{L} = \frac{21}{1440} = 0.015 = 1.5\% \quad \text{Ans.}$$

This is a very small percentage, so that we can reasonably treat this pipe flow as essentially fully developed.

Shortness can be a virtue in duct flow if one wishes to maintain the inviscid core. For example, a “long” wind tunnel would be ridiculous, since the viscous core would invalidate the purpose of simulating free-flight conditions. A typical laboratory low-speed wind tunnel test section is 1 m in diameter and 5 m long, with  $V = 30$  m/s. If we take  $\nu_{\text{air}} = 1.51 \times 10^{-5}$  m<sup>2</sup>/s from Table 1.4, then  $Re_d = 1.99 \times 10^6$  and, from Eq. (6.6),  $L_e/d \approx 49$ . The test section has  $L/d = 5$ , which is much shorter than the development length. At the end of the section the wall boundary layers are only 10 cm thick, leaving 80 cm of inviscid core suitable for model testing.

An external flow has no restraining walls and is free to expand no matter how thick the viscous layers on the immersed body may become. Thus, far from the body the flow is nearly inviscid, and our analytical technique, treated in Chap. 7, is to patch an inviscid-flow solution onto a viscous boundary-layer solution computed for the wall region. There is no external equivalent of fully developed internal flow.


### 6.3 Head Loss/The Friction Factor

When applying pipe flow formulas to practical problems, it is customary to use a control volume analysis. Consider incompressible steady flow between sections 1 and 2 of the inclined constant-area pipe in Fig. 6.7. The one-dimensional continuity relation, Eq. (3.30), reduces to

$$Q_1 = Q_2 = \text{const} \quad \text{or} \quad V_1 = V_2 = V$$

since the pipe is of constant area. The steady flow energy equation (3.75) becomes

$$\left( \frac{p}{\rho g} + \alpha \frac{V^2}{2g} + z \right)_1 = \left( \frac{p}{\rho g} + \alpha \frac{V^2}{2g} + z \right)_2 + h_f \quad (6.7)$$

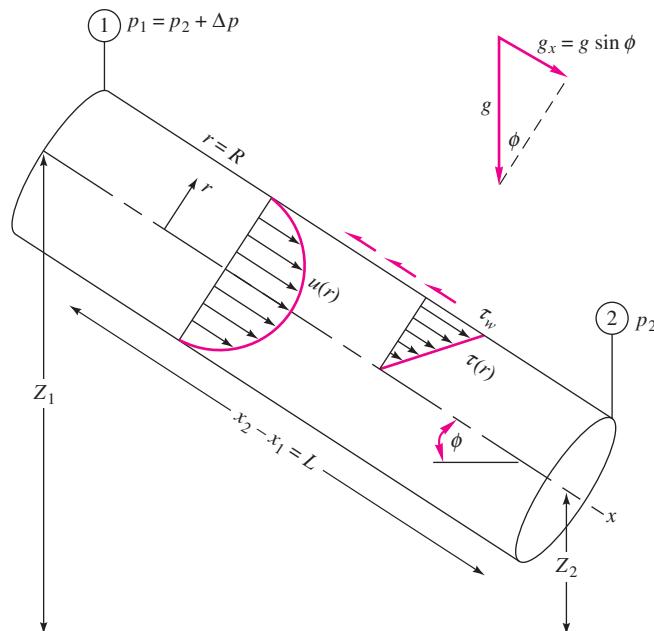

**Fig. 6.7** Control volume of steady, fully developed flow between two sections in an inclined pipe.

since there is no pump or turbine between 1 and 2. For fully developed flow, the velocity profile shape is the same at sections 1 and 2. Thus  $\alpha_1 = \alpha_2$  and, since  $V_1 = V_2$ , Eq. (6.7) reduces to head loss versus pressure drop and elevation change:

$$h_f = (z_1 - z_2) + \left( \frac{p_1}{\rho g} - \frac{p_2}{\rho g} \right) = \Delta z + \frac{\Delta p}{\rho g} \quad (6.8)$$

The pipe head loss equals the change in the sum of pressure and gravity head—that is, the change in height of the hydraulic grade line (HGL).

Finally, apply the momentum relation (3.40) to the control volume in Fig. 6.7, accounting for applied  $x$ -directed forces due to pressure, gravity, and shear:

$$\sum F_x = \Delta p (\pi R^2) + \rho g (\pi R^2) L \sin \phi - \tau_w (2\pi R) L = \dot{m} (V_2 - V_1) = 0 \quad (6.9a)$$

Rearrange this and we find that the head loss is also related to wall shear stress:

$$\Delta z + \frac{\Delta p}{\rho g} = h_f = \frac{2\tau_w}{\rho g} \frac{L}{R} = \frac{4\tau_w}{\rho g} \frac{L}{d} \quad (6.9b)$$

where we have substituted  $\Delta z = L \sin \phi$  from the geometry of Fig. 6.7. Note that, regardless of whether the pipe is horizontal or tilted, the head loss is proportional to the wall shear stress.

How should we correlate the head loss for pipe flow problems? The answer was given a century and a half ago by Julius Weisbach, a German professor who in 1850 published the first modern textbook on hydrodynamics. Equation (6.9b) shows that  $h_f$  is proportional to  $(L/d)$ , and data such as Hagen's in Fig. 6.6 show that, for turbulent flow,  $h_f$  is approximately proportional to  $V^2$ . The proposed correlation, still as effective today as in 1850, is

$$h_f = f \frac{L}{d} \frac{V^2}{2g} \quad \text{where } f = \text{fcn}(\text{Re}_d, \frac{\varepsilon}{d}, \text{duct shape}) \quad (6.10)$$

The dimensionless parameter  $f$  is called the *Darcy friction factor*, after Henry Darcy (1803–1858), a French engineer whose pipe flow experiments in 1857 first established the effect of roughness on pipe resistance. The quantity  $\varepsilon$  is the wall roughness height, which is important in turbulent (but not laminar) pipe flow. We added the “duct shape” effect in Eq. (6.10) to remind us that square and triangular and other noncircular ducts have a somewhat different friction factor than a circular pipe. Actual data and theory for friction factors will be discussed in the sections that follow.

By equating Eqs. (6.9) and (6.10) we find an alternative form for friction factor:

$$f = \frac{8\tau_w}{\rho V^2} \quad (6.11)$$

For noncircular ducts, we must interpret  $\tau_w$  to be an average value around the duct perimeter. For this reason Eq. (6.10) is preferred as a unified definition of the Darcy friction factor.

## 6.4 Laminar Fully Developed Pipe Flow

Analytical solutions can be readily derived for laminar flows, either circular or non-circular. Consider fully developed *Poiseuille* flow in a round pipe of diameter  $d$ , radius  $R$ . Complete analytical results were given in Sect. 4.10. Let us review those formulas here:

$$\begin{aligned} u &= u_{\max} \left( 1 - \frac{r^2}{R^2} \right) \quad \text{where} \quad u_{\max} = \left( -\frac{dp}{dx} \right) \frac{R^2}{4\mu} \quad \text{and} \quad \left( -\frac{dp}{dx} \right) = \left( \frac{\Delta p + \rho g \Delta z}{L} \right) \\ V &= \frac{Q}{A} = \frac{u_{\max}}{2} = \left( \frac{\Delta p + \rho g \Delta z}{L} \right) \frac{R^2}{8\mu} \\ Q &= \int u dA = \pi R^2 V = \frac{\pi R^4}{8\mu} \left( \frac{\Delta p + \rho g \Delta z}{L} \right) \quad (6.12) \\ \tau_w &= \left| \mu \frac{du}{dr} \right|_{r=R} = \frac{4\mu V}{R} = \frac{8\mu V}{d} = \frac{R}{2} \left( \frac{\Delta p + \rho g \Delta z}{L} \right) \\ h_f &= \frac{32\mu LV}{\rho g d^2} = \frac{128\mu L Q}{\pi \rho g d^4} \end{aligned}$$

The paraboloid velocity profile has an average velocity  $V$  which is one-half of the maximum velocity. The quantity  $\Delta p$  is the pressure *drop* in a pipe of length  $L$ ; that is,  $(dp/dx)$  is negative. These formulas are valid whenever the pipe Reynolds number,  $Re_d = \rho V d / \mu$ , is less than about 2300. Note that  $\tau_w$  is proportional to  $V$  (see Fig. 6.6) and is independent of density because the fluid acceleration is zero. Neither of these is true in turbulent flow.

With wall shear stress known, the Poiseuille flow friction factor is easily determined:

$$f_{\text{lam}} = \frac{8\tau_{w,\text{lam}}}{\rho V^2} = \frac{8(8\mu V/d)}{\rho V^2} = \frac{64}{\rho V d / \mu} = \frac{64}{Re_d} \quad (6.13)$$

In laminar flow, the pipe friction factor decreases inversely with Reynolds number. This famous formula is effective, but often the algebraic relations of Eqs. (6.12) are more direct for problems.

### EXAMPLE 6.3

An oil with  $\rho = 900 \text{ kg/m}^3$  and  $\nu = 0.0002 \text{ m}^2/\text{s}$  flows upward through an inclined pipe as shown in Fig. E6.3. The pressure and elevation are known at sections 1 and 2, 10 m apart. Assuming steady laminar flow, (a) verify that the flow is up, (b) compute  $h_f$  between 1 and 2, and compute (c)  $Q$ , (d)  $V$ , and (e)  $Re_d$ . Is the flow really laminar?


### Solution

#### Part (a)

For later use, calculate

$$\mu = \rho\nu = (900 \text{ kg/m}^3)(0.0002 \text{ m}^2/\text{s}) = 0.18 \text{ kg/(m · s)}$$

$$z_2 = \Delta L \sin 40^\circ = (10 \text{ m})(0.643) = 6.43 \text{ m}$$

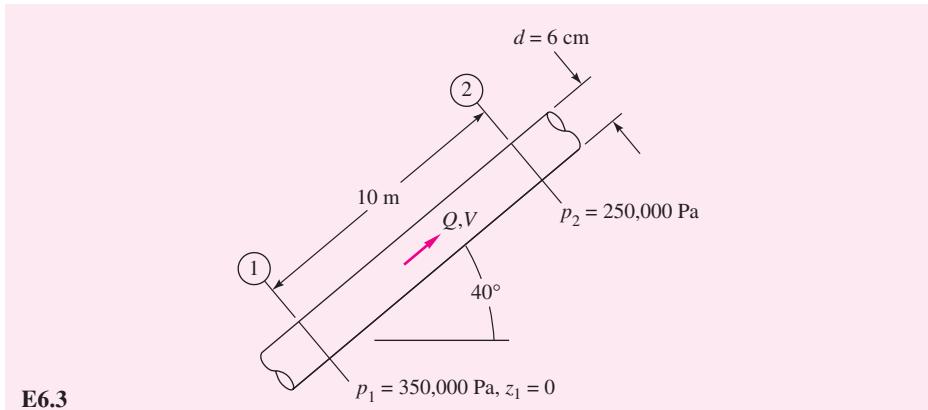

The flow goes in the direction of falling HGL; therefore compute the hydraulic grade-line height at each section:

$$\text{HGL}_1 = z_1 + \frac{p_1}{\rho g} = 0 + \frac{350,000}{900(9.807)} = 39.65 \text{ m}$$

$$\text{HGL}_2 = z_2 + \frac{p_2}{\rho g} = 6.43 + \frac{250,000}{900(9.807)} = 34.75 \text{ m}$$

The HGL is lower at section 2; hence the flow is up from 1 to 2 as assumed. *Ans. (a)*

### Part (b)

The head loss is the change in HGL:

$$h_f = \text{HGL}_1 - \text{HGL}_2 = 39.65 \text{ m} - 34.75 \text{ m} = 4.9 \text{ m} \quad \text{Ans. (b)}$$

Half the length of the pipe is quite a large head loss.

### Part (c)

We can compute  $Q$  from the various laminar flow formulas, notably Eq. (6.12):

$$Q = \frac{\pi \rho g d^4 h_f}{128 \mu L} = \frac{\pi(900)(9.807)(0.06)^4(4.9)}{128(0.18)(10)} = 0.0076 \text{ m}^3/\text{s} \quad \text{Ans. (c)}$$

### Part (d)

Divide  $Q$  by the pipe area to get the average velocity:

$$V = \frac{Q}{\pi R^2} = \frac{0.0076}{\pi(0.03)^2} = 2.7 \text{ m/s} \quad \text{Ans. (d)}$$


### Part (e)

With  $V$  known, the Reynolds number is

$$\text{Re}_d = \frac{Vd}{\nu} = \frac{2.7(0.06)}{0.0002} = 810 \quad \text{Ans. (e)}$$

This is well below the transition value  $\text{Re}_d = 2300$ , so we are fairly certain the flow is laminar.

Notice that by sticking entirely to consistent SI units (meters, seconds, kilograms, newtons) for all variables we avoid the need for any conversion factors in the calculations.

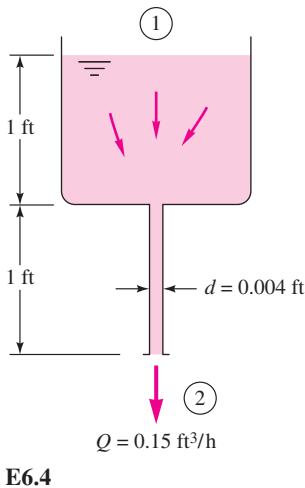**EXAMPLE 6.4**

A liquid of specific weight  $\rho g = 58 \text{ lb}_f/\text{ft}^3$  flows by gravity through a 1-ft tank and a 1-ft capillary tube at a rate of  $0.15 \text{ ft}^3/\text{h}$ , as shown in Fig. E6.4. Sections 1 and 2 are at atmospheric pressure. Neglecting entrance effects, compute the viscosity of the liquid.

**Solution**

- System sketch:** Figure E6.4 shows  $L = 1 \text{ ft}$ ,  $d = 0.004 \text{ ft}$ , and  $Q = 0.15 \text{ ft}^3/\text{h}$ .
- Assumptions:** Laminar, fully developed, incompressible (Poiseuille) pipe flow. Atmospheric pressure at sections 1 and 2. Negligible velocity at surface,  $V_1 \approx 0$ .
- Approach:** Use continuity and energy to find the head loss and thence the viscosity.
- Property values:** Given  $\rho g = 58 \text{ lbf}/\text{ft}^3$ , figure out  $\rho = 58/32.2 = 1.80 \text{ slug}/\text{ft}^3$  if needed.
- Solution step 1:** From continuity and the known flow rate, determine  $V_2$ :

$$V_2 = \frac{Q}{A_2} = \frac{Q}{(\pi/4)d^2} = \frac{(0.15/3600)\text{ft}^3/\text{s}}{(\pi/4)(0.004 \text{ ft})^2} = 3.32 \text{ ft/s}$$

Write the energy equation between 1 and 2, canceling terms, and find the head loss:

$$\frac{p_1}{\rho g} + \frac{\alpha_1 V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{\alpha_2 V_2^2}{2g} + z_2 + h_f$$

or  $h_f = z_1 - z_2 - \frac{\alpha_2 V_2^2}{2g} = 2.0 \text{ ft} - 0 \text{ ft} - \frac{(2.0)(3.32 \text{ ft/s})^2}{2(32.2 \text{ ft/s}^2)} = 1.66 \text{ ft}$

- Comment:** We introduced  $\alpha_2 = 2.0$  for laminar pipe flow from Eq. (3.76). If we forgot  $\alpha_2$ , we would have calculated  $h_f = 1.83 \text{ ft}$ , a 10 percent error.
- Solution step 2:** With head loss known, the viscosity follows from the laminar formula in Eqs. (6.12):

$$h_f = 1.66 \text{ ft} = \frac{32 \mu LV}{(\rho g)d^2} = \frac{32\mu(1.0 \text{ ft})(3.32 \text{ ft/s})}{(58 \text{ lbf}/\text{ft}^3)(0.004 \text{ ft})^2} \quad \text{solve for } \mu = 1.45E-5 \frac{\text{slug}}{\text{ft-s}} \quad \text{Ans.}$$

- Comments:** We didn't need the value of  $\rho$ —the formula contains  $\rho g$ , but who knew? Note also that  $L$  in this formula is the *pipe length* of 1 ft, not the total elevation change.
- Final check:** Calculate the Reynolds number to see if it is less than 2300 for laminar flow:

$$\text{Re}_d = \frac{\rho V d}{\mu} = \frac{(1.80 \text{ slug}/\text{ft}^3)(3.32 \text{ ft/s})(0.004 \text{ ft})}{(1.45E-5 \text{ slug}/\text{ft-s})} \approx 1650 \quad \text{Yes, laminar.}$$

- Comments:** So we did need  $\rho$  after all to calculate  $\text{Re}_d$ . *Unexpected comment:* For this head loss, there is a *second* (turbulent) solution, as we shall see in Example 6.8.

**6.5 Turbulence Modeling**

Throughout this chapter we assume constant density and viscosity and no thermal interaction, so that only the continuity and momentum equations are to be solved for velocity and pressure

Continuity: 
$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} + \frac{\partial w}{\partial z} = 0 \quad (6.14)$$

Momentum: 
$$\rho \frac{d\mathbf{V}}{dt} = -\nabla p + \rho \mathbf{g} + \mu \nabla^2 \mathbf{V}$$

subject to no slip at the walls and known inlet and exit conditions. (We shall save our free-surface solutions for Chap. 10.)

We will not work with the differential energy relation, Eq. (4.53), in this chapter, but it is very important, both for heat transfer calculations and for general understanding of duct flow processes. There is work being done by pressure forces to drive the fluid through the duct. Where does this energy go? There is no work done by the wall shear stresses, because the velocity at the wall is zero. The answer is that pressure work is balanced by viscous dissipation in the interior of the flow. The integral of the dissipation function  $\Phi$ , from Eq. (4.50), over the flow field will equal the pressure work. An example of this fundamental viscous flow energy balance is given in Problem C6.7.

Both laminar and turbulent flows satisfy Eqs. (6.14). For laminar flow, where there are no random fluctuations, we go right to the attack and solve them for a variety of geometries [2, 3], leaving many more, of course, for the problems.


### Reynolds' Time-Averaging Concept

For turbulent flow, because of the fluctuations, every velocity and pressure term in Eqs. (6.14) is a rapidly varying random function of time and space. At present our mathematics cannot handle such instantaneous fluctuating variables. No single pair of random functions  $\mathbf{V}(x, y, z, t)$  and  $p(x, y, z, t)$  is known to be a solution to Eqs. (6.14). Moreover, our attention as engineers is toward the average or *mean* values of velocity, pressure, shear stress, and the like in a high-Reynolds-number (turbulent) flow. This approach led Osborne Reynolds in 1895 to rewrite Eqs. (6.14) in terms of mean or time-averaged turbulent variables.

The time mean  $\bar{u}$  of a turbulent function  $u(x, y, z, t)$  is defined by

$$\bar{u} = \frac{1}{T} \int_0^T u \, dt \quad (6.15)$$

where  $T$  is an averaging period taken to be longer than any significant period of the fluctuations themselves. The mean values of turbulent velocity and pressure are illustrated in Fig. 6.8. For turbulent gas and water flows, an averaging period  $T \approx 5$  s is usually quite adequate.

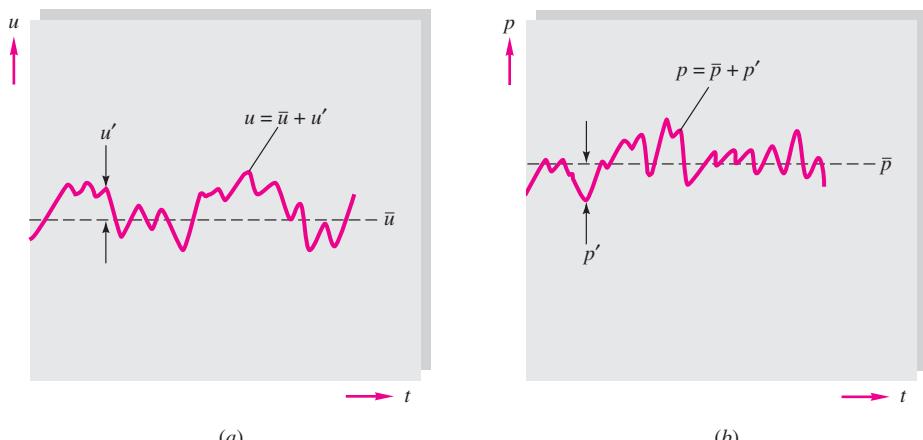

**Fig. 6.8** Definition of mean and fluctuating turbulent variables: (a) velocity; (b) pressure.

The *fluctuation*  $u'$  is defined as the deviation of  $u$  from its average value

$$u' = u - \bar{u} \quad (6.16)$$

also shown in Fig. 6.8. It follows by definition that a fluctuation has zero mean value:

$$\overline{u'} = \frac{1}{T} \int_0^T (u - \bar{u}) dt = \bar{u} - \bar{u} = 0 \quad (6.17)$$

However, the mean square of a fluctuation is not zero and is a measure of the *intensity* of the turbulence:

$$\overline{u'^2} = \frac{1}{T} \int_0^T u'^2 dt \neq 0 \quad (6.18)$$

Nor in general are the mean fluctuation products such as  $\overline{u'v'}$  and  $\overline{u'p'}$  zero in a typical turbulent flow.

Reynolds' idea was to split each property into mean plus fluctuating variables:

$$u = \bar{u} + u' \quad v = \bar{v} + v' \quad w = \bar{w} + w' \quad p = \bar{p} + p' \quad (6.19)$$

Substitute these into Eqs. (6.14), and take the time mean of each equation. The continuity relation reduces to

$$\frac{\partial \bar{u}}{\partial x} + \frac{\partial \bar{v}}{\partial y} + \frac{\partial \bar{w}}{\partial z} = 0 \quad (6.20)$$

which is no different from a laminar continuity relation.

However, each component of the momentum equation (6.14b), after time averaging, will contain mean values plus three mean products, or *correlations*, of fluctuating velocities. The most important of these is the momentum relation in the main-stream, or  $x$ , direction, which takes the form

$$\begin{aligned} \rho \frac{d\bar{u}}{dt} &= -\frac{\partial \bar{p}}{\partial x} + \rho g_x + \frac{\partial}{\partial x} \left( \mu \frac{\partial \bar{u}}{\partial x} - \rho \overline{u'^2} \right) \\ &\quad + \frac{\partial}{\partial y} \left( \mu \frac{\partial \bar{u}}{\partial y} - \rho \overline{u'v'} \right) + \frac{\partial}{\partial z} \left( \mu \frac{\partial \bar{u}}{\partial z} - \rho \overline{u'w'} \right) \end{aligned} \quad (6.21)$$


The three correlation terms  $-\rho \overline{u'^2}$ ,  $-\rho \overline{u'v'}$ , and  $-\rho \overline{u'w'}$ , are called *turbulent stresses* because they have the same dimensions and occur right alongside the newtonian (laminar) stress terms  $\mu(\partial \bar{u}/\partial x)$  and so on. Actually, they are convective acceleration terms (which is why the density appears), not stresses, but they have the mathematical effect of stress and are so termed almost universally in the literature.

The turbulent stresses are unknown a priori and must be related by experiment to geometry and flow conditions, as detailed in Refs. 1 to 3. Fortunately, in duct and boundary layer flow, the stress  $-\rho \overline{u'v'}$ , associated with direction  $y$  normal to the wall is dominant, and we can approximate with excellent accuracy a simpler streamwise momentum equation

$$\rho \frac{d\bar{u}}{dt} \approx -\frac{\partial \bar{p}}{\partial x} + \rho g_x + \frac{\partial \tau}{\partial y} \quad (6.22)$$

where

$$\tau = \mu \frac{\partial \bar{u}}{\partial y} - \rho \overline{u'v'} = \tau_{\text{lam}} + \tau_{\text{turb}} \quad (6.23)$$

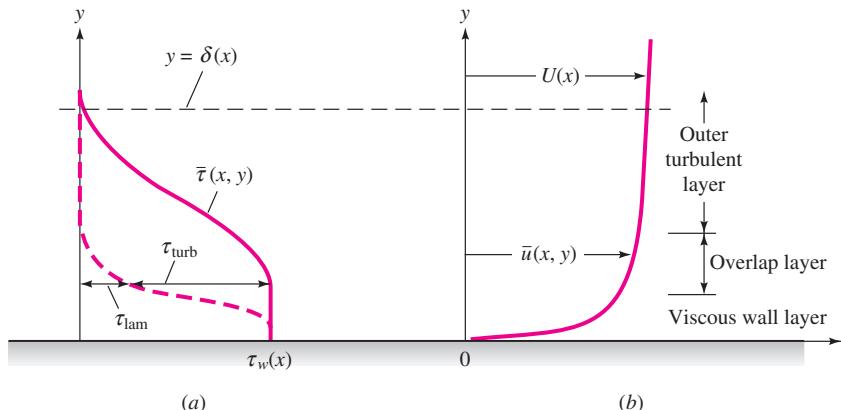

**Fig. 6.9** Typical velocity and shear distributions in turbulent flow near a wall: (a) shear; (b) velocity.

Figure 6.9 shows the distribution of  $\tau_{\text{lam}}$  and  $\tau_{\text{turb}}$  from typical measurements across a turbulent shear layer near a wall. Laminar shear is dominant near the wall (the *wall layer*), and turbulent shear dominates in the *outer layer*. There is an intermediate region, called the *overlap layer*, where both laminar and turbulent shear are important. These three regions are labeled in Fig. 6.9.

In the outer layer  $\tau_{\text{turb}}$  is two or three orders of magnitude greater than  $\tau_{\text{lam}}$ , and vice versa in the wall layer. These experimental facts enable us to use a crude but very effective model for the velocity distribution  $\bar{u}(y)$  across a turbulent wall layer.

### The Logarithmic Overlap Law

We have seen in Fig. 6.9 that there are three regions in turbulent flow near a wall:

1. Wall layer: Viscous shear dominates.
2. Outer layer: Turbulent shear dominates.
3. Overlap layer: Both types of shear are important.

From now on let us agree to drop the overbar from velocity  $\bar{u}$ . Let  $\tau_w$  be the wall shear stress, and let  $\delta$  and  $U$  represent the thickness and velocity at the edge of the outer layer,  $y = \delta$ .

For the wall layer, Prandtl deduced in 1930 that  $u$  must be independent of the shear layer thickness:

$$u = f(\mu, \tau_w, \rho, y) \quad (6.24)$$

By dimensional analysis, this is equivalent to

$$u^+ = \frac{u}{u^*} = F\left(\frac{yu^*}{\nu}\right) \quad u^* = \left(\frac{\tau_w}{\rho}\right)^{1/2} \quad (6.25)$$

Equation (6.25) is called the *law of the wall*, and the quantity  $u^*$  is termed the *friction velocity* because it has dimensions  $\{LT^{-1}\}$ , although it is not actually a flow velocity.

Subsequently, Kármán in 1933 deduced that  $u$  in the outer layer is independent of molecular viscosity, but its deviation from the stream velocity  $U$  must depend on the layer thickness  $\delta$  and the other properties:

$$(U - u)_{\text{outer}} = g(\delta, \tau_w, \rho, y) \quad (6.26)$$

Again, by dimensional analysis we rewrite this as

$$\frac{U - u}{u^*} = G\left(\frac{y}{\delta}\right) \quad (6.27)$$


where  $u^*$  has the same meaning as in Eq. (6.25). Equation (6.27) is called the *velocity-defect law* for the outer layer.

Both the wall law (6.25) and the defect law (6.27) are found to be accurate for a wide variety of experimental turbulent duct and boundary layer flows [1 to 3]. They are different in form, yet they must overlap smoothly in the intermediate layer. In 1937 C. B. Millikan showed that this can be true only if the overlap layer velocity varies logarithmically with  $y$ :

$$\frac{u}{u^*} = \frac{1}{\kappa} \ln \frac{yu^*}{v} + B \quad \text{overlap layer} \quad (6.28)$$

Over the full range of turbulent smooth wall flows, the dimensionless constants  $\kappa$  and  $B$  are found to have the approximate values  $\kappa \approx 0.41$  and  $B \approx 5.0$ . Equation (6.28) is called the *logarithmic overlap layer*.

Thus by dimensional reasoning and physical insight we infer that a plot of  $u$  versus  $\ln y$  in a turbulent shear layer will show a curved wall region, a curved outer region, and a straight-line logarithmic overlap. Figure 6.10 shows that this

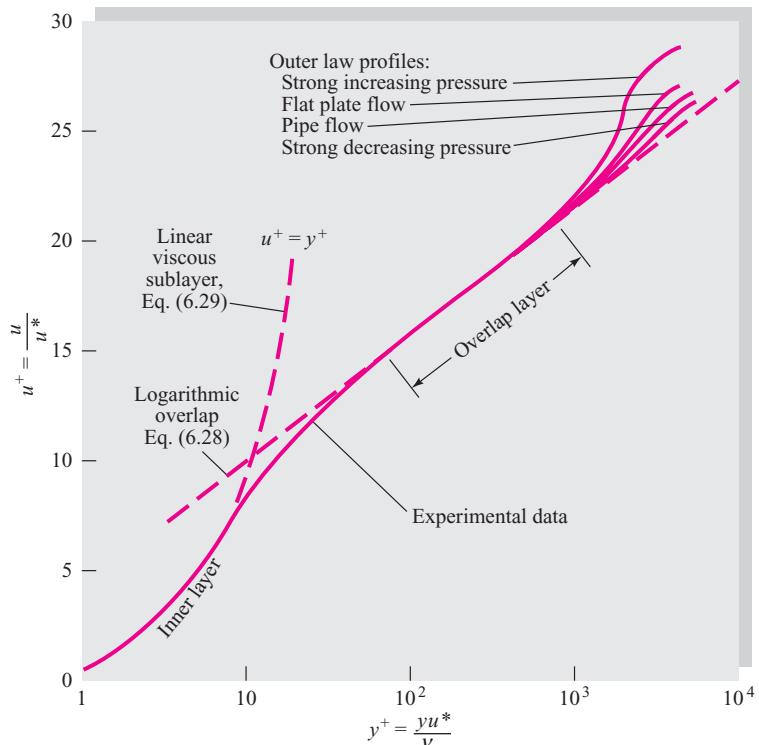

**Fig. 6.10** Experimental verification of the inner, outer, and overlap layer laws relating velocity profiles in turbulent wall flow.

is exactly the case. The four outer-law profiles shown all merge smoothly with the logarithmic overlap law but have different magnitudes because they vary in external pressure gradient. The wall law is unique and follows the linear viscous relation

$$u^+ = \frac{u}{u^*} = \frac{yu^*}{\nu} = y^+ \quad (6.29)$$

from the wall to about  $y^+ = 5$ , thereafter curving over to merge with the logarithmic law at about  $y^+ = 30$ .

Believe it or not, Fig. 6.10, which is nothing more than a shrewd correlation of velocity profiles, is the basis for most existing “theory” of turbulent shear flows. Notice that we have not solved any equations at all but have merely expressed the streamwise velocity in a neat form.

There is serendipity in Fig. 6.10: The logarithmic law (6.28), instead of just being a short overlapping link, actually approximates nearly the entire velocity profile, except for the outer law when the pressure is increasing strongly downstream (as in a diffuser). The inner wall law typically extends over less than 2 percent of the profile and can be neglected. Thus we can use Eq. (6.28) as an excellent approximation to solve nearly every turbulent flow problem presented in this and the next chapter. Many additional applications are given in Refs. 2 and 3.

## Advanced Modeling Concepts

Turbulence modeling is a very active field. Scores of papers have been published to more accurately simulate the turbulent stresses in Eq. (6.21) and their  $y$  and  $z$  components. This research, now available in advanced texts [1, 13, 19], goes well beyond the present book, which is confined to the use of the logarithmic law (6.28) for pipe and boundary layer problems. For example, L. Prandtl, who invented boundary layer theory in 1904, later proposed an *eddy viscosity* model of the Reynolds stress term in Eq. (6.23):


$$-\rho \overline{u'v'} = \tau_{\text{turb}} \approx \mu_t \frac{du}{dy} \quad \text{where} \quad \mu_t \approx \rho l^2 \left| \frac{du}{dy} \right| \quad (6.30)$$

The term  $\mu_t$ , which is a property of the *flow*, not the fluid, is called the *eddy viscosity* and can be modeled in various ways. The most popular form is Eq. (6.30), where  $l$  is called the *mixing length* of the turbulent eddies (analogous to mean free path in molecular theory). Near a solid wall,  $l$  is approximately proportional to distance from the wall, and Kármán suggested

$$l \approx \kappa y \quad \text{where} \quad \kappa = \text{Kármán's constant} \approx 0.41 \quad (6.31)$$

As a homework assignment, Prob. P6.40, you may show that Eqs. (6.30) and (6.31) lead to the logarithmic law (6.28) near a wall.

Modern turbulence models approximate three-dimensional turbulent flows and employ additional partial differential equations for such quantities as the turbulence kinetic energy, the turbulent dissipation, and the six Reynolds stresses. For details, see Refs. 1, 13, and 19.

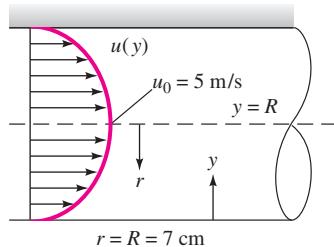

E6.5

**EXAMPLE 6.5**

Air at 20°C flows through a 14-cm-diameter tube under fully developed conditions. The centerline velocity is  $u_0 = 5$  m/s. Estimate from Fig. 6.10 (a) the friction velocity  $u^*$  and (b) the wall shear stress  $\tau_w$ .

**Solution**

- System sketch:** Figure E6.5 shows turbulent pipe flow with  $u_0 = 5$  m/s and  $R = 7$  cm.
- Assumptions:** Figure 6.10 shows that the logarithmic law, Eq. (6.28), is accurate all the way to the center of the tube.
- Approach:** Use Eq. (6.28) to estimate the unknown friction velocity  $u^*$ .
- Property values:** For air at 20°C,  $\rho = 1.205 \text{ kg/m}^3$  and  $\nu = 1.51\text{E}-5 \text{ m}^2/\text{s}$ .
- Solution step:** Insert all the given data into Eq. (6.28) at  $y = R$  (the centerline). The only unknown is  $u^*$ :

$$\frac{u_0}{u^*} = \frac{1}{\kappa} \ln \left( \frac{R u^*}{\nu} \right) + B \quad \text{or} \quad \frac{5.0 \text{ m/s}}{u^*} = \frac{1}{0.41} \ln \left[ \frac{(0.07 \text{ m}) u^*}{1.51\text{E}-5 \text{ m}^2/\text{s}} \right] + 5$$

Although the logarithm makes it awkward, one can iterate this by hand to find  $u^*$ . Or one can open EES and type out a single statement of Eq. (6.28):

$$5.0/\text{ustar} = (1/0.41)*\ln(0.07*\text{ustar}/1.51\text{E}-5) + 5$$

Any nominal guess, e.g.,  $u^* = 1$ , will do. EES immediately returns the correct solution:

$$u^* \approx 0.228 \text{ m/s} \quad \text{Ans. (a)}$$

$$\tau_w = \rho u^{*2} = (1.205)(0.228)^2 \approx 0.062 \text{ Pa} \quad \text{Ans. (b)}$$

- Comments:** The logarithmic law solved everything! This is a powerful technique, using an experimental velocity correlation to approximate general turbulent flows. You may check that the Reynolds number  $\text{Re}_d$  is about 40,000, definitely turbulent flow.

**6.6 Turbulent Pipe Flow**

For turbulent pipe flow we need not solve a differential equation but instead proceed with the logarithmic law, as in Example 6.5. Assume that Eq. (6.28) correlates the local mean velocity  $u(r)$  all the way across the pipe

$$\frac{u(r)}{u^*} \approx \frac{1}{\kappa} \ln \frac{(R - r)u^*}{\nu} + B \quad (6.32)$$

where we have replaced  $y$  by  $R - r$ . Compute the average velocity from this profile:

$$\begin{aligned} V &= \frac{Q}{A} = \frac{1}{\pi R^2} \int_0^R u^* \left[ \frac{1}{\kappa} \ln \frac{(R - r)u^*}{\nu} + B \right] 2\pi r dr \\ &= \frac{1}{2} u^* \left( \frac{2}{\kappa} \ln \frac{R u^*}{\nu} + 2B - \frac{3}{\kappa} \right) \end{aligned} \quad (6.33)$$

Introducing  $\kappa = 0.41$  and  $B = 5.0$ , we obtain, numerically,

$$\frac{V}{u^*} \approx 2.44 \ln \frac{R u^*}{\nu} + 1.34 \quad (6.34)$$

This looks only marginally interesting until we realize that  $V/u^*$  is directly related to the Darcy friction factor:

$$\frac{V}{u^*} = \left( \frac{\rho V^2}{\tau_w} \right)^{1/2} = \left( \frac{8}{f} \right)^{1/2} \quad (6.35)$$

Moreover, the argument of the logarithm in (6.34) is equivalent to

$$\frac{Ru^*}{\nu} = \frac{\frac{1}{2}Vd}{\nu} \frac{u^*}{V} = \frac{1}{2} \text{Re}_d \left( \frac{f}{8} \right)^{1/2} \quad (6.36)$$

Introducing (6.35) and (6.36) into Eq. (6.34), changing to a base-10 logarithm, and rearranging, we obtain

$$\frac{1}{f^{1/2}} \approx 1.99 \log (\text{Re}_d f^{1/2}) - 1.02 \quad (6.37)$$

In other words, by simply computing the mean velocity from the logarithmic law correlation, we obtain a relation between the friction factor and Reynolds number for turbulent pipe flow. Prandtl derived Eq. (6.37) in 1935 and then adjusted the constants slightly to fit friction data better:

$$\frac{1}{f^{1/2}} = 2.0 \log (\text{Re}_d f^{1/2}) - 0.8 \quad (6.38)$$

This is the accepted formula for a smooth-walled pipe. Some numerical values may be listed as follows:

$\text{Re}_d$	4000	$10^4$	$10^5$	$10^6$	$10^7$	$10^8$
$f$	0.0399	0.0309	0.0180	0.0116	0.0081	0.0059

Thus  $f$  drops by only a factor of 5 over a 10,000-fold increase in Reynolds number. Equation (6.38) is cumbersome to solve if  $\text{Re}_d$  is known and  $f$  is wanted. There are many alternative approximations in the literature from which  $f$  can be computed explicitly from  $\text{Re}_d$ :

$$f = \begin{cases} 0.316 \text{Re}_d^{-1/4} & 4000 < \text{Re}_d < 10^5 & \text{H. Blasius (1911)} \\ \left( 1.8 \log \frac{\text{Re}_d}{6.9} \right)^{-2} & & \text{Ref. 9} \end{cases} \quad (6.39)$$

Blasius, a student of Prandtl, presented his formula in the first correlation ever made of pipe friction versus Reynolds number. Although his formula has a limited range, it illustrates what was happening in Fig. 6.4 to Hagen's 1839 pressure-drop data. For a horizontal pipe, from Eq. (6.39),

$$h_f = \frac{\Delta p}{\rho g} = f \frac{L}{d} \frac{V^2}{2g} \approx 0.316 \left( \frac{\mu}{\rho V d} \right)^{1/4} \frac{L}{d} \frac{V^2}{2g}$$

$$\text{or } \Delta p \approx 0.158 L \rho^{3/4} \mu^{1/4} d^{-5/4} V^{7/4} \quad (6.40)$$

at low turbulent Reynolds numbers. This explains why Hagen's data for pressure drop begin to increase as the 1.75 power of the velocity, in Fig. 6.4. Note that  $\Delta p$  varies only slightly with viscosity, which is characteristic of turbulent flow. Introducing

$Q = \frac{1}{4}\pi d^2 V$  into Eq. (6.40), we obtain the alternative form

$$\Delta p \approx 0.241 L \rho^{3/4} \mu^{1/4} d^{-4.75} Q^{1.75} \quad (6.41)$$

For a given flow rate  $Q$ , the turbulent pressure drop decreases with diameter even more sharply than the laminar formula (6.12). Thus the quickest way to reduce required pumping pressure is to increase the pipe size, although, of course, the larger pipe is more expensive. Doubling the pipe size decreases  $\Delta p$  by a factor of about 27 for a given  $Q$ . Compare Eq. (6.40) with Example 5.7 and Fig. 5.10.

The maximum velocity in turbulent pipe flow is given by Eq. (6.32), evaluated at  $r = 0$ :

$$\frac{u_{\max}}{u^*} \approx \frac{1}{\kappa} \ln \frac{R u^*}{\nu} + B \quad (6.42)$$

Combining this with Eq. (6.33), we obtain the formula relating mean velocity to maximum velocity:

$$\frac{V}{u_{\max}} \approx (1 + 1.3 \sqrt{f})^{-1} \quad (6.43)$$


Some numerical values are

$Re_d$	4000	$10^4$	$10^5$	$10^6$	$10^7$	$10^8$
$V/u_{\max}$	0.794	0.814	0.852	0.877	0.895	0.909


The ratio varies with the Reynolds number and is much larger than the value of 0.5 predicted for all laminar pipe flow in Eq. (6.12). Thus a turbulent velocity profile, as shown in Fig. 6.11b, is very flat in the center and drops off sharply to zero at the wall.

### Effect of Rough Walls

It was not known until experiments in 1800 by Coulomb [6] that surface roughness has an effect on friction resistance. It turns out that the effect is negligible for laminar pipe flow, and all the laminar formulas derived in this section are valid for rough

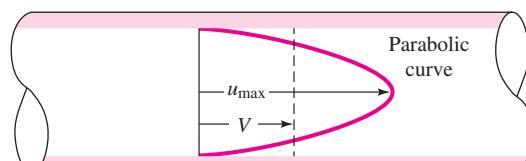


(a)

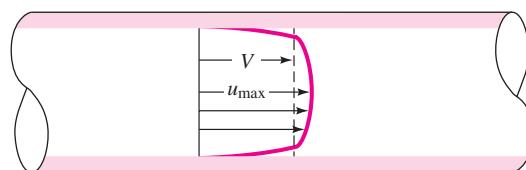

(b)

**Fig. 6.11** Comparison of laminar and turbulent pipe flow velocity profiles for the same volume flow: (a) laminar flow; (b) turbulent flow.

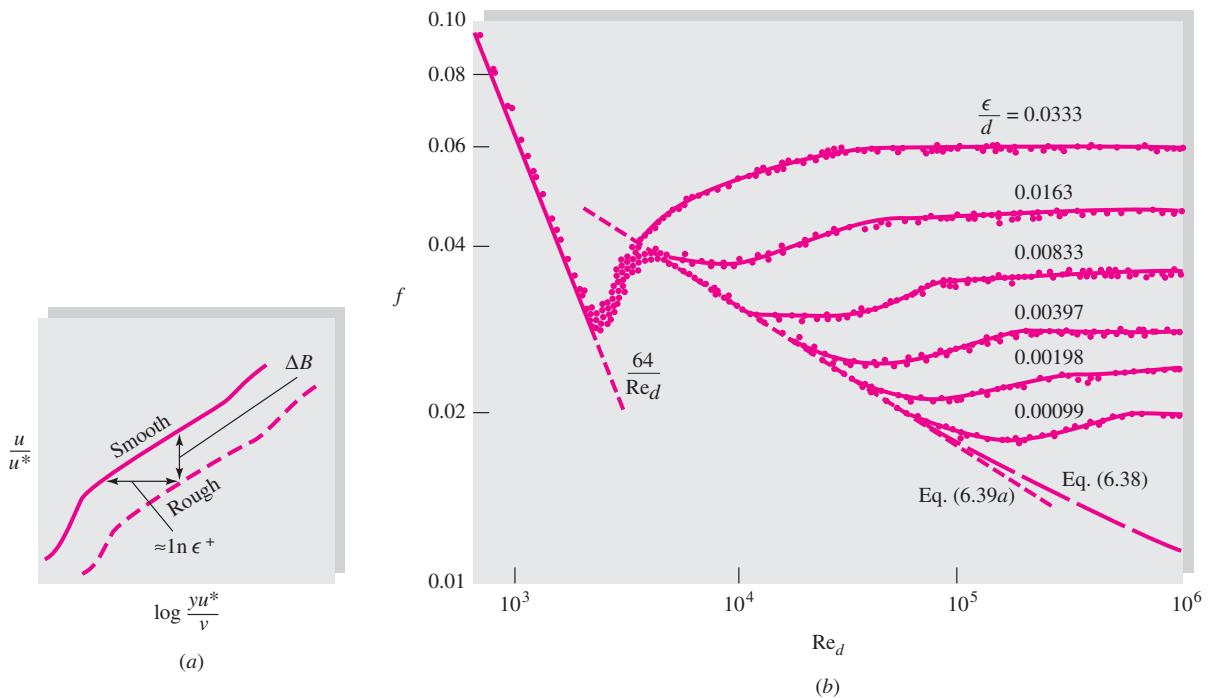

**Fig. 6.12** Effect of wall roughness on turbulent pipe flow. (a) The logarithmic overlap velocity profile shifts down and to the right; (b) experiments with sand-grain roughness by Nikuradse [7] show a systematic increase of the turbulent friction factor with the roughness ratio.

walls also. But turbulent flow is strongly affected by roughness. In Fig. 6.10 the linear viscous sublayer extends out only to  $y^+ = yu^*/\nu = 5$ . Thus, compared with the diameter, the sublayer thickness  $y_s$  is only

$$\frac{y_s}{d} = \frac{5\nu/u^*}{d} = \frac{14.1}{Re_d f^{1/2}} \quad (6.44)$$

For example, at  $Re_d = 10^5$ ,  $f = 0.0180$ , and  $y_s/d = 0.001$ , a wall roughness of about  $0.001d$  will break up the sublayer and profoundly change the wall law in Fig. 6.10.

Measurements of  $u(y)$  in turbulent rough-wall flow by Prandtl's student Nikuradse [7] show, as in Fig. 6.12a, that a roughness height  $\epsilon$  will force the logarithm law profile outward on the abscissa by an amount approximately equal to  $\ln \epsilon^+$ , where  $\epsilon^+ = \epsilon u^*/\nu$ . The slope of the logarithm law remains the same,  $1/\kappa$ , but the shift outward causes the constant  $B$  to be less by an amount  $\Delta B \approx (1/\kappa) \ln \epsilon^+$ .

Nikuradse [7] simulated roughness by gluing uniform sand grains onto the inner walls of the pipes. He then measured the pressure drops and flow rates and correlated friction factor versus Reynolds number in Fig. 6.12b. We see that laminar friction is unaffected, but turbulent friction, after an *onset* point, increases monotonically with the roughness ratio  $\epsilon/d$ . For any given  $\epsilon/d$ , the friction factor becomes constant (*fully*

*rough*) at high Reynolds numbers. These points of change are certain values of  $\epsilon^+ = \epsilon u^*/\nu$ :

$\frac{\epsilon u^*}{\nu} < 5$ : *hydraulically smooth* walls, no effect of roughness on friction

$5 \leq \frac{\epsilon u^*}{\nu} \leq 70$ : *transitional* roughness, moderate Reynolds number effect

$\frac{\epsilon u^*}{\nu} > 70$ : *fully rough* flow, sublayer totally broken up and friction independent of Reynolds number

For fully rough flow,  $\epsilon^+ > 70$ , the log law downshift  $\Delta B$  in Fig. 6.12a is

$$\Delta B \approx \frac{1}{\kappa} \ln \epsilon^+ - 3.5 \quad (6.45)$$

and the logarithm law modified for roughness becomes

$$u^+ = \frac{1}{\kappa} \ln y^+ + B - \Delta B = \frac{1}{\kappa} \ln \frac{y}{\epsilon} + 8.5 \quad (6.46)$$

The viscosity vanishes, and hence fully rough flow is independent of the Reynolds number. If we integrate Eq. (6.46) to obtain the average velocity in the pipe, we obtain

$$\frac{V}{u^*} = 2.44 \ln \frac{d}{\epsilon} + 3.2$$

or  $\frac{1}{f^{1/2}} = -2.0 \log \frac{\epsilon/d}{3.7}$     fully rough flow (6.47)

There is no Reynolds number effect; hence the head loss varies exactly as the square of the velocity in this case. Some numerical values of friction factor may be listed:

$\epsilon/d$	0.00001	0.0001	0.001	0.01	0.05
$f$	0.00806	0.0120	0.0196	0.0379	0.0716


The friction factor increases by 9 times as the roughness increases by a factor of 5000. In the transitional roughness region, sand grains behave somewhat differently from commercially rough pipes, so Fig. 6.12b has now been replaced by the Moody chart.

### The Moody Chart

In 1939 to cover the transitionally rough range, Colebrook [9] combined the smooth wall [Eq. (6.38)] and fully rough [Eq. (6.47)] relations into a clever interpolation formula:

$$\frac{1}{f^{1/2}} = -2.0 \log \left( \frac{\epsilon/d}{3.7} + \frac{2.51}{Re_d f^{1/2}} \right) \quad (6.48)$$

This is the accepted design formula for turbulent friction. It was plotted in 1944 by Moody [8] into what is now called the *Moody chart* for pipe friction (Fig. 6.13). The

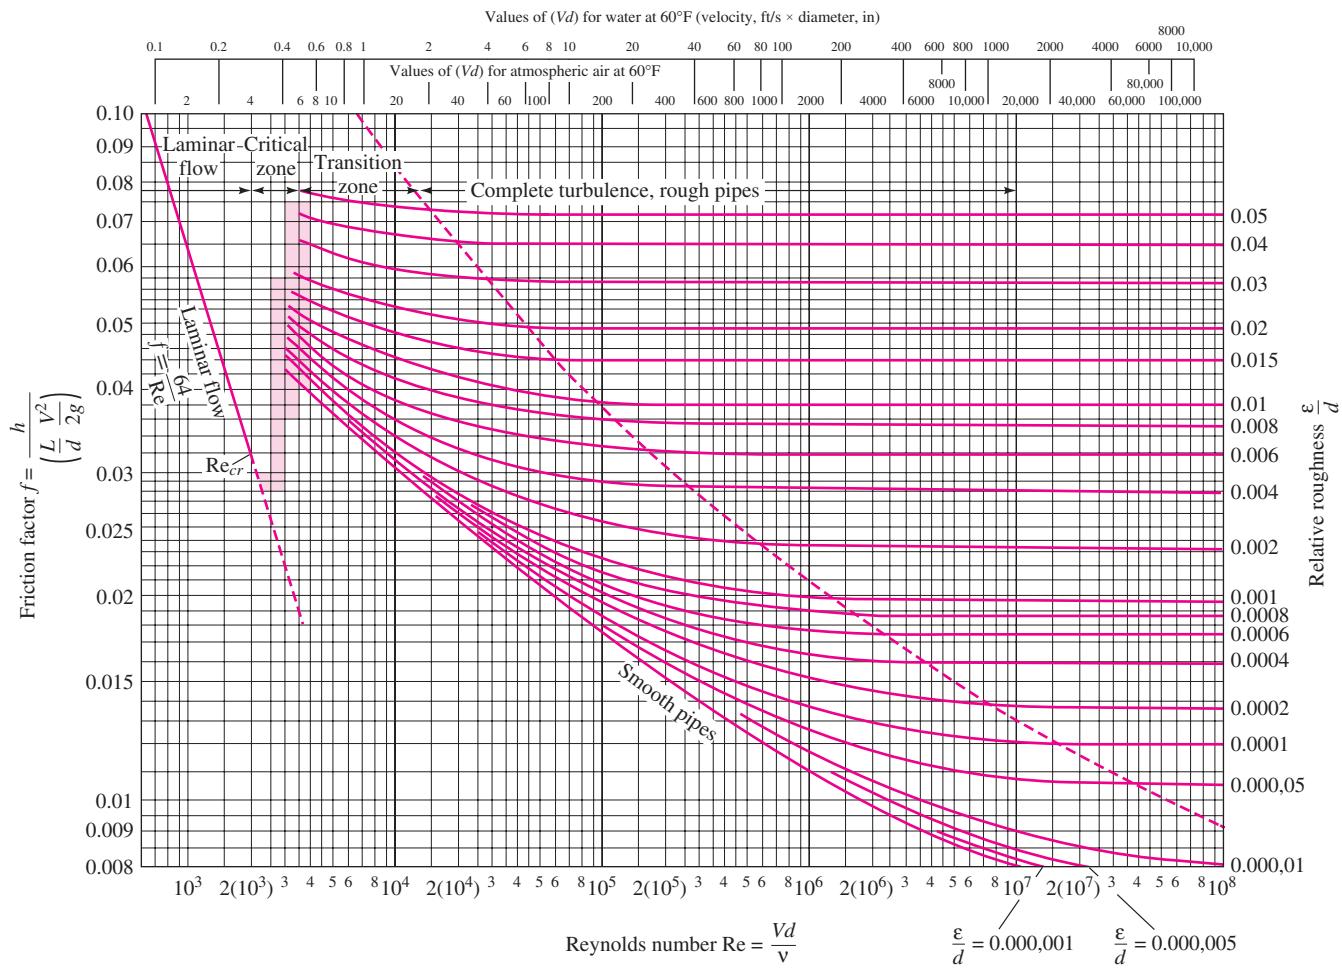

**Fig. 6.13** The Moody chart for pipe friction with smooth and rough walls. This chart is identical to Eq. (6.48) for turbulent flow. (From Ref. 8, by permission of the ASME.)

Moody chart is probably the most famous and useful figure in fluid mechanics. It is accurate to  $\pm 15$  percent for design calculations over the full range shown in Fig. 6.13. It can be used for circular and noncircular (Sec. 6.6) pipe flows and for open-channel flows (Chap. 10). The data can even be adapted as an approximation to boundary layer flows (Chap. 7).

Equation (6.48) is cumbersome to evaluate for  $f$  if  $Re_d$  is known, although it easily yields to the EES Equation Solver. An alternative explicit formula given by Haaland [33] as

$$\frac{1}{f^{1/2}} \approx -1.8 \log \left[ \frac{6.9}{Re_d} + \left( \frac{\epsilon/d}{3.7} \right)^{1.11} \right] \quad (6.49)$$

varies less than 2 percent from Eq. (6.48).

**Table 6.1** Recommended Roughness Values for Commercial Ducts

<b>Material</b>	<b>Condition</b>	$\epsilon$		
		<b>ft</b>	<b>mm</b>	<b>Uncertainty, %</b>
Steel	Sheet metal, new	0.00016	0.05	$\pm 60$
	Stainless, new	0.000007	0.002	$\pm 50$
	Commercial, new	0.00015	0.046	$\pm 30$
	Riveted	0.01	3.0	$\pm 70$
	Rusted	0.007	2.0	$\pm 50$
Iron	Cast, new	0.00085	0.26	$\pm 50$
	Wrought, new	0.00015	0.046	$\pm 20$
	Galvanized, new	0.0005	0.15	$\pm 40$
	Asphalted cast	0.0004	0.12	$\pm 50$
Brass	Drawn, new	0.000007	0.002	$\pm 50$
Plastic	Drawn tubing	0.000005	0.0015	$\pm 60$
Glass	—	Smooth	Smooth	
Concrete	Smoothed	0.00013	0.04	$\pm 60$
	Rough	0.007	2.0	$\pm 50$
Rubber	Smoothed	0.000033	0.01	$\pm 60$
Wood	Stave	0.0016	0.5	$\pm 40$

The shaded area in the Moody chart indicates the range where transition from laminar to turbulent flow occurs. There are no reliable friction factors in this range,  $2000 < \text{Re}_d < 4000$ . Notice that the roughness curves are nearly horizontal in the fully rough regime to the right of the dashed line.

From tests with commercial pipes, recommended values for average pipe roughness are listed in Table 6.1.

### EXAMPLE 6.6<sup>2</sup>

Compute the loss of head and pressure drop in 200 ft of horizontal 6-in-diameter asphalted cast iron pipe carrying water with a mean velocity of 6 ft/s.

#### Solution

- System sketch:** See Fig. 6.7 for a horizontal pipe, with  $\Delta z = 0$  and  $h_f$  proportional to  $\Delta p$ .
- Assumptions:** Turbulent flow, asphalted horizontal cast iron pipe,  $d = 0.5$  ft,  $L = 200$  ft.
- Approach:** Find  $\text{Re}_d$  and  $\epsilon/d$ ; enter the Moody chart, Fig. 6.13; find  $f$ , then  $h_f$  and  $\Delta p$ .
- Property values:** From Table A.3 for water, converting to BG units,  $\rho = 998/515.38 = 1.94 \text{ slug}/\text{ft}^3$ ,  $\mu = 0.001/47.88 = 2.09E-5 \text{ slug}/(\text{ft} \cdot \text{s})$ .
- Solution step 1:** Calculate  $\text{Re}_d$  and the roughness ratio. As a crutch, Moody provided water and air values of “ $Vd$ ” at the top of Fig. 6.13 to find  $\text{Re}_d$ . No, let’s calculate it ourselves:

$$\text{Re}_d = \frac{\rho Vd}{\mu} = \frac{(1.94 \text{ slug}/\text{ft}^3)(6 \text{ ft/s})(0.5 \text{ ft})}{2.09E-5 \text{ slug}/(\text{ft} \cdot \text{s})} \approx 279,000 \quad (\text{turbulent})$$

<sup>2</sup>This example was given by Moody in his 1944 paper [8].

From Table 6.1, for asphalted cast iron,  $\epsilon = 0.0004$  ft. Then calculate

$$\epsilon/d = (0.0004 \text{ ft})/(0.5 \text{ ft}) = 0.0008$$

- *Solution step 2:* Find the friction factor from the Moody chart or from Eq. (6.48). If you use the Moody chart, Fig. 6.13, you need practice. Find the line on the right side for  $\epsilon/d = 0.0008$  and follow it back to the left until it hits the vertical line for  $Re_d \approx 2.79E5$ . Read, approximately,  $f \approx 0.02$  [or compute  $f = 0.0198$  from Eq. (6.48), perhaps using EES].
- *Solution step 3:* Calculate  $h_f$  from Eq. (6.10) and  $\Delta p$  from Eq. (6.8) for a horizontal pipe:

$$h_f = f \frac{L}{d} \frac{V^2}{2g} = (0.02) \left( \frac{200 \text{ ft}}{0.5 \text{ ft}} \right) \frac{(6 \text{ ft/s})^2}{2(32.2 \text{ ft/s}^2)} \approx 4.5 \text{ ft} \quad \text{Ans.}$$

$$\Delta p = \rho g h_f = (1.94 \text{ slug/ft}^3)(32.2 \text{ ft/s}^2)(4.5 \text{ ft}) \approx 280 \text{ lbf/ft}^2 \quad \text{Ans.}$$

- *Comments:* In giving this example, Moody [8] stated that this estimate, even for clean new pipe, can be considered accurate only to about  $\pm 10$  percent.

### EXAMPLE 6.7

Oil, with  $\rho = 900 \text{ kg/m}^3$  and  $\nu = 0.00001 \text{ m}^2/\text{s}$ , flows at  $0.2 \text{ m}^3/\text{s}$  through 500 m of 200-mm-diameter cast iron pipe. Determine (a) the head loss and (b) the pressure drop if the pipe slopes down at  $10^\circ$  in the flow direction.

#### Solution

First compute the velocity from the known flow rate:

$$V = \frac{Q}{\pi R^2} = \frac{0.2 \text{ m}^3/\text{s}}{\pi(0.1 \text{ m})^2} = 6.4 \text{ m/s}$$

Then the Reynolds number is

$$Re_d = \frac{Vd}{\nu} = \frac{(6.4 \text{ m/s})(0.2 \text{ m})}{0.00001 \text{ m}^2/\text{s}} = 128,000$$

From Table 6.1,  $\epsilon = 0.26 \text{ mm}$  for cast iron pipe. Then

$$\frac{\epsilon}{d} = \frac{0.26 \text{ mm}}{200 \text{ mm}} = 0.0013$$

Enter the Moody chart on the right at  $\epsilon/d = 0.0013$  (you will have to interpolate), and move to the left to intersect with  $Re = 128,000$ . Read  $f \approx 0.0225$  [from Eq. (6.48) for these values we could compute  $f = 0.0227$ ]. Then the head loss is

$$h_f = f \frac{L}{d} \frac{V^2}{2g} = (0.0225) \frac{500 \text{ m}}{0.2 \text{ m}} \frac{(6.4 \text{ m/s})^2}{2(9.81 \text{ m/s}^2)} = 117 \text{ m} \quad \text{Ans. (a)}$$

From Eq. (6.9) for the inclined pipe,

$$h_f = \frac{\Delta p}{\rho g} + z_1 - z_2 = \frac{\Delta p}{\rho g} + L \sin 10^\circ$$

$$\begin{aligned} \text{or } \Delta p &= \rho g [h_f - (500 \text{ m}) \sin 10^\circ] = \rho g (117 \text{ m} - 87 \text{ m}) \\ &= (900 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(30 \text{ m}) = 265,000 \text{ kg/(m} \cdot \text{s}^2\text{)} = 265,000 \text{ Pa} \quad \text{Ans. (b)} \end{aligned}$$

### EXAMPLE 6.8

Repeat Example 6.4 to see whether there is any possible turbulent flow solution for a smooth-walled pipe.

#### Solution

In Example 6.4 we estimated a head loss  $h_f \approx 1.66 \text{ ft}$ , assuming laminar exit flow ( $\alpha \approx 2.0$ ). For this condition the friction factor is

$$f = h_f \frac{d}{L} \frac{2g}{V^2} = (1.66 \text{ ft}) \frac{(0.004 \text{ ft})(2)(32.2 \text{ ft/s}^2)}{(1.0 \text{ ft})(3.32 \text{ ft/s})^2} \approx 0.0388$$

For laminar flow,  $Re_d = 64/f = 64/0.0388 \approx 1650$ , as we showed in Example 6.4. However, from the Moody chart (Fig. 6.13), we see that  $f = 0.0388$  also corresponds to a *turbulent* smooth-wall condition, at  $Re_d \approx 4500$ . If the flow actually were turbulent, we should change our kinetic energy factor to  $\alpha \approx 1.06$  [Eq. (3.77)], whence the corrected  $h_f \approx 1.82 \text{ ft}$  and  $f \approx 0.0425$ . With  $f$  known, we can estimate the Reynolds number from our formulas:

$$Re_d \approx 3250 \quad [\text{Eq. (6.38)}] \quad \text{or} \quad Re_d \approx 3400 \quad [\text{Eq. (6.39b)}]$$

So the flow *might* have been turbulent, in which case the viscosity of the fluid would have been

$$\mu = \frac{\rho V d}{Re_d} = \frac{1.80(3.32)(0.004)}{3300} = 7.2 \times 10^{-6} \text{ slug/(ft} \cdot \text{s)} \quad \text{Ans.}$$

This is about 55 percent less than our laminar estimate in Example 6.4. The moral is to keep the capillary-flow Reynolds number below about 1000 to avoid such duplicate solutions.

## 6.7 Four Types of Pipe Flow Problems

The Moody chart (Fig. 6.13) can be used to solve almost any problem involving friction losses in long pipe flows. However, many such problems involve considerable iteration and repeated calculations using the chart because the standard Moody chart is essentially a *head loss chart*. One is supposed to know all other variables, compute  $Re_d$ , enter the chart, find  $f$ , and hence compute  $h_f$ . This is one of four fundamental problems which are commonly encountered in pipe flow calculations:

1. Given  $d$ ,  $L$ , and  $V$  or  $Q$ ,  $\rho$ ,  $\mu$ , and  $g$ , compute the head loss  $h_f$  (head loss problem).
2. Given  $d$ ,  $L$ ,  $h_f$ ,  $\rho$ ,  $\mu$ , and  $g$ , compute the velocity  $V$  or flow rate  $Q$  (flow rate problem).
3. Given  $Q$ ,  $L$ ,  $h_f$ ,  $\rho$ ,  $\mu$ , and  $g$ , compute the diameter  $d$  of the pipe (sizing problem).
4. Given  $Q$ ,  $d$ ,  $h_f$ ,  $\rho$ ,  $\mu$ , and  $g$ , compute the pipe length  $L$ .

Problems 1 and 4 are well suited to the Moody chart. We have to iterate to compute velocity or diameter because both  $d$  and  $V$  are contained in the ordinate *and* the abscissa of the chart.

There are two alternatives to iteration for problems of type 2 and 3: (a) preparation of a suitable new Moody-type chart (see Probs. P6.68 and P6.73); or (b) the use of *solver* software, especially the Engineering Equation Solver, known as EES [47], which gives the answer directly if the proper data are entered. Examples 6.9 and 6.11 include the EES approach to these problems.

### Type 2 Problem: Find the Flow Rate

Even though velocity (or flow rate) appears in both the ordinate and the abscissa on the Moody chart, iteration for turbulent flow is nevertheless quite fast because  $f$  varies so slowly with  $\text{Re}_d$ . Alternately, in the spirit of Example 5.7, we could change the scaling variables to  $(\rho, \mu, d)$  and thus arrive at dimensionless head loss versus dimensionless *velocity*. The result is<sup>3</sup>

$$\zeta = \text{fcn}(\text{Re}_d) \quad \text{where} \quad \zeta = \frac{gd^3 h_f}{Lv^2} = \frac{f \text{Re}_d^2}{2} \quad (6.50)$$

Example 5.7 did this and offered the simple correlation  $\zeta \approx 0.155 \text{ Re}_d^{1.75}$ , which is valid for turbulent flow with smooth walls and  $\text{Re}_d \leq 1 \text{ E}5$ .

A formula valid for all turbulent pipe flows is found by simply rewriting the Colebrook interpolation, Eq. (6.48), in the form of Eq. (6.50):

$$\text{Re}_d = -(8\zeta)^{1/2} \log \left( \frac{\epsilon/d}{3.7} + \frac{1.775}{\sqrt{\zeta}} \right) \quad \zeta = \frac{gd^3 h_f}{Lv^2} \quad (6.51)$$

Given  $\zeta$ , we compute  $\text{Re}_d$  (and hence velocity) directly. Let us illustrate these two approaches with the following example.

### EXAMPLE 6.9

Oil, with  $\rho = 950 \text{ kg/m}^3$  and  $\nu = 2 \text{ E-}5 \text{ m}^2/\text{s}$ , flows through a 30-cm-diameter pipe 100 m long with a head loss of 8 m. The roughness ratio is  $\epsilon/d = 0.0002$ . Find the average velocity and flow rate.

#### Direct Solution

First calculate the dimensionless head loss parameter:

$$\zeta = \frac{gd^3 h_f}{Lv^2} = \frac{(9.81 \text{ m/s}^2)(0.3 \text{ m})^3(8.0 \text{ m})}{(100 \text{ m})(2 \text{ E-}5 \text{ m}^2/\text{s})^2} = 5.30 \text{ E}7$$

Now enter Eq. (6.51) to find the Reynolds number:

$$\text{Re}_d = -[8(5.3 \text{ E}7)]^{1/2} \log \left( \frac{0.0002}{3.7} + \frac{1.775}{\sqrt{5.3 \text{ E}7}} \right) = 72,600$$

<sup>3</sup>The parameter  $\zeta$  was suggested by H. Rouse in 1942.

The velocity and flow rate follow from the Reynolds number:

$$V = \frac{\nu \text{Re}_d}{d} = \frac{(2 \text{ E-5 m}^2/\text{s})(72,600)}{0.3 \text{ m}} \approx 4.84 \text{ m/s}$$

$$Q = V \frac{\pi}{4} d^2 = \left(4.84 \frac{\text{m}}{\text{s}}\right) \frac{\pi}{4} (0.3 \text{ m})^2 \approx 0.342 \text{ m}^3/\text{s} \quad \text{Ans.}$$

No iteration is required, but this idea falters if additional losses are present. Note that we never bothered to compute the friction factor.

### Iterative Solution

By definition, the friction factor is known except for  $V$ :

$$f = h_f \frac{d}{L} \frac{2g}{V^2} = (8 \text{ m}) \left( \frac{0.3 \text{ m}}{100 \text{ m}} \right) \left[ \frac{2(9.81 \text{ m/s}^2)}{V^2} \right] \quad \text{or} \quad fV^2 \approx 0.471 \quad (\text{SI units})$$

To get started, we only need to guess  $f$ , compute  $V = \sqrt{0.471/f}$ , then get  $\text{Re}_d$ , compute a better  $f$  from the Moody chart, and repeat. The process converges fairly rapidly. A good first guess is the “fully rough” value for  $\epsilon/d = 0.0002$ , or  $f \approx 0.014$  from Fig. 6.13. The iteration would be as follows:

Guess  $f \approx 0.014$ , then  $V = \sqrt{0.471/0.014} = 5.80 \text{ m/s}$  and  $\text{Re}_d = Vd/\nu \approx 87,000$ . At  $\text{Re}_d = 87,000$  and  $\epsilon/d = 0.0002$ , compute  $f_{\text{new}} \approx 0.0195$  [Eq. (6.48)].

New  $f \approx 0.0195$ ,  $V = \sqrt{0.471/0.0195} = 4.91 \text{ m/s}$  and  $\text{Re}_d = Vd/\nu = 73,700$ . At  $\text{Re}_d = 73,700$  and  $\epsilon/d = 0.0002$ , compute  $f_{\text{new}} \approx 0.0201$  [Eq. (6.48)].

Better  $f \approx 0.0201$ ,  $V = \sqrt{0.471/0.0201} = 4.84 \text{ m/s}$  and  $\text{Re}_d \approx 72,600$ . At  $\text{Re}_d = 72,600$  and  $\epsilon/d = 0.0002$ , compute  $f_{\text{new}} \approx 0.0201$  [Eq. (6.48)].

We have converged to three significant figures. Thus our iterative solution is

$$V = 4.84 \text{ m/s}$$

$$Q = V \left( \frac{\pi}{4} \right) d^2 = (4.84) \left( \frac{\pi}{4} \right) (0.3)^2 \approx 0.342 \text{ m}^3/\text{s} \quad \text{Ans.}$$

The iterative approach is straightforward and not too onerous, so it is routinely used by engineers. Obviously this repetitive procedure is ideal for a personal computer.

### Engineering Equation Solver (EES) Solution

EES

In EES, one simply enters the data and the appropriate equations, letting the software do the rest. Correct units must of course be used. For the present example, the data could be entered as SI:

```
rho=950      nu=2E-5      d=0.3      L=100      epsod=0.0002      hf=8.0      g=9.81
```

The appropriate equations are the Moody formula (6.48) plus the definitions of Reynolds number, volume flow rate as determined from velocity, and the Darcy head loss formula (6.10):

$$\text{Re}=V*d/\nu$$

$$Q=V*pi*d^2/4$$

$$f=(-2.0*log10((epsod/3.7+2.51/Re)^0.5))^(-2)$$

$$hf=f*L/d*V^2/2/g$$

EES understands that “pi” represents 3.141593. Then hit “SOLVE” from the menu. If errors have been entered, EES will complain that the system cannot be solved and attempt to explain why. Otherwise, the software will iterate, and in this case EES prints the correct solution:

$$Q=0.342 \quad V=4.84 \quad f=0.0201 \quad Re=72585$$

The units are spelled out in a separate list as [m, kg, s, N]. This elegant approach to engineering problem solving has one drawback—namely, that the user fails to check the solution for engineering viability. For example, are the data typed correctly? Is the Reynolds number turbulent?

### Type 3 Problem: Find the Pipe Diameter

The Moody chart is especially awkward for finding the pipe size, since  $d$  occurs in all three parameters  $f$ ,  $Re_d$ , and  $\epsilon/d$ . Further, it depends on whether we know the velocity or the flow rate. We cannot know both, or else we could immediately compute  $d = \sqrt{4Q/(\pi V)}$ .

Let us assume that we know the flow rate  $Q$ . Note that this requires us to redefine the Reynolds number in terms of  $Q$ :

$$Re_d = \frac{Vd}{\nu} = \frac{4Q}{\pi d \nu} \quad (6.52)$$

Then, if we choose  $(Q, \rho, \mu)$  as scaling parameters (to eliminate  $d$ ), we obtain the functional relationship

$$Re_d = \frac{4Q}{\pi d \nu} = \text{fcn}\left(\frac{gh_f Q^3}{L \nu^5}, \frac{\epsilon \nu}{Q}\right)$$

and can thus solve  $d$  when the right-hand side is known. Unfortunately, the writer knows of no *formula* for this relation. Here it seems reasonable to forgo a plot or curve fitted formula and to simply set up the problem as an iteration in terms of the Moody chart variables. In this case we also have to set up the friction factor in terms of the flow rate:

$$f = h_f \frac{d}{L} \frac{2g}{V^2} = \frac{\pi^2}{8} \frac{gh_f d^5}{LQ^2} \quad (6.53)$$

The following two examples illustrate the iteration.

#### EXAMPLE 6.10

Work Example 6.9 backward, assuming that  $Q = 0.342 \text{ m}^3/\text{s}$  and  $\epsilon = 0.06 \text{ mm}$  are known but that  $d$  (30 cm) is unknown. Recall  $L = 100 \text{ m}$ ,  $\rho = 950 \text{ kg/m}^3$ ,  $\nu = 2 \text{ E-5 m}^2/\text{s}$ , and  $h_f = 8 \text{ m}$ .

#### Iterative Solution

First write the diameter in terms of the friction factor:

$$f = \frac{\pi^2}{8} \frac{(9.81 \text{ m/s}^2)(8 \text{ m})d^5}{(100 \text{ m})(0.342 \text{ m}^3/\text{s})^2} = 8.28d^5 \quad \text{or} \quad d \approx 0.655f^{1/5} \quad (1)$$

in SI units. Also write the Reynolds number and roughness ratio in terms of the diameter:

$$\text{Re}_d = \frac{4(0.342 \text{ m}^3/\text{s})}{\pi(2 \text{ E-5 m}^2/\text{s})d} = \frac{21,800}{d} \quad (2)$$

$$\frac{\epsilon}{d} = \frac{6 \text{ E-5 m}}{d} \quad (3)$$

Guess  $f$ , compute  $d$  from (1), then compute  $\text{Re}_d$  from (2) and  $\epsilon/d$  from (3), and compute a better  $f$  from the Moody chart or Eq. (6.48). Repeat until (fairly rapid) convergence. Having no initial estimate for  $f$ , the writer guesses  $f \approx 0.03$  (about in the middle of the turbulent portion of the Moody chart). The following calculations result:

$$f \approx 0.03 \quad d \approx 0.655(0.03)^{1/5} \approx 0.325 \text{ m}$$

$$\text{Re}_d \approx \frac{21,800}{0.325} \approx 67,000 \quad \frac{\epsilon}{d} \approx 1.85 \text{ E-4}$$

Eq. (6.48):  $f_{\text{new}} \approx 0.0203$  then  $d_{\text{new}} \approx 0.301 \text{ m}$

$$\text{Re}_{d,\text{new}} \approx 72,500 \quad \frac{\epsilon}{d} \approx 2.0 \text{ E-4}$$

Eq. (6.48):  $f_{\text{better}} \approx 0.0201$  and  $d = 0.300 \text{ m}$  *Ans.*

The procedure has converged to the correct diameter of 30 cm given in Example 6.9.

### EES Solution

**EES**

For an EES solution, enter the data and the appropriate equations. The diameter is unknown. Correct units must of course be used. For the present example, the data should use SI units:

```
rho=950    nu=2E-5    L=100    eps=6E-5    hf=8.0    g=9.81    Q=0.342
```

The appropriate equations are the Moody formula, the definition of Reynolds number, volume flow rate as determined from velocity, the Darcy head loss formula, and the roughness ratio:

```
Re=V*d/nu
Q=V*pi*d^2/4
f=(- 2.0*log10 (epsod/3.7+2.51/Re/f^0.5))^(-2)
hf=f*L/d*V^2/2/g
epsod=eps/d
```

Hit *Solve* from the menu. Unlike Example 6.9, this time EES complains that the system *cannot* be solved and reports “logarithm of a negative number.” The reason is that we allowed EES to assume that  $f$  could be a negative number. Bring down *Variable Information* from the menu and change the limits of  $f$  so that it cannot be negative. EES agrees and iterates to this solution:

```
d=0.300    V=4.84    f=0.0201    Re=72,585
```

The unit system is spelled out as (m, kg, s, N). As always when using software, the user should check the solution for engineering viability. For example, is the Reynolds number turbulent? (Yes.)

**EXAMPLE 6.11**

Work Moody's problem, Example 6.6, backward to find the wall roughness  $\epsilon$  if everything else is known:  $V = 6 \text{ ft/s}$ ,  $d = 0.5 \text{ ft}$ ,  $L = 200 \text{ ft}$ ,  $\rho = 1.94 \text{ slug}/\text{ft}^3$ ,  $\mu = 2.09E-5 \text{ slug}/\text{ft}\cdot\text{s}$ ,  $h_f = 4.5 \text{ ft}$ .

**Solution**

- Analytic solution:* This is not as bad as having the diameter unknown, because  $\epsilon$  appears in only one parameter,  $\epsilon/d$ . We can immediately calculate  $Q$ ,  $\text{Re}_d$ , and the friction factor:

$$Q = V \pi R^2 = (6.0 \text{ ft/s})\pi(0.25 \text{ ft})^2 = 1.18 \text{ ft}^3/\text{s}$$

$$\text{Re}_d = \frac{\rho V d}{\mu} = \frac{(1.94 \text{ slug}/\text{ft}^3)(6 \text{ ft/s})(0.5 \text{ ft})}{2.09E-5 \text{ slug}/\text{ft}\cdot\text{s}} = 278,500$$

$$f = \frac{h_f}{(L/d)(V^2/2g)} = \frac{4.5 \text{ ft}}{(200 \text{ ft}/0.5 \text{ ft})[(6 \text{ ft/s})^2/2/(32.2 \text{ ft/s}^2)]} = 0.0201$$

With  $f$  and  $\text{Re}_d$  known, we look on the Moody chart or solve Eq. (6.48) for the roughness ratio:

$$\frac{1}{\sqrt{f}} = -2.0 \log_{10} \left( \frac{\epsilon/d}{3.7} + \frac{2.51}{\text{Re}_d \sqrt{f}} \right) \text{ or } \frac{1}{\sqrt{0.0201}} = -2.0 \log_{10} \left( \frac{\epsilon/d}{3.7} + \frac{2.51}{278500 \sqrt{0.0201}} \right)$$

After a bit of ugly manipulation, we calculate  $\epsilon/d = 0.000871$ , or  $\epsilon \approx 0.000435 \text{ ft}$ . *Ans.*

- EES solution:* Simply type in the data, in BG units (ft, s, lbf, slugs):

```
rho=1.94      mu=2.09E-5      d=0.5      V=6.0      L=200      hf=8.0      g=32.2
```

Then type in the same five defining formulas for pipe flow that we used in Example 6.11:

```
Re=rho*V*d/mu
Q=V*pi*d^2/4
f=(-2.0*log10 (epsod/3.7 + 2.51/Re/f^.5)) ^ (-2)
hf=f*L/d*V^2/2/g
epsod=eps/d
```

With any reasonable guess for  $\epsilon > 0$ , EES promptly returns  $\epsilon \approx 0.000435 \text{ ft}$ . *Ans.*

- Comments:* Finding the roughness is not as hard as finding the diameter. The discrepancy from Moody's value of  $\epsilon = 0.00040 \text{ ft}$  was caused by rounding off  $h_f$  to 4.5 ft.

**Table 6.2** Nominal and Actual Sizes of Schedule 40 Wrought Steel Pipe\*

Nominal size, in	Actual ID, in
$\frac{1}{8}$	0.269
$\frac{1}{4}$	0.364
$\frac{3}{8}$	0.493
$\frac{1}{2}$	0.622
$\frac{3}{4}$	0.824
1	1.049
$1\frac{1}{2}$	1.610
2	2.067
$2\frac{1}{2}$	2.469
3	3.068

\*Nominal size within 1 percent for 4 in or larger.

In discussing pipe sizing problems, we should remark that commercial pipes are made only in certain sizes. Table 6.2 lists standard water pipe sizes in the United States. If the sizing calculation gives an intermediate diameter, the next largest pipe size should be selected.

### Type 4 Problem: Find the Pipe Length

In designing piping systems, it is desirable to estimate the appropriate pipe length for a given pipe diameter, pump power, and flow rate. The pump head will match the

piping head loss. If minor losses are neglected, the (horizontal) pipe length follows from Darcy's formula (6.10):

$$h_{\text{pump}} = \frac{\text{Power}}{\rho g Q} = h_f = f \frac{L V^2}{d 2g} \quad (6.54)$$

With  $Q$ , and  $d$ , and  $\varepsilon$  known, we may compute  $\text{Re}_d$  and  $f$ , after which  $L$  is obtained from the formula. Note that pump efficiency varies strongly with flow rate (Chap. 11). Thus, it is important to match pipe length to the pump's region of maximum efficiency.

### EXAMPLE 6.12

A pump delivers 0.6 hp to water at 68°F, flowing in a 6-in-diameter asphalted cast iron horizontal pipe at  $V = 6 \text{ ft/s}$ . What is the proper pipe length to match these conditions?

#### Solution

- Approach:* Find  $h_f$  from the known power and find  $f$  from  $\text{Re}_d$  and  $\varepsilon/d$ . Then find  $L$ .
- Water properties:* For water at 68°F, Table A.3, converting to BG units,  $\rho = 1.94 \text{ slug}/\text{ft}^3$  and  $\mu = 2.09E-5 \text{ slug}/(\text{ft} \cdot \text{s})$ .
- Pipe roughness:* From Table 6.1 for asphalted cast iron,  $\varepsilon = 0.0004 \text{ ft}$ .
- Solution step 1:* Find the pump head from the flow rate and the pump power:

$$Q = AV = \frac{\pi}{4}(0.5 \text{ ft})^2 \left(6 \frac{\text{ft}}{\text{s}}\right) = 1.18 \frac{\text{ft}^3}{\text{s}}$$

$$h_{\text{pump}} = \frac{\text{Power}}{\rho g Q} = \frac{(0.6 \text{ hp})[550(\text{ft} \cdot \text{lbf})/(\text{s} \cdot \text{hp})]}{(1.94 \text{ slug}/\text{ft}^3)(32.2 \text{ ft}/\text{s}^2)(1.18 \text{ ft}^3/\text{s})} = 4.48 \text{ ft}$$

- Solution step 2:* Compute the friction factor from the Colebrook formula, Eq. (6.48):

$$\text{Re}_d = \frac{\rho V d}{\mu} = \frac{(1.94)(6)(0.5)}{2.09 E-5} = 278,500 \quad \frac{\varepsilon}{d} = \frac{0.0004 \text{ ft}}{0.5 \text{ ft}} = 0.0008$$

$$\frac{1}{\sqrt{f}} \approx -2.0 \log_{10} \left( \frac{\varepsilon/d}{3.7} + \frac{2.51}{\text{Re}_d \sqrt{f}} \right) \quad \text{yields} \quad f = 0.0198$$

- Solution step 3:* Find the pipe length from the Darcy formula (6.10):

$$h_p = h_f = 4.48 \text{ ft} = f \frac{L V^2}{d 2g} = (0.0198) \left( \frac{L}{0.5 \text{ ft}} \right) \frac{(6 \text{ ft/s})^2}{2(32.2 \text{ ft/s}^2)}$$

Solve for  $L \approx 203 \text{ ft}$  *Ans.*

- Comment:* This is Moody's problem (Example 6.6) turned around so that the length is unknown.

## 6.8 Flow in Noncircular Ducts<sup>4</sup>

If the duct is noncircular, the analysis of fully developed flow follows that of the circular pipe but is more complicated algebraically. For laminar flow, one can solve the exact equations of continuity and momentum. For turbulent flow, the logarithm law velocity profile can be used, or (better and simpler) the hydraulic diameter is an excellent approximation.

<sup>4</sup>This section may be omitted without loss of continuity.

## The Hydraulic Diameter

For a noncircular duct, the control volume concept of Fig. 6.7 is still valid, but the cross-sectional area  $A$  does not equal  $\pi R^2$  and the cross-sectional perimeter wetted by the shear stress  $\mathcal{P}$  does not equal  $2\pi R$ . The momentum equation (6.9a) thus becomes

$$\Delta p A + \rho g A \Delta L \sin \phi - \bar{\tau}_w \mathcal{P} \Delta L = 0$$

or

$$h_f = \frac{\Delta p}{\rho g} + \Delta z = \frac{\bar{\tau}_w}{\rho g} \frac{\Delta L}{A/\mathcal{P}} \quad (6.55)$$

This is identical to Eq. (6.9b) except that (1) the shear stress is an average value integrated around the perimeter and (2) the length scale  $A/\mathcal{P}$  takes the place of the pipe radius  $R$ . For this reason a noncircular duct is said to have a *hydraulic radius*  $R_h$ , defined by

$$R_h = \frac{A}{\mathcal{P}} = \frac{\text{cross-sectional area}}{\text{wetted perimeter}} \quad (6.56)$$

This concept receives constant use in open-channel flow (Chap. 10), where the channel cross section is almost never circular. If, by comparison to Eq. (6.11) for pipe flow, we define the friction factor in terms of average shear

$$f_{NCD} = \frac{8\bar{\tau}_w}{\rho V^2} \quad (6.57)$$

where NCD stands for noncircular duct and  $V = Q/A$  as usual, Eq. (6.55) becomes

$$h_f = f \frac{L}{4R_h} \frac{V^2}{2g} = f \frac{L}{D_h} \frac{V^2}{2g} \quad (6.58)$$

This is equivalent to Eq. (6.10) for pipe flow except that  $d$  is replaced by  $4R_h$ . Therefore we customarily define the *hydraulic diameter* as


$$D_h = \frac{4A}{\mathcal{P}} = \frac{4 \times \text{area}}{\text{wetted perimeter}} = 4R_h \quad (6.59)$$

We should stress that the wetted perimeter includes all surfaces acted upon by the shear stress. For example, in a circular annulus, both the outer and the inner perimeter should be added. The fact that  $D_h$  equals  $4R_h$  is just one of those things: chalk it up to an engineer's sense of humor. Note that for the degenerate case of a circular pipe,  $D_h = 4\pi R^2/(2\pi R) = 2R$ , as expected.

We would therefore expect by dimensional analysis that this friction factor  $f$ , based on hydraulic diameter as in Eq. (6.58), would correlate with the Reynolds number and roughness ratio based on the hydraulic diameter

$$f = F\left(\frac{VD_h}{\nu}, \frac{\epsilon}{D_h}\right) \quad (6.60)$$

and this is the way the data are correlated. But we should not necessarily expect the Moody chart (Fig. 6.13) to hold exactly in terms of this new length scale. And it does

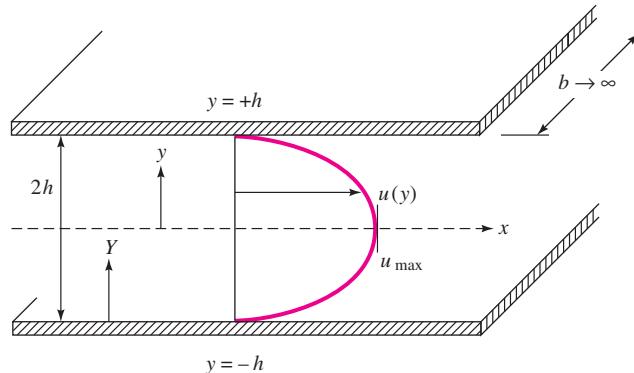

**Fig. 6.14** Fully developed flow between parallel plates.

not, but it is surprisingly accurate:

$$f \approx \begin{cases} \frac{64}{\text{Re}_{D_h}} & \pm 40\% \quad \text{laminar flow} \\ f_{\text{Moody}} \left( \text{Re}_{D_h}, \frac{\epsilon}{D_h} \right) & \pm 15\% \quad \text{turbulent flow} \end{cases} \quad (6.61)$$

Now let us look at some particular cases.

### Flow between Parallel Plates

Probably the simplest noncircular duct flow is fully developed flow between parallel plates a distance  $2h$  apart, as in Fig. 6.14. As noted in the figure, the width  $b \gg h$ , so the flow is essentially two-dimensional; that is,  $u = u(y)$  only. The hydraulic diameter is

$$D_h = \frac{4A}{\mathcal{P}} = \lim_{b \rightarrow \infty} \frac{4(2bh)}{2b + 4h} = 4h \quad (6.62)$$

that is, twice the distance between the plates. The pressure gradient is constant,  $(-\Delta p/dx) = \Delta p/L$ , where  $L$  is the length of the channel along the  $x$  axis.

### Laminar Flow Solution

The laminar solution was given in Sect. 4.10, in connection with Fig. 4.16b. Let us review those results here:

$$\begin{aligned} u &= u_{\max} \left( 1 - \frac{y^2}{h^2} \right) \quad \text{where} \quad u_{\max} = \frac{h^2}{2\mu} \frac{\Delta p}{L} \\ Q &= \frac{2bh^3}{3\mu} \frac{\Delta p}{L} \\ V &= \frac{Q}{A} = \frac{h^2}{3\mu} \frac{\Delta p}{L} = \frac{2}{3} u_{\max} \\ \tau_w &= \mu \left| \frac{du}{dy} \right|_{y=h} = h \frac{\Delta p}{L} = \frac{3\mu V}{h} \\ h_f &= \frac{\Delta p}{\rho g} = \frac{3\mu L V}{\rho g h^2} \end{aligned} \quad (6.63)$$

Now use the head loss to establish the laminar friction factor:

$$f_{\text{lam}} = \frac{h_f}{(L/D_h)(V^2/2g)} = \frac{96\mu}{\rho V(4h)} = \frac{96}{\text{Re}_{D_h}} \quad (6.64)$$

Thus, if we could not work out the laminar theory and chose to use the approximation  $f \approx 64/\text{Re}_{D_h}$ , we would be 33 percent low. The hydraulic-diameter approximation is relatively crude in laminar flow, as Eq. (6.61) states.

Just as in circular-pipe flow, the laminar solution above becomes unstable at about  $\text{Re}_{D_h} \approx 2000$ ; transition occurs and turbulent flow results.

### Turbulent Flow Solution

For turbulent flow between parallel plates, we can again use the logarithm law, Eq. (6.28), as an approximation across the entire channel, using not  $y$  but a wall coordinate  $Y$ , as shown in Fig. 6.14:

$$\frac{u(Y)}{u^*} \approx \frac{1}{\kappa} \ln \frac{Yu^*}{\nu} + B \quad 0 < Y < h \quad (6.65)$$

This distribution looks very much like the flat turbulent profile for pipe flow in Fig. 6.11b, and the mean velocity is

$$V = \frac{1}{h} \int_0^h u dY = u^* \left( \frac{1}{\kappa} \ln \frac{hu^*}{\nu} + B - \frac{1}{\kappa} \right) \quad (6.66)$$

Recalling that  $V/u^* = (8/f)^{1/2}$ , we see that Eq. (6.66) is equivalent to a parallel-plate friction law. Rearranging and cleaning up the constant terms, we obtain

$$\frac{1}{f^{1/2}} \approx 2.0 \log (\text{Re}_{D_h} f^{1/2}) - 1.19 \quad (6.67)$$

where we have introduced the hydraulic diameter  $D_h = 4h$ . This is remarkably close to the smooth-wall pipe friction law, Eq. (6.38). Therefore we conclude that the use of the hydraulic diameter in this turbulent case is quite successful. That turns out to be true for other noncircular turbulent flows also.

Equation (6.67) can be brought into exact agreement with the pipe law by rewriting it in the form

$$\frac{1}{f^{1/2}} = 2.0 \log (0.64 \text{Re}_{D_h} f^{1/2}) - 0.8 \quad (6.68)$$

Thus the turbulent friction is predicted most accurately when we use an effective diameter  $D_{\text{eff}}$  equal to 0.64 times the hydraulic diameter. The effect on  $f$  itself is much less, about 10 percent at most. We can compare with Eq. (6.64) for laminar flow, which predicted

$$\text{Parallel plates:} \quad D_{\text{eff}} = \frac{64}{96} D_h = \frac{2}{3} D_h \quad (6.69)$$

This close resemblance ( $0.64D_h$  versus  $0.667D_h$ ) occurs so often in noncircular duct flow that we take it to be a general rule for computing turbulent friction in ducts:

$$D_{\text{eff}} = D_h = \frac{4A}{\mathcal{P}} \quad \text{reasonable accuracy}$$

$$D_{\text{eff}} = D_h \frac{64}{(f \text{Re}_{D_h}) \text{laminar theory}} \quad \text{better accuracy} \quad (6.70)$$

Jones [10] shows that the effective-laminar-diameter idea collapses all data for rectangular ducts of arbitrary height-to-width ratio onto the Moody chart for pipe flow. We recommend this idea for all noncircular ducts.

### EXAMPLE 6.13

Fluid flows at an average velocity of 6 ft/s between horizontal parallel plates a distance of 2.4 in apart. Find the head loss and pressure drop for each 100 ft of length for  $\rho = 1.9$  slugs/ft<sup>3</sup> and (a)  $\nu = 0.00002$  ft<sup>2</sup>/s and (b)  $\nu = 0.002$  ft<sup>2</sup>/s. Assume smooth walls.

#### Solution

##### Part (a)

The viscosity  $\mu = \rho\nu = 3.8 \times 10^{-5}$  slug/(ft · s). The spacing is  $2h = 2.4$  in = 0.2 ft, and  $D_h = 4h = 0.4$  ft. The Reynolds number is

$$\text{Re}_{D_h} = \frac{VD_h}{\nu} = \frac{(6.0 \text{ ft/s})(0.4 \text{ ft})}{0.00002 \text{ ft}^2/\text{s}} = 120,000$$

The flow is therefore turbulent. For reasonable accuracy, simply look on the Moody chart (Fig. 6.13) for smooth walls:

$$f \approx 0.0173 \quad h_f \approx f \frac{L}{D_h} \frac{V^2}{2g} = 0.0173 \frac{100}{0.4} \frac{(6.0)^2}{2(32.2)} \approx 2.42 \text{ ft} \quad \text{Ans. (a)}$$

Since there is no change in elevation,

$$\Delta p = \rho gh_f = 1.9(32.2)(2.42) = 148 \text{ lbf/ft}^2 \quad \text{Ans. (a)}$$

This is the head loss and pressure drop per 100 ft of channel. For more accuracy, take  $D_{\text{eff}} = \frac{64}{96}D_h$  from laminar theory; then

$$\text{Re}_{\text{eff}} = \frac{64}{96}(120,000) = 80,000$$

and from the Moody chart read  $f \approx 0.0189$  for smooth walls. Thus a better estimate is

$$h_f = 0.0189 \frac{100}{0.4} \frac{(6.0)^2}{2(32.2)} = 2.64 \text{ ft}$$

and  $\Delta p = 1.9(32.2)(2.64) = 161 \text{ lbf/ft}^2$  *Better ans. (a)*

The more accurate formula predicts friction about 9 percent higher.

##### Part (b)

Compute  $\mu = \rho\nu = 0.0038$  slug/(ft · s). The Reynolds number is  $6.0(0.4)/0.002 = 1200$ ; therefore the flow is laminar, since  $\text{Re}$  is less than 2300.

You could use the laminar flow friction factor, Eq. (6.64)

$$f_{\text{lam}} = \frac{96}{\text{Re}_{D_h}} = \frac{96}{1200} = 0.08$$

from which  $h_f = 0.08 \frac{100}{0.4} \frac{(6.0)^2}{2(32.2)} = 11.2 \text{ ft}$

and  $\Delta p = 1.9(32.2)(11.2) = 684 \text{ lbf/ft}^2$  *Ans. (b)*

Alternately you can finesse the Reynolds number and go directly to the appropriate laminar flow formula, Eq. (6.63):

$$V = \frac{h^2}{3\mu} \frac{\Delta p}{L}$$

$$\text{or } \Delta p = \frac{3(6.0 \text{ ft/s})[0.0038 \text{ slug/(ft} \cdot \text{s)}](100 \text{ ft})}{(0.1 \text{ ft})^2} = 684 \text{ slugs/(ft} \cdot \text{s}^2) = 684 \text{ lbf/ft}^2$$

and

$$h_f = \frac{\Delta p}{\rho g} = \frac{684}{1.9(32.2)} = 11.2 \text{ ft}$$

This is one of those (perhaps unexpected) problems where the laminar friction is greater than the turbulent friction.

### Flow through a Concentric Annulus

Consider steady axial laminar flow in the annular space between two concentric cylinders, as in Fig. 6.15. There is no slip at the inner ( $r = b$ ) and outer radius ( $r = a$ ). For  $u = u(r)$  only, the governing relation is Eq. (D.7):

$$\frac{d}{dr} \left( r\mu \frac{du}{dr} \right) = Kr \quad K = \frac{d}{dx}(p + \rho gz) \quad (6.71)$$


Integrate this twice:

$$u = \frac{1}{4}r^2 \frac{K}{\mu} + C_1 \ln r + C_2$$

The constants are found from the two no-slip conditions:

$$u(r = a) = 0 = \frac{1}{4}a^2 \frac{K}{\mu} + C_1 \ln a + C_2$$

$$u(r = b) = 0 = \frac{1}{4}b^2 \frac{K}{\mu} + C_1 \ln b + C_2$$

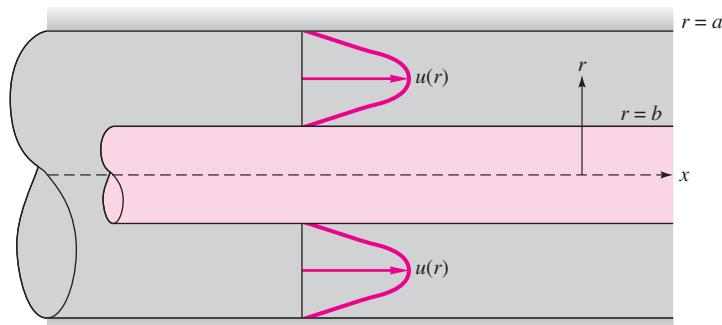

**Fig. 6.15** Fully developed flow through a concentric annulus.

The final solution for the velocity profile is

$$u = \frac{1}{4\mu} \left[ -\frac{d}{dx}(p + \rho gz) \right] \left[ a^2 - r^2 + \frac{a^2 - b^2}{\ln(b/a)} \ln \frac{a}{r} \right] \quad (6.72)$$

The volume flow is given by

$$Q = \int_b^a u 2\pi r dr = \frac{\pi}{8\mu} \left[ -\frac{d}{dx}(p + \rho gz) \right] \left[ a^4 - b^4 - \frac{(a^2 - b^2)^2}{\ln(a/b)} \right] \quad (6.73)$$

The velocity profile  $u(r)$  resembles a parabola wrapped around in a circle to form a split doughnut, as in Fig. 6.15.

It is confusing to base the friction factor on the wall shear because there are two shear stresses, the inner stress being greater than the outer. It is better to define  $f$  with respect to the head loss, as in Eq. (6.58),

$$f = h_f \frac{D_h}{L} \frac{2g}{V^2} \quad \text{where } V = \frac{Q}{\pi(a^2 - b^2)} \quad (6.74)$$

The hydraulic diameter for an annulus is

$$D_h = \frac{4\pi(a^2 - b^2)}{2\pi(a + b)} = 2(a - b) \quad (6.75)$$

It is twice the clearance, rather like the parallel-plate result of twice the distance between plates [Eq. (6.62)].

Substituting  $h_f$ ,  $D_h$ , and  $V$  into Eq. (6.74), we find that the friction factor for laminar flow in a concentric annulus is of the form

$$f = \frac{64\zeta}{\text{Re}_{D_h}} \quad \zeta = \frac{(a - b)^2(a^2 - b^2)}{a^4 - b^4 - (a^2 - b^2)^2/\ln(a/b)} \quad (6.76)$$

The dimensionless term  $\zeta$  is a sort of correction factor for the hydraulic diameter. We could rewrite Eq. (6.76) as

$$\text{Concentric annulus: } f = \frac{64}{\text{Re}_{\text{eff}}} \quad \text{Re}_{\text{eff}} = \frac{1}{\zeta} \text{Re}_{D_h} \quad (6.77)$$

Some numerical values of  $f \text{Re}_{D_h}$  and  $D_{\text{eff}}/D_h = 1/\zeta$  are given in Table 6.3. Again, laminar annular flow becomes unstable at  $\text{Re}_{D_h} \approx 2000$ .

For turbulent flow through a concentric annulus, the analysis might proceed by patching together two logarithmic law profiles, one going out from the inner wall to meet the other coming in from the outer wall. We omit such a scheme here and proceed directly to the friction factor. According to the general rule proposed in Eq. (6.61), turbulent friction is predicted with excellent accuracy by replacing  $d$  in the Moody chart by  $D_{\text{eff}} = 2(a - b)/\zeta$ , with values listed in Table 6.3.<sup>5</sup> This idea includes roughness also (replace  $\epsilon/d$  in the chart by  $\epsilon/D_{\text{eff}}$ ). For a quick design number with about 10 percent accuracy, one can simply use the hydraulic diameter  $D_h = 2(a - b)$ .


<sup>5</sup>Jones and Leung [44] show that data for annular flow also satisfy the effective-laminar-diameter idea.

**Table 6.3** Laminar Friction Factors for a Concentric Annulus

$b/a$	$f \text{Re}_{D_h}$	$D_{\text{eff}}/D_h = 1/\zeta$
0.0	64.0	1.000
0.00001	70.09	0.913
0.0001	71.78	0.892
0.001	74.68	0.857
0.01	80.11	0.799
0.05	86.27	0.742
0.1	89.37	0.716
0.2	92.35	0.693
0.4	94.71	0.676
0.6	95.59	0.670
0.8	95.92	0.667
1.0	96.0	0.667

**EXAMPLE 6.14**

What should the reservoir level  $h$  be to maintain a flow of  $0.01 \text{ m}^3/\text{s}$  through the commercial steel annulus  $30 \text{ m}$  long shown in Fig. E6.14? Neglect entrance effects and take  $\rho = 1000 \text{ kg/m}^3$  and  $\nu = 1.02 \times 10^{-6} \text{ m}^2/\text{s}$  for water.

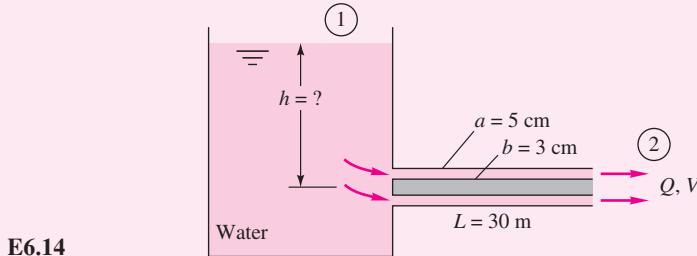**Solution**

- Assumptions:** Fully developed annulus flow, minor losses neglected.
- Approach:** Determine the Reynolds number, then find  $f$  and  $h_f$  and thence  $h$ .
- Property values:** Given  $\rho = 1000 \text{ kg/m}^3$  and  $\nu = 1.02 \times 10^{-6} \text{ m}^2/\text{s}$ .
- Solution step 1:** Calculate the velocity, hydraulic diameter, and Reynolds number:

$$V = \frac{Q}{A} = \frac{0.01 \text{ m}^3/\text{s}}{\pi[(0.05 \text{ m})^2 - (0.03 \text{ m})^2]} = 1.99 \frac{\text{m}}{\text{s}}$$

$$D_h = 2(a - b) = 2(0.05 \text{ m} - 0.03 \text{ m}) = 0.04 \text{ m}$$

$$\text{Re}_{D_h} = \frac{VD_h}{\nu} = \frac{(1.99 \text{ m/s})(0.04 \text{ m})}{1.02 \times 10^{-6} \text{ m}^2/\text{s}} = 78,000 \quad (\text{turbulent flow})$$

- Solution step 2:** Apply the steady flow energy equation between sections 1 and 2:

$$\frac{p_1}{\rho g} + \frac{\alpha_1 V_1^2}{2g} + z_1 = \frac{p_2}{\rho g} + \frac{\alpha_2 V_2^2}{2g} + z_2 + h_f$$

or

$$h = \frac{\alpha_2 V_2^2}{2g} + h_f = \frac{V_2^2}{2g} \left( \alpha_2 + f \frac{L}{D_h} \right) \quad (1)$$

Note that  $z_1 = h$ . For turbulent flow, from Eq. (3.43c), we estimate  $\alpha_2 \approx 1.03$

- Solution step 3:** Determine the roughness ratio and the friction factor. From Table 6.1, for (new) commercial steel pipe,  $\epsilon = 0.046 \text{ mm}$ . Then

$$\frac{\epsilon}{D_h} = \frac{0.046 \text{ mm}}{40 \text{ mm}} = 0.00115$$

For a reasonable estimate, use  $\text{Re}_{D_h}$  to estimate the friction factor from Eq. (6.48):

$$\frac{1}{\sqrt{f}} \approx -2.0 \log_{10} \left( \frac{0.00115}{3.7} + \frac{2.51}{78,000 \sqrt{f}} \right) \quad \text{solve for } f \approx 0.0232$$

For slightly better accuracy, we could use  $D_{\text{eff}} = D_h/\zeta$ . From Table 6.3, for  $b/a = 3/5$ ,  $1/\zeta = 0.67$ . Then  $D_{\text{eff}} = 0.67(40 \text{ mm}) = 26.8 \text{ mm}$ , whence  $\text{Re}_{D_{\text{eff}}} = 52,300$ ,  $\epsilon/D_{\text{eff}} = 0.00172$ , and

$f_{\text{eff}} \approx 0.0257$ . Using the latter estimate, we find the required reservoir level from Eq. (1):

$$h = \frac{V_2^2}{2g} \left( \alpha_2 + f_{\text{eff}} \frac{L}{D_h} \right) = \frac{(1.99 \text{ m/s})^2}{2(9.81 \text{ m/s})^2} \left[ 1.03 + 0.0257 \frac{30 \text{ m}}{0.04 \text{ m}} \right] \approx 4.1 \text{ m} \quad \text{Ans.}$$

- *Comments:* Note that we do not replace  $D_h$  by  $D_{\text{eff}}$  in the head loss term  $fL/D_h$ , which comes from a momentum balance and requires hydraulic diameter. If we used the simpler friction estimate,  $f \approx 0.0232$ , we would obtain  $h \approx 3.72 \text{ m}$ , or about 9 percent lower.

## Other Noncircular Cross Sections

**Table 6.4** Laminar Friction Constants  $f/\text{Re}$  for Rectangular and Triangular Ducts


Rectangular	Isosceles triangle
$b/a$	$f/\text{Re}_{D_h}$
0.0	96.00
0.05	89.91
0.1	84.68
0.125	82.34
0.167	78.81
0.25	72.93
0.4	65.47
0.5	62.19
0.75	57.89
1.0	56.91

In principle, any duct cross section can be solved analytically for the laminar flow velocity distribution, volume flow, and friction factor. This is because any cross section can be mapped onto a circle by the methods of complex variables, and other powerful analytical techniques are also available. Many examples are given by White [3, pp. 112–115], Berker [11], and Olson and Wright [12, pp. 315–317]. Reference 34 is devoted entirely to laminar duct flow.

In general, however, most unusual duct sections have strictly academic and not commercial value. We list here only the rectangular and isosceles-triangular sections, in Table 6.4, leaving other cross sections for you to find in the references.

For turbulent flow in a duct of unusual cross section, one should replace  $d$  by  $D_h$  on the Moody chart if no laminar theory is available. If laminar results are known, such as Table 6.4, replace  $d$  by  $D_{\text{eff}} = [64/(f\text{Re})]D_h$  for the particular geometry of the duct.

For laminar flow in rectangles and triangles, the wall friction varies greatly, being largest near the midpoints of the sides and zero in the corners. In turbulent flow through the same sections, the shear is nearly constant along the sides, dropping off sharply to zero in the corners. This is because of the phenomenon of turbulent *secondary flow*, in which there are nonzero mean velocities  $v$  and  $w$  in the plane of the cross section. Some measurements of axial velocity and secondary flow patterns are shown in Fig. 6.16, as sketched by Nikuradse in his 1926 dissertation. The

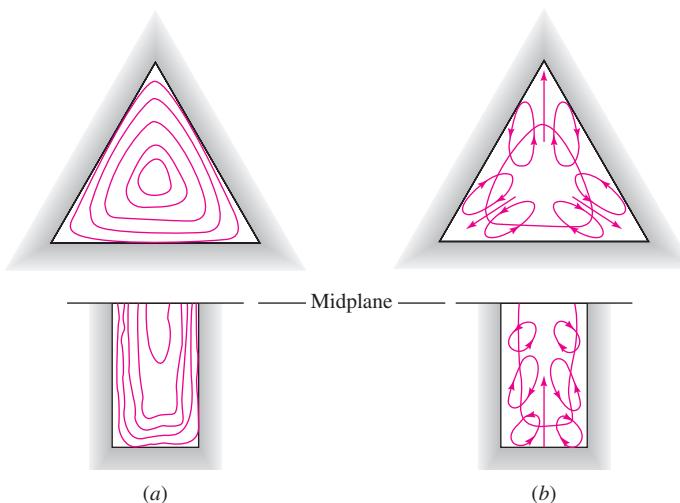

**Fig. 6.16** Illustration of secondary turbulent flow in noncircular ducts: (a) axial mean velocity contours; (b) secondary flow in-plane cellular motions. (After J. Nikuradse, dissertation, Göttingen, 1926.)

secondary flow “cells” drive the mean flow toward the corners, so that the axial velocity contours are similar to the cross section and the wall shear is nearly constant. This is why the hydraulic-diameter concept is so successful for turbulent flow. Laminar flow in a straight noncircular duct has no secondary flow. An accurate theoretical prediction of turbulent secondary flow has yet to be achieved, although numerical models are often successful [36].

### EXAMPLE 6.15

Air, with  $\rho = 0.00237 \text{ slug}/\text{ft}^3$  and  $\nu = 0.000157 \text{ ft}^2/\text{s}$ , is forced through a horizontal square 9-by 9-in duct 100 ft long at  $25 \text{ ft}^3/\text{s}$ . Find the pressure drop if  $\epsilon = 0.0003 \text{ ft}$ .

#### Solution

Compute the mean velocity and hydraulic diameter:

$$V = \frac{25 \text{ ft}^3/\text{s}}{(0.75 \text{ ft})^2} = 44.4 \text{ ft/s}$$

$$D_h = \frac{4A}{\mathcal{P}} = \frac{4(81 \text{ in}^2)}{36 \text{ in}} = 9 \text{ in} = 0.75 \text{ ft}$$

From Table 6.4, for  $b/a = 1.0$ , the effective diameter is

$$D_{\text{eff}} = \frac{64}{56.91} D_h = 0.843 \text{ ft}$$

whence  $\text{Re}_{\text{eff}} = \frac{VD_{\text{eff}}}{\nu} = \frac{44.4(0.843)}{0.000157} = 239,000$

$$\frac{\epsilon}{D_{\text{eff}}} = \frac{0.0003}{0.843} = 0.000356$$

From the Moody chart, read  $f = 0.0177$ . Then the pressure drop is

$$\Delta p = \rho g h_f = \rho g \left( f \frac{L}{D_h} \frac{V^2}{2g} \right) = 0.00237(32.2) \left[ 0.0177 \frac{100}{0.75} \frac{44.4^2}{2(32.2)} \right]$$

or

$$\Delta p = 5.5 \text{ lbf/ft}^2$$

*Ans.*

Pressure drop in air ducts is usually small because of the low density.

## 6.9 Minor or Local Losses in Pipe Systems<sup>6</sup>

For any pipe system, in addition to the Moody-type friction loss computed for the length of pipe, there are additional so-called *minor losses* or *local losses* due to

1. Pipe entrance or exit.
2. Sudden expansion or contraction.
3. Bends, elbows, tees, and other fittings.

<sup>6</sup>This section may be omitted without loss of continuity.

4. Valves, open or partially closed.
5. Gradual expansions or contractions.

The losses may not be so minor; for example, a partially closed valve can cause a greater pressure drop than a long pipe.

Since the flow pattern in fittings and valves is quite complex, the theory is very weak. The losses are commonly measured experimentally and correlated with the pipe flow parameters. The data, especially for valves, are somewhat dependent on the particular manufacturer's design, so that the values listed here must be taken as average design estimates [15, 16, 35, 43, 46].

The measured minor loss is usually given as a ratio of the head loss  $h_m = \Delta p / (\rho g)$  through the device to the velocity head  $V^2 / (2g)$  of the associated piping system:

$$\text{Loss coefficient } K = \frac{h_m}{V^2/(2g)} = \frac{\Delta p}{\frac{1}{2}\rho V^2} \quad (6.78)$$

Although  $K$  is dimensionless, it often is not correlated in the literature with the Reynolds number and roughness ratio but rather simply with the raw size of the pipe in, say, inches. Almost all data are reported for turbulent flow conditions.

A single pipe system may have many minor losses. Since all are correlated with  $V^2 / (2g)$ , they can be summed into a single total system loss if the pipe has constant diameter:


$$\Delta h_{\text{tot}} = h_f + \sum h_m = \frac{V^2}{2g} \left( \frac{fL}{d} + \sum K \right) \quad (6.79)$$

Note, however, that we must sum the losses separately if the pipe size changes so that  $V^2$  changes. The length  $L$  in Eq. (6.79) is the total length of the pipe axis.

There are many different valve designs in commercial use. Figure 6.17 shows five typical designs: (a) the *gate*, which slides down across the section; (b) the *globe*, which closes a hole in a special insert; (c) the *angle*, similar to a globe but with a 90° turn; (d) the *swing-check* valve, which allows only one-way flow; and (e) the *disk*, which closes the section with a circular gate. The globe, with its tortuous flow path, has the highest losses when fully open. Many excellent details about these and other valves are given in the handbooks by Skousen [35] and Smith and Zappe [52].

Table 6.5 lists loss coefficients  $K$  for four types of valve, three angles of elbow fitting, and two tee connections. Fittings may be connected by either internal screws or flanges, hence the two listings. We see that  $K$  generally decreases with pipe size, which is consistent with the higher Reynolds number and decreased roughness ratio of large pipes. We stress that Table 6.5 represents losses *averaged among various manufacturers*, so there is an uncertainty as high as ±50 percent.

In addition, most of the data in Table 6.5 are relatively old [15, 16] and therefore based on fittings manufactured in the 1950s. Modern forged and molded fittings may yield somewhat different loss factors, often less than listed in Table 6.5. An example, shown in Fig. 6.18a, gives recent data [48] for fairly short (bend-radius/elbow-diameter = 1.2) flanged 90° elbows. The elbow diameter was 1.69 in. Notice first that  $K$  is plotted versus Reynolds number, rather than versus the raw (dimensional) pipe diameters in Table 6.5, and therefore Fig. 6.18a has more generality. Then notice

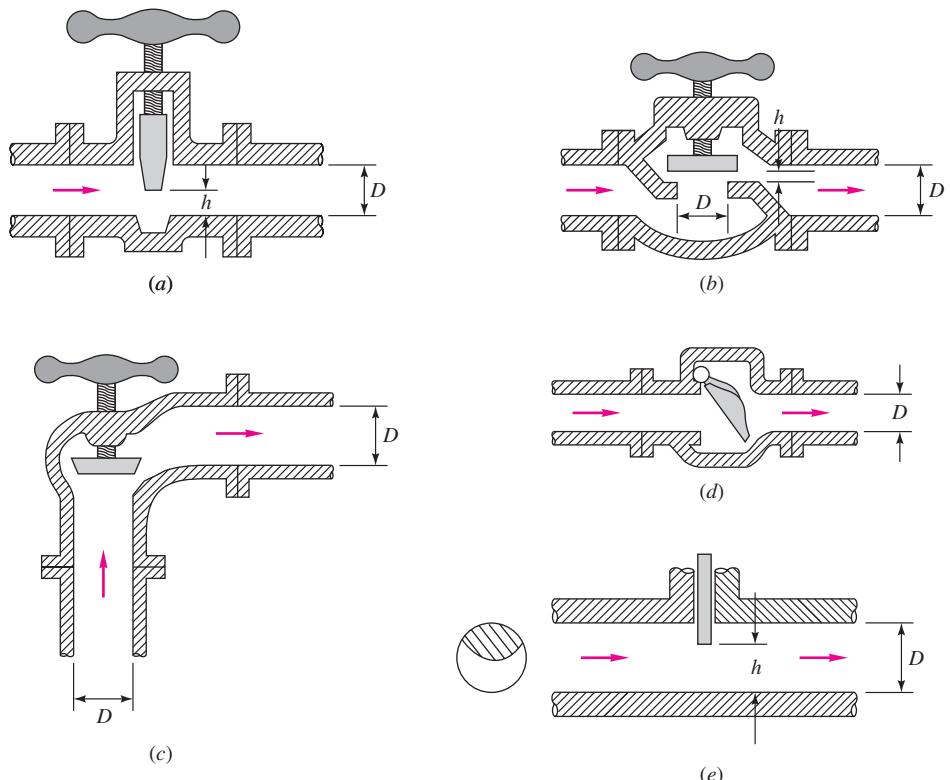

**Fig. 6.17** Typical commercial valve geometries: (a) gate valve; (b) globe valve; (c) angle valve; (d) swing-check valve; (e) disk-type gate valve.

that the  $K$  values of  $0.23 \pm 0.05$  are significantly less than the values for  $90^\circ$  elbows in Table 6.5, indicating smoother walls and/or better design. One may conclude that (1) Table 6.5 data are probably conservative and (2) loss factors are highly dependent on actual design and manufacturing factors, with Table 6.5 serving only as a rough guide.

The valve losses in Table 6.5 are for the fully open condition. Losses can be much higher for a partially open valve. Figure 6.18b gives average losses for three valves as a function of “percentage open,” as defined by the opening-distance ratio  $h/D$  (see Fig. 6.17 for the geometries). Again we should warn of a possible uncertainty of  $\pm 50$  percent. Of all minor losses, valves, because of their complex geometry, are most sensitive to manufacturers’ design details. For more accuracy, the particular design and manufacturer should be consulted [35].

The *butterfly* valve of Fig. 6.19a is a stem-mounted disk that, when closed, seats against an O-ring or compliant seal near the pipe surface. A single  $90^\circ$  turn opens the valve completely, hence the design is ideal for controllable quick-opening and quick-closing situations such as occur in fire protection and the electric power industry. However, considerable dynamic torque is needed to close these valves, and losses are high when the valves are nearly closed.


Figure 6.19b shows butterfly-valve loss coefficients as a function of the opening angle  $\theta$  for turbulent flow conditions ( $\theta = 0$  is closed). The losses are huge when the opening is small, and  $K$  drops off nearly exponentially with the opening angle. There

**Table 6.5** Resistance Coefficients  
 $K = h_m/[V^2/(2g)]$  for Open Valves,  
 Elbows, and Tees

	Nominal diameter, in								
	Screwed				Flanged				
	$\frac{1}{2}$	1	2	4	1	2	4	8	20
Valves (fully open):									
Globe	14	8.2	6.9	5.7	13	8.5	6.0	5.8	5.5
Gate	0.30	0.24	0.16	0.11	0.80	0.35	0.16	0.07	0.03
Swing check	5.1	2.9	2.1	2.0	2.0	2.0	2.0	2.0	2.0
Angle	9.0	4.7	2.0	1.0	4.5	2.4	2.0	2.0	2.0
Elbows:									
45° regular	0.39	0.32	0.30	0.29		0.21	0.20	0.19	0.16
45° long radius									0.14
90° regular	2.0	1.5	0.95	0.64	0.50	0.39	0.30	0.26	0.21
90° long radius	1.0	0.72	0.41	0.23	0.40	0.30	0.19	0.15	0.10
180° regular	2.0	1.5	0.95	0.64	0.41	0.35	0.30	0.25	0.20
180° long radius					0.40	0.30	0.21	0.15	0.10
Tees:									
Line flow	0.90	0.90	0.90	0.90	0.24	0.19	0.14	0.10	0.07
Branch flow	2.4	1.8	1.4	1.1	1.0	0.80	0.64	0.58	0.41

is a factor of 2 spread among the various manufacturers. Note that  $K$  in Fig. 6.19b is, as usual, based on the average pipe velocity  $V = Q/A$ , not on the increased velocity of the flow as it passes through the narrow valve passage.

A bend or curve in a pipe, as in Fig. 6.20, always induces a loss larger than the simple straight-pipe Moody friction loss, due to flow separation on the curved walls and a swirling secondary flow arising from the centripetal acceleration. The smooth-wall loss

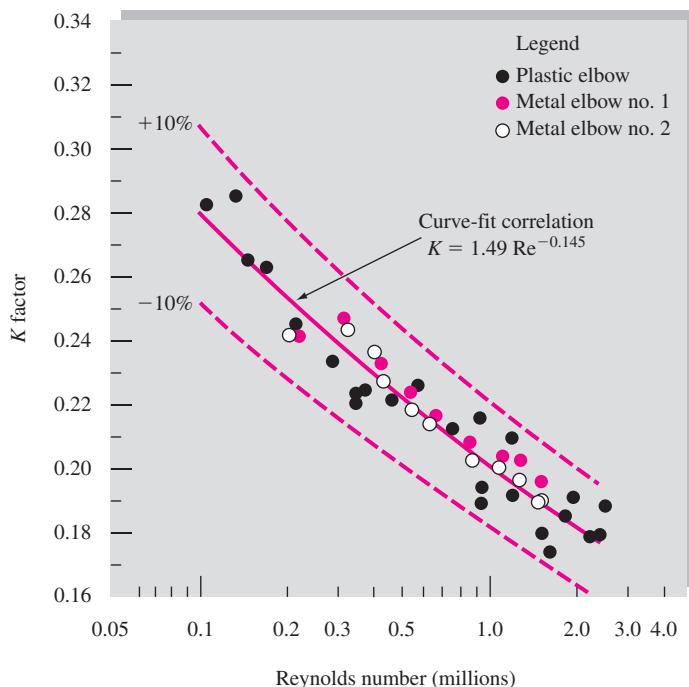

**Fig. 6.18a** Recent measured loss coefficients for 90° elbows. These values are less than those reported in Table 6.5. (From Ref. 48, courtesy of R. D. Coffield.)


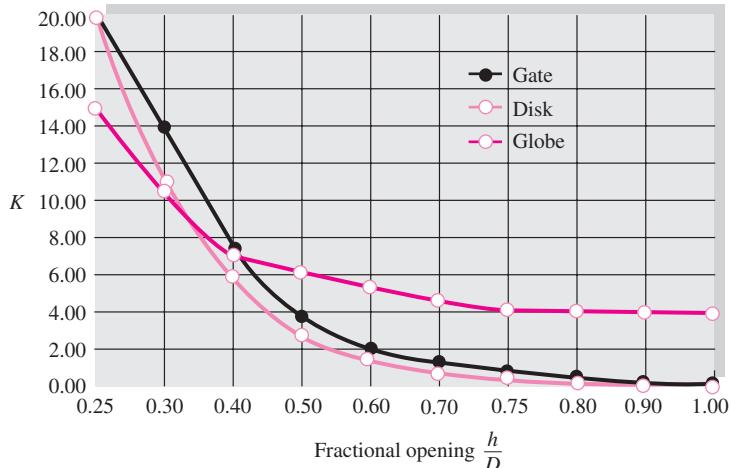


Fig. 6.18b Average loss coefficients for partially open valves (see sketches in Fig. 6.17).



(a)

Fig. 6.19 Performance of butterfly valves: (a) typical geometry (*Courtesy of Tyco Engineered Products and Services*); (b) loss coefficients for three different manufacturers.

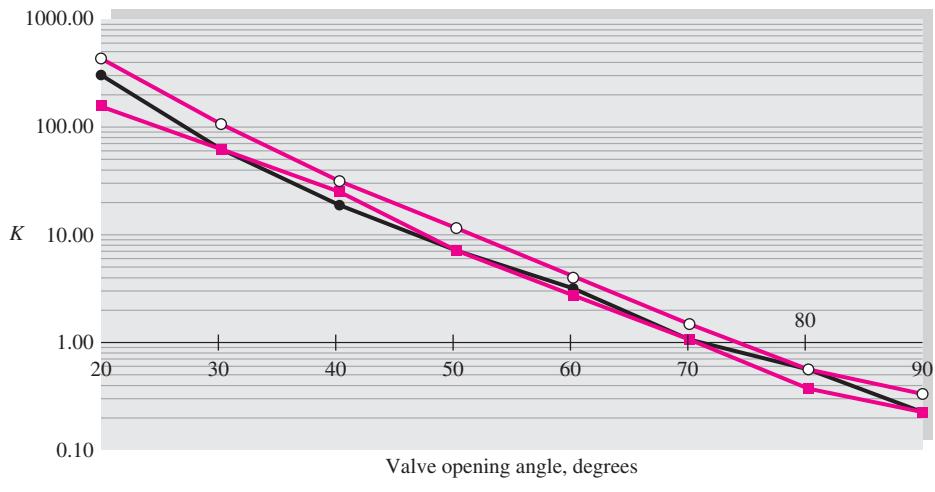


(b)

coefficients  $K$  in Fig. 6.20, from the data of Ito [49], are for *total* loss, including Moody friction effects. The separation and secondary flow losses decrease with  $R/d$ , while the Moody losses increase because the bend length increases. The curves in Fig. 6.20 thus show a minimum where the two effects cross. Ito [49] gives a curve-fit formula for the  $90^\circ$  bend in turbulent flow:


$$90^\circ \text{ bend: } K \approx 0.388\alpha \left(\frac{R}{d}\right)^{0.84} \text{Re}_D^{-0.17} \text{ where } \alpha = 0.95 + 4.42 \left(\frac{R}{d}\right)^{-1.96} \geq 1 \quad (6.80a)$$

The formula accounts for Reynolds number, which equals 200,000 in Fig. 6.20. Comprehensive reviews of curved-pipe flow, for both laminar and turbulent flow, are given by Berger et al. [53] and for  $90^\circ$  bends by Spedding et al. [54].


As shown in Fig. 6.21, entrance losses are highly dependent on entrance geometry, but exit losses are not. Sharp edges or protrusions in the entrance cause large zones of flow separation and large losses. A little rounding goes a long way, and a

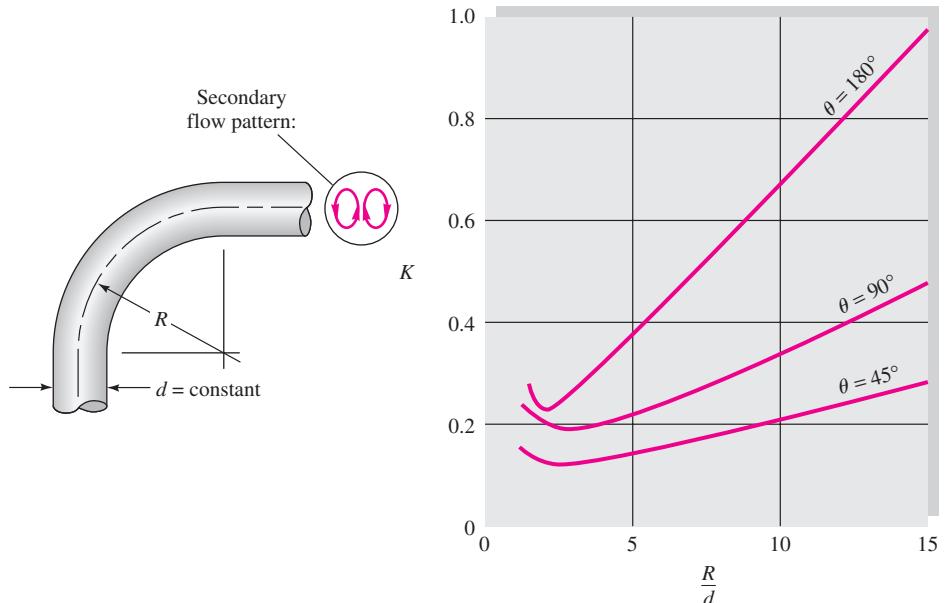

**Fig. 6.20** Resistance coefficients for smooth-walled  $45^\circ$ ,  $90^\circ$ , and  $180^\circ$  bends, at  $Re_d = 200,000$ , after Ito [49].

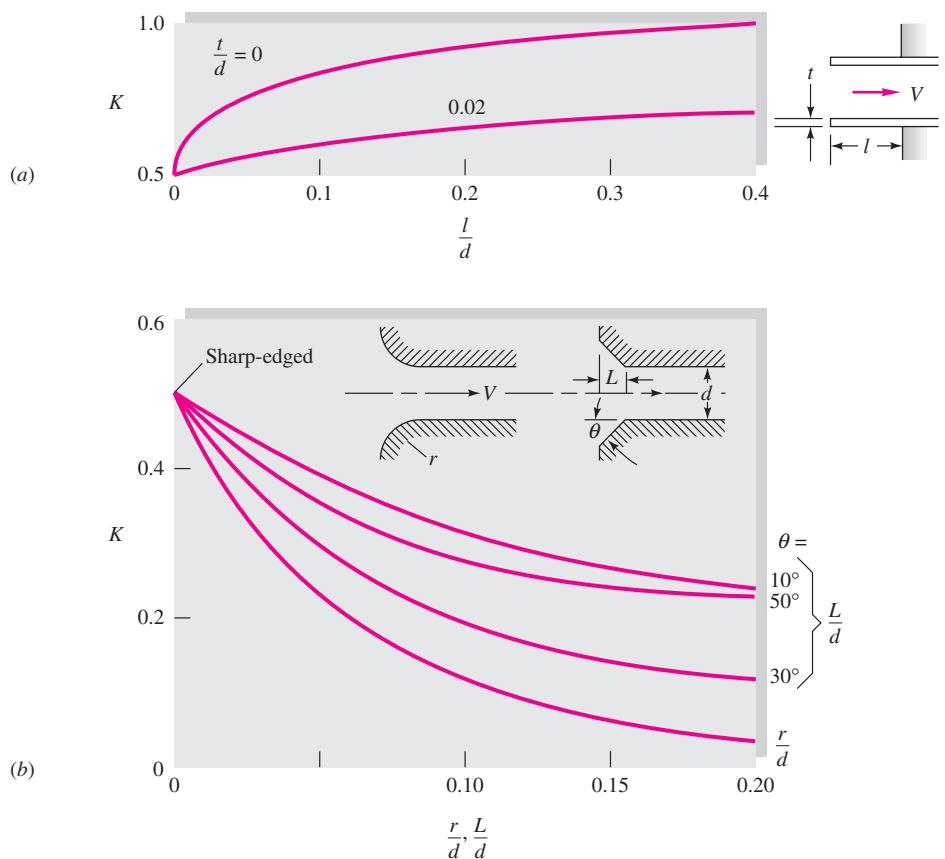

**Fig. 6.21** Entrance and exit loss coefficients: (a) reentrant inlets; (b) rounded and beveled inlets. Exit losses are  $K \approx 1.0$  for all shapes of exit (reentrant, sharp, beveled, or rounded). (From Ref. 37.)

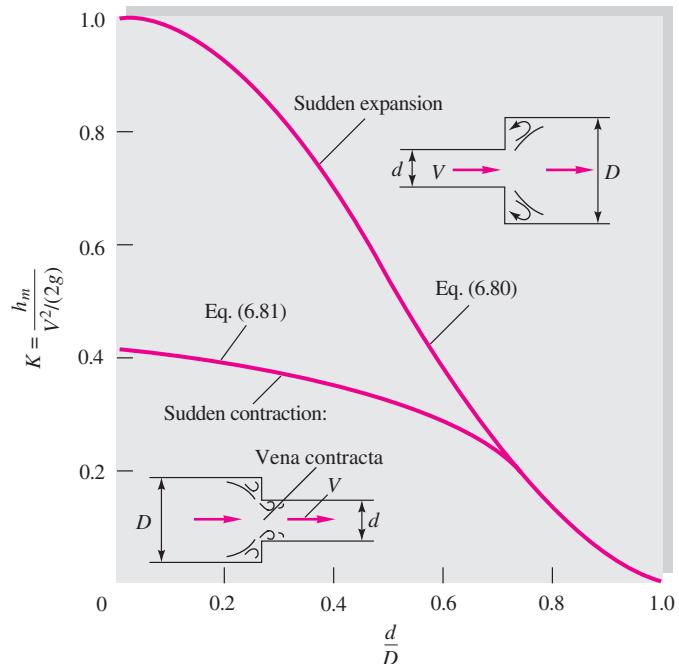

**Fig. 6.22** Sudden expansion and contraction losses. Note that the loss is based on velocity head in the small pipe.

well-rounded entrance ( $r = 0.2d$ ) has a nearly negligible loss  $K = 0.05$ . At a submerged exit, on the other hand, the flow simply passes out of the pipe into the large downstream reservoir and loses all its velocity head due to viscous dissipation. Therefore  $K = 1.0$  for all *submerged exits*, no matter how well rounded.

If the entrance is from a finite reservoir, it is termed a *sudden contraction* (SC) between two sizes of pipe. If the exit is to finite-sized pipe, it is termed a *sudden expansion* (SE). The losses for both are graphed in Fig. 6.22. For the sudden expansion, the shear stress in the corner separated flow, or deadwater region, is negligible, so that a control volume analysis between the expansion section and the end of the separation zone gives a theoretical loss:


$$K_{SE} = \left(1 - \frac{d^2}{D^2}\right)^2 = \frac{h_m}{V^2/(2g)} \quad (6.80)$$

Note that  $K$  is based on the velocity head in the small pipe. Equation (6.80) is in excellent agreement with experiment.

For the sudden contraction, however, flow separation in the downstream pipe causes the main stream to contract through a minimum diameter  $d_{min}$ , called the *vena contracta*, as sketched in Fig. 6.22. Because the theory of the vena contracta is not well developed, the loss coefficient in the figure for sudden contraction is experimental. It fits the empirical formula

$$K_{SC} \approx 0.42 \left(1 - \frac{d^2}{D^2}\right) \quad (6.81)$$

up to the value  $d/D = 0.76$ , above which it merges into the sudden-expansion prediction, Eq. (6.80).

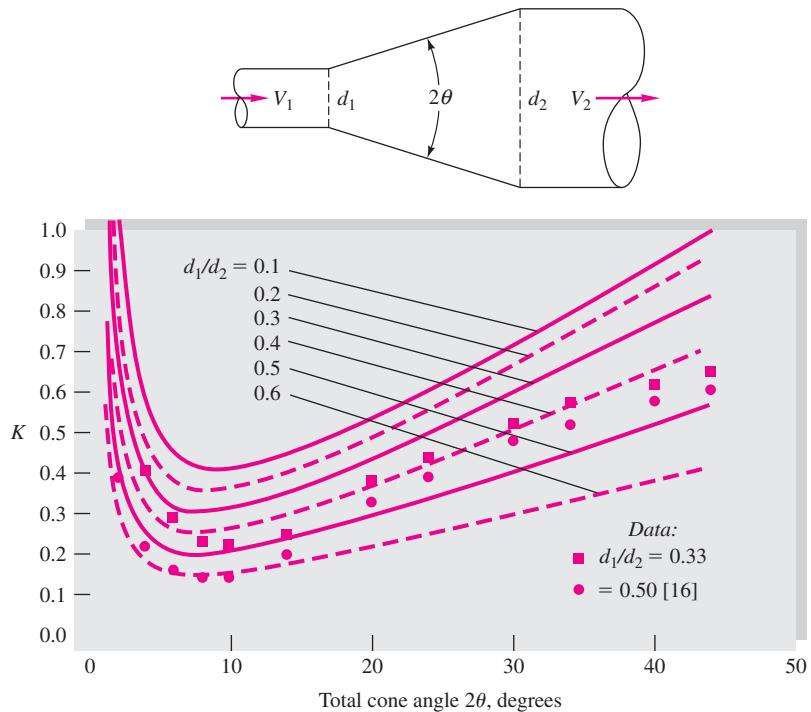

**Fig. 6.23** Flow losses in a gradual conical expansion region, as calculated from Gibson's suggestion [15, 50], Eq. (6.82), for a smooth wall.

### Gradual Expansion The Diffuser

As flow enters a gradual expansion or *diffuser*, such as the conical geometry of Fig. 6.23, the velocity drops and the pressure rises. Head loss can be large, due to flow separation on the walls, if the cone angle is too great. A thinner entrance boundary layer, as in Fig. 6.6, causes a slightly smaller loss than a fully developed inlet flow. The flow loss is a combination of nonideal pressure recovery plus wall friction. Some correlating curves are shown in Fig. 6.23. The loss coefficient  $K$  is based on the velocity head in the inlet (small) pipe and depends upon cone angle  $2\theta$  and the diffuser diameter ratio  $d_1/d_2$ . There is scatter in the reported data [15, 16]. The curves in Fig. 6.23 are based on a correlation by A. H. Gibson [50], cited in Ref. 15:

$$K_{\text{diffuser}} = \frac{h_m}{V_1^2/(2g)} \approx 2.61 \sin \theta \left( 1 - \frac{d^2}{D^2} \right)^2 + f_{\text{avg}} \frac{L}{d_{\text{avg}}} \quad \text{for } 2\theta \leq 45^\circ \quad (6.82)$$

For large angles,  $2\theta > 45^\circ$ , drop the coefficient  $(2.61 \sin \theta)$ , which leaves us with a loss equivalent to the sudden expansion of Eq. (6.80). As seen, the formula is in reasonable agreement with the data from Ref. 16. The minimum loss lies in the region  $5^\circ < 2\theta < 15^\circ$ , which is the best geometry for an efficient diffuser. For angles less than  $5^\circ$ , the diffuser is too long and has too much friction. Angles greater than  $15^\circ$  cause flow separation, resulting in poor pressure recovery. Professor Gordon Holloway provided the writer a recent example, where an improved diffuser design reduced the power requirement of a wind tunnel by 40 percent (100 hp decrease!). We shall look again at diffusers in Sec. 6.11, using the data of Ref. 14.


For a gradual *contraction*, the loss is very small, as seen from the following experimental values [15]:

Contraction cone angle $2\theta$ , deg	30	45	60
$K$ for gradual contraction	0.02	0.04	0.07

References 15, 16, 43, and 46 contain additional data on minor losses.

### EXAMPLE 6.16

Water,  $\rho = 1.94$  slugs/ft<sup>3</sup> and  $\nu = 0.000011$  ft<sup>2</sup>/s, is pumped between two reservoirs at 0.2 ft<sup>3</sup>/s through 400 ft of 2-in-diameter pipe and several minor losses, as shown in Fig. E6.16. The roughness ratio is  $\epsilon/d = 0.001$ . Compute the pump horsepower required.

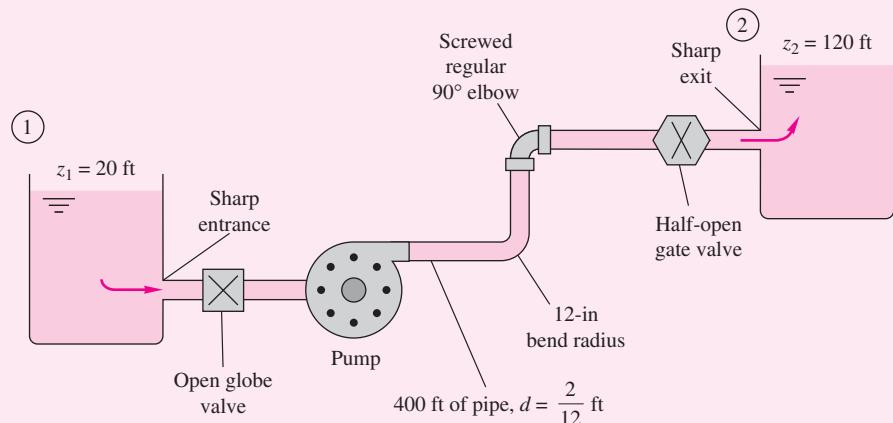

E6.16

### Solution

Write the steady flow energy equation between sections 1 and 2, the two reservoir surfaces:

$$\frac{p_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \left( \frac{p_2}{\rho g} + \frac{V_2^2}{2g} + z_2 \right) + h_f + \sum h_m - h_p$$

where  $h_p$  is the head increase across the pump. But since  $p_1 = p_2$  and  $V_1 = V_2 \approx 0$ , solve for the pump head:

$$h_p = z_2 - z_1 + h_f + \sum h_m = 120 \text{ ft} - 20 \text{ ft} + \frac{V^2}{2g} \left( \frac{fL}{d} + \sum K \right) \quad (1)$$

Now with the flow rate known, calculate

$$V = \frac{Q}{A} = \frac{0.2 \text{ ft}^3/\text{s}}{\frac{1}{4}\pi(\frac{2}{12} \text{ ft})^2} = 9.17 \text{ ft/s}$$

Now list and sum the minor loss coefficients:

Loss	<i>K</i>
Sharp entrance (Fig. 6.21)	0.5
Open globe valve (2 in, Table 6.5)	6.9
12-in bend (Fig. 6.20)	0.25
Regular 90° elbow (Table 6.5)	0.95
Half-closed gate valve (from Fig. 6.18b)	2.7
Sharp exit (Fig. 6.21)	1.0
	$\Sigma K = 12.3$

Calculate the Reynolds number and pipe friction factor:

$$\text{Re}_d = \frac{Vd}{\nu} = \frac{9.17(\frac{2}{12})}{0.000011} = 139,000$$

For  $\epsilon/d = 0.001$ , from the Moody chart read  $f = 0.0216$ . Substitute into Eq. (1):

$$\begin{aligned} h_p &= 100 \text{ ft} + \frac{(9.17 \text{ ft/s})^2}{2(32.2 \text{ ft/s}^2)} \left[ \frac{0.0216(400)}{\frac{2}{12}} + 12.3 \right] \\ &= 100 \text{ ft} + 84 \text{ ft} = 184 \text{ ft} \quad \text{pump head} \end{aligned}$$

The pump must provide a power to the water of

$$P = \rho g Q h_p = [1.94(32.2) \text{ lbf/ft}^3](0.2 \text{ ft}^3/\text{s})(184 \text{ ft}) = 2300 \text{ ft} \cdot \text{lbf/s}$$

The conversion factor is 1 hp = 550 ft · lbf/s. Therefore

$$P = \frac{2300}{550} = 4.2 \text{ hp} \quad \text{Ans.}$$

Allowing for an efficiency of 70 to 80 percent, a pump is needed with an input of about 6 hp.

## 6.10 Multiple-Pipe Systems<sup>7</sup>

If you can solve the equations for one-pipe systems, you can solve them all; but when systems contain two or more pipes, certain basic rules make the calculations very smooth. Any resemblance between these rules and the rules for handling electric circuits is not coincidental.

Figure 6.24 shows three examples of multiple-pipe systems.

### Pipes in Series

The first is a set of three (or more) pipes in series. Rule 1 is that the flow rate is the same in all pipes:


$$Q_1 = Q_2 = Q_3 = \text{const} \quad (6.83)$$

or  $V_1 d_1^2 = V_2 d_2^2 = V_3 d_3^2 \quad (6.84)$

Rule 2 is that the total head loss through the system equals the sum of the head loss in each pipe:

$$\Delta h_{A \rightarrow B} = \Delta h_1 + \Delta h_2 + \Delta h_3 \quad (6.85)$$

<sup>7</sup>This section may be omitted without loss of continuity.

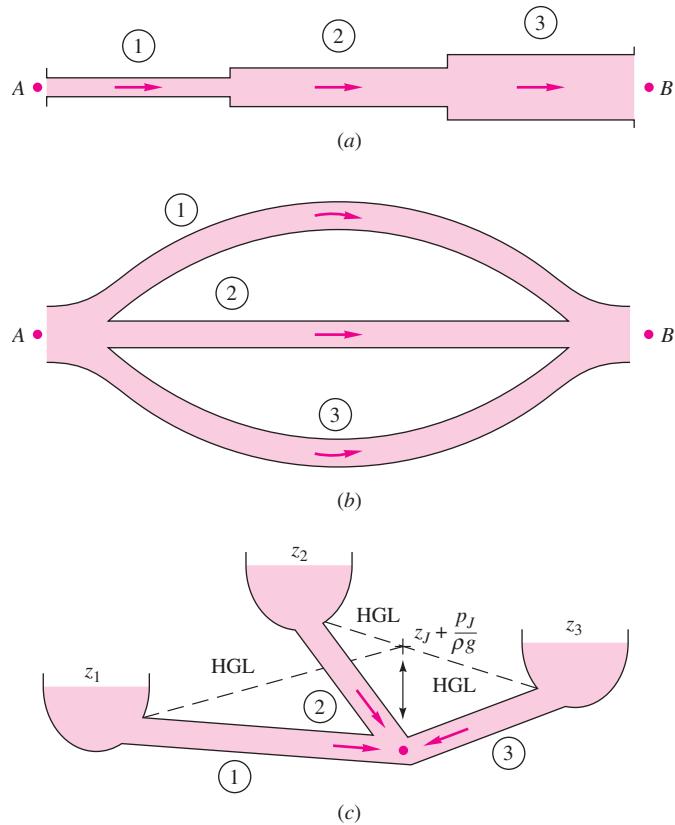

**Fig. 6.24** Examples of multiple-pipe systems: (a) pipes in series; (b) pipes in parallel; (c) the three-reservoir junction problem.

In terms of the friction and minor losses in each pipe, we could rewrite this as

$$\begin{aligned} \Delta h_{A \rightarrow B} = & \frac{V_1^2}{2g} \left( \frac{f_1 L_1}{d_1} + \sum K_1 \right) + \frac{V_2^2}{2g} \left( \frac{f_2 L_2}{d_2} + \sum K_2 \right) \\ & + \frac{V_3^2}{2g} \left( \frac{f_3 L_3}{d_3} + \sum K_3 \right) \end{aligned} \quad (6.86)$$

and so on for any number of pipes in the series. Since  $V_2$  and  $V_3$  are proportional to  $V_1$  from Eq. (6.84), Eq. (6.86) is of the form

$$\Delta h_{A \rightarrow B} = \frac{V_1^2}{2g} (\alpha_0 + \alpha_1 f_1 + \alpha_2 f_2 + \alpha_3 f_3) \quad (6.87)$$

where the  $\alpha_i$  are dimensionless constants. If the flow rate is given, we can evaluate the right-hand side and hence the total head loss. If the head loss is given, a little iteration is needed, since  $f_1$ ,  $f_2$ , and  $f_3$  all depend on  $V_1$  through the Reynolds number. Begin by calculating  $f_1$ ,  $f_2$ , and  $f_3$ , assuming fully rough flow, and the solution for  $V_1$  will converge with one or two iterations. EES is ideal for this purpose.

**EXAMPLE 6.17**

Given is a three-pipe series system, as in Fig. 6.24a. The total pressure drop is  $p_A - p_B = 150,000$  Pa, and the elevation drop is  $z_A - z_B = 5$  m. The pipe data are

Pipe	<i>L</i> , m	<i>d</i> , cm	$\epsilon$ , mm	$\epsilon/d$
1	100	8	0.24	0.003
2	150	6	0.12	0.002
3	80	4	0.20	0.005

The fluid is water,  $\rho = 1000$  kg/m<sup>3</sup> and  $\nu = 1.02 \times 10^{-6}$  m<sup>2</sup>/s. Calculate the flow rate  $Q$  in m<sup>3</sup>/h through the system.

**Solution**

The total head loss across the system is

$$\Delta h_{A \rightarrow B} = \frac{p_A - p_B}{\rho g} + z_A - z_B = \frac{150,000}{1000(9.81)} + 5 \text{ m} = 20.3 \text{ m}$$

From the continuity relation (6.84) the velocities are

$$V_2 = \frac{d_1^2}{d_2^2} V_1 = \frac{16}{9} V_1 \quad V_3 = \frac{d_1^2}{d_3^2} V_1 = 4V_1$$

and  $\text{Re}_2 = \frac{V_2 d_2}{V_1 d_1} \text{Re}_1 = \frac{4}{3} \text{Re}_1 \quad \text{Re}_3 = 2\text{Re}_1$

Neglecting minor losses and substituting into Eq. (6.86), we obtain

$$\Delta h_{A \rightarrow B} = \frac{V_1^2}{2g} \left[ 1250f_1 + 2500 \left( \frac{16}{9} \right)^2 f_2 + 2000(4)^2 f_3 \right]$$

or  $20.3 \text{ m} = \frac{V_1^2}{2g} (1250f_1 + 7900f_2 + 32,000f_3)$  (1)

This is the form that was hinted at in Eq. (6.87). It seems to be dominated by the third pipe loss  $32,000f_3$ . Begin by estimating  $f_1$ ,  $f_2$ , and  $f_3$  from the Moody-chart fully rough regime:

$$f_1 = 0.0262 \quad f_2 = 0.0234 \quad f_3 = 0.0304$$

Substitute in Eq. (1) to find  $V_1^2 \approx 2g(20.3)/(33 + 185 + 973)$ . The first estimate thus is  $V_1 = 0.58$  m/s, from which

$$\text{Re}_1 \approx 45,400 \quad \text{Re}_2 = 60,500 \quad \text{Re}_3 = 90,800$$

Hence, from the Moody chart,

$$f_1 = 0.0288 \quad f_2 = 0.0260 \quad f_3 = 0.0314$$

Substitution into Eq. (1) gives the better estimate

$$V_1 = 0.565 \text{ m/s} \quad Q = \frac{1}{4}\pi d_1^2 V_1 = 2.84 \times 10^{-3} \text{ m}^3/\text{s}$$

or

$$Q = 10.2 \text{ m}^3/\text{h}$$

*Ans.*

A second iteration gives  $Q = 10.22 \text{ m}^3/\text{h}$ , a negligible change.

## Pipes in Parallel

The second multiple-pipe system is the *parallel* flow case shown in Fig. 6.24b. Here the pressure drop is the same in each pipe, and the total flow is the sum of the individual flows:

$$\Delta h_{A \rightarrow B} = \Delta h_1 = \Delta h_2 = \Delta h_3 \quad (6.88a)$$

$$Q = Q_1 + Q_2 + Q_3 \quad (6.88b)$$

If the total head loss is known, it is straightforward to solve for  $Q_i$  in each pipe and sum them, as will be seen in Example 6.18. The reverse problem, of determining  $\Sigma Q_i$  when  $h_f$  is known, requires iteration. Each pipe is related to  $h_f$  by the Moody relation  $h_f = f(L/d)(V^2/2g) = fQ^2/C$ , where  $C = \pi^2 g d^5 / 8L$ . Thus each pipe has nearly quadratic nonlinear parallel resistance, and head loss is related to total flow rate by

$$h_f = \frac{Q^2}{(\sum \sqrt{C_i/f_i})^2} \quad \text{where } C_i = \frac{\pi^2 g d_i^5}{8L} \quad (6.89)$$

Since the  $f_i$  vary with Reynolds number and roughness ratio, one begins Eq. (6.89) by guessing values of  $f_i$  (fully rough values are recommended) and calculating a first estimate of  $h_f$ . Then each pipe yields a flow-rate estimate  $Q_i \approx (C_i h_f/f_i)^{1/2}$  and hence a new Reynolds number and a better estimate of  $f_i$ . Then repeat Eq. (6.89) to convergence.

It should be noted that both of these parallel-pipe cases—finding either  $\Sigma Q$  or  $h_f$ —are easily solved by EES if reasonable initial guesses are given.

### EXAMPLE 6.18

Assume that the same three pipes in Example 6.17 are now in parallel with the same total head loss of 20.3 m. Compute the total flow rate  $Q$ , neglecting minor losses.

### Solution

From Eq. (6.88a) we can solve for each  $V$  separately:

$$20.3 \text{ m} = \frac{V_1^2}{2g} 1250f_1 = \frac{V_2^2}{2g} 2500f_2 = \frac{V_3^2}{2g} 2000f_3 \quad (1)$$

Guess fully rough flow in pipe 1:  $f_1 = 0.0262$ ,  $V_1 = 3.49 \text{ m/s}$ ; hence  $\text{Re}_1 = V_1 d_1 / \nu = 273,000$ . From the Moody chart read  $f_1 = 0.0267$ ; recompute  $V_1 = 3.46 \text{ m/s}$ ,  $Q_1 = 62.5 \text{ m}^3/\text{h}$ . [This problem can also be solved from Eq. (6.51).]

Next guess for pipe 2:  $f_2 \approx 0.0234$ ,  $V_2 \approx 2.61$  m/s; then  $Re_2 = 153,000$ , and hence  $f_2 = 0.0246$ ,  $V_2 = 2.55$  m/s,  $Q_2 = 25.9$  m<sup>3</sup>/h.

Finally guess for pipe 3:  $f_3 \approx 0.0304$ ,  $V_3 \approx 2.56$  m/s; then  $Re_3 = 100,000$ , and hence  $f_3 = 0.0313$ ,  $V_3 = 2.52$  m/s,  $Q_3 = 11.4$  m<sup>3</sup>/h.

This is satisfactory convergence. The total flow rate is

$$Q = Q_1 + Q_2 + Q_3 = 62.5 + 25.9 + 11.4 = 99.8 \text{ m}^3/\text{h} \quad \text{Ans.}$$

These three pipes carry 10 times more flow in parallel than they do in series.

EES

This example is ideal for EES. One enters the pipe data ( $L_i$ ,  $d_i$ ,  $\epsilon_i$ ); the fluid properties ( $\rho$ ,  $\mu$ ); the definitions  $Q_i = (\pi/4)d_i^2V_i$ ,  $Re_i = \rho V_i d_i / \mu$ , and  $h_f = f_i (L_i/d_i) (V_i^2/2g)$ ; plus the Colebrook formula (6.48) for each friction factor  $f_i$ . There is no need to use resistance ideas such as Eq. (6.89). Specify that  $f_i > 0$  and  $Re_i > 4000$ . Then, if one enters  $Q = \sum Q_i = (99.8/3600) \text{ m}^3/\text{s}$ , EES quickly solves for  $h_f = 20.3$  m. Conversely, if one enters  $h_f = 20.3$  m, EES solves for  $Q = 99.8 \text{ m}^3/\text{h}$ .

### Three-Reservoir Junction

Consider the third example of a *three-reservoir pipe junction*, as in Fig. 6.24c. If all flows are considered positive toward the junction, then

$$Q_1 + Q_2 + Q_3 = 0 \quad (6.90)$$

which obviously implies that one or two of the flows must be away from the junction. The pressure must change through each pipe so as to give the same static pressure  $p_J$  at the junction. In other words, let the HGL at the junction have the elevation

$$h_J = z_J + \frac{p_J}{\rho g}$$

where  $p_J$  is in gage pressure for simplicity. Then the head loss through each, assuming  $p_1 = p_2 = p_3 = 0$  (gage) at each reservoir surface, must be such that

$$\begin{aligned} \Delta h_1 &= \frac{V_1^2 f_1 L_1}{2g d_1} = z_1 - h_J \\ \Delta h_2 &= \frac{V_2^2 f_2 L_2}{2g d_2} = z_2 - h_J \\ \Delta h_3 &= \frac{V_3^2 f_3 L_3}{2g d_3} = z_3 - h_J \end{aligned} \quad (6.91)$$

We guess the position  $h_J$  and solve Eqs. (6.91) for  $V_1$ ,  $V_2$ , and  $V_3$  and hence  $Q_1$ ,  $Q_2$ , and  $Q_3$ , iterating until the flow rates balance at the junction according to Eq. (6.90). If we guess  $h_J$  too *high*, the sum  $Q_1 + Q_2 + Q_3$  will be *negative* and the remedy is to reduce  $h_J$ , and vice versa.

### EXAMPLE 6.19

Take the same three pipes as in Example 6.17, and assume that they connect three reservoirs at these surface elevations

$$z_1 = 20 \text{ m} \quad z_2 = 100 \text{ m} \quad z_3 = 40 \text{ m}$$

Find the resulting flow rates in each pipe, neglecting minor losses.

### Solution

As a first guess, take  $h_J$  equal to the middle reservoir height,  $z_3 = h_J = 40$  m. This saves one calculation ( $Q_3 = 0$ ) and enables us to get the lay of the land:

Reservoir	$h_J$ , m	$z_i - h_J$ , m	$f_i$	$V_b$ , m/s	$Q_b$ , m <sup>3</sup> /h	$L/d_i$
1	40	-20	0.0267	-3.43	-62.1	1250
2	40	60	0.0241	4.42	45.0	2500
3	40	0		0	0	2000
			$\Sigma Q = -17.1$			

Since the sum of the flow rates toward the junction is negative, we guessed  $h_J$  too high. Reduce  $h_J$  to 30 m and repeat:

Reservoir	$h_J$ , m	$z_i - h_J$ , m	$f_i$	$V_b$ , m/s	$Q_b$ , m <sup>3</sup> /h
1	30	-10	0.0269	-2.42	-43.7
2	30	70	0.0241	4.78	48.6
3	30	10	0.0317	1.76	8.0
		$\Sigma Q = 12.9$			

This is positive  $\Sigma Q$ , and so we can linearly interpolate to get an accurate guess:  $h_J \approx 34.3$  m. Make one final list:

Reservoir	$h_J$ , m	$z_i - h_J$ , m	$f_i$	$V_b$ , m/s	$Q_b$ , m <sup>3</sup> /h
1	34.3	-14.3	0.0268	-2.90	-52.4
2	34.3	65.7	0.0241	4.63	47.1
3	34.3	5.7	0.0321	1.32	6.0
		$\Sigma Q = 0.7$			


This is close enough; hence we calculate that the flow rate is 52.4 m<sup>3</sup>/h toward reservoir 3, balanced by 47.1 m<sup>3</sup>/h away from reservoir 1 and 6.0 m<sup>3</sup>/h away from reservoir 3.

One further iteration with this problem would give  $h_J = 34.53$  m, resulting in  $Q_1 = -52.8$ ,  $Q_2 = 47.0$ , and  $Q_3 = 5.8$  m<sup>3</sup>/h, so that  $\Sigma Q = 0$  to three-place accuracy. Pedagogically speaking, we would then be exhausted.

## Pipe Networks

The ultimate case of a multipipe system is the *piping network* illustrated in Fig. 6.25. This might represent a water supply system for an apartment or subdivision or even a city. This network is quite complex algebraically but follows the same basic rules:

1. The net flow into any junction must be zero.
2. The net pressure change around any closed loop must be zero. In other words, the HGL at each junction must have one and only one elevation.
3. All pressure changes must satisfy the Moody and minor-loss friction correlations.

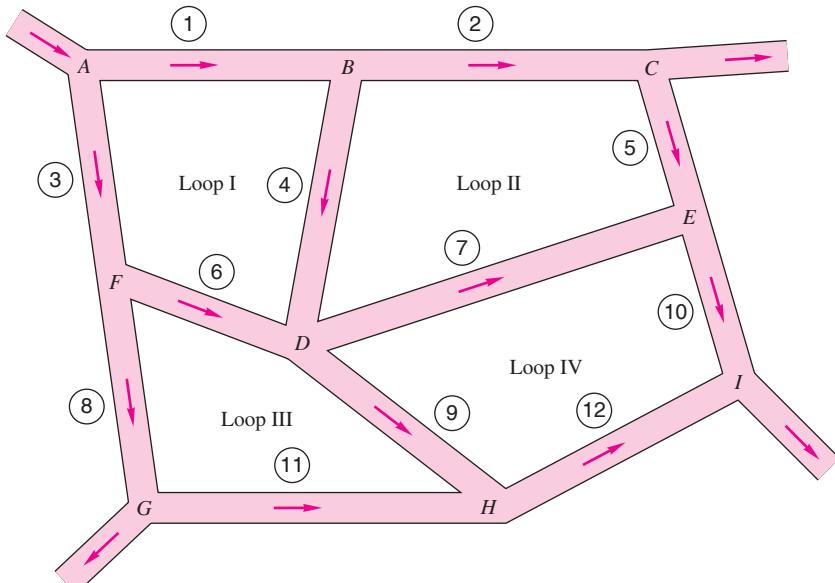

**Fig. 6.25** Schematic of a piping network.

By supplying these rules to each junction and independent loop in the network, one obtains a set of simultaneous equations for the flow rates in each pipe leg and the HGL (or pressure) at each junction. Solution may then be obtained by numerical iteration, as first developed in a hand calculation technique by Prof. Hardy Cross in 1936 [17]. Computer solution of pipe network problems is now quite common and covered in at least one specialized text [18]. Network analysis is quite useful for real water distribution systems if well calibrated with the actual system head loss data.


## 6.11 Experimental Duct Flows: Diffuser Performance

The Moody chart is such a great correlation for tubes of any cross section with any roughness or flow rate that we may be deluded into thinking that the world of internal flow prediction is at our feet. Not so. The theory is reliable only for ducts of constant cross section. As soon as the section varies, we must rely principally on experiment to determine the flow properties. As mentioned many times before, experimentation is a vital part of fluid mechanics.

Literally thousands of papers in the literature report experimental data for specific internal and external viscous flows. We have already seen several examples:

1. Vortex shedding from a cylinder (Fig. 5.2).
2. Drag of a sphere and a cylinder (Fig. 5.3).
3. Hydraulic model of a dam spillway (Fig. 5.9).
4. Rough-wall pipe flows (Fig. 6.12).
5. Secondary flow in ducts (Fig. 6.16).
6. Minor duct loss coefficients (Sec. 6.9).

Chapter 7 will treat a great many more external flow experiments, especially in Sec. 7.6. Here we shall show data for one type of internal flow, the diffuser.

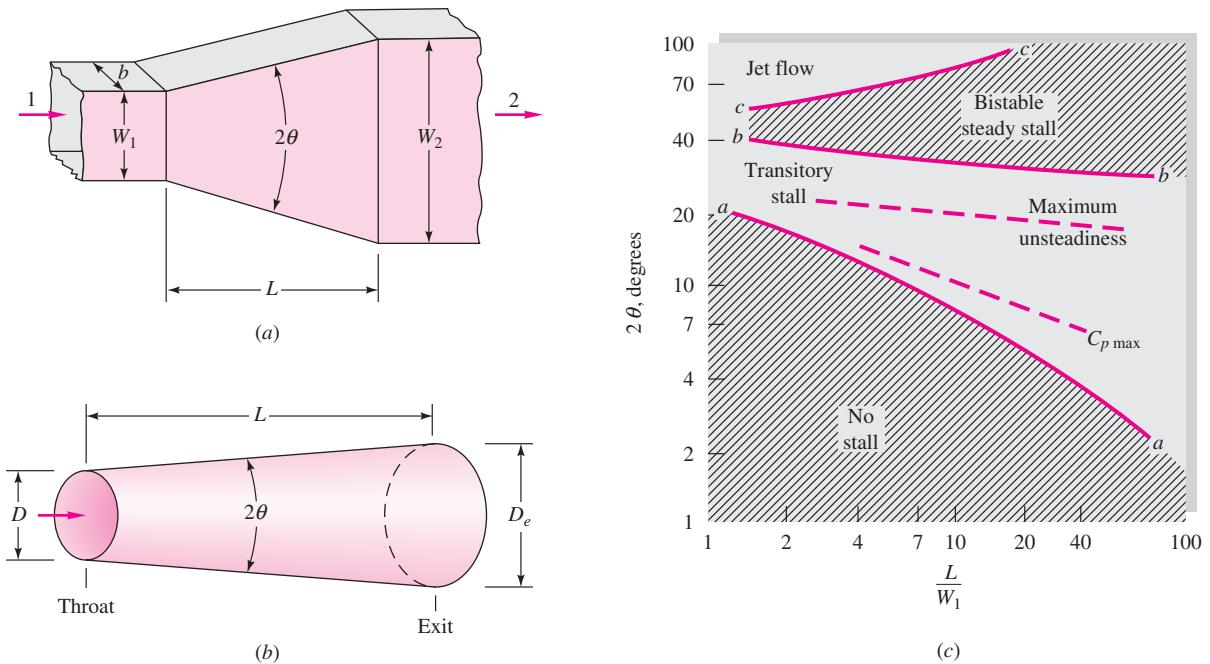

**Fig. 6.26** Diffuser geometry and typical flow regimes: (a) geometry of a flat-walled diffuser; (b) geometry of a conical diffuser; (c) flat diffuser stability map. (From Ref. 14, by permission of Creare, Inc.)

### Diffuser Performance

A diffuser, shown in Fig. 6.26a and b, is an expansion or area increase intended to reduce velocity in order to recover the pressure head of the flow. Rouse and Ince [6] relate that it may have been invented by customers of the early Roman (about 100 A.D.) water supply system, where water flowed continuously and was billed according to pipe size. The ingenious customers discovered that they could increase the flow rate at no extra cost by flaring the outlet section of the pipe.

Engineers have always designed diffusers to increase pressure and reduce kinetic energy of ducted flows, but until about 1950, diffuser design was a combination of art, luck, and vast amounts of empiricism. Small changes in design parameters caused large changes in performance. The Bernoulli equation seemed highly suspect as a useful tool.

Neglecting losses and gravity effects, the incompressible Bernoulli equation predicts that


$$p + \frac{1}{2}\rho V^2 = p_0 = \text{const} \quad (6.92)$$

where  $p_0$  is the stagnation pressure the fluid would achieve if the fluid were slowed to rest ( $V = 0$ ) without losses.

The basic output of a diffuser is the *pressure-recovery coefficient*  $C_p$ , defined as

$$C_p = \frac{p_e - p_t}{p_{0t} - p_t} \quad (6.93)$$

where subscripts  $e$  and  $t$  mean the exit and the throat (or inlet), respectively. Higher  $C_p$  means better performance.

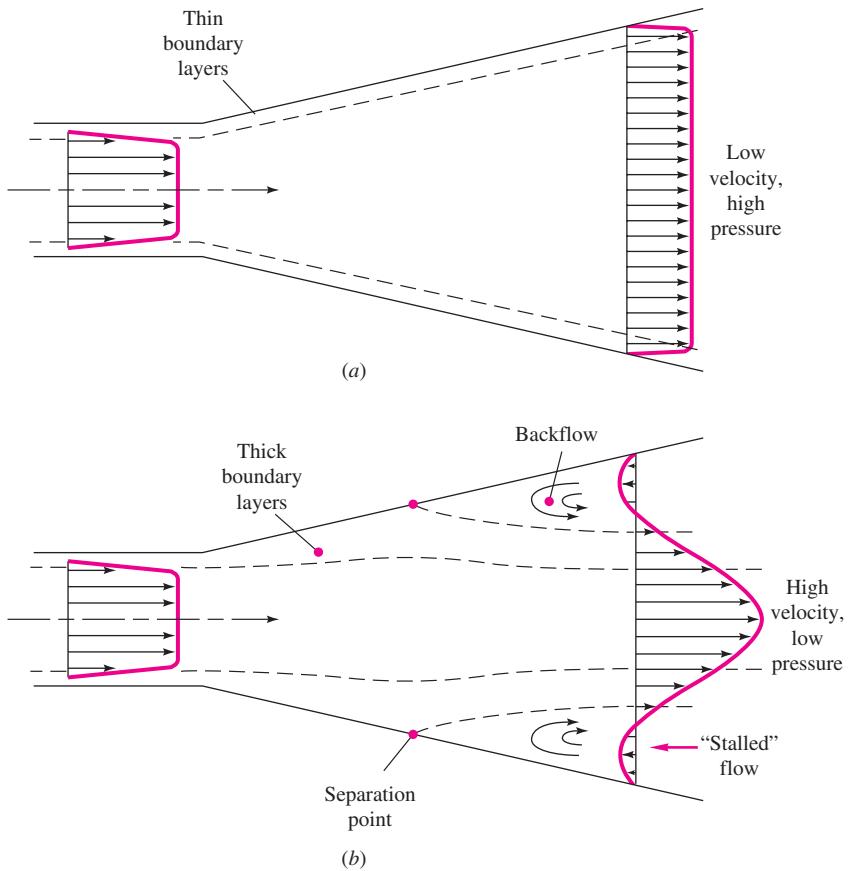

**Fig. 6.27** Diffuser performance:  
(a) ideal pattern with good performance;  
(b) actual measured pattern with boundary layer separation and resultant poor performance.

Consider the flat-walled diffuser in Fig. 6.26a, where section 1 is the inlet and section 2 the exit. Application of Bernoulli's equation (6.92) to this diffuser predicts that

$$p_{01} = p_1 + \frac{1}{2}\rho V_1^2 = p_2 + \frac{1}{2}\rho V_2^2 = p_{02}$$

$$\text{or } C_{p,\text{frictionless}} = 1 - \left( \frac{V_2}{V_1} \right)^2 \quad (6.94)$$

Meanwhile, steady one-dimensional continuity would require that

$$Q = V_1 A_1 = V_2 A_2 \quad (6.95)$$

Combining (6.94) and (6.95), we can write the performance in terms of the *area ratio*  $\text{AR} = A_2/A_1$ , which is a basic parameter in diffuser design:

$$C_p,\text{frictionless} = 1 - (\text{AR})^{-2} \quad (6.96)$$

A typical design would have  $\text{AR} = 5:1$ , for which Eq. (6.96) predicts  $C_p = 0.96$ , or nearly full recovery. But, in fact, measured values of  $C_p$  for this area ratio [14] are only as high as 0.86 and can be as low as 0.24.

The basic reason for the discrepancy is flow separation, as sketched in Fig. 6.27. The increasing pressure in the diffuser is an unfavorable gradient (Sec. 7.5), which

causes the viscous boundary layers to break away from the walls and greatly reduces the performance. Computational fluid dynamics (CFD) can now predict this behavior.

As an added complication to boundary layer separation, the flow patterns in a diffuser are highly variable and were considered mysterious and erratic until 1955, when Kline revealed the structure of these patterns with flow visualization techniques in a simple water channel.

A complete *stability map* of diffuser flow patterns was published in 1962 by Fox and Kline [21], as shown in Fig. 6.26c. There are four basic regions. Below line *aa* there is steady viscous flow, no separation, and moderately good performance. Note that even a very short diffuser will separate, or stall, if its half-angle is greater than  $10^\circ$ .

Between lines *aa* and *bb* is a transitory stall pattern with strongly unsteady flow. Best performance (highest  $C_p$ ) occurs in this region. The third pattern, between *bb* and *cc*, is steady bistable stall from one wall only. The stall pattern may flip-flop from one wall to the other, and performance is poor.

The fourth pattern, above line *cc*, is *jet flow*, where the wall separation is so gross and pervasive that the mainstream ignores the walls and simply passes on through at nearly constant area. Performance is extremely poor in this region.

Dimensional analysis of a flat-walled or conical diffuser shows that  $C_p$  should depend on the following parameters:

1. Any two of the following geometric parameters:
  - a. Area ratio  $AR = A_2/A_1$  or  $(D_e/D)^2$
  - b. Divergence angle  $2\theta$
  - c. Slenderness  $L/W_1$  or  $L/D$
2. Inlet Reynolds number  $Re_t = V_1 W_1 / \nu$  or  $Re_t = V_1 D / \nu$
3. Inlet Mach number  $Ma_t = V_1/a_1$
4. Inlet boundary layer *blockage factor*  $B_t = A_{BL}/A_1$ , where  $A_{BL}$  is the wall area blocked, or displaced, by the retarded boundary layer flow in the inlet (typically  $B_t$  varies from 0.03 to 0.12)


A flat-walled diffuser would require an additional shape parameter to describe its cross section:

5. Aspect ratio  $AS = b/W_1$

Even with this formidable list, we have omitted five possible important effects: inlet turbulence, inlet swirl, inlet profile vorticity, superimposed pulsations, and downstream obstruction, all of which occur in practical machinery applications.

The three most important parameters are  $AR$ ,  $\theta$ , and  $B$ . Typical performance maps for diffusers are shown in Fig. 6.28. For this case of 8 to 9 percent blockage, both the flat-walled and conical types give about the same maximum performance,  $C_p = 0.70$ , but at different divergence angles ( $9^\circ$  flat versus  $4.5^\circ$  conical). Both types fall far short of the Bernoulli estimates of  $C_p = 0.93$  (flat) and 0.99 (conical), primarily because of the blockage effect.

From the data of Ref. 14 we can determine that, in general, performance decreases with blockage and is approximately the same for both flat-walled and conical diffusers,

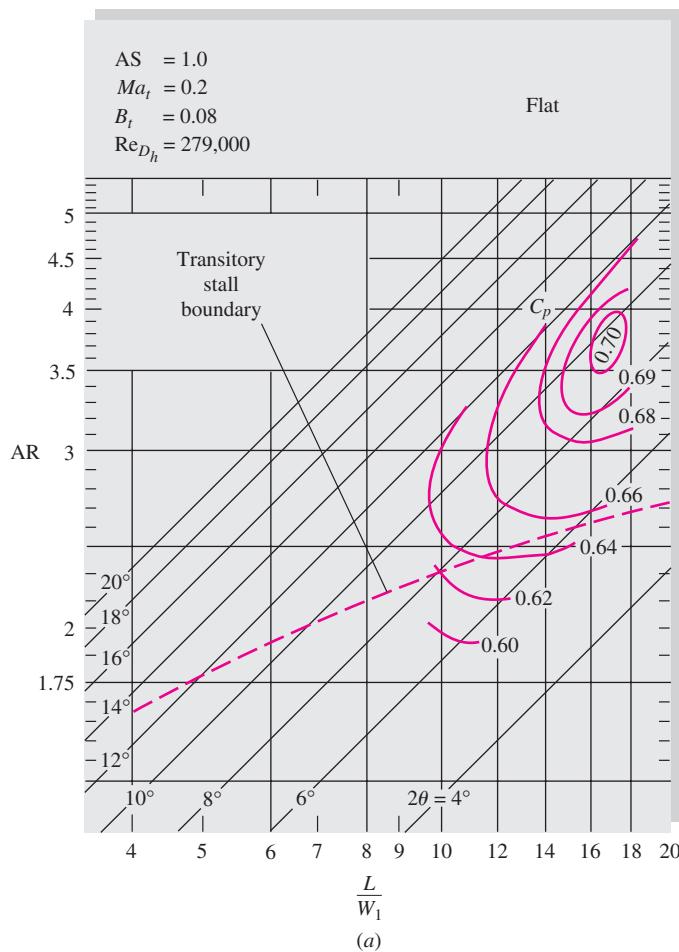


**Fig. 6.28a** Typical performance maps for flat-wall and conical diffusers at similar operating conditions: flat wall. (From Ref. 14, by permission of Creare, Inc.)

as shown in Table 6.6. In all cases, the best conical diffuser is 10 to 80 percent longer than the best flat-walled design. Therefore, if length is limited in the design, the flat-walled design will give the better performance depending on duct cross section.

The experimental design of a diffuser is an excellent example of a successful attempt to minimize the undesirable effects of adverse pressure gradient and flow separation.

**Table 6.6** Maximum Diffuser Performance Data [14]

Inlet blockage $B_t$	Flat-walled		Conical	
	$C_p,\max$	$L/W_1$	$C_p,\max$	$L/d$
0.02	0.86	18	0.83	20
0.04	0.80	18	0.78	22
0.06	0.75	19	0.74	24
0.08	0.70	20	0.71	26
0.10	0.66	18	0.68	28
0.12	0.63	16	0.65	30

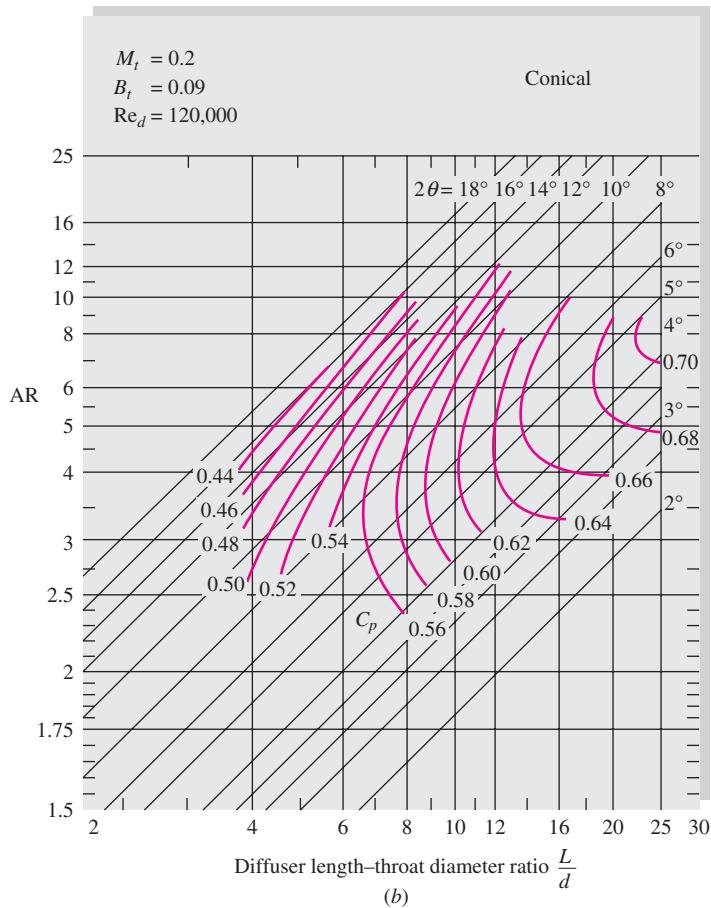

**Fig. 6.28b** Typical performance maps for flat-wall and conical diffusers at similar operating conditions: conical wall. (From Ref. 14, by permission of Creare, Inc.)


## 6.12 Fluid Meters

Almost all practical fluid engineering problems are associated with the need for an accurate flow measurement. There is a need to measure *local* properties (velocity, pressure, temperature, density, viscosity, turbulent intensity), *integrated* properties (mass flow and volume flow), and *global* properties (visualization of the entire flow field). We shall concentrate in this section on velocity and volume flow measurements.

We have discussed pressure measurement in Sec. 2.10. Measurement of other thermodynamic properties, such as density, temperature, and viscosity, is beyond the scope of this text and is treated in specialized books such as Refs. 22 and 23. Global visualization techniques were discussed in Sec. 1.11 for low-speed flows, and the special optical techniques used in high-speed flows are treated in Ref. 34 of Chap. 1. Flow measurement schemes suitable for open-channel and other free-surface flows are treated in Chap. 10.

### Local Velocity Measurements


Velocity averaged over a small region, or point, can be measured by several different physical principles, listed in order of increasing complexity and sophistication:

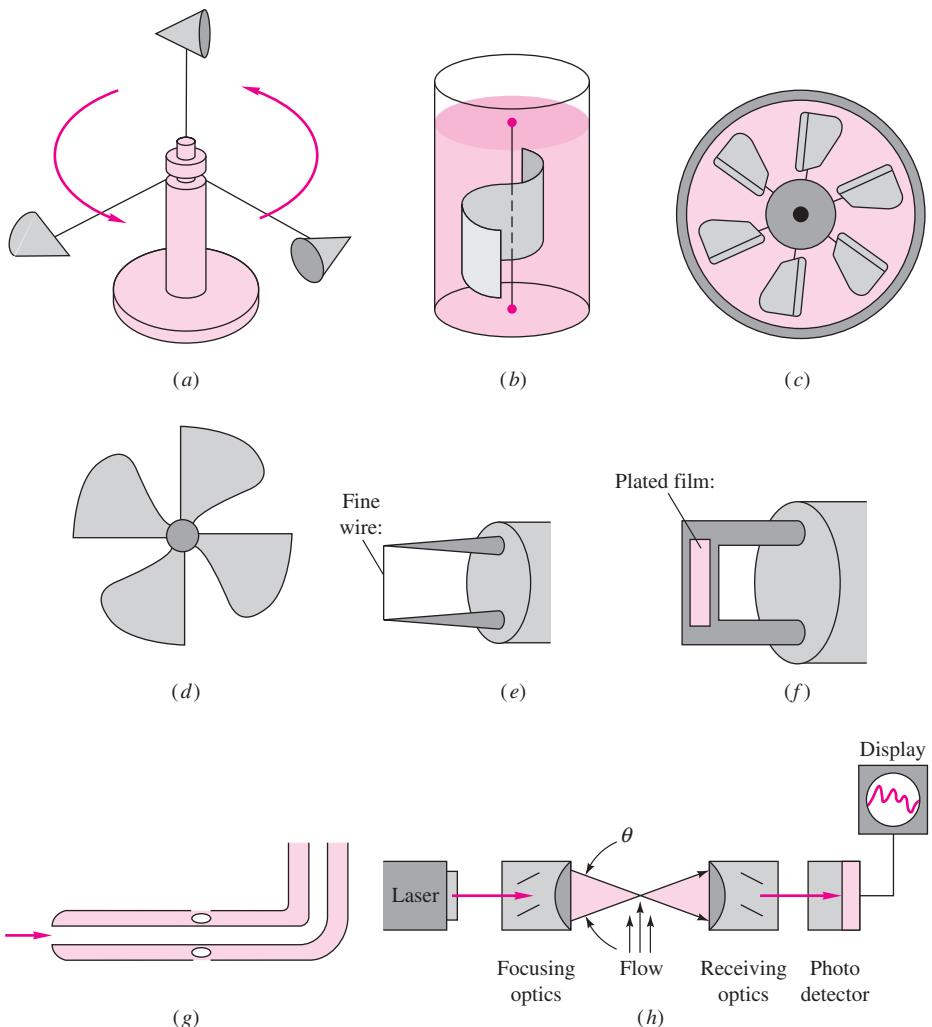

**Fig. 6.29** Eight common velocity meters: (a) three-cup anemometer; (b) Savonius rotor; (c) turbine mounted in a duct; (d) free-propeller meter; (e) hot-wire anemometer; (f) hot-film anemometer; (g) pitot-static tube; (h) laser-doppler anemometer.

1. Trajectory of floats or neutrally buoyant particles.
2. Rotating mechanical devices:
  - a. Cup anemometer.
  - b. Savonius rotor.
  - c. Propeller meter.
  - d. Turbine meter.
3. Pitot-static tube (Fig. 6.30).
4. Electromagnetic current meter.
5. Hot wires and hot films.
6. Laser-doppler anemometer (LDA).

Some of these meters are sketched in Fig. 6.29.

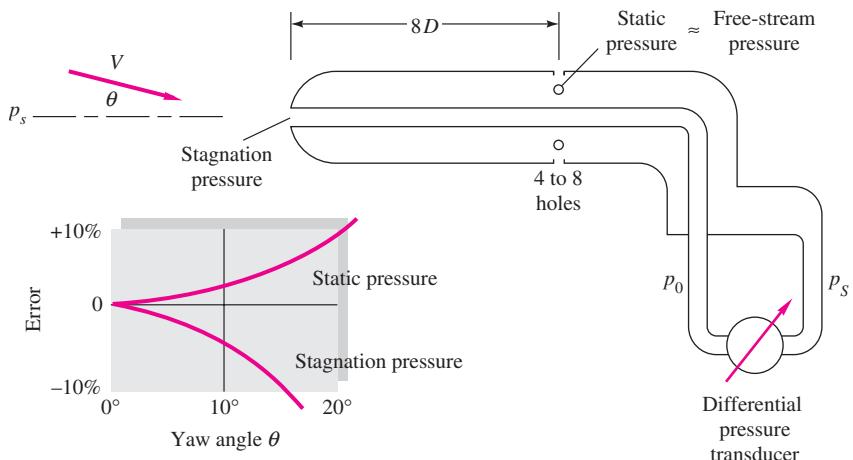

**Fig. 6.30** Pitot-static tube for combined measurement of static and stagnation pressure in a moving stream.

**Floats or Buoyant Particles.** A simple but effective estimate of flow velocity can be found from visible particles entrained in the flow. Examples include flakes on the surface of a channel flow, small neutrally buoyant spheres mixed with a liquid, or hydrogen bubbles. Sometimes gas flows can be estimated from the motion of entrained dust particles. One must establish whether the particle motion truly simulates the fluid motion. Floats are commonly used to track the movement of ocean waters and can be designed to move at the surface, along the bottom, or at any given depth [24]. Many official tidal current charts [25] were obtained by releasing and timing a floating spar attached to a length of string. One can release whole groups of spars to determine a flow pattern.

**Rotating Sensors.** The rotating devices of Fig. 6.29a to d can be used in either gases or liquids, and their rotation rate is approximately proportional to the flow velocity. The cup anemometer (Fig. 6.29a) and Savonius rotor (Fig. 6.29b) always rotate the same way, regardless of flow direction. They are popular in atmospheric and oceanographic applications and can be fitted with a direction vane to align themselves with the flow. The ducted-propeller (Fig. 6.29c) and free-propeller (Fig. 6.29d) meters must be aligned with the flow parallel to their axis of rotation. They can sense reverse flow because they will then rotate in the opposite direction. All these rotating sensors can be attached to counters or sensed by electromagnetic or slip-ring devices for either a continuous or a digital reading of flow velocity. All have the disadvantage of being relatively large and thus not representing a “point.”

**Pitot-Static Tube.** A slender tube aligned with the flow (Figs. 6.29g and 6.30) can measure local velocity by means of a pressure difference. It has sidewall holes to measure the static pressure  $p_s$  in the moving stream and a hole in the front to measure the *stagnation* pressure  $p_0$ , where the stream is decelerated to zero velocity. Instead of measuring  $p_0$  or  $p_s$  separately, it is customary to measure their difference with, say, a transducer, as in Fig. 6.30.

If  $Re_D > 1000$ , where  $D$  is the probe diameter, the flow around the probe is nearly frictionless and Bernoulli’s relation, Eq. (3.54), applies with good accuracy. For incompressible flow

$$p_s + \frac{1}{2}\rho V^2 + \rho g z_s \approx p_0 + \frac{1}{2}\rho(0)^2 + \rho g z_0$$

Assuming that the elevation pressure difference  $\rho g(z_s - z_0)$  is negligible, this reduces to

$$V \approx \left[ 2 \frac{(p_0 - p_s)}{\rho} \right]^{1/2} \quad (6.97)$$

This is the *Pitot formula*, named after the French engineer, Henri de Pitot, who designed the device in 1732.

The primary disadvantage of the pitot tube is that it must be aligned with the flow direction, which may be unknown. For yaw angles greater than  $5^\circ$ , there are substantial errors in both the  $p_0$  and  $p_s$  measurements, as shown in Fig. 6.30. The pitot-static tube is useful in liquids and gases; for gases a compressibility correction is necessary if the stream Mach number is high (Chap. 9). Because of the slow response of the fluid-filled tubes leading to the pressure sensors, it is not useful for unsteady flow measurements. It does resemble a point and can be made small enough to measure, for example, blood flow in arteries and veins. It is not suitable for low-velocity measurement in gases because of the small pressure differences developed. For example, if  $V = 1$  ft/s in standard air, from Eq. (6.97) we compute  $p_0 - p$  equal to only  $0.001 \text{ lbf/ft}^2$  ( $0.048 \text{ Pa}$ ). This is beyond the resolution of most pressure gages.

**Electromagnetic Meter.** If a magnetic field is applied across a conducting fluid, the fluid motion will induce a voltage across two electrodes placed in or near the flow. The electrodes can be streamlined or built into the wall, and they cause little or no flow resistance. The output is very strong for highly conducting fluids such as liquid metals. Seawater also gives good output, and electromagnetic current meters are in common use in oceanography. Even low-conductivity freshwater can be measured by amplifying the output and insulating the electrodes. Commercial instruments are available for most liquid flows but are relatively costly. Electromagnetic flowmeters are treated in Ref. 26.

**Hot-Wire Anemometer.** A very fine wire ( $d = 0.01 \text{ mm}$  or less) heated between two small probes, as in Fig. 6.29e, is ideally suited to measure rapidly fluctuating flows such as the turbulent boundary layer. The idea dates back to work by L. V. King in 1914 on heat loss from long thin cylinders. If electric power is supplied to heat the cylinder, the loss varies with flow velocity across the cylinder according to *Kings' law*

$$q = I^2 R \approx a + b(\rho V)^n \quad (6.98)$$

where  $n \approx \frac{1}{3}$  at very low Reynolds numbers and equals  $\frac{1}{2}$  at high Reynolds numbers. The hot wire normally operates in the high-Reynolds-number range but should be calibrated in each situation to find the best-fit  $a$ ,  $b$ , and  $n$ . The wire can be operated either at constant current  $I$ , so that resistance  $R$  is a measure of  $V$ , or at constant resistance  $R$  (constant temperature), with  $I$  a measure of velocity. In either case, the output is a nonlinear function of  $V$ , and the equipment should contain a *linearizer* to produce convenient velocity data. Many varieties of commercial hot-wire equipment are available, as are do-it-yourself designs [27]. Excellent detailed discussions of the hot wire are given in Ref. 28.

Because of its frailty, the hot wire is not suited to liquid flows, whose high density and entrained sediment will knock the wire right off. A more stable yet quite sensitive alternative for liquid flow measurement is the hot-film anemometer (Fig. 6.29f). A thin metallic film, usually platinum, is plated onto a relatively thick support, which

can be a wedge, a cone, or a cylinder. The operation is similar to the hot wire. The cone gives best response but is liable to error when the flow is yawed to its axis.

Hot wires can easily be arranged in groups to measure two- and three-dimensional velocity components.

**Laser-Doppler Anemometer.** In the LDA a laser beam provides highly focused, coherent monochromatic light that is passed through the flow. When this light is scattered from a moving particle in the flow, a stationary observer can detect a change, or *doppler shift*, in the frequency of the scattered light. The shift  $\Delta f$  is proportional to the velocity of the particle. There is essentially zero disturbance of the flow by the laser.

Figure 6.29*h* shows the popular dual-beam mode of the LDA. A focusing device splits the laser into two beams, which cross the flow at an angle  $\theta$ . Their intersection, which is the measuring volume or resolution of the measurement, resembles an ellipsoid about 0.5 mm wide and 0.1 mm in diameter. Particles passing through this measuring volume scatter the beams; they then pass through receiving optics to a photodetector, which converts the light to an electric signal. A signal processor then converts electric frequency to a voltage that can be either displayed or stored. If  $\lambda$  is the wavelength of the laser light, the measured velocity is given by

$$V = \frac{\lambda \Delta f}{2 \sin(\theta/2)} \quad (6.99)$$

Multiple components of velocity can be detected by using more than one photodetector and other operating modes. Either liquids or gases can be measured as long as scattering particles are present. In liquids, normal impurities serve as scatterers, but gases may have to be seeded. The particles may be as small as the wavelength of the light. Although the measuring volume is not as small as with a hot wire, the LDA is capable of measuring turbulent fluctuations.

The advantages of the LDA are as follows:

1. No disturbance of the flow.
2. High spatial resolution of the flow field.
3. Velocity data that are independent of the fluid thermodynamic properties.
4. An output voltage that is linear with velocity.
5. No need for calibration.

The disadvantages are that both the apparatus and the fluid must be transparent to light and that the cost is high (a basic system shown in Fig. 6.29*h* begins at about \$50,000).

Once installed, an LDA can map the entire flow field in minutest detail. To truly appreciate the power of the LDA, one should examine, for instance, the amazingly detailed three-dimensional flow profiles measured by Eckardt [29] in a high-speed centrifugal compressor impeller. Extensive discussions of laser velocimetry are given in Refs. 38 and 39.

**Particle Image Velocimetry.** This popular new idea, called PIV for short, measures not just a single point but instead maps the entire field of flow. An illustration was shown in Fig. 1.17*b*. The flow is seeded with neutrally buoyant particles. A planar laser light sheet across the flow is pulsed twice and photographed twice. If  $\Delta r$  is the particle displacement vector over a short time  $\Delta t$ , an estimate of its velocity is  $\mathbf{V} \approx \Delta \mathbf{r}/\Delta t$ .

A dedicated computer applies this formula to a whole cloud of particles and thus maps the flow field. One can also use the data to calculate velocity gradient and vorticity fields. Since the particles all look alike, other cameras may be needed to identify them. Three-dimensional velocities can be measured by two cameras in a stereoscopic arrangement. The PIV method is not limited to stop-action. New high-speed cameras (up to 10,000 frames per second) can record movies of unsteady flow fields. For further details, see the monograph by M. Raffel [51].

### EXAMPLE 6.20

The pitot-static tube of Fig. 6.30 uses mercury as a manometer fluid. When it is placed in a water flow, the manometer height reading is  $h = 8.4$  in. Neglecting yaw and other errors, what is the flow velocity  $V$  in ft/s?

#### Solution

From the two-fluid manometer relation (2.33), with  $z_A = z_2$ , the pressure difference is related to  $h$  by

$$p_0 - p_s = (\gamma_M - \gamma_w)h$$

Taking the specific weights of mercury and water from Table 2.1, we have

$$p_0 - p_s = (846 - 62.4 \text{ lbf/ft}^3) \frac{8.4}{12} \text{ ft} = 549 \text{ lbf/ft}^2$$

The density of water is  $62.4/32.2 = 1.94$  slugs/ft $^3$ . Introducing these values into the pitot-static formula (6.97), we obtain

$$V = \left[ \frac{2(549 \text{ lbf/ft}^2)}{1.94 \text{ slugs/ft}^3} \right]^{1/2} = 23.8 \text{ ft/s} \quad \text{Ans.}$$

Since this is a low-speed flow, no compressibility correction is needed.

## Volume Flow Measurements

It is often desirable to measure the integrated mass, or volume flow, passing through a duct. Accurate measurement of flow is vital in billing customers for a given amount of liquid or gas passing through a duct. The different devices available to make these measurements are discussed in great detail in the ASME text on fluid meters [30]. These devices split into two classes: mechanical instruments and head loss instruments.

The mechanical instruments measure actual mass or volume of fluid by trapping it and counting it. The various types of measurement are

1. Mass measurement
  - a. Weighing tanks
  - b. Tilting traps
2. Volume measurement
  - a. Volume tanks
  - b. Reciprocating pistons

- c. Rotating slotted rings
- d. Nutating disc
- e. Sliding vanes
- f. Gear or lobed impellers
- g. Reciprocating bellows
- h. Sealed-drum compartments

The last three of these are suitable for gas flow measurement.

The head loss devices obstruct the flow and cause a pressure drop, which is a measure of flux:


- 1. Bernoulli-type devices
  - a. Thin-plate orifice
  - b. Flow nozzle
  - c. Venturi tube
- 2. Friction loss devices
  - a. Capillary tube
  - b. Porous plug

The friction loss meters cause a large nonrecoverable head loss and obstruct the flow too much to be generally useful.


Six other widely used meters operate on different physical principles:

- 1. Turbine meter
- 2. Vortex meter
- 3. Ultrasonic flowmeter
- 4. Rotameter
- 5. Coriolis mass flowmeter
- 6. Laminar flow element

**Nutating Disc Meter.** For measuring liquid *volumes*, as opposed to volume rates, the most common devices are the nutating disc and the turbine meter. Figure 6.31 shows

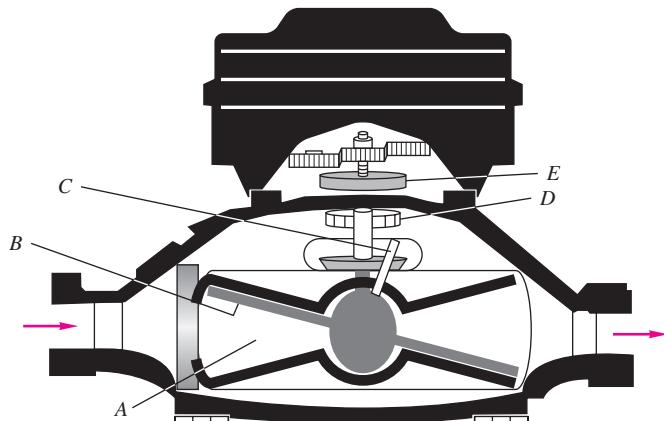

**Fig. 6.31** Cutaway sketch of a nutating disc fluid meter. *A*: metered-volume chamber; *B*: nutating disc; *C*: rotating spindle; *D*: drive magnet; *E*: magnetic counter sensor. (Courtesy of Badger Meter, Inc., Milwaukee, Wisconsin.)

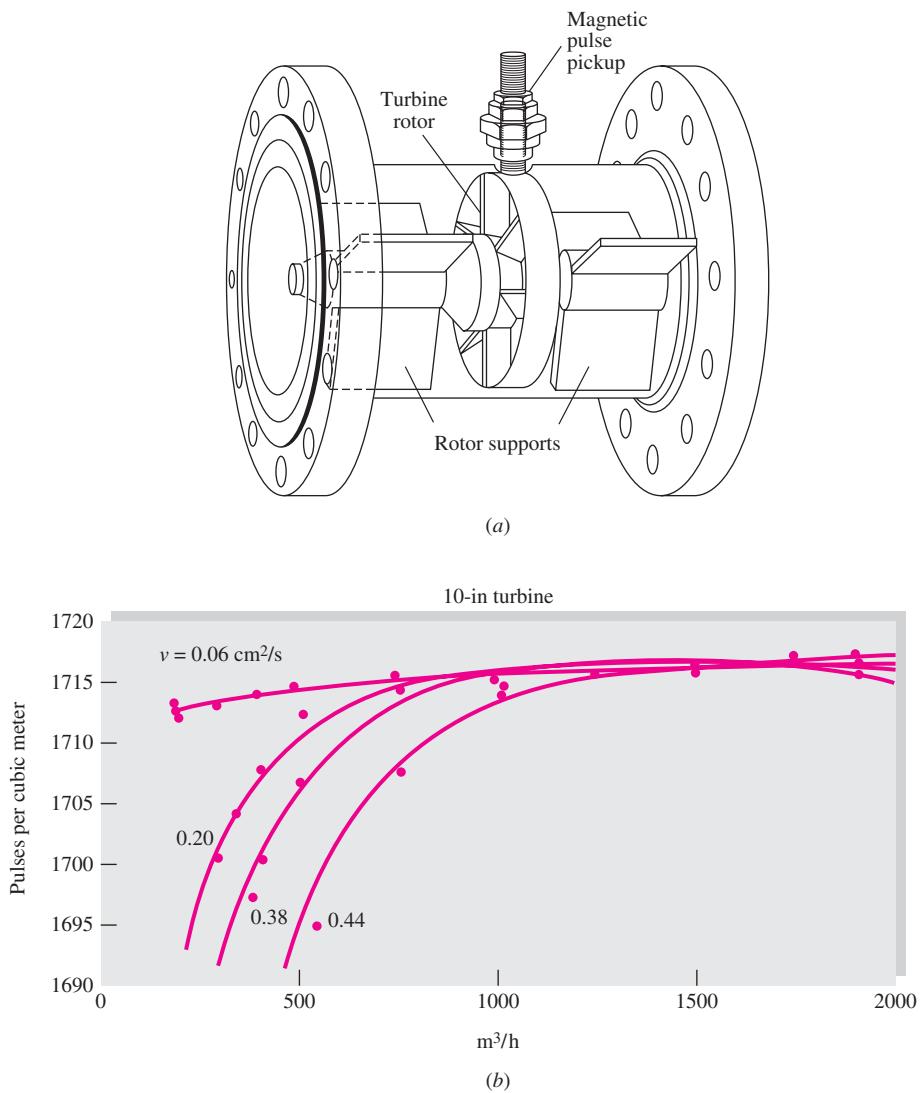

**Fig. 6.32** The turbine meter widely used in the oil, gas, and water supply industries: (a) basic design; (b) typical calibration curve for a range of crude oils. (Daniel Industries, Houston, TX.)

a cutaway sketch of a *nuttating disc meter*, widely used in both water and gasoline delivery systems. The mechanism is clever and perhaps beyond the writer's capability to explain. The metering chamber is a slice of a sphere and contains a rotating disc set at an angle to the incoming flow. The fluid causes the disc to *nuttate* (spin eccentrically), and one revolution corresponds to a certain fluid volume passing through. Total volume is obtained by counting the number of revolutions.

**Turbine Meter.** The turbine meter, sometimes called a *propeller meter*, is a freely rotating propeller that can be installed in a pipeline. A typical design is shown in Fig. 6.32a. There are flow straighteners upstream of the rotor, and the rotation



**Fig. 6.33** A Commercial handheld wind velocity turbine meter. (*Courtesy of Nielsen-Kellerman Company.*)

is measured by electric or magnetic pickup of pulses caused by passage of a point on the rotor. The rotor rotation is approximately proportional to the volume flow in the pipe.

Like the nutating disc, a major advantage of the turbine meter is that each pulse corresponds to a finite incremental volume of fluid, and the pulses are digital and can be summed easily. Liquid flow turbine meters have as few as two blades and produce a constant number of pulses per unit fluid volume over a 5:1 flow rate range with  $\pm 0.25$  percent accuracy. Gas meters need many blades to produce sufficient torque and are accurate to  $\pm 1$  percent.


Since turbine meters are very individualistic, flow calibration is an absolute necessity. A typical liquid meter calibration curve is shown in Fig. 6.32b. Researchers attempting to establish universal calibration curves have met with little practical success as a result of manufacturing variabilities.

Turbine meters can also be used in unconfined flow situations, such as winds or ocean currents. They can be compact, even microsize with two or three component directions. Figure 6.33 illustrates a handheld wind velocity meter that uses a seven-bladed turbine with a calibrated digital output. The accuracy of this device is quoted at  $\pm 2$  percent.

**Vortex Flowmeters.** Recall from Fig. 5.2 that a bluff body placed in a uniform crossflow sheds alternating vortices at a nearly uniform Strouhal number  $St = fL/U$ , where  $U$  is the approach velocity and  $L$  is a characteristic body width. Since  $L$  and  $St$  are constant, this means that the shedding frequency is proportional to velocity:

$$f = (\text{const})(U) \quad (6.100)$$

The vortex meter introduces a shedding element across a pipe flow and picks up the shedding frequency downstream with a pressure, ultrasonic, or heat transfer type of sensor. A typical design is shown in Fig. 6.34.

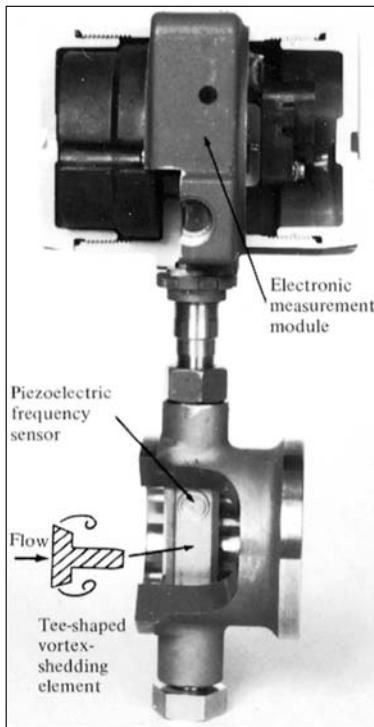


**Fig. 6.34** A vortex flowmeter.  
(Courtesy of Invensys p/c.)

The advantages of a vortex meter are as follows:

1. Absence of moving parts.
2. Accuracy to  $\pm 1$  percent over a wide flow rate range (up to 100:1).
3. Ability to handle very hot or very cold fluids.
4. Requirement of only a short pipe length.
5. Calibration insensitive to fluid density or viscosity.

For further details see Ref. 40.

**Ultrasonic Flowmeters.** The sound-wave analog of the laser velocimeter of Fig. 6.29*h* is the ultrasonic flowmeter. Two examples are shown in Fig. 6.35. The pulse-type flowmeter is shown in Fig. 6.35*a*. Upstream piezoelectric transducer *A* is excited with a short sonic pulse that propagates across the flow to downstream transducer *B*. The arrival at *B* triggers another pulse to be created at *A*, resulting in a regular pulse frequency  $f_A$ . The same process is duplicated in the reverse direction from *B* to *A*, creating frequency  $f_B$ . The difference  $f_A - f_B$  is proportional to the flow rate. Figure 6.35*b* shows a doppler-type arrangement, where sound waves from transmitter *T* are scattered by particles or contaminants in the flow to receiver *R*. Comparison of the two signals reveals a doppler frequency shift that is proportional to the flow rate. Ultrasonic meters are nonintrusive and can be directly attached to pipe flows in the field

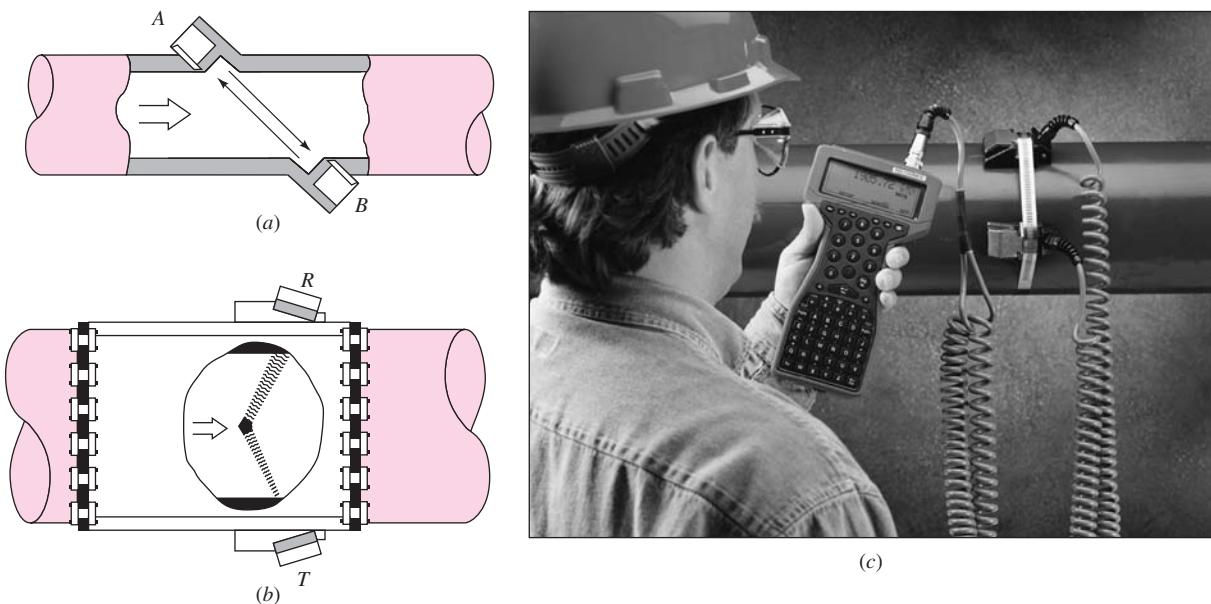

**Fig. 6.35** Ultrasonic flowmeters: (a) pulse type; (b) doppler-shift type (from Ref. 41); (c) a portable noninvasive installation (Courtesy of Thermo Polysonics, Houston, TX.)


(Fig. 6.35c). Their quoted uncertainty of  $\pm 1$  to 2 percent can rise to  $\pm 5$  percent or more due to irregularities in velocity profile, fluid temperature, or Reynolds number. For further details see Ref. 41.

**Rotameter.** The variable-area transparent *rotameter* of Fig. 6.36 has a float that, under the action of flow, rises in the vertical tapered tube and takes a certain equilibrium position for any given flow rate. A student exercise for the forces on the float would yield the approximate relation

$$Q = C_d A_a \left( \frac{2W_{\text{net}}}{A_{\text{float}} \rho_{\text{fluid}}} \right)^{1/2} \quad (6.101)$$

where  $W_{\text{net}}$  is the float's net weight in the fluid,  $A_a = A_{\text{tube}} - A_{\text{float}}$  is the annular area between the float and the tube, and  $C_d$  is a dimensionless discharge coefficient of order unity, for the annular constricted flow. For slightly tapered tubes,  $A_a$  varies nearly linearly with the float position, and the tube may be calibrated and marked with a flow rate scale, as in Fig. 6.36. The rotameter thus provides a readily visible measure of the flow rate. Capacity may be changed by using different-sized floats. Obviously the tube must be vertical, and the device does not give accurate readings for fluids containing high concentrations of bubbles or particles.

**Coriolis Mass Flowmeter.** Most commercial meters measure *volume* flow, with mass flow then computed by multiplying by the nominal fluid density. An attractive modern alternative is a *mass* flowmeter, which operates on the principle of the Coriolis

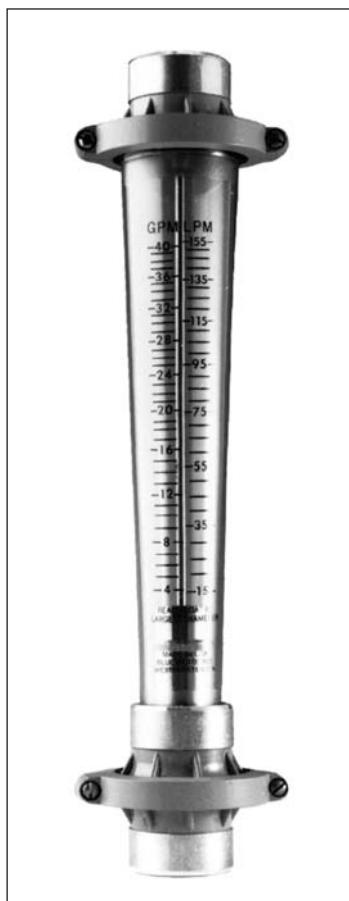

**Fig. 6.36** A commercial rotameter. The float rises in the tapered tube to an equilibrium position, which is a measure of the fluid flow rate. (*Courtesy of Blue White Industries, Huntington Beach, CA.*)


acceleration associated with noninertial coordinates [recall Fig. 3.11 and the Coriolis term  $2\Omega \times V$  in Eq. (3.48)]. The output of the meter is directly proportional to mass flow.

Figure 6.37 is a schematic of a Coriolis device, to be inserted into a piping system. The flow enters a double-loop, double-tube arrangement, which is electromagnetically vibrated at a high natural frequency (amplitude < 1 mm and frequency > 100 Hz). The up flow induces inward loop motion, while the down flow creates outward loop motion, both due to the Coriolis effect. Sensors at both ends register a phase difference that is proportional to mass flow. Quoted accuracy is approximately  $\pm 0.2$  percent of full scale.


**Laminar Flow Element.** In many, perhaps most, commercial flowmeters, the flow through the meter is turbulent and the variation of flow rate with pressure drop is nonlinear. In laminar duct flow, however,  $Q$  is linearly proportional to  $\Delta p$ , as in Eq. (6.12):  $Q = [\pi R^4/(8\mu L)] \Delta p$ . Thus a *laminar* flow sensing element is attractive, since its calibration will be linear. To ensure laminar flow for what otherwise would be a turbulent condition, all or part of the fluid is directed into small passages, each of which has a low (laminar) Reynolds number. A honeycomb is a popular design.

Figure 6.38 uses axial flow through a narrow annulus to effect laminar flow. The theory again predicts  $Q \propto \Delta p$ , as in Eq. (6.73). However, the flow is very sensitive to passage size; for example, halving the annulus clearance increases  $\Delta p$  more than eight times. Careful calibration is thus necessary. In Fig. 6.38 the laminar flow concept has been synthesized into a complete mass flow system, with temperature control, differential pressure measurement, and a microprocessor all self-contained. The accuracy of this device is rated at  $\pm 0.2$  percent.

**Bernoulli Obstruction Theory.** Consider the generalized flow obstruction shown in Fig. 6.39. The flow in the basic duct of diameter  $D$  is forced through an obstruction

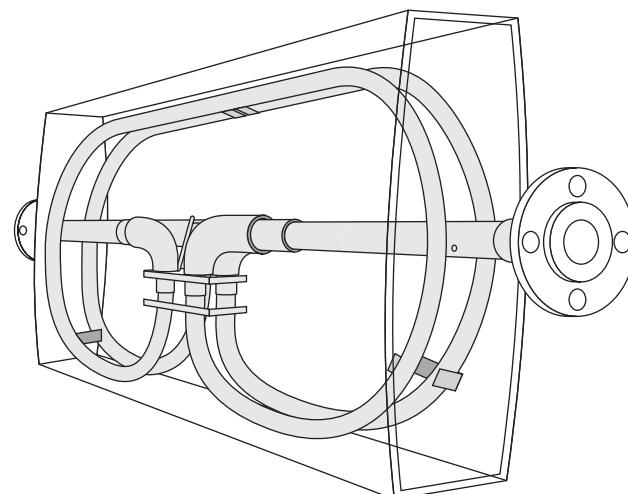

**Fig. 6.37** A Coriolis mass flowmeter. (*Courtesy of ABB Instrumentation, Inc.*)

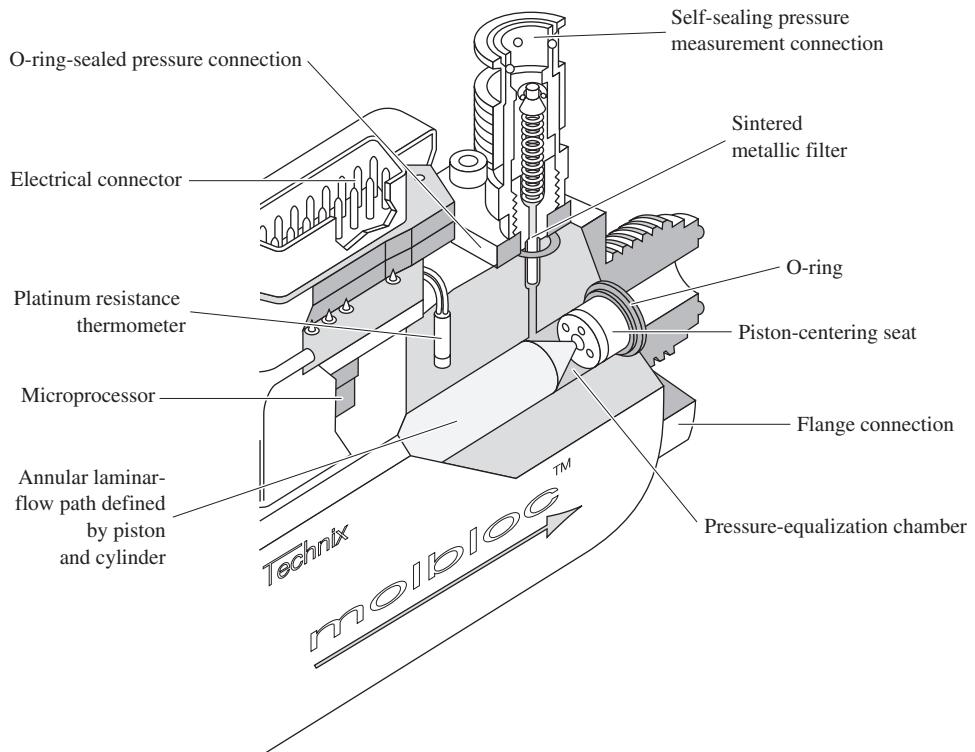

**Fig. 6.38** A complete flowmeter system using a laminar flow element (in this case a narrow annulus). The flow rate is linearly proportional to the pressure drop. (Courtesy of Martin Girard, DH Instruments, Inc.)

of diameter  $d$ ; the  $\beta$  ratio of the device is a key parameter:

$$\beta = \frac{d}{D} \quad (6.102)$$

After leaving the obstruction, the flow may neck down even more through a vena contracta of diameter  $D_2 < d$ , as shown. Apply the Bernoulli and continuity equations for incompressible steady frictionless flow to estimate the pressure change:


$$\text{Continuity:} \quad Q = \frac{\pi}{4} D^2 V_1 = \frac{\pi}{4} D_2^2 V_2$$

$$\text{Bernoulli:} \quad p_0 + \frac{1}{2} \rho V_1^2 = p_2 + \frac{1}{2} \rho V_2^2$$

Eliminating  $V_1$ , we solve these for  $V_2$  or  $Q$  in terms of the pressure change  $p_1 - p_2$ :

$$\frac{Q}{A_2} = V_2 \approx \left[ \frac{2(p_1 - p_2)}{\rho(1 - D_2^4/D^4)} \right]^{1/2} \quad (6.103)$$

But this is surely inaccurate because we have neglected friction in a duct flow, where we know friction will be very important. Nor do we want to get into the business of measuring vena contracta ratios  $D_2/d$  for use in (6.103). Therefore we assume that

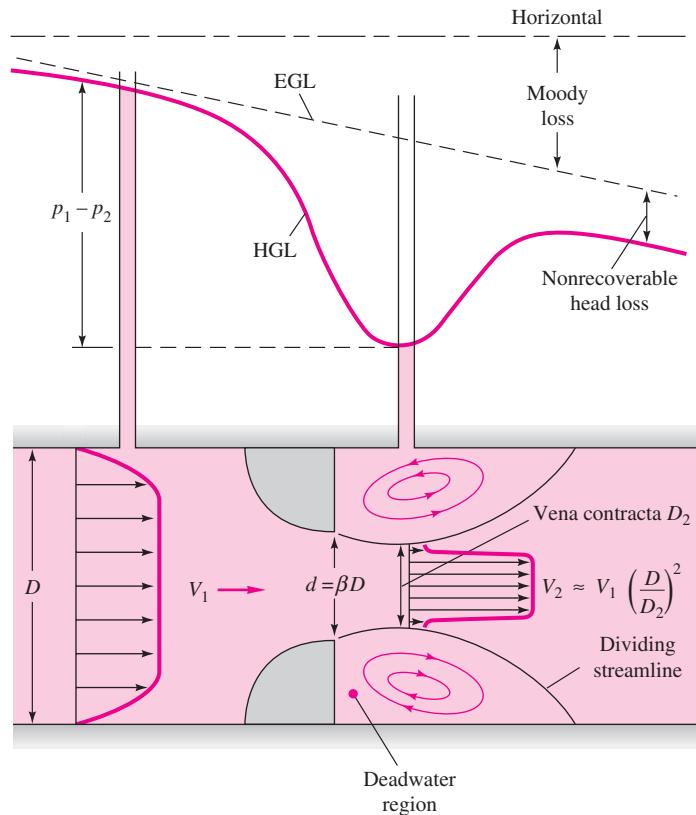

**Fig. 6.39** Velocity and pressure change through a generalized Bernoulli obstruction meter.

$D_2/D \approx \beta$  and then calibrate the device to fit the relation

$$Q = A_t V_t = C_d A_t \left[ \frac{2(p_1 - p_2)/\rho}{1 - \beta^4} \right]^{1/2} \quad (6.104)$$

where subscript  $t$  denotes the throat of the obstruction. The dimensionless *discharge coefficient*  $C_d$  accounts for the discrepancies in the approximate analysis. By dimensional analysis for a given design we expect


$$C_d = f(\beta, \text{Re}_D) \quad \text{where} \quad \text{Re}_D = \frac{V_1 D}{\nu} \quad (6.105)$$

The geometric factor involving  $\beta$  in (6.104) is called the *velocity-of-approach factor*:

$$E = (1 - \beta^4)^{-1/2} \quad (6.106)$$

One can also group  $C_d$  and  $E$  in Eq. (6.104) to form the dimensionless *fwi coefficient*  $\alpha$ :

$$\alpha = C_d E = \frac{C_d}{(1 - \beta^4)^{1/2}} \quad (6.107)$$

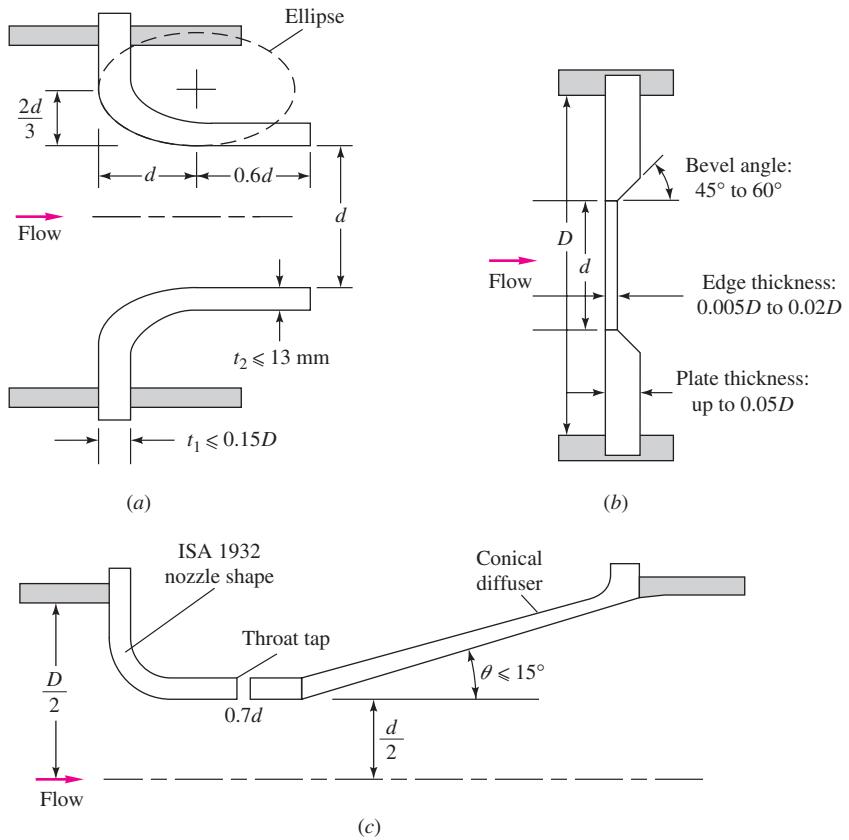

**Fig. 6.40** Standard shapes for the three primary Bernoulli obstruction-type meters: (a) long-radius nozzle; (b) thin-plate orifice; (c) venturi nozzle. (Based on data from the International Organization for Standardization.)

Thus Eq. (6.104) can be written in the equivalent form

$$Q = \alpha A_t \left[ \frac{2(p_1 - p_2)}{\rho} \right]^{1/2} \quad (6.108)$$

Obviously the flow coefficient is correlated in the same manner:

$$\alpha = f(\beta, \text{Re}_D) \quad (6.109)$$

Occasionally one uses the throat Reynolds number instead of the approach Reynolds number:

$$\text{Re}_d = \frac{V_t d}{\nu} = \frac{\text{Re}_D}{\beta} \quad (6.110)$$


Since the design parameters are assumed known, the correlation of  $\alpha$  from Eq. (6.109) or of  $C_d$  from Eq. (6.105) is the desired solution to the fluid metering problem.

The mass flow is related to  $Q$  by

$$\dot{m} = \rho Q \quad (6.111)$$

and is thus correlated by exactly the same formulas.

Figure 6.40 shows the three basic devices recommended for use by the International Organization for Standardization (ISO) [31]: the orifice, the nozzle, and the venturi tube.

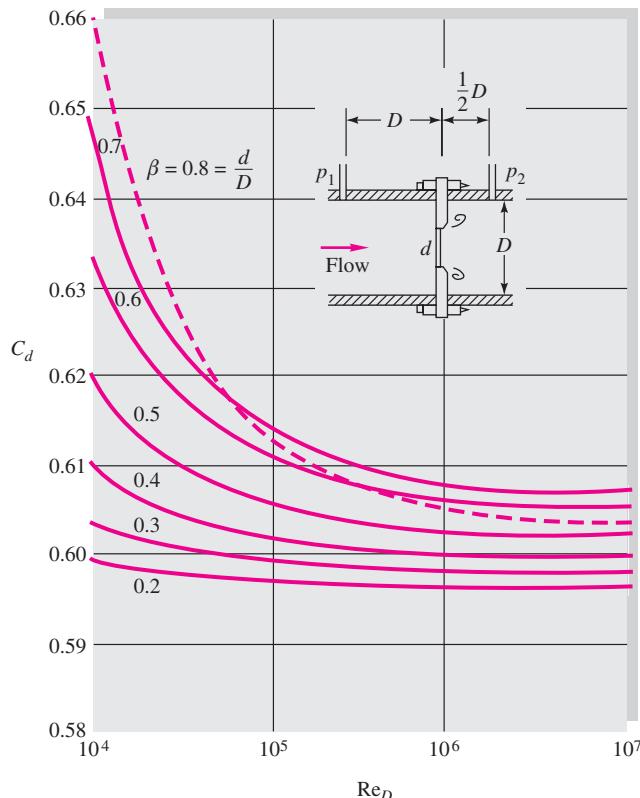

**Fig. 6.41** Discharge coefficient for a thin-plate orifice with  $D: \frac{1}{2}D$  taps, plotted from Eqs. (6.112) and (6.113b).

**Thin-Plate Orifice.** The thin-plate orifice, Fig. 6.40b, can be made with  $\beta$  in the range of 0.2 to 0.8, except that the hole diameter  $d$  should not be less than 12.5 mm. To measure  $p_1$  and  $p_2$ , three types of tappings are commonly used:

1. Corner taps where the plate meets the pipe wall.
2.  $D: \frac{1}{2}D$  taps: pipe-wall taps at  $D$  upstream and  $\frac{1}{2}D$  downstream.
3. Flange taps: 1 in (25 mm) upstream and 1 in (25 mm) downstream of the plate, regardless of the size  $D$ .

Types 1 and 2 approximate geometric similarity, but since the flange taps 3 do not, they must be correlated separately for every single size of pipe in which a flange-tap plate is used [30, 31].

Figure 6.41 shows the discharge coefficient of an orifice with  $D: \frac{1}{2}D$  or type 2 taps in the Reynolds number range  $Re_D = 10^4$  to  $10^7$  of normal use. Although detailed charts such as Fig. 6.41 are available for designers [30], the ASME recommends use of the curve-fit formulas developed by the ISO [31]. The basic form of the curve fit is [42]

$$C_d = f(\beta) + 91.71\beta^{2.5}Re_D^{-0.75} + \frac{0.09\beta^4}{1 - \beta^4}F_1 - 0.0337\beta^3F_2 \quad (6.112)$$

where  $f(\beta) = 0.5959 + 0.0312\beta^{2.1} - 0.184\beta^8$

The correlation factors  $F_1$  and  $F_2$  vary with tap position:

$$\text{Corner taps: } F_1 = 0 \quad F_2 = 0 \quad (6.113a)$$

$$\text{D: } \frac{1}{2}D \text{ taps: } F_1 = 0.4333 \quad F_2 = 0.47 \quad (6.113b)$$

$$\text{Flange taps: } F_2 = \frac{1}{D \text{ (in)}} \quad F_1 = \begin{cases} \frac{1}{D \text{ (in)}} & D > 2.3 \text{ in} \\ 0.4333 & 2.0 \leq D \leq 2.3 \text{ in} \end{cases} \quad (6.113c)$$

Note that the flange taps (6.113c), not being geometrically similar, use raw diameter in inches in the formula. The constants will change if other diameter units are used. We cautioned against such dimensional formulas in Example 1.4 and Eq. (5.17) and give Eq. (6.113c) only because flange taps are widely used in the United States.

**Flow Nozzle.** The flow nozzle comes in two types, a long-radius type shown in Fig. 6.40a and a short-radius type (not shown) called the ISA 1932 nozzle [30, 31]. The flow nozzle, with its smooth rounded entrance convergence, practically eliminates the vena contracta and gives discharge coefficients near unity. The nonrecoverable loss is still large because there is no diffuser provided for gradual expansion.


The ISO recommended correlation for long-radius-nozzle discharge coefficient is

$$C_d \approx 0.9965 - 0.00653\beta^{1/2}\left(\frac{10^6}{Re_D}\right)^{1/2} = 0.9965 - 0.00653\left(\frac{10^6}{Re_d}\right)^{1/2} \quad (6.114)$$

The second form is independent of the  $\beta$  ratio and is plotted in Fig. 6.42. A similar ISO correlation is recommended for the short-radius ISA 1932 flow nozzle:

$$C_d \approx 0.9900 - 0.2262\beta^{4.1} + (0.000215 - 0.001125\beta + 0.00249\beta^{4.7})\left(\frac{10^6}{Re_D}\right)^{1.15} \quad (6.115)$$

Flow nozzles may have  $\beta$  values between 0.2 and 0.8.

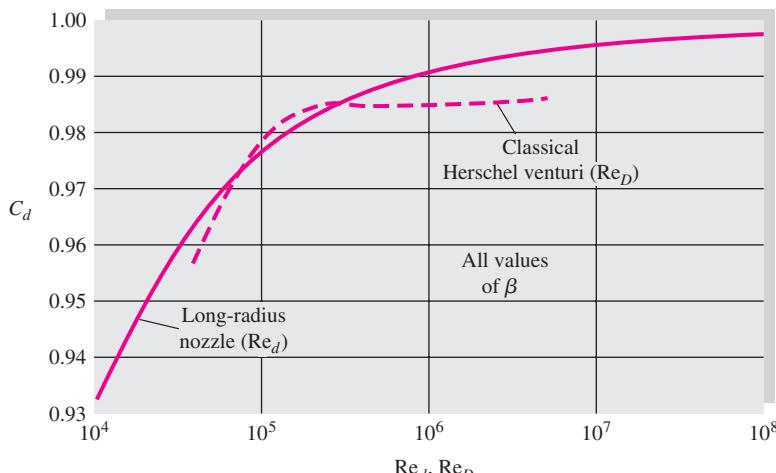

**Fig. 6.42** Discharge coefficient for long-radius nozzle and classical Herschel-type venturi.

**Venturi Meter.** The third and final type of obstruction meter is the venturi, named in honor of Giovanni Venturi (1746–1822), an Italian physicist who first tested conical expansions and contractions. The original, or *classical*, venturi was invented by a U.S. engineer, Clemens Herschel, in 1898. It consisted of a  $21^\circ$  conical contraction, a straight throat of diameter  $d$  and length  $d$ , then a  $7$  to  $15^\circ$  conical expansion. The discharge coefficient is near unity, and the nonrecoverable loss is very small. Herschel venturis are seldom used now.

The modern venturi nozzle, Fig. 6.40c, consists of an ISA 1932 nozzle entrance and a conical expansion of half-angle no greater than  $15^\circ$ . It is intended to be operated in a narrow Reynolds number range of  $1.5 \times 10^5$  to  $2 \times 10^6$ . Its discharge coefficient, shown in Fig. 6.43, is given by the ISO correlation formula

$$C_d \approx 0.9858 - 0.196\beta^{4.5} \quad (6.116)$$

It is independent of  $Re_D$  within the given range. The Herschel venturi discharge varies with  $Re_D$  but not with  $\beta$ , as shown in Fig. 6.42. Both have very low net losses.

The choice of meter depends on the loss and the cost and can be illustrated by the following table:

Type of meter	Net head loss	Cost
Orifice	Large	Small
Nozzle	Medium	Medium
Venturi	Small	Large

As so often happens, the product of inefficiency and initial cost is approximately constant.

The average nonrecoverable head losses for the three types of meters, expressed as a fraction of the throat velocity head  $V_t^2/(2g)$ , are shown in Fig. 6.44. The orifice


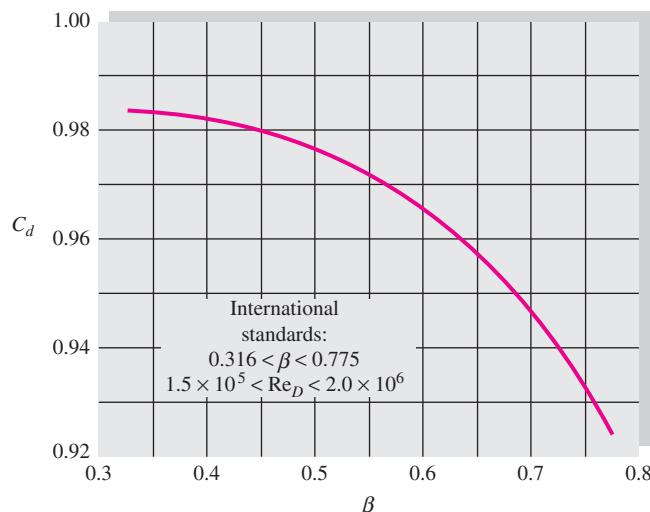


Fig. 6.43 Discharge coefficient for a venturi nozzle.

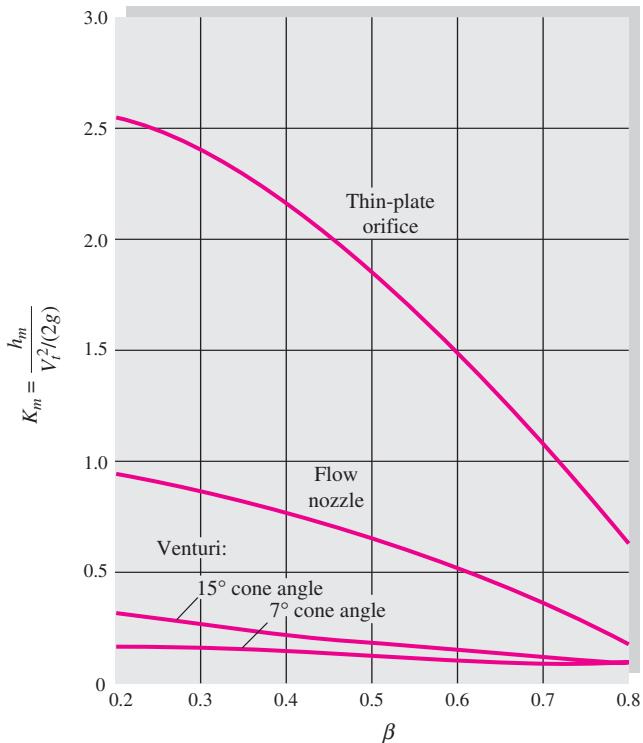

**Fig. 6.44** Nonrecoverable head loss in Bernoulli obstruction meters.  
(Adapted from Ref. 30.)


has the greatest loss and the venturi the least, as discussed. The orifice and nozzle simulate partially closed valves as in Fig. 6.18b, while the venturi is a very minor loss. When the loss is given as a fraction of the measured *pressure drop*, the orifice and nozzle have nearly equal losses, as Example 6.21 will illustrate.

The other types of instruments discussed earlier in this section can also serve as flowmeters if properly constructed. For example, a hot wire mounted in a tube can be calibrated to read volume flow rather than point velocity. Such hot-wire meters are commercially available, as are other meters modified to use velocity instruments. For further details see Ref. 30.

**Compressible Gas Flow Correction Factor.** The orifice/nozzle/venturi formulas in this section assume incompressible flow. If the fluid is a gas, and the pressure ratio ( $p_2/p_1$ ) is not near unity, a compressibility correction is needed. Equation (6.104) is rewritten in terms of mass flow and the upstream density  $\rho_1$ :

$$\dot{m} = C_d Y A_t \sqrt{\frac{2\rho_1(p_1 - p_2)}{1 - \beta^4}} \quad \text{where } \beta = \frac{d}{D} \quad (6.117)$$

The dimensionless *expansion factor*  $Y$  is a function of pressure ratio,  $\beta$ , and the type of meter. Some values are plotted in Fig. 6.45. The orifice, with its strong jet contraction, has a different factor from the venturi or the flow nozzle, which are designed to eliminate contraction.

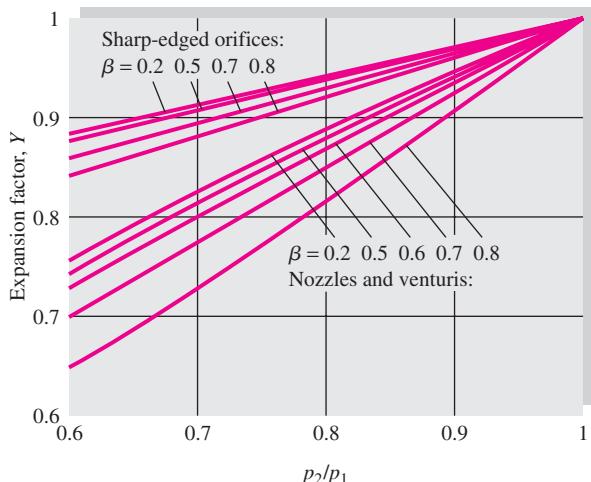

**Fig. 6.45** Compressible flow expansion factor  $Y$  for flowmeters.

### EXAMPLE 6.21

We want to meter the volume flow of water ( $\rho = 1000 \text{ kg/m}^3$ ,  $\nu = 1.02 \times 10^{-6} \text{ m}^2/\text{s}$ ) moving through a 200-mm-diameter pipe at an average velocity of 2.0 m/s. If the differential pressure gage selected reads accurately at  $p_1 - p_2 = 50,000 \text{ Pa}$ , what size meter should be selected for installing (a) an orifice with  $D: \frac{1}{2}D$  taps, (b) a long-radius flow nozzle, or (c) a venturi nozzle? What would be the nonrecoverable head loss for each design?

### Solution

Here the unknown is the  $\beta$  ratio of the meter. Since the discharge coefficient is a complicated function of  $\beta$ , iteration or EES will be necessary. We are given  $D = 0.2 \text{ m}$  and  $V_1 = 2.0 \text{ m/s}$ . The pipe-approach Reynolds number is thus

$$\text{Re}_D = \frac{V_1 D}{\nu} = \frac{(2.0)(0.2)}{1.02 \times 10^{-6}} = 392,000$$

For all three cases [(a) to (c)] the generalized formula (6.108) holds:

$$V_t = \frac{V_1}{\beta^2} = \alpha \left[ \frac{2(p_1 - p_2)}{\rho} \right]^{1/2} \quad \alpha = \frac{C_d}{(1 - \beta^4)^{1/2}} \quad (1)$$

where the given data are  $V_1 = 2.0 \text{ m/s}$ ,  $\rho = 1000 \text{ kg/m}^3$ , and  $\Delta p = 50,000 \text{ Pa}$ . Inserting these known values into Eq. (1) gives a relation between  $\beta$  and  $\alpha$ :

$$\frac{2.0}{\beta^2} = \alpha \left[ \frac{2(50,000)}{1000} \right]^{1/2} \quad \text{or} \quad \beta^2 = \frac{0.2}{\alpha} \quad (2)$$

The unknowns are  $\beta$  (or  $\alpha$ ) and  $C_d$ . Parts (a) to (c) depend on the particular chart or formula needed for  $C_d = \text{fcn}(\text{Re}_D, \beta)$ . We can make an initial guess  $\beta \approx 0.5$  and iterate to convergence.

**Part (a)**

For the orifice with  $D: \frac{1}{2}D$  taps, use Eq. (6.112) or Fig. 6.41. The iterative sequence is

$$\beta_1 \approx 0.5, C_{d1} \approx 0.604, \alpha_1 \approx 0.624, \beta_2 \approx 0.566, C_{d2} \approx 0.606, \alpha_2 \approx 0.640, \beta_3 = 0.559$$

We have converged to three figures. The proper orifice diameter is

$$d = \beta D = 112 \text{ mm} \quad \text{Ans. (a)}$$

**Part (b)**

For the long-radius flow nozzle, use Eq. (6.114) or Fig. 6.42. The iterative sequence is

$$\beta_1 \approx 0.5, C_{d1} \approx 0.9891, \alpha_1 \approx 1.022, \beta_2 \approx 0.442, C_{d2} \approx 0.9896, \alpha_2 \approx 1.009, \beta_3 = 0.445$$

We have converged to three figures. The proper nozzle diameter is

$$d = \beta D = 89 \text{ mm} \quad \text{Ans. (b)}$$

**Part (c)**

For the venturi nozzle, use Eq. (6.116) or Fig. 6.43. The iterative sequence is

$$\beta_1 \approx 0.5, C_{d1} \approx 0.977, \alpha_1 \approx 1.009, \beta_2 \approx 0.445, C_{d2} \approx 0.9807, \alpha_2 \approx 1.0004, \beta_3 = 0.447$$

We have converged to three figures. The proper venturi diameter is

$$d = \beta D = 89 \text{ mm} \quad \text{Ans. (c)}$$

*Comments:* These meters are of similar size, but their head losses are not the same. From Fig. 6.44 for the three different shapes we may read the three  $K$  factors and compute

$$h_{m,\text{orifice}} \approx 3.5 \text{ m} \quad h_{m,\text{nozzle}} \approx 3.6 \text{ m} \quad h_{m,\text{venturi}} \approx 0.8 \text{ m}$$

The venturi loss is only about 22 percent of the orifice and nozzle losses.

**Solution****EES**

The iteration encountered in this example is ideal for the EES. Input the data in SI units:

$$\text{Rho}=1000 \quad \text{Nu}=1.02E-6 \quad \text{D}=0.2 \quad \text{V}=2.0 \quad \Delta\text{P}=50000$$

Then write out the basic formulas for Reynolds number, throat velocity and flow coefficient:

$$\text{Re}=\text{V}*\text{D}/\text{Nu}$$

$$\text{Vt}=\text{V}/\text{Beta}^2$$

$$\text{Alpha}=\text{Cd}/(1-\text{Beta}^4)^{0.5}$$

$$\text{Vt}=\text{Alpha}*\text{SQRT}(2*\Delta\text{P}/\text{Rho})$$

Finally, input the proper formula for the discharge coefficient. For example, for the flow nozzle,

$$\text{Cd}=0.9965-0.00653*\text{Beta}^{0.5}*(1E6/\text{Re})^{0.5}$$

When asked to Solve the equation, EES at first complains of dividing by zero. One must then tighten up the Variable Information by not allowing  $\beta$ ,  $\alpha$ , or  $C_d$  to be negative and, in particular, by confining  $\beta$  to its practical range  $0.2 < \beta < 0.9$ . EES then readily announces correct answers for the flow nozzle:

$$\text{Alpha}=1.0096 \quad \text{Cd}=0.9895 \quad \text{Beta}=0.4451$$

**EXAMPLE 6.22**

A long-radius nozzle of diameter 6 cm is used to meter air flow in a 10-cm-diameter pipe. Upstream conditions are  $p_1 = 200$  kPa and  $T_1 = 100^\circ\text{C}$ . If the pressure drop through the nozzle is 60 kPa, estimate the flow rate in  $\text{m}^3/\text{s}$ .

**Solution**

- *Assumptions:* The pressure drops 30 percent, so we need the compressibility factor  $Y$ , and Eq. (6.117) is applicable to this problem.
- *Approach:* Find  $\rho_1$  and  $C_d$  and apply Eq. (6.117) with  $\beta = 6/10 = 0.6$ .
- *Property values:* Given  $p_1$  and  $T_1$ ,  $\rho_1 = p_1/RT_1 = (200,000)/[287(100 + 273)] = 1.87 \text{ kg/m}^3$ . The downstream pressure is  $p_2 = 200 - 60 = 140 \text{ kPa}$ , hence  $p_2/p_1 = 0.7$ . At  $100^\circ\text{C}$ , from Table A.2, the viscosity of air is  $2.17\text{E-}5 \text{ kg/m}\cdot\text{s}$
- *Solution steps:* Initially apply Eq. (6.117) by guessing, from Fig. 6.42, that  $C_d \approx 0.98$ . From Fig. 6.45, for a nozzle with  $p_2/p_1 = 0.7$  and  $\beta = 0.6$ , read  $Y \approx 0.80$ . Then

$$\begin{aligned}\dot{m} &= C_d Y A_t \sqrt{\frac{2\rho_1(p_1 - p_2)}{1 - \beta^4}} \approx (0.98)(0.80) \frac{\pi}{4} (0.06 \text{ m})^2 \sqrt{\frac{2(1.87 \text{ kg/m}^3)(60,000 \text{ Pa})}{1 - (0.6)}} \\ &\approx 1.13 \frac{\text{kg}}{\text{s}}\end{aligned}$$

Now estimate  $\text{Re}_d$ , putting it in the convenient mass flow form:

$$\text{Re}_d = \frac{\rho V d}{\mu} = \frac{4 \dot{m}}{\pi \mu d} = \frac{4(1.13 \text{ kg/s})}{\pi(2.17 \text{ E-}5 \text{ kg/m}\cdot\text{s})(0.06 \text{ m})} \approx 1.11\text{E}6$$

Returning to Fig. 6.42, we could read a slightly better  $C_d \approx 0.99$ . Thus our final estimate is

$$\dot{m} \approx 1.14 \text{ kg/s} \quad \text{Ans.}$$

- *Comments:* Figure 6.45 is not just a “chart” for engineers to use casually. It is based on the compressible flow theory of Chap. 9. There, we may reassign this example as a *theory*.

**Summary**

This chapter has been concerned with internal pipe and duct flows, which are probably the most common problems encountered in engineering fluid mechanics. Such flows are very sensitive to the Reynolds number and change from laminar to transitional to turbulent flow as the Reynolds number increases.

The various Reynolds number regimes were outlined, and a semiempirical approach to turbulent flow modeling was presented. The chapter then made a detailed analysis of flow through a straight circular pipe, leading to the famous Moody chart (Fig. 6.13) for the friction factor. Possible uses of the Moody chart were discussed for flow rate and sizing problems, as well as the application of the Moody chart to noncircular ducts using an equivalent duct “diameter.” The addition of minor losses due to valves, elbows, fittings, and other devices was presented in the form of loss coefficients to be incorporated along with Moody-type friction losses. Multiple-pipe systems were discussed briefly and were seen to be quite complex algebraically and appropriate for computer solution.

Diffusers are added to ducts to increase pressure recovery at the exit of a system. Their behavior was presented as experimental data, since the theory of real diffusers is still not well developed. The chapter ended with a discussion of flowmeters, especially the pitot-static tube and the Bernoulli obstruction type of meter. Flowmeters also require careful experimental calibration.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon  will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon  may require the use of a computer. The standard end-of-chapter problems P6.1 to P6.163 (categorized in the problem list here) are followed by word problems W6.1 to W6.4, fundamentals of engineering exam problems FE6.1 to FE6.15, comprehensive problems C6.1 to C6.9, and design projects D6.1 and D6.2.

### Problem Distribution

Section	Topic	Problems
6.1	Reynolds number regimes	P6.1–P6.5
6.2	Internal and external flow	P6.6–P6.8
6.3	Head loss—friction factor	P6.9–P6.11
6.4	Laminar pipe flow	P6.12–P6.33
6.5	Turbulence modeling	P6.34–P6.40
6.6	Turbulent pipe flow	P6.41–P6.62
6.7	Flow rate and sizing problems	P6.63–P6.85
6.8	Noncircular ducts	P6.86–P6.98
6.9	Minor or local losses	P6.99–P6.110
6.10	Series and parallel pipe systems	P6.111–P6.120
6.10	Three-reservoir and pipe network systems	P6.121–P6.130
6.11	Diffuser performance	P6.131–P6.134
6.12	The pitot-static tube	P6.135–P6.139
6.12	Flowmeters: the orifice plate	P6.140–P6.148
6.12	Flowmeters: the flow nozzle	P6.149–P6.153
6.12	Flowmeters: the venturi meter	P6.154–P6.159
6.12	Flowmeters: other designs	P6.160–P6.161
6.12	Flowmeters: compressibility correction	P6.162–P6.163


### Reynolds number regimes

- P6.1** An engineer claims that the flow of SAE 30W oil, at 20°C, through a 5-cm-diameter smooth pipe at 1 million N/h, is laminar. Do you agree? A million newtons is a lot, so this sounds like an awfully high flow rate.
- P6.2** The present pumping rate of North Slope crude oil through the Alaska Pipeline (see the chapter-opener photo) is about 600,000 barrels per day (1 barrel = 42 U.S. gallons). What would be the maximum rate if the flow were constrained to be laminar? Assume that Alaskan oil is Fig. A.1 of the Appendix at 60°C.

**P6.3** Following up Prob. P6.2, suppose the Alaska Pipeline were carrying 30 million U.S. gallons per day of SAE 30W oil at 20°C? Estimate the Reynolds number. Is the flow laminar?

**P6.4** For flow of SAE 30 oil through a 5-cm-diameter pipe, from Fig. A.1, for what flow rate in m<sup>3</sup>/h would we expect transition to turbulence at (a) 20°C and (b) 100°C?

**P6.5** In flow past a body or wall, early transition to turbulence can be induced by placing a trip wire on the wall across the flow, as in Fig. P6.5. If the trip wire in Fig. P6.5 is placed where the local velocity is  $U$ , it will trigger turbulence if  $Ud/\nu = 850$ , where  $d$  is the wire diameter [3, p. 388]. If the sphere diameter is 20 cm and transition is observed at  $Re_D = 90,000$ , what is the diameter of the trip wire in mm?

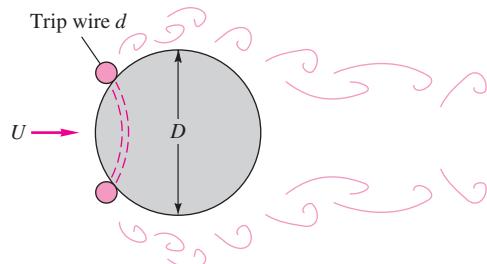

P6.5

### Internal and external flow

**P6.6** For flow of a uniform stream parallel to a sharp flat plate, transition to a turbulent boundary layer on the plate may occur at  $Re_x = \rho U x / \mu \approx 1E6$ , where  $U$  is the approach velocity and  $x$  is distance along the plate. If  $U = 2.5$  m/s, determine the distance  $x$  for the following fluids at 20°C and 1 atm: (a) hydrogen, (b) air, (c) gasoline, (d) water, (e) mercury, and (f) glycerin.

**P6.7** Cola, approximated as pure water at 20°C, is to fill an 8-oz container (1 U.S. gal = 128 fl oz) through a 5-mm-diameter tube. Estimate the minimum filling time if the tube flow is to remain laminar. For what cola (water) temperature would this minimum time be 1 min?

**P6.8** When water at 20°C is in steady turbulent flow through an 8-cm-diameter pipe, the wall shear stress is 72 Pa. What is the axial pressure gradient ( $\partial p / \partial x$ ) if the pipe is (a) horizontal and (b) vertical with the flow up?

### Head loss/friction factor

- P6.9** A light liquid ( $\rho \approx 950 \text{ kg/m}^3$ ) flows at an average velocity of 10 m/s through a horizontal smooth tube of diameter 5 cm. The fluid pressure is measured at 1-m intervals along the pipe, as follows:

$x, \text{ m}$	0	1	2	3	4	5	6
$p, \text{ kPa}$	304	273	255	240	226	213	200

Estimate (a) the total head loss, in meters; (b) the wall shear stress in the fully developed section of the pipe; and (c) the overall friction factor.

- P6.10** Water at 20°C flows through an inclined 8-cm-diameter pipe. At sections *A* and *B* the following data are taken:  $p_A = 186 \text{ kPa}$ ,  $V_A = 3.2 \text{ m/s}$ ,  $z_A = 24.5 \text{ m}$ , and  $p_B = 260 \text{ kPa}$ ,  $V_B = 3.2 \text{ m/s}$ ,  $z_B = 9.1 \text{ m}$ . Which way is the flow going? What is the head loss in meters?

- P6.11** Water at 20°C flows upward at 4 m/s in a 6-cm-diameter pipe. The pipe length between points 1 and 2 is 5 m, and point 2 is 3 m higher. A mercury manometer, connected between 1 and 2, has a reading  $h = 135 \text{ mm}$ , with  $p_1$  higher. (a) What is the pressure change ( $p_1 - p_2$ )? (b) What is the head loss, in meters? (c) Is the manometer reading proportional to head loss? Explain. (d) What is the friction factor of the flow?


In Probs. 6.12 to 6.99, neglect minor losses.

### Laminar pipe flow—no minor losses

- P6.12** A 5-mm-diameter capillary tube is used as a viscometer for oils. When the flow rate is  $0.071 \text{ m}^3/\text{h}$ , the measured pressure drop per unit length is 375 kPa/m. Estimate the viscosity of the fluid. Is the flow laminar? Can you also estimate the density of the fluid?

- P6.13** A soda straw is 20 cm long and 2 mm in diameter. It delivers cold cola, approximated as water at 10°C, at a rate of  $3 \text{ cm}^3/\text{s}$ . (a) What is the head loss through the straw? What is the axial pressure gradient  $\partial p / \partial x$  if the flow is (b) vertically up or (c) horizontal? Can the human lung deliver this much flow?

- P6.14** Water at 20°C is to be siphoned through a tube 1 m long and 2 mm in diameter, as in Fig. P6.14. Is there any height  $H$  for which the flow might not be laminar? What is the flow rate if  $H = 50 \text{ cm}$ ? Neglect the tube curvature.

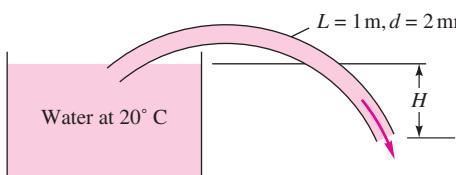


P6.14

- P6.15** Professor Gordon Holloway and his students at the University of New Brunswick went to a fast-food emporium and tried to drink chocolate shakes ( $\rho \approx 1200 \text{ kg/m}^3$ ,  $\mu \approx 6 \text{ kg/m-s}$ ) through fat straws 8 mm in diameter and 30 cm long. (a) Verify that their human lungs, which can develop approximately 3000 Pa of vacuum pressure, would be unable to drink the milkshake through the vertical straw. (b) A student cut 15 cm from his straw and proceeded to drink happily. What rate of milkshake flow was produced by this strategy?

- P6.16** Fluid flows steadily, at volume rate  $Q$ , through a large pipe and then divides into two small pipes, the larger of which has an inside diameter of 25 mm and carries three times the flow of the smaller pipe. Both small pipes have the same length and pressure drop. If all flows are laminar, estimate the diameter of the smaller pipe.


- P6.17** A *capillary viscometer* measures the time required for a specified volume  $v$  of liquid to flow through a small-bore glass tube, as in Fig. P6.17. This transit time is then correlated with fluid viscosity. For the system shown, (a) derive an approximate formula for the time required, assuming laminar flow with no entrance and exit losses. (b) If  $L = 12 \text{ cm}$ ,  $l = 2 \text{ cm}$ ,  $v = 8 \text{ cm}^3$ , and the fluid is water at 20°C, what capillary diameter  $D$  will result in a transit time  $t$  of 6 seconds?

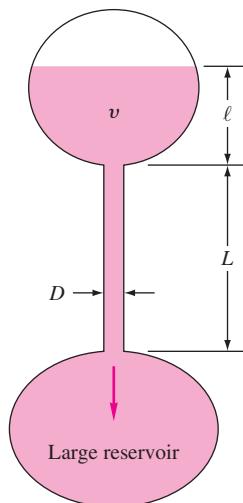

P6.17


- P6.18** To determine the viscosity of a liquid of specific gravity 0.95, you fill, to a depth of 12 cm, a large container that drains through a 30-cm-long vertical tube attached to the bottom. The tube diameter is 2 mm, and the rate of draining is found to be  $1.9 \text{ cm}^3/\text{s}$ . What is your estimate of the fluid viscosity? Is the tube flow laminar?

- P6.19** An oil ( $\text{SG} = 0.9$ ) issues from the pipe in Fig. P6.19 at  $Q = 35 \text{ ft}^3/\text{h}$ . What is the kinematic viscosity of the oil in  $\text{ft}^2/\text{s}$ ? Is the flow laminar?

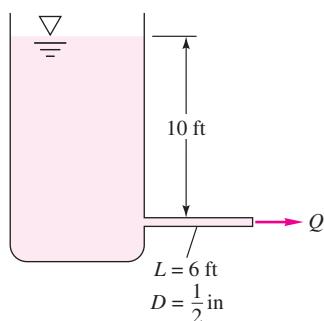


- P6.20** The oil tanks in Tinyland are only 160 cm high, and they discharge to the Tinyland oil truck through a smooth tube 4 mm in diameter and 55 cm long. The tube exit is open to the atmosphere and 145 cm below the tank surface. The fluid is medium fuel oil,  $\rho = 850 \text{ kg/m}^3$  and  $\mu = 0.11 \text{ kg/(m}\cdot\text{s)}$ . Estimate the oil flow rate in  $\text{cm}^3/\text{h}$ .

- P6.21** In Tinyland, houses are less than a foot high! The rainfall is laminar! The drainpipe in Fig. P6.21 is only 2 mm in diameter. (a) When the gutter is full, what is the rate of draining? (b) The gutter is designed for a sudden rainstorm of up to 5 mm per hour. For this condition, what is the maximum roof area that can be drained successfully? (c) What is  $\text{Re}_d$ ?

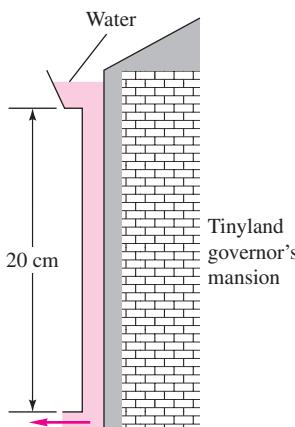


- P6.22** A steady push on the piston in Fig. P6.22 causes a flow rate  $Q = 0.15 \text{ cm}^3/\text{s}$  through the needle. The fluid has  $\rho = 900 \text{ kg/m}^3$  and  $\mu = 0.002 \text{ kg/(m}\cdot\text{s)}$ . What force  $F$  is required to maintain the flow?

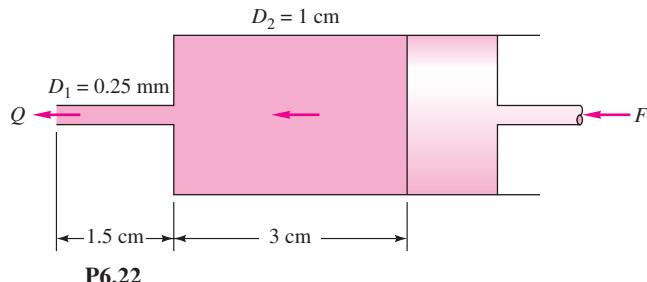

- P6.23** SAE 10 oil at  $20^\circ\text{C}$  flows in a vertical pipe of diameter 2.5 cm. It is found that the pressure is constant throughout the fluid. What is the oil flow rate in  $\text{m}^3/\text{h}$ ? Is the flow up or down?


- P6.24** Two tanks of water at  $20^\circ\text{C}$  are connected by a capillary tube 4 mm in diameter and 3.5 m long. The surface of tank 1 is 30 cm higher than the surface of tank 2. (a) Estimate the flow rate in  $\text{m}^3/\text{h}$ . Is the flow laminar? (b) For what tube diameter will  $\text{Re}_d$  be 500?

- P6.25** For the configuration shown in Fig. P6.25, the fluid is ethyl alcohol at  $20^\circ\text{C}$ , and the tanks are very wide. Find the flow rate which occurs in  $\text{m}^3/\text{h}$ . Is the flow laminar?

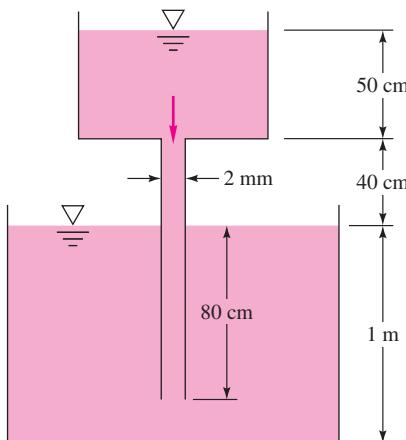


- P6.26** Two oil tanks are connected by two 9-m-long pipes, as in Fig. P6.26. Pipe 1 is 5 cm in diameter and is 6 m higher than pipe 2. It is found that the flow rate in pipe 2 is twice as large as the flow in pipe 1. (a) What is the diameter of pipe 2? (b) Are both pipe flows laminar? (c) What is the flow rate in pipe 2 ( $\text{m}^3/\text{s}$ )? Neglect minor losses.

- \*P6.27** Let us attack Prob. P6.25 in symbolic fashion, using Fig. P6.27. All parameters are constant except the upper tank depth  $Z(t)$ . Find an expression for the flow rate  $Q(t)$  as a function of  $Z(t)$ . Set up a differential equation, and solve for the time  $t_0$  to drain the upper tank completely. Assume quasi-steady laminar flow.

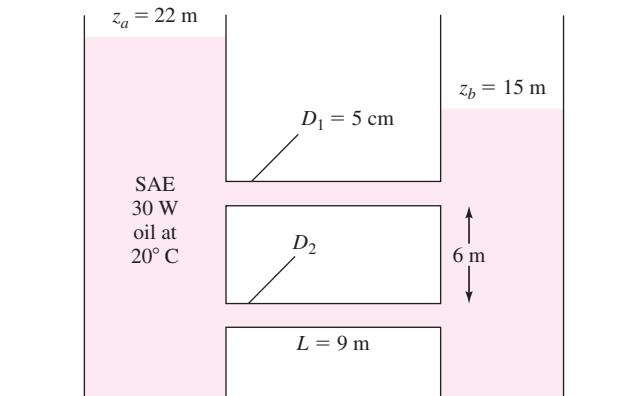

P6.26

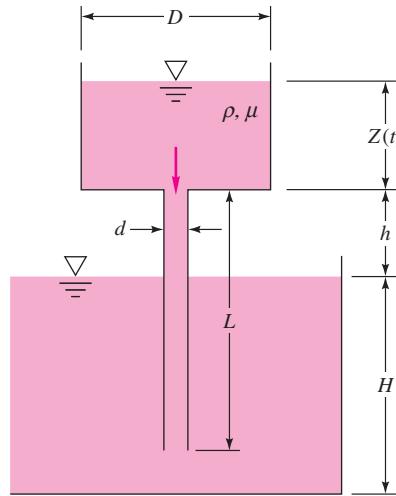


P6.27


- P6.28** For straightening and smoothing an airflow in a 50-cm-diameter duct, the duct is packed with a “honeycomb” of thin straws of length 30 cm and diameter 4 mm, as in Fig. P6.28. The inlet flow is air at 110 kPa and 20°C, moving at an average velocity of 6 m/s. Estimate the pressure drop across the honeycomb.

- P6.29** SAE 30W oil at 20°C flows through a straight pipe 25 m long, with diameter 4 cm. The average velocity is 2 m/s. (a) Is the flow laminar? Calculate (b) the pressure drop and (c) the power required. (d) If the pipe diameter is doubled, for the same average velocity, by what percent does the required power increase?

- P6.30** SAE 10 oil at 20°C flows through the 4-cm-diameter vertical pipe of Fig. P6.30. For the mercury manometer reading  $h = 42$  cm shown, (a) calculate the volume flow rate in  $\text{m}^3/\text{h}$  and (b) state the direction of flow.

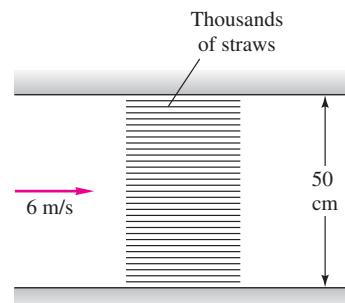


P6.28

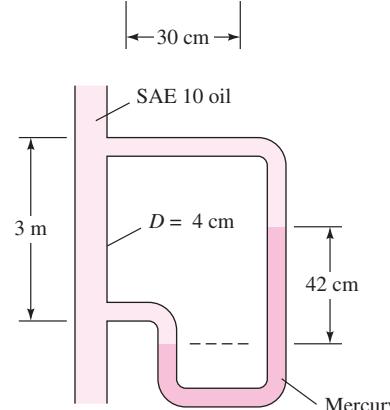

P6.30

- P6.31** A *laminar flow element* (LFE) (Meriam Instrument Co.) measures low gas-flow rates with a bundle of capillary tubes or ducts packed inside a large outer tube. Consider oxygen at 20°C and 1 atm flowing at 84  $\text{ft}^3/\text{min}$  in a 4-in-diameter pipe. (a) Is the flow turbulent when approaching the element? (b) If there are 1000 capillary tubes,  $L = 4$  in, select a tube diameter to keep  $\text{Re}_d$  below 1500 and also to keep the tube pressure drop no greater than 0.5 lbf/in $^2$ . (c) Do the tubes selected in part (b) fit nicely within the approach pipe?
- P6.32** SAE 30 oil at 20°C flows in the 3-cm-diameter pipe in Fig. P6.32, which slopes at 37°. For the pressure measurements shown, determine (a) whether the flow is up or down and (b) the flow rate in  $\text{m}^3/\text{h}$ .

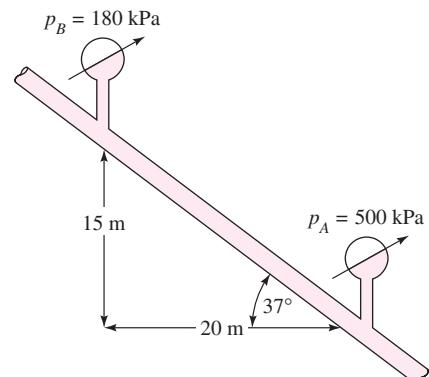

P6.32

- P6.33** Water at 20°C is pumped from a reservoir through a vertical tube 10 ft long and 1/16th in in diameter. The pump provides a pressure rise of 11 lbf/in<sup>2</sup> to the flow. Neglect entrance losses. (a) Calculate the exit velocity. (b) Approximately how high will the exit water jet rise? (c) Verify that the flow is laminar.

### Turbulence modeling

- P6.34** Derive the time-averaged  $x$ -momentum equation (6.21) by direct substitution of Eqs. (6.19) into the momentum equation (6.14). It is convenient to write the convective acceleration as

$$\frac{du}{dt} = \frac{\partial}{\partial x}(u^2) + \frac{\partial}{\partial y}(uv) + \frac{\partial}{\partial z}(uw)$$

which is valid because of the continuity relation, Eq. (6.14).

- P6.35** In the overlap layer of Fig. 6.9a, turbulent shear is large. If we neglect viscosity, we can replace Eq. (6.24) by the approximate velocity-gradient function

$$\frac{du}{dy} = fcn(y, \tau_w, \rho)$$


Show by dimensional analysis, that this leads to the logarithmic overlap relation (6.28).

- P6.36** The following turbulent flow velocity data  $u(y)$ , for air at 75°F and 1 atm near a smooth flat wall, were taken in the University of Rhode Island wind tunnel:

y, in	0.025	0.035	0.047	0.055	0.065
u, ft/s	51.2	54.2	56.8	57.6	59.1

Estimate (a) the wall shear stress and (b) the velocity  $u$  at  $y = 0.22$  in.

- P6.37** Two infinite plates a distance  $h$  apart are parallel to the  $xz$  plane with the upper plate moving at speed  $V$ , as in Fig. P6.37. There is a fluid of viscosity  $\mu$  and constant pressure between the plates. Neglecting gravity and assuming incompressible turbulent flow  $u(y)$  between the plates, use the logarithmic law and appropriate boundary conditions to derive a formula for dimensionless wall shear stress versus dimensionless plate velocity. Sketch a typical shape of the profile  $u(y)$ .

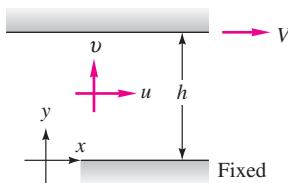

P6.37

- P6.38** Suppose in Fig. P6.37 that  $h = 3$  cm, the fluid in water at 20°C, and the flow is turbulent, so that the logarithmic law is valid. If the shear stress in the fluid is 15 Pa, what is  $V$  in m/s?

- P6.39** By analogy with laminar shear,  $\tau = \mu du/dy$ , T. V. Boussinesq in 1877 postulated that turbulent shear could also be related to the mean velocity gradient  $\tau_{turb} = \epsilon du/dy$ , where  $\epsilon$  is called the *eddy viscosity* and is much larger than  $\mu$ . If the logarithmic overlap law, Eq. (6.28), is valid with  $\tau_{turb} \approx \tau_w$ , show that  $\epsilon \approx \kappa \mu u^* y$ .


- P6.40** Theodore von Kármán in 1930 theorized that turbulent shear could be represented by  $\tau_{turb} = \epsilon du/dy$ , where  $\epsilon = \rho \kappa^2 y^2 |du/dy|$  is called the *mixing-length eddy viscosity* and  $\kappa \approx 0.41$  is Kármán's dimensionless *mixing-length constant* [2, 3]. Assuming that  $\tau_{turb} \approx \tau_w$  near the wall, show that this expression can be integrated to yield the logarithmic overlap law, Eq. (6.28).

### Turbulent pipe flow—no minor losses

- P6.41** Two reservoirs, which differ in surface elevation by 40 m, are connected by 350 m of new pipe of diameter 8 cm. If the desired flow rate is at least 130 N/s of water at 20°C, can the pipe material be made of (a) galvanized iron, (b) commercial steel, or (c) cast iron? Neglect minor losses.

- P6.42** Fluid flows steadily, at volume rate  $Q$ , through a large horizontal pipe and then divides into two small pipes, the larger of which has an inside diameter of 25 mm and carries three times the flow of the smaller pipe. Both small pipes have the same length and pressure drop. If all flows are turbulent, at  $Re_D$  near  $10^4$ , estimate the diameter of the smaller pipe.

- P6.43** A reservoir supplies water through 100 m of 30-cm-diameter cast iron pipe to a turbine that extracts 80 hp from the flow. The water then exhausts to the atmosphere.

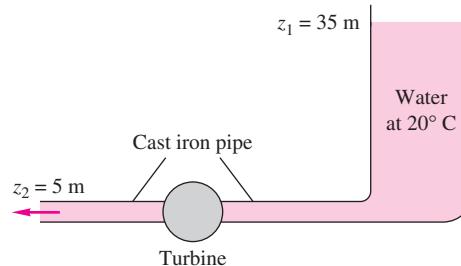

P6.43


- Neglect minor losses. (a) Assuming that  $f \approx 0.019$ , find the flow rate (which results in a cubic polynomial). Explain why there are *two* legitimate solutions. (b) For extra credit, solve for the flow rates using the actual friction factors.

- P6.44** Mercury at 20°C flows through 4 m of 7-mm-diameter glass tubing at an average velocity of 5 m/s. Estimate the head loss in m and the pressure drop in kPa.

- P6.45** Oil, SG = 0.88 and  $\nu = 4 \text{ E-}5 \text{ m}^2/\text{s}$ , flows at 400 gal/min through a 6-in asphalted cast iron pipe. The pipe is 0.5 m long and slopes upward at  $8^\circ$  in the flow direction. Compute the head loss in ft and the pressure change.


- P6.46** Repeat Prob. P3.5, for the same data, by using the more exact turbulent flow formulas to compute the volume flow rate in gallons per minute.

- P6.47** The gutter and smooth drainpipe in Fig. P6.47 remove rainwater from the roof of a building. The smooth drainpipe is 7 cm in diameter. (a) When the gutter is full, estimate the rate of draining. (b) The gutter is designed for a sudden rainstorm of up to 5 inches per hour. For this condition, what is the maximum roof area that can be drained successfully?

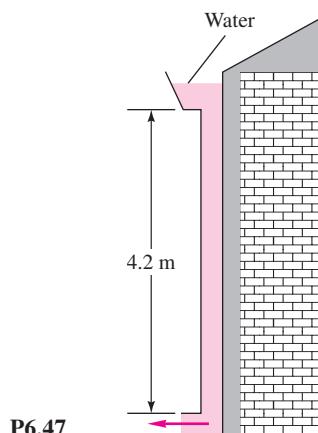

- P6.48** Show that if Eq. (6.33) is accurate, the position in a turbulent pipe flow where local velocity  $u$  equals average velocity  $V$  occurs exactly at  $r = 0.777R$ , independent of the Reynolds number.


- P6.49** The tank-pipe system of Fig. P6.49 is to deliver at least  $11 \text{ m}^3/\text{h}$  of water at  $20^\circ\text{C}$  to the reservoir. What is the maximum roughness height  $\epsilon$  allowable for the pipe?

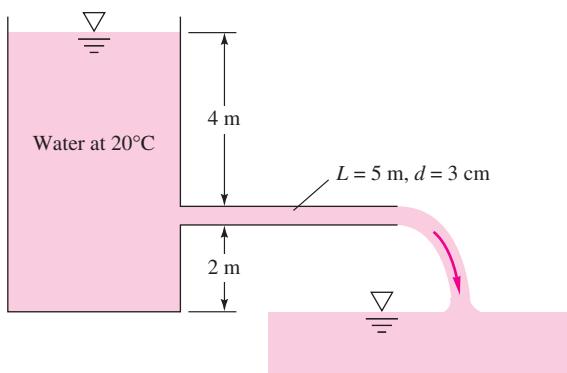

- P6.50** Ethanol at  $20^\circ\text{C}$  flows at 125 U.S. gal/min through a horizontal cast iron pipe with  $L = 12 \text{ m}$  and  $d = 5 \text{ cm}$ . Neglecting entrance effects, estimate (a) the pressure gradient  $dp/dx$ , (b) the wall shear stress  $\tau_w$ , and (c) the percentage reduction in friction factor if the pipe walls are polished to a smooth surface.


- P6.51** The viscous sublayer (Fig. 6.9) is normally less than 1 percent of the pipe diameter and therefore very difficult to probe with a finite-sized instrument. In an effort to generate a thick sublayer for probing, Pennsylvania State University in 1964 built a pipe with a flow of glycerin. Assume a smooth 12-in-diameter pipe with  $V = 60 \text{ ft/s}$  and glycerin at  $20^\circ\text{C}$ . Compute the sublayer thickness in inches and the pumping horsepower required at 75 percent efficiency if  $L = 40 \text{ ft}$ .

- P6.52** The pipe flow in Fig. P6.52 is driven by pressurized air in the tank. What gage pressure  $p_1$  is needed to provide a  $20^\circ\text{C}$  water flow rate  $Q = 60 \text{ m}^3/\text{h}$ ?

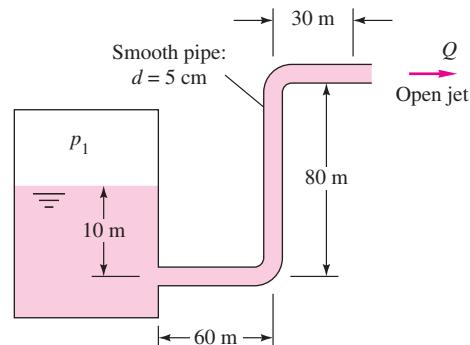
**P6.52**

- P6.53** Water at  $20^\circ\text{C}$  flows by gravity through a smooth pipe from one reservoir to a lower one. The elevation difference is 60 m. The pipe is 360 m long, with a diameter of 12 cm. Calculate the expected flow rate in  $\text{m}^3/\text{h}$ . Neglect minor losses.

- \*P6.54** A swimming pool  $W$  by  $Y$  by  $h$  deep is to be emptied by gravity through the long pipe shown in Fig. P6.54. Assuming an average pipe friction factor  $f_{av}$  and neglecting minor losses, derive a formula for the time to empty the tank from an initial level  $h_o$ .

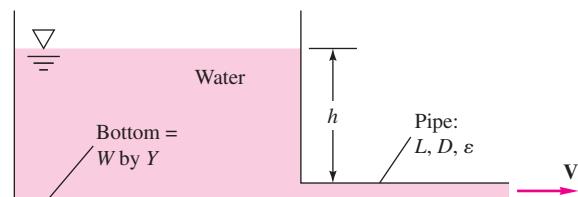

- P6.55** The reservoirs in Fig. P6.55 contain water at 20°C. If the pipe is smooth with  $L = 4500$  m and  $d = 4$  cm, what will the flow rate in  $\text{m}^3/\text{h}$  be for  $\Delta z = 100$  m?

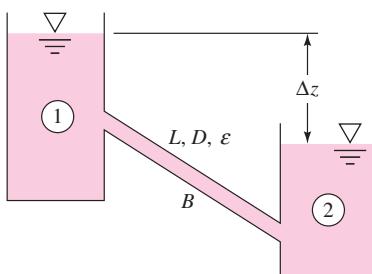

P6.55

- P6.56** The Alaska Pipeline in the chapter-opener photo has a design flow rate of  $4.4 \times 10^7$  gallons per day of crude oil at 60°C (see Fig. A.1). (a) Assuming a galvanized-iron wall, estimate the total pressure drop required for the 800-mile trip. (b) If there are nine equally spaced pumps, estimate the horsepower each pump must deliver.

- P6.57** Apply the analysis of Prob. P6.54 to the following data. Let  $W = 5$  m,  $Y = 8$  m,  $h_o = 2$  m,  $L = 15$  m,  $D = 5$  cm, and  $\epsilon = 0$ . (a) By letting  $h = 1.5$  m and  $0.5$  m as representative depths, estimate the average friction factor. Then (b) estimate the time to drain the pool.

- P6.58** For the system in Prob. 6.53, a pump is used at night to drive water back to the upper reservoir. If the pump delivers 15,000 W to the water, estimate the flow rate.


- P6.59** The following data were obtained for flow of 20°C water at  $20 \text{ m}^3/\text{h}$  through a badly corroded 5-cm-diameter pipe that slopes downward at an angle of 8°:  $p_1 = 420 \text{ kPa}$ ,  $z_1 = 12 \text{ m}$ ,  $p_2 = 250 \text{ kPa}$ ,  $z_2 = 3 \text{ m}$ . Estimate (a) the roughness ratio of the pipe and (b) the percentage change in head loss if the pipe were smooth and the flow rate the same.

- P6.60** In the spirit of Haaland's explicit pipe friction factor approximation, Eq. (6.49), Jeppson [20] proposed the following explicit formula:

$$\frac{1}{\sqrt{f}} \approx -2.0 \log_{10} \left( \frac{\epsilon/d}{3.7} + \frac{5.74}{Re_d^{0.9}} \right)$$


(a) Is this identical to Haaland's formula with just a simple rearrangement? Explain. (b) Compare Jeppson's formula to Haaland's for a few representative values of (turbulent)  $Re_d$  and  $\epsilon/d$  and their errors compared to the Colebrook formula (6.48). Discuss briefly.

- P6.61** What level  $h$  must be maintained in Fig. P6.61 to deliver a flow rate of  $0.015 \text{ ft}^3/\text{s}$  through the  $\frac{1}{2}$ -in commercial steel pipe?

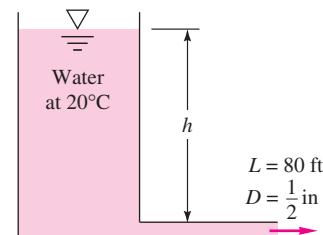

P6.61


- P6.62** Water at 20°C is to be pumped through 2000 ft of pipe from reservoir 1 to 2 at a rate of  $3 \text{ ft}^3/\text{s}$ , as shown in Fig. P6.62. If the pipe is cast iron of diameter 6 in and the pump is 75 percent efficient, what horsepower pump is needed?

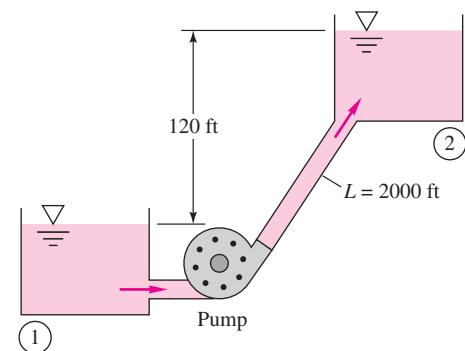

P6.62

### Flow rate and sizing problems

- P6.63** A tank contains  $1 \text{ m}^3$  of water at 20°C and has a drawn-capillary outlet tube at the bottom, as in Fig. P6.63. Find the outlet volume flux  $Q$  in  $\text{m}^3/\text{h}$  at this instant.

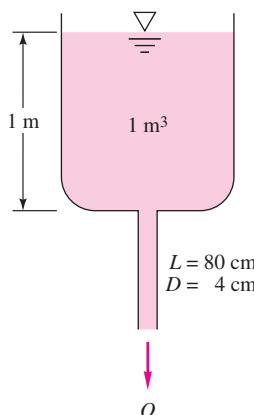

P6.63

- P6.64** For the system in Fig. P6.63, solve for the flow rate in  $\text{m}^3/\text{h}$  if the fluid is SAE 10 oil at 20°C. Is the flow laminar or turbulent?

**P6.65** In Prob. P6.63 the initial flow is turbulent. As the water drains out of the tank, will the flow revert to laminar motion as the tank becomes nearly empty? If so, at what tank depth? Estimate the time, in h, to drain the tank completely.

**P6.66** Ethyl alcohol at 20°C flows through a 10-cm horizontal drawn tube 100 m long. The fully developed wall shear stress is 14 Pa. Estimate (a) the pressure drop, (b) the volume flow rate, and (c) the velocity  $u$  at  $r = 1$  cm.

**P6.67** A straight 10-cm commercial-steel pipe is 1 km long and is laid on a constant slope of 5°. Water at 20°C flows downward, due to gravity only. Estimate the flow rate in  $\text{m}^3/\text{h}$ . What happens if the pipe length is 2 km?

**P6.68** The Moody chart, Fig. 6.13, is best for finding head loss (or  $\Delta p$ ) when  $Q$ ,  $V$ ,  $d$ , and  $L$  are known. It is awkward for the second type of problem, finding  $Q$  when  $h_f$  or  $\Delta p$  is known (see Example 6.9). Prepare a modified Moody chart whose abscissa is independent of  $Q$  and  $V$ , using  $\epsilon/d$  as a parameter, from which one can immediately read the ordinate to find (dimensionless)  $Q$  or  $V$ . Use your chart to solve Example 6.9.

**P6.69** For Prob. P6.62 suppose the only pump available can deliver 80 hp to the fluid. What is the proper pipe size in inches to maintain the 3  $\text{ft}^3/\text{s}$  flow rate?

**P6.70** Ethylene glycol at 20°C flows through 80 m of cast iron pipe of diameter 6 cm. The measured pressure drop is 250 kPa. Neglect minor losses. Using a noniterative formulation, estimate the flow rate in  $\text{m}^3/\text{h}$ .

**\*P6.71** It is desired to solve Prob. 6.62 for the most economical pump and cast iron pipe system. If the pump costs \$125 per horsepower delivered to the fluid and the pipe costs \$7000 per inch of diameter, what are the minimum cost and the pipe and pump size to maintain the 3  $\text{ft}^3/\text{s}$  flow rate? Make some simplifying assumptions.

**P6.72** Modify Prob. P6.57 by letting the diameter be unknown. Find the proper pipe diameter for which the pool will drain in about two hours flat.


**P6.73** The Moody chart, Fig. 6.13, is best for finding head loss (or  $\Delta p$ ) when  $Q$ ,  $V$ ,  $d$ , and  $L$  are known. It is awkward for the third type of problem, finding  $d$  when  $h_f$  (or  $\Delta p$ ) and  $Q$  are known (see Example 6.10). Prepare a modified Moody chart whose abscissa is independent of  $d$ , using as a parameter  $\epsilon$  nondimensionalized without  $d$ , from which one can immediately read the (dimensionless) ordinate to find  $d$ . Use your chart to solve Example 6.10.

**P6.74** Two reservoirs, which differ in surface elevation by 40 m, are connected by a new commercial steel pipe of diameter 8 cm. If the desired flow rate is 200 N/s of water at 20°C, what is the proper length of the pipe?

**P6.75** You wish to water your garden with 100 ft of  $\frac{5}{8}$ -in-diameter hose whose roughness is 0.011 in. What will be the delivery, in  $\text{ft}^3/\text{s}$ , if the gage pressure at the faucet is 60  $\text{lbf/in}^2$ ?

If there is no nozzle (just an open hose exit), what is the maximum horizontal distance the exit jet will carry?


**P6.76** The small turbine in Fig. P6.76 extracts 400 W of power from the water flow. Both pipes are wrought iron. Compute the flow rate  $Q$  in  $\text{m}^3/\text{h}$ . Why are there two solutions? Which is better?

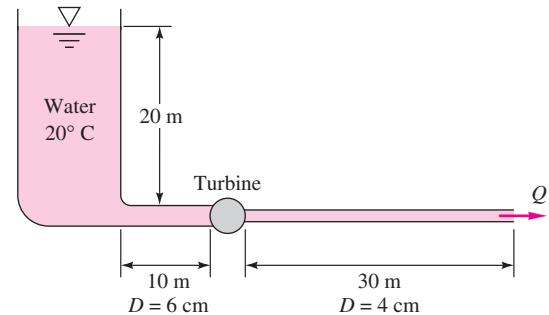

**P6.76**

**\*P6.77** Modify Prob. P6.76 into an economic analysis, as follows. Let the 40 m of wrought iron pipe have a uniform diameter  $d$ . Let the steady water flow available be  $Q = 30 \text{ m}^3/\text{h}$ . The cost of the turbine is \$4 per watt developed, and the cost of the piping is \$75 per centimeter of diameter. The power generated may be sold for \$0.08 per kilowatt-hour. Find the proper pipe diameter for minimum payback time—that is, the minimum time for which the power sales will equal the initial cost of the system.

**P6.78** In Fig. P6.78 the connecting pipe is commercial steel 6 cm in diameter. Estimate the flow rate, in  $\text{m}^3/\text{h}$ , if the fluid is water at 20°C. Which way is the flow?

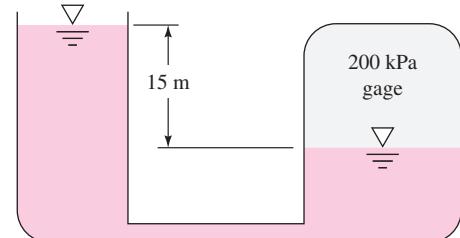


**P6.78**

$L = 50 \text{ m}$

**P6.79** A garden hose is to be used as the return line in a water-fall display at a mall. In order to select the proper pump, you need to know the roughness height inside the garden hose. Unfortunately, roughness information is not supplied by the hose manufacturer. So you devise a simple experiment to measure the roughness. The hose is attached to the drain of an above-ground swimming pool, the surface of

which is 3.0 m above the hose outlet. You estimate the minor loss coefficient of the entrance region as 0.5, and the drain valve has a minor loss equivalent length of 200 diameters when fully open. Using a bucket and stopwatch, you open the valve and measure the flow rate to be  $2.0 \times 10^{-4} \text{ m}^3/\text{s}$  for a hose that is 10.0 m long and has an inside diameter of 1.50 cm. Estimate the roughness height in mm inside the hose.

- P6.80** The head-versus-flow-rate characteristics of a centrifugal pump are shown in Fig. P6.80. If this pump drives water at 20°C through 120 m of 30-cm-diameter cast iron pipe, what will be the resulting flow rate, in  $\text{m}^3/\text{s}$ ?

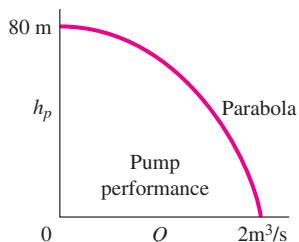

P6.80


- P6.81** The pump in Fig. P6.80 is used to deliver gasoline at 20°C through 350 m of 30-cm-diameter galvanized iron pipe. Estimate the resulting flow rate, in  $\text{m}^3/\text{s}$ . (Note that the pump head is now in meters of gasoline.)
- P6.82** Fluid at 20°C flows through a horizontal galvanized-iron pipe 20 m long and 8 cm in diameter. The wall shear stress is 90 Pa. Calculate the flow rate in  $\text{m}^3/\text{h}$  if the fluid is (a) glycerin and (b) water.
- P6.83** For the system of Fig. P6.55, let  $\Delta z = 80 \text{ m}$  and  $L = 185 \text{ m}$  of cast iron pipe. What is the pipe diameter for which the flow rate will be  $7 \text{ m}^3/\text{h}$ ?
- P6.84** It is desired to deliver  $60 \text{ m}^3/\text{h}$  of water at 20°C through a horizontal asphalted cast iron pipe. Estimate the pipe diameter that will cause the pressure drop to be exactly 40 kPa per 100 m of pipe length.
- P6.85** For the system in Prob. P6.53, a pump, which delivers 15,000 W to the water, is used at night to refill the upper reservoir. The pipe diameter is increased from 12 cm to provide more flow. If the resultant flow rate is  $90 \text{ m}^3/\text{h}$ , estimate the new pipe size.

### Noncircular ducts

- P6.86** SAE 10 oil at 20°C flows at an average velocity of 2 m/s between two smooth parallel horizontal plates 3 cm apart. Estimate (a) the centerline velocity, (b) the head loss per meter, and (c) the pressure drop per meter.
- P6.87** A commercial steel annulus 40 ft long, with  $a = 1 \text{ in}$  and  $b = \frac{1}{2} \text{ in}$ , connects two reservoirs that differ in surface


height by 20 ft. Compute the flow rate in  $\text{ft}^3/\text{s}$  through the annulus if the fluid is water at 20°C.

- P6.88** An oil cooler consists of multiple parallel-plate passages, as shown in Fig. P6.88. The available pressure drop is 6 kPa, and the fluid is SAE 10W oil at 20°C. If the desired total flow rate is  $900 \text{ m}^3/\text{h}$ , estimate the appropriate number of passages. The plate walls are hydraulically smooth.

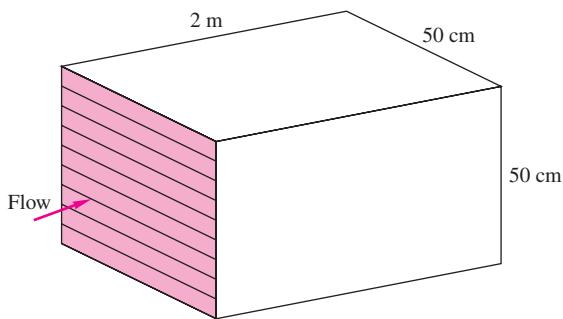

P6.88


- P6.89** An annulus of narrow clearance causes a very large pressure drop and is useful as an accurate measurement of viscosity. If a smooth annulus 1 m long with  $a = 50 \text{ mm}$  and  $b = 49 \text{ mm}$  carries an oil flow at  $0.001 \text{ m}^3/\text{s}$ , what is the oil viscosity if the pressure drop is 250 kPa?
- P6.90** A rectangular sheet-metal duct is 200 ft long and has a fixed height  $H = 6 \text{ in}$ . The width  $B$ , however, may vary from 6 to 36 in. A blower provides a pressure drop of 80 Pa of air at 20°C and 1 atm. What is the optimum width  $B$  that will provide the most airflow in  $\text{ft}^3/\text{s}$ ?
- P6.91** Heat exchangers often consist of many triangular passages. Typical is Fig. P6.91, with  $L = 60 \text{ cm}$  and an isosceles-triangle cross section of side length  $a = 2 \text{ cm}$  and included angle  $\beta = 80^\circ$ . If the average velocity is  $V = 2 \text{ m/s}$  and the fluid is SAE 10 oil at 20°C, estimate the pressure drop.

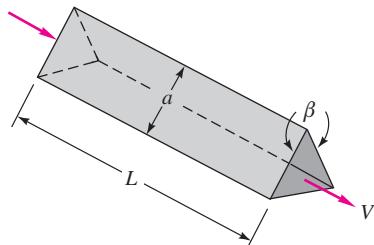

P6.91

- P6.92** A large room uses a fan to draw in atmospheric air at 20°C through a 30-cm by 30-cm commercial-steel duct

12 m long, as in Fig. P6.92. Estimate (a) the air flow rate in  $\text{m}^3/\text{h}$  if the room pressure is 10 Pa vacuum and (b) the room pressure if the flow rate is 1200  $\text{m}^3/\text{h}$ . Neglect minor losses.

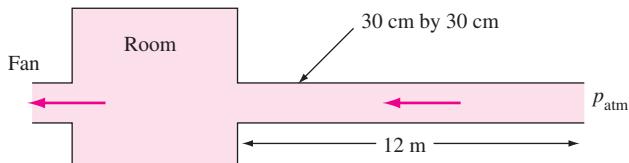

P6.92


- P6.93** In Moody's Example 6.6, the 6-inch diameter, 200-ft-long asphalted cast iron pipe has a pressure drop of about 280  $\text{lbf}/\text{ft}^2$  when the average water velocity is 6 ft/s. Compare this to an *annular* cast iron pipe with an inner diameter of 6 in and the same annular average velocity of 6 ft/s. (a) What outer diameter would cause the flow to have the same pressure drop of 280  $\text{lbf}/\text{ft}^2$ ? (b) How do the cross-section areas compare, and why? Use the hydraulic diameter approximation.

- P6.94** Air at 20°C flows through a smooth duct of diameter 20 cm at an average velocity of 5 m/s. It then flows into a smooth square duct of side length  $a$ . Find the square duct size  $a$  for which the pressure drop per meter will be exactly the same as the circular duct?


- P6.95** Although analytical solutions are available for laminar flow in many duct shapes [34], what do we do about ducts of arbitrary shape? Bahrami et al. [57] propose that a better approach to the pipe result,  $f/Re = 64$ , is achieved by replacing the hydraulic diameter  $D_h$  by  $\sqrt{A}$ , where  $A$  is the area of the cross section. Test this idea for the isosceles triangles of Table 6.4. If time is short, at least try 10°, 50°, and 80°. What do you conclude about this idea?

- P6.96** A fuel cell [59] consists of air (or oxygen) and hydrogen micro ducts, separated by a membrane that promotes proton exchange for an electric current, as in Fig. P6.96. Suppose that the air side, at 20°C and approximately 1 atm, has five 1 mm by 1 mm ducts, each 1 m long. The total flow rate is 1.5E-4 kg/s. (a) Determine if the flow is laminar or turbulent. (b) Estimate the pressure drop. (*Problem courtesy of Dr. Pezhman Shirvaniyan.*)

- P6.97** A heat exchanger consists of multiple parallel-plate passages, as shown in Fig. P6.97. The available pressure drop is 2 kPa, and the fluid is water at 20°C. If the desired total flow rate is 900  $\text{m}^3/\text{h}$ , estimate the appropriate number of passages. The plate walls are hydraulically smooth.

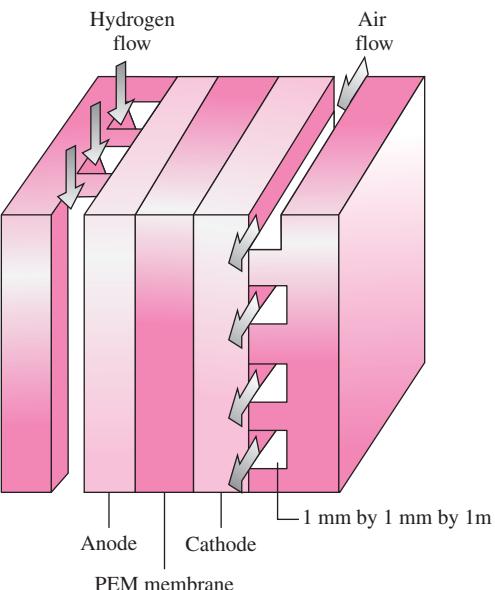


P6.96

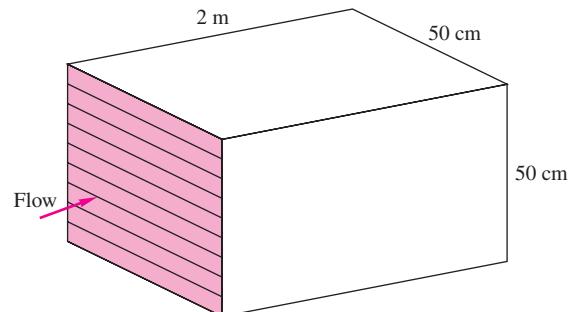

P6.97


- P6.98** A rectangular heat exchanger is to be divided into smaller sections using sheets of commercial steel 0.4 mm thick, as sketched in Fig. P6.98. The flow rate is 20 kg/s of water at 20°C. Basic dimensions are  $L = 1 \text{ m}$ ,  $W = 20 \text{ cm}$ , and  $H = 10 \text{ cm}$ . What is the proper number of *square* sections if the overall pressure drop is to be no more than 1600 Pa?

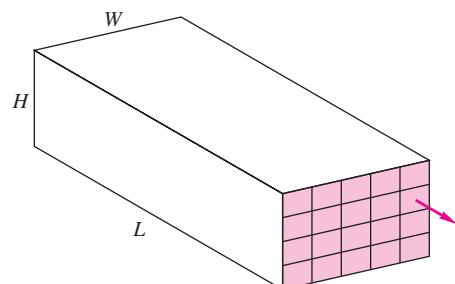

P6.98

### Minor or local losses


- P6.99** In Sec. 6.11 it was mentioned that Roman aqueduct customers obtained extra water by attaching a diffuser to their pipe exits. Fig. P6.99 shows a simulation: a smooth inlet pipe, with or without a  $15^\circ$  conical diffuser expanding to a 5-cm-diameter exit. The pipe entrance is sharp-edged. Calculate the flow rate (a) without and (b) with the diffuser.

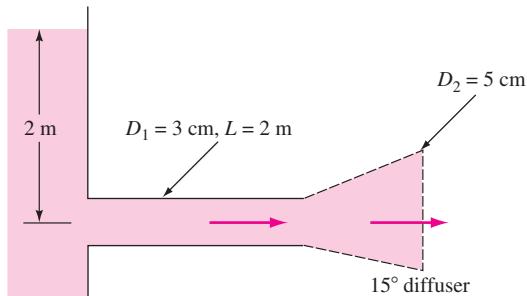

P6.99


- P6.100** Water at  $68^\circ\text{F}$  flows at 100 gal/min through a 2-in-diameter commercial steel pipe that is 150 ft long. According to Table 6.5, how many  $90^\circ$  regular screwed elbows can be added to the system before the overall pressure drop exceeds  $25 \text{ lbf/in}^2$ ?

- P6.101** In Fig. P6.101 a thick filter is being tested for losses. The flow rate in the pipe is  $7 \text{ m}^3/\text{min}$ , and the upstream pressure is 120 kPa. The fluid is air at  $20^\circ\text{C}$ . Using the water manometer reading, estimate the loss coefficient  $K$  of the filter.

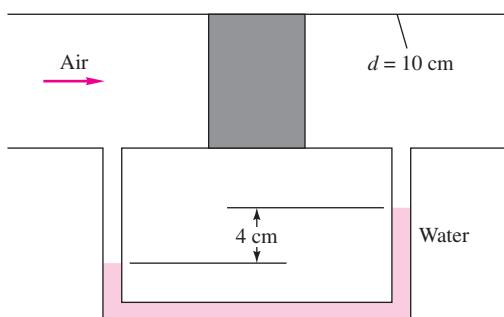


P6.101

- \*P6.102** A 70 percent efficient pump delivers water at  $20^\circ\text{C}$  from one reservoir to another 20 ft higher, as in Fig. P6.102. The piping system consists of 60 ft of galvanized iron 2-in pipe, a reentrant entrance, two screwed  $90^\circ$  long-radius elbows, a screwed-open gate valve, and a sharp exit. What is the input power required in horsepower with and without a  $6^\circ$  well-designed conical expansion added to the exit? The flow rate is  $0.4 \text{ ft}^3/\text{s}$ .

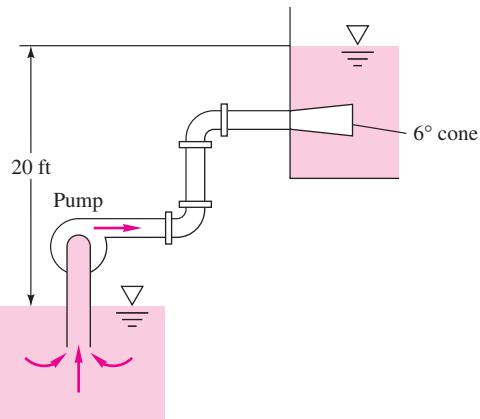

P6.102

- P6.103** The reservoirs in Fig. P6.103 are connected by cast iron pipes joined abruptly, with sharp-edged entrance and exit. Including minor losses, estimate the flow of water at  $20^\circ\text{C}$  if the surface of reservoir 1 is 45 ft higher than that of reservoir 2.

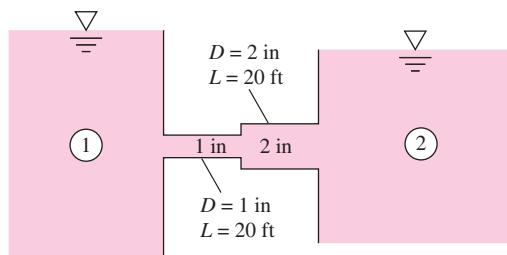


P6.103

- P6.104** Water at  $20^\circ\text{C}$  flows through a smooth horizontal pipe at  $12 \text{ m}^3/\text{h}$ . The pipe diameter is 5 cm, and its length is 10 m. (a) Compute the pressure drop. (b) If a gate valve is added, what gate opening  $h/D$  will reduce the flow rate by 50 percent for the same pressure drop?


- P6.105** The system in Fig. P6.105 consists of 1200 m of 5 cm cast iron pipe, two  $45^\circ$  and four  $90^\circ$  flanged long-radius elbows, a fully open flanged globe valve, and a sharp exit into a reservoir. If the elevation at point 1 is 400 m, what gage pressure is required at point 1 to deliver  $0.005 \text{ m}^3/\text{s}$  of water at  $20^\circ\text{C}$  into the reservoir?

- P6.106** The water pipe in Fig. P6.106 slopes upward at  $30^\circ$ . The pipe has a 1-in diameter and is smooth. The flanged globe valve is fully open. If the mercury manometer shows a 7-in deflection, what is the flow rate in  $\text{ft}^3/\text{s}$ ?


- P6.107** In Fig. P6.107 the pipe is galvanized iron. Estimate the percentage increase in the flow rate (a) if the pipe entrance

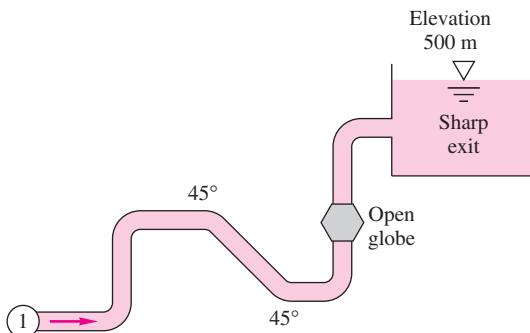


P6.105

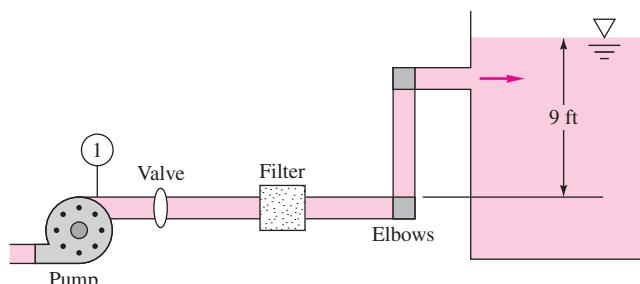

P6.108

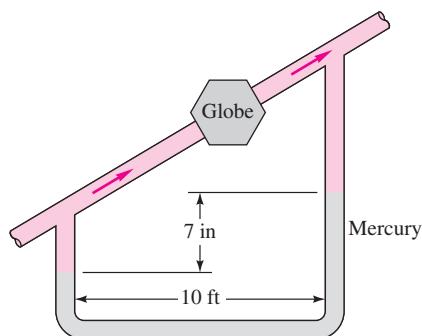

P6.106

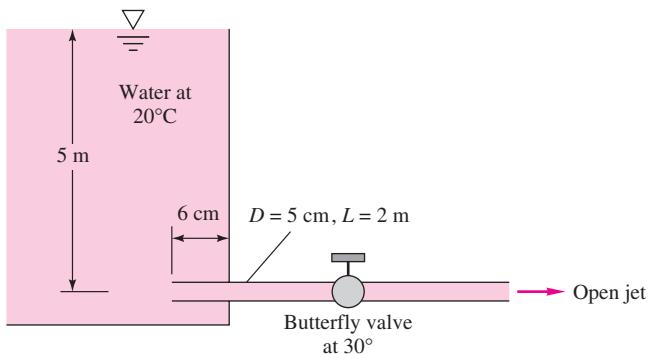


P6.107

is cut off flush with the wall and (b) if the butterfly valve is opened wide.


- P6.108** The water pump in Fig. P6.108 maintains a pressure of 6.5 psig at point 1. There is a filter, a half-open disk valve, and two regular screwed elbows. There are 80 ft of 4-in diameter commercial steel pipe. (a) If the flow rate is 0.4 ft<sup>3</sup>/s, what is the loss coefficient of the filter? (b) If the disk valve is wide open and  $K_{\text{filte}} = 7$ , what is the resulting flow rate?

**P6.109** In Fig. P6.109 there are 125 ft of 2-in pipe, 75 ft of 6-in pipe, and 150 ft of 3-in pipe, all cast iron. There are three 90° elbows and an open globe valve, all flanged. If the exit elevation is zero, what horsepower is extracted by the turbine when the flow rate is 0.16 ft<sup>3</sup>/s of water at 20°C?

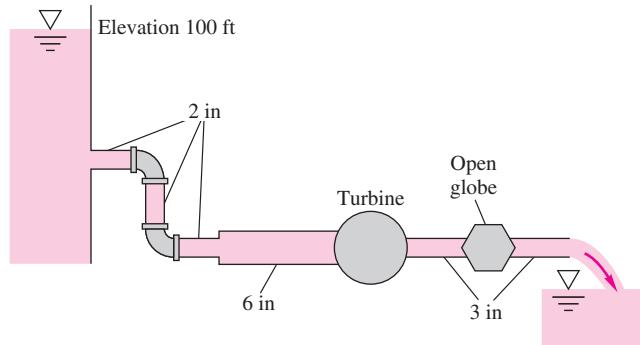

P6.109


**P6.110** In Fig. P6.110 the pipe entrance is sharp-edged. If the flow rate is 0.004 m<sup>3</sup>/s, what power, in W, is extracted by the turbine?

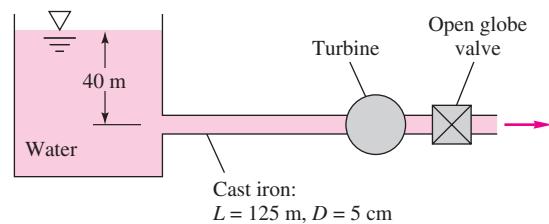

P6.110

### Series and parallel pipe systems


- P6.111** For the parallel-pipe system of Fig. P6.111, each pipe is cast iron, and the pressure drop  $p_1 - p_2 = 3 \text{ lbf/in}^2$ . Compute the total flow rate between 1 and 2 if the fluid is SAE 10 oil at 20°C.

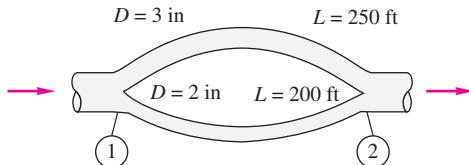

P6.111

**P6.112** If the two pipes in Fig. P6.111 are instead laid in series with the same total pressure drop of 3 lbf/in<sup>2</sup>, what will the flow rate be? The fluid is SAE 10 oil at 20°C.

**P6.113** The parallel galvanized iron pipe system of Fig. P6.113 delivers water at 20°C with a total flow rate of 0.036 m<sup>3</sup>/s. If the pump is wide open and not running, with a loss coefficient  $K = 1.5$ , determine (a) the flow rate in each pipe and (b) the overall pressure drop.

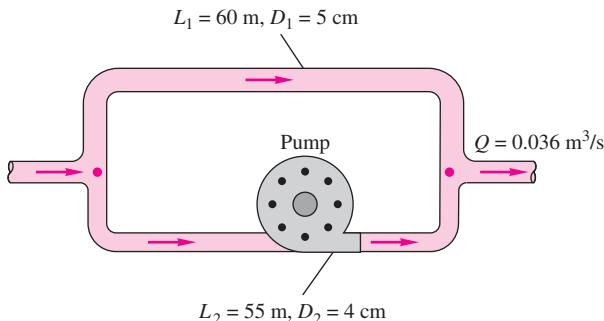


P6.113

**\*P6.114** A blower supplies standard air to a plenum that feeds two horizontal square sheet-metal ducts with sharp-edged entrances. One duct is 100 ft long, with a cross-section 6 in by 6 in. The second duct is 200 ft long. Each duct exhausts to the atmosphere. When the plenum pressure is 5.0 lbf/ft<sup>2</sup> (gage) the volume flow in the longer duct is three times the flow in the shorter duct. Estimate both volume flows and the cross-section size of the longer duct.


**P6.115** In Fig. P6.115 all pipes are 8-cm-diameter cast iron. Determine the flow rate from reservoir 1 if valve C is (a) closed and (b) open,  $K = 0.5$ .

**P6.116** For the series-parallel system of Fig. P6.116, all pipes are 8-cm-diameter asphalted cast iron. If the total pressure drop  $p_1 - p_2 = 750$  kPa, find the resulting flow rate  $Q$  m<sup>3</sup>/h for water at 20°C. Neglect minor losses.


**P6.117** A blower delivers air at 3000 m<sup>3</sup>/h to the duct circuit in Fig. P6.117. Each duct is commercial steel and of square cross section, with side lengths  $a_1 = a_3 = 20$  cm and  $a_2 = a_4 = 12$  cm. Assuming sea-level air conditions, estimate the power required if the blower has an efficiency of 75 percent. Neglect minor losses.

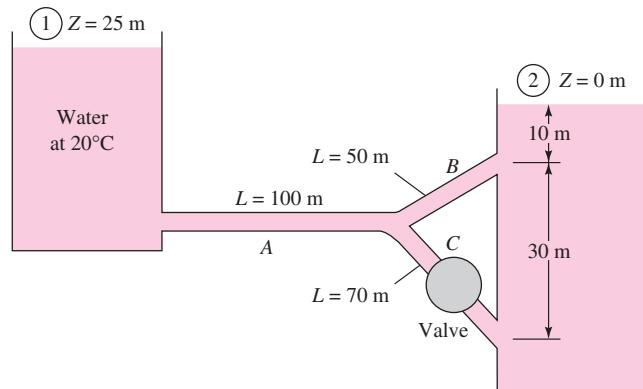

P6.115

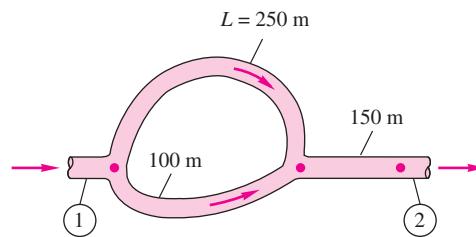


P6.116

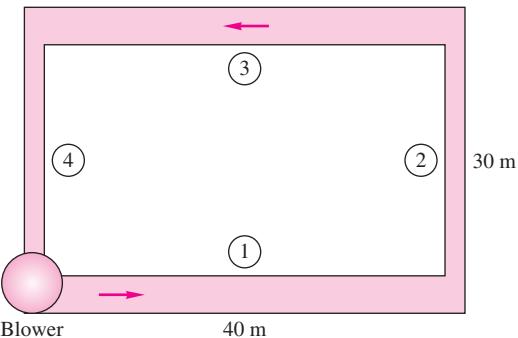

P6.117

**P6.118** For the piping system of Fig. P6.118, all pipes are concrete with a roughness of 0.04 in. Neglecting minor losses, compute the overall pressure drop  $p_1 - p_2$  in lbf/in<sup>2</sup> if  $Q = 20$  ft<sup>3</sup>/s. The fluid is water at 20°C.

**P6.119** For the system of Prob. P6.111, again let the fluid be SAE 10W oil at 20°C, with both pipes cast iron. If the flow rate in the 2-in pipe (b) is 3.0 ft<sup>3</sup>/min, estimate the flow rate in the 3-in pipe (a), in ft<sup>3</sup>/min.

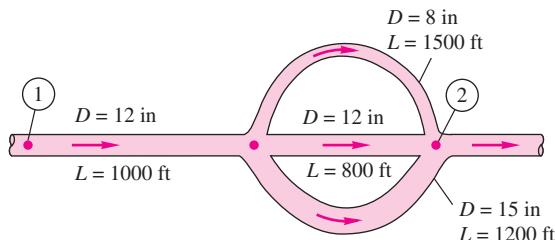

P6.118

- P6.120** Three cast iron pipes are laid in parallel with these dimensions:

Pipe	Length, m	Diameter, cm
1	800	12
2	600	8
3	900	10

The total flow rate is  $200 \text{ m}^3/\text{h}$  of water at  $20^\circ\text{C}$ . Determine (a) the flow rate in each pipe and (b) the pressure drop across the system.


### Three-reservoir and pipe network systems

- P6.121** Consider the three-reservoir system of Fig. P6.121 with the following data:

$$L_1 = 95 \text{ m} \quad L_2 = 125 \text{ m} \quad L_3 = 160 \text{ m}$$

$$z_1 = 25 \text{ m} \quad z_2 = 115 \text{ m} \quad z_3 = 85 \text{ m}$$

All pipes are 28-cm-diameter unfinished concrete ( $\epsilon = 1 \text{ mm}$ ). Compute the steady flow rate in all pipes for water at  $20^\circ\text{C}$ .

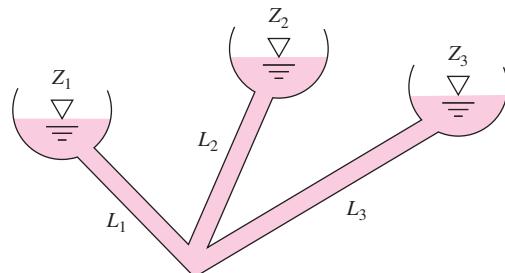

P6.121

- P6.122** Modify Prob. P6.121 as follows. Reduce the diameter to 15 cm (with  $\epsilon = 1 \text{ mm}$ ), and compute the flow rates for water at  $20^\circ\text{C}$ . These flow rates distribute in nearly the same manner as in Prob. P6.121 but are about 5.2 times lower. Can you explain this difference?


- P6.123** Modify Prob. P6.121 as follows. All data are the same except that  $z_3$  is unknown. Find the value of  $z_3$  for which the flow rate in pipe 3 is  $0.2 \text{ m}^3/\text{s}$  toward the junction. (This problem requires iteration and is best suited to a computer.)

- P6.124** The three-reservoir system in Fig. P6.124 delivers water at  $20^\circ\text{C}$ . The system data are as follows:

$$D_1 = 8 \text{ in} \quad D_2 = 6 \text{ in} \quad D_3 = 9 \text{ in}$$

$$L_1 = 1800 \text{ ft} \quad L_2 = 1200 \text{ ft} \quad L_3 = 1600 \text{ ft}$$

All pipes are galvanized iron. Compute the flow rate in all pipes.

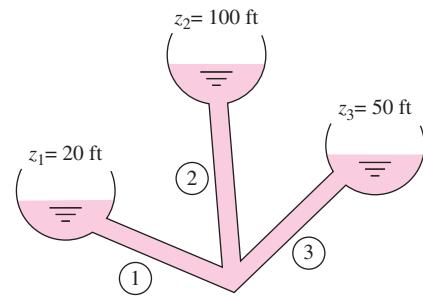


P6.124

- P6.125** Suppose that the three cast iron pipes in Prob. P6.120 are instead connected to meet smoothly at a point B, as shown in Fig. P6.125. The inlet pressures in each pipe are

$$p_1 = 200 \text{ kPa} \quad p_2 = 160 \text{ kPa} \quad p_3 = 100 \text{ kPa}.$$

The fluid is water at  $20^\circ\text{C}$ . Neglect minor losses. Estimate the flow rate in each pipe and whether it is toward or away from point B.

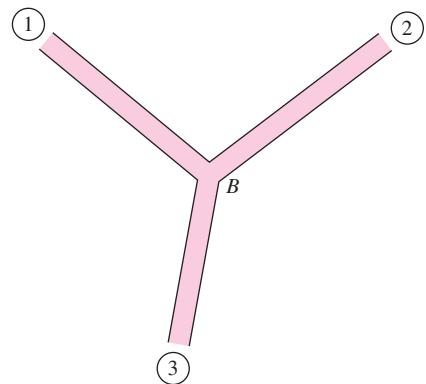


P6.125

- P6.126** Modify Prob. P6.124 as follows. Let all data be the same except that pipe 1 is fitted with a butterfly valve (Fig. 6.19b). Estimate the proper valve opening angle (in degrees) for the flow rate through pipe 1 to be reduced to

1.5 ft<sup>3</sup>/s toward reservoir 1. (This problem requires iteration and is best suited to a computer.)

- P6.127** In the five-pipe horizontal network of Fig. P6.127, assume that all pipes have a friction factor  $f = 0.025$ . For the given inlet and exit flow rate of 2 ft<sup>3</sup>/s of water at 20°C, determine the flow rate and direction in all pipes. If  $p_A = 120 \text{ lbf/in}^2$  gage, determine the pressures at points *B*, *C*, and *D*.

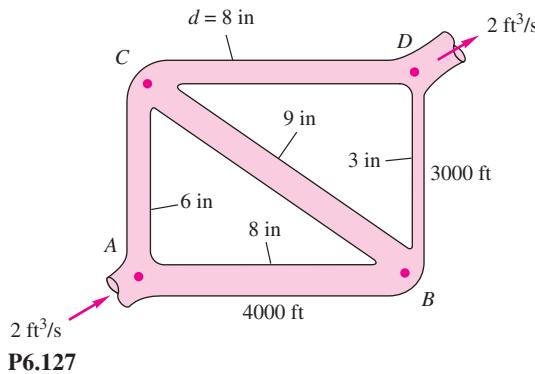


- P6.128** Modify Prob. P6.127 as follows. Let the inlet flow rate at *A* and the exit flow at *D* be unknown. Let  $p_A - p_B = 100 \text{ lbf/in}^2$ . Compute the flow rate in all five pipes.

- P6.129** In Fig. P6.129 all four horizontal cast iron pipes are 45 m long and 8 cm in diameter and meet at junction *a*, delivering water at 20°C. The pressures are known at four points as shown:


$$\begin{aligned} p_1 &= 950 \text{ kPa} & p_2 &= 350 \text{ kPa} \\ p_3 &= 675 \text{ kPa} & p_4 &= 100 \text{ kPa} \end{aligned}$$

Neglecting minor losses, determine the flow rate in each pipe.

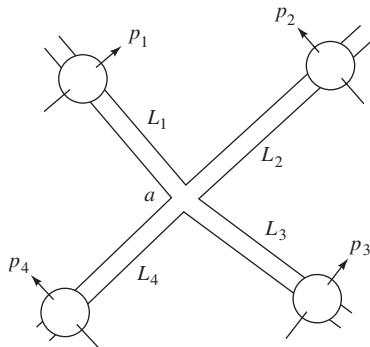

- P6.130** In Fig. P6.130 lengths *AB* and *BD* are 2000 and 1500 ft respectively. The friction factor is 0.022 everywhere, and  $p_A = 90 \text{ lbf/in}^2$  gage. All pipes have a diameter of 6 in.

For water at 20°C, determine the flow rate in all pipes and the pressures at points *B*, *C*, and *D*.

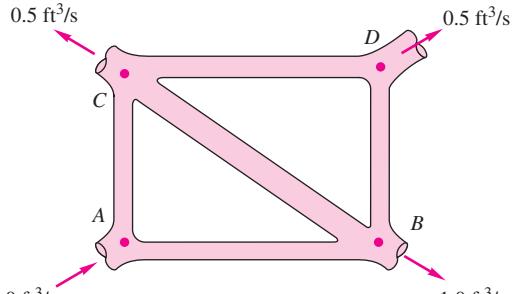

### Diffuser performance

- P6.131** A water tunnel test section has a 1-m diameter and flow properties  $V = 20 \text{ m/s}$ ,  $p = 100 \text{ kPa}$ , and  $T = 20^\circ\text{C}$ . The boundary layer blockage at the end of the section is 9 percent. If a conical diffuser is to be added at the end of the section to achieve maximum pressure recovery, what should its angle, length, exit diameter, and exit pressure be?

- P6.132** For Prob. P6.131 suppose we are limited by space to a total diffuser length of 10 m. What should the diffuser angle, exit diameter, and exit pressure be for maximum recovery?

- P6.133** A wind tunnel test section is 3 ft square with flow properties  $V = 150 \text{ ft/s}$ ,  $p = 15 \text{ lbf/in}^2$  absolute, and  $T = 68^\circ\text{F}$ . Boundary layer blockage at the end of the test section is 8 percent. Find the angle, length, exit height, and exit pressure of a flat-walled diffuser added onto the section to achieve maximum pressure recovery.



- P6.134** For Prob. P6.133 suppose we are limited by space to a total diffuser length of 30 ft. What should the diffuser angle, exit height, and exit pressure be for maximum recovery?

### The pitot-static tube


- P6.135** An airplane uses a pitot-static tube as a velocimeter. The measurements, with their uncertainties, are a static temperature of  $(-11 \pm 3)^\circ\text{C}$ , a static pressure of  $60 \pm 2 \text{ kPa}$ , and a pressure difference  $(p_o - p_s) = 3200 \pm 60 \text{ Pa}$ . (a) Estimate the airplane's velocity and its uncertainty. (b) Is a compressibility correction needed?

- P6.136** For the pitot-static pressure arrangement of Fig. P6.136, the manometer fluid is (colored) water at 20°C. Estimate (a) the centerline velocity, (b) the pipe volume flow, and (c) the (smooth) wall shear stress.


- P6.137** For the 20°C water flow of Fig. P6.137, use the pitot-static arrangement to estimate (a) the centerline velocity and (b) the volume flow in the 5-in-diameter smooth pipe. (c) What error in flow rate is caused by neglecting the 1-ft elevation difference?

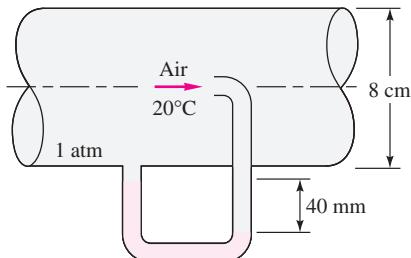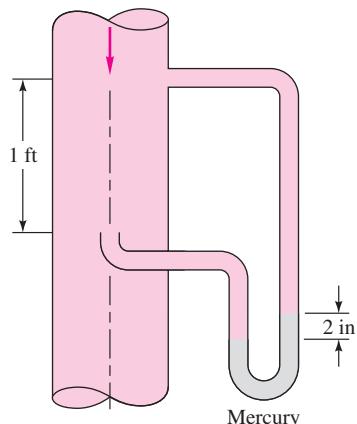**P6.136****P6.137**

- P6.138** An engineer who took college fluid mechanics on a pass-fail basis has placed the static pressure hole far upstream of the stagnation probe, as in Fig. P6.138, thus contaminating the pitot measurement ridiculously with pipe friction losses. If the pipe fwb is air at 20°C and 1 atm and the manometer fluid is Merriam red oil ( $\text{SG} = 0.827$ ), estimate the air centerline velocity for the given manometer reading of 16 cm. Assume a smooth-walled tube.

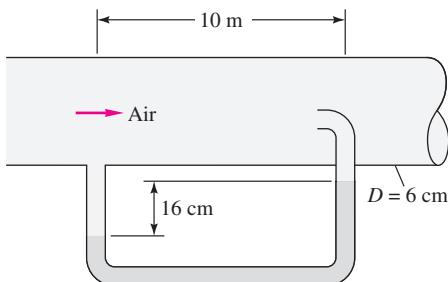**P6.138**

- P6.139** Professor Walter Tunnel needs to measure the flow velocity in a water tunnel. Due to budgetary restrictions, he cannot afford a pitot-static probe, but instead inserts a total head probe and a static pressure probe, as shown in Fig. P6.139, a distance  $h_1$  apart from each other. Both probes are in the main free stream of the water tunnel, unaffected by the thin boundary layers on the sidewalls. The two probes are connected as shown to a U-tube manometer. The densities and vertical distances are shown in Fig. P6.139. (a) Write an expression for velocity  $V$  in terms of the parameters in the problem. (b) Is it critical that distance  $h_1$  be measured accurately? (c) How does the expression for velocity  $V$  differ from that which would be obtained if a pitot-static probe had been available and used with the same U-tube manometer?

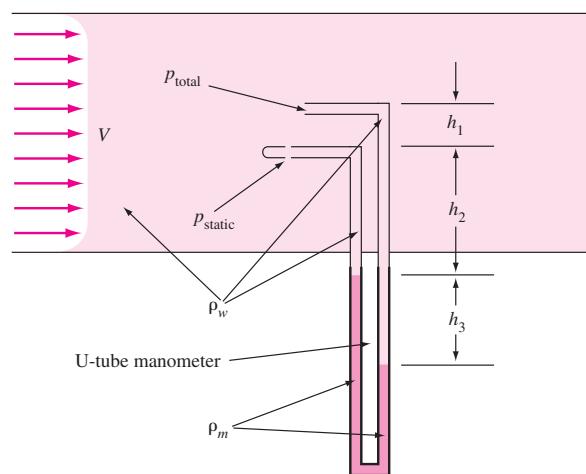
**P6.139**

### Flowmeters: the orifice plate

- P6.140** Kerosene at 20°C flows at 18 m<sup>3</sup>/h in a 5-cm-diameter pipe. If a 2-cm-diameter thin-plate orifice with corner taps is installed, what will the measured pressure drop be, in Pa?

- P6.141** Gasoline at 20°C flows at 105 m<sup>3</sup>/h in a 10-cm-diameter pipe. We wish to meter the flow with a thin-plate orifice and a differential pressure transducer that reads best at about 55 kPa. What is the proper  $\beta$  ratio for the orifice?


- P6.142** The shower head in Fig. P6.142 delivers water at 50°C. An orifice-type flow reducer is to be installed. The upstream pressure is constant at 400 kPa. What flow rate, in gal/min, results without the reducer? What reducer orifice diameter would decrease the flow by 40 percent?

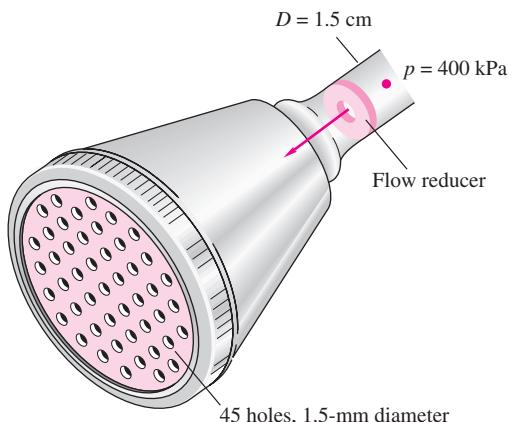

P6.142


**P6.143** A 10-cm-diameter smooth pipe contains an orifice plate with  $D: \frac{1}{2}D$  taps and  $\beta = 0.5$ . The measured orifice pressure drop is 75 kPa for water at 20°C. Estimate the flow rate, in m<sup>3</sup>/h. What is the nonrecoverable head loss?

\***P6.144** Water at 20°C flows through the orifice in Fig. P6.154, which is monitored by a mercury manometer. If  $d = 3$  cm, (a) what is  $h$  when the flow rate is 20 m<sup>3</sup>/h and (b) what is  $Q$  in m<sup>3</sup>/h when  $h = 58$  cm?

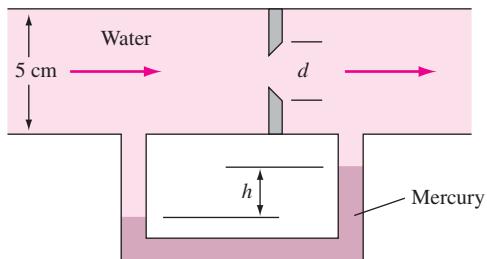


P6.144

**P6.145** The 1-m-diameter tank in Fig. P6.145 is initially filled with gasoline at 20°C. There is a 2-cm-diameter orifice in the bottom. If the orifice is suddenly opened, estimate the time for the fluid level  $h(t)$  to drop from 2.0 to 1.6 m.

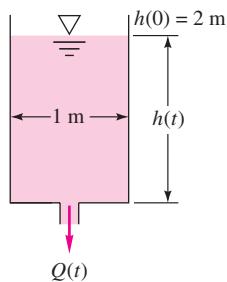


P6.145

**P6.146** A pipe connecting two reservoirs, as in Fig. P6.146, contains a thin-plate orifice. For water flow at 20°C, estimate (a) the volume flow through the pipe and (b) the pressure drop across the orifice plate.

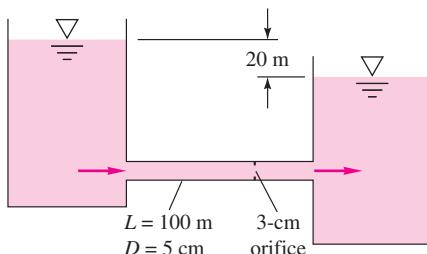


P6.146

**P6.147** Air flows through a 6-cm-diameter smooth pipe that has a 2-m-long perforated section containing 500 holes (diameter 1 mm), as in Fig. P6.147. Pressure outside the pipe is sea-level standard air. If  $p_1 = 105$  kPa and  $Q_1 = 110$  m<sup>3</sup>/h, estimate  $p_2$  and  $Q_2$ , assuming that the holes are approximated by thin-plate orifices. Hint: A momentum control volume may be very useful.

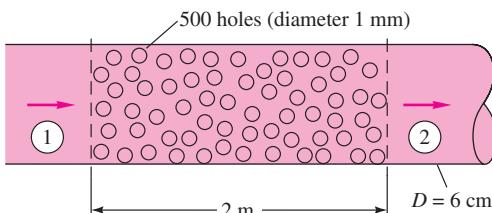

P6.147

**P6.148** A smooth pipe containing ethanol at 20°C flows at 7 m<sup>3</sup>/h through a Bernoulli obstruction, as in Fig. P6.148. Three piezometer tubes are installed, as shown. If the obstruction is a thin-plate orifice, estimate the piezometer levels (a)  $h_2$  and (b)  $h_3$ .

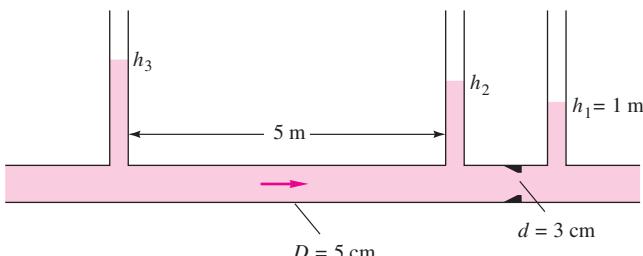

P6.148


### Flowmeters: the flow nozzle

**P6.149** In a laboratory experiment, air at 20°C flows from a large tank through a 2-cm-diameter smooth pipe into a sea-level

atmosphere, as in Fig. P6.149. The flow is metered by a long-radius nozzle of 1-cm diameter, using a manometer with Meriam red oil (SG = 0.827). The pipe is 8 m long. The measurements of tank pressure and manometer height are as follows:

$p_{\text{tank}}$ , Pa(gage):	60	320	1200	2050	2470	3500	4900
$h_{\text{mano}}$ , mm:	6	38	160	295	380	575	820

Use these data to calculate the flow rates  $Q$  and Reynolds numbers  $Re_D$  and make a plot of measured flow rate versus tank pressure. Is the flow laminar or turbulent? Compare the data with theoretical results obtained from the Moody chart, including minor losses. Discuss.

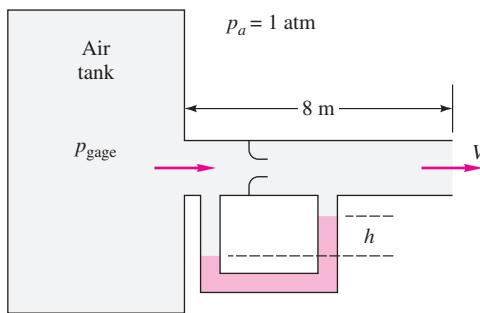

P6.149

- P6.150** Gasoline at 20°C flows at 0.06 m<sup>3</sup>/s through a 15-cm pipe and is metered by a 9-cm long-radius flow nozzle (Fig. 6.40a). What is the expected pressure drop across the nozzle?


- P6.151** An engineer needs to monitor a flow of 20°C gasoline at about 250 ± 25 gal/min through a 4-in-diameter smooth pipe. She can use an orifice plate, a long-radius flow nozzle, or a venturi nozzle, all with 2-in-diameter throats. The only differential pressure gage available is accurate in the range 6 to 10 lbf/in<sup>2</sup>. Disregarding flow losses, which device is best?

- P6.152** Kerosene at 20°C flows at 20 m<sup>3</sup>/h in an 8-cm-diameter pipe. The flow is to be metered by an ISA 1932 flow nozzle so that the pressure drop is 7000 Pa. What is the proper nozzle diameter?

- P6.153** Two water tanks, each with base area of 1 ft<sup>2</sup>, are connected by a 0.5-in-diameter long-radius nozzle as in Fig. P6.153. If  $h = 1$  ft as shown for  $t = 0$ , estimate the time for  $h(t)$  to drop to 0.25 ft.

### Flowmeters: the venturi meter

- P6.154** Gasoline at 20°C flows through a 6-cm-diameter pipe. It is metered by a modern venturi nozzle with  $d = 4$  cm.

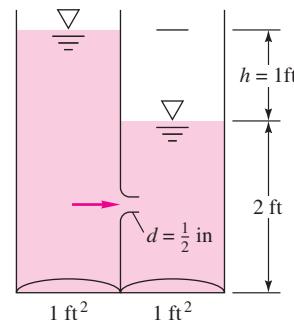


P6.153

The measured pressure drop is 8.5 kPa. Estimate the flow rate in gallons per minute.

- P6.155** It is desired to meter methanol at 20°C flowing through a 5-in-diameter pipe. The expected flow rate is about 300 gal/min. Two flowmeters are available: a venturi nozzle and a thinplate orifice, each with  $d = 2$  in. The differential pressure gage on hand is most accurate at about 12–15 lbf/in<sup>2</sup>. Which meter is better for this job?

- P6.156** Ethanol at 20°C flows down through a modern venturi nozzle as in Fig. P6.156. If the mercury manometer reading is 4 in, as shown, estimate the flow rate, in gal/min.

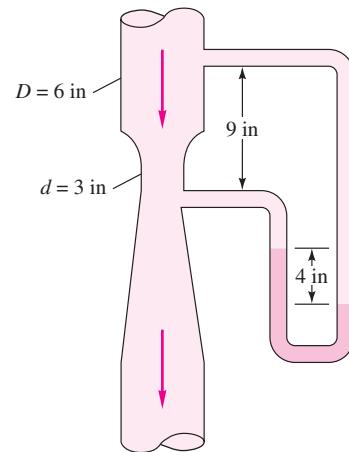

P6.156

- P6.157** Modify Prob. P6.156 if the fluid is air at 20°C, entering the venturi at a pressure of 18 lbf/in<sup>2</sup>. Should a compressibility correction be used?

- P6.158** Water at 20°C flows in a long horizontal commercial steel 6-cm-diameter pipe that contains a classical Herschel venturi with a 4-cm throat. The venturi is connected to a mercury manometer whose reading is  $h = 40$  cm. Estimate (a) the flow rate, in m<sup>3</sup>/h, and (b) the total pressure difference between points 50 cm upstream and 50 cm downstream of the venturi.


- P6.159** A modern venturi nozzle is tested in a laboratory flow with water at 20°C. The pipe diameter is 5.5 cm, and the venturi throat diameter is 3.5 cm. The flow rate is measured by a weigh tank and the pressure drop by a water–mercury manometer. The mass flow rate and manometer readings are as follows:

$\dot{m}$ , kg/s	0.95	1.98	2.99	5.06	8.15
$h$ , mm	3.7	15.9	36.2	102.4	264.4

Use these data to plot a calibration curve of venturi discharge coefficient versus Reynolds number. Compare with the accepted correlation, Eq. (6.114).

### Flowmeters: other designs

- P6.160** An instrument popular in the beverage industry is the *target flowmeter* in Fig. P6.160. A small flat disk is mounted in the center of the pipe, supported by a strong but thin rod. (a) Explain how the flowmeter works. (b) If the bending moment  $M$  of the rod is measured at the wall, derive a formula for the estimated velocity of the flow. (c) List a few advantages and disadvantages of such an instrument.

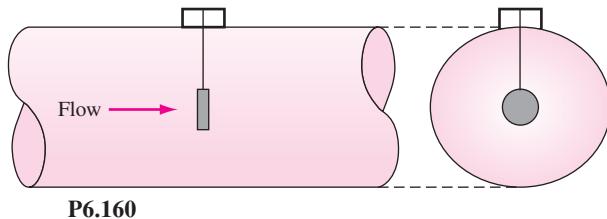


P6.160

- P6.161** An instrument popular in the water supply industry, sketched in Fig. P6.161, is the single jet water meter. (a) How does it work? (b) What do you think a typical calibration curve would look like? (c) Can you cite further details, for example, reliability, head loss, cost [58]?

### Word Problems


- W6.1** In fully developed straight-duct flow, the velocity profiles do not change (why?), but the pressure drops along the pipe axis. Thus there is pressure work done on the fluid. If, say, the pipe is insulated from heat loss, where does this energy go? Make a thermodynamic analysis of the pipe flow.
- W6.2** From the Moody chart (Fig. 6.13), rough surfaces, such as sand grains or ragged machining, do not affect

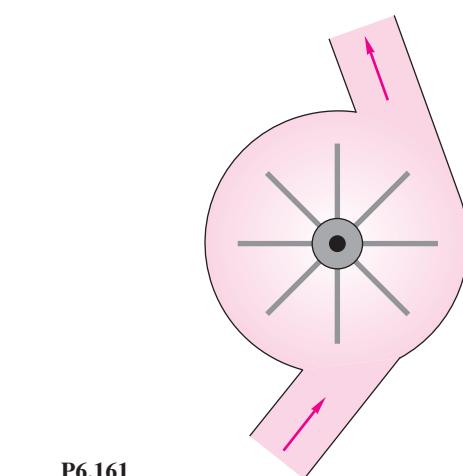

P6.161

### Flowmeters: compressibility correction

- P6.162** Air flows at high speed through a Herschel venturi monitored by a mercury manometer, as shown in Fig. P6.162. The upstream conditions are 150 kPa and 80°C. If  $h = 37$  cm, estimate the mass flow in kg/s. (*Hint:* The flow is compressible.)

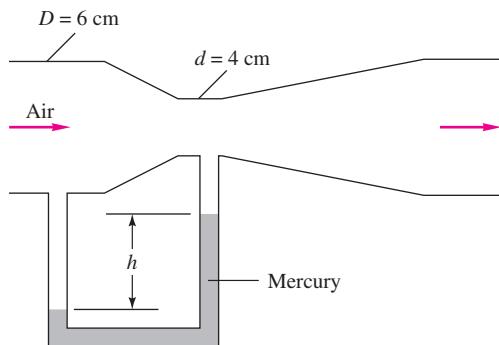

P6.162

- P6.163** Modify Prob. P6.162 as follows. Find the manometer reading  $h$  for which the mass flow through the venturi is approximately 0.4 kg/s. (*Hint:* The flow is compressible.)

laminar flow. Can you explain why? They *do* affect turbulent flow. Can you develop, or suggest, an analytical–physical model of turbulent flow near a rough surface that might be used to predict the known increase in pressure drop?

**W6.3** Differentiation of the laminar pipe flow solution, Eq. (6.40), shows that the fluid shear stress  $\tau(r)$  varies linearly from zero at the axis to  $\tau_w$  at the wall. It is

claimed that this is also true, at least in the time mean, for fully developed *turbulent* flow. Can you verify this claim analytically?

- W6.4** A porous medium consists of many tiny tortuous passages, and Reynolds numbers based on pore size are usually very low, of order unity. In 1856 H. Darcy proposed that the pressure gradient in a porous medium was directly proportional to the volume-averaged velocity  $\mathbf{V}$  of the fluid:

$$\nabla p = -\frac{\mu}{K} \mathbf{V}$$

where  $K$  is termed the *permeability* of the medium. This is now called *Darcys' law* of porous flow. Can

you make a Poiseuille flow model of porous-media flow that verifies Darcy's law? Meanwhile, as the Reynolds number increases, so that  $VK^{1/2}/\nu > 1$ , the pressure drop becomes nonlinear, as was shown experimentally by P. H. Forsheimer as early as 1782. The flow is still decidedly laminar, yet the pressure gradient is quadratic:

$$\nabla p = -\frac{\mu}{K} \mathbf{V} - C|V|\mathbf{V} \quad \text{Darcy-Forsheimer law}$$

where  $C$  is an empirical constant. Can you explain the reason for this nonlinear behavior?

## Fundamentals of Engineering Exam Problems

- FE6.1** In flow through a straight, smooth pipe, the diameter Reynolds number for transition to turbulence is generally taken to be  
 (a) 1500, (b) 2300, (c) 4000, (d) 250,000, (e) 500,000
- FE6.2** For flow of water at 20°C through a straight, smooth pipe at 0.06 m<sup>3</sup>/h, the pipe diameter for which transition to turbulence occurs is approximately  
 (a) 1.0 cm, (b) 1.5 cm, (c) 2.0 cm, (d) 2.5 cm, (e) 3.0 cm
- FE6.3** For flow of oil [ $\mu = 0.1 \text{ kg}/(\text{m} \cdot \text{s})$ , SG = 0.9] through a long, straight, smooth 5-cm-diameter pipe at 14 m<sup>3</sup>/h, the pressure drop per meter is approximately  
 (a) 2200 Pa, (b) 2500 Pa, (c) 10,000 Pa, (d) 160 Pa, (e) 2800 Pa
- FE6.4** For flow of water at a Reynolds number of 1.03 E6 through a 5-cm-diameter pipe of roughness height 0.5 mm, the approximate Moody friction factor is  
 (a) 0.012, (b) 0.018, (c) 0.038, (d) 0.049, (e) 0.102
- FE6.5** Minor losses through valves, fittings, bends, contractions, and the like are commonly modeled as proportional to (a) total head, (b) static head, (c) velocity head, (d) pressure drop, (e) velocity
- FE6.6** A smooth 8-cm-diameter pipe, 200 m long, connects two reservoirs, containing water at 20°C, one of which has a surface elevation of 700 m and the other a surface elevation of 560 m. If minor losses are neglected, the expected flow rate through the pipe is  
 (a) 0.048 m<sup>3</sup>/h, (b) 2.87 m<sup>3</sup>/h, (c) 134 m<sup>3</sup>/h, (d) 172 m<sup>3</sup>/h, (e) 385 m<sup>3</sup>/h
- FE6.7** If, in Prob. FE6.6 the pipe is rough and the actual flow rate is 90 m<sup>3</sup>/h, then the expected average roughness height of the pipe is approximately  
 (a) 1.0 mm, (b) 1.25 mm, (c) 1.5 mm, (d) 1.75 mm, (e) 2.0 mm
- FE6.8** Suppose in Prob. FE6.6 the two reservoirs are connected, not by a pipe, but by a sharp-edged orifice of diameter 8 cm. Then the expected flow rate is approximately  
 (a) 90 m<sup>3</sup>/h, (b) 579 m<sup>3</sup>/h, (c) 748 m<sup>3</sup>/h, (d) 949 m<sup>3</sup>/h, (e) 1048 m<sup>3</sup>/h
- FE6.9** Oil [ $\mu = 0.1 \text{ kg}/(\text{m} \cdot \text{s})$ , SG = 0.9] flows through a 50-m-long smooth 8-cm-diameter pipe. The maximum pressure drop for which laminar flow is expected is approximately  
 (a) 30 kPa, (b) 40 kPa, (c) 50 kPa, (d) 60 kPa, (e) 70 kPa
- FE6.10** Air at 20°C and approximately 1 atm flows through a smooth 30-cm-square duct at 1500 ft<sup>3</sup>/min. The expected pressure drop per meter of duct length is  
 (a) 1.0 Pa, (b) 2.0 Pa, (c) 3.0 Pa, (d) 4.0 Pa, (e) 5.0 Pa
- FE6.11** Water at 20°C flows at 3 m<sup>3</sup>/h through a sharp-edged 3-cm-diameter orifice in a 6-cm-diameter pipe. Estimate the expected pressure drop across the orifice.  
 (a) 440 Pa, (b) 680 Pa, (c) 875 Pa, (d) 1750 Pa, (e) 1870 Pa
- FE6.12** Water flows through a straight 10-cm-diameter pipe at a diameter Reynolds number of 250,000. If the pipe roughness is 0.06 mm, what is the approximate Moody friction factor?  
 (a) 0.015, (b) 0.017, (c) 0.019, (d) 0.026, (e) 0.032
- FE6.13** What is the hydraulic diameter of a rectangular air-ventilation duct whose cross section is 1 m by 25 cm?  
 (a) 25 cm, (b) 40 cm, (c) 50 cm, (d) 75 cm, (e) 100 cm
- FE6.14** Water at 20°C flows through a pipe at 300 gal/min with a friction head loss of 45 ft. What is the power required to drive this flow?  
 (a) 0.16 kW, (b) 1.88 kW, (c) 2.54 kW, (d) 3.41 kW, (e) 4.24 kW


- FE6.15** Water at 20°C flows at 200 gal/min through a pipe 150 m long and 8 cm in diameter. If the friction head

loss is 12 m, what is the Moody friction factor?  
(a) 0.010, (b) 0.015, (c) 0.020, (d) 0.025, (e) 0.030

## Comprehensive Problems

- C6.1** A pitot-static probe will be used to measure the velocity distribution in a water tunnel at 20°C. The two pressure lines from the probe will be connected to a U-tube manometer that uses a liquid of specific gravity 1.7. The maximum velocity expected in the water tunnel is 2.3 m/s. Your job is to select an appropriate U-tube from a manufacturer that supplies manometers of heights 8, 12, 16, 24, and 36 in. The cost increases significantly with manometer height. Which of these should you purchase?
- \*C6.2** A pump delivers a steady flow of water ( $\rho$ ,  $\mu$ ) from a large tank to two other higher-elevation tanks, as shown in Fig. C6.2. The same pipe of diameter  $d$  and roughness  $\epsilon$  is used throughout. All minor losses *except through the valve* are neglected, and the par-

tially closed valve has a loss coefficient  $K_{\text{valve}}$ . Turbulent flow may be assumed with all kinetic energy flux correction coefficients equal to 1.06. The pump net head  $H$  is a known function of  $Q_A$  and hence also of  $V_A = Q_A/A_{\text{pipe}}$ ; for example,  $H = a - bV_A^2$ , where  $a$  and  $b$  are constants. Subscript  $J$  refers to the junction point at the tee where branch  $A$  splits into  $B$  and  $C$ . Pipe length  $L_C$  is much longer than  $L_B$ . It is desired to predict the pressure at  $J$ , the three pipe velocities and friction factors, and the pump head. Thus there are eight variables:  $H$ ,  $V_A$ ,  $V_B$ ,  $V_C$ ,  $f_A$ ,  $f_B$ ,  $f_C$ ,  $p_J$ . Write down the eight equations needed to resolve this problem, but *do not solve*, since an elaborate iteration procedure, or an equation solver such as EES, would be required.

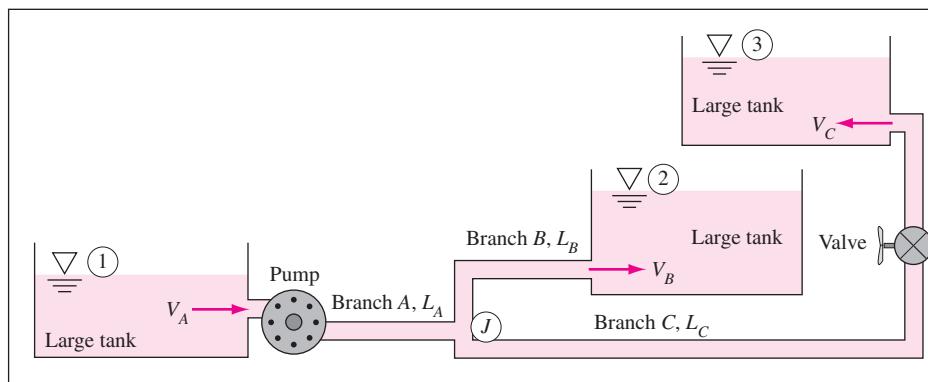


C6.2

- C6.3** A small water slide is to be installed inside a swimming pool. See Fig. C6.3. The slide manufacturer recommends a continuous water flow rate  $Q$  of  $1.39 \times 10^{-3} \text{ m}^3/\text{s}$  (about 22 gal/min) down the slide, to ensure that the customers do not burn their bottoms. A pump is to be installed under the slide, with a 5.00-m-long, 4.00-cm-diameter hose supplying swimming pool water for the slide. The pump is 80 percent efficient and will rest fully submerged 1.00 m below the water surface. The roughness inside the hose is about 0.0080 cm. The hose discharges the water at the top of the slide as a free jet open to the atmosphere. The hose outlet is 4.00 m above the water surface. For fully developed turbulent pipe flow, the kinetic energy flux correction

factor is about 1.06. Ignore any minor losses here. Assume that  $\rho = 998 \text{ kg/m}^3$  and  $v = 1.00 \times 10^{-6} \text{ m}^2/\text{s}$  for this water. Find the brake horsepower (that is, the actual shaft power in watts) required to drive the pump.


- \*C6.4** Suppose you build a rural house where you need to run a pipe to the nearest water supply, which is fortunately at an elevation of about 1000 m above that of your house. The pipe will be 6.0 km long (the distance to the water supply), and the gage pressure at the water supply is 1000 kPa. You require a minimum of 3.0 gal/min of water when the end of your pipe is open to the atmosphere. To minimize cost, you want to buy the smallest-diameter pipe possible. The pipe you will use is extremely smooth. (a) Find the total head loss from

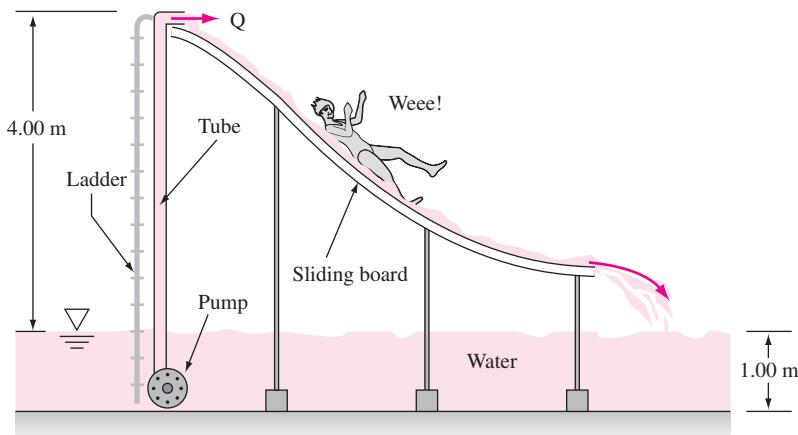

C6.3

the pipe inlet to its exit. Neglect any minor losses due to valves, elbows, entrance lengths, and so on, since the length is so long here and major losses dominate. Assume the outlet of the pipe is open to the atmosphere. (b) Which is more important in this problem, the head loss due to elevation difference or the head loss due to pressure drop in the pipe? (c) Find the minimum required pipe diameter.

- C6.5** Water at room temperature flows at the *same* volume flow rate,  $Q = 9.4 \times 10^{-4} \text{ m}^3/\text{s}$ , through two ducts, one a round pipe and one an annulus. The cross-sectional area  $A$  of the two ducts is identical, and all walls are made of commercial steel. Both ducts are the same length. In the cross sections shown in Fig. C6.5  $R = 15.0 \text{ mm}$  and  $a = 25.0 \text{ mm}$ .

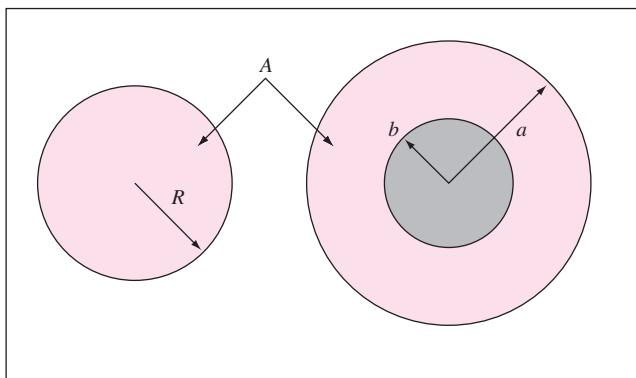

C6.5

(a) What is the radius  $b$  such that the cross-sectional areas of the two ducts are identical? (b) Compare the frictional head loss  $h_f$  per unit length of pipe for the two cases, assuming fully developed flow. For the

annulus, do both a quick estimate (using the hydraulic diameter) and a more accurate estimate (using the effective diameter correction), and compare. (c) If the losses are different for the two cases, explain why. Which duct, if any, is more "efficient"?

**C6.6**

John Laufer (*NACA Tech Rep. 1174*, 1954) gave velocity data  $20^\circ\text{C}$  airflow in a smooth 24.7-cm-diameter pipe at  $\text{Re} \approx 5 \times 10^5$ :

$u/u_{CL}$	1.0	0.997	0.988	0.959	0.908	0.847	0.818	0.771	0.690
$r/R$	0.0	0.102	0.206	0.412	0.617	0.784	0.846	0.907	0.963

The centerline velocity  $u_{CL}$  was 30.5 m/s. Determine (a) the average velocity by numerical integration and (b) the wall shear stress from the log law approximation. Compare with the Moody chart and with Eq. (6.43).

**C6.7**

Consider energy exchange in fully developed laminar flow between parallel plates, as in Eqs. (6.63). Let the pressure drop over a length  $L$  be  $\Delta p$ . Calculate the rate of work done by this pressure drop on the fluid in the region  $(0 < x < L, -h < y < +h)$  and compare with the integrated energy dissipated due to the viscous function  $\Phi$  from Eq. (4.50) over this same region. The two should be equal. Explain why this is so. Can you relate the viscous drag force and the wall shear stress to this energy result?

**C6.8**

This text has presented the traditional correlations for the turbulent smooth-wall friction factor, Eq. (6.38), and the law-of-the-wall, Eq. (6.28). Recently, groups at Princeton and Oregon [56] have made new friction measurements and suggest the following smooth-wall friction law:

$$\frac{1}{\sqrt{f}} = 1.930 \log_{10}(\text{Re}_D \sqrt{f}) - 0.537$$


In earlier work, they also report that better values for the constants  $\kappa$  and  $B$  in the log-law, Eq. (6.28), are  $\kappa \approx 0.421 \pm 0.002$  and  $B \approx 5.62 \pm 0.08$ . (a) Calculate a few values of  $f$  in the range  $1E4 \leq Re_D \leq 1E8$  and see how the two formulas differ. (b) Read Ref. 56 and briefly check the five papers in its bibliography. Report to the class on the general results of this work.

- C6.9** A pipeline has been proposed to carry natural gas 1715 miles from Alaska's North Slope to Calgary,

Alberta, Canada. The (assumed smooth) pipe diameter will be 52 in. The gas will be at high pressure, averaging 2500 lbs/in<sup>2</sup>. (a) Why? The proposed flow rate is 4 billion cubic feet per day at sea-level conditions. (b) What volume flow rate, at 20°C, would carry the same mass at the high pressure? (c) If natural gas is assumed to be methane ( $CH_4$ ), what is the total pressure drop? (d) If each pumping station can deliver 12,000 hp to the flow, how many stations are needed?

## Design Projects

- D6.1**  A hydroponic garden uses the 10-m-long perforated-pipe system in Fig. D6.1 to deliver water at 20°C. The pipe is 5 cm in diameter and contains a circular hole every 20 cm. A pump delivers water at 75 kPa (gage) at the entrance, while the other end of the pipe is closed. If you attempted, for example, Prob. P3.125, you know that the pressure near the closed end of a perforated "manifold" is surprisingly high, and there will be too much flow through the holes near that end. One remedy is to vary the hole size along the pipe

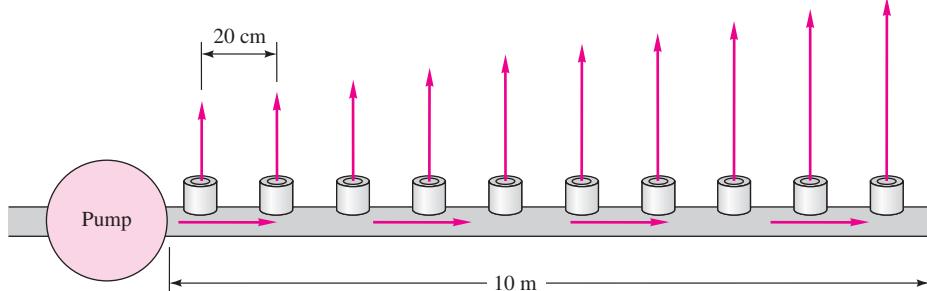

**D6.1**

model 1206 centrifugal pump manufactured by Taco Inc., Cranston, Rhode Island. Test data have been provided to us by Taco Inc. for a small model of this pump:  $D = 5.45$  in,  $\Omega = 1760$  r/min, tested with water at 20°C:

$Q$ , gal/min	0	5	10	15	20	25	30	35	40	45	50	55	60
$H$ , ft	28	28	29	29	28	28	27	26	25	23	21	18	15
Efficiency, %	0	13	25	35	44	48	51	53	54	55	53	50	45

The tank is to be fled daily with rather chilly (10°C) groundwater from an aquifer, which is 0.8 mi from the tank and 150 ft lower than the tank. Estimated daily water use is 1.5 million gal/day. Filling time should not exceed 8 h per day. The piping system should have four "butterfly" valves with variable openings (see Fig. 6.19), 10 elbows of various angles, and galvanized iron pipe of a size to be selected in the design. The design

axis. Make a design analysis, perhaps using a personal computer, to pick the optimum hole size distribution that will make the discharge flow rate as uniform as possible along the pipe axis. You are constrained to pick hole sizes that correspond only to commercial (numbered) metric drill-bit sizes available to the typical machine shop.

**D6.2** 

It is desired to design a pump-piping system to keep a 1-million-gallon capacity water tank filled. The plan is to use a modified (in size and speed) version of the

should be economical—both in capital costs and operating expense. Taco Inc. has provided the following cost estimates for system components:

Pump and motor	\$3500 plus \$1500 per inch of impeller size
Pump speed	Between 900 and 1800 r/min
Valves	\$300 + \$200 per inch of pipe size
Elbows	\$50 plus \$50 per inch of pipe size
Pipes	\$1 per inch of diameter per foot of length
Electricity cost	10¢ per kilowatt-hour

Your design task is to select an economical pipe size and pump impeller size and speed for this task, using the pump test data in nondimensional form (see Prob. P5.61) as design data. Write a brief report (five to six pages) showing your calculations and graphs.

## References

1. P. S. Bernard and J. M. Wallace, *Turbulent Flow: Analysis, Measurement, and Prediction*, Wiley, New York, 2002.
2. H. Schlichting et al., *Boundary Layer Theory*, Springer, New York, 2000.
3. F. M. White, *Viscous Fluid Flow*, 3d ed., McGraw-Hill, New York, 2005.
4. O. Reynolds, "An Experimental Investigation of the Circumstances which Determine Whether the Motion of Water Shall Be Direct or Sinuous and of the Law of Resistance in Parallel Channels," *Phil. Trans. R. Soc.*, vol. 174, 1883, pp. 935–982.
5. P. G. G. Drazin, *Introduction to Hydrodynamic Stability*, Cambridge University Press, New York, 2002.
6. H. Rouse and S. Ince, *History of Hydraulics*, Iowa Institute of Hydraulic Research, State University of Iowa, Iowa City, 1957.
7. J. Nikuradse, *Strömungsgesetze in Rauhen Rohren*, "VDI Forschungsh. 361, 1933; English trans., NACA Tech. Mem. 1292.
8. L. F. Moody, "Friction Factors for Pipe Flow," *ASME Trans.*, vol. 66, pp. 671–684, 1944.
9. C. F. Colebrook, "Turbulent Flow in Pipes, with Particular Reference to the Transition between the Smooth and Rough Pipe Laws," *J. Inst. Civ. Eng. Lond.*, vol. 11, 1938–1939, pp. 133–156.
10. O. C. Jones, Jr., "An Improvement in the Calculations of Turbulent Friction in Rectangular Ducts," *J. Fluids Eng.*, June 1976, pp. 173–181.
11. R. Berker, *Handbuch der Physik*, vol. 7, no. 2, pp. 1–384, Springer-Verlag, Berlin, 1963.
12. R. M. Olson and S. J. Wright, *Essentials of Engineering Fluid Mechanics*, 5th ed., Harper & Row, New York, 1990.
13. R. Schiestel, *Modeling and Simulation of Turbulent Flows*, Wiley, New York, 2008.
14. P. W. Runstadler, Jr. et al., "Diffuser Data Book," *Creare Inc. Tech. Note 186*, Hanover, NH, 1975.
15. "Flow of Fluids through Valves, Fittings, and Pipes," Tech. Paper 410, Crane Valve Group, Long Beach, CA, 1957 (now updated as a CD-ROM; see <<http://www.cranevalves.com>>).
16. E. F. Brater, H. W. King, J. E. Lindell, and C. Y. Wei, *Handbook of Hydraulics*, 7th ed., McGraw-Hill, New York, 1996.
17. H. Cross, "Analysis of Flow in Networks of Conduits or Conductors," *Univ. Ill. Bull.* 286, November 1936.
18. P. K. Swamee and A. K. Sharma, *Design of Water Supply Pipe Networks*, Wiley-Interscience, New York, 2008.
19. G. Hewitt and C. Vasilicos, *Prediction of Turbulent Flows*, Cambridge University Press, New York, 2005.
20. R. W. Jeppson, *Analysis of Flow in Pipe Networks*, Butterworth-Heinemann, Woburn, MA, 1976.
21. R. W. Fox and S. J. Kline, "Flow Regime Data and Design Methods for Curved Subsonic Diffusers," *J. Basic Eng.*, vol. 84, 1962, pp. 303–312.
22. R. C. Baker, *Introductory Guide to Flow Measurement*, 2d ed., Wiley, New York, 2002.
23. R. W. Miller, *Flow Measurement Engineering Handbook*, 3d edition, McGraw-Hill, New York, 1997.
24. B. Warren and C. Wunsch (eds.), *Evolution of Physical Oceanography*, M.I.T. Press, Cambridge, MA, 1981.
25. U.S. Department of Commerce, *Tidal Current Tables*, National Oceanographic and Atmospheric Administration, Washington, DC, 1971.
26. J. A. Shercliff, *Electromagnetic Flow Measurement*, Cambridge University Press, New York, 1962.
27. J. A. Miller, "A Simple Linearized Hot-Wire Anemometer," *J. Fluids Eng.*, December 1976, pp. 749–752.
28. R. J. Goldstein (ed.), *Fluid Mechanics Measurements*, 2d ed., Hemisphere, New York, 1996.
29. D. Eckardt, "Detailed Flow Investigations within a High Speed Centrifugal Compressor Impeller," *J. Fluids Eng.*, September 1976, pp. 390–402.
30. H. S. Bean (ed.), *Fluid Meters: Their Theory and Application*, 6th ed., American Society of Mechanical Engineers, New York, 1971.
31. "Measurement of Fluid Flow by Means of Orifice Plates, Nozzles, and Venturi Tubes Inserted in Circular Cross Section Conduits Running Full," *Int. Organ. Stand. Rep. DIS-5167*, Geneva, April 1976.
32. B. Geurts, *Elements of Direct and Large-Eddy Simulation*, R. T. Edwards, Flourtown, PA, 2003.
33. S. E. Haaland, "Simple and Explicit Formulas for the Friction Factor in Turbulent Pipe Flow," *J. Fluids Eng.*, March 1983, pp. 89–90.
34. R. K. Shah and A. L. London, *Laminar Flow Forced Convection in Ducts*, Academic, New York, 1979.
35. P. L. Skousen, *Valve Handbook*, 2d ed. McGraw-Hill, New York, 2004.
36. W. Li, W.-X. Chen, and S.-Z. Xie, "Numerical Simulation of Stress-Induced Secondary Flows with Hybrid Finite Analytic Method," *Journal of Hydrodynamics*, vol. 14, no. 4, December 2002, pp. 24–30.
37. ASHRAE *Handbook2001 Fundamentals*, ASHRAE, Atlanta, GA, 2001.
38. F. Durst, A. Melling, and J. H. Whitelaw, *Principles and Practice of Laser-Doppler Anemometry*, 2d ed., Academic, New York, 1981.
39. A. P. Lisitsyn et al., *Laser Doppler and Phase Doppler Measurement Techniques*, Springer-Verlag, New York, 2003.

40. J. E. Amadi-Echendu, H. Zhu, and E. H. Higham, "Analysis of Signals from Vortex Flowmeters," *Flow Measurement and Instrumentation*, vol. 4, no. 4, Oct. 1993, pp. 225–231.
41. G. Vass, "Ultrasonic Flowmeter Basics," *Sensors*, vol. 14, no. 10, Oct. 1997, pp. 73–78.
42. ASME Fluid Meters Research Committee, "The ISO-ASME Orifice Coefficient Equation," *Mech. Eng.* July 1981, pp. 44–45.
43. R. D. Blevins, *Applied Fluid Dynamics Handbook*, Van Nostrand Reinhold, New York, 1984.
44. O. C. Jones, Jr., and J. C. M. Leung, "An Improvement in the Calculation of Turbulent Friction in Smooth Concentric Annuli," *J. Fluids Eng.*, December 1981, pp. 615–623.
45. P. R. Bandyopadhyay, "Aspects of the Equilibrium Puff in Transitional Pipe Flow," *J. Fluid Mech.*, vol. 163, 1986, pp. 439–458.
46. I. E. Idelchik, *Handbook of Hydraulic Resistance*, 3d ed., CRC Press, Boca Raton, FL, 1993.
47. S. Klein and W. Beckman, *Engineering Equation Solver (EES)*, University of Wisconsin, Madison, WI, 2008.
48. R. D. Coffield, P. T. McKeown, and R. B. Hammond, "Irrecoverable Pressure Loss Coefficients for Two Elbows in Series with Various Orientation Angles and Separation Distances," *Report WAPD-T-3117*, Bettis Atomic Power Laboratory, West Mifflin, PA, 1997.
49. H. Ito, "Pressure Losses in Smooth Pipe Bends," *Journal of Basic Engineering*, March 1960, pp. 131–143.
50. A. H. Gibson, "On the Flow of Water through Pipes and Passages," *Proc. Roy. Soc. London*, Ser. A, vol. 83, 1910, pp. 366–378.
51. M. Raffel et al., *Particle Image Velocimetry: A Practical Guide*, 2d ed., Springer, New York, 2007.
52. P. Smith and R. W. Zappe, *Valve Selection Handbook*, 5th ed., Gulf Publishing, Houston, Texas, 2003.
53. S. A. Berger, L. Talbot, and L.-S. Yao, "Flow in Curved Pipes," *Annual Review of Fluid Mechanics*, vol. 15, 1983, pp. 461–512.
54. P. L. Spedding, E. Benard, and G. M. McNally, "Fluid Flow through 90° Bends," *Developments in Chemical Engineering and Mineral Processing*, vol. 12, nos. 1–2, 2004, pp. 107–128.
55. R. R. Kerswell, "Recent Progress in Understanding the Transition to Turbulence in a Pipe," *Nonlinearity*, vol. 18, 2005, pp. R17–R44.
56. B. J. McKeon et al., "Friction Factors for Smooth Pipe Flow," *J. Fluid Mech.*, vol. 511, 2004, pp. 41–44.
57. M. Bahrami, M. M. Yovanovich, and J. R. Culham, "Pressure Drop of Fully-Developed Laminar Flow in Microchannels of Arbitrary Cross-Section," *J. Fluids Engineering*, vol. 128, Sept. 2006, pp. 1036–1044.
58. G. S. Larraona, A. Rivas, and J. C. Ramos, "Computational Modeling and Simulation of a Single-Jet Water Meter," *J. Fluids Engineering*, vol. 130, May 2008, pp. 0511021–05110212.
59. C. Spiegel, *Designing and Building Fuel Cells*, McGraw-Hill, New York, 2007.

*This page intentionally left blank*



This photograph is not altered. This is Rocket Man, Yves Rossy, flying with self-designed wings strapped to his back, powered by four German jet mini-turbines that total 200 lbf of thrust. On this widely publicized flight, in May 2008, Rocket Man jumped from an airplane at 7500 ft, climbed to 8200 ft, then cruised about the Alps at 180 mi/h for five minutes. He celebrated with figure-eights and a full 360° roll. In September 2008, Rocket Man crossed the English Channel on a 10-minute flight. Rocket Man is not stupid. He carries an emergency parachute, but has used it only for landing. (*Photo ©AP Photo/Anja Niedringhaus*)

# Chapter 7

## Flow Past Immersed Bodies

**Motivation.** This chapter is devoted to “external” flows around bodies immersed in a fluid stream. Such a flow will have viscous (shear and no-slip) effects near the body surfaces and in its wake, but will typically be nearly inviscid far from the body. These are unconfined *boundary layer* flows.


Chapter 6 considered “internal” flows confined by the walls of a duct. In that case the viscous boundary layers grow from the sidewalls, meet downstream, and fill the entire duct. Viscous shear is the dominant effect. For example, the Moody chart of Fig. 6.13 is essentially a correlation of wall shear stress for long ducts of constant cross section.

External flows are unconfined, free to expand no matter how thick the viscous layers grow. Although boundary layer theory (Sec. 7.3) and computational fluid dynamics (CFD) [4] are helpful in understanding external flows, complex body geometries usually require experimental data on the forces and moments caused by the flow. Such immersed-body flows are commonly encountered in engineering studies: *aerodynamics* (airplanes, rockets, projectiles), *hydrodynamics* (ships, submarines, torpedos), *transportation* (automobiles, trucks, cycles), *wind engineering* (buildings, bridges, water towers, wind turbines), and *ocean engineering* (buoys, breakwaters, pilings, cables, moored instruments). This chapter provides data and analysis to assist in such studies.

### 7.1 Reynolds Number and Geometry Effects

The technique of boundary layer (BL) analysis can be used to compute viscous effects near solid walls and to “patch” these onto the outer inviscid motion. This patching is more successful as the body Reynolds number becomes larger, as shown in Fig. 7.1.

In Fig. 7.1 a uniform stream  $U$  moves parallel to a sharp flat plate of length  $L$ . If the Reynolds number  $UL/\nu$  is low (Fig. 7.1a), the viscous region is very broad and extends far ahead and to the sides of the plate. The plate retards the oncoming stream greatly, and small changes in flow parameters cause large changes in the pressure

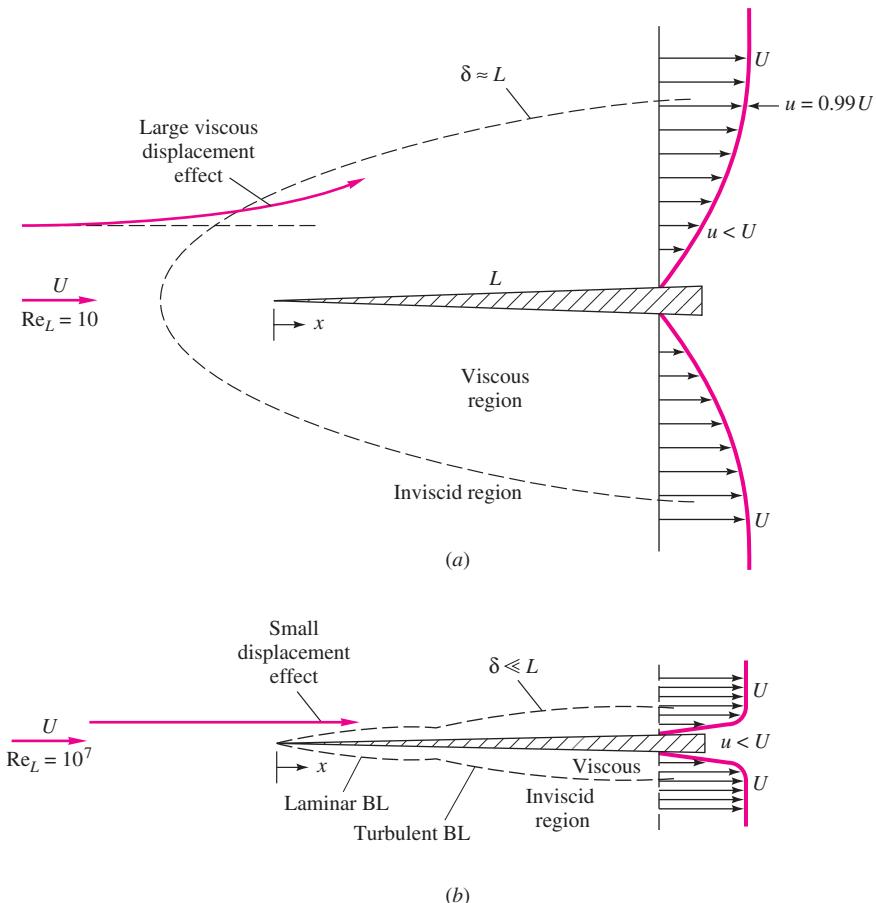

**Fig. 7.1** Comparison of flow past a sharp flat plate at low and high Reynolds numbers: (a) laminar, low-Re flow; (b) high-Re flow.

distribution along the plate. Thus, although in principle it should be possible to patch the viscous and inviscid layers in a mathematical analysis, their interaction is strong and nonlinear [1 to 3]. There is no existing simple theory for external flow analysis at Reynolds numbers from 1 to about 1000. Such thick-shear-layer flows are typically studied by experiment or by numerical modeling of the flow field on a computer [4].

A high-Reynolds-number flow (Fig. 7.1b) is much more amenable to boundary layer patching, as first pointed out by Prandtl in 1904. The viscous layers, either laminar or turbulent, are very thin, thinner even than the drawing shows. We define the boundary layer thickness  $\delta$  as the locus of points where the velocity  $u$  parallel to the plate reaches 99 percent of the external velocity  $U$ . As we shall see in Sec. 7.4, the accepted formulas for flat-plate flow, and their approximate ranges, are

$$\frac{\delta}{x} \approx \begin{cases} \frac{5.0}{Re_x^{1/2}} & \text{laminar} \quad 10^3 < Re_x < 10^6 \\ \frac{0.16}{Re_x^{1/7}} & \text{turbulent} \quad 10^6 < Re_x \end{cases} \quad (7.1a)$$

$$\quad (7.1b)$$

where  $\text{Re}_x = Ux/\nu$  is called the *local Reynolds number* of the flow along the plate surface. The turbulent flow formula applies for  $\text{Re}_x$  greater than approximately  $10^6$ .


Some computed values from Eq. (7.1) are

$\text{Re}_x$	$10^4$	$10^5$	$10^6$	$10^7$	$10^8$
$(\delta/x)_{\text{lam}}$	0.050	0.016	0.005		
$(\delta/x)_{\text{turb}}$			0.022	0.016	0.011

The blanks indicate that the formula is not applicable. In all cases these boundary layers are so thin that their displacement effect on the outer inviscid layer is negligible. Thus the pressure distribution along the plate can be computed from inviscid theory as if the boundary layer were not even there. This external pressure field then “drives” the boundary layer flow, acting as a forcing function in the momentum equation along the surface. We shall explain this boundary layer theory in Secs. 7.4 and 7.5.

For slender bodies, such as plates and airfoils parallel to the oncoming stream, we conclude that this assumption of negligible interaction between the boundary layer and the outer pressure distribution is an excellent approximation.

For a blunt-body flow, however, even at very high Reynolds numbers, there is a discrepancy in the viscous–inviscid patching concept. Figure 7.2 shows two sketches of flow past a two- or three-dimensional blunt body. In the idealized

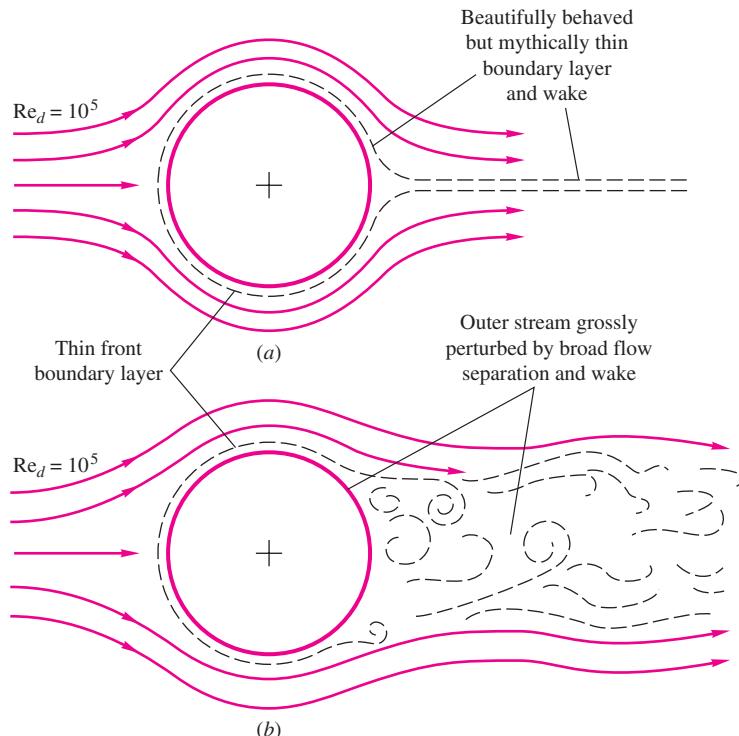

**Fig. 7.2** Illustration of the strong interaction between viscous and inviscid regions in the rear of blunt-body flow: (a) idealized and definitely false picture of blunt-body flow; (b) actual picture of blunt-body flow.

sketch (7.2a), there is a thin film of boundary layer about the body and a narrow sheet of viscous wake in the rear. The patching theory would be glorious for this picture, but it is false. In the actual flow (Fig. 7.2b), the boundary layer is thin on the front, or windward, side of the body, where the pressure decreases along the surface (*favorable* pressure gradient). But in the rear the boundary layer encounters increasing pressure (*adverse* pressure gradient) and breaks off, or separates, into a broad, pulsating wake. (See Fig. 5.2a for a photograph of a specific example.) The mainstream is deflected by this wake, so that the external flow is quite different from the prediction from inviscid theory with the addition of a thin boundary layer.

The theory of strong interaction between blunt-body viscous and inviscid layers is not well developed. Flows like that of Fig. 7.2b are normally studied experimentally or with CFD [4]. Reference 5 is an example of efforts to improve the theory of separated flows. Reference 6 is another textbook devoted to separated flow.

### EXAMPLE 7.1

A long, thin flat plate is placed parallel to a 20-ft/s stream of water at 68°F. At what distance  $x$  from the leading edge will the boundary layer thickness be 1 in?

#### Solution

- **Assumptions:** Flat-plate flow, with Eqs. (7.1) applying in their appropriate ranges.
- **Approach:** Guess laminar flow first. If contradictory, try turbulent flow.
- **Property values:** From Table A.1 for water at 68°F,  $\nu \approx 1.082\text{E-}5 \text{ ft}^2/\text{s}$ .
- **Solution step 1:** With  $\delta = 1 \text{ in} = 1/12 \text{ ft}$ , try laminar flow, Eq. (7.1a):

$$\frac{\delta}{x}|_{\text{lam}} = \frac{5}{(Ux/\nu)^{1/2}} \quad \text{or} \quad \frac{1/12 \text{ ft}}{x} = \frac{5}{[(20 \text{ ft/s})x/(1.082\text{E-}5 \text{ ft}^2/\text{s})]^{1/2}}$$

Solve for  $x \approx 513 \text{ ft}$

Pretty long plate! This does not sound right. Check the local Reynolds number:

$$\text{Re}_x = \frac{Ux}{\nu} = \frac{(20 \text{ ft/s})(513 \text{ ft})}{1.082\text{E-}5 \text{ ft}^2/\text{s}} = 9.5\text{E}8 \quad (!)$$

This is impossible, since laminar boundary layer flow only persists up to about  $10^6$  (or, with special care to avoid disturbances, up to  $3 \times 10^6$ ).

- **Solution step 2:** Try turbulent flow, Eq. (7.1b):

$$\frac{\delta}{x} = \frac{0.16}{(Ux/\nu)^{1/7}} \quad \text{or} \quad \frac{1/12 \text{ ft}}{x} = \frac{0.16}{[(20 \text{ ft/s})x/(1.082\text{E-}5 \text{ ft}^2/\text{s})]^{1/7}}$$

Solve for  $x \approx 5.17 \text{ ft}$  *Ans.*

Check  $\text{Re}_x = (20 \text{ ft/s})(5.17 \text{ ft})/(1.082\text{E-}5 \text{ ft}^2/\text{s}) = 9.6\text{E}6 > 10^6$ . OK, turbulent flow.

- **Comments:** The flow is turbulent, and the inherent ambiguity of the theory is resolved.

## 7.2 Momentum Integral Estimates

When we derived the momentum integral relation, Eq. (3.37), and applied it to a flat-plate boundary layer in Example 3.11, we promised to consider it further in Chap. 7. Well, here we are! Let us review the problem, using Fig. 7.3.

A shear layer of unknown thickness grows along the sharp flat plate in Fig. 7.3. The no-slip wall condition retards the flow, making it into a rounded profile  $u(x,y)$ , which merges into the external velocity  $U = \text{constant}$  at a “thickness”  $y = \delta(x)$ . By utilizing the control volume of Fig. 3.11, we found (without making any assumptions about laminar versus turbulent flow) in Example 3.11 that the drag force on the plate is given by the following momentum integral across the exit plane:

$$D(x) = \rho b \int_0^{\delta(x)} u(U - u) dy \quad (7.2)$$

where  $b$  is the plate width into the paper and the integration is carried out along a vertical plane  $x = \text{constant}$ . You should review the momentum integral relation (3.37) and its use in Example 3.11.

### Kármán Analysis of the Flat Plate

Equation (7.2) was derived in 1921 by Kármán [7], who wrote it in the convenient form of the *momentum thickness*  $\theta$ :

$$D(x) = \rho b U^2 \theta \quad \theta = \int_0^\delta \frac{u}{U} \left(1 - \frac{u}{U}\right) dy \quad (7.3)$$

Momentum thickness is thus a measure of total plate drag. Kármán then noted that the drag also equals the integrated wall shear stress along the plate:


$$D(x) = b \int_0^x \tau_w(x) dx$$

or

$$\frac{dD}{dx} = b \tau_w \quad (7.4)$$

Meanwhile, the derivative of Eq. (7.3), with  $U = \text{constant}$ , is

$$\frac{dD}{dx} = \rho b U^2 \frac{d\theta}{dx}$$

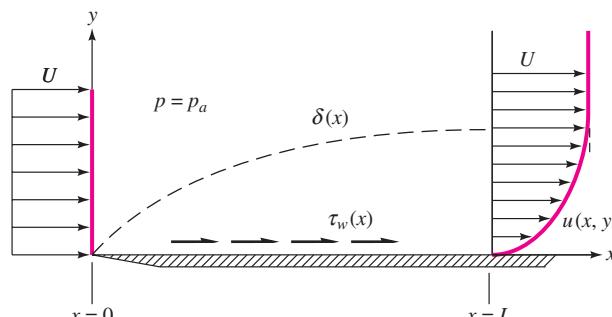

**Fig. 7.3** Growth of a boundary layer on a flat plate.

By comparing this with Eq. (7.4) Kármán arrived at what is now called the *momentum integral relation* for flat-plate boundary layer flow:

$$\boxed{\tau_w = \rho U^2 \frac{d\theta}{dx}} \quad (7.5)$$

It is valid for either laminar or turbulent flat-plate flow.

To get a numerical result for laminar flow, Kármán assumed that the velocity profiles had an approximately parabolic shape

$$u(x, y) \approx U \left( \frac{2y}{\delta} - \frac{y^2}{\delta^2} \right) \quad 0 \leq y \leq \delta(x) \quad (7.6)$$

which makes it possible to estimate both momentum thickness and wall shear:

$$\begin{aligned} \theta &= \int_0^\delta \left( \frac{2y}{\delta} - \frac{y^2}{\delta^2} \right) \left( 1 - \frac{2y}{\delta} + \frac{y^2}{\delta^2} \right) dy \approx \frac{2}{15} \delta \\ \tau_w &= \mu \frac{\partial u}{\partial y} \Big|_{y=0} \approx \frac{2\mu U}{\delta} \end{aligned} \quad (7.7)$$

By substituting (7.7) into (7.5) and rearranging we obtain

$$\delta d\delta \approx 15 \frac{\nu}{U} dx \quad (7.8)$$

where  $\nu = \mu/\rho$ . We can integrate from 0 to  $x$ , assuming that  $\delta = 0$  at  $x = 0$ , the leading edge:

$$\begin{aligned} \frac{1}{2} \delta^2 &= \frac{15\nu x}{U} \\ \text{or} \quad \frac{\delta}{x} &\approx 5.5 \left( \frac{\nu}{Ux} \right)^{1/2} = \frac{5.5}{\text{Re}_x^{1/2}} \end{aligned} \quad (7.9)$$

This is the desired thickness estimate. It is all approximate, of course, part of Kármán's *momentum integral theory* [7], but it is startlingly accurate, being only 10 percent higher than the known accepted solution for laminar flat-plate flow, which we gave as Eq. (7.1a).

By combining Eqs. (7.9) and (7.7) we also obtain a shear stress estimate along the plate:

$$c_f = \frac{2\tau_w}{\rho U^2} \approx \left( \frac{\frac{8}{15}}{\text{Re}_x} \right)^{1/2} = \frac{0.73}{\text{Re}_x^{1/2}} \quad (7.10)$$

Again this estimate, in spite of the crudeness of the profile assumption [Eq. (7.6)] is only 10 percent higher than the known exact laminar-plate-flow solution  $c_f = 0.664/\text{Re}_x^{1/2}$ , treated in Sec. 7.4. The dimensionless quantity  $c_f$ , called the *skin friction coefficient*, is analogous to the friction factor  $f$  in ducts.

A boundary layer can be judged as "thin" if, say, the ratio  $\delta/x$  is less than about 0.1. This occurs at  $\delta/x = 0.1 = 5.0/\text{Re}_x^{1/2}$  or at  $\text{Re}_x = 2500$ . For  $\text{Re}_x$  less than 2500 we can estimate that boundary layer theory fails because the thick layer has a

significant effect on the outer inviscid flow. The upper limit on  $\text{Re}_x$  for laminar flow is about  $3 \times 10^6$ , where measurements on a smooth flat plate [8] show that the flow undergoes transition to a turbulent boundary layer. From  $3 \times 10^6$  upward the turbulent Reynolds number may be arbitrarily large, and a practical limit at present is  $5 \times 10^{10}$  for oil supertankers.

### Displacement Thickness

Another interesting effect of a boundary layer is its small but finite displacement of the outer streamlines. As shown in Fig. 7.4, outer streamlines must deflect outward a distance  $\delta^*(x)$  to satisfy conservation of mass between the inlet and outlet:

$$\int_0^h \rho U b \, dy = \int_0^\delta \rho u b \, dy \quad \delta = h + \delta^* \quad (7.11)$$

The quantity  $\delta^*$  is called the *displacement thickness* of the boundary layer. To relate it to  $u(y)$ , cancel  $\rho$  and  $b$  from Eq. (7.11), evaluate the left integral, and slyly add and subtract  $U$  from the right integrand:

$$Uh = \int_0^\delta (U + u - U) \, dy = U(h + \delta^*) + \int_0^\delta (u - U) \, dy$$

or

$$\delta^* = \int_0^\delta \left( 1 - \frac{u}{U} \right) dy \quad (7.12)$$


Thus the ratio of  $\delta^*/\delta$  varies only with the dimensionless velocity profile shape  $u/U$ .

Introducing our profile approximation (7.6) into (7.12), we obtain by integration this approximate result:

$$\delta^* \approx \frac{1}{3} \delta \quad \frac{\delta^*}{x} \approx \frac{1.83}{\text{Re}_x^{1/2}} \quad (7.13)$$

These estimates are only 6 percent away from the exact solutions for laminar flat-plate flow given in Sec. 7.4:  $\delta^* = 0.344\delta = 1.721x/\text{Re}_x^{1/2}$ . Since  $\delta^*$  is much smaller than  $x$  for large  $\text{Re}_x$  and the outer streamline slope  $V/U$  is proportional to  $\delta^*$ , we conclude that the velocity normal to the wall is much smaller than the velocity parallel to the wall. This is a key assumption in boundary layer theory (Sec. 7.3).

We also conclude from the success of these simple parabolic estimates that Kármán's momentum integral theory is effective and useful. Many details of this theory are given in Refs. 1 to 3.

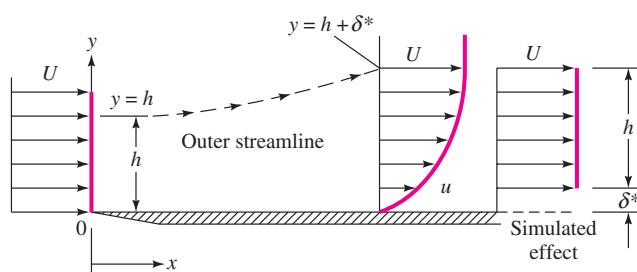

**Fig. 7.4** Displacement effect of a boundary layer.

**EXAMPLE 7.2**

Are low-speed, small-scale air and water boundary layers really thin? Consider flow at  $U = 1 \text{ ft/s}$  past a flat plate 1 ft long. Compute the boundary layer thickness at the trailing edge for (a) air and (b) water at  $68^\circ\text{F}$ .

**Solution**

**Part (a)** From Table A.2,  $\nu_{\text{air}} \approx 1.61 \text{ E-4 ft}^2/\text{s}$ . The trailing-edge Reynolds number thus is

$$\text{Re}_L = \frac{UL}{\nu} = \frac{(1 \text{ ft/s})(1 \text{ ft})}{1.61 \text{ E-4 ft}^2/\text{s}} = 6200$$

Since this is less than  $10^6$ , the flow is presumed laminar, and since it is greater than 2500, the boundary layer is reasonably thin. From Eq. (7.1a), the predicted laminar thickness is

$$\frac{\delta}{x} = \frac{5.0}{\sqrt{6200}} = 0.0634$$

or, at  $x = 1 \text{ ft}$ ,  $\delta = 0.0634 \text{ ft} \approx 0.76 \text{ in}$  *Ans. (a)*

**Part (b)** From Table A.1  $\nu_{\text{water}} \approx 1.08 \text{ E-5 ft}^2/\text{s}$ . The trailing-edge Reynolds number is

$$\text{Re}_L = \frac{(1 \text{ ft/s})(1 \text{ ft})}{1.08 \text{ E-5 ft}^2/\text{s}} \approx 92,600$$

This again satisfies the laminar and thinness conditions. The boundary layer thickness is

$$\frac{\delta}{x} \approx \frac{5.0}{\sqrt{92,600}} = 0.0164$$

or, at  $x = 1 \text{ ft}$ ,  $\delta = 0.0164 \text{ ft} \approx 0.20 \text{ in}$  *Ans. (b)*

Thus, even at such low velocities and short lengths, both airflows and water flows satisfy the boundary layer approximations.

### 7.3 The Boundary Layer Equations

In Chaps. 4 and 6 we learned that there are several dozen known analytical laminar flow solutions [1 to 3]. None are for external flow around immersed bodies, although this is one of the primary applications of fluid mechanics. No exact solutions are known for turbulent flow, whose analysis typically uses empirical modeling laws to relate time-mean variables.

There are presently three techniques used to study external flows: (1) numerical (computer) solutions, (2) experimentation, and (3) boundary layer theory.

*Computational fluid dynamics* is now well developed and described in advanced texts such as that by Tu et al. [4]. Thousands of computer solutions and models have been published; execution times, mesh sizes, and graphical presentations are improving each year. Both laminar and turbulent flow solutions have been published, and turbulence modeling is a current research topic [9]. Except for a brief discussion of computer analysis in Chap. 8, the topic of CFD is beyond our scope here.

Experimentation is the most common method of studying external flows. Chapter 5 outlined the technique of dimensional analysis, and we shall give many nondimensional experimental data for external flows in Sec. 7.6.

The third tool is boundary layer theory, first formulated by Ludwig Prandtl in 1904. We shall follow Prandtl's ideas here and make certain order-of-magnitude assumptions to greatly simplify the Navier-Stokes equations (4.38) into boundary layer equations that are solved relatively easily and patched onto the outer inviscid flow field.

One of the great achievements of boundary layer theory is its ability to predict the flow separation that occurs in adverse (positive) pressure gradients, as illustrated in Fig. 7.2b. Before 1904, when Prandtl published his pioneering paper, no one realized that such thin shear layers could cause such a gross effect as flow separation. Even today, however, boundary layer theory cannot accurately predict the behavior of the separated-flow region and its interaction with the outer flow. Modern research [4, 9] has focused on detailed CFD simulations of separated flow, and the resultant wakes, to gain further insight.

### Derivation for Two-Dimensional Flow

We consider only steady two-dimensional incompressible viscous flow with the  $x$  direction along the wall and  $y$  normal to the wall, as in Fig. 7.3.<sup>1</sup> We neglect gravity, which is important only in boundary layers where fluid buoyancy is dominant [2, sec. 4.14]. From Chap. 4, the complete equations of motion consist of continuity and the  $x$ - and  $y$ -momentum relations:

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0 \quad (7.14a)$$

$$\rho \left( u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} \right) = -\frac{\partial p}{\partial x} + \mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} \right) \quad (7.14b)$$

$$\rho \left( u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} \right) = -\frac{\partial p}{\partial y} + \mu \left( \frac{\partial^2 v}{\partial x^2} + \frac{\partial^2 v}{\partial y^2} \right) \quad (7.14c)$$

These should be solved for  $u$ ,  $v$ , and  $p$  subject to typical no-slip, inlet, and exit boundary conditions, but in fact they are too difficult to handle for most external flows except with CFD.

In 1904 Prandtl correctly deduced that a shear layer must be very thin if the Reynolds number is large, so that the following approximations apply:

$$\text{Velocities:} \quad v \ll u \quad (7.15a)$$

$$\text{Rates of change:} \quad \frac{\partial u}{\partial x} \ll \frac{\partial u}{\partial y} \quad \frac{\partial v}{\partial x} \ll \frac{\partial v}{\partial y} \quad (7.15b)$$

$$\text{Reynolds number:} \quad \text{Re}_x = \frac{U_x}{\nu} \gg 1 \quad (7.15c)$$

<sup>1</sup>For a curved wall,  $x$  can represent the arc length along the wall and  $y$  can be everywhere normal to  $x$  with negligible change in the boundary layer equations as long as the radius of curvature of the wall is large compared with the boundary layer thickness [1 to 3].

Our discussion of displacement thickness in the previous section was intended to justify these assumptions.

Applying these approximations to Eq. (7.14c) results in a powerful simplification:

$$\begin{aligned} \rho \left( u \frac{\partial v}{\partial x} \right) + \rho \left( v \frac{\partial v}{\partial y} \right) &= -\frac{\partial p}{\partial y} + \mu \left( \frac{\partial^2 v}{\partial x^2} \right) + \mu \left( \frac{\partial^2 v}{\partial y^2} \right) \\ \text{small} &\quad \text{small} & \text{very small} &\quad \text{small} \\ \frac{\partial p}{\partial y} &\approx 0 & \text{or} &\quad p \approx p(x) \quad \text{only} \end{aligned} \quad (7.16)$$

In other words, the  $y$ -momentum equation can be neglected entirely, and the pressure varies only *along* the boundary layer, not through it. The pressure gradient term in Eq. (7.14b) is assumed to be known in advance from Bernoulli's equation applied to the outer inviscid flow:

$$\frac{\partial p}{\partial x} = \frac{dp}{dx} = -\rho U \frac{dU}{dx} \quad (7.17)$$

Presumably we have already made the inviscid analysis and know the distribution of  $U(x)$  along the wall (Chap. 8).

Meanwhile, one term in Eq. (7.14b) is negligible due to Eqs. (7.15):

$$\frac{\partial^2 u}{\partial x^2} \ll \frac{\partial^2 u}{\partial y^2} \quad (7.18)$$

However, neither term in the continuity relation (7.14a) can be neglected—another warning that continuity is always a vital part of any fluid flow analysis.

The net result is that the three full equations of motion (7.14) are reduced to Prandtl's two boundary layer equations for two-dimensional incompressible flow:

Continuity:

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0 \quad (7.19a)$$

Momentum along wall:

$$u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} \approx U \frac{dU}{dx} + \frac{1}{\rho} \frac{\partial \tau}{\partial y} \quad (7.19b)$$

where

$$\tau = \begin{cases} \mu \frac{\partial u}{\partial y} & \text{laminar flow} \\ \mu \frac{\partial u}{\partial y} - \overline{\rho u' v'} & \text{turbulent flow} \end{cases}$$

These are to be solved for  $u(x, y)$  and  $v(x, y)$ , with  $U(x)$  assumed to be a known function from the outer inviscid flow analysis. There are two boundary conditions on  $u$  and one on  $v$ :

$$\text{At } y = 0 \text{ (wall):} \quad u = v = 0 \quad (\text{no slip}) \quad (7.20a)$$

$$\text{As } y = \delta(x) \text{ (outer stream):} \quad u = U(x) \quad (\text{patching}) \quad (7.20b)$$

Unlike the Navier-Stokes equations (7.14), which are mathematically elliptic and must be solved simultaneously over the entire flow field, the boundary layer equations (7.19)

are mathematically parabolic and are solved by beginning at the leading edge and marching downstream as far as you like, stopping at the separation point or earlier if you prefer.<sup>2</sup>

The boundary layer equations have been solved for scores of interesting cases of internal and external flow for both laminar and turbulent flow, utilizing the inviscid distribution  $U(x)$  appropriate to each flow. Full details of boundary layer theory and results and comparison with experiment are given in Refs. 1 to 3. Here we shall confine ourselves primarily to flat-plate solutions (Sec. 7.4).

## 7.4 The Flat-Plate Boundary Layer

### Laminar Flow

For laminar flow past the plate, the boundary layer equations (7.19) can be solved exactly for  $u$  and  $v$ , assuming that the free-stream velocity  $U$  is constant ( $dU/dx = 0$ ). The solution was given by Prandtl's student Blasius, in his 1908 dissertation from Göttingen. With an ingenious coordinate transformation, Blasius showed that the dimensionless velocity profile  $u/U$  is a function only of the single composite dimensionless variable  $(y)[U/(\nu x)]^{1/2}$ :

$$\frac{u}{U} = f'(\eta) \quad \eta = y \left( \frac{U}{\nu x} \right)^{1/2} \quad (7.21)$$

where the prime denotes differentiation with respect to  $\eta$ . Substitution of (7.21) into the boundary layer equations (7.19) reduces the problem, after much algebra, to a single third-order nonlinear ordinary differential equation for  $f$  [1–3]:

$$f''' + \frac{1}{2}ff'' = 0 \quad (7.22)$$

The boundary conditions (7.20) become

$$\text{At } y = 0: \quad f(0) = f'(0) = 0 \quad (7.23a)$$

$$\text{As } y \rightarrow \infty: \quad f'(\infty) \rightarrow 1.0 \quad (7.23b)$$

This is the *Blasius equation*, for which accurate solutions have been obtained only by numerical integration. Some tabulated values of the velocity profile shape  $f'(\eta) = u/U$  are given in Table 7.1.

Since  $u/U$  approaches 1.0 only as  $y \rightarrow \infty$ , it is customary to select the boundary layer thickness  $\delta$  as that point where  $u/U = 0.99$ . From the table, this occurs at  $\eta \approx 5.0$ :

$$\delta_{99\%} \left( \frac{U}{\nu x} \right)^{1/2} \approx 5.0$$

or

$$\frac{\delta}{x} \approx \frac{5.0}{\text{Re}_x^{1/2}} \quad \text{Blasius (1908)}$$

(7.24)

<sup>2</sup>For further mathematical details, see Ref. 2, sec. 2.8.

**Table 7.1** The Blasius Velocity Profile [1 to 3]

$y[U/(\nu x)]^{1/2}$	$u/U$	$y[U/(\nu x)]^{1/2}$	$u/U$
0.0	0.0	2.8	0.81152
0.2	0.06641	3.0	0.84605
0.4	0.13277	3.2	0.87609
0.6	0.19894	3.4	0.90177
0.8	0.26471	3.6	0.92333
1.0	0.32979	3.8	0.94112
1.2	0.39378	4.0	0.95552
1.4	0.45627	4.2	0.96696
1.6	0.51676	4.4	0.97587
1.8	0.57477	4.6	0.98269
2.0	0.62977	4.8	0.98779
2.2	0.68132	5.0	0.99155
2.4	0.72899	$\infty$	1.00000
2.6	0.77246		

With the profile known, Blasius, of course, could also compute the wall shear and displacement thickness:

$$c_f = \frac{0.664}{\text{Re}_x^{1/2}} \quad \frac{\delta^*}{x} = \frac{1.721}{\text{Re}_x^{1/2}} \quad (7.25)$$

Notice how close these are to our integral estimates, Eqs. (7.9), (7.10), and (7.13). When  $c_f$  is converted to dimensional form, we have

$$\tau_w(x) = \frac{0.332\rho^{1/2}\mu^{1/2}U^{1.5}}{x^{1/2}}$$

The wall shear drops off with  $x^{1/2}$  because of boundary layer growth and varies as velocity to the 1.5 power. This is in contrast to laminar pipe flow, where  $\tau_w \propto U$  and is independent of  $x$ .

If  $\tau_w(x)$  is substituted into Eq. (7.4), we compute the total drag force:

$$D(x) = b \int_0^x \tau_w(x) dx = 0.664b\rho^{1/2}\mu^{1/2}U^{1.5}x^{1/2} \quad (7.26)$$

The drag increases only as the square root of the plate length. The nondimensional *drag coefficient* is defined as

$$C_D = \frac{2D(L)}{\rho U^2 b L} = \frac{1.328}{\text{Re}_L^{1/2}} = 2c_f(L) \quad (7.27)$$

Thus, for laminar plate flow,  $C_D$  equals twice the value of the skin friction coefficient at the trailing edge. This is the drag on one side of the plate.

Kármán pointed out that the drag could also be computed from the momentum relation (7.2). In dimensionless form, Eq. (7.2) becomes

$$C_D = \frac{2}{L} \int_0^\delta \frac{u}{U} \left(1 - \frac{u}{U}\right) dy \quad (7.28)$$

This can be rewritten in terms of the momentum thickness at the trailing edge:

$$C_D = \frac{2\theta(L)}{L} \quad (7.29)$$

Computation of  $\theta$  from the profile  $u/U$  or from  $C_D$  gives


$$\frac{\theta}{x} = \frac{0.664}{Re_x^{1/2}} \quad \text{laminar flat plate} \quad (7.30)$$

Since  $\delta$  is so ill defined, the momentum thickness, being definite, is often used to correlate data taken for a variety of boundary layers under differing conditions. The ratio of displacement to momentum thickness, called the dimensionless-profile *shape factor*, is also useful in integral theories. For laminar flat-plate flow

$$H = \frac{\delta^*}{\theta} = \frac{1.721}{0.664} = 2.59 \quad (7.31)$$

A large shape factor then implies that boundary layer separation is about to occur.

If we plot the Blasius velocity profile from Table 7.1 in the form of  $u/U$  versus  $y/\delta$ , we can see why the simple integral theory guess, Eq. (7.6), was such a great success. This is done in Fig. 7.5. The simple parabolic approximation is not far from the true Blasius profile; hence its momentum thickness is within 10 percent of the true value. Also shown in Fig. 7.5 are three typical turbulent flat-plate velocity profiles. Notice how strikingly different in shape they are from the laminar profiles.

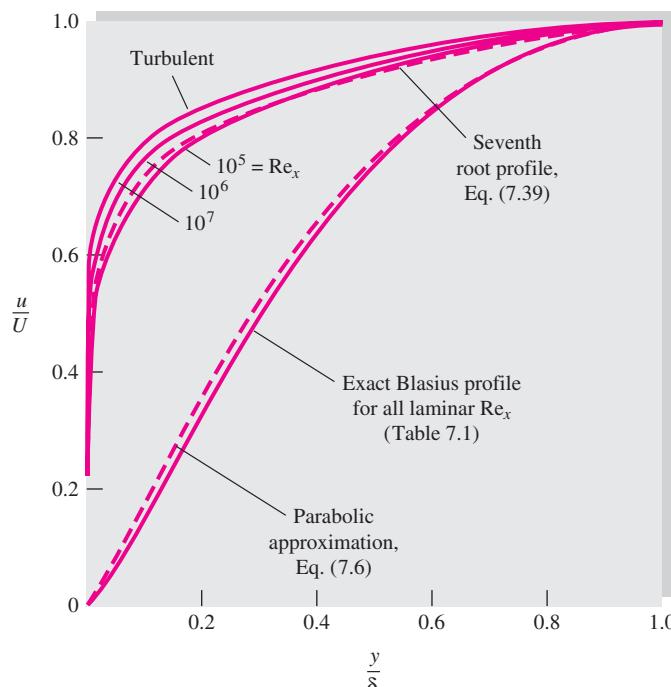

**Fig. 7.5** Comparison of dimensionless laminar and turbulent flat-plate velocity profiles.

Instead of decreasing parabolically to zero, the turbulent profiles are very flat and then drop off sharply at the wall. As you might guess, they follow the logarithmic law shape and thus can be analyzed by momentum integral theory if this shape is properly represented.

## Transition to Turbulence

The laminar flat-plate boundary layer eventually becomes turbulent, but there is no unique value for this change to occur. With care in polishing the wall and keeping the free stream quiet, one can delay the transition Reynolds number to  $\text{Re}_{x,\text{tr}} \approx 3\text{E}6$  [8]. However, for typical commercial surfaces and gusty free streams, a more realistic value is

$$\text{Re}_{x,\text{tr}} \approx 5 \text{ E}5.$$

### EXAMPLE 7.3

A sharp flat plate with  $L = 50$  cm and  $b = 3$  m is parallel to a stream of velocity 2.5 m/s. Find the drag on *one side* of the plate, and the boundary thickness  $\delta$  at the trailing edge, for (a) air and (b) water at 20°C and 1 atm.

### Solution

- *Assumptions:* Laminar flat-plate flow, but we should check the Reynolds numbers.
- *Approach:* Find the Reynolds number and use the appropriate boundary layer formulas.
- *Property values:* From Table A.2 for air at 20°C,  $\rho = 1.2 \text{ kg/m}^3$ ,  $\nu = 1.5\text{E}-5 \text{ m}^2/\text{s}$ . From Table A.1 for water at 20°C,  $\rho = 998 \text{ kg/m}^3$ ,  $\nu = 1.005\text{E}-6 \text{ m}^2/\text{s}$ .
- (a) *Solution for air:* Calculate the Reynolds number at the trailing edge:

$$\text{Re}_L = \frac{UL}{\nu_{\text{air}}} = \frac{(2.5 \text{ m/s})(0.5 \text{ m})}{1.5\text{E}-5 \text{ m}^2/\text{s}} = 83,300 < 5\text{E}5 \text{ therefore assuredly laminar}$$

The appropriate thickness relation is Eq. (7.24):

$$\frac{\delta}{L} = \frac{5}{\text{Re}_L^{1/2}} = \frac{5}{(83,300)^{1/2}} = 0.0173, \text{ or } \delta_{x=L} = 0.0173(0.5 \text{ m}) \cong 0.0087 \text{ m} \quad \text{Ans. (a)}$$

The laminar boundary layer is only 8.7 mm thick. The drag coefficient follows from Eq. (7.27):

$$C_D = \frac{1.328}{\text{Re}_L^{1/2}} = \frac{1.328}{(83,300)^{1/2}} = 0.0046$$

$$\text{or } D_{\text{one side}} = C_D \frac{\rho}{2} U^2 b L = (0.0046) \frac{1.2 \text{ kg/m}^3}{2} (2.5 \text{ m/s})^2 (3 \text{ m})(0.5 \text{ m}) \approx 0.026 \text{ N} \quad \text{Ans. (a)}$$

- *Comment (a):* This is purely *friction* drag and is very small for gases at low velocities.
- (b) *Solution for water:* Again calculate the Reynolds number at the trailing edge:

$$\text{Re}_L = \frac{UL}{\nu_{\text{water}}} = \frac{(2.5 \text{ m/s})(0.5 \text{ m})}{1.005\text{E}-6 \text{ m}^2/\text{s}} = 1.24\text{E}6 > 5\text{E}5 \text{ therefore it might be turbulent}$$

This is a quandary. If the plate is rough or encounters disturbances, the flow at the trailing edge will be turbulent. Let us assume a smooth, undisturbed plate, which will remain laminar. Then again the appropriate thickness relation is Eq. (7.24):

$$\frac{\delta}{L} = \frac{5}{\text{Re}_L^{1/2}} = \frac{5}{(1.24\text{E}6)^{1/2}} = 0.00448 \quad \text{or} \quad \delta_{x=L} = 0.00448(0.5 \text{ m}) \cong 0.0022 \text{ m} \quad \text{Ans. (b)}$$

This is four times thinner than the air result in part (a), due to the high laminar Reynolds number. Again the drag coefficient follows from Eq. (7.27):

$$C_D = \frac{1.328}{\text{Re}_L^{1/2}} = \frac{1.328}{(1.24\text{E}6)^{1/2}} = 0.0012$$

$$\text{or} \quad D_{\text{one side}} = C_D \frac{\rho}{2} U^2 b L = (0.0012) \frac{998 \text{ kg/m}^3}{2} (2.5 \text{ m/s})^2 (3 \text{ m}) (0.5 \text{ m}) \approx 5.6 \text{ N}$$

*Ans. (b)*

- *Comment (b):* The drag is 215 times larger for water, although  $C_D$  is lower, reflecting that water is 56 times more viscous and 830 times denser than air. From Eq. (7.26), for the same  $U$  and  $x$ , the water drag should be  $(56)^{1/2}(830)^{1/2} \approx 215$  times higher. *Note:* If transition to turbulence had occurred at  $\text{Re}_x = 5\text{E}5$  (at about  $x = 20 \text{ cm}$ ), the drag would be about 2.5 times higher, and the trailing edge thickness about four times higher than for fully laminar flow.

## Turbulent Flow

There is no exact theory for turbulent flat-plate flow, although there are many elegant computer solutions of the boundary layer equations using various empirical models for the turbulent eddy viscosity [9]. The most widely accepted result is simply an integral analysis similar to our study of the laminar profile approximation (7.6).

We begin with Eq. (7.5), which is valid for laminar or turbulent flow. We write it here for convenient reference:

$$\tau_w(x) = \rho U^2 \frac{d\theta}{dx} \quad (7.32)$$

From the definition of  $c_f$ , Eq. (7.10), this can be rewritten as

$$c_f = 2 \frac{d\theta}{dx} \quad (7.33)$$

Now recall from Fig. 7.5 that the turbulent profiles are nowhere near parabolic. Going back to Fig. 6.10, we see that flat-plate flow is very nearly logarithmic, with a slight outer wake and a thin viscous sublayer. Therefore, just as in turbulent pipe flow, we assume that the logarithmic law (6.28) holds all the way across the boundary layer

$$\frac{u}{u^*} \approx \frac{1}{\kappa} \ln \frac{yu^*}{\nu} + B \quad u^* = \left( \frac{\tau_w}{\rho} \right)^{1/2} \quad (7.34)$$

with, as usual,  $\kappa = 0.41$  and  $B = 5.0$ . At the outer edge of the boundary layer,  $y = \delta$  and  $u = U$ , and Eq. (7.34) becomes

$$\frac{U}{u^*} = \frac{1}{\kappa} \ln \frac{\delta u^*}{\nu} + B \quad (7.35)$$

But the definition of the skin friction coefficient, Eq. (7.10), is such that the following identities hold:

$$\frac{U}{u^*} \equiv \left(\frac{2}{c_f}\right)^{1/2} \quad \frac{\delta u^*}{\nu} \equiv \text{Re}_\delta \left(\frac{c_f}{2}\right)^{1/2} \quad (7.36)$$

Therefore Eq. (7.35) is a *skin friction law* for turbulent flat-plate flow:

$$\left(\frac{2}{c_f}\right)^{1/2} \approx 2.44 \ln \left[ \text{Re}_\delta \left(\frac{c_f}{2}\right)^{1/2} \right] + 5.0 \quad (7.37)$$

It is a complicated law, but we can at least solve for a few values and list them:

$\text{Re}_\delta$	$10^4$	$10^5$	$10^6$	$10^7$
$c_f$	0.00493	0.00315	0.00217	0.00158

Following a suggestion of Prandtl, we can forget the complex log friction law (7.37) and simply fit the numbers in the table to a power-law approximation:

$$c_f \approx 0.02 \text{Re}_\delta^{-1/6} \quad (7.38)$$

This we shall use as the left-hand side of Eq. (7.33). For the right-hand side, we need an estimate for  $\theta(x)$  in terms of  $\delta(x)$ . If we use the logarithmic law profile (7.34), we shall be up to our hips in logarithmic integrations for the momentum thickness. Instead we follow another suggestion of Prandtl, who pointed out that the turbulent profiles in Fig. 7.5 can be approximated by a one-seventh-power law:

$$\left(\frac{u}{U}\right)_{\text{turb}} \approx \left(\frac{y}{\delta}\right)^{1/7} \quad (7.39)$$

This is shown as a dashed line in Fig. 7.5. It is an excellent fit to the low-Reynolds-number turbulent data, which were all that were available to Prandtl at the time. With this simple approximation, the momentum thickness (7.28) can easily be evaluated:

$$\theta \approx \int_0^\delta \left(\frac{y}{\delta}\right)^{1/7} \left[ 1 - \left(\frac{y}{\delta}\right)^{1/7} \right] dy = \frac{7}{72} \delta \quad (7.40)$$

We accept this result and substitute Eqs. (7.38) and (7.40) into Kármán's momentum law (7.33):

$$c_f = 0.02 \text{Re}_\delta^{-1/6} = 2 \frac{d}{dx} \left( \frac{7}{72} \delta \right)$$

or

$$\text{Re}_\delta^{-1/6} = 9.72 \frac{d\delta}{dx} = 9.72 \frac{d(\text{Re}_\delta)}{d(\text{Re}_x)} \quad (7.41)$$

Separate the variables and integrate, assuming  $\delta = 0$  at  $x = 0$ :

$$\text{Re}_\delta \approx 0.16 \text{Re}_x^{6/7} \quad \text{or} \quad \frac{\delta}{x} \approx \frac{0.16}{\text{Re}_x^{1/7}} \quad (7.42)$$

Thus the thickness of a turbulent boundary layer increases as  $x^{6/7}$ , far more rapidly than the laminar increase  $x^{1/2}$ . Equation (7.42) is the solution to the problem, because all other parameters are now available. For example, combining Eqs. (7.42) and

(7.38), we obtain the friction variation

$$c_f \approx \frac{0.027}{\text{Re}_x^{1/7}} \quad (7.43)$$

Writing this out in dimensional form, we have

$$\tau_{w,\text{turb}} \approx \frac{0.0135 \mu^{1/7} \rho^{6/7} U^{13/7}}{x^{1/7}} \quad (7.44)$$

Turbulent plate friction drops slowly with  $x$ , increases nearly as  $\rho$  and  $U^2$ , and is rather insensitive to viscosity.

We can evaluate the drag coefficient by integrating the wall friction:

$$D = \int_0^L \tau_w b \, dx$$

or

$$C_D = \frac{2D}{\rho U^2 b L} = \int_0^1 c_f d \left( \frac{x}{L} \right)$$

$$C_D = \frac{0.031}{\text{Re}_L^{1/7}} = \frac{7}{6} c_f(L) \quad (7.45)$$

Then  $C_D$  is only 16 percent greater than the trailing-edge skin friction coefficient [compare with Eq. (7.27) for laminar flow].

The displacement thickness can be estimated from the one-seventh-power law and Eq. (7.12):

$$\delta^* \approx \int_0^\delta \left[ 1 - \left( \frac{y}{\delta} \right)^{1/7} \right] dy = \frac{1}{8} \delta \quad (7.46)$$

The turbulent flat-plate shape factor is approximately


$$H = \frac{\delta^*}{\theta} = \frac{\frac{1}{8}}{\frac{7}{72}} = 1.3 \quad (7.47)$$

These are the basic results of turbulent flat-plate theory.

Figure 7.6 shows flat-plate drag coefficients for both laminar and turbulent flow conditions. The smooth-wall relations (7.27) and (7.45) are shown, along with the effect of wall roughness, which is quite strong. The proper roughness parameter here is  $x/\epsilon$  or  $L/\epsilon$ , by analogy with the pipe parameter  $\epsilon/d$ . In the fully rough regime,  $C_D$  is independent of the Reynolds number, so that the drag varies exactly as  $U^2$  and is independent of  $\mu$ . Reference 2 presents a theory of rough flat-plate flow, and Ref. 1 gives a curve fit for skin friction and drag in the fully rough regime:

$$c_f \approx \left( 2.87 + 1.58 \log \frac{x}{\epsilon} \right)^{-2.5} \quad (7.48a)$$

$$C_D \approx \left( 1.89 + 1.62 \log \frac{L}{\epsilon} \right)^{-2.5} \quad (7.48b)$$

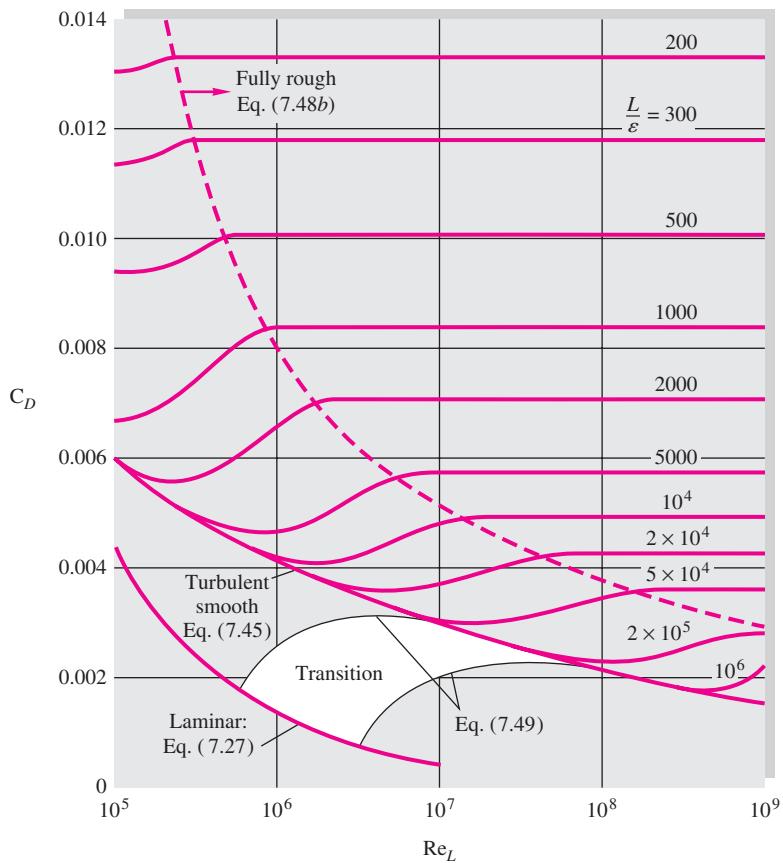

**Fig. 7.6** Drag coefficient of laminar and turbulent boundary layers on smooth and rough flat plates. This chart is the flat-plate analog of the Moody diagram of Fig. 6.13.

Equation (7.48b) is plotted to the right of the dashed line in Fig. 7.6. The figure also shows the behavior of the drag coefficient in the transition region  $5 \times 10^5 < \text{Re}_L < 8 \times 10^7$ , where the laminar drag at the leading edge is an appreciable fraction of the total drag. Schlichting [1] suggests the following curve fits for these transition drag curves, depending on the Reynolds number  $\text{Re}_{\text{trans}}$  where transition begins:

$$C_D \approx \begin{cases} \frac{0.031}{\text{Re}_L^{1/7}} - \frac{1440}{\text{Re}_L} & \text{Re}_{\text{trans}} = 5 \times 10^5 \\ \frac{0.031}{\text{Re}_L^{1/7}} - \frac{8700}{\text{Re}_L} & \text{Re}_{\text{trans}} = 3 \times 10^6 \end{cases} \quad (7.49a)$$

$$C_D \approx \begin{cases} \frac{0.031}{\text{Re}_L^{1/7}} - \frac{1440}{\text{Re}_L} & \text{Re}_{\text{trans}} = 5 \times 10^5 \\ \frac{0.031}{\text{Re}_L^{1/7}} - \frac{8700}{\text{Re}_L} & \text{Re}_{\text{trans}} = 3 \times 10^6 \end{cases} \quad (7.49b)$$

#### EXAMPLE 7.4

A hydrofoil 1.2 ft long and 6 ft wide is placed in a seawater flow of 40 ft/s, with  $\rho = 1.99$  slugs/ft<sup>3</sup> and  $\nu = 0.000011$  ft<sup>2</sup>/s. (a) Estimate the boundary layer thickness at the end of the plate. Estimate the friction drag for (b) turbulent smooth-wall flow from the leading edge,

(c) laminar turbulent flow with  $\text{Re}_{\text{trans}} = 5 \times 10^5$ , and (d) turbulent rough-wall flow with  $\epsilon = 0.0004 \text{ ft}$ .

### Solution

#### Part (a)

The Reynolds number is

$$\text{Re}_L = \frac{UL}{\nu} = \frac{(40 \text{ ft/s})(1.2 \text{ ft})}{0.000011 \text{ ft}^2/\text{s}} = 4.36 \times 10^6$$

Thus the trailing-edge flow is certainly turbulent. The maximum boundary layer thickness would occur for turbulent flow starting at the leading edge. From Eq. (7.42),

$$\frac{\delta(L)}{L} = \frac{0.16}{(4.36 \times 10^6)^{1/7}} = 0.018$$

or

$$\delta = 0.018(1.2 \text{ ft}) = 0.0216 \text{ ft} \quad \text{Ans. (a)}$$

This is 7.5 times thicker than a fully laminar boundary layer at the same Reynolds number.

#### Part (b)

For fully turbulent smooth-wall flow, the drag coefficient on one side of the plate is, from Eq. (7.45),

$$C_D = \frac{0.031}{(4.36 \times 10^6)^{1/7}} = 0.00349$$

Then the drag on both sides of the foil is approximately

$$D = 2C_D(\frac{1}{2}\rho U^2)bL = 2(0.00349)(\frac{1}{2})(1.99)(40)^2(6.0)(1.2) = 80 \text{ lbf} \quad \text{Ans. (b)}$$

#### Part (c)

With a laminar leading edge and  $\text{Re}_{\text{trans}} = 5 \times 10^5$ , Eq. (7.49a) applies:

$$C_D = 0.00349 - \frac{1440}{4.36 \times 10^6} = 0.00316$$

The drag can be recomputed for this lower drag coefficient:

$$D = 2C_D(\frac{1}{2}\rho U^2)bL = 72 \text{ lbf} \quad \text{Ans. (c)}$$

#### Part (d)

Finally, for the rough wall, we calculate

$$\frac{L}{\epsilon} = \frac{1.2 \text{ ft}}{0.0004 \text{ ft}} = 3000$$

From Fig. 7.6 at  $\text{Re}_L = 4.36 \times 10^6$ , this condition is just inside the fully rough regime. Equation (7.48b) applies:

$$C_D = (1.89 + 1.62 \log 3000)^{-2.5} = 0.00644$$

and the drag estimate is

$$D = 2C_D(\frac{1}{2}\rho U^2)bL = 148 \text{ lbf} \quad \text{Ans. (d)}$$

This small roughness nearly doubles the drag. It is probable that the total hydrofoil drag is still another factor of 2 larger because of trailing-edge flow separation effects.

## 7.5 Boundary Layers with Pressure Gradient<sup>3</sup>

The flat-plate analysis of the previous section should give us a good feeling for the behavior of both laminar and turbulent boundary layers, except for one important effect: flow separation. Prandtl showed that separation like that in Fig. 7.2b is caused by excessive momentum loss near the wall in a boundary layer trying to move downstream against increasing pressure,  $dp/dx > 0$ , which is called an *adverse pressure gradient*. The opposite case of decreasing pressure,  $dp/dx < 0$ , is called a *favorable gradient*, where flow separation can never occur. In a typical immersed-body flow, such as in Fig. 7.2b, the favorable gradient is on the front of the body and the adverse gradient is in the rear, as discussed in detail in Chap. 8.

We can explain flow separation with a geometric argument about the second derivative of velocity  $u$  at the wall. From the momentum equation (7.19b) at the wall, where  $u = v = 0$ , we obtain

$$\frac{\partial \tau}{\partial y} \Big|_{\text{wall}} = \mu \frac{\partial^2 u}{\partial y^2} \Big|_{\text{wall}} = -\rho U \frac{dU}{dx} = \frac{dp}{dx}$$

or

$$\frac{\partial^2 u}{\partial y^2} \Big|_{\text{wall}} = \frac{1}{\mu} \frac{dp}{dx} \quad (7.50)$$

for either laminar or turbulent flow. Thus in an adverse gradient the second derivative of velocity is positive at the wall; yet it must be negative at the outer layer ( $y = \delta$ ) to merge smoothly with the mainstream flow  $U(x)$ . It follows that the second derivative must pass through zero somewhere in between, at a point of inflection, and any boundary layer profile in an adverse gradient must exhibit a characteristic S shape.


Figure 7.7 illustrates the general case. In a favorable gradient (Fig. 7.7a) the profile is very rounded, there is no point of inflection, there can be no separation, and laminar profiles of this type are very resistant to a transition to turbulence [1 to 3].

In a zero pressure gradient (Fig. 7.7b), such as a flat-plate flow, the point of inflection is at the wall itself. There can be no separation, and the flow will undergo transition at  $Re_x$  no greater than about  $3 \times 10^6$ , as discussed earlier.

In an adverse gradient (Fig. 7.7c to e), a point of inflection (PI) occurs in the boundary layer, its distance from the wall increasing with the strength of the adverse gradient. For a weak gradient (Fig. 7.7c) the flow does not actually separate, but it is vulnerable to transition to turbulence at  $Re_x$  as low as  $10^5$  [1, 2]. At a moderate gradient, a critical condition (Fig. 7.7d) is reached where the wall shear is exactly zero ( $\partial u / \partial y = 0$ ). This is defined as the *separation point* ( $\tau_w = 0$ ), because any stronger gradient will actually cause backflow at the wall (Fig. 7.7e): the boundary layer thickens greatly, and the main flow breaks away, or separates, from the wall (Fig. 7.2b).


The flow profiles of Fig. 7.7 usually occur in sequence as the boundary layer progresses along the wall of a body. For example, in Fig. 7.2a, a favorable gradient occurs on the front of the body, zero pressure gradient occurs just upstream of the shoulder, and an adverse gradient occurs successively as we move around the rear of the body.

<sup>3</sup>This section may be omitted without loss of continuity.

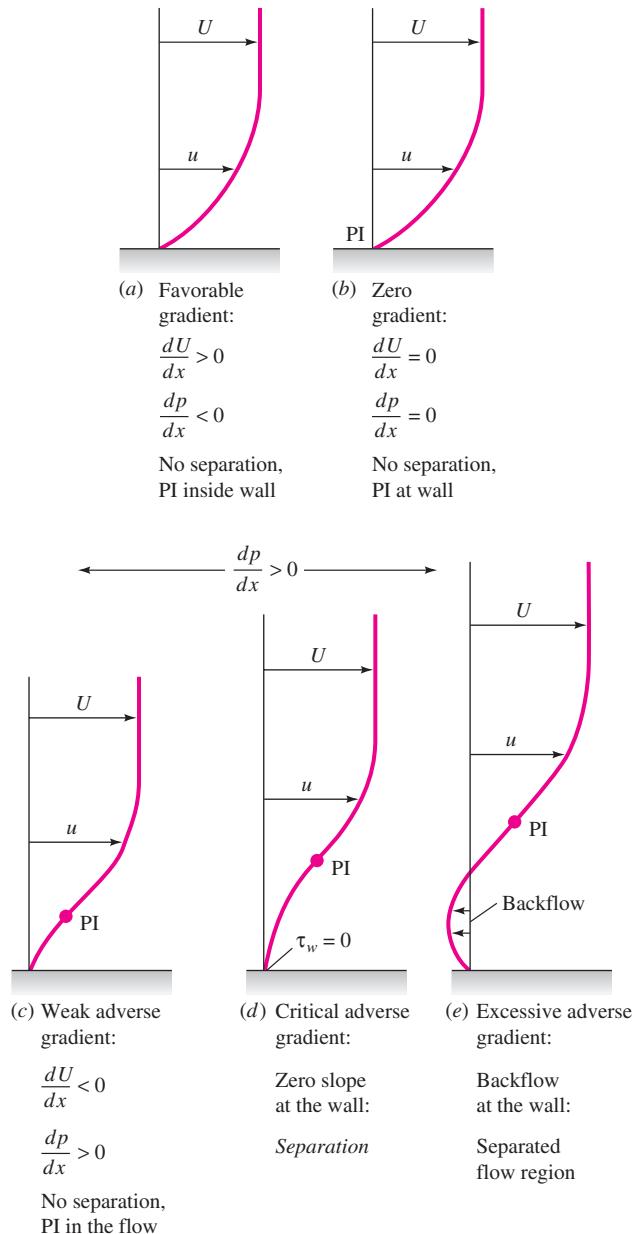

**Fig. 7.7** Effect of pressure gradient on boundary layer profiles; PI = point of inflection.

A second practical example is the flow in a duct consisting of a nozzle, throat, and diffuser, as in Fig. 7.8. The nozzle flow is a favorable gradient and never separates, nor does the throat flow where the pressure gradient is approximately zero. But the expanding-area diffuser produces low velocity and increasing pressure, an adverse gradient. If the diffuser angle is too large, the adverse gradient is excessive, and the boundary layer will separate at one or both walls, with backflow,

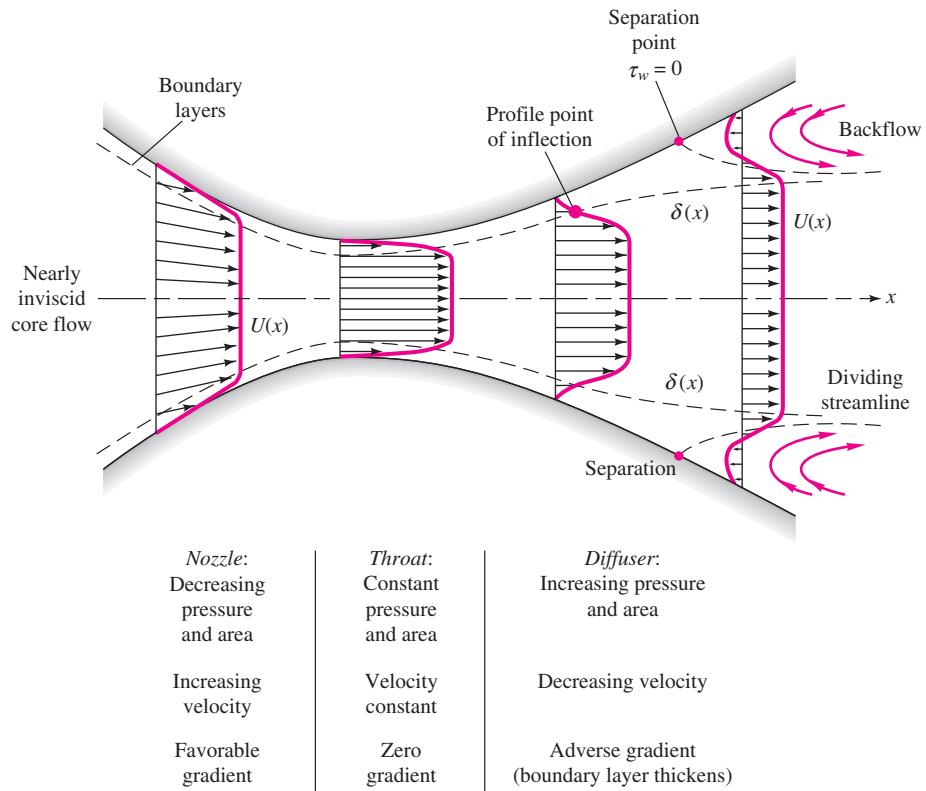

**Fig. 7.8** Boundary layer growth and separation in a nozzle-diffuser configuration.

increased losses, and poor pressure recovery. In the diffuser literature [10] this condition is called *diffuser stall*, a term used also in airfoil aerodynamics (Sec. 7.6) to denote airfoil boundary layer separation. Thus the boundary layer behavior explains why a large-angle diffuser has heavy flow losses (Fig. 6.23) and poor performance (Fig. 6.28).

Presently boundary layer theory can compute only up to the separation point, after which it is invalid. Techniques are now developed for analyzing the strong interaction effects caused by separated flows [5, 6].

### Laminar Integral Theory<sup>4</sup>

Both laminar and turbulent theories can be developed from Kármán's general two-dimensional boundary layer integral relation [2, 7], which extends Eq. (7.33) to variable  $U(x)$  by integration across the boundary layer:

$$\frac{\tau_w}{\rho U^2} = \frac{1}{2} c_f = \frac{d\theta}{dx} + (2 + H) \frac{\theta}{U} \frac{dU}{dx} \quad (7.51)$$

<sup>4</sup>This section may be omitted without loss of continuity.

where  $\theta(x)$  is the momentum thickness and  $H(x) = \delta^*(x)/\theta(x)$  is the shape factor. From Eq. (7.17) negative  $dU/dx$  is equivalent to positive  $dp/dx$ —that is, an adverse gradient.


We can integrate Eq. (7.51) to determine  $\theta(x)$  for a given  $U(x)$  if we correlate  $c_f$  and  $H$  with the momentum thickness. This has been done by examining typical velocity profiles of laminar and turbulent boundary layer flows for various pressure gradients. Some examples are given in Fig. 7.9, showing that the shape factor  $H$  is a good indicator of the pressure gradient. The higher the  $H$ , the stronger the adverse gradient, and separation occurs approximately at

$$H \approx \begin{cases} 3.5 & \text{laminar flow} \\ 2.4 & \text{turbulent flow} \end{cases} \quad (7.52)$$

The laminar profiles (Fig. 7.9a) clearly exhibit the S shape and a point of inflection with an adverse gradient. But in the turbulent profiles (Fig. 7.9b) the points of inflection are typically buried deep within the thin viscous sublayer, which can hardly be seen on the scale of the figure.

There are scores of turbulent theories in the literature, but they are all complicated algebraically and will be omitted here. The reader is referred to advanced texts [1–3, 9].

For laminar flow, a simple and effective method was developed by Thwaites [11], who found that Eq. (7.51) can be correlated by a single dimensionless momentum

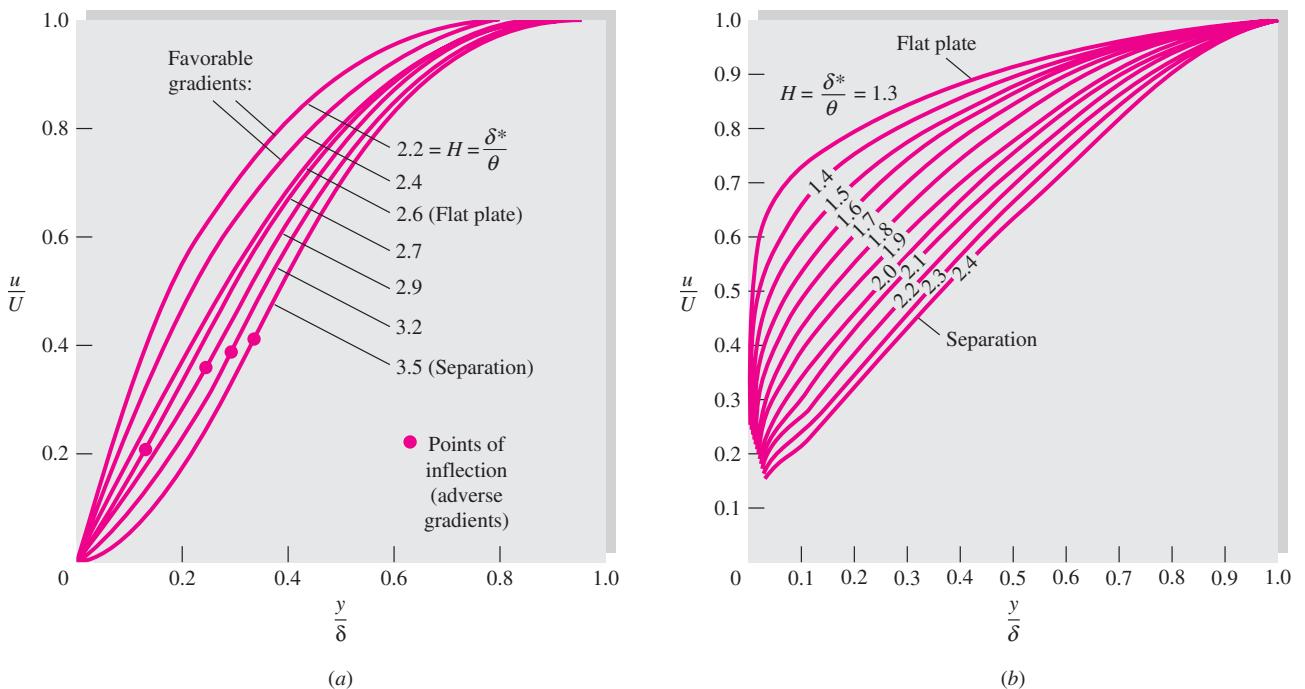

**Fig. 7.9** Velocity profiles with pressure gradient: (a) laminar flow; (b) turbulent flow with adverse gradients.

thickness variable  $\lambda$ , defined as

$$\lambda = \frac{\theta^2}{v} \frac{dU}{dx} \quad (7.53)$$

Using a straight-line fit to his correlation, Thwaites was able to integrate Eq. (7.51) in closed form, with the result

$$\theta^2 = \theta_0^2 \left( \frac{U_0}{U} \right)^6 + \frac{0.45\nu}{U^6} \int_0^x U^5 dx \quad (7.54)$$

where  $\theta_0$  is the momentum thickness at  $x = 0$  (usually taken to be zero). Separation ( $c_f = 0$ ) was found to occur at a particular value of  $\lambda$ :

$$\text{Separation:} \quad \lambda = -0.09 \quad (7.55)$$

Finally, Thwaites correlated values of the dimensionless shear stress  $S = \tau_w \theta / (\mu U)$  with  $\lambda$ , and his graphed result can be curve-fitted as follows:

$$S(\lambda) = \frac{\tau_w \theta}{\mu U} \approx (\lambda + 0.09)^{0.62} \quad (7.56)$$

This parameter is related to the skin friction by the identity

$$S \equiv \frac{1}{2} c_f \text{Re}_\theta \quad (7.57)$$

Equations (7.54) to (7.56) constitute a complete theory for the laminar boundary layer with variable  $U(x)$ , with an accuracy of  $\pm 10$  percent compared with computer solutions of the laminar-boundary-layer equations (7.19). Complete details of Thwaites's and other laminar theories are given in Ref. 2.

As a demonstration of Thwaites's method, take a flat plate, where  $U = \text{constant}$ ,  $\lambda = 0$ , and  $\theta_0 = 0$ . Equation (7.54) integrates to

$$\theta^2 = \frac{0.45\nu x}{U}$$

or

$$\frac{\theta}{x} = \frac{0.671}{\text{Re}_x^{1/2}} \quad (7.58)$$

This is within 1 percent of Blasius's numerical solution, Eq. (7.30).

With  $\lambda = 0$ , Eq. (7.56) predicts the flat-plate shear to be

$$\frac{\tau_w \theta}{\mu U} = (0.09)^{0.62} = 0.225$$

or

$$c_f = \frac{2\tau_w}{\rho U^2} = \frac{0.671}{\text{Re}_x^{1/2}} \quad (7.59)$$

This is also within 1 percent of the Blasius result, Eq. (7.25). However, the general accuracy of this method is poorer than 1 percent because Thwaites actually "tuned" his correlation constants to make them agree with exact flat-plate theory.

We shall not compute any more boundary layer details here; but as we go along, investigating various immersed-body flows, especially in Chap. 8, we shall

use Thwaites's method to make qualitative assessments of the boundary layer behavior.

### EXAMPLE 7.5

In 1938 Howarth proposed a linearly decelerating external velocity distribution

$$U(x) = U_0 \left(1 - \frac{x}{L}\right) \quad (1)$$

as a theoretical model for laminar-boundary-layer study. (a) Use Thwaites's method to compute the separation point  $x_{\text{sep}}$  for  $\theta_0 = 0$ , and compare with the exact computer solution  $x_{\text{sep}}/L = 0.119863$  given by H. Wipperman in 1966. (b) Also compute the value of  $c_f = 2\tau_w/(\rho U^2)$  at  $x/L = 0.1$ .

### Solution

#### Part (a)

First note that  $dU/dx = -U_0/L = \text{constant}$ : Velocity decreases, pressure increases, and the pressure gradient is adverse throughout. Now integrate Eq. (7.54):

$$\theta^2 = \frac{0.45\nu}{U_0^6(1-x/L)^6} \int_0^x U_0^5 \left(1 - \frac{x}{L}\right)^5 dx = 0.075 \frac{\nu L}{U_0} \left[ \left(1 - \frac{x}{L}\right)^{-6} - 1 \right] \quad (2)$$

Then the dimensionless factor  $\lambda$  is given by

$$\lambda = \frac{\theta^2}{v} \frac{dU}{dx} = -\frac{\theta^2 U_0}{\nu L} = -0.075 \left[ \left(1 - \frac{x}{L}\right)^{-6} - 1 \right] \quad (3)$$

From Eq. (7.55) we set this equal to  $-0.09$  for separation:

$$\lambda_{\text{sep}} = -0.09 = -0.075 \left[ \left(1 - \frac{x_{\text{sep}}}{L}\right)^{-6} - 1 \right]$$

$$\text{or} \quad \frac{x_{\text{sep}}}{L} = 1 - (2.2)^{-1/6} = 0.123 \quad \text{Ans. (a)}$$

This is less than 3 percent higher than Wipperman's exact solution, and the computational effort is very modest.

#### Part (b)

To compute  $c_f$  at  $x/L = 0.1$  (just before separation), we first compute  $\lambda$  at this point, using Eq. (3):

$$\lambda(x = 0.1L) = -0.075[(1 - 0.1)^{-6} - 1] = -0.0661$$

Then from Eq. (7.56) the shear parameter is

$$S(x = 0.1L) = (-0.0661 + 0.09)^{0.62} = 0.099 = \frac{1}{2}c_f \text{Re}_\theta \quad (4)$$

We can compute  $\text{Re}_\theta$  in terms of  $\text{Re}_L$  from Eq. (2) or (3):

$$\frac{\theta^2}{L^2} = \frac{0.0661}{UL/\nu} = \frac{0.0661}{\text{Re}_L}$$

$$\text{or} \quad \text{Re}_\theta = 0.257 \text{Re}_L^{1/2} \quad \text{at } \frac{x}{L} = 0.1$$

Substitute into Eq. (4):

$$0.099 = \frac{1}{2} c_f (0.257 \text{Re}_L^{1/2})$$

or

$$c_f = \frac{0.77}{\text{Re}_L^{1/2}} \quad \text{Re}_L = \frac{UL}{\nu} \quad \text{Ans. (b)}$$

We cannot actually compute  $c_f$  without the value of, say,  $U_0 L / \nu$ .

## 7.6 Experimental External Flows

Boundary layer theory is very interesting and illuminating and gives us a great qualitative grasp of viscous flow behavior; but, because of flow separation, the theory does not generally allow a quantitative computation of the complete flow field. In particular, there is at present no satisfactory theory, except CFD results, for the forces on an arbitrary body immersed in a stream flowing at an arbitrary Reynolds number. Therefore experimentation is the key to treating external flows.

Literally thousands of papers in the literature report experimental data on specific external viscous flows. This section gives a brief description of the following external flow problems:

1. Drag of two- and three-dimensional bodies:
  - a. Blunt bodies.
  - b. Streamlined shapes.
2. Performance of lifting bodies:
  - a. Airfoils and aircraft.
  - b. Projectiles and finned bodies.
  - c. Birds and insects.


For further reading see the goldmine of data compiled in Hoerner [12]. In later chapters we shall study data on supersonic airfoils (Chap. 9), open-channel friction (Chap. 10), and turbomachinery performance (Chap. 11).

### Drag of Immersed Bodies

Any body of any shape when immersed in a fluid stream will experience forces and moments from the flow. If the body has arbitrary shape and orientation, the flow will exert forces and moments about all three coordinate axes, as shown in Fig. 7.10. It is customary to choose one axis parallel to the free stream and positive downstream. The force on the body along this axis is called *drag*, and the moment about that axis the *rolling moment*. The drag is essentially a flow loss and must be overcome if the body is to move against the stream.

A second and very important force is perpendicular to the drag and usually performs a useful job, such as bearing the weight of the body. It is called the *lift*. The moment about the lift axis is called *yaw*.

The third component, neither a loss nor a gain, is the *side force*, and about this axis is the *pitching moment*. To deal with this three-dimensional force-moment situation is more properly the role of a textbook on aerodynamics [for example, 13]. We shall limit the discussion here to lift and drag.

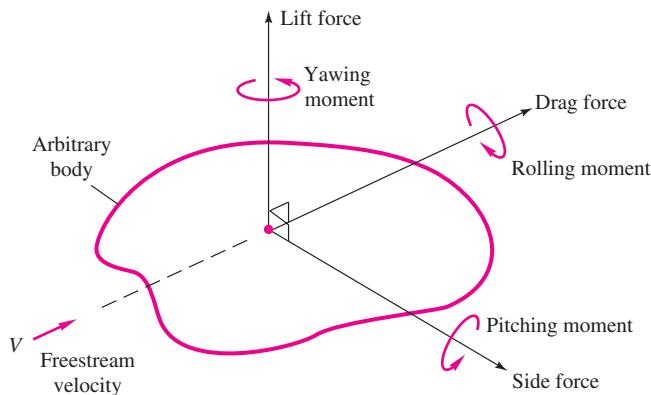


**Fig. 7.10** Definition of forces and moments on a body immersed in a uniform flow.

When the body has symmetry about the lift–drag axis, as with airplanes, ships, and cars moving directly into a stream, the side force, yaw, and roll vanish, and the problem reduces to a two-dimensional case: two forces, lift and drag, and one moment, pitch.

A final simplification often occurs when the body has two planes of symmetry, as in Fig. 7.11. A wide variety of shapes such as cylinders, wings, and all bodies of revolution satisfy this requirement. If the free stream is parallel to the intersection of these two planes, called the *principal chord line of the body*, the body experiences drag only, with no lift, side force, or moments.<sup>5</sup> This type of degenerate one-force drag data is what is most commonly reported in the literature, but if the free stream is not parallel to the chord line, the body will have an unsymmetric orientation and all three forces and three moments can arise in principle.

In low-speed flow past geometrically similar bodies with identical orientation and relative roughness, the drag coefficient should be a function of the body Reynolds number:

$$C_D = f(\text{Re}) \quad (7.60)$$

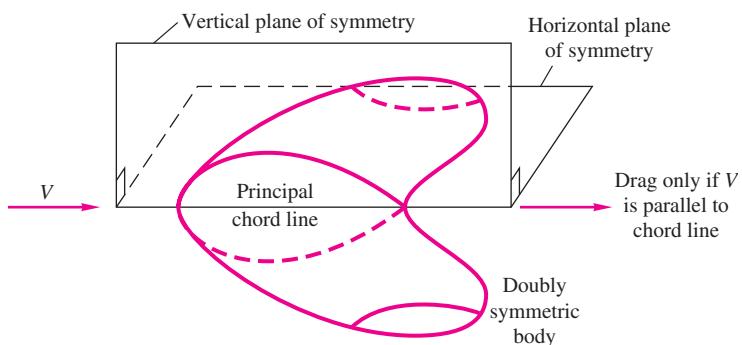

**Fig. 7.11** Only the drag force occurs if the flow is parallel to both planes of symmetry.

<sup>5</sup>In bodies with shed vortices, such as the cylinder in Fig. 5.2, there may be *oscillating* lift, side force, and moments, but their mean value is zero.

The Reynolds number is based upon the free-stream velocity  $V$  and a characteristic length  $L$  of the body, usually the chord or body length parallel to the stream:

$$\text{Re} = \frac{VL}{\nu} \quad (7.61)$$

For cylinders, spheres, and disks, the characteristic length is the diameter  $D$ .

### Characteristic Area

Drag coefficients are defined by using a characteristic area  $A$ , which may differ depending on the body shape:

$$C_D = \frac{\text{drag}}{\frac{1}{2}\rho V^2 A} \quad (7.62)$$

The factor  $\frac{1}{2}$  is our traditional tribute to Euler and Bernoulli. The area  $A$  is usually one of three types:

1. *Frontal area*, the body as seen from the stream; suitable for thick, stubby bodies, such as spheres, cylinders, cars, trucks, missiles, projectiles, and torpedoes.
2. *Planform area*, the body area as seen from above; suitable for wide, flat bodies such as wings and hydrofoils.
3. *Wetted area*, customary for surface ships and barges.


In using drag or other fluid force data, it is important to note what length and area are being used to scale the measured coefficients.

### Friction Drag and Pressure Drag

As we have mentioned, the theory of drag is weak and inadequate, except for the flat plate. This is because of flow separation. Boundary layer theory can predict the separation point but cannot accurately estimate the (usually low) pressure distribution in the separated region. The difference between the high pressure in the front stagnation region and the low pressure in the rear separated region causes a large drag contribution called *pressure drag*. This is added to the integrated shear stress or *friction drag* of the body, which it often exceeds:

$$C_D = C_{D,\text{press}} + C_{D,\text{fric}} \quad (7.63)$$

The relative contribution of friction and pressure drag depends upon the body's shape, especially its thickness. Figure 7.12 shows drag data for a streamlined cylinder of very large depth into the paper. At zero thickness the body is a flat plate and exhibits 100 percent friction drag. At thickness equal to the chord length, simulating a circular cylinder, the friction drag is only about 3 percent. Friction and pressure drag are about equal at thickness  $t/c = 0.25$ . Note that  $C_D$  in Fig. 7.12b looks quite different when based on frontal area instead of planform area, planform being the usual choice for this body shape. The two curves in Fig. 7.12b represent exactly the same drag data.

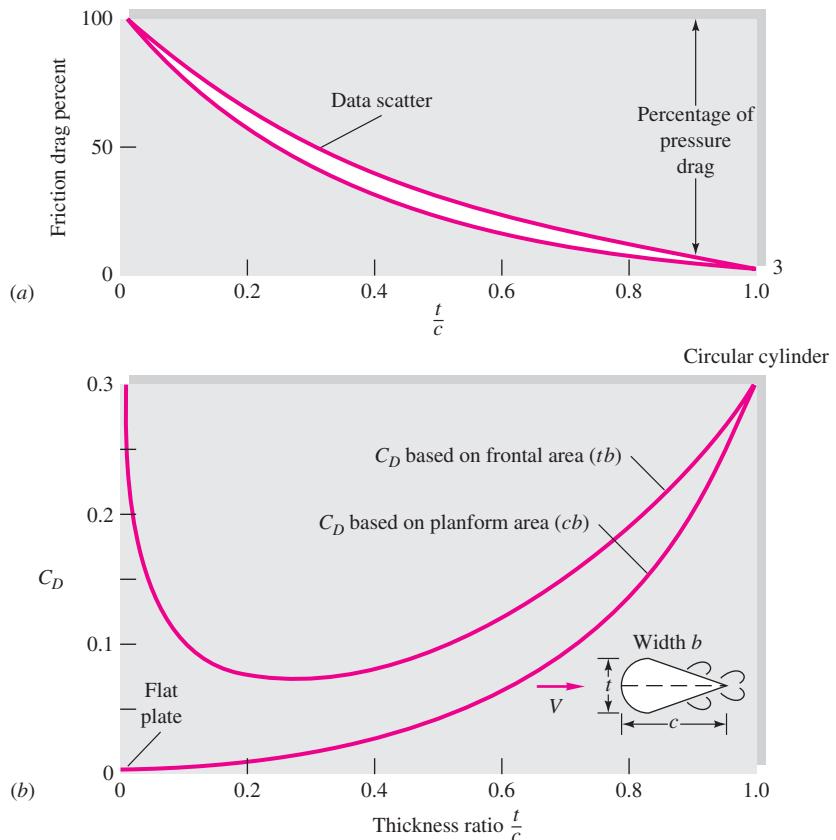


**Fig. 7.12** Drag of a streamlined two-dimensional cylinder at  $Re_c = 10^6$ : (a) effect of thickness ratio on percentage of friction drag; (b) total drag versus thickness when based on two different areas.

Figure 7.13 illustrates the dramatic effect of separated flow and the subsequent failure of boundary layer theory. The theoretical inviscid pressure distribution on a circular cylinder (Chap. 8) is shown as the dashed line in Fig. 7.13c:

$$C_p = \frac{p - p_\infty}{\frac{1}{2}\rho V^2} = 1 - 4 \sin^2 \theta$$

where  $p_\infty$  and  $V$  are the pressure and velocity, respectively, in the free stream. The actual laminar and turbulent boundary layer pressure distributions in Fig. 7.13c are startlingly different from those predicted by theory. Laminar flow is very vulnerable to the adverse gradient on the rear of the cylinder, and separation occurs at  $\theta = 82^\circ$ , which certainly could not have been predicted from inviscid theory. The broad wake and very low pressure in the separated laminar region cause the large drag  $C_D = 1.2$ .


The turbulent boundary layer in Fig. 7.13b is more resistant, and separation is delayed until  $\theta = 120^\circ$ , with a resulting smaller wake, higher pressure on the rear, and 75 percent less drag,  $C_D = 0.3$ . This explains the sharp drop in drag at transition in Fig. 5.3.

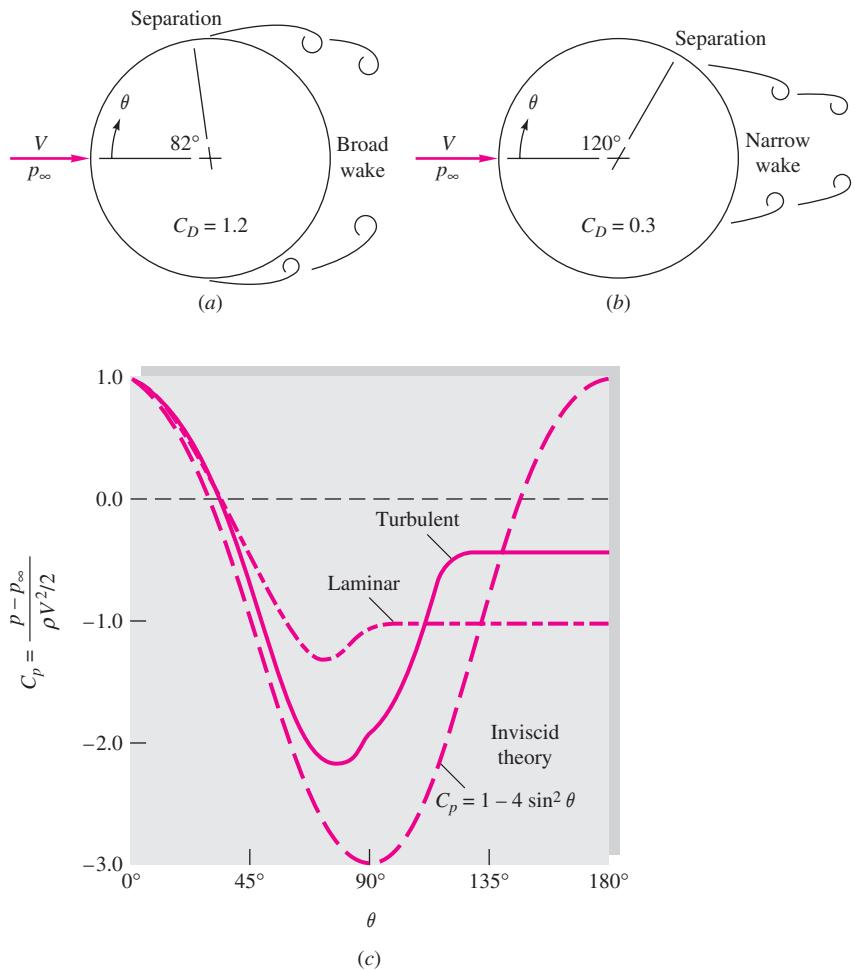

**Fig. 7.13** Flow past a circular cylinder: (a) laminar separation; (b) turbulent separation; (c) theoretical and actual surface pressure distributions.

The same sharp difference between vulnerable laminar separation and resistant turbulent separation can be seen for a sphere in Fig. 7.14. The laminar flow (Fig. 7.14a) separates at about  $80^\circ$ ,  $C_D = 0.5$ , while the turbulent flow (Fig. 7.14b) separates at  $120^\circ$ ,  $C_D = 0.2$ . Here the Reynolds numbers are exactly the same, and the turbulent boundary layer is induced by a patch of sand roughness at the nose of the ball. Golf balls fly in this range of Reynolds numbers, which is why they are deliberately dimpled—to induce a turbulent boundary layer and lower drag. Again we would find the actual pressure distribution on the sphere to be quite different from that predicted by inviscid theory.

In general, we cannot overstress the importance of body streamlining to reduce drag at Reynolds numbers above about 100. This is illustrated in Fig. 7.15. The rectangular cylinder (Fig. 7.15a) has separation at all sharp corners and very high drag. Rounding its nose (Fig. 7.15b) reduces drag by about 45 percent, but  $C_D$  is still high. Streamlining its rear to a sharp trailing edge (Fig. 7.15c) reduces its drag another 85 percent to a practical minimum for the given thickness. As a dramatic contrast, the circular cylinder (Fig. 7.15d) has one-eighth the thickness and one-three-hundredth the cross

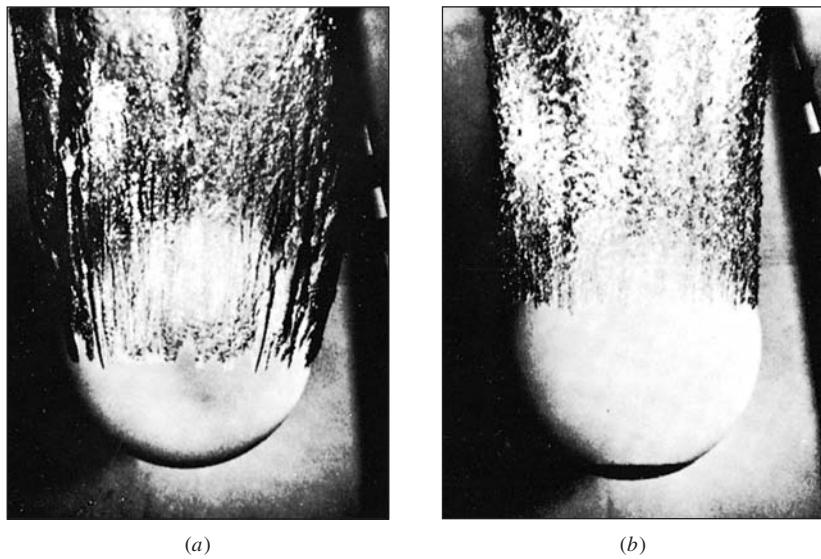

**Fig. 7.14** Strong differences in laminar and turbulent separation on an 8.5-in bowling ball entering water at 25 ft/s: (a) smooth ball, laminar boundary layer; (b) same entry, turbulent flow induced by patch of nose-sand roughness. (NAVAIR Weapons Division Historical Archives.)


section (c) (Fig. 7.15c), yet it has the same drag. For high-performance vehicles and other moving bodies, the name of the game is drag reduction, for which intense research continues for both aerodynamic and hydrodynamic applications [20, 39].

## Two-Dimensional Bodies


The drag of some representative wide-span (nearly two-dimensional) bodies is shown versus the Reynolds number in Fig. 7.16a. All bodies have high  $C_D$  at very low (*creeping flow*)  $Re \leq 1.0$ , while they spread apart at high Reynolds numbers according to their degree of streamlining. All values of  $C_D$  are based on the planform area except the plate normal to the flow. The birds and the sailplane are, of course, not very two-dimensional, having only modest span length. Note that birds are not nearly as efficient as modern sailplanes or airfoils [14, 15].

## Creeping Flow

In 1851 G. G. Stokes showed that, if the Reynolds number is very small,  $Re \ll 1$ , the acceleration terms in the Navier-Stokes equations (7.14b, c) are negligible. The flow is termed *creeping flow*, or Stokes flow, and is a balance between pressure

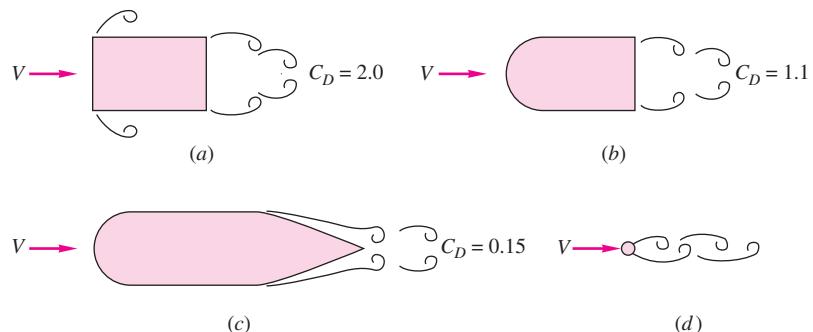

**Fig. 7.15** The importance of streamlining in reducing drag of a body ( $C_D$  based on frontal area): (a) rectangular cylinder; (b) rounded nose; (c) rounded nose and streamlined sharp trailing edge; (d) circular cylinder with the same drag as case (c).

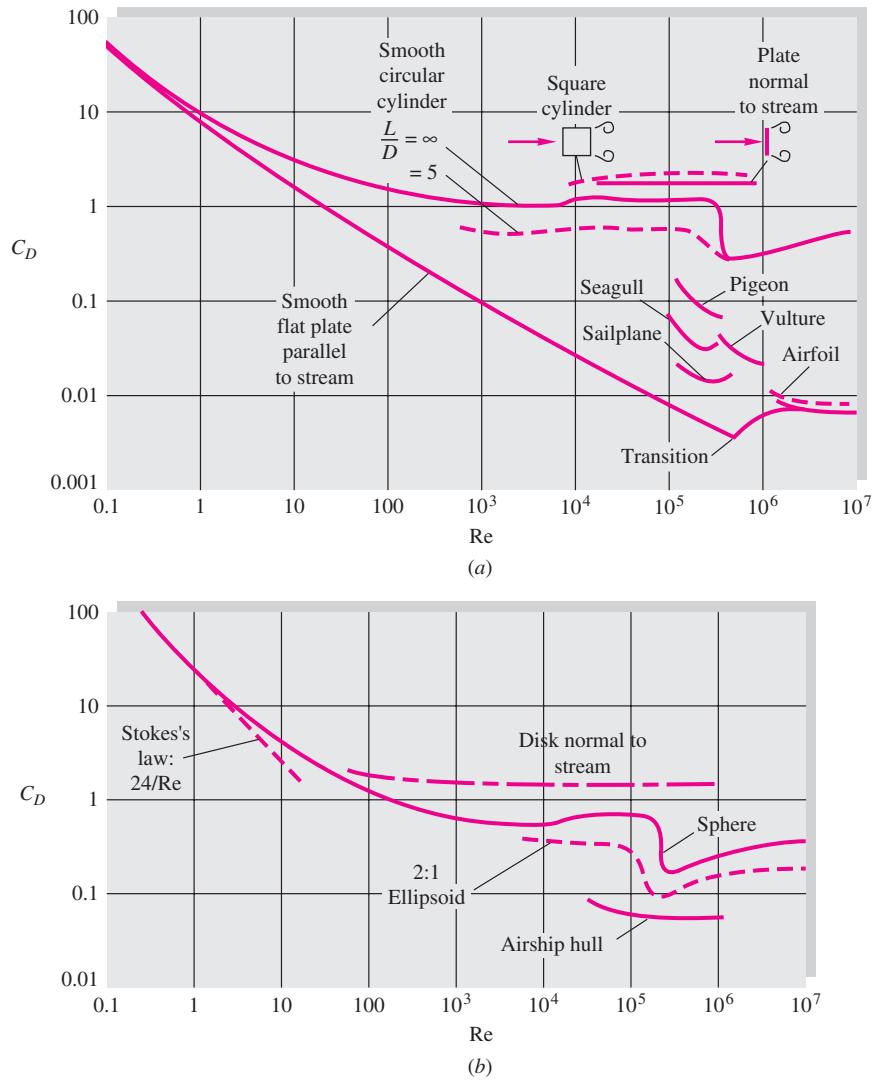

**Fig. 7.16** Drag coefficients of smooth bodies at low Mach numbers: (a) two-dimensional bodies; (b) three-dimensional bodies. Note the Reynolds number independence of blunt bodies at high  $Re$ .

gradient and viscous stresses. Continuity and momentum reduce to two linear equations for velocity and pressure:

$$Re \ll 1: \quad \nabla \cdot \mathbf{V} = 0 \quad \text{and} \quad \nabla p \approx \mu \nabla^2 \mathbf{V}$$

If the geometry is simple (for example, a sphere or disk) closed-form solutions can be found and the body drag can be computed [2]. Stokes himself provided the sphere drag formula:









$$F_{\text{sphere}} = 3\pi \mu U d$$

$$\text{or} \quad C_D = \frac{F}{\frac{1}{2} \rho U^2 \frac{\pi}{4} d^2} = \frac{24}{\rho U d / \mu} = \frac{24}{Re_d} \quad (7.64)$$

This relation is plotted in Fig. 7.16b and is seen to be accurate for about  $Re_d \leq 1$ .

Table 7.2 gives a few data on drag, based on frontal area, of two-dimensional bodies of various cross section, at  $\text{Re} \geq 10^4$ . The sharp-edged bodies, which tend to cause flow separation regardless of the character of the boundary layer, are insensitive to the Reynolds number. The elliptic cylinders, being smoothly rounded, have the


**Table 7.2** Drag of Two-Dimensional Bodies at  $\text{Re} \geq 10^4$

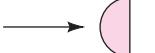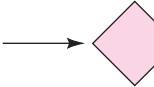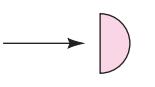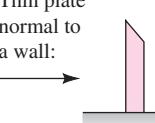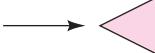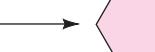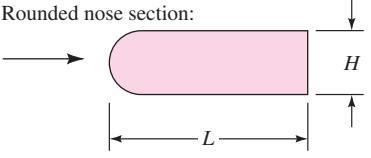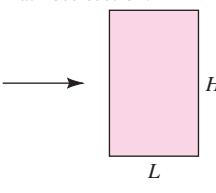Shape	$C_D$ based on frontal area	Shape	$C_D$ based on frontal area	Shape	$C_D$ based on frontal area
Square cylinder:		Half cylinder:		Plate:	
	2.1		1.2		2.0
	1.6		1.7		1.4
Half tube:		Equilateral triangle:			
	1.2		1.6		
	2.3		2.0		1.0
					0.7
Shape	$C_D$ based on frontal area				
Rounded nose section:					
	$L/H:$	0.5	1.0	2.0	4.0
	$C_D:$	1.16	0.90	0.70	0.68
					0.64
Flat nose section:					
	$L/H:$	0.1	0.4	0.7	1.2
	$C_D:$	1.9	2.3	2.7	2.1
					2.0
					2.5
					3.0
					6.0
Elliptical cylinder:		<b>Laminar</b>	<b>Turbulent</b>		
1:1 $\longrightarrow$		1.2	0.3		
2:1 $\longrightarrow$		0.6	0.2		
4:1 $\longrightarrow$		0.35	0.15		
8:1 $\longrightarrow$		0.25	0.1		

laminar-to-turbulent transition effect of Figs. 7.13 and 7.14 and are therefore quite sensitive to whether the boundary layer is laminar or turbulent.

### EXAMPLE 7.6

A square 6-in piling is acted on by a water flow of 5 ft/s that is 20 ft deep, as shown in Fig. E7.6. Estimate the maximum bending exerted by the flow on the bottom of the piling.

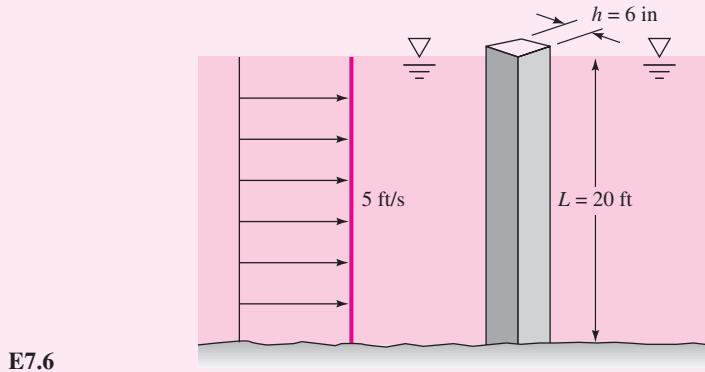

E7.6

### Solution

Assume seawater with  $\rho = 1.99$  slugs/ft<sup>3</sup> and kinematic viscosity  $\nu = 0.000011$  ft<sup>2</sup>/s. With a piling width of 0.5 ft, we have

$$\text{Re}_h = \frac{(5 \text{ ft/s})(0.5 \text{ ft})}{0.000011 \text{ ft}^2/\text{s}} = 2.3 \times 10^5$$

This is the range where Table 7.2 applies. The worst case occurs when the flow strikes the flat side of the piling,  $C_D \approx 2.1$ . The frontal area is  $A = Lh = (20 \text{ ft})(0.5 \text{ ft}) = 10 \text{ ft}^2$ . The drag is estimated by

$$F = C_D(\frac{1}{2}\rho V^2 A) \approx 2.1(\frac{1}{2})(1.99 \text{ slugs/ft}^3)(5 \text{ ft/s})^2(10 \text{ ft}^2) = 522 \text{ lbf}$$

If the flow is uniform, the center of this force should be at approximately middepth. Therefore the bottom bending moment is

$$M_0 \approx \frac{FL}{2} = 522(10) = 5220 \text{ ft} \cdot \text{lbf} \quad \text{Ans.}$$

According to the flexure formula from strength of materials, the bending stress at the bottom would be






$$S = \frac{M_0 y}{I} = \frac{(5220 \text{ ft} \cdot \text{lbf})(0.25 \text{ ft})}{\frac{1}{12}(0.5 \text{ ft})^4} = 251,000 \text{ lbf/ft}^2 = 1740 \text{ lbf/in}^2$$



to be multiplied, of course, by the stress concentration factor due to the built-in end conditions.

### Three-Dimensional Bodies

Some drag coefficients of three-dimensional bodies are listed in Table 7.3 and Fig. 7.16b. Again we can conclude that sharp edges always cause flow separation and high

**Table 7.3** Drag of Three-Dimensional Bodies at  $\text{Re} \geq 10^4$ 

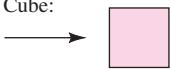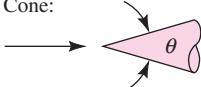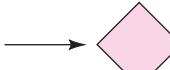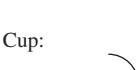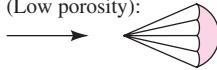Body	$C_D$ based on frontal area	Body	$C_D$ based on frontal area
Cube:	1.07	Cone:	$\theta: 10^\circ, 20^\circ, 30^\circ, 40^\circ, 60^\circ, 75^\circ, 90^\circ$ $C_D: 0.30, 0.40, 0.55, 0.65, 0.80, 1.05, 1.15$
			
	0.81	Short cylinder, laminar flow:	$L/D: 1, 2, 3, 5, 10, 20, 40, \infty$ $C_D: 0.64, 0.68, 0.72, 0.74, 0.82, 0.91, 0.98, 1.20$
	1.4	Porous parabolic dish [23]:	$\text{Porosity: } 0, 0.1, 0.2, 0.3, 0.4, 0.5$ $\leftarrow C_D: 1.42, 1.33, 1.20, 1.05, 0.95, 0.82$ $\rightarrow C_D: 0.95, 0.92, 0.90, 0.86, 0.83, 0.80$
	0.4	Average person:	 $C_D A \approx 9 \text{ ft}^2$ $C_D A \approx 1.2 \text{ ft}^2$
Disk:	1.17	Pine and spruce trees [24]:	 $U, \text{ m/s: } 10, 20, 30, 40$ $C_D: 1.2 \pm 0.2, 1.0 \pm 0.2, 0.7 \pm 0.2, 0.5 \pm 0.2$
		Average person:	
Parachute (Low porosity):	1.2	Pine and spruce trees [24]:	
			Without deflector: 0.96; with deflector: 0.76
Streamlined train (approximately 5 cars):	$C_D A \approx 8.5 \text{ m}^2$		
			
Bicycle:			
Upright: $C_D A \approx 0.51 \text{ m}^2$ ; Racing: $C_D A \approx 0.30 \text{ m}^2$			

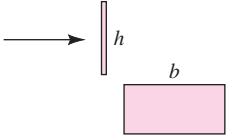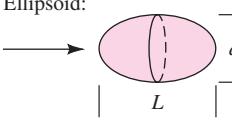Body	Ratio	$C_D$ based on frontal area		Body	Ratio	$C_D$ based on frontal area	
Rectangular plate:	$b/h$	1	1.18	Flat-faced cylinder:			
	5	1.2			0.5	1.15	
	10	1.3			1	0.90	
	20	1.5			2	0.85	
	$\infty$	2.0			4	0.87	
					8	0.99	
Ellipsoid:	$L/d$	0.75	<b>Laminar</b>	Buoyant rising sphere [50],		$C_D \approx 0.95$	
	1	0.5	<b>Turbulent</b>	$135 < \text{Re}_d < 1E5$			
	2	0.47					
	4	0.27					
	8	0.25					
		0.2					
		0.08					

drag that is insensitive to the Reynolds number. Rounded bodies like the ellipsoid have drag that depends on the point of separation, so that both the Reynolds number and the character of the boundary layer are important. Body length will generally decrease pressure drag by making the body relatively more slender, but sooner or later the friction drag will catch up. For the flat-faced cylinder in Table 7.3, pressure drag decreases with  $L/d$  but friction increases, so that minimum drag occurs at about  $L/d = 2$ .

### Buoyant Rising Light Spheres

The sphere data in Fig. 7.16b are for fixed models in wind tunnels and from falling sphere tests and indicate a drag coefficient of about 0.5 in the range  $1E3 < Re_d < 1E5$ . It was recently pointed out [50] that this is *not* the case for a freely rising buoyant sphere or bubble. If the sphere is light,  $\rho_{\text{sphere}} < 0.8 \rho_{\text{fluid}}$ , a wake instability arises in the range  $135 < Re_d < 1E5$ . The sphere then spirals upward at an angle of about  $60^\circ$  from the horizontal. The drag coefficient is approximately doubled, to an average value  $C_D \approx 0.95$ , as listed in Table 7.3 [50]. For a heavier body,  $\rho_{\text{sphere}} \approx \rho_{\text{fluid}}$ , the buoyant sphere rises vertically and the drag coefficient follows the standard curve in Fig. 7.16b.

#### EXAMPLE 7.7

According to Ref. 12, the drag coefficient of a blimp, based on surface area, is approximately 0.006 if  $Re_L > 10^6$ . A certain blimp is 75 m long and has a surface area of  $3400 \text{ m}^2$ . Estimate the power required to propel this blimp at 18 m/s at a standard altitude of 1000m.

#### Solution

- *Assumptions:* We hope the Reynolds number will be high enough that the given data are valid.
- *Approach:* Determine if  $Re_L > 10^6$  and, if so, compute the drag and the power required.
- *Property values:* Table A.6 at  $z = 1000 \text{ m}$ :  $\rho = 1.112 \text{ kg/m}^3$ ,  $T = 282 \text{ K}$ , thus  $\mu \approx 1.75E-5 \text{ kg/m-s}$ .
- *Solution steps:* Determine the Reynolds number of the blimp:

$$Re_L = \frac{\rho UL}{\mu} = \frac{(1.112 \text{ kg/m}^3)(18 \text{ m/s})(75 \text{ m})}{1.75E-5 \text{ kg/m-s}} = 8.6E7 > 10^6 \quad \text{OK}$$

The given drag coefficient is valid. Compute the blimp drag and the power = (drag)  $\times$  (velocity):

$$F = C_D \frac{\rho}{2} U^2 A_{\text{wet}} = (0.006) \frac{1.112 \text{ kg/m}^3}{2} (18 \text{ m/s})^2 (3400 \text{ m}^2) = 3675 \text{ N}$$

$$\text{Power} = FV = (3675 \text{ N})(18 \text{ m/s}) = 66,000 \text{ W} \quad (89 \text{ hp}) \quad \text{Ans.}$$



- *Comments:* These are nominal estimates. Drag is highly dependent on both shape and Reynolds number, and the coefficient  $C_D = 0.006$  has considerable uncertainty.

### Aerodynamic Forces on Road Vehicles


Automobiles and trucks are now the subject of much research on aerodynamic forces, both lift and drag [21]. At least one textbook is devoted to the subject [22]. A very readable description of race car drag is given by Katz [51]. Consumer, manufacturer,

and government interest has cycled between high speed/high horsepower and lower speed/lower drag. Better streamlining of car shapes has resulted over the years in a large decrease in the automobile drag coefficient, as shown in Fig. 7.17a. Modern cars have an average drag coefficient of about 0.25, based on the frontal area. Since the frontal area has also decreased sharply, the actual raw drag force on cars has dropped even more than indicated in Fig. 7.17a. The theoretical minimum shown in the figure,  $C_D \approx 0.15$ , is about right for a commercial automobile, but lower values are possible for experimental vehicles, see Prob. P7.109. Note that basing  $C_D$  on the frontal area is awkward, since one would need an accurate drawing of the automobile to estimate its frontal area. For this reason, some technical articles simply report the raw drag in newtons or pound-force, or the product  $C_D A$ .

Many companies and laboratories have automotive wind tunnels, some full-scale and/or with moving floors to approximate actual kinematic similarity. The blunt shapes

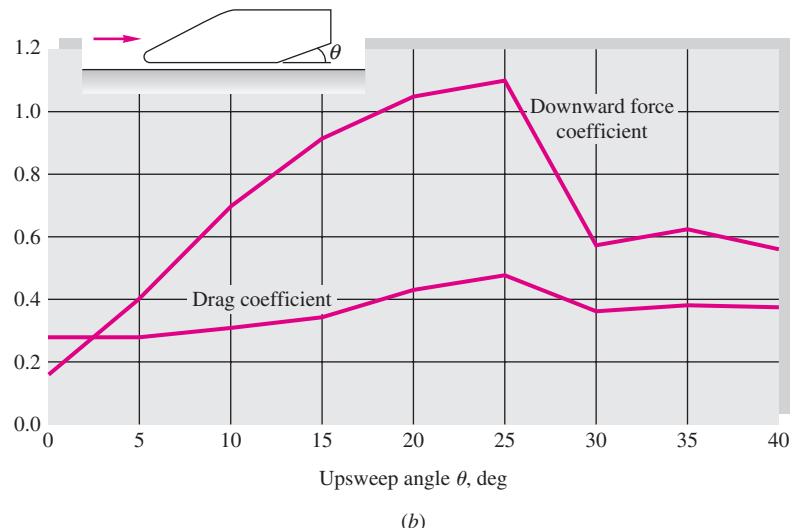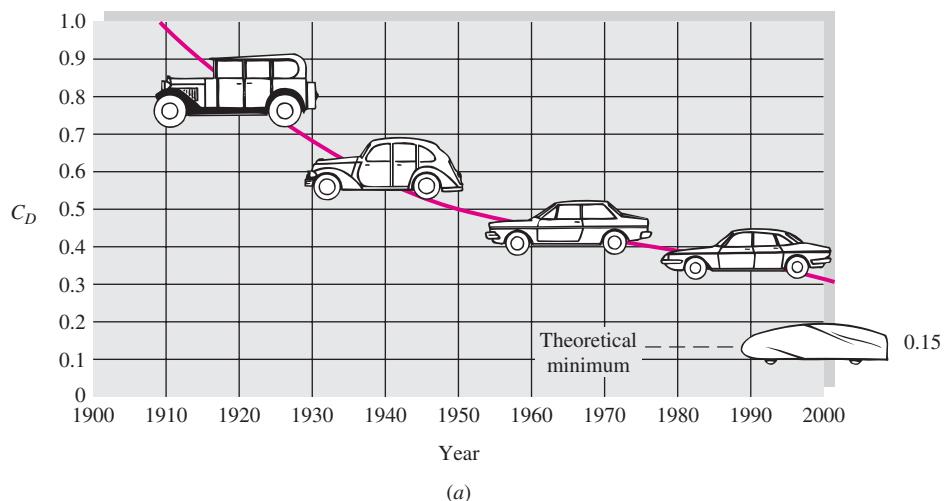

**Fig. 7.17** Aerodynamics of automobiles: (a) the historical trend for drag coefficients (from Ref. 21); (b) effect of bottom rear upsweep angle on drag and downward lift force (from Ref. 25).

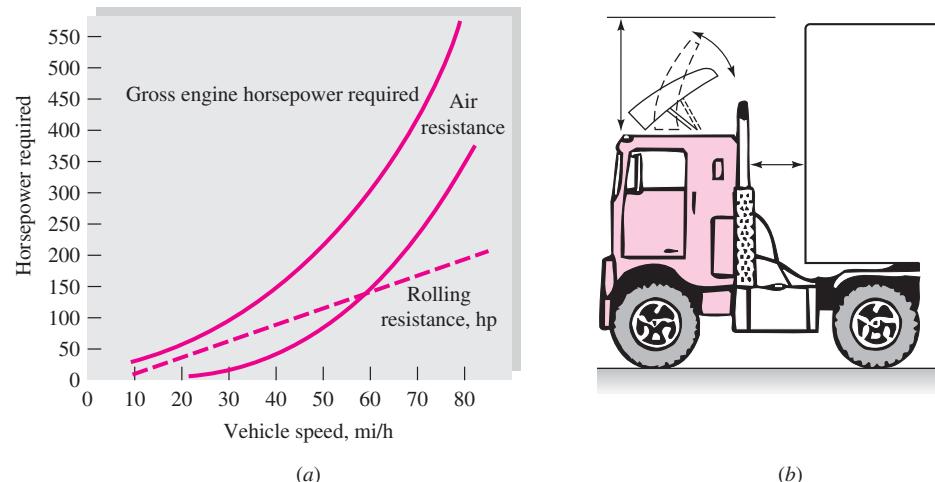

**Fig. 7.18** Drag reduction of a tractor-trailer truck: (a) horsepower required to overcome resistance; (b) deflector added to cab reduces air drag by 20 percent. (*Uniroyal Inc.*)

of most automobiles, together with their proximity to the ground, cause a wide variety of flow and geometric effects. Simple changes in part of the shape can have a large influence on aerodynamic forces. Figure 7.17b shows force data by Bearman et al. [25] for an idealized smooth automobile shape with upsweep in the rear of the bottom section. We see that by simply adding an upsweep angle of  $25^\circ$ , we can quadruple the downward force, gaining tire traction at the expense of doubling the drag. For this study, the effect of a moving floor was small—about a 10 percent increase in both drag and lift compared to a fixed floor.

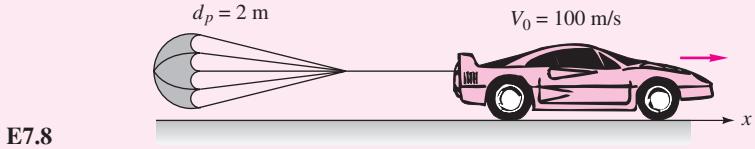
It is difficult to quantify the exact effect of geometric changes on automotive forces, since, for example, changes in a windshield shape might interact with downstream flow over the roof and trunk. Nevertheless, based on correlation of many model and full-scale tests, Ref. 26 proposes a formula for automobile drag that adds separate effects such as front ends, cowls, fenders, windshield, roofs, and rear ends.

Figure 7.18 shows the horsepower required to drive a typical tractor-trailer truck at speeds up to 80 mi/h (117 ft/s or 36 m/s). The rolling resistance increases linearly and the air drag quadratically with speed ( $C_D \approx 1.0$ ). The two are about equally important at 55 mi/h. As shown in Fig. 7.18b, air drag can be reduced by attaching a deflector to the top of the tractor. If the angle of the deflector is adjusted to carry the flow smoothly over the top and around the sides of the trailer, the reduction in  $C_D$  is about 20 percent. Thus, at 55 mi/h the total resistance is reduced 10 percent, with a corresponding reduction in fuel costs and/or trip time for the trucker. Further reduction occurs when the deflector is lengthened to cover the gap between cab and trailer. This type of applied fluids engineering can be a large factor in many of the conservation-oriented transportation problems of the future [58].

Progress in Computational Fluid Dynamics (CFD) means that complicated vehicle flow fields can be predicted fairly well. Reference 42 compares one-equation and two-equation turbulence models [9] with NASA data for a simplified tractor-trailer model. Even with two million mesh points, the predicted vehicle drag is from 20 to 50 percent higher than the measurements. The turbulence models do not reproduce the pressures and wake structure in the rear of the vehicle. Newer models, such as Large Eddy Simulation (LES) and Direct Numerical Simulation (DNS) will no doubt improve the calculations.

**EXAMPLE 7.8**

A high-speed car with  $m = 2000 \text{ kg}$ ,  $C_D = 0.3$ , and  $A = 1 \text{ m}^2$  deploys a 2-m parachute to slow down from an initial velocity of  $100 \text{ m/s}$  (Fig. E7.8). Assuming constant  $C_D$ , brakes free, and no rolling resistance, calculate the distance and velocity of the car after 1, 10, 100, and  $1000 \text{ s}$ . For air assume  $\rho = 1.2 \text{ kg/m}^3$ , and neglect interference between the wake of the car and the parachute.

**Solution**

Newton's law applied in the direction of motion gives

$$F_x = m \frac{dV}{dt} = -F_c - F_p = -\frac{1}{2} \rho V^2 (C_{Dc} A_c + C_{Dp} A_p)$$

where subscript  $c$  denotes the car and subscript  $p$  the parachute. This is of the form

$$\frac{dV}{dt} = -\frac{K}{m} V^2 \quad K = \sum C_D A \frac{\rho}{2}$$

Separate the variables and integrate:

$$\int_{v_0}^v \frac{dV}{V^2} = -\frac{K}{m} \int_0^t dt$$

or

$$V_0^{-1} - V^{-1} = -\frac{K}{m} t$$

Rearrange and solve for the velocity  $V$ :

$$V = \frac{V_0}{1 + (K/m)V_0 t} \quad K = \frac{(C_{Dc} A_c + C_{Dp} A_p) \rho}{2} \quad (1)$$

We can integrate this to find the distance traveled:

$$S = \frac{V_0}{\alpha} \ln(1 + \alpha t) \quad \alpha = \frac{K}{m} V_0 \quad (2)$$

Now work out some numbers. From Table 7.3,  $C_{Dp} \approx 1.2$ ; hence

$$C_{Dc} A_c + C_{Dp} A_p = 0.3(1 \text{ m}^2) + 1.2 \frac{\pi}{4} (2 \text{ m})^2 = 4.07 \text{ m}^2$$

Then

$$\frac{K}{m} V_0 = \frac{\frac{1}{2}(4.07 \text{ m}^2)(1.2 \text{ kg/m}^3)(100 \text{ m/s})}{2000 \text{ kg}} = 0.122 \text{ s}^{-1} = \alpha$$

Now make a table of the results for  $V$  and  $S$  from Eqs. (1) and (2):

$t, \text{ s}$	1	10	100	1000
$V, \text{ m/s}$	89	45	7.6	0.8
$S, \text{ m}$	94	654	2110	3940

Air resistance alone will not stop a body completely. If you don't apply the brakes, you'll be halfway to the Yukon Territory and still going.

### Other Methods of Drag Reduction

Sometimes drag is good, for example, when using a parachute. Do not jump out of an airplane holding a flat plate parallel to your motion (see Prob. P7.81). Mostly, though, drag is bad and should be reduced. The classical method of drag reduction is *streamlining* (Figs. 7.15 and 7.18). For example, nose fairings and body panels have produced motorcycles that can travel over 200 mi/h. More recent research has uncovered other methods that hold great promise, especially for turbulent flows.

1. Oil pipelines introduce an *annular strip* of water to reduce the pumping power [36]. The low-viscosity water rides the wall and reduces friction up to 60 percent.
2. Turbulent friction in liquid flows is reduced up to 60 percent by dissolving small amounts of a *high-molecular-weight polymer additive* [37]. Without changing pumps, the Trans-Alaska Pipeline System (TAPS) increased oil flow 50 percent by injecting small amounts of polymer dissolved in kerosene.
3. Stream-oriented surface *vee-groove microriblets* can reduce turbulent friction up to 8 percent [38]. Riblet heights are of order 1 mm and were used on the Stars and Stripes yacht hull in the Americas Cup races. Riblets are also effective on aircraft skins.
4. Small, near-wall *large-eddy breakup devices* (LEBUs) reduce local turbulent friction up to 10 percent [39]. However, one must add these small structures to the surface and LEBU drag may be significant.
5. Air *microbubbles* injected at the wall of a water flow create a low-shear bubble blanket [40]. At high void fractions, drag reduction can be 80 percent.
6. Spanwise (transverse) *wall oscillation* may reduce turbulent friction up to 30 percent [41].
7. *Active flow control*, especially of turbulent flows, is the wave of the future, as reviewed in Ref. 47. These methods generally require expenditure of energy but can be worth it. For example, tangential blowing at the rear of an auto [48] evokes the *Coanda effect*, in which the separated near-wake flow attaches itself to the body surface and reduces auto drag up to 10 percent.

Drag reduction is presently an area of intense and fruitful research and applies to many types of airflows [39, 53] and water flows for both vehicles and conduits.

### Drag of Surface Ships

The drag data given so far, such as Tables 7.2 and 7.3, are for bodies “fully immersed” in a free stream—that is, with no free surface. If, however, the body moves at or near

a free liquid surface, *wave-making drag* becomes important and is dependent on both the Reynolds number and the Froude number. To move through a water surface, a ship must create waves on both sides. This implies putting energy into the water surface and requires a finite drag force to keep the ship moving, even in a frictionless fluid. The total drag of a ship can then be approximated as the sum of friction drag and wave-making drag:

$$F \approx F_{\text{fric}} + F_{\text{wave}} \quad \text{or} \quad C_D \approx C_{D,\text{fric}} + C_{D,\text{wave}}$$

The friction drag can be estimated by the (turbulent) flat-plate formula, Eq. (7.45), based on the below-water or *wetted area* of the ship.

Reference 27 is an interesting review of both theory and experiment for wake-making surface ship drag. Generally speaking, the bow of the ship creates a wave system whose wavelength is related to the ship speed but not necessarily to the ship length. If the stern of the ship is a wave *trough*, the ship is essentially climbing uphill and has high wave drag. If the stern is a wave crest, the ship is nearly level and has lower drag. The criterion for these two conditions results in certain approximate Froude numbers [27]:

$$\text{Fr} = \frac{V}{\sqrt{gL}} \approx \frac{0.53}{\sqrt{N}} \quad \begin{array}{l} \text{high drag if } N = 1, 3, 5, 7, \dots; \\ \text{low drag if } N = 2, 4, 6, 8, \dots \end{array} \quad (7.65)$$


where  $V$  is the ship's speed,  $L$  is the ship's length along the centerline, and  $N$  is the number of half-lengths, from bow to stern, of the drag-making wave system. The wave drag will increase with the Froude number and oscillate between lower drag ( $\text{Fr} \approx 0.38, 0.27, 0.22, \dots$ ) and higher drag ( $\text{Fr} \approx 0.53, 0.31, 0.24, \dots$ ) with negligible variation for  $\text{Fr} < 0.2$ . Thus it is best to design a ship to cruise at  $N = 2, 4, 6, 8$ . Shaping the bow and stern can further reduce wave-making drag.

Figure 7.19 shows the data of Inui [27] for a model ship. The main hull, curve *A*, shows peaks and valleys in wave drag at the appropriate Froude numbers  $> 0.2$ . Introduction of a *bulb* protrusion on the bow, curve *B*, greatly reduces the drag. Adding a second bulb to the stern, curve *C*, is still better, and Inui recommends that the design speed of this two-bulb ship be at  $N = 4$ ,  $\text{Fr} \approx 0.27$ , which is a nearly "waveless" condition. In this figure  $C_{D,\text{wave}}$  is defined as  $2F_{\text{wave}}/(\rho V^2 L^2)$  instead of using the wetted area.

The solid curves in Fig. 7.19 are based on potential flow theory for the below-water hull shape. Chapter 8 is an introduction to potential flow theory. Modern computers can be programmed for numerical CFD solutions of potential flow over the hulls of ships, submarines, yachts, and sailboats, including boundary layer effects driven by the potential flow [28]. Thus theoretical prediction of flow past surface ships is now at a fairly high level. See also Ref. 15.

## Body Drag at High Mach Numbers

All the data presented to this point are for nearly incompressible flows, with Mach numbers assumed less than about 0.3. Beyond this value compressibility can be very important, with  $C_D = f_{\text{cn}}(\text{Re}, \text{Ma})$ . As the stream Mach number increases, at some subsonic value  $M_{\text{crit}} < 1$  that depends on the body's bluntness and thickness, the local velocity at some point near the body surface will become sonic. If  $\text{Ma}$  increases beyond  $\text{Ma}_{\text{crit}}$ , shock waves form, intensify, and spread, raising surface

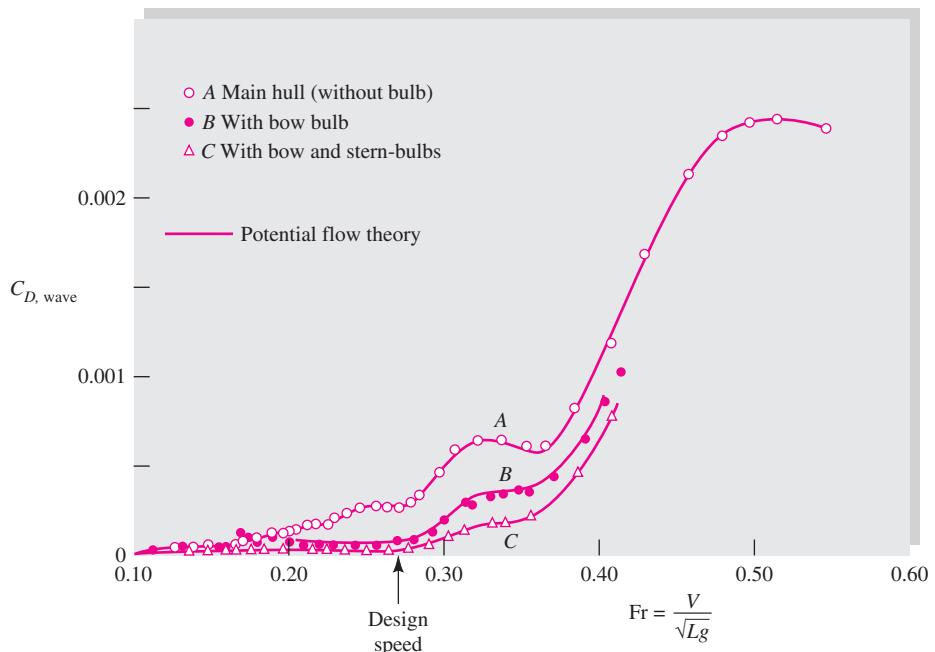

**Fig. 7.19** Wave-making drag on a ship model. (After Inui [27].)  
Note: The drag coefficient is defined as  $C_{DW} = 2F/(\rho V^2 L^2)$ .


pressures near the front of the body and therefore increasing the pressure drag. The effect can be dramatic with  $C_D$  increasing tenfold, and 70 years ago this sharp increase was called the *sonic barrier*, implying that it could not be surmounted. Of course, it can be—the rise in  $C_D$  is finite, as supersonic bullets have proved for centuries.

Figure 7.20 shows the effect of the Mach number on the drag coefficient of various body shapes tested in air.<sup>6</sup> We see that compressibility affects blunt bodies earlier, with  $Ma_{crit}$  equal to 0.4 for cylinders, 0.6 for spheres, and 0.7 for airfoils and pointed projectiles. Also the Reynolds number (laminar versus turbulent boundary layer flow) has a large effect below  $Ma_{crit}$  for spheres and cylinders but becomes unimportant above  $Ma \approx 1$ . In contrast, the effect of the Reynolds number is small for airfoils and projectiles and is not shown in Fig. 7.20. A general statement might divide Reynolds and Mach number effects as follows:

- $Ma \leq 0.3$ : Reynolds number important, Mach number unimportant
- $0.3 < Ma < 1$ : both Reynolds and Mach numbers important
- $Ma > 1.0$ : Reynolds number unimportant, Mach number important

At supersonic speeds, a broad *bow shock wave* forms in front of the body (see Figs. 9.10b and 9.19), and the drag is mainly due to high shock-induced pressures on the front. Making the bow a sharp point can sharply reduce the drag (Fig. 9.28) but does

<sup>6</sup>There is a slight effect of the specific-heat ratio  $k$ , which would appear if other gases were tested.

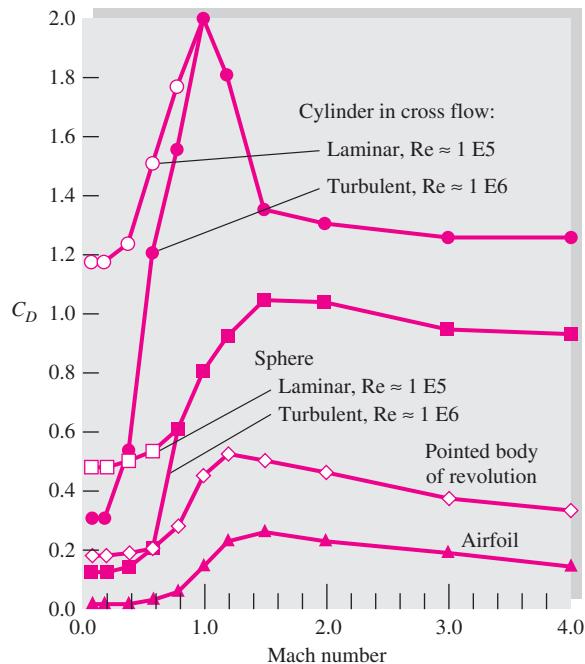


**Fig. 7.20** Effect of the Mach number on the drag of various body shapes. (Data from Refs. 23 and 29.)

not eliminate the bow shock. Chapter 9 gives a brief treatment of compressible flow. References 30 and 31 are more advanced textbooks devoted entirely to compressible flow.

### Biological Drag Reduction

A great deal of engineering effort goes into designing immersed bodies to reduce their drag. Most such effort concentrates on rigid-body shapes. A different process occurs in nature, as organisms adapt to survive high winds or currents, as reported in a series of papers by S. Vogel [33, 34]. A good example is a tree, whose flexible structure allows it to reconfigure in high winds and thus reduce drag and damage. Tree root systems have evolved in several ways to resist wind-induced bending moments, and trunk cross sections have become resistant to bending but relatively easy to twist and reconfigure. We saw this in Table 7.3, where tree drag coefficients [24] reduced by 60 percent as wind velocity increased. The shape of the tree changes to offer less resistance.

The individual branches and leaves of a tree also curl and cluster to reduce drag. Figure 7.21 shows the results of wind tunnel experiments by Vogel [33]. A tulip tree leaf, Fig. 7.21a, broad and open in low wind, curls into a conical low-drag shape as wind increases. A compound black walnut leaf group, Fig. 7.21b, clusters into a low-drag shape at high wind speed. Although drag coefficients were reduced up to 50 percent by flexibility, Vogel points out that rigid structures are sometimes just as effective. An interesting recent symposium [35] was devoted entirely to the solid mechanics and fluid mechanics of biological organisms.

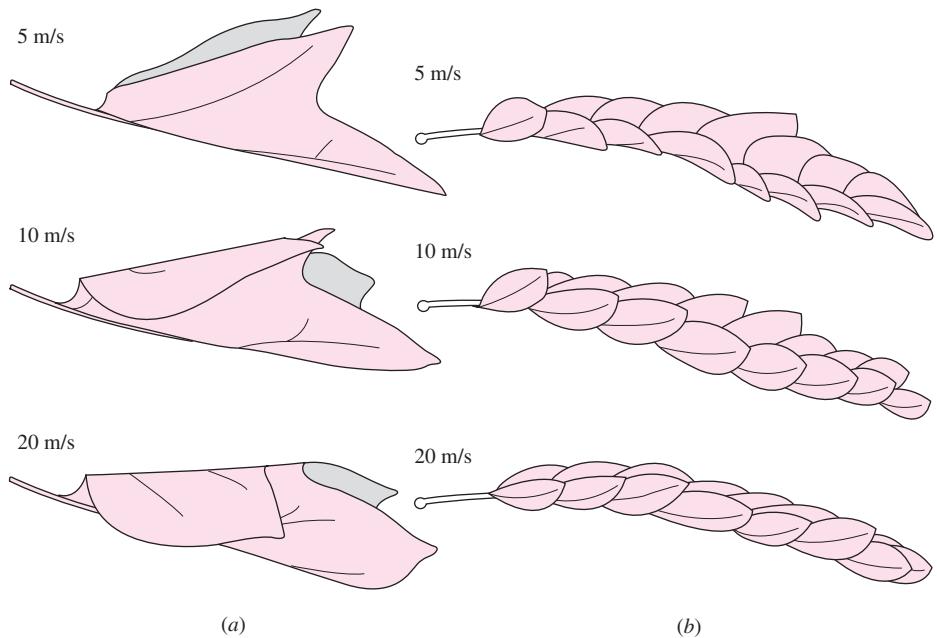


**Fig. 7.21** Biological adaptation to wind forces: (a) a tulip tree leaf curls into a conical shape at high velocity; (b) black walnut leaves cluster into a low-drag shape as wind increases. (From Vogel, Ref. 33.)

## Forces on Lifting Bodies

Lifting bodies (airfoils, hydrofoils, or vanes) are intended to provide a large force normal to the free stream and as little drag as possible. Conventional design practice has evolved a shape not unlike a bird's wing—that is, relatively thin ( $t/c \leq 0.24$ ) with a rounded leading edge and a sharp trailing edge. A typical shape is sketched in Fig. 7.22.

For our purposes we consider the body to be symmetric, as in Fig. 7.11, with the free-stream velocity in the vertical plane. If the chord line between the leading and trailing edge is not a line of symmetry, the airfoil is said to be *cambered*. The camber line is the line midway between the upper and lower surfaces of the vane.

The angle between the free stream and the chord line is called the *angle of attack*  $\alpha$ . The lift  $L$  and the drag  $D$  vary with this angle. The dimensionless forces are defined

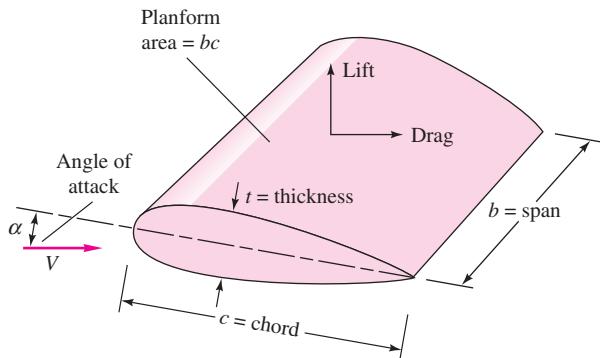

**Fig. 7.22** Definition sketch for a lifting vane.

with respect to the planform area  $A_p = bc$ :

Lift coefficient:

$$C_L = \frac{L}{\frac{1}{2}\rho V^2 A_p} \quad (7.66a)$$

Drag coefficient:

$$C_D = \frac{D}{\frac{1}{2}\rho V^2 A_p} \quad (7.66b)$$

If the chord length is not constant, as in the tapered wings of modern aircraft,  $A_p = \int c \, db$ .


For low-speed flow with a given roughness ratio,  $C_L$  and  $C_D$  should vary with  $\alpha$  and the chord Reynolds number:

$$C_L = f(\alpha, Re_c) \quad \text{or} \quad C_D = f(\alpha, Re_c)$$

where  $Re_c = Vc/\nu$ . The Reynolds numbers are commonly in the turbulent boundary layer range and have a modest effect.

The rounded leading edge prevents flow separation there, but the sharp trailing edge causes a tangential wake motion that generates the lift. Figure 7.23 shows what happens when a flow starts up past a lifting vane or an airfoil.

Just after start-up in Fig. 7.23a the streamline motion is irrotational and inviscid. The rear stagnation point, assuming a positive angle of attack, is on the upper surface, and there is no lift; but the flow cannot long negotiate the sharp turn at the trailing edge: it separates, and a *starting vortex* forms in Fig. 7.23b. This starting vortex is shed downstream in Fig. 7.23c and d, and a smooth streamline flow develops over the wing, leaving the foil in a direction approximately parallel to the chord line. Lift at this time is fully developed, and the starting vortex is gone. Should the flow now cease, a *stopping vortex* of opposite (clockwise) sense will form and be shed. During flight, increases or decreases in lift will cause incremental starting or stopping

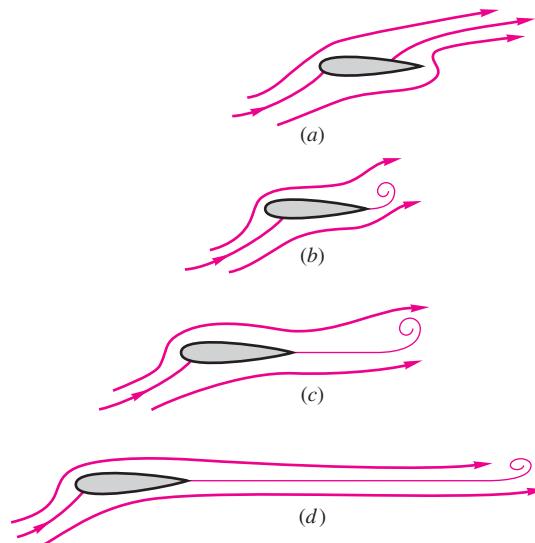


**Fig. 7.23** Transient stages in the development of lift: (a) start-up: rear stagnation point on the upper surface: no lift; (b) sharp trailing edge induces separation, and a starting vortex forms: slight lift; (c) starting vortex is shed, and streamlines flow smoothly from trailing edge: lift is now 80 percent developed; (d) starting vortex now shed far behind, trailing edge now very smooth: lift fully developed.

vortices, always with the effect of maintaining a smooth parallel flow at the trailing edge. We pursue this idea mathematically in Chap. 8.

At a low angle of attack, the rear surfaces have an adverse pressure gradient but not enough to cause significant boundary layer separation. The flow pattern is smooth, as in Fig. 7.23d, and drag is small and lift excellent. As the angle of attack is increased, the upper-surface adverse gradient becomes stronger, and generally a *separation bubble* begins to creep forward on the upper surface.<sup>7</sup> At a certain angle  $\alpha = 15$  to  $20^\circ$ , the flow is separated completely from the upper surface, as in Fig. 7.24. The airfoil is said to be *stalled*: Lift drops off markedly, drag increases markedly, and the foil is no longer flyable.

Early airfoils were thin, modeled after birds' wings. The German engineer Otto Lilienthal (1848–1896) experimented with flat and cambered plates on a rotating arm. He and his brother Gustav flew the world's first glider in 1891. Horatio Frederick Phillips (1845–1912) built the first wind tunnel in 1884 and measured the lift and drag of cambered vanes. The first theory of lift was proposed by Frederick W. Lanchester shortly afterward. Modern airfoil theory dates from 1905, when the Russian hydrodynamicist N. E. Joukowsky (1847–1921) developed a circulation theorem (Chap. 8) for computing airfoil lift for arbitrary camber and thickness. With this basic theory, as extended and developed by Prandtl and Kármán and their students, it is now possible to design a low-speed airfoil to satisfy particular surface pressure distributions

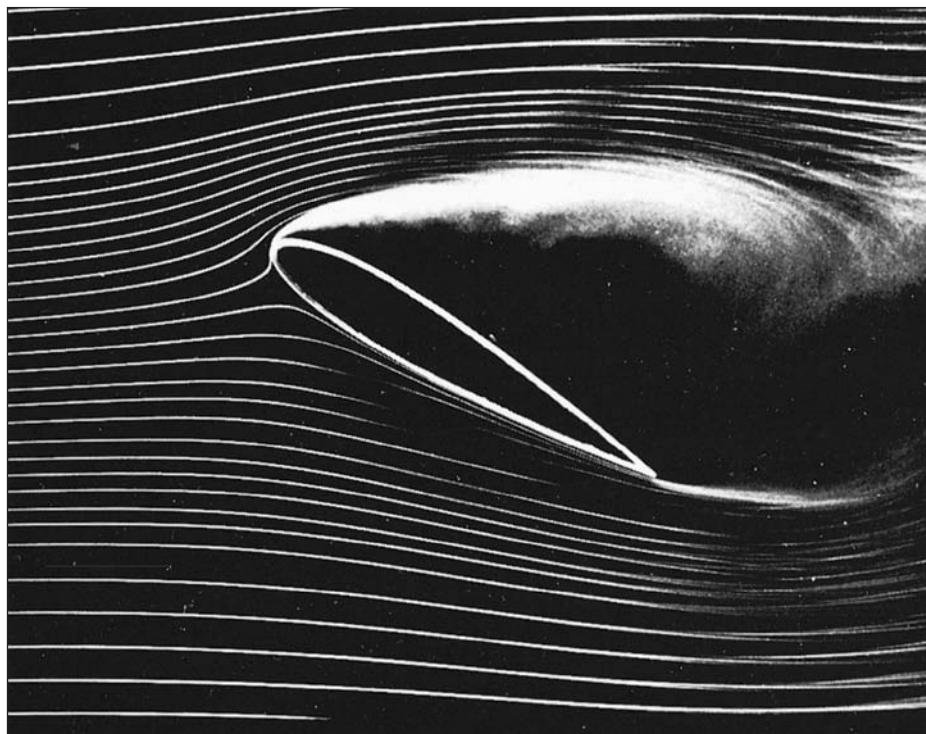

**Fig. 7.24** At high angle of attack, smoke flow visualization shows stalled flow on the upper surface of a lifting vane. (National Committee for Fluid Mechanics Films, Education Development Center, Inc., ©1972.)

<sup>7</sup>For some airfoils the bubble leaps, not creeps, forward, and stall occurs rapidly and dangerously.

and boundary layer characteristics. There are whole families of airfoil designs, notably those developed in the United States under the sponsorship of the NACA (now NASA). Extensive theory and data on these airfoils are contained in Ref. 16. We shall discuss this further in Chap. 8. The history of aeronautics is a rich and engaging topic and highly recommended to the reader [43, 44].

Figure 7.25 shows the lift and drag on a symmetric airfoil denoted as the NACA 0009 foil, the last digit indicating the thickness of 9 percent. With no flap extended, this airfoil, as expected, has zero lift at zero angle of attack. Up to about  $12^\circ$  the lift coefficient increases linearly with a slope of 0.1 per degree, or 6.0 per radian. This is in agreement with the theory outlined in Chap. 8:


$$C_{L,\text{theory}} \approx 2\pi \sin\left(\alpha + \frac{2h}{c}\right) \quad (7.67)$$

where  $h/c$  is the maximum camber expressed as a fraction of the chord. The NACA 0009 has zero camber; hence  $C_L = 2\pi \sin \alpha \approx 0.11\alpha$ , where  $\alpha$  is in degrees. This is excellent agreement.

The drag coefficient of the smooth-model airfoils in Fig. 7.25 is as low as 0.005, which is actually lower than both sides of a flat plate in turbulent flow. This is misleading inasmuch as a commercial foil will have roughness effects; for example, a paint job will double the drag coefficient.

The effect of increasing Reynolds number in Fig. 7.25 is to increase the maximum lift and stall angle (without changing the slope appreciably) and to reduce the drag coefficient. This is a salutary effect since the prototype will probably be at a higher Reynolds number than the model ( $10^7$  or more).

For takeoff and landing, the lift is greatly increased by deflecting a split flap, as shown in Fig. 7.25. This makes the airfoil unsymmetric (or effectively cambered)

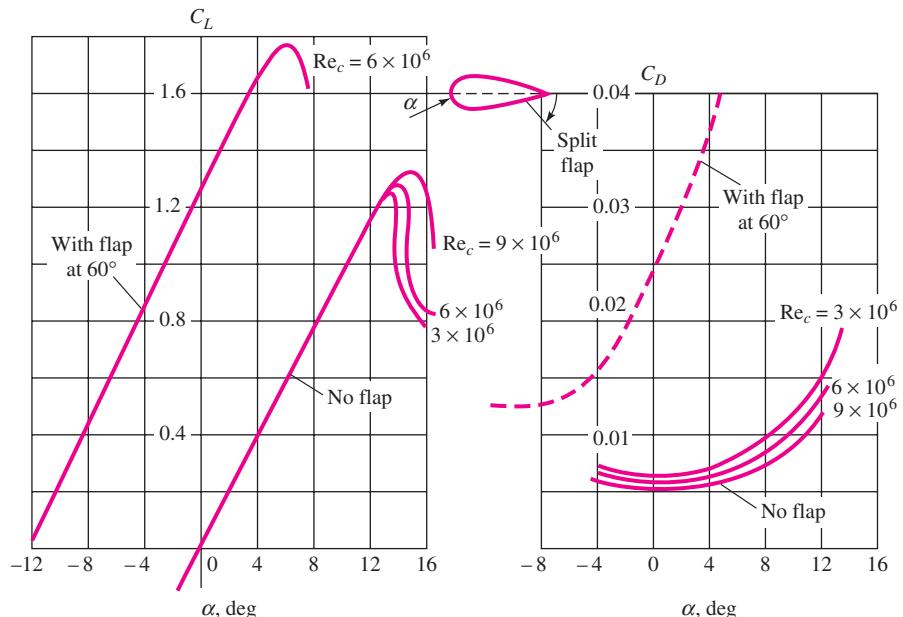

**Fig. 7.25** Lift and drag of a symmetric NACA 0009 airfoil of infinite span, including effect of a split-flap deflection. Note that roughness can increase  $C_D$  from 100 to 300 percent.

and changes the zero-lift point to  $\alpha = -12^\circ$ . The drag is also greatly increased by the flap, but the reduction in takeoff and landing distance is worth the extra power needed.

A lifting craft cruises at low angle of attack, where the lift is much larger than the drag. Maximum lift-to-drag ratios for the common airfoils lie between 20 and 50.

Some airfoils, such as the NACA 6 series, are shaped to provide favorable gradients over much of the upper surface at low angles. Thus separation is small, and transition to turbulence is delayed; the airfoil retains a good length of laminar flow even at high Reynolds numbers. The lift-drag *polar plot* in Fig. 7.26 shows the NACA 0009 data from Fig. 7.25 and a laminar flow airfoil, NACA 63-009, of the same thickness. The laminar flow airfoil has a low-drag bucket at small angles but also suffers lower stall angle and lower maximum lift coefficient. The drag is 30 percent less in the bucket, but the bucket disappears if there is significant surface roughness.

All the data in Figs. 7.25 and 7.26 are for infinite span—that is, a two-dimensional flow pattern about wings without tips. The effect of finite span can be correlated with the dimensionless slenderness, or *aspect ratio*, denoted (AR):

$$AR = \frac{b^2}{A_p} = \frac{b}{\bar{c}} \quad (7.68)$$

where  $\bar{c}$  is the average chord length. Finite-span effects are shown in Fig. 7.27. The lift slope decreases, but the zero-lift angle is the same; and the drag increases, but the zero-lift drag is the same. The theory of finite-span airfoils [16] predicts that the effective angle of attack increases, as in Fig. 7.27, by the amount

$$\Delta\alpha \approx \frac{C_L}{\pi AR} \quad (7.69)$$


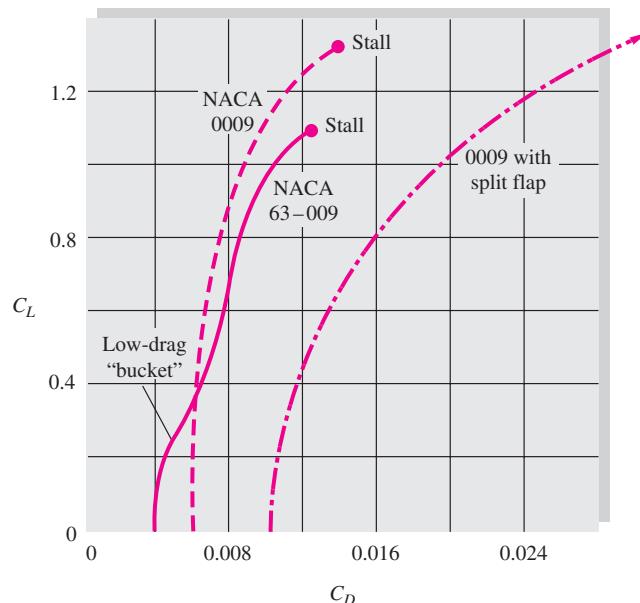


Fig. 7.26 Lift-drag polar plot for standard (0009) and a laminar flow (63-009) NACA airfoil.

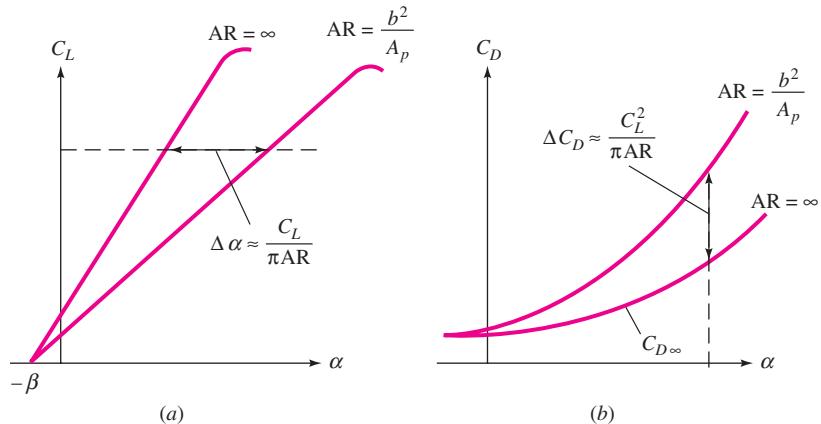

**Fig. 7.27** Effect of finite aspect ratio on lift and drag of an airfoil:  
(a) effective angle increase;  
(b) induced drag increase.

When applied to Eq. (7.67), the finite-span lift becomes

$$C_L \approx \frac{2\pi \sin(\alpha + 2h/c)}{1 + 2/AR} \quad (7.70)$$

The associated drag increase is  $\Delta C_D \approx C_L \sin \Delta\alpha \approx C_L \Delta\alpha$ , or

$$C_D \approx C_{D\infty} + \frac{C_L^2}{\pi AR} \quad (7.71)$$

where  $C_{D\infty}$  is the drag of the infinite-span airfoil, as sketched in Fig. 7.25. These correlations are in good agreement with experiments on finite-span wings [16].


The existence of a maximum lift coefficient implies the existence of a minimum speed, or *stall speed*, for a craft whose lift supports its weight:

$$\begin{aligned} L &= W = C_{L,\max} (\frac{1}{2} \rho V_s^2 A_p) \\ \text{or } V_s &= \left( \frac{2W}{C_{L,\max} \rho A_p} \right)^{1/2} \end{aligned} \quad (7.72)$$

The stall speed of typical aircraft varies between 60 and 200 ft/s, depending on the weight and value of  $C_{L,\max}$ . The pilot must hold the speed greater than about  $1.2V_s$  to avoid the instability associated with complete stall.

The split flap in Fig. 7.25 is only one of many devices used to secure high lift at low speeds. Figure 7.28a shows six such devices whose lift performance is given in Fig. 7.28b along with a standard (A) and laminar flow (B) airfoil. The double-slotted flap achieves  $C_{L,\max} \approx 3.4$ , and a combination of this plus a leading-edge slat can achieve  $C_{L,\max} \approx 4.0$ . These are not scientific curiosities; for instance, the Boeing 727 commercial jet aircraft uses a triple-slotted flap plus a leading-edge slat during landing.

A violation of conventional aerodynamic wisdom is that military aircraft are beginning to fly, briefly, *above the stall point*. Fighter pilots are learning to make quick maneuvers in the stalled region as detailed in Ref. 32. Some planes can even

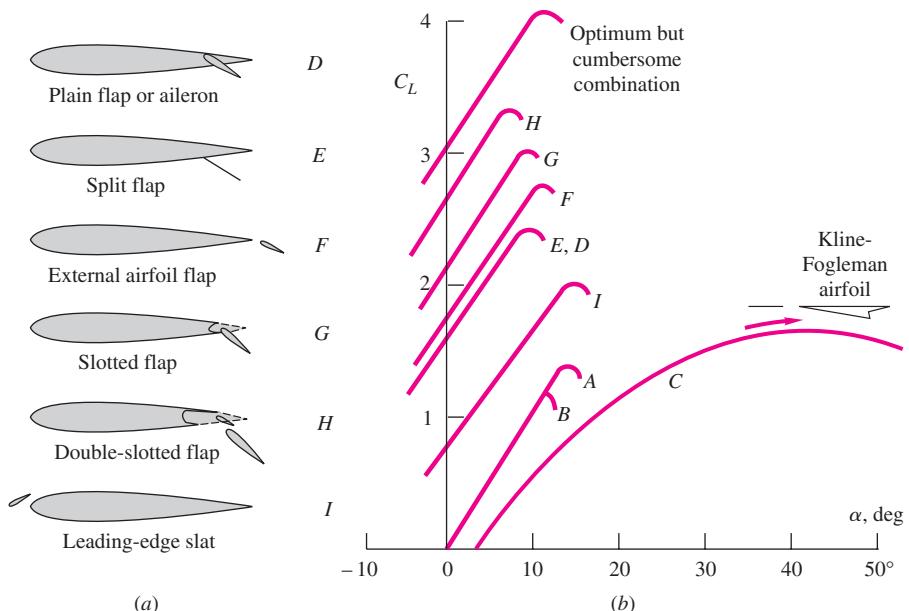

**Fig. 7.28** Performance of airfoils with and without high-lift devices:  $A = \text{NACA } 0009$ ;  $B = \text{NACA } 63-009$ ;  $C = \text{Kline-Fogelman airfoil}$  (from Ref. 17);  $D$  to  $I$  shown in (a): (a) types of high-lift devices; (b) lift coefficients for various devices.


*flew continuously while stalled—the Grumman X-29 experimental aircraft recently set a record by flying at  $\alpha = 67^\circ$ .*

### The Kline-Fogelman Airfoil

For decades, an airfoil has been a smoothly varying shape with a rounded leading edge and a sharp trailing edge. It provides low drag but typically stalls (flow separation) at angles of attack from 10 to 15 degrees. In 1972, two amateur model plane enthusiasts, R. F. Kline and F. F. Fogelman, designed an airfoil with a sharp nose and a rear cut-out that gave amazing maneuverability when flown [17]. The writer tested this shape with the result shown as curve  $C$  in Fig. 7.28. There is no stall out to  $\alpha = 45^\circ$ , but the drag is very high. Fertis [55] rounded the leading edge, as in Fig. 7.29a, and found lower drag and no stall up to  $\alpha = 35^\circ$ . He reported higher lift-to-drag ratios than a standard airfoil. Finaish and Witherspoon [56] verified this with further experiments and CFD simulations. Although NASA has studied the KF concept, apparently the drag is still a bit high for commercial applications. However, the KF airfoil is now very popular for radio-controlled model aircraft.

### A Wing Inspired by the Humpback Whale

Biologists have long noticed the high maneuverability of the humpback whale when it seeks prey. Unlike most whales, the humpback has tubercles, or bumps, on the leading edge of its flippers. Miklosovic et al. [57] tested this idea, using a standard wing with periodic bumps glued to its leading edge, as in Fig. 7.29b. They report a 40 percent increase in stall angle, compared to the same wing without bumps, plus higher lift and higher lift-to-drag ratios. The concept has promise for commercial applications such as wind turbine blades. Flow visualization shows that the bumps create energetic streamwise vortices along the wing surface, helping to delay separation.

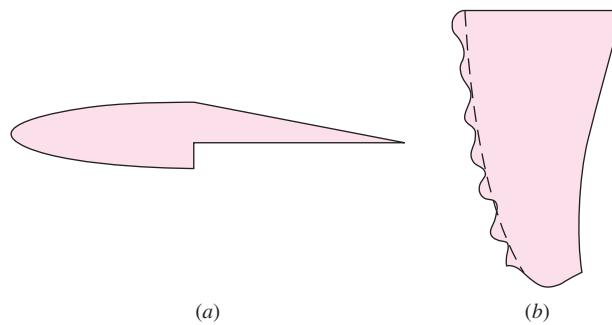


**Fig. 7.29** Two new experimental airfoils: (a) cross section of the Kline-Fogelman airfoil with a round leading edge and a step cut-out at 50 percent chord [55]; (b) plan view of a wing modeled on the humpback whale flipper [57].

### A Combination Car and Airplane

Engineers have long dreamed of a viable car that can fly. Hop in at home, drive to the airport, fly somewhere, then drive to the motel. Designer efforts date back to the Glenn Curtiss 1917 Autoplane, with other projects in the 1930s and 1940s. Perhaps the most famous was Moulton Taylor's Aerocar in 1947. Only five Aerocars were built. The year 2008 seems to have been the Year of the Car-Plane, with at least five different companies working on designs. Engineers can now use lightweight materials, better engines, and guidance systems. The writer's favorite is the *Transition*®, made by Terrafugia, Inc., shown in Fig. 7.30.

The *Transition*® has wings that fold out to a span of 27.5 ft. The twin tails do not fold. The front canard wing doubles as a bumper for the highway. The 100-hp engine drives both the rear propeller for flight and also the front wheels for the highway. Gross takeoff weight is 1320 lbf. Operators need only a Light Sport Airplane license. The *Transition*® made a successful maiden flight on Mar. 5, 2009. This craft's data will clearly be useful for setting end-of-chapter problems.

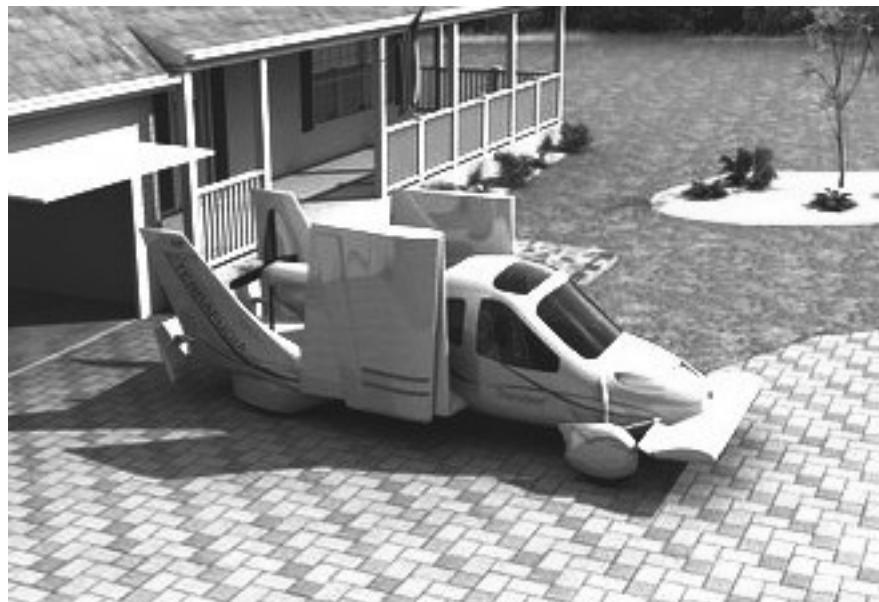

**Fig. 7.30** The *Transition*® car-plane. (Courtesy of Terrafugia, Inc.)

Further information on the performance of lifting craft can be found in Refs. 12, 13, and 16. We discuss this matter again briefly in Chap. 8.

### EXAMPLE 7.9

An aircraft weighs 75,000 lbf, has a planform area of  $2500 \text{ ft}^2$ , and can deliver a constant thrust of 12,000 lb. It has an aspect ratio of 7, and  $C_{D\infty} \approx 0.02$ . Neglecting rolling resistance, estimate the takeoff distance at sea level if takeoff speed equals 1.2 times stall speed. Take  $C_{L,\max} = 2.0$ .

#### Solution

The stall speed from Eq. (7.72), with sea-level density  $\rho = 0.00237 \text{ slug/ft}^3$ , is

$$V_s = \left( \frac{2W}{C_{L,\max}\rho A_p} \right)^{1/2} = \left[ \frac{2(75,000)}{2.0(0.00237)(2500)} \right]^{1/2} = 112.5 \text{ ft/s}$$

Hence takeoff speed  $V_0 = 1.2V_s = 135 \text{ ft/s}$ . The drag is estimated from Eq. (7.71) for  $\text{AR} = 7$  as

$$C_D \approx 0.02 + \frac{C_L^2}{7\pi} = 0.02 + 0.0455C_L^2$$

A force balance in the direction of takeoff gives

$$F_s = m \frac{dV}{dt} = \text{thrust} - \text{drag} = T - kV^2 \quad k = \frac{1}{2}C_D\rho A_p \quad (1)$$

Since we are looking for distance, not time, we introduce  $dV/dt = V dV/ds$  into Eq. (1), separate variables, and integrate:

$$\int_0^{s_0} ds = \frac{m}{2} \int_0^{V_0} \frac{d(V^2)}{T - kV^2} \quad k \approx \text{const}$$

$$\text{or} \quad S_0 = \frac{m}{2k} \ln \frac{T}{T - kV_0^2} = \frac{m}{2k} \ln \frac{T}{T - D_0} \quad (2)$$

where  $D_0 = kV_0^2$  is the takeoff drag. Equation (2) is the desired theoretical relation for takeoff distance. For the particular numerical values, take

$$m = \frac{75,000}{32.2} = 2329 \text{ slugs}$$

$$C_{L_0} = \frac{W}{\frac{1}{2}\rho V_0^2 A_p} = \frac{75,000}{\frac{1}{2}(0.00237)(135)^2(2500)} = 1.39$$

$$C_{D_0} = 0.02 + 0.0455(C_{L_0})^2 = 0.108$$

$$k \approx \frac{1}{2}C_{D_0}\rho A_p = (\frac{1}{2})(0.108)(0.00237)(2500) = 0.319 \text{ slug/ft}$$

$$D_0 = kV_0^2 = 5820 \text{ lbf}$$

Then Eq. (2) predicts that

$$S_0 = \frac{2329 \text{ slugs}}{2(0.319 \text{ slug/ft})} \ln \frac{12,000}{12,000 - 5820} = 3650 \ln 1.94 = 2420 \text{ ft} \quad \text{Ans.}$$

A more exact analysis accounting for variable  $k$  [13] gives the same result to within 1 percent.

**EXAMPLE 7.10**

For the aircraft of Example 7.9, if maximum thrust is applied during flight at 6000 m standard altitude, estimate the resulting velocity of the plane, in mi/h.

**Solution**

- **Assumptions:** Given  $W = 75,000 \text{ lbf}$ ,  $A_p = 2500 \text{ ft}^2$ ,  $T = 12,000 \text{ lbf}$ ,  $AR = 7$ ,  $C_{D\infty} = 0.02$ .
- **Approach:** Set lift equal to weight and drag equal to thrust and solve for the velocity.
- **Property values:** From Table A.6, at  $z = 6000 \text{ m}$ ,  $\rho = 0.6596 \text{ kg/m}^3 = 0.00128 \text{ slug/ft}^3$ .
- **Solution steps:** Write out the formulas for lift and drag. The unknowns will be  $C_L$  and  $V$ .

$$W = 75000 \text{ lbf} = \text{lift} = C_L \frac{\rho}{2} V^2 A_p = C_L \frac{0.00128 \text{ slug/ft}^3}{2} V^2 (2500 \text{ ft}^2)$$

$$T = 12000 \text{ lbf} = \text{drag} = \left( C_{D\infty} + \frac{C_L^2}{\pi AR} \right) \frac{\rho}{2} V^2 A_p$$

$$= \left[ 0.02 + \frac{C_L^2}{\pi(7)} \right] \frac{0.00128 \text{ slug/ft}^3}{2} V^2 (2500 \text{ ft}^2)$$

This looks like a job for EES, but in fact some clever manipulation (dividing  $W$  by  $T$ ) would reveal a quadratic equation for  $C_L$ . In either case, the final solution is

$$C_L = 0.13 \quad V \approx 600 \text{ ft/s} = 410 \text{ mi/h} \quad \text{Ans.}$$

- **Comments:** These are *preliminary design* estimates that do not depend on airfoil shape.

**Summary**

This chapter has dealt with viscous effects in external flow past bodies immersed in a stream. When the Reynolds number is large, viscous forces are confined to a thin boundary layer and wake in the vicinity of the body. Flow outside these “shear layers” is essentially inviscid and can be predicted by potential theory and Bernoulli’s equation.

The chapter began with a discussion of the flat-plate boundary layer and the use of momentum integral estimates to predict the wall shear, friction drag, and thickness of such layers. These approximations suggest how to eliminate certain small terms in the Navier-Stokes equations, resulting in Prandtl’s boundary layer equations for laminar and turbulent flow. Section 7.4 then solved the boundary layer equations to give very accurate formulas for flat-plate flow at high Reynolds numbers. Rough-wall effects were included, and Sec. 7.5 gave a brief introduction to pressure gradient effects. An adverse (decelerating) gradient was seen to cause flow separation, where the boundary layer breaks away from the surface and forms a broad, low-pressure wake.

Boundary layer theory fails in separated flows, which are commonly studied by experiment or CFD. Section 7.6 gave data on drag coefficients of various two- and three-dimensional body shapes. The chapter ended with a brief discussion of lift forces generated by lifting bodies such as airfoils and hydrofoils. Airfoils also suffer flow separation or *stall* at high angles of incidence.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon may require the use of a computer. The standard end-of-chapter problems P7.1 to P7.127 (categorized in the problem list here) are followed by word problems W7.1 to W7.12, fundamentals of engineering exam problems FE7.1 to FE7.10, comprehensive problems C7.1 to C7.5, and design project D7.1.

### Problem Distribution

Section	Topic	Problems
7.1	Reynolds number and geometry	P7.1–P7.5
7.2	Momentum integral estimates	P7.6–P7.12
7.3	The boundary layer equations	P7.13–P7.15
7.4	Laminar flat-plate flow	P7.16–P7.29
7.4	Turbulent flat-plate flow	P7.30–P7.47
7.5	Boundary layers with pressure gradient	P7.48–P7.50
7.6	Drag of bodies	P7.51–P7.114
7.6	Lifting bodies—airfoils	P7.115–P7.127


### Reynolds number and geometry

- P7.1** An ideal gas, at 20°C and 1 atm, flows at 12 m/s past a thin flat plate. At a position 60 cm downstream of the leading edge, the boundary layer thickness is 5 mm. Which of the 13 gases in Table A.4 is this likely to be?
- P7.2** A gas at 20°C flows at 8 ft/s past a smooth, sharp flat plate. At  $x = 206$  cm, the boundary layer thickness is 5 cm. Which of the gases in Table A.4 is this most likely to be?
- P7.3** Equation (7.1b) assumes that the boundary layer on the plate is turbulent from the leading edge onward. Devise a scheme for determining the boundary layer thickness more accurately when the flow is laminar up to a point  $\text{Re}_{x,\text{crit}}$  and turbulent thereafter. Apply this scheme to computation of the boundary layer thickness at  $x = 1.5$  m in 40 m/s flow of air at 20°C and 1 atm past a flat plate. Compare your result with Eq. (7.1b). Assume  $\text{Re}_{x,\text{crit}} \approx 1.2 \times 10^6$ .
- P7.4** A smooth ceramic sphere (SG = 2.6) is immersed in a flow of water at 20°C and 25 cm/s. What is the sphere diameter if it is encountering (a) creeping motion,  $\text{Re}_d = 1$  or (b) transition to turbulence,  $\text{Re}_d = 250,000$ ?
- P7.5** SAE 30 oil at 20°C flows at 1.8 ft<sup>3</sup>/s from a reservoir into a 6-in-diameter pipe. Use flat-plate theory to estimate the position  $x$  where the pipe wall boundary layers meet in the center. Compare with Eq. (6.5), and give some explanations for the discrepancy.

### Momentum integral estimates

**P7.6** For the laminar parabolic boundary profile of Eq. (7.6), compute the shape factor  $H$  and compare with the exact Blasius result, Eq. (7.31).

**P7.7** Air at 20°C and 1 atm enters a 40-cm-square duct as in Fig. P7.7. Using the “displacement thickness” concept of Fig. 7.4, estimate (a) the mean velocity and (b) the mean pressure in the core of the flow at the position  $x = 3$  m. (c) What is the average gradient, in Pa/m, in this section?

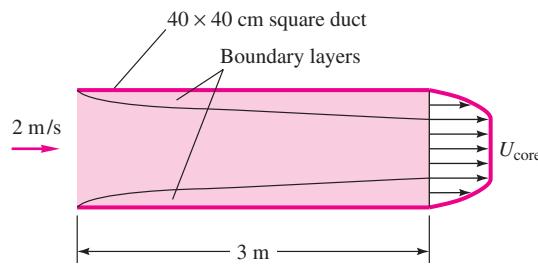

**P7.7**

**P7.8** Air,  $\rho = 1.2 \text{ kg/m}^3$  and  $\mu = 1.8 \times 10^{-5} \text{ kg/(m} \cdot \text{s)}$ , flows at 10 m/s past a flat plate. At the trailing edge of the plate, the following velocity profile data are measured:

$y, \text{ mm}$	0	0.5	1.0	2.0	3.0	4.0	5.0	6.0
$u, \text{ m/s}$	0	1.75	3.47	6.58	8.70	9.68	10.0	10.0

If the upper surface has an area of 0.6 m<sup>2</sup>, estimate, using momentum concepts, the friction drag, in N, on the upper surface.

**P7.9** Repeat the flat-plate momentum analysis of Sec. 7.2 by replacing Eq. (7.6) with the simple but unrealistic linear velocity profile suggested by Schlichting [1]:

$$\frac{u}{U} \approx \frac{y}{\delta} \quad \text{for } 0 \leq y \leq \delta$$

Compute momentum-integral estimates of  $c_f$ ,  $\theta/x$ ,  $\delta^*/x$ , and  $H$ .

**P7.10** Repeat Prob. P7.9, using the polynomial profile suggested by K. Pohlhausen in 1921:

$$\frac{u}{U} \approx 2 \frac{y}{\delta} - 2 \frac{y^3}{\delta^3} + \frac{y^4}{\delta^4}$$

Does this profile satisfy the boundary conditions of laminar flat-plate flow?


**P7.11** Air at 20°C and 1 atm flows at 2 m/s past a sharp flat plate. Assuming that Kármán's parabolic-profile analysis, Eqs.

(7.6–7.10), is accurate, estimate (a) the local velocity  $u$  and (b) the local shear stress  $\tau$  at the position  $(x, y) = (50 \text{ cm}, 5 \text{ mm})$ .

- P7.12** The velocity profile shape  $u/U \approx 1 - \exp(-4.605y/\delta)$  is a smooth curve with  $u = 0$  at  $y = 0$  and  $u = 0.99U$  at  $y = \delta$  and thus would seem to be a reasonable substitute for the parabolic flat-plate profile of Eq. (7.3). Yet when this new profile is used in the integral analysis of Sec. 7.3, we get the lousy result  $\delta/x \approx 9.2/\text{Re}_x^{1/2}$ , which is 80 percent high. What is the reason for the inaccuracy? (Hint: The answer lies in evaluating the laminar boundary layer momentum equation (7.19b) at the wall,  $y = 0$ .)

### The boundary layer equations

- P7.13** Derive modified forms of the laminar boundary layer equations (7.19) for the case of axisymmetric flow along the outside of a circular cylinder of constant radius  $R$ , as in Fig. P7.13. Consider the two special cases (a)  $\delta \ll R$  and (b)  $\delta \approx R$ . What are the proper boundary conditions?

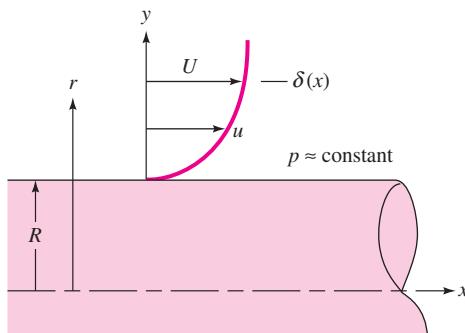

**P7.13**

- P7.14** Show that the two-dimensional laminar flow pattern with  $dp/dx = 0$

$$u = U_0(1 - e^{Cy}) \quad v = v_0 < 0$$

is an exact solution to the boundary layer equations (7.19). Find the value of the constant  $C$  in terms of the flow parameters. Are the boundary conditions satisfied? What might this flow represent?

- P7.15** Discuss whether fully developed laminar incompressible flow between parallel plates, Eq. (4.143) and Fig. 4.16b, represents an exact solution to the boundary layer equations (7.19) and the boundary conditions (7.20). In what sense, if any, are duct flows also boundary layer flows?

### Laminar flat-plate flow


- P7.16** A thin flat plate 55 by 110 cm is immersed in a 6-m/s stream of SAE 10 oil at 20°C. Compute the total friction

drag if the stream is parallel to (a) the long side and (b) the short side.

- P7.17** Consider laminar flow past a sharp flat plate of width  $b$  and length  $L$ . What percentage of the friction drag on the plate is carried by the rear half of the plate?
- P7.18** The approximate answers to Prob. P7.11 are  $u \approx 1.44 \text{ m/s}$  and  $\tau \approx 0.0036 \text{ Pa}$  at  $x = 50 \text{ cm}$  and  $y = 5 \text{ mm}$ . (Do not reveal this to your friends who are working on Prob. P7.11.) Repeat that problem by using the exact Blasius flat-plate boundary layer solution.

- P7.19** Air at 20°C and 1 atm flows at 50 ft/s past a thin flat plate whose area ( $bL$ ) is 24 ft<sup>2</sup>. If the total friction drag is 0.3 lbf, what are the length and width of the plate?

- P7.20** Air at 20°C and 1 atm flows at 20 m/s past the flat plate in Fig. P7.20. A pitot stagnation tube, placed 2 mm from the wall, develops a manometer head  $h = 16 \text{ mm}$  of Meriam red oil, SG = 0.827. Use this information to estimate the downstream position  $x$  of the pitot tube. Assume laminar flow.

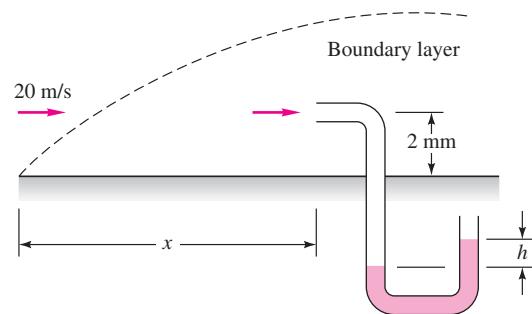

**P7.20**


- P7.21** For the experimental setup of Fig. P7.20, suppose the stream velocity is unknown and the pitot stagnation tube is traversed across the boundary layer of air at 1 atm and 20°C. The manometer fluid is Meriam red oil, and the following readings are made:

$y, \text{ mm}$	0.5	1.0	1.5	2.0	2.5	3.0	3.5	4.0	4.5	5.0
$h, \text{ mm}$	1.2	4.6	9.8	15.8	21.2	25.3	27.8	29.0	29.7	29.7


Using these data only (not the Blasius theory) estimate (a) the stream velocity, (b) the boundary layer thickness, (c) the wall shear stress, and (d) the total friction drag between the leading edge and the position of the pitot tube.

- P7.22** For the Blasius flat-plate problem, Eqs. (7.21) to (7.23), does a two-dimensional stream function  $\psi(x, y)$  exist? If so, determine the correct dimensionless form for  $\psi$ , assuming that  $\psi = 0$  at the wall,  $y = 0$ .




- P7.23** Suppose you buy a 4- by 8-ft sheet of plywood and put it on your roof rack. (See Fig. P7.23.) You drive home at 35 mi/h. (a) Assuming the board is perfectly aligned with the airflow, how thick is the boundary layer at the end of the board? (b) Estimate the drag on the sheet of plywood if the boundary layer remains laminar. (c) Estimate the drag on the sheet of plywood if the boundary layer is turbulent (assume the wood is smooth), and compare the result to that of the laminar boundary layer case.

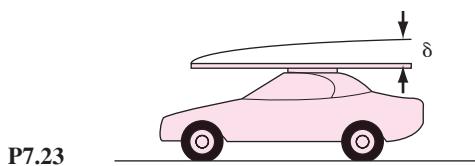

- \*P7.24** Air at 20°C and 1 atm flows past the flat plate in Fig. P7.24 under laminar conditions. There are two equally spaced pitot stagnation tubes, each placed 2 mm from the wall. The manometer fluid is water at 20°C. If  $U = 15$  m/s and  $L = 50$  cm, determine the values of the manometer readings  $h_1$  and  $h_2$ , in mm.

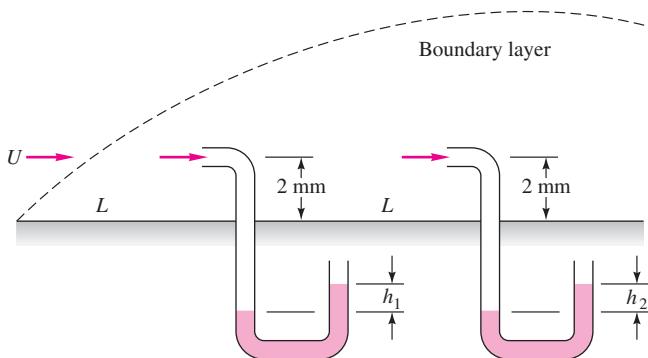


- P7.25** Consider the smooth square 10-cm-by-10-cm duct in Fig. P7.25. The fluid is air at 20°C and 1 atm, flowing at  $V_{\text{avg}} = 24$  m/s. It is desired to increase the pressure drop over the 1-m length by adding sharp 8-mm-long flat plates across the duct, as shown. (a) Estimate the pressure drop if there are no plates. (b) Estimate how many plates are needed to generate an additional 100 Pa of pressure drop.
- P7.26** Consider laminar boundary layer flow past the square-plate arrangements in Fig. P7.26. Compared to the friction drag of a single plate 1, how much larger is the drag of four plates together as in configurations (a) and (b)? Explain your results.

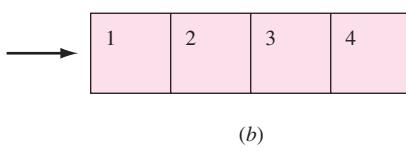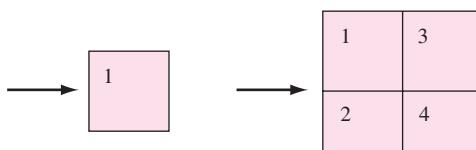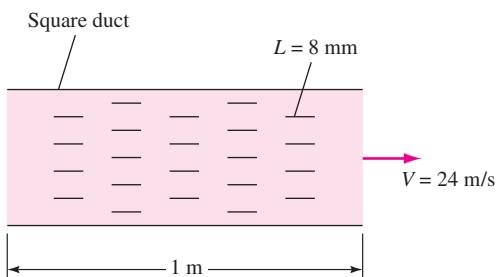**P7.26**

- P7.27** Air at 20°C and 1 atm flows at 3 m/s past a sharp flat plate 2 m wide and 1 m long. (a) What is the wall shear stress at the end of the plate? (b) What is the air velocity at a point 4.5 mm normal to the end of the plate? (c) What is the total friction drag on the plate?

- P7.28** Flow straighteners are arrays of narrow ducts placed in wind tunnels to remove swirl and other in-plane secondary velocities. They can be idealized as square boxes constructed by vertical and horizontal plates, as in Fig. P7.28. The cross section is  $a$  by  $a$ , and the box length is  $L$ . Assuming laminar flat-plate flow and an array of  $N \times N$  boxes, derive a formula for (a) the total drag on the bundle of boxes and (b) the effective pressure drop across the bundle.

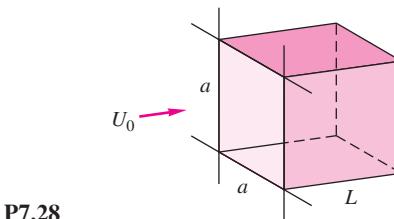

- P7.29** Let the flow straighteners in Fig. P7.28 form an array of  $20 \times 20$  boxes of size  $a = 4$  cm and  $L = 25$  cm. If the


approach velocity is  $U_0 = 12 \text{ m/s}$  and the fluid is sea-level standard air, estimate (a) the total array drag and (b) the pressure drop across the array. Compare with Sec. 6.8.

### Turbulent flat-plate flow

- P7.30** In Ref. 56 of Chap. 6, McKeon et al. propose new, more accurate values for the turbulent log-law constants,  $\kappa = 0.421$  and  $B = 5.62$ . Use these constants, and the one-seventh power-law, to repeat the analysis that led to the formula for turbulent boundary layer thickness, Eq. (7.42). By what percent is  $\delta/x$  in your new formula different from that in Eq. (7.42)? Comment.
- P7.31** The centerboard on a sailboat is 3 ft long parallel to the flow and protrudes 7 ft down below the hull into seawater at  $20^\circ\text{C}$ . Using flat-plate theory for a smooth surface, estimate its drag if the boat moves at 10 knots. Assume  $\text{Re}_{x,tr} = 5\text{E}5$ .
- P7.32** A flat plate of length  $L$  and height  $\delta$  is placed at a wall and is parallel to an approaching boundary layer, as in Fig. P7.32. Assume that the flow over the plate is fully turbulent and that the approaching flow is a one-seventh-power law:

$$u(y) = U_0 \left( \frac{y}{\delta} \right)^{1/7}$$

Using strip theory, derive a formula for the drag coefficient of this plate. Compare this result with the drag of the same plate immersed in a uniform stream  $U_0$ .

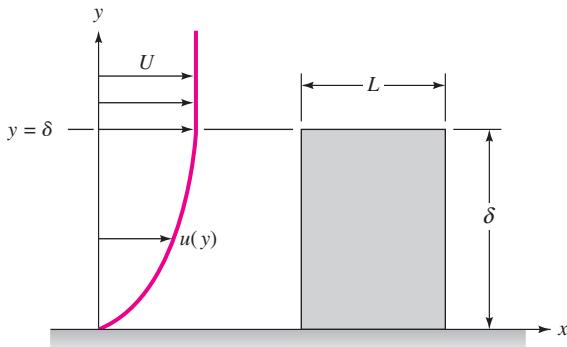

P7.32

- P7.33** An alternate analysis of turbulent flat-plate flow was given by Prandtl in 1927, using a wall shear stress formula from pipe flow:

$$\tau_w = 0.0225 \rho U^2 \left( \frac{\nu}{U \delta} \right)^{1/4}$$

Show that this formula can be combined with Eqs. (7.33) and (7.40) to derive the following relations for turbulent

flat-plate flow:

$$\frac{\delta}{x} = \frac{0.37}{\text{Re}_x^{1/5}} \quad c_f = \frac{0.0577}{\text{Re}_x^{1/5}} \quad C_D = \frac{0.072}{\text{Re}_x^{1/5}}$$

These formulas are limited to  $\text{Re}_x$  between  $5 \times 10^5$  and  $10^7$ .

- P7.34** Consider turbulent flow past a sharp, smooth flat plate of width  $b$  and length  $L$ . What percentage of the friction drag on the plate is carried by the rear half of the plate?
- P7.35** The solutions to Prob. P7.26 are (a)  $F = 2.83 F_{1\text{-plate}}$  and (b)  $F = 2.0 F_{1\text{-plate}}$ . (Do not reveal these results to your friends.) Repeat Prob. P7.26 assuming the boundary layer flow is *turbulent*, and comment on the striking increase in numerical values.
- P7.36** A ship is 125 m long and has a wetted area of  $3500 \text{ m}^2$ . Its propellers can deliver a maximum power of 1.1 MW to seawater at  $20^\circ\text{C}$ . If all drag is due to friction, estimate the maximum ship speed, in kn.
- P7.37** Air at  $20^\circ\text{C}$  and 1 atm flows past a long flat plate, at the end of which is placed a narrow scoop, as shown in Fig. P7.37. (a) Estimate the height  $h$  of the scoop if it is to extract 4 kg/s per meter of width into the paper. (b) Find the drag on the plate up to the inlet of the scoop, per meter of width.




P7.37

- P7.38** Atmospheric boundary layers are very thick but follow formulas very similar to those of flat-plate theory. Consider wind blowing at 10 m/s at a height of 80 m above a smooth beach. Estimate the wind shear stress, in Pa, on the beach if the air is standard sea-level conditions. What will the wind velocity striking your nose be if (a) you are standing up and your nose is 170 cm off the ground and (b) you are lying on the beach and your nose is 17 cm off the ground?
- P7.39** A hydrofoil 50 cm long and 4 m wide moves at 28 kn in seawater at  $20^\circ\text{C}$ . Using flat-plate theory with  $\text{Re}_{tr} = 5\text{E}5$ , estimate its drag, in N, for (a) a smooth wall and (b) a rough wall,  $\epsilon = 0.3 \text{ mm}$ .
- P7.40** Hoerner [12, p. 3.25] states that the drag coefficient of a flag in winds, based on total wetted area  $2bL$ , is approximated by  $C_D \approx 0.01 + 0.05L/b$ , where  $L$  is the flag length in the flow direction. Test Reynolds numbers  $\text{Re}_L$  were  $1\text{E}6$  or greater. (a) Explain why, for  $L/b \geq 1$ , these drag values are much higher than for a flat plate. Assuming sea-level standard air at 50 mi/h, with area  $bL = 4 \text{ m}^2$ , find (b) the proper flag dimensions for which the total drag is approximately 400 N.

- P7.41** Repeat Prob. P7.20 with the sole change that the pitot probe is now 10 mm from the wall (5 times higher). Show that the flow there cannot possibly be laminar, and use smooth-wall turbulent flow theory to estimate the position  $x$  of the probe, in m.

- P7.42** A light aircraft flies at 30 m/s in air at 20°C and 1 atm. Its wing is an NACA 0009 airfoil, with a chord length of 150 cm and a very wide span (neglect aspect ratio effects). Estimate the drag of this wing, per unit span length, (a) by flat plate theory and (b) using the data from Fig. 7.25 for  $\alpha = 0^\circ$ .

- P7.43** In the flow of air at 20°C and 1 atm past a flat plate in Fig. P7.43, the wall shear is to be determined at position  $x$  by a *floating element* (a small area connected to a strain-gage force measurement). At  $x = 2$  m, the element indicates a shear stress of 2.1 Pa. Assuming turbulent flow from the leading edge, estimate (a) the stream velocity  $U$ , (b) the boundary layer thickness  $\delta$  at the element, and (c) the boundary layer velocity  $u$ , in m/s, at 5 mm above the element.

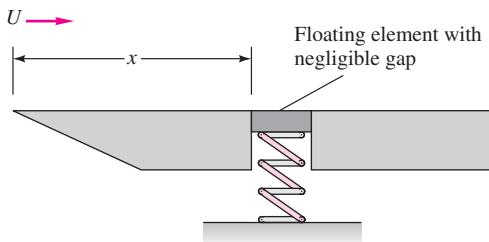**P7.43**


- P7.44** Extensive measurements of wall shear stress and local velocity for turbulent airflow on the flat surface of the University of Rhode Island wind tunnel have led to the following proposed correlation:

$$\frac{\rho y^2 \tau_w}{\mu^2} \approx 0.0207 \left( \frac{uy}{v} \right)^{1.77}$$

Thus, if  $y$  and  $u(y)$  are known at a point in a flat-plate boundary layer, the wall shear may be computed directly. If the answer to part (c) of Prob. P7.43 is  $u \approx 26.3$  m/s, determine the shear stress and compare with Prob. P7.43. Discuss.

- P7.45** A thin sheet of fiberboard weighs 90 N and lies on a rooftop, as shown in Fig. P7.45. Assume ambient air at 20°C and 1 atm. If the coefficient of solid friction between board and roof is  $\sigma \approx 0.12$ , what wind velocity will generate enough fluid friction to dislodge the board?

- P7.46** A ship is 150 m long and has a wetted area of 5000 m<sup>2</sup>. If it is encrusted with barnacles, the ship requires 7000 hp to overcome friction drag when moving in seawater

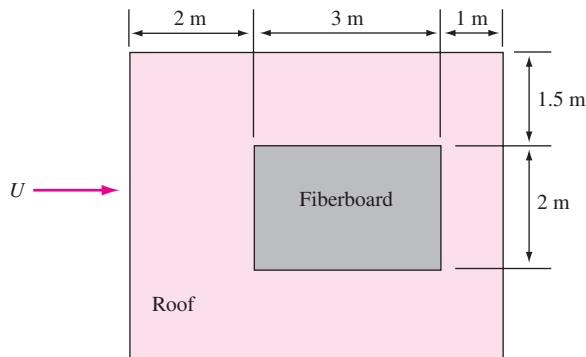**P7.45**

at 15 kn and 20°C. What is the average roughness of the barnacles? How fast would the ship move with the same power if the surface were smooth? Neglect wave drag.

- P7.47** Local boundary layer effects, such as shear stress and heat transfer, are best correlated with local variables, rather than using distance  $x$  from the leading edge. The momentum thickness  $\theta$  is often used as a length scale. Use the analysis of turbulent flat-plate flow to write local wall shear stress  $\tau_w$  in terms of dimensionless  $\theta$  and compare with the formula recommended by Schlichting [1]:  $C_f \approx 0.033 \text{ Re}_\theta^{-0.268}$ .

### Boundary layers with pressure gradient

- P7.48** In 1957 H. Götler proposed the adverse gradient test cases

$$U = \frac{U_0}{(1 + x/L)^n}$$

and computed separation for laminar flow at  $n = 1$  to be  $x_{sep}/L = 0.159$ . Compare with Thwaites's method, assuming  $\theta_0 = 0$ .


- P7.49** Based strictly on your understanding of flat-plate theory plus adverse and favorable pressure gradients, explain the direction (left or right) for which airflow past the slender airfoil shape in Fig. P7.49 will have lower total (friction + pressure) drag.

**P7.49**

- P7.50** Consider the flat-walled diffuser in Fig. P7.50, which is similar to that of Fig. 6.26a with constant width  $b$ . If  $x$  is measured from the inlet and the wall boundary layers are thin, show that the core velocity  $U(x)$  in the diffuser is given approximately by

$$U = \frac{U_0}{1 + (2x \tan \theta)/W}$$

where  $W$  is the inlet height. Use this velocity distribution with Thwaites's method to compute the wall angle  $\theta$  for which laminar separation will occur in the exit plane when diffuser length  $L = 2W$ . Note that the result is independent of the Reynolds number.

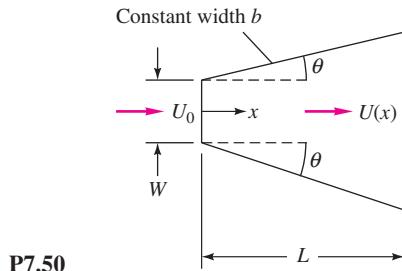

P7.50


### Drag of bodies

- P7.51** The derivation of Eq. (7.42) for  $\delta/x$  in turbulent flow used very simple velocity correlations, Eqs. (7.38) and (7.39). A unified law-of-the-wall was given by Spalding [54]:

$$y^+ = u^+ + e^{-\kappa B} \left[ e^{\kappa u^+} - 1 - \kappa u^+ - \frac{(\kappa u^+)^2}{2} - \frac{(\kappa u^+)^3}{6} \right]$$

where  $u^+ = u/u^*$  and  $y^+ = yu^*/v$ , while  $\kappa$  and  $B$  are the log-law constants in Eq. (7.34). This clever inverse formula fits all the data in Fig. 6.10 out to the edge of the logarithmic region. How can Spalding's formula be used to improve Eqs. (7.38) and (7.40) and thus lead to improved turbulent flat-plate-flow relations?

- P7.52** Clift et al. [46] give the formula  $F \approx (6\pi/5)(4 + a/b)\mu Ub$  for the drag of a prolate spheroid in *creeping motion*, as shown in Fig. P7.52. The half-thickness  $b$  is 4 mm. If the fluid is SAE 50W oil at 20°C, (a) check that  $Re_b < 1$  and (b) estimate the spheroid length if the drag is 0.02 N.

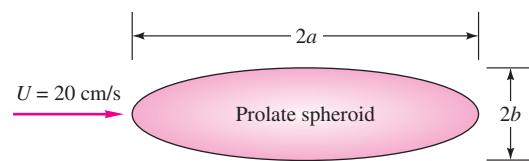


P7.52

- P7.53** From Table 7.2, the drag coefficient of a wide plate normal to a stream is approximately 2.0. Let the stream conditions be  $U_\infty$  and  $p_\infty$ . If the average pressure on the front of the plate is approximately equal to the free-stream stagnation pressure, what is the average pressure on the rear?

- P7.54** If a missile takes off vertically from sea level and leaves the atmosphere, it has zero drag when it starts and zero drag when it finishes. It follows that the drag must be a maximum somewhere in between. To simplify the analysis, assume a constant drag coefficient,  $C_D$ , and a constant vertical acceleration,  $a$ . Let the density variation be modeled by the troposphere relation, Eq. (2.20). Find an expression for the altitude  $z^*$  where the drag is a maximum. Comment on your result.

- P7.55** A ship tows a submerged cylinder, which is 1.5 m in diameter and 22 m long, at 5 m/s in fresh water at 20°C. Estimate the towing power, in kW, required if the cylinder is (a) parallel and (b) normal to the tow direction.

- P7.56** A delivery vehicle carries a long sign on top, as in Fig. P7.56. If the sign is very thin and the vehicle moves at 65 mi/h, (a) estimate the force on the sign with no crosswind and (b) discuss the effect of a crosswind.

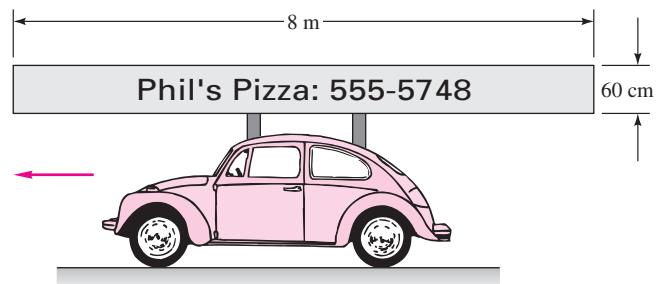

P7.56


- P7.57** The main cross-cable between towers of a coastal suspension bridge is 60 cm in diameter and 90 m long. Estimate the total drag force on this cable in crosswinds of 50 mi/h. Are these laminar flow conditions?

- P7.58** Modify Prob. P7.54 to be more realistic by accounting for missile drag during ascent. Assume constant thrust  $T$  and missile weight  $W$ . Neglect the variation of  $g$  with altitude. Solve for the altitude  $z^*$  in the standard atmosphere where the drag is a maximum, for  $T = 16,000$  N,  $W = 8000$  N, and  $C_{DA} = 0.4$  m<sup>2</sup>. The writer does not believe an analytic solution is possible.

- \*P7.59** Joe can pedal his bike at 10 m/s on a straight level road with no wind. The rolling resistance of his bike is 0.80 N·s/m—that is, 0.80 N of force per m/s of speed. The drag area ( $C_{DA}$ ) of Joe and his bike is 0.422 m<sup>2</sup>. Joe's mass is 80 kg and that of the bike is 15 kg. He now encounters a head wind of 5.0 m/s. (a) Develop an equation for the speed at which Joe can pedal into the wind. Hint: A cubic equation for  $V$  will result. (b) Solve for  $V$ ; that is, how fast can Joe ride into the head wind? (c) Why is the result not simply  $10 - 5.0 = 5.0$  m/s, as one might first suspect?

- P7.60** A fishnet consists of 1-mm-diameter strings overlapped and knotted to form 1 by 1-cm squares. Estimate the drag of 1 m<sup>2</sup> of such a net when towed normal to its plane at 3 m/s in 20°C seawater. What horsepower is required to tow 400 ft<sup>2</sup> of this net?

- P7.61** A filter may be idealized as an array of cylindrical fibers normal to the flow, as in Fig. P7.61. Assuming that the fibers are uniformly distributed and have drag coefficients given by Fig. 7.16a, derive an approximate expression for the pressure drop  $\Delta p$  through a filter of thickness  $L$ .

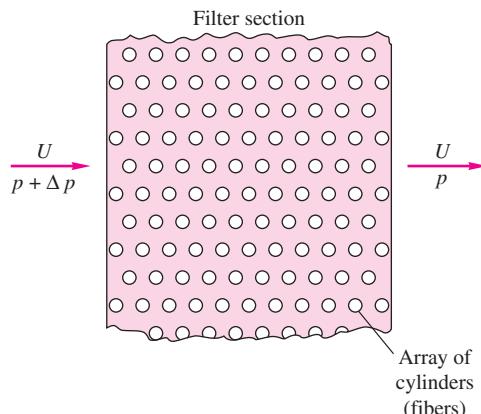**P7.61**

- P7.62** A sea-level smokestack is 52 m high and has a square cross section. Its supports can withstand a maximum side force of 90 kN. If the stack is to survive 90-mi/h hurricane winds, what is its maximum possible width?

- P7.63** For those who think electric cars are sissy, Keio University in Japan has tested a 22-ft-long prototype whose eight electric motors generate a total of 590 horsepower. The "Kaz" cruises at 180 mi/hr (see *Popular Science*, August 2001, p. 15). If the drag coefficient is 0.35 and the frontal area is 26 ft<sup>2</sup>, what percentage of this power is expended against sea-level air drag?

- P7.64** A parachutist jumps from a plane, using an 8.5-m-diameter chute in the standard atmosphere. The total mass of the chutist and the chute is 90 kg. Assuming an open chute and quasi-steady motion, estimate the time to fall from 2000- to 1000-m altitude.

- P7.65** As soldiers get bigger and packs get heavier, a parachutist and load can weigh as much as 400 lbf. The standard 28-ft parachute may descend too fast for safety. For heavier loads, the U. S. Army Natick Center has developed a 28-ft, higher-drag, less porous XT-11 parachute (see <<http://www.natick.army.mil>>). This parachute has a sea-level descent speed of 16 ft/s with a 400-lbf load. (a) What is the drag coefficient of the XT-11? (b) How

fast would the standard chute descend at sea level with such a load?

- P7.66** A sphere of density  $\rho_s$  and diameter  $D$  is dropped from rest in a fluid of density  $\rho$  and viscosity  $\mu$ . Assuming a constant drag coefficient  $C_{d_0}$ , derive a differential equation for the fall velocity  $V(t)$  and show that the solution is

$$V = \left[ \frac{4gD(S - 1)}{3C_{d_0}} \right]^{1/2} \tanh Ct$$


$$C = \left[ \frac{3gC_{d_0}(S - 1)}{4S^2 D} \right]^{1/2}$$

where  $S = \rho_s/\rho$  is the specific gravity of the sphere material.

- P7.67** A world-class bicycle rider can generate one-half horsepower for long periods. If racing at sea level, estimate the velocity this cyclist can maintain. Neglect rolling friction.

- P7.68** The Mars roving-laboratory parachute, in the Chap. 5 opener photo, is a 55-ft-diameter disk-gap-band chute, with a measured drag coefficient of 1.12 [59]. Mars has very low density, about 2.9E-5 slug/ft<sup>3</sup>, and its gravity is only 38 percent of earth gravity. If the mass of payload and chute is 2400 kg, estimate the terminal fall velocity of the parachute.

- P7.69** Two baseballs of diameter 7.35 cm are connected to a rod 7 mm in diameter and 56 cm long, as in Fig. P7.69. What power, in W, is required to keep the system spinning at 400 r/min? Include the drag of the rod, and assume sea-level standard air.

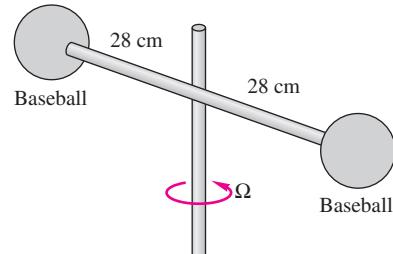**P7.69**

- P7.70** The Army's new ATPS personnel parachute is said to be able to bring a 400-lbf load, trooper plus pack, to ground at 16 ft/s in "mile-high" Denver, Colorado. If we assume that Table 7.3 is valid, what is the approximate diameter of this new parachute?


- P7.71** The 2009 Ford Escape Hybrid has an empty weight of 3669 lbf, a drag-area  $C_D A = 11.6 \text{ ft}^2$  [21], and a rolling resistance coefficient RRC (without brakes) of 0.88 lbf per mi/h of speed. Estimate the maximum velocity this vehicle can attain when rolling freely, at sea-level conditions, down a 5-degree slope.

- P7.72** A settling tank for a municipal water supply is 2.5 m deep, and 20°C water flows through continuously at 35 cm/s. Estimate the minimum length of the tank that will ensure that all sediment ( $\text{SG} = 2.55$ ) will fall to the bottom for particle diameters greater than (a) 1 mm and (b) 100  $\mu\text{m}$ .

- P7.73** A balloon is 4 m in diameter and contains helium at 125 kPa and 15°C. Balloon material and payload weigh 200 N, not including the helium. Estimate (a) the terminal ascent velocity in sea-level standard air, (b) the final standard altitude (neglecting winds) at which the balloon will come to rest, and (c) the minimum diameter (< 4 m) for which the balloon will just barely begin to rise in sea-level standard air.

- P7.74** It is difficult to define the “frontal area” of a motorcycle due to its complex shape. One then measures the *drag area* (that is,  $C_D A$ ) in area units. Hoerner [12] reports the drag area of a typical motorcycle, including the (upright) driver, as about 5.5  $\text{ft}^2$ . Rolling friction is typically about 0.7 lbf per mi/h of speed. If that is the case, estimate the maximum sea-level speed (in mi/h) of the new Harley-Davidson V-Rod<sup>TM</sup>cycle, whose liquid-cooled engine produces 115 hp.


- P7.75** EES The helium-filled balloon in Fig. P7.75 is tethered at 20°C and 1 atm with a string of negligible weight and drag. The diameter is 50 cm, and the balloon material weighs 0.2 N, not including the helium. The helium pressure is 120 kPa. Estimate the tilt angle  $\theta$  if the airstream velocity  $U$  is (a) 5 m/s or (b) 20 m/s.

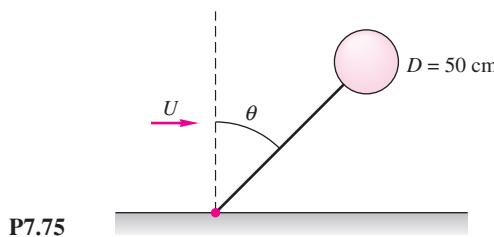

P7.75

- P7.76** The movie *The World's Fastest Indian* tells the story of Burt Munro, a New Zealander who, in 1937, set a motorcycle record of 201 mi/h on the Bonneville Salt Flats. Using the data of Prob. P7.74, (a) estimate the horsepower needed to drive this fast. (b) What horsepower would have gotten Burt up to 250 mi/h?

- P7.77** To measure the drag of an upright person, without violating human subject protocols, a life-sized mannequin is attached to the end of a 6-m rod and rotated at  $\Omega = 80 \text{ rev/min}$ , as in Fig. P7.77. The power required to maintain the rotation is 60 kW. By including rod drag power, which is significant, estimate the drag area  $C_D A$  of the mannequin, in  $\text{m}^2$ .

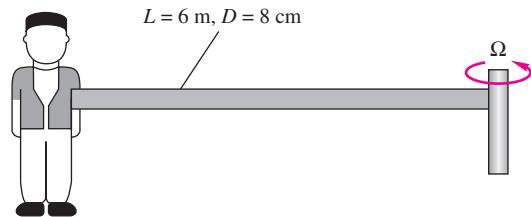


P7.77

- P7.78** On April 24, 2007, a French bullet train set a new speed record, for rail-driven trains, of 357.2 mi/h, beating the old record by 12 percent. Using the data in Table 7.3, estimate the sea-level horsepower required to drive this train at such a speed.

- P7.79** Assume that a radioactive dust particle approximates a sphere of density 2400  $\text{kg/m}^3$ . How long, in days, will it take such a particle to settle to sea level from an altitude of 12 km if the particle diameter is (a) 1  $\mu\text{m}$  or (b) 20  $\mu\text{m}$ ?

- P7.80** A heavy sphere attached to a string should hang at an angle  $\theta$  when immersed in a stream of velocity  $U$ , as in Fig. P7.80. Derive an expression for  $\theta$  as a function of the sphere and flow properties. What is  $\theta$  if the sphere is steel ( $\text{SG} = 7.86$ ) of diameter 3 cm and the flow is sea-level standard air at  $U = 40 \text{ m/s}$ ? Neglect the string drag.

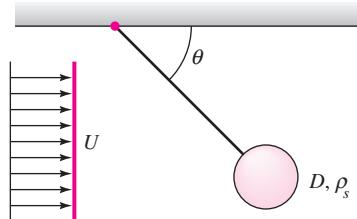


P7.80

- P7.81** A typical U.S. Army parachute has a projected diameter of 28 ft. For a payload mass of 80 kg, (a) what terminal velocity will result at 1000-m standard altitude? For the same velocity and net payload, what size drag-producing “chute” is required if one uses a square flat plate held (b) vertically and (c) horizontally? (Neglect the fact that flat shapes are not dynamically stable in free fall.)

- P7.82** Skydivers, flying over sea-level ground, typically jump at about 8000 ft altitude and free-fall spread-eagled until they open their chutes at about 2000 ft. They take about 10 s to reach terminal velocity. Estimate how many seconds of free-fall they enjoy if (a) they fall spread-eagled or (b) they fall feet first? Assume a total skydiver weight of 220 lbf.

- P7.83** A high-speed car has a drag coefficient of 0.3 and a frontal area of 1  $\text{m}^2$ . A parachute is to be used to slow this car from 80 to 40 m/s in 8 s. What should the chute diameter be? What distance will be traveled during this deceleration? Take  $m = 2000 \text{ kg}$ .

- P7.84** A Ping-Pong ball weighs 2.6 g and has a diameter of 3.8 cm. It can be supported by an air jet from a vacuum cleaner outlet, as in Fig. P7.84. For sea-level standard air, what jet velocity is required?

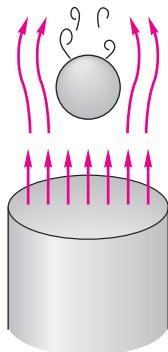

P7.84

- P7.85** In this era of expensive fossil fuels, many alternatives have been pursued. One idea from SkySails, Inc., shown in Fig. P7.85, is the assisted propulsion of a ship by a large tethered kite. The tow force of the kite assists the ship's propeller and is said to reduce annual fuel consumption by 10–35 percent. For a typical example, let the ship be 120 m long, with a wetted area of  $2800 \text{ m}^2$ . The kite area is  $330 \text{ m}^2$  and has a force coefficient of 0.8. The kite cable makes an angle of  $25^\circ$  with the horizontal. Let  $V_{\text{wind}} = 30 \text{ mi/h}$ . Neglect ship wave drag. Estimate the ship speed (a) due to the kite only and (b) if the propeller delivers 1250 hp to the water. Hint: The kite sees the relative velocity of the wind.




P7.85 Ship propulsion assisted by a large kite. (Courtesy of SkySails, Inc.)

- P7.86** Hoerner [Ref. 12, pp. 3–25] states that the drag coefficient of a flag of 2:1 aspect ratio is 0.11 based on planform area. The University of Rhode Island has an aluminum flagpole 25 m high and 14 cm in diameter. It flies equal-sized national and state flags together. If the

fracture stress of aluminum is 210 MPa, what is the maximum flag size that can be used yet avoids breaking the flagpole in hurricane (75 mi/h) winds? (Neglect the drag of the flagpole.)

- P7.87** A tractor-trailer truck has a drag area  $C_D A = 8 \text{ m}^2$  bare and  $6.7 \text{ m}^2$  with an aerodynamic deflector (Fig. 7.18b). Its rolling resistance is 50 N for each mile per hour of speed. Calculate the total horsepower required at sea level with and without the deflector if the truck moves at (a) 55 mi/h and (b) 75 mi/h.

- P7.88** A pickup truck has a clean drag area  $C_D A$  of  $35 \text{ ft}^2$ . Estimate the horsepower required to drive the truck at 55 mi/h (a) clean and (b) with the 3- by 6-ft sign in Fig. P7.88 installed if the rolling resistance is 150 lbf at sea level.

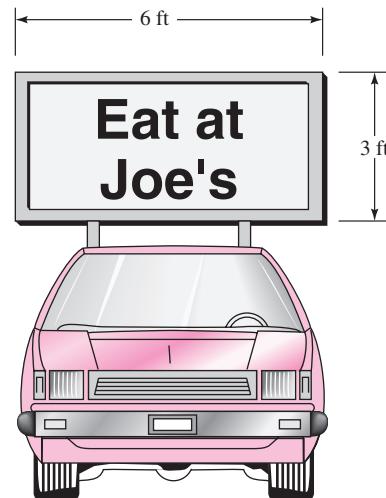


P7.88

- P7.89** The new AMTRAK high-speed Acela train can reach 150 mi/h, which presently it seldom does because of the curvy coastline tracks in New England. If 75 percent of the power expended at this speed is due to air drag, estimate the total horsepower required by the Acela.

- P7.90** In the great hurricane of 1938, winds of 85 mi/h blew over a boxcar in Providence, Rhode Island. The boxcar was 10 ft high, 40 ft long, and 6 ft wide, with a 3-ft clearance above tracks 4.8 ft apart. What wind speed would topple a boxcar weighing 40,000 lbf?


- \*P7.91** A cup anemometer uses two 5-cm-diameter hollow hemispheres connected to 15-cm rods, as in Fig. P7.91. Rod drag is negligible, and the central bearing has a retarding torque of  $0.004 \text{ N}\cdot\text{m}$ . Making simplifying assumptions to average out the time-varying geometry, estimate and plot the variation of anemometer rotation rate  $\Omega$  with wind velocity  $U$  in the range  $0 < U < 25 \text{ m/s}$  for sea-level standard air.

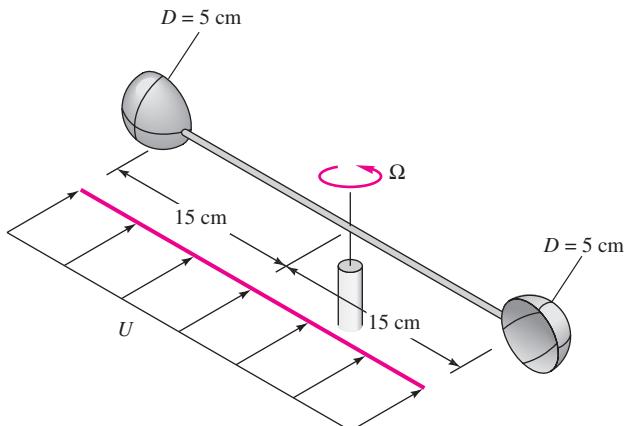

P7.91

- P7.92** A 1500-kg automobile uses its drag area  $C_D A = 0.4 \text{ m}^2$ , plus brakes and a parachute, to slow down from 50 m/s. Its brakes apply 5000 N of resistance. Assume sea-level standard air. If the automobile must stop in 8 s, what diameter parachute is appropriate?


- P7.93** A hot-film probe is mounted on a cone-and-rod system in a sea-level airstream of 45 m/s, as in Fig. P7.93. Estimate the maximum cone vertex angle allowable if the flow-induced bending moment at the root of the rod is not to exceed 30 N · cm.

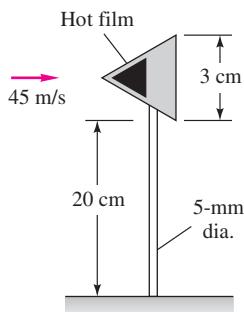

P7.93


- P7.94** A rotary mixer consists of two 1-m-long half-tubes rotating around a central arm, as in Fig. P7.94. Using the drag from Table 7.2, derive an expression for the torque  $T$  required to drive the mixer at angular velocity  $\Omega$  in a fluid of density  $\rho$ . Suppose that the fluid is water at 20°C and the maximum driving power available is 20 kW. What is the maximum rotation speed  $\Omega$  r/min?

- P7.95** An airplane weighing 28 kN, with a drag area  $C_D A \approx 5 \text{ m}^2$ , lands at sea level at 55 m/s and deploys a drag parachute 3 m in diameter. No other brakes are applied. (a) How long will it take the plane to slow down to 20 m/s? (b) How far will it have traveled in that time?

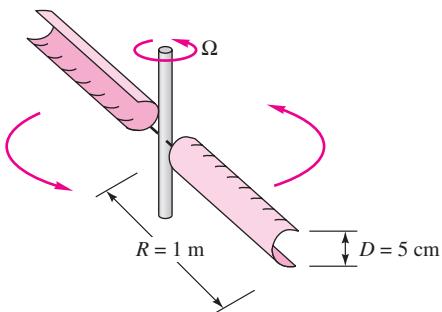

P7.94

- \*P7.96** A Savonius rotor (Fig. 6.29b) can be approximated by the two open half-tubes in Fig. P7.96 mounted on a central axis. If the drag of each tube is similar to that in Table 7.2, derive an approximate formula for the rotation rate  $\Omega$  as a function of  $U$ ,  $D$ ,  $L$ , and the fluid properties ( $\rho$ ,  $\mu$ ).

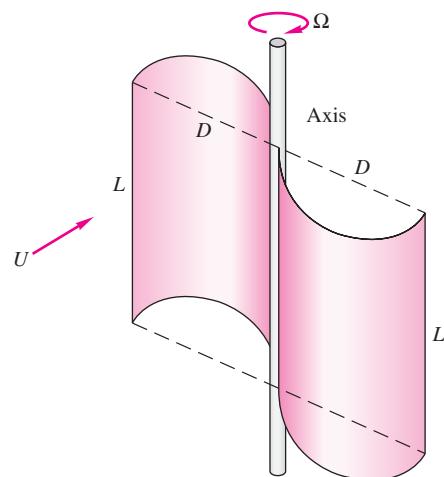

P7.96


- P7.97** A simple measurement of automobile drag can be found by an unpowered *coastdown* on a level road with no wind. Assume constant rolling resistance. For an automobile of mass 1500 kg and frontal area  $2 \text{ m}^2$ , the following velocity-versus-time data are obtained during a coastdown:

$t, \text{ s}$	0	10	20	30	40
$V, \text{ m/s}$	27.0	24.2	21.8	19.7	17.9

Estimate (a) the rolling resistance and (b) the drag coefficient. This problem is well suited for computer analysis but can be done by hand also.


- \*P7.98** A buoyant ball of specific gravity  $SG < 1$  dropped into water at inlet velocity  $V_0$  will penetrate a distance  $h$  and then pop out again, as in Fig. P7.98. Make a dynamic analysis of this problem, assuming a constant drag coefficient, and derive an expression for  $h$  as a function of the

system properties. How far will a 5-cm-diameter ball with  $\text{SG} = 0.5$  and  $C_D \approx 0.47$  penetrate if it enters at 10 m/s?

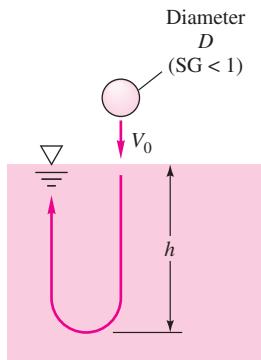

P7.98

- P7.99** Two steel balls ( $\text{SG} = 7.86$ ) are connected by a thin hinged rod of negligible weight and drag, as in Fig. P7.99. A stop prevents the rod from rotating counterclockwise. Estimate the sea-level air velocity  $U$  for which the rod will first begin to rotate clockwise.

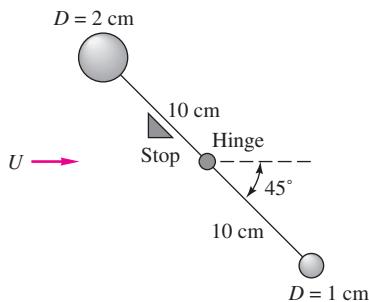


P7.99

- P7.100** A tractor-trailer truck is coasting freely, with no brakes, down an  $8^\circ$  slope at 1000-m standard altitude. Rolling resistance is 120 N for every m/s of speed. Its frontal area is  $9 \text{ m}^2$ , and the weight is 65 kN. Estimate the terminal coasting velocity, in mi/h, for (a) no deflector and (b) a deflector installed.


- P7.101** Icebergs can be driven at substantial speeds by the wind. Let the iceberg be idealized as a large, flat cylinder,  $D \gg L$ , with one-eighth of its bulk exposed, as in Fig. P7.101. Let the seawater be at rest. If the upper and lower drag forces depend on relative velocities between the iceberg and the fluid, derive an approximate expression for the steady iceberg speed  $V$  when driven by wind velocity  $U$ .

- P7.102** Sand particles ( $\text{SG} = 2.7$ ), approximately spherical with diameters from 100 to  $250 \mu\text{m}$ , are introduced into an upward-flowing stream of water at  $20^\circ\text{C}$ . What is the minimum water velocity that will carry all the sand particles upward?

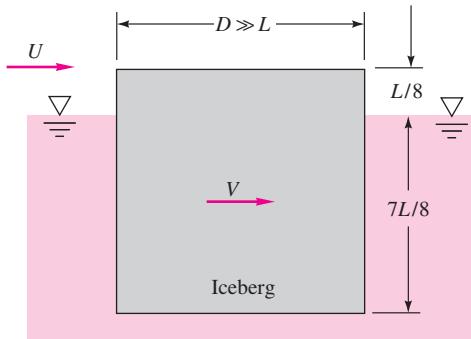

P7.101

- P7.103** When immersed in a uniform stream  $V$ , a heavy rod hinged at  $A$  will hang at *Pode's angle*  $\theta$ , after an analysis by L. Pode in 1951 (Fig. P7.103). Assume that the cylinder has normal drag coefficient  $C_{DN}$  and tangential coefficient  $C_{DT}$  that relate the drag forces to  $V_N$  and  $V_T$ , respectively. Derive an expression for Pode's angle as a function of the flow and rod parameters. Find  $\theta$  for a steel rod,  $L = 40 \text{ cm}$ ,  $D = 1 \text{ cm}$ , hanging in sea-level air at  $V = 35 \text{ m/s}$ .

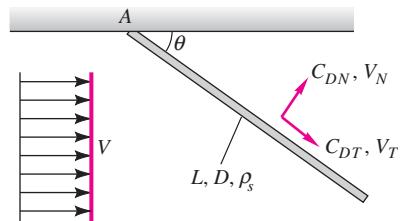

P7.103

- P7.104** The Russian Typhoon-class submarine is 170 m long, with a maximum diameter of 23 m. Its propulsor can deliver up to 80,000 hp to the seawater. Model the submarine as an 8:1 ellipsoid and estimate the maximum speed, in knots, of this ship.

- P7.105** A ship 50 m long, with a wetted area of  $800 \text{ m}^2$ , has the hull shape tested in Fig. 7.19. There are no bow or stern bulbs. The total propulsive power available is 1 MW. For seawater at  $20^\circ\text{C}$ , plot the ship's velocity  $V \text{ kn}$  versus power  $P$  for  $0 < P < 1 \text{ MW}$ . What is the most efficient setting?

- P7.106** For the kite-assisted ship of Prob. P7.85, again neglect wave drag and let the wind velocity be 30 mi/h. Estimate the kite area that would tow the ship, unaided by the propeller, at a ship speed of 8 knots.

- P7.107** The largest flag in Rhode Island stands outside Herb Chambers' auto dealership, on the edge of Route I-95 in Providence. The flag is 50 ft long, 30 ft wide, weighs 250 lbf, and takes four strong people to raise it or lower it. Using Prob. P7.40 for input, estimate (a) the wind speed, in mi/h, for which the flag drag is 1000 lbf and (b) the flag


drag when the wind is a low-end category 1 hurricane, 74 mi/h. Hint: Providence is at sea level.

- P7.108** The data in Fig. P7.108 are for the lift and drag of a spinning sphere from Ref. 45. Suppose that a tennis ball ( $W \approx 0.56$  N,  $D \approx 6.35$  cm) is struck at sea level with initial velocity  $V_0 = 30$  m/s and “topspin” (front of the ball rotating downward) of 120 r/s. If the initial height of the ball is 1.5 m, estimate the horizontal distance traveled before it strikes the ground.

- P7.109** The world record for automobile mileage, 12,665 miles per gallon, was set in 2005 by the PAC-CAR II in Fig. P7.109, built by students at the Swiss Federal Institute of Technology in Zurich [52]. This little car, with an empty weight of 64 lbf and a height of only 2.5 ft, traveled a 21-km course at 30 km/hr to set the record. It has a reported drag coefficient of 0.075 (comparable to an airfoil), based upon a frontal area of  $3 \text{ ft}^2$ . (a) What is the drag of this little car when on the course? (b) What horsepower is required to propel it? (c) Do a bit of research and explain why a value of miles per gallon is completely misleading in this particular case.

- P7.110** A baseball pitcher throws a curveball with an initial velocity of 65 mi/h and a spin of 6500 r/min about a vertical axis. A baseball weighs 0.32 lbf and has a diameter of 2.9 in. Using the data of Fig. P7.108 for turbulent flow, estimate how far such a curveball will have deviated from its straight-line path when it reaches home plate 60.5 ft away.


- \***P7.111** A table tennis ball has a mass of 2.6 g and a diameter of 3.81 cm. It is struck horizontally at an initial velocity of 20 m/s while it is 50 cm above the table, as in Fig. P7.111. For sea-level air, what spin, in r/min, will cause the ball to strike the opposite edge of the table, 4 m away? Make an analytical estimate, using Fig. P7.108, and account for the fact that the ball decelerates during flight.

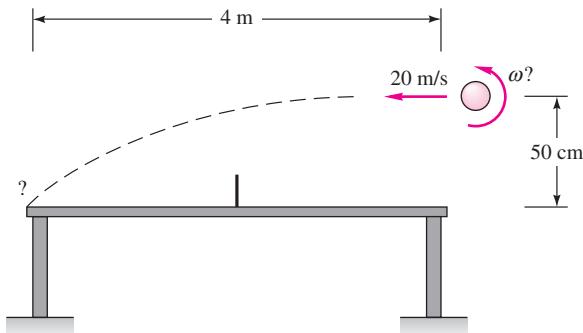

P7.111

- P7.112** A smooth wooden sphere ( $\text{SG} = 0.65$ ) is connected by a thin rigid rod to a hinge in a wind tunnel, as in Fig. P7.112. Air at 20°C and 1 atm flows and levitates the

sphere. (a) Plot the angle  $\theta$  versus sphere diameter  $d$  in the range  $1 \text{ cm} \leq d \leq 15 \text{ cm}$ . (b) Comment on the feasibility of this configuration. Neglect rod drag.

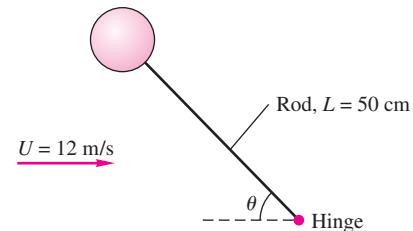

P7.112

- P7.113** An automobile has a mass of 1000 kg and a drag area  $C_D A = 0.7 \text{ m}^2$ . The rolling resistance of 70 N is approximately constant. The car is coasting without brakes at 90 km/h as it begins to climb a hill of 10 percent grade (slope =  $\tan^{-1} 0.1 = 5.71^\circ$ ). How far up the hill will the car come to a stop?

- P7.114** The deep submergence vehicle ALVIN, in the Chap. 2 opener photo, is 23 ft long and 8.5 ft wide. It weighs about 36,000 lbf in air and ascends (descends) in the seawater due to about 360 lbf of positive (negative) buoyancy. Noting that the front face of the ship is quite different for ascent and descent, (a) estimate the velocity for each direction, in meters per minute. (b) How long does it take to ascend from its maximum depth of 4500 m?


### Lifting bodies/airfoils

- P7.115** The Cessna Citation executive jet weighs 67 kN and has a wing area of  $32 \text{ m}^2$ . It cruises at 10 km standard altitude with a lift coefficient of 0.21 and a drag coefficient of 0.015. Estimate (a) the cruise speed in mi/h and (b) the horsepower required to maintain cruise velocity.

- P7.116** An airplane weighs 180 kN and has a wing area of  $160 \text{ m}^2$  and a mean chord of 4 m. The airfoil properties are given by Fig. 7.25. If the plane is designed to land at  $V_0 = 1.2V_{\text{stall}}$ , using a split flap set at  $60^\circ$ , (a) what is the proper landing speed in mi/h? (b) What power is required for takeoff at the same speed?

- P7.117** The Transition® auto-car in Fig. 7.30 has a weight of 1200 lbf, a wingspan of 27.5 ft, and a wing area of  $150 \text{ ft}^2$ , with a symmetrical airfoil,  $C_{D\infty} \approx 0.02$ . Assume that the fuselage and tail section have a drag-area comparable to the Toyota Prius [21],  $C_{DA} \approx 6.24 \text{ ft}^2$ . If the pusher propeller provides a thrust of 250 lbf, how fast, in mi/h, can this car-plane fly at an altitude of 8200 ft?

- \***P7.118** Suppose that the airplane of Prob. P7.116 is fitted with all the best high-lift devices of Fig. 7.28. What is its minimum stall speed in mi/h? Estimate the stopping distance if the plane lands at  $V_0 = 1.25V_{\text{stall}}$  with constant  $C_L = 3.0$  and  $C_D = 0.2$  and the braking force is 20 percent of the weight on the wheels.

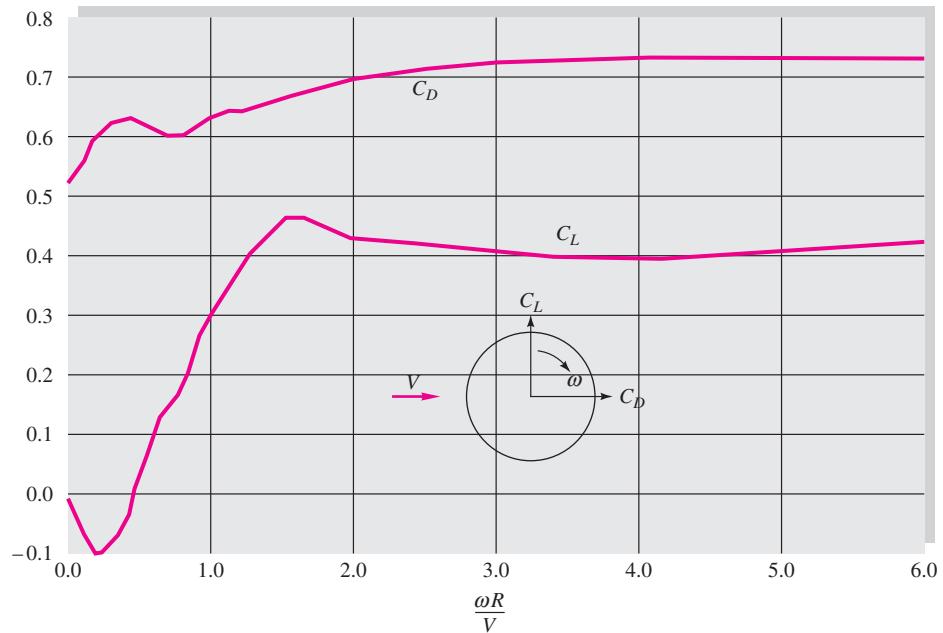

**P7.108** Drag and lift coefficients for a rotating sphere at  $Re_D \approx 10^5$ , from Ref. 45. (Reproduced by permission of the American Society of Mechanical Engineers.)



**P7.109** The world's best mileage set by PAC-Car II of ETH Zurich.

**P7.119** A transport plane has a mass of 45,000 kg, a wing area of 160 m<sup>2</sup>, and an aspect ratio of 7. Assume all lift and drag due to the wing alone, with  $C_{D\infty} = 0.020$  and  $C_{L,\max} = 1.5$ . If the aircraft flies at 9000 m standard altitude, make a plot of drag (in N) versus speed (from stall to 240 m/s) and determine the optimum cruise velocity (minimum drag per unit speed).

**P7.120** Show that if Eqs. (7.70) and (7.71) are valid, the maximum lift-to-drag ratio occurs when  $C_D = 2C_{D\infty}$ . What are  $(L/D)_{\max}$  and  $\alpha$  for a symmetric wing when AR = 5 and  $C_{D\infty} = 0.009$ ?

**P7.121** In gliding (unpowered) flight, the lift and drag are in equilibrium with the weight. Show that if there is no wind, the aircraft sinks at an angle

$$\tan \theta \approx \frac{\text{drag}}{\text{lift}}$$

For a sailplane of mass 200 kg, wing area 12 m<sup>2</sup>, and aspect ratio 11, with an NACA 0009 airfoil, estimate (a) the stall speed, (b) the minimum gliding angle, and (c) the maximum distance it can glide in still air when it is 1200 m above level ground.

**P7.122** A boat of mass 2500 kg has two hydrofoils, each of chord 30 cm and span 1.5 m, with  $C_{L,\max} = 1.2$  and  $C_{D\infty} = 0.08$ . Its engine can deliver 130 kW to the water. For seawater at 20°C, estimate (a) the minimum speed for which the foils support the boat and (b) the maximum speed attainable.

**P7.123** In prewar days there was a controversy, perhaps apocryphal, about whether the bumblebee has a legitimate aerodynamic right to fly. The average bumblebee (*Bombus terrestris*) weighs 0.88 g, with a wing span of 1.73 cm

and a wing area of 1.26 cm<sup>2</sup>. It can indeed fly at 10 m/s. Using fixed-wing theory, what is the lift coefficient of the bee at this speed? Is this reasonable for typical airfoils?

\***P7.124** The bumblebee can hover at zero speed by flapping its wings. Using the data of Prob. P7.123, devise a theory for flapping wings where the downstroke approximates a short flat plate normal to the flow (Table 7.3) and the upstroke is feathered at nearly zero drag. How many flaps per second of such a model wing are needed to support the bee's weight? (Actual measurements of bees show a flapping rate of 194 Hz.)

**P7.125** In 2001 a commercial aircraft lost all power while flying at 33,000 ft over the open Atlantic Ocean, about 60 miles from the Azores Islands. The pilots, with admirable skill, put the plane into a shallow glide and successfully landed in the Azores. Assume that the airplane satisfies Eqs. (7.70) and (7.71), with AR = 7,  $C_{d\infty} = 0.02$ , and a symmetric airfoil. Estimate its optimum glide distance with a mathematically perfect pilot.

**P7.126** Using the data for the Transition® auto-car from Prob. P7.117, and a maximum lift coefficient of 1.3, estimate the distance for the vehicle to take off at a speed of 1.2 $V_{\text{stall}}$ . Note that we have to add the car-body drag to the wing drag.

**P7.127** The Chap. 7 opener photo of Yves Rossy gives the following data: thrust = 200 lbf, altitude = 8200 ft, and wingspan = 8 ft. Further assume a wing area of 12 ft<sup>2</sup>, total weight of 280 lbf,  $C_{D\infty} = 0.08$  for the wing, and a drag area of 1.7 ft<sup>2</sup> for Rocket Man. Estimate the maximum velocity possible for this condition, in mi/h.

## Word Problems

- W7.1** How do you *recognize* a boundary layer? Cite some physical properties and some measurements that reveal appropriate characteristics.
- W7.2** In Chap. 6 the Reynolds number for transition to turbulence in pipe flow was about  $Re_{tr} \approx 2300$ , whereas in flat-plate flow  $Re_{tr} \approx 1 \times 10^6$ , nearly three orders of magnitude higher. What accounts for the difference?
- W7.3** Without writing any equations, give a verbal description of boundary layer displacement thickness.
- W7.4** Describe, in words only, the basic ideas behind the "boundary layer approximations."
- W7.5** What is an *adverse* pressure gradient? Give three examples of flow regimes where such gradients occur.
- W7.6** What is a *favorable* pressure gradient? Give three examples of flow regimes where such gradients occur.

- W7.7** The drag of an airfoil (Fig. 7.12) increases considerably if you turn the sharp edge around 180° to face the stream. Can you explain this?
- W7.8** In Table 7.3, the drag coefficient of a spruce tree decreases sharply with wind velocity. Can you explain this?
- W7.9** Thrust is required to propel an airplane at a finite forward velocity. Does this imply an energy loss to the system? Explain the concepts of thrust and drag in terms of the first law of thermodynamics.
- W7.10** How does the concept of *drafting*, in automobile and bicycle racing, apply to the material studied in this chapter?
- W7.11** The circular cylinder of Fig. 7.13 is doubly symmetric and therefore should have no lift. Yet a lift

sensor would definitely reveal a finite root-mean-square value of lift. Can you explain this behavior?

## Fundamentals of Engineering Exam Problems

- FE7.1** A smooth 12-cm-diameter sphere is immersed in a stream of 20°C water moving at 6 m/s. The appropriate Reynolds number of this sphere is approximately  
 (a) 2.3 E5, (b) 7.2 E5, (c) 2.3 E6, (d) 7.2 E6,  
 (e) 7.2 E7
- FE7.2** If, in Prob. FE7.1, the drag coefficient based on frontal area is 0.5, what is the drag force on the sphere?  
 (a) 17 N, (b) 51 N, (c) 102 N, (d) 130 N, (e) 203 N
- FE7.3** If, in Prob. FE7.1, the drag coefficient based on frontal area is 0.5, at what terminal velocity will an aluminum sphere ( $\text{SG} = 2.7$ ) fall in still water?  
 (a) 2.3 m/s, (b) 2.9 m/s, (c) 4.6 m/s, (d) 6.5 m/s,  
 (e) 8.2 m/s
- FE7.4** For flow of sea-level standard air at 4 m/s parallel to a thin flat plate, estimate the boundary layer thickness at  $x = 60$  cm from the leading edge:  
 (a) 1.0 mm, (b) 2.6 mm, (c) 5.3 mm, (d) 7.5 mm,  
 (e) 20.2 mm
- FE7.5** In Prob. FE7.4, for the same flow conditions, what is the wall shear stress at  $x = 60$  cm from the leading edge?  
 (a) 0.053 Pa, (b) 0.11 Pa, (c) 0.16 Pa, (d) 0.32 Pa,  
 (e) 0.64 Pa
- FE7.6** Wind at 20°C and 1 atm blows at 75 km/h past a flagpole 18 m high and 20 cm in diameter. The drag coefficient, based on frontal area, is 1.15. Estimate the wind-induced bending moment at the base of the pole.


- W7.12** Explain in words why a thrown spinning ball moves in a curved trajectory. Give some physical reasons why a side force is developed in addition to the drag.

- (a) 9.7 kN · m, (b) 15.2 kN · m, (c) 19.4 kN · m,  
 (d) 30.5 kN · m, (e) 61.0 kN · m
- FE7.7** Consider wind at 20°C and 1 atm blowing past a chimney 30 m high and 80 cm in diameter. If the chimney may fracture at a base bending moment of 486 kN · m, and its drag coefficient based on frontal area is 0.5, what is the approximate maximum allowable wind velocity to avoid fracture?  
 (a) 50 mi/h, (b) 75 mi/h, (c) 100 mi/h, (d) 125 mi/h,  
 (e) 150 mi/h
- FE7.8** A dust particle of density 2600 kg/m<sup>3</sup>, small enough to satisfy Stokes's drag law, settles at 1.5 mm/s in air at 20°C and 1 atm. What is its approximate diameter?  
 (a) 1.8  $\mu\text{m}$ , (b) 2.9  $\mu\text{m}$ , (c) 4.4  $\mu\text{m}$ , (d) 16.8  $\mu\text{m}$ ,  
 (e) 234  $\mu\text{m}$
- FE7.9** An airplane has a mass of 19,550 kg, a wing span of 20 m, and an average wing chord of 3 m. When flying in air of density 0.5 kg/m<sup>3</sup>, its engines provide a thrust of 12 kN against an overall drag coefficient of 0.025. What is its approximate velocity?  
 (a) 250 mi/h, (b) 300 mi/h, (c) 350 mi/h, (d) 400 mi/h,  
 (e) 450 mi/h
- FE7.10** For the flight conditions of the airplane in Prob. FE7.9 above, what is its approximate lift coefficient?  
 (a) 0.1, (b) 0.2, (c) 0.3, (d) 0.4, (e) 0.5


## Comprehensive Problems

- C7.1** Jane wants to estimate the drag coefficient of herself on her bicycle. She measures the projected frontal area to be 0.40 m<sup>2</sup> and the rolling resistance to be 0.80 N · s/m. The mass of the bike is 15 kg, while the mass of Jane is 80 kg.

Jane coasts down a long hill that has a constant 4° slope. (See Fig. C7.1.) She reaches a terminal (steady state) speed of 14 m/s down the hill. Estimate the aerodynamic drag coefficient  $C_D$  of the rider and bicycle combination.

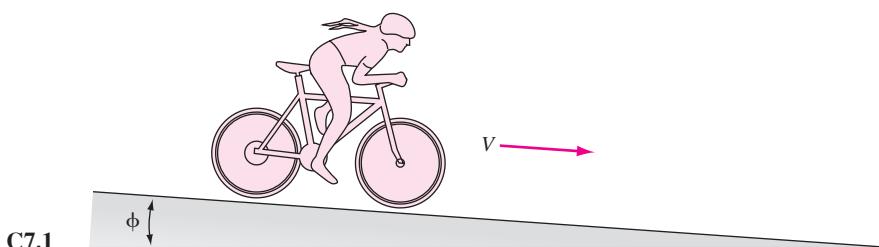


- C7.2** Air at 20°C and 1 atm flows at  $V_{\text{avg}} = 5 \text{ m/s}$  between long, smooth parallel heat exchanger plates 10 cm apart, as in Fig. C7.2. It is proposed to add a number of widely spaced 1-cm-long interrupter plates to increase the heat transfer, as shown. Although the flow in the channel is turbulent, the boundary layers over the interrupter plates are essentially laminar. Assume all plates are 1 m wide into the paper. Find (a) the pressure drop in Pa/m without the small plates present. Then find (b) the number of small plates per meter of channel length that will cause the pressure drop to rise to 10.0 Pa/m.

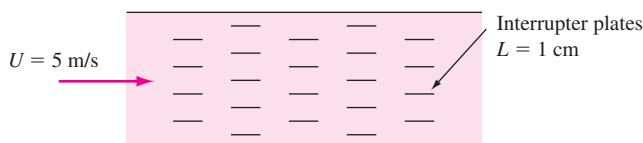

C7.2

- C7.3** A new pizza store is planning to open. It will, of course, offer free delivery, and therefore need a small delivery car with a large sign attached. The sign (a flat plate) is 1.5 ft high and 5 ft long. The boss (having no feel for fluid mechanics) mounts the sign bluntly facing the wind. One of his drivers is taking fluid mechanics and tells his boss he can save lots of money by mounting the sign parallel to the wind. (See Fig. C7.3.) (a) Calculate the drag (in lbf)

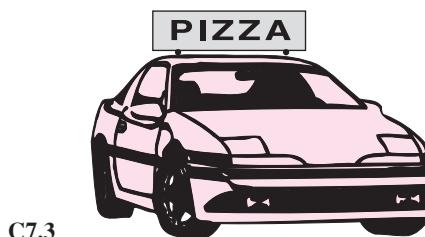


C7.3


on the *sign alone* at 40 mi/h (58.7 ft/s) in *both orientations*. (b) Suppose the car without any sign has a drag coefficient of 0.4 and a frontal area of 40 ft<sup>2</sup>. For  $V = 40 \text{ mi/h}$ , calculate the *total* drag of the car-sign combination for both orientations. (c) If the car has a rolling resistance of 40 lbf at 40 mi/h, calculate the horsepower required by the engine to drive the car at 40 mi/h in both orientations.

(d) Finally, if the engine can deliver 10 hp for 1 h on a gallon of gasoline, calculate the fuel efficiency in mi/gal for both orientations at 40 mi/h.

- C7.4** Consider a pendulum with an unusual bob shape: a hemispherical cup of diameter  $D$  whose axis is in the plane of oscillation, as in Fig. C7.4. Neglect the mass and drag of the rod  $L$ . (a) Set up the differential equation for the oscillation  $\theta(t)$ , including different cup drag (air density  $\rho$ ) in each direction, and (b) nondimensionalize this equation. (c) Determine the natural frequency of oscillation for small  $\theta \ll 1 \text{ rad}$ . (d) For the special case  $L = 1 \text{ m}$ ,  $D = 10 \text{ cm}$ ,  $m = 50 \text{ g}$ , and air at 20°C and 1 atm, with  $\theta(0) = 30^\circ$ , find (numerically) the time required for the oscillation amplitude to drop to 1°.

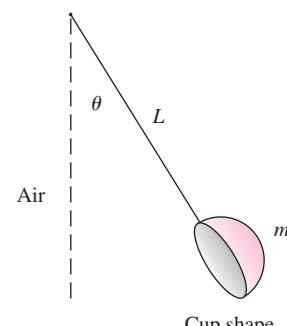

C7.4

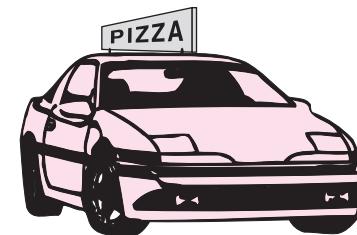

- C7.5** Program a method of numerical solution of the Blasius flat-plate relation, Eq. (7.22), subject to the conditions in Eqs. (7.23). You will find that you cannot get started without knowing the initial second derivative  $f''(0)$ , which lies between 0.2 and 0.5. Devise an iteration scheme that starts at  $f''(0) \approx 0.2$  and converges to the correct value. Print out  $u/U = f'(\eta)$  and compare with Table 7.1.

## Design Project

- D7.1** It is desired to design a cup anemometer for wind speed, similar to Fig. P7.91, with a more sophisticated approach than the “average-torque” method of Prob. P7.91. The design should achieve an approximately linear relation

between wind velocity and rotation rate in the range  $20 < U < 40 \text{ mi/h}$ , and the anemometer should rotate at about 6 r/s at  $U = 30 \text{ mi/h}$ . All specifications—cup diameter  $D$ , rod length  $L$ , rod diameter  $d$ , the bearing type, and all

materials—are to be selected through your analysis. Make suitable assumptions about the instantaneous drag of the cups and rods at any given angle  $\theta(t)$  of the system. Compute the instantaneous torque  $T(t)$ , and find and

integrate the instantaneous angular acceleration of the device. Develop a complete theory for rotation rate versus wind speed in the range  $0 < U < 50$  mi/h. Try to include actual commercial bearing friction properties.

## References

1. H. Schlichting et al., *Boundary Layer Theory*, Springer, New York, 2000.
2. F. M. White, *Viscous Fluid Flow*, 3d ed., McGraw-Hill, New York, 2005.
3. J. Cousteix, *Modeling and Computation of Boundary-Layer Flows*, 2d ed., Springer-Verlag, New York, 2005.
4. J. Tu, G. H. Yeoh, and C. Liu, *Computational Fluid Dynamics: A Practical Approach*, Butterworth-Heinemann, New York, 2007.
5. V. V. Sychev et al., *Asymptotic Theory of Separated Flows*, Cambridge University Press, New York, 2008.
6. I. J. Sobey, *Introduction to Interactive Boundary Layer Theory*, Oxford University Press, New York, 2001.
7. T. von Kármán, "On Laminar and Turbulent Friction," *Z. Angew. Math. Mech.*, vol. 1, 1921, pp. 235–236.
8. G. B. Schubauer and H. K. Skramstad, "Laminar Boundary Layer Oscillations and Stability of Laminar Flow," *Natl. Bur. Stand. Res. Pap.* 1772, April 1943 (see also *J. Aero. Sci.*, vol. 14, 1947, pp. 69–78, and *NACA Rep.* 909, 1947).
9. P. S. Bernard and J. M. Wallace, *Turbulent Flow: Analysis, Measurement, and Prediction*, Wiley, New York, 2002.
10. P. W. Runstadler, Jr., et al., "Diffuser Data Book," Creare Inc., *Tech. Note* 186, Hanover, NH, May 1975.
11. B. Thwaites, "Approximate Calculation of the Laminar Boundary Layer," *Aeronaut. Q.*, vol. 1, 1949, pp. 245–280.
12. S. F. Hoerner, *Fluid Dynamic Drag*, published by the author, Midland Park, NJ, 1965.
13. J. D. Anderson, *Fundamentals of Aerodynamics*, 4th ed., McGraw-Hill, New York, 2005.
14. V. Tucker and G. C. Parrott, "Aerodynamics of Gliding Flight of Falcons and Other Birds," *J. Exp. Biol.*, vol. 52, 1970, pp. 345–368.
15. E. C. C. Tupper, *Introduction to Naval Architecture*, 4th ed., Elsevier, New York, 2004.
16. I. H. Abbott and A. E. von Doenhoff, *Theory of Wing Sections*, Dover, New York, 1981.
17. R. Kline, *The Ultimate Paper Airplane*, Simon and Schuster, New York, 1985.
18. S. Childress, *Mechanics of Swimming and Flying*, Cambridge University Press, New York, 1981.
19. National Committee for Fluid Mechanics Films, *Illustrated Experiments in Fluid Mechanics*, M.I.T. Press, Cambridge, MA, 1972.
20. D. M. Bushnell and J. Hefner (Eds.), *Viscous Drag Reduction in Boundary Layers*, American Institute of Aeronautics & Astronautics, Reston, VA, 1990.
21. "Automobile Drag Coefficient", URL <[http://en.wikipedia.org/wiki/Automobile\\_drag\\_coefficients](http://en.wikipedia.org/wiki/Automobile_drag_coefficients)>.
22. W. H. Hucho, *Aerodynamics of Road Vehicles*, 4th ed., Soc. of Automotive Engineers, Warrendale, PA, 1998.
23. R. D. Blevins, *Applied Fluid Dynamics Handbook*, van Nostrand Reinhold, New York, 1984.
24. R. C. Johnson, Jr., G. E. Ramey, and D. S. O'Hagen, "Wind Induced Forces on Trees," *J. Fluids Eng.*, vol. 104, March 1983, pp. 25–30.
25. P. W. Bearman et al., "The Effect of a Moving Floor on Wind-Tunnel Simulation of Road Vehicles," Paper No. 880245, SAE Transactions, *J. Passenger Cars*, vol. 97, sec. 4, 1988, pp. 4.200–4.214.
26. *CRC Handbook of Tables for Applied Engineering Science*, 2d ed., CRC Press, Boca Raton, FL, 1973.
27. T. Inui, "Wavemaking Resistance of Ships," *Trans. Soc. Nav. Arch. Marine Engrs.*, vol. 70, 1962, pp. 283–326.
28. L. Larsson, "CFD in Ship Design—Prospects and Limitations," *Ship Technology Research*, vol. 44, no. 3, July 1997, pp. 133–154.
29. R. L. Street, G. Z. Watters, and J. K. Vennard, *Elementary Fluid Mechanics*, 7th ed., Wiley, New York, 1995.
30. J. D. Anderson, Jr., *Modern Compressible Flow: with Historical Perspective*, 3rd ed., McGraw-Hill, New York, 2002.
31. J. D. Anderson, Jr., *Hypersonic and High Temperature Gas Dynamics*, AIAA, Reston, VA, 2000.
32. J. Rom, *High Angle of Attack Aerodynamics: Subsonic, Transonic, and Supersonic Flows*, Springer-Verlag, New York, 1992.
33. S. Vogel, "Drag and Reconfiguration of Broad Leaves in High Winds," *J. Exp. Bot.*, vol. 40, no. 217, August 1989, pp. 941–948.
34. S. Vogel, *Life in Moving Fluids*, Princeton University Press 2d ed., Princeton, NJ, 1996.
35. J. A. C. Humphrey (ed.), *Proceedings 2d International Symposium on Mechanics of Plants, Animals, and Their Environment*, Engineering Foundation, New York, January 2000.
36. D. D. Joseph, R. Bai, K. P. Chen, and Y. Y. Renardy, "Core-Annular Flows," *Annu. Rev. Fluid Mech.*, vol. 29, 1997, pp. 65–90.

37. J. W. Hoyt and R. H. J. Sellin, "Scale Effects in Polymer Solution Pipe Flow," *Experiments in Fluids*, vol. 15, no. 1, June 1993, pp. 70–74.
38. S. Nakao, "Application of V-Shape Riblets to Pipe Flows," *J. Fluids Eng.*, vol. 113, December 1991, pp. 587–590.
39. P. Thiede (ed.), *Aerodynamic Drag Reduction Technologies*, Springer, New York, 2001.
40. C. L. Merkle and S. Deutsch, "Microbubble Drag Reduction in Liquid Turbulent Boundary Layers," *Applied Mechanics Reviews*, vol. 45, no. 3 part 1, March 1992, pp. 103–127.
41. K. S. Choi and G. E. Karniadakis, "Mechanisms on Transverse Motions in Turbulent Wall Flows," *Annual Review of Fluid Mechanics*, vol. 35, 2003, pp. 45–62.
42. C. J. Roy, J. Payne, and M. McWherter-Payne, "RANS Simulations of a Simplified Tractor-Trailer Geometry," *J. Fluids Engineering*, vol. 128, Sept. 2006, pp. 1083–1089.
43. *Evolution of Flight*, Internet URL <<http://www.flight100.org>>.
44. J. D. Anderson Jr., *A History of Aerodynamics*, Cambridge University Press, New York, 1999.
45. Y. Tsuji, Y. Morikawa, and O. Mizuno, "Experimental Measurement of the Magnus Force on a Rotating Sphere at Low Reynolds Numbers," *Journal of Fluids Engineering*, vol. 107, 1985, pp. 484–488.
46. R. Clift, J. R. Grace, and M. E. Weber, *Bubbles, Drops and Particles*, Dover, NY, 2005.
47. M. Gad-el-Hak, "Flow Control: The Future," *Journal of Aircraft*, vol. 38, no. 3, 2001, pp. 402–418.
48. D. Geropp and H. J. Odenthal, "Drag Reduction of Motor Vehicles by Active Flow Control Using the Coanda Effect," *Experiments in Fluids*, vol. 28, no. 1, 2000, pp. 74–85.
49. Z. Zapryanov and S. Tabakova, *Dynamics of Bubbles, Drops, and Rigid Particles*, Kluwer Academic Pub., New York, 1998.
50. D. G. Karamanev, and L. N. Nikolov, "Freely Rising Spheres Do Not Obey Newton's Law for Free Settling," *AIChE Journal*, vol. 38, no. 1, Nov. 1992, pp. 1843–1846.
51. Katz J., *Race-Car Aerodynamics*, Robert Bentley Inc., Cambridge, MA, 2003.
52. A. S. Brown, "More than 12,000 Miles to the Gallon," *Mechanical Engineering*, January 2006, p. 64.
53. D. M. Bushnell, "Aircraft Drag Reduction: A Review," *Proceedings of the Institution of Mechanical Engineers, Part G: Journal of Aerospace Engineering*, vol. 217, no. 1, 2003, pp. 1–18.
54. D. B. Spalding, "A Single Formula for the Law of the Wall," *J. Appl. Mechanics*, vol. 28, no. 3, 1961, pp. 444–458.
55. D. G. Fertis, "New Airfoil-Design Concept with Improved Aerodynamic Characteristics," *J. Aerospace Engineering*, vol. 7, no. 3, July 1994, pp. 328–339.
56. F. Finaish and S. Witherspoon, "Aerodynamic Performance of an Airfoil with Step-Induced Vortex for Lift Augmentation", *J. Aerospace Engineering*, vol. 11, no. 1, Jan. 1998, pp. 9–16.
57. D. S. Miklosovic et al., "Leading Edge Tubercles Delay Stall on Humpback Whale," *Physics of Fluids*, vol. 16, no. 5, May 2004, pp. L39–L42.
58. R. McCallen, J. Ross, and F. Browand, *The Aerodynamics of Heavy Vehicles: Trucks, Buses, and Trains*, Springer-Verlag, New York, 2005.
59. J. R. Cruz et al., "Wind Tunnel Testing of Various Disk-Gap-Band Parachutes," AIAA Paper 2003-2129, 17th AIAA Aerodynamic Decelerator Systems Conference, May 2003.



Until they reach shallow water and feel the bottom, ocean waves are almost frictionless. Waves are created by winds, especially storms. Long waves—large distances between crests—travel the fastest and decay the slowest. Short waves decay more quickly but are still nearly frictionless. The pictured long waves, breaking on the beach in Narragansett, Rhode Island, might have been formed from a storm off the coast of Africa. The theory of ocean waves [21] is based almost entirely upon frictionless flow. (*Photo courtesy of Ellen Emerson White.*)

# Chapter 8


## Potential Flow and Computational Fluid Dynamics

**Motivation.** The basic partial differential equations of mass, momentum, and energy were discussed in Chap. 4. A few solutions were then given for incompressible *viscous* flow in Sec. 4.10. The viscous solutions were limited to simple geometries and unidirectional flows, where the difficult nonlinear convective terms were neglected. Potential flows are not limited by such nonlinear terms. Then, in Chap. 7, we found an approximation: patching *boundary layer flows* onto an outer inviscid flow pattern. For more complicated viscous flows, we found no theory or solutions, just experimental data.

The purposes of the present chapter are (1) to explore examples of potential theory and (2) to indicate some flows that can be approximated by computational fluid dynamics (CFD). The combination of these two gives us a good picture of incompressible-flow theory and its relation to experiment. One of the most important applications of potential-flow theory is to aerodynamics and marine hydrodynamics. First, however, we will review and extend the concepts of Ch. 4.

### 8.1 Introduction and Review

Figure 8.1 reminds us of the problems to be faced. A free stream approaches two closely spaced bodies, creating an “internal” flow between them and “external” flows above and below them. The fronts of the bodies are regions of favorable gradient (decreasing pressure along the surface), and the boundary layers will be attached and thin: Inviscid theory will give excellent results for the outer flow if  $\text{Re} > 10^4$ . For the internal flow between bodies, the boundary layers will grow and eventually meet, and the inviscid core vanishes. Inviscid theory works well in a “short” duct  $L/D < 10$ , such as the nozzle of a wind tunnel. For longer ducts we must estimate boundary layer growth and be cautious about using inviscid theory.

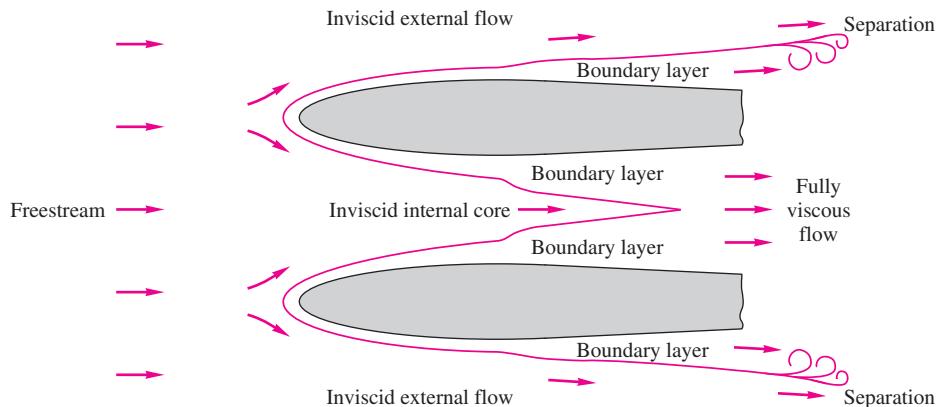

**Fig. 8.1** Patching viscous and inviscid flow regions. Potential theory in this chapter does not apply to the boundary layer regions

For the external flows above and below the bodies in Fig. 8.1, inviscid theory should work well for the outer flows, until the surface pressure gradient becomes adverse (increasing pressure) and the boundary layer separates or stalls. After the separation point, boundary layer theory becomes inaccurate, and the outer flow streamlines are deflected and have a strong interaction with the viscous near-wall regions. The theoretical analysis of separated-flow regions is an active research area at present.

### Review of Velocity Potential Concepts

Recall from Sec. 4.9 that if viscous effects are neglected, low-speed flows are irrotational,  $\nabla \times \mathbf{V} = 0$ , and the velocity potential  $\phi$  exists, such that

$$\mathbf{V} = \nabla\phi \quad \text{or} \quad u = \frac{\partial\phi}{\partial x} \quad v = \frac{\partial\phi}{\partial y} \quad w = \frac{\partial\phi}{\partial z} \quad (8.1)$$

The continuity equation (4.73),  $\nabla \cdot \mathbf{V} = 0$ , reduces to Laplace's equation for  $\phi$ :

$$\boxed{\nabla^2\phi = \frac{\partial^2\phi}{\partial x^2} + \frac{\partial^2\phi}{\partial y^2} + \frac{\partial^2\phi}{\partial z^2} = 0} \quad (8.2)$$

and the momentum equation (4.74) reduces to Bernoulli's equation:

$$\boxed{\frac{\partial\phi}{\partial t} + \frac{p}{\rho} + \frac{1}{2}V^2 + gz = \text{const} \quad \text{where } V = |\nabla\phi|} \quad (8.3)$$

Typical boundary conditions are known free-stream conditions

$$\text{Outer boundaries:} \quad \text{Known } \frac{\partial\phi}{\partial x}, \frac{\partial\phi}{\partial y}, \frac{\partial\phi}{\partial z} \quad (8.4)$$

and no velocity normal to the boundary at the body surface:

$$\text{Solid surfaces:} \quad \frac{\partial\phi}{\partial n} = 0 \quad \text{where } n \text{ is perpendicular to body} \quad (8.5)$$

Unlike the no-slip condition in viscous flow, here there is *no* condition on the tangential surface velocity  $V_s = \partial\phi/\partial s$ , where  $s$  is the coordinate along the surface. This velocity is determined as part of the solution to the problem.

Occasionally the problem involves a free surface, for which the boundary pressure is known and equal to  $p_a$ , usually a constant. The Bernoulli equation (8.3) then supplies a relation at the surface between  $V$  and the elevation  $z$  of the surface. For steady flow,

$$\text{Free surface:} \quad V^2 = |\nabla\phi|^2 = \text{const} - 2g z_{\text{surf}} \quad (8.6)$$

It should be clear to the reader that this use of Laplace's equation, with known values of the derivative of  $\phi$  along the boundaries, is much easier than a direct attack using the fully viscous Navier-Stokes equations. The analysis of Laplace's equation is very well developed and is termed *potential theory*, with whole books written about its application to fluid mechanics [1 to 4]. There are many analytical techniques, including superposition of elementary functions, conformal mapping [4], numerical finite differences [5], numerical finite elements [6], numerical boundary elements [7], and electric or mechanical analogs [8] that are now outdated. Having found  $\phi(x, y, z, t)$  from such an analysis, we then compute  $V$  by direct differentiation in Eq. (8.1), after which we compute  $p$  from Eq. (8.3). The procedure is quite straightforward, and many interesting albeit idealized results can be obtained. A beautiful collection of computer-generated potential flow sketches is given by Kirchhoff [43].

## Review of Stream Function Concepts

Recall from Sec. 4.7 that if a flow is described by only two coordinates, the stream function  $\psi$  also exists as an alternate approach. For plane incompressible flow in  $xy$  coordinates, the correct form is

$$u = \frac{\partial\psi}{\partial y} \quad v = -\frac{\partial\psi}{\partial x} \quad (8.7)$$

The condition of irrotationality reduces to Laplace's equation for  $\psi$  also:

$$2\omega_z = 0 = \frac{\partial v}{\partial x} - \frac{\partial u}{\partial y} = \frac{\partial}{\partial x} \left( -\frac{\partial\psi}{\partial x} \right) - \frac{\partial}{\partial y} \left( \frac{\partial\psi}{\partial y} \right)$$

or

$$\frac{\partial^2\psi}{\partial x^2} + \frac{\partial^2\psi}{\partial y^2} = 0$$

(8.8)


The boundary conditions again are known velocity in the stream and no flow through any solid surface:

$$\text{Free stream:} \quad \text{Known } \frac{\partial\psi}{\partial x}, \frac{\partial\psi}{\partial y} \quad (8.9a)$$

$$\text{Solid surface:} \quad \psi_{\text{body}} = \text{const} \quad (8.9b)$$

Equation (8.9b) is particularly interesting because *any* line of constant  $\psi$  in a flow can therefore be interpreted as a body shape and may lead to interesting applications.

For the applications in this chapter, we may compute either  $\phi$  or  $\psi$  or both, and the solution will be an *orthogonal flow net* as in Fig. 8.2. Once found, either set of lines may be considered the  $\phi$  lines, and the other set will be the  $\psi$  lines. Both sets of lines are laplacian and could be useful.

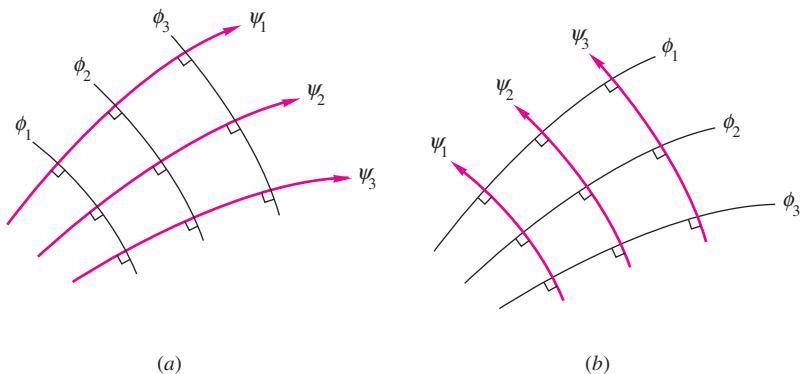

**Fig. 8.2** Streamlines and potential lines are orthogonal and may reverse roles if results are useful:  
(a) typical inviscid flow pattern;  
(b) same as (a) with roles reversed.

### Plane Polar Coordinates

Many solutions in this chapter are conveniently expressed in polar coordinates  $(r, \theta)$ . Both the velocity components and the differential relations for  $\phi$  and  $\psi$  are then changed, as follows:

$$v_r = \frac{\partial \phi}{\partial r} = \frac{1}{r} \frac{\partial \psi}{\partial \theta} \quad v_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta} = -\frac{\partial \psi}{\partial r} \quad (8.10)$$

Laplace's equation takes the form

$$\frac{1}{r} \frac{\partial}{\partial r} \left( r \frac{\partial \phi}{\partial r} \right) + \frac{1}{r^2} \frac{\partial^2 \phi}{\partial \theta^2} = 0 \quad (8.11)$$

Exactly the same equation holds for the polar-coordinate form of  $\psi(r, \theta)$ .

An intriguing facet of potential flow with no free surface is that the governing equations (8.2) and (8.8) contain no parameters, nor do the boundary conditions. Therefore the solutions are purely geometric, depending only on the body shape, the free-stream orientation, and—surprisingly—the position of the rear stagnation point.<sup>1</sup> There is no Reynolds, Froude, or Mach number to complicate the dynamic similarity. Inviscid flows are kinematically similar without additional parameters—recall Fig. 5.6a.

## 8.2 Elementary Plane Flow Solutions


The present chapter is a detailed introductory study of inviscid incompressible flows, especially those that possess both a stream function and a velocity potential. Many solutions make use of the superposition principle, so we begin with the three elementary building blocks illustrated in Fig. 8.3: (a) a uniform stream in the  $x$  direction, (b) a line source or sink at the origin, and (c) a line vortex at the origin.

### Uniform Stream in the $x$ Direction

A uniform stream  $\mathbf{V} = \mathbf{i}U$ , as in Fig. 8.3a, possesses both a stream function and a velocity potential, which may be found as follows:

$$u = U = \frac{\partial \phi}{\partial x} = \frac{\partial \psi}{\partial y} \quad v = 0 = \frac{\partial \phi}{\partial y} = -\frac{\partial \psi}{\partial x}$$

<sup>1</sup>The rear stagnation condition establishes the net amount of “circulation” about the body, giving rise to a lift force. Otherwise the solution could not be unique. See Sec. 8.4.

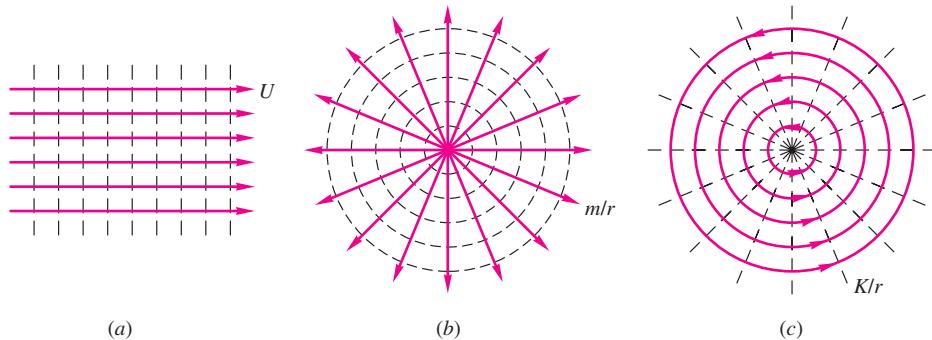

**Fig. 8.3** Three elementary plane potential flows. Solid lines are streamlines; dashed lines are potential lines.

We may integrate each expression and discard the constants of integration, which do not affect the velocities in the flow. The results are

$$\text{Uniform stream } iU: \quad \psi = Uy \quad \phi = Ux \quad (8.12)$$

The streamlines are horizontal straight lines ( $y = \text{const}$ ), and the potential lines are vertical ( $x = \text{const}$ )—that is, orthogonal to the streamlines, as expected.

### Line Source or Sink at the Origin

Suppose that the  $z$  axis were a sort of thin pipe manifold through which fluid issued at total rate  $Q$  uniformly along its length  $b$ . Looking at the  $xy$  plane, we would see a cylindrical radial outflow or *line source*, as sketched in Fig. 8.3b. Plane polar coordinates are appropriate (see Fig. 4.2), and there is no circumferential velocity. At any radius  $r$ , the velocity is

$$v_r = \frac{Q}{2\pi r b} = \frac{m}{r} = \frac{1}{r} \frac{\partial \psi}{\partial \theta} = \frac{\partial \phi}{\partial r} \quad v_\theta = 0 = -\frac{\partial \psi}{\partial r} = \frac{1}{r} \frac{\partial \phi}{\partial \theta}$$

where we have used the polar coordinate forms of the stream function and the velocity potential. Integrating and again discarding the constants of integration, we obtain the proper functions for this simple radial flow:

$$\text{Line source or sink:} \quad \psi = m\theta \quad \phi = m \ln r \quad (8.13)$$

where  $m = Q/(2\pi b)$  is a constant, positive for a source, negative for a sink. As shown in Fig. 8.3b, the streamlines are radial spokes (constant  $\theta$ ), and the potential lines are circles (constant  $r$ ).

### Line Irrotational Vortex

A (two-dimensional) line vortex is a purely circulating steady motion,  $v_\theta = f(r)$  only,  $v_r = 0$ . This satisfies the continuity equation identically, as may be checked from Eq. (4.12b). We may also note that a variety of velocity distributions  $v_\theta(r)$  satisfy the  $\theta$  momentum equation of a viscous fluid, Eq. (D.6). We may show, as a problem exercise, that only one function  $v_\theta(r)$  is *irrotational*; that is,  $\text{curl } \mathbf{V} = 0$ , and  $v_\theta = K/r$ , where  $K$  is a constant. This is sometimes called a *free vortex*, for which the stream function and velocity may be found:

$$v_r = 0 = \frac{1}{r} \frac{\partial \psi}{\partial \theta} = \frac{\partial \phi}{\partial r} \quad v_\theta = \frac{K}{r} = -\frac{\partial \psi}{\partial r} = \frac{1}{r} \frac{\partial \phi}{\partial \theta}$$

We may again integrate to determine the appropriate functions:

$$\psi = -K \ln r \quad \phi = K\theta \quad (8.14)$$

where  $K$  is a constant called the *strength* of the vortex. As shown in Fig. 8.3c, the streamlines are circles (constant  $r$ ), and the potential lines are radial spokes (constant  $\theta$ ). Note the similarity between Eqs. (8.13) and (8.14). A free vortex is a sort of reversed image of a source. The “bathtub vortex,” formed when water drains through a bottom hole in a tank, is a good approximation to the free-vortex pattern.

### Superposition: Source Plus an Equal Sink


Each of the three elementary flow patterns in Fig. 8.3 is an incompressible irrotational flow and therefore satisfies both plane “potential flow” equations  $\nabla^2 \psi = 0$  and  $\nabla^2 \phi = 0$ . Since these are linear partial differential equations, any *sum* of such basic solutions is also a solution. Some of these composite solutions are quite interesting and useful.

For example, consider a source  $+m$  at  $(x, y) = (-a, 0)$ , combined with a sink of equal strength  $-m$ , placed at  $(+a, 0)$ , as in Fig. 8.4. The resulting stream function is simply the sum of the two. In cartesian coordinates,

$$\psi = \psi_{\text{source}} + \psi_{\text{sink}} = m \tan^{-1} \frac{y}{x+a} - m \tan^{-1} \frac{y}{x-a}$$

Similarly, the composite velocity potential is

$$\phi = \phi_{\text{source}} + \phi_{\text{sink}} = \frac{1}{2} m \ln [(x+a)^2 + y^2] - \frac{1}{2} m \ln [(x-a)^2 + y^2]$$

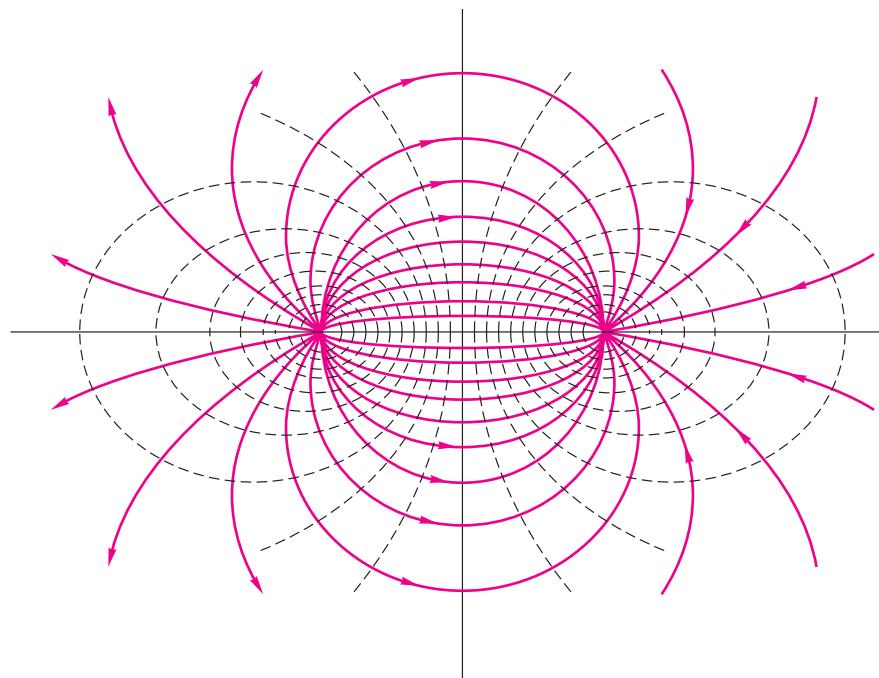

**Fig. 8.4** Potential flow due to a line source plus an equal line sink, from Eq. (8.15). Solid lines are streamlines; dashed lines are potential lines.

By using trigonometric and logarithmic identities, these may be simplified to

$$\begin{aligned} \text{Source plus sink: } \psi &= -m \tan^{-1} \frac{2ay}{x^2 + y^2 - a^2} \\ \phi &= \frac{1}{2} m \ln \frac{(x + a)^2 + y^2}{(x - a)^2 + y^2} \end{aligned} \quad (8.15)$$


These lines are plotted in Fig. 8.4 and are seen to be two families of orthogonal circles, with the streamlines passing through the source and sink and the potential lines encircling them. They are harmonic (laplacian) functions that are exactly analogous in electromagnetic theory to the electric current and electric potential patterns of a magnet with poles at  $(\pm a, 0)$ .

### Sink Plus a Vortex at the Origin

An interesting flow pattern, approximated in nature, occurs by superposition of a sink and a vortex, both centered at the origin. The composite stream function and velocity potential are

$$\text{Sink plus vortex: } \psi = m\theta - K \ln r \quad \phi = m \ln r + K\theta \quad (8.16)$$

When plotted, these form two orthogonal families of logarithmic spirals, as shown in Fig. 8.5. This is a fairly realistic simulation of a tornado (where the sink flow moves up the  $z$  axis into the atmosphere) or a rapidly draining bathtub vortex. At the center of a real (viscous) vortex, where Eq. (8.16) predicts infinite velocity, the actual circulating flow is highly *rotational* and approximates solid-body rotation  $v_\theta \approx Cr$ .

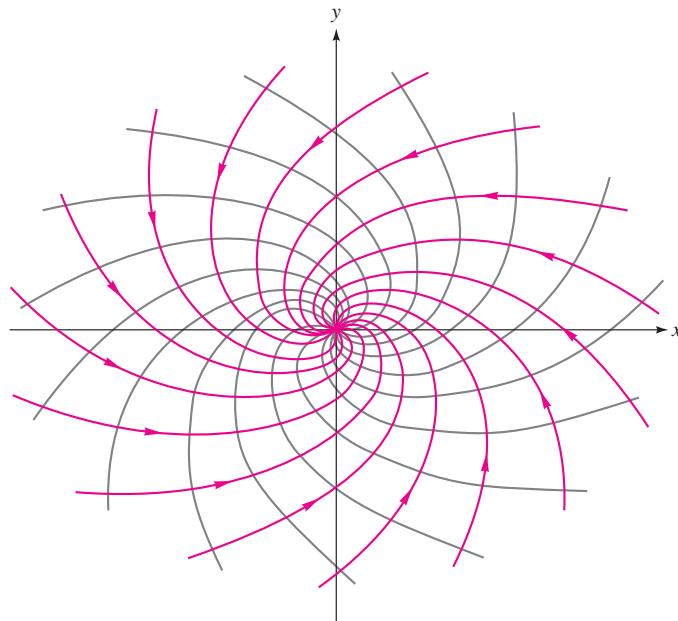

**Fig. 8.5** Superposition of a sink plus a vortex, Eq. (8.16), simulates a tornado.

### Uniform Stream Plus a Sink at the Origin: The Rankine Half-Body

If we superimpose a uniform  $x$ -directed stream against an isolated source, a half-body shape appears. If the source is at the origin, the combined stream function is, in polar coordinates,

$$\text{Uniform stream plus source: } \psi = Ur \sin \theta + m\theta \quad (8.17)$$

We can set this equal to various constants and plot the streamlines, as shown in Fig. 8.6. A curved, roughly elliptical, *half-body* shape appears, which separates the source flow from the stream flow. The body shape, which is named after the Scottish engineer W. J. M. Rankine (1820–1872), is formed by the particular streamlines  $\psi = \pm \pi m$ . The half-width of the body far downstream is  $\pi m/U$ . The upper surface may be plotted from the relation

$$r = \frac{m(\pi - \theta)}{U \sin \theta} \quad (8.18)$$

It is not a true ellipse. The nose of the body, which is a “stagnation” point where  $V = 0$ , stands at  $(x, y) = (-a, 0)$ , where  $a = m/U$ . The streamline  $\psi = 0$  also crosses this point—recall that streamlines can cross only at a stagnation point.


The cartesian velocity components are found by differentiation:

$$u = \frac{\partial \psi}{\partial y} = U + \frac{m}{r} \cos \theta \quad v = -\frac{\partial \psi}{\partial x} = \frac{m}{r} \sin \theta \quad (8.19)$$

Setting  $u = v = 0$ , we find a single stagnation point at  $\theta = 180^\circ$  and  $r = m/U$ , or  $(x, y) = (-m/U, 0)$ , as stated. The resultant velocity at any point is

$$V^2 = u^2 + v^2 = U^2 \left( 1 + \frac{a^2}{r^2} + \frac{2a}{r} \cos \theta \right) \quad (8.20)$$


where we have substituted  $m = Ua$ . If we evaluate the velocities along the upper surface  $\psi = \pi m$ , we find a maximum value  $U_{s,\max} \approx 1.26U$  at  $\theta = 63^\circ$ . This point is labeled in Fig. 8.6 and, by Bernoulli’s equation, is the point of minimum pressure on the body surface. After this point, the surface flow decelerates, the pressure rises, and the viscous layer grows thicker and more susceptible to “flow separation,” as we saw in Chap. 7.

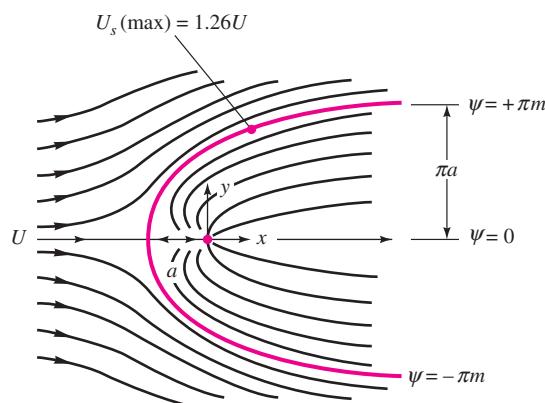

**Fig. 8.6** Superposition of a source plus a uniform stream forms a Rankine half-body.

**EXAMPLE 8.1**

The bottom of a river has a 4-m-high bump that approximates a Rankine half-body, as in Fig. E8.1. The pressure at point *B* on the bottom is 130 kPa, and the river velocity is 2.5 m/s. Use inviscid theory to estimate the water pressure at point *A* on the bump, which is 2 m above point *B*.

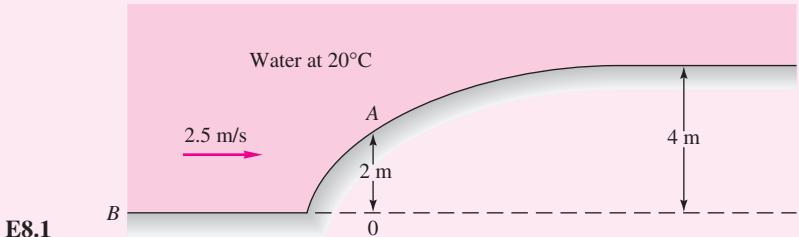**Solution**

As in all inviscid theories, we ignore the low-velocity boundary layers that form on solid surfaces due to the no-slip condition. From Eq. (8.18) and Fig. 8.6, the downstream bump half-height equals  $\pi a$ . Therefore, for our case,  $a = (4 \text{ m})/\pi = 1.27 \text{ m}$ . We have to find the spot where the bump height is half that much,  $h = 2 \text{ m} = \pi a/2$ . From Eq. (8.18) we may compute

$$r = h_A = \frac{a(\pi - \theta)}{\sin \theta} = \frac{\pi}{2} a \quad \text{or} \quad \theta = \frac{\pi}{2} = 90^\circ$$

Thus point *A* in Fig. E8.1 is directly above the (initially unknown) origin of coordinates (labeled *O* in Fig. E8.1) and is 1.27 m to the right of the nose of the bump. With  $r = \pi a/2$  and  $\theta = \pi/2$  known, we compute the velocity at point *A* from Eq. (8.20):

$$V_A^2 = U^2 \left[ 1 + \frac{a^2}{(\pi a/2)^2} + \frac{2a}{\pi a/2} \cos \frac{\pi}{2} \right] = 1.405 U^2$$

or

$$V_A \approx 1.185U = 1.185(2.5 \text{ m/s}) = 2.96 \text{ m/s}$$

For water at 20°C, take  $\rho = 998 \text{ kg/m}^3$  and  $\gamma = 9790 \text{ N/m}^3$ . Now, since the velocity and elevation are known at point *A*, we are in a position to use Bernoulli's inviscid, incompressible flow equation (4.120) to estimate  $p_A$  from the known properties at point *B* (on the same streamline):

$$\frac{p_A}{\gamma} + \frac{V_A^2}{2g} + z_A \approx \frac{p_B}{\gamma} + \frac{V_B^2}{2g} + z_B$$

$$\text{or} \quad \frac{p_A}{9790 \text{ N/m}^3} + \frac{(2.96 \text{ m/s})^2}{2(9.81 \text{ m/s}^2)} + 2 \text{ m} \approx \frac{130,000}{9790} + \frac{(2.5)^2}{2(9.81)} + 0$$

Solving, we find

$$p_A = (13.60 - 2.45)(9790) \approx 109,200 \text{ Pa}$$

*Ans.*

If the approach velocity is uniform, this should be a pretty good approximation, since water is relatively inviscid and its boundary layers are thin.

**Uniform Stream at an Angle  $\alpha$** 

If the uniform stream is written in plane polar coordinates, it becomes

$$\text{Uniform stream } \mathbf{i}U: \quad \psi = Ur \sin \theta \quad \phi = Ur \cos \theta \quad (8.21)$$

This makes it easier to superimpose, say, a stream and a source or vortex by using the same coordinates. If the uniform stream is moving at angle  $\alpha$  with respect to the  $x$  axis—that is,

$$u = U \cos \alpha = \frac{\partial \psi}{\partial y} = \frac{\partial \phi}{\partial x} \quad v = U \sin \alpha = -\frac{\partial \psi}{\partial x} = \frac{\partial \phi}{\partial y}$$

then by integration we obtain the correct functions for flow at an angle:

$$\psi = U(y \cos \alpha - x \sin \alpha) \quad \phi = U(x \cos \alpha + y \sin \alpha) \quad (8.22)$$

These expressions are useful in airfoil angle-of-attack problems (Sec. 8.7).

**Circulation**


The line vortex flow is irrotational everywhere except at the origin, where the vorticity  $\nabla \times \mathbf{V}$  is infinite. This means that a certain line integral called the *fluid circulation*  $\Gamma$  does not vanish when taken around a vortex center.

With reference to Fig. 8.7, the circulation is defined as the counterclockwise line integral, around a closed curve  $C$ , of arc length  $ds$  times the velocity component tangent to the curve:

$$\Gamma = \oint_C V \cos \alpha \, ds = \int_C \mathbf{V} \cdot d\mathbf{s} = \int_C (u \, dx + v \, dy + w \, dz) \quad (8.23)$$

From the definition of  $\phi$ ,  $\mathbf{V} \cdot d\mathbf{s} = \nabla \phi \cdot d\mathbf{s} = d\phi$  for an irrotational flow; hence normally  $\Gamma$  in an irrotational flow would equal the final value of  $\phi$  minus the initial value of  $\phi$ . Since we start and end at the same point, we compute  $\Gamma = 0$ , but not for vortex flow: With  $\phi = K\theta$  from Eq. (8.14) there is a change in  $\phi$  of amount  $2\pi K$  as we make one complete circle:

$$\text{Path enclosing a vortex:} \quad \Gamma = 2\pi K \quad (8.24)$$

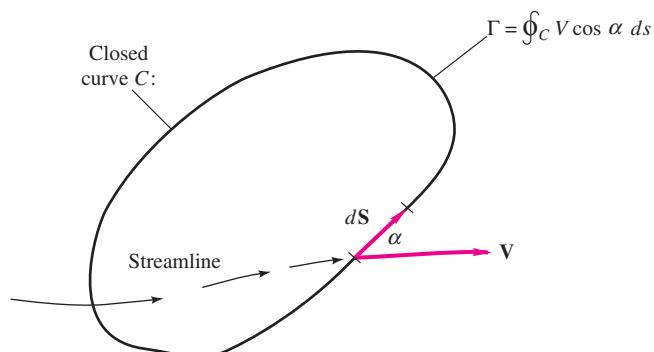

**Fig. 8.7** Definition of the fluid circulation  $\Gamma$ .

Alternatively the calculation can be made by defining a circular path of radius  $r$  around the vortex center, from Eq. (8.23):

$$\Gamma = \int_C v_\theta ds = \int_0^{2\pi} \frac{K}{r} r d\theta = 2\pi K$$

In general,  $\Gamma$  denotes the net algebraic strength of all the vortex filaments contained within the closed curve. In the next section we shall see that a region of finite circulation within a flowing stream will be subjected to a lift force proportional to both  $U_\infty$  and  $\Gamma$ .

One can show, by using Eq. (8.23), that a source or sink creates no circulation. If there are no vortices present, the circulation will be zero for any path enclosing any number of sources and sinks.


### 8.3 Superposition of Plane Flow Solutions

We can now form a variety of interesting potential flows by summing the velocity potential and stream functions of a uniform stream, source or sink, and vortex. Most of the results are classic, of course, needing only a brief treatment here. Superposition is valid because the basic equations, (8.2) and (8.8), are linear.

#### Graphical Method of Superposition

A simple means of accomplishing  $\psi_{\text{tot}} = \sum \psi_i$  graphically is to plot the individual stream functions separately and then look at their intersections. The value of  $\psi_{\text{tot}}$  at each intersection is the sum of the individual values  $\psi_i$  that cross there. Connecting intersections with the same value of  $\psi_{\text{tot}}$  creates the desired superimposed flow streamlines.

A simple example is shown in Fig. 8.8, summing two families of streamlines  $\psi_a$  and  $\psi_b$ . The individual components are plotted separately, and four typical intersections are shown. Dashed lines are then drawn through intersections representing the same sum of  $\psi_a + \psi_b$ . These dashed lines are the desired solution. Often this graphical method is a quick means of evaluating the proposed superposition before a full-blown numerical plot routine is executed.

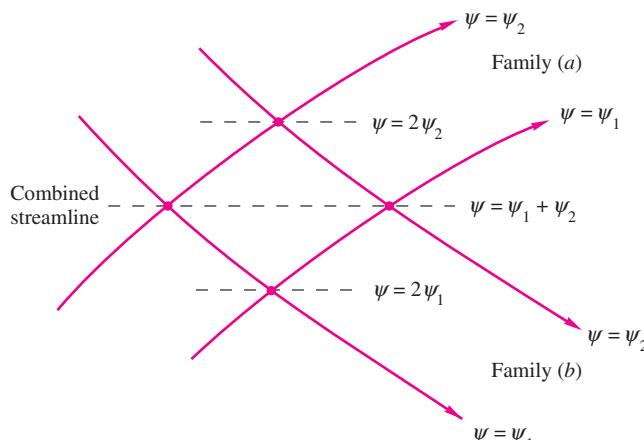

**Fig. 8.8** Intersections of elementary streamlines can be joined to form a combined streamline.


### Boundary Layer Separation on a Half-Body

Although the inviscid flow patterns seen in Fig. 8.9a and c are mirror images, their viscous (boundary layer) behavior is different. The body shape and the velocity along the surface are


$$V^2 = U_\infty^2 \left( 1 + \frac{a^2}{r^2} + \frac{2a}{r} \cos \theta \right) \quad \text{along} \quad r = \frac{m(\pi - \theta)}{U_\infty \sin \theta} \quad (8.25)$$

The computed surface velocities are plotted along the half-body contours in Fig. 8.9b and d as a function of arc length  $s/a$  measured from the stagnation point. These plots are also mirror images. However, if the nose is in front, Fig. 8.9b, the pressure gradient there is *favorable* (decreasing pressure along the surface). In contrast, the pressure gradient is *adverse* (increasing pressure along the surface) when the nose is in the rear, Fig. 8.9d, and boundary layer separation may occur.

Application to Fig. 8.9b of Thwaites's laminar boundary method from Eqs. (7.54) and (7.56) reveals that separation does not occur on the front nose of the half-body. Therefore Fig. 8.9a is a very realistic picture of streamlines past a half-body nose. In contrast, when applied to the tail, Fig. 8.9c, Thwaites's method predicts separation at about  $s/a \approx -2.2$ , or  $\theta \approx 110^\circ$ . Thus, if a half-body is a solid surface, Fig. 8.9c is *not* realistic and a broad separated wake will form. However, if the half-body tail is a *fluid line* separating the sink-directed flow from the outer stream, as in Example 8.2, then Fig. 8.9c is quite realistic and useful. Computations for turbulent boundary layer theory would be similar: separation on the tail, no separation on the nose.

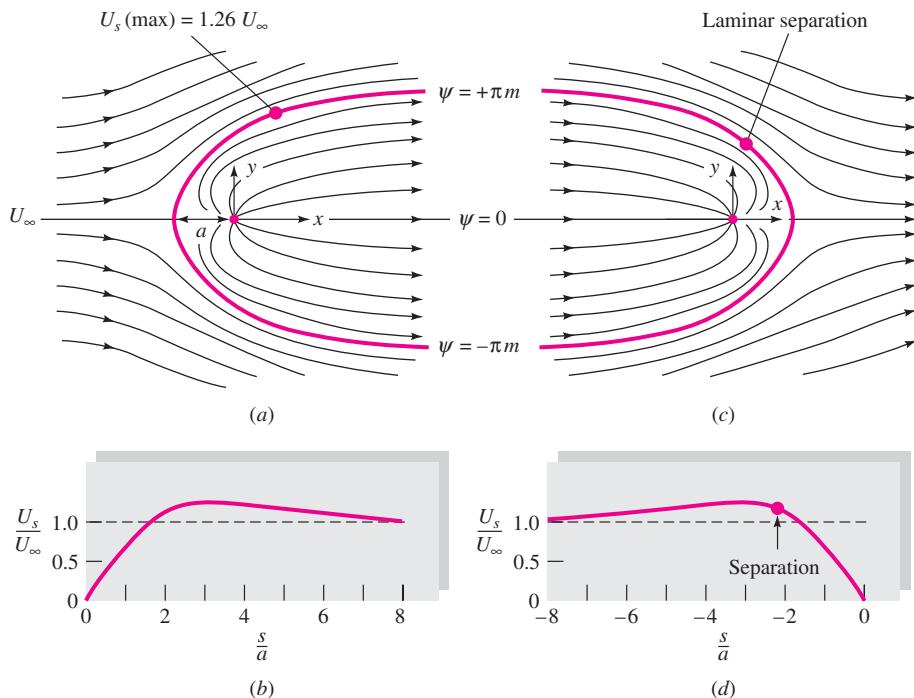

**Fig. 8.9** The Rankine half-body; pattern (c) is not found in a real fluid because of boundary layer separation. (a) Uniform stream plus a source equals a half-body; stagnation point at  $x = -a = -m/U_\infty$ . (b) Slight adverse gradient for  $s/a$  greater than 3.0: no separation. (c) Uniform stream plus a sink equals the rear of a half-body; stagnation point at  $x = a = m/U_\infty$ . (d) Strong adverse gradient for  $s/a > -3.0$ : separation.

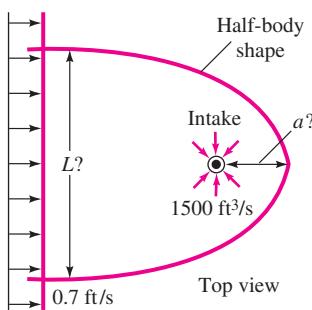

E8.2

**EXAMPLE 8.2**

An offshore power plant cooling-water intake sucks in 1500 ft<sup>3</sup>/s in water 30 ft deep, as in Fig. E8.2. If the tidal velocity approaching the intake is 0.7 ft/s, (a) how far downstream does the intake effect extend and (b) how much width  $L$  of tidal flow is entrained into the intake?

**Solution**

Recall from Eq. (8.13) that the sink strength  $m$  is related to the volume flow  $Q$  and the depth  $b$  into the paper:

$$m = \frac{Q}{2\pi b} = \frac{1500 \text{ ft}^3/\text{s}}{2\pi(30 \text{ ft})} = 7.96 \text{ ft}^2/\text{s}$$

Therefore from Fig. 8.9 the desired lengths  $a$  and  $L$  are

$$a = \frac{m}{U_\infty} = \frac{7.96 \text{ ft}^2/\text{s}}{0.7 \text{ ft/s}} = 11.4 \text{ ft} \quad \text{Ans. (a)}$$

$$L = 2\pi a = 2\pi(11.4 \text{ ft}) = 71 \text{ ft} \quad \text{Ans. (b)}$$

**Flow Past a Vortex**


Consider a uniform stream  $U_\infty$  in the  $x$  direction flowing past a vortex of strength  $K$  with center at the origin. By superposition the combined stream function is

$$\psi = \psi_{\text{stream}} + \psi_{\text{vortex}} = U_\infty r \sin \theta - K \ln r \quad (8.26)$$

The velocity components are given by

$$v_r = \frac{1}{r} \frac{\partial \psi}{\partial \theta} = U_\infty \cos \theta \quad v_\theta = -\frac{\partial \psi}{\partial r} = -U_\infty \sin \theta + \frac{K}{r} \quad (8.27)$$

The streamlines are plotted in Fig. 8.10 by the graphical method, intersecting the circular streamlines of the vortex with the horizontal lines of the uniform stream.

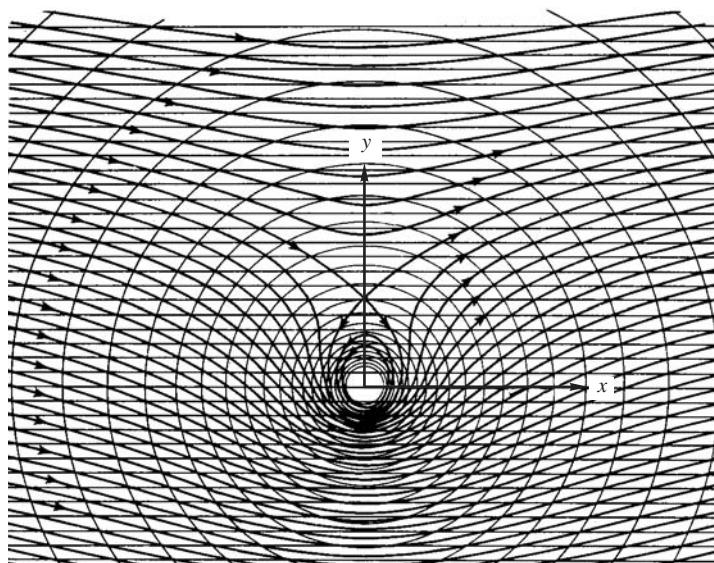

**Fig. 8.10** Flow of a uniform stream past a vortex constructed by the graphical method.

By setting  $v_r = v_\theta = 0$  from (8.27) we find a stagnation point at  $\theta = 90^\circ$ ,  $r = a = K/U_\infty$ , or  $(x, y) = (0, a)$ . This is where the counterclockwise vortex velocity  $K/r$  exactly cancels the stream velocity  $U_\infty$ .


Probably the most interesting thing about this example is that there is a nonzero lift force normal to the stream on the surface of any region enclosing the vortex, but we postpone this discussion until the next section.

### An Infinite Row of Vortices

Consider an infinite row of vortices of equal strength  $K$  and equal spacing  $a$ , as in Fig. 8.11a. This case is included here to illustrate the interesting concept of a *vortex sheet*.

From Eq. (8.14), the  $i$ th vortex in Fig. 8.11a has a stream function  $\psi_i = -K \ln r_i$ , so that the total infinite row has a combined stream function

$$\psi = -K \sum_{i=1}^{\infty} \ln r_i$$

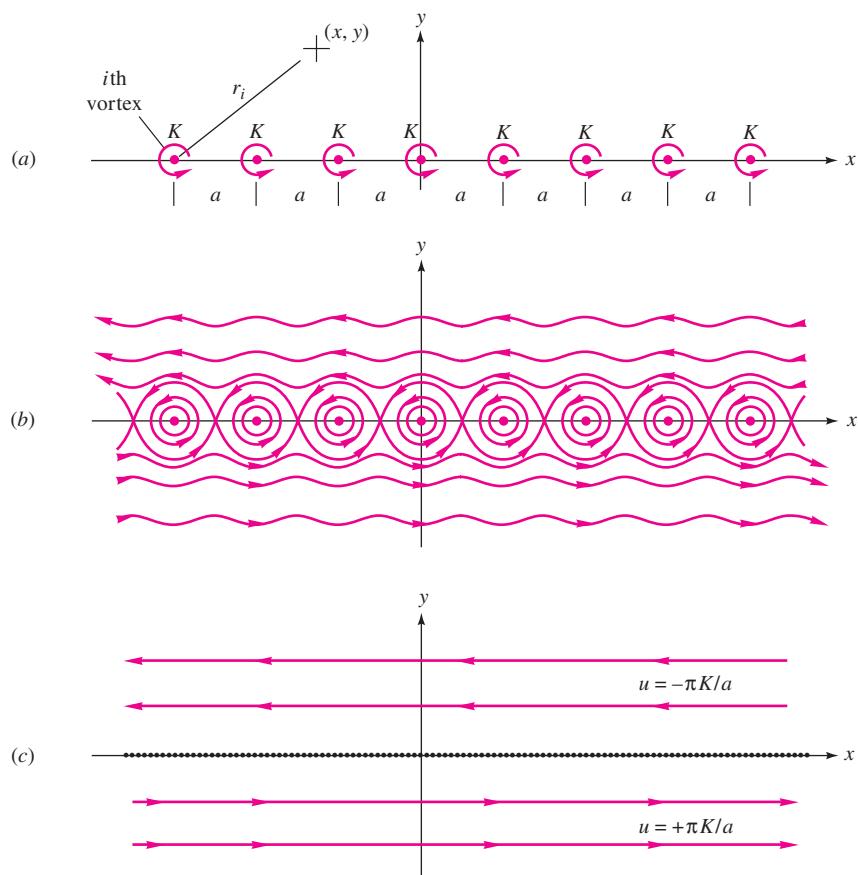

**Fig. 8.11** Superposition of vortices: (a) an infinite row of equal strength; (b) streamline pattern for part (a); (c) vortex sheet: part (b) viewed from afar.

It can be shown [2, Sec. 4.51] that this infinite sum of logarithms is equivalent to a closed-form function:

$$\psi = -\frac{1}{2}K \ln \left[ \frac{1}{2} \left( \cosh \frac{2\pi y}{a} - \cos \frac{2\pi x}{a} \right) \right] \quad (8.28)$$

Since the proof uses the complex variable  $z = x + iy$ ,  $i = (-1)^{1/2}$ , we are not going to show the details here.

The streamlines from Eq. (8.28) are plotted in Fig. 8.11b, showing what is called a *cat's-eye* pattern of enclosed flow cells surrounding the individual vortices. Above the cat's eyes the flow is entirely to the left, and below the cat's eyes the flow is to the right. Moreover, these left and right flows are uniform if  $|y| \gg a$ , which follows by differentiating Eq. (8.28):

$$u = \frac{\partial \psi}{\partial y} \Bigg|_{|y| \gg a} = \pm \frac{\pi K}{a}$$

where the plus sign applies below the row and the minus sign above the row. This uniform left and right streaming is sketched in Fig. 8.11c. We stress that this effect is induced by the row of vortices: There is no uniform stream approaching the row in this example.

### The Vortex Sheet

When Fig. 8.11b is viewed from afar, the streaming motion is uniform left above and uniform right below, as in Fig. 8.11c, and the vortices are packed so closely together that they are smudged into a continuous *vortex sheet*. The strength of the sheet is defined as

$$\gamma = \frac{2\pi K}{a} \quad (8.29)$$

and in the general case  $\gamma$  can vary with  $x$ . The circulation about any closed curve that encloses a short length  $dx$  of the sheet would be, from Eqs. (8.23) and (8.29),


$$d\Gamma = u_l dx - u_u dx = (u_l - u_u) dx = \frac{2\pi K}{a} dx = \gamma dx \quad (8.30)$$

where the subscripts  $l$  and  $u$  stand for lower and upper, respectively. Thus the sheet strength  $\gamma = d\Gamma/dx$  is the circulation per unit length of the sheet. Thus when a vortex sheet is immersed in a uniform stream,  $\gamma$  is proportional to the lift per unit length of any surface enclosing the sheet.

Note that there is no velocity normal to the sheet at the sheet surface. Therefore a vortex sheet can simulate a thin-body shape, like a plate or thin airfoil. This is the basis of the thin airfoil theory mentioned in Sec. 8.7.

### The Doublet

As we move far away from the source–sink pair of Fig. 8.4, the flow pattern begins to resemble a family of circles tangent to the origin, as in Fig. 8.12. This limit of vanishingly small distance  $a$  is called a *doublet*. To keep the flow strength large enough to exhibit decent velocities as  $a$  becomes small, we specify that the product

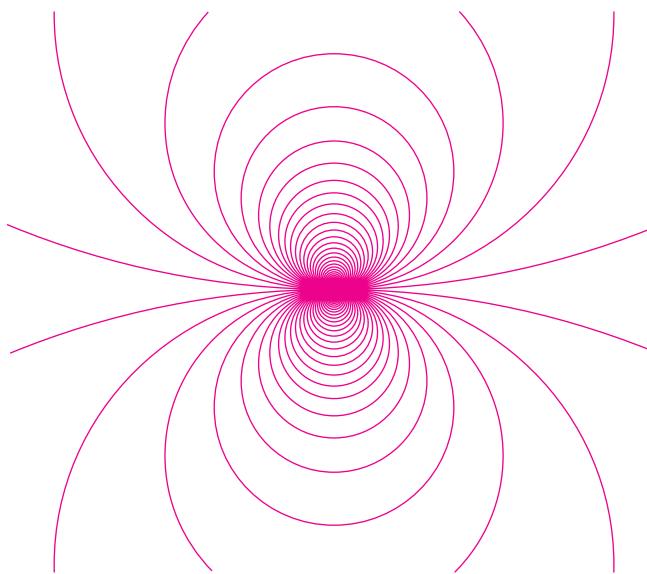

**Fig. 8.12** A doublet, or source–sink pair, is the limiting case of Fig. 4.13 viewed from afar. Streamlines are circles tangent to the  $x$  axis at the origin. This figure was prepared using the *contour* feature of MATLAB [34, 35].

$2am$  remain constant. Let us call this constant  $\lambda$ . Then the stream function of a doublet is

$$\psi = \lim_{\substack{a \rightarrow 0 \\ 2am = \lambda}} \left( -m \tan^{-1} \frac{2ay}{x^2 + y^2 - a^2} \right) = -\frac{2amy}{x^2 + y^2} = -\frac{\lambda y}{x^2 + y^2} \quad (8.31)$$

We have used the fact that  $\tan^{-1} \alpha \approx \alpha$  as  $\alpha$  becomes small. The quantity  $\lambda$  is called the *strength* of the doublet.

Equation (8.31) can be rearranged to yield

$$x^2 + \left( y + \frac{\lambda}{2\psi} \right)^2 = \left( \frac{\lambda}{2\psi} \right)^2$$

so that, as advertised, the streamlines are circles tangent to the origin with centers on the  $y$  axis. This pattern is sketched in Fig. 8.12.

Although the author has in the past laboriously sketched streamlines by hand, this is no longer necessary. Figure 8.12 was computer-drawn, using the *contour* feature of the student version of MATLAB [34]. Simply set up a grid of points, spell out the stream function, and call for a contour. For Fig. 8.12, the actual statements were

```
[X, Y] = meshgrid(-1:0.02:1);
PSI = -Y ./ (X.^2 + Y.^2);
contour(X, Y, PSI, 100)
```

This would produce 100 contour lines of  $\psi$  from Eq. (8.31), with  $\lambda = 1$  for convenience. The plot would include grid lines, scale markings, and a surrounding box, and the circles might look a bit elliptical. These blemishes can be eliminated with three

statements of cosmetic improvement:

```
axis square
grid off
axis off
```

The final plot, Fig. 8.12, has no markings but the streamlines themselves. MATLAB is thus a recommended tool and, in addition, has scores of other uses. All this chapter's problem assignments that call for "sketch the streamlines/potential lines" can be completed using this contour feature. For further details, consult Ref. 34.

In a similar manner the velocity potential of a doublet is found by taking the limit of Eq. (8.15) as  $a \rightarrow 0$  and  $2am = \lambda$ :

$$\phi_{\text{doublet}} = \frac{\lambda x}{x^2 + y^2}$$

or 
$$\left(x - \frac{\lambda}{2\phi}\right)^2 + y^2 = \left(\frac{\lambda}{2\phi}\right)^2 \quad (8.32)$$

The potential lines are circles tangent to the origin with centers on the  $x$  axis. Simply turn Fig. 8.12 clockwise  $90^\circ$  to visualize the  $\phi$  lines, which are everywhere normal to the streamlines.

The doublet functions can also be written in polar coordinates:

$$\psi = -\frac{\lambda \sin \theta}{r} \quad \phi = \frac{\lambda \cos \theta}{r} \quad (8.33)$$

These forms are convenient for the cylinder flows of the next section.

## 8.4 Plane Flow Past Closed-Body Shapes

A variety of closed-body external flows can be constructed by superimposing a uniform stream with sources, sinks, and vortices. The body shape will be closed only if the net source outflow equals the net sink inflow.

### The Rankine Oval


A cylindrical shape called a *Rankine oval*, which is long compared with its height, is formed by a source–sink pair aligned parallel to a uniform stream, as in Fig. 8.13a.

From Eqs. (8.12) and (8.15) the combined stream function is

$$\psi = U_\infty y - m \tan^{-1} \frac{2ay}{x^2 + y^2 - a^2} = U_\infty r \sin \theta + m(\theta_1 - \theta_2) \quad (8.34)$$

When streamlines of constant  $\psi$  are plotted from Eq. (8.34), an oval body shape appears, as in Fig. 8.13b. The half-length  $L$  and half-height  $h$  of the oval depend on the relative strength of source and stream—that is, the ratio  $m/(U_\infty a)$ , which equals 1.0 in Fig. 8.13b. The circulating streamlines inside the oval are uninteresting and not usually shown. The oval is the line  $\psi = 0$ .

There are stagnation points at the front and rear,  $x = \pm L$ , and points of maximum velocity and minimum pressure at the shoulders,  $y = \pm h$ , of the oval. All these

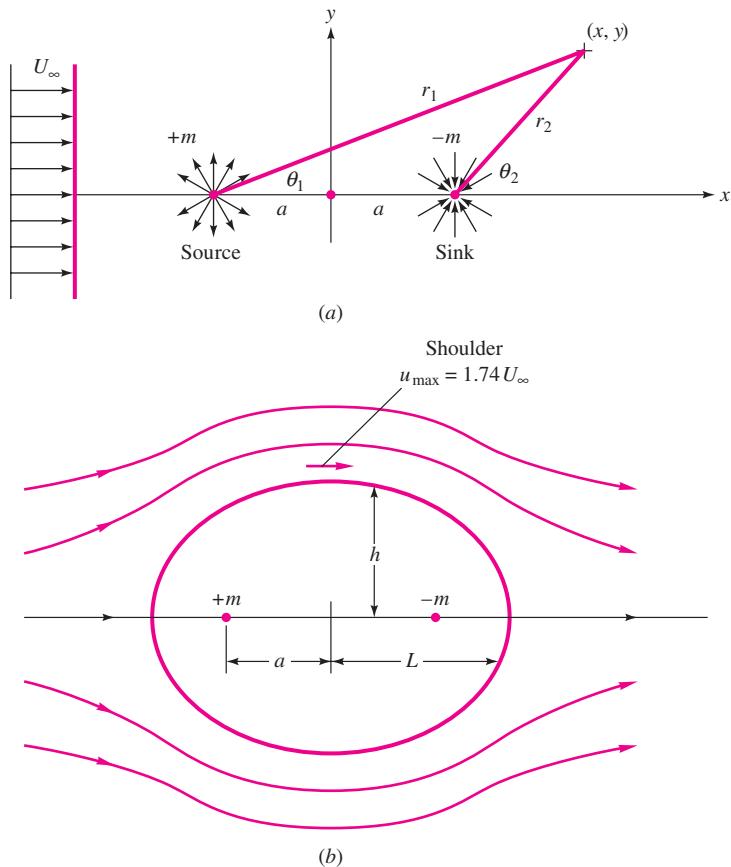

**Fig. 8.13** Flow past a Rankine oval:  
(a) uniform stream plus a source–sink pair; (b) oval shape and streamlines for  $m/(U_\infty a) = 1.0$ .

parameters are a function of the basic dimensionless parameter  $m/(U_\infty a)$ , which we can determine from Eq. (8.34):

$$\frac{h}{a} = \cot \frac{h/a}{2m/(U_\infty a)} \quad \frac{L}{a} = \left(1 + \frac{2m}{U_\infty a}\right)^{1/2} \quad (8.35)$$

$$\frac{u_{\max}}{U_\infty} = 1 + \frac{2m/(U_\infty a)}{1 + h^2/a^2}$$

As we increase  $m/(U_\infty a)$  from zero to large values, the oval shape increases in size and thickness from a flat plate of length  $2a$  to a huge, nearly circular cylinder. This is shown in Table 8.1. In the limit as  $m/(U_\infty a) \rightarrow \infty$ ,  $L/h \rightarrow 1.0$  and  $u_{\max}/U_\infty \rightarrow 2.0$ , which is equivalent to flow past a circular cylinder.

All the Rankine ovals except very thin ones have a large adverse pressure gradient on their leeward surface. Thus boundary layer separation will occur in the rear with a broad wake flow, and the inviscid pattern is unrealistic in that region.

### Flow Past a Circular Cylinder with Circulation

From Table 8.1 at large source strength the Rankine oval becomes a large circle, much greater in diameter than the source–sink spacing  $2a$ . Viewed on the scale of

**Table 8.1** Rankine Oval Parameters from Eq. (8.30)

$m/(U_\infty a)$	$h/a$	$L/a$	$L/h$	$u_{\max}/U_\infty$
0.0	0.0	1.0	$\infty$	1.0
0.01	0.031	1.010	32.79	1.020
0.1	0.263	1.095	4.169	1.187
1.0	1.307	1.732	1.326	1.739
10.0	4.435	4.583	1.033	1.968
100.0	14.130	14.177	1.003	1.997
$\infty$	$\infty$	$\infty$	1.000	2.000

the cylinder, this is equivalent to a uniform stream plus a doublet. We also throw in a vortex at the doublet center, which does not change the shape of the cylinder.

Thus the stream function for flow past a circular cylinder with circulation, centered at the origin, is a uniform stream plus a doublet plus a vortex:

$$\psi = U_\infty r \sin \theta - \frac{\lambda \sin \theta}{r} - K \ln r + \text{const} \quad (8.36)$$

The doublet strength  $\lambda$  has units of velocity times length squared. For convenience, let  $\lambda = U_\infty a^2$ , where  $a$  is a length, and let the arbitrary constant in Eq. (8.36) equal  $K \ln a$ . Then the stream function becomes

$$\psi = U_\infty \sin \theta \left( r - \frac{a^2}{r} \right) - K \ln \frac{r}{a} \quad (8.37)$$

The streamlines are plotted in Fig. 8.14 for four different values of the dimensionless vortex strength  $K/(U_\infty a)$ . For all cases the line  $\psi = 0$  corresponds to the circle  $r = a$ —that is, the shape of the cylindrical body. As circulation  $\Gamma = 2\pi K$  increases, the velocity becomes faster and faster below the cylinder and slower and slower above it. The velocity components in the flow are given by

$$v_r = \frac{1}{r} \frac{\partial \psi}{\partial \theta} = U_\infty \cos \theta \left( 1 - \frac{a^2}{r^2} \right) \quad (8.38)$$

$$v_\theta = -\frac{\partial \psi}{\partial r} = -U_\infty \sin \theta \left( 1 + \frac{a^2}{r^2} \right) + \frac{K}{r}$$


The velocity at the cylinder surface  $r = a$  is purely tangential, as expected:

$$v_r(r = a) = 0 \quad v_\theta(r = a) = -2U_\infty \sin \theta + \frac{K}{a} \quad (8.39)$$

For small  $K$ , two stagnation points appear on the surface at angles  $\theta_s$  where  $v_\theta = 0$ ; or, from Eq. (8.39),

$$\sin \theta_s = \frac{K}{2U_\infty a} \quad (8.40)$$

Figure 8.14a is for  $K = 0$ ,  $\theta_s = 0$  and  $180^\circ$ , or doubly symmetric inviscid flow past a cylinder with no circulation. Figure 8.14b is for  $K/(U_\infty a) = 1$ ,  $\theta_s = 30$  and  $150^\circ$ ; and

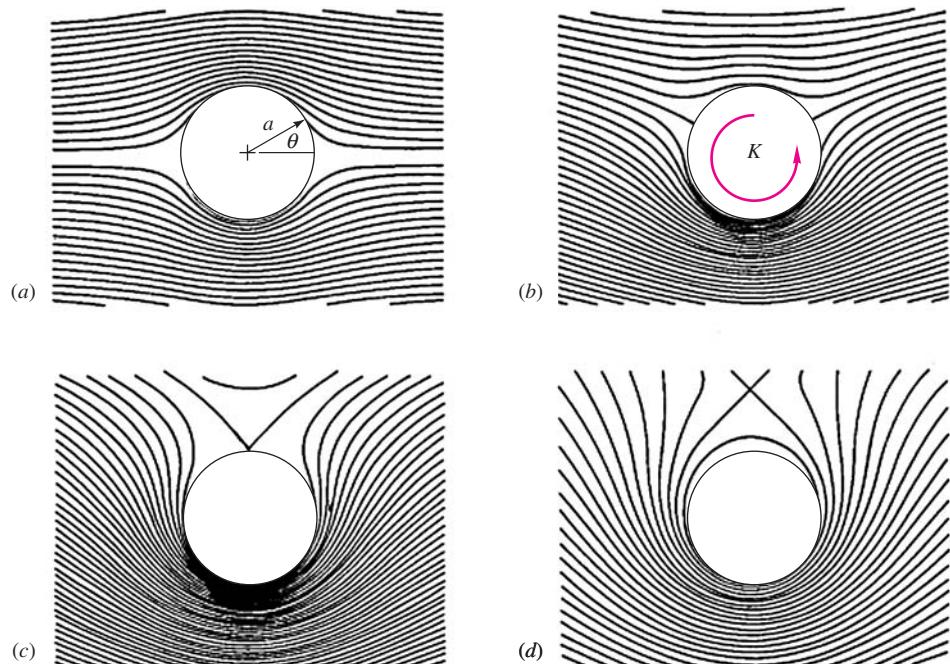

**Fig. 8.14** Flow past a circular cylinder with circulation for values of  $K/(U_\infty a)$  of (a) 0, (b) 1.0, (c) 2.0, and (d) 3.0.

Fig. 8.14c is the limiting case where the two stagnation points meet at the top,  $K/(U_\infty a) = 2$ ,  $\theta_s = 90^\circ$ .

For  $K > 2U_\infty a$ , Eq. (8.40) is invalid, and the single stagnation point is above the cylinder, as in Fig. 8.14d, at a point  $y = h$  given by

$$\frac{h}{a} = \frac{1}{2} [\beta + (\beta^2 - 4)^{1/2}] \quad \beta = \frac{K}{U_\infty a} > 2$$

In Fig. 8.14d,  $K/(U_\infty a) = 3.0$ , and  $h/a = 2.6$ .

### The Kutta-Joukowski Lift Theorem

The cylinder flows with circulation, Figs. 8.14b to d, develop an inviscid downward *lift* normal to the free stream, called the *Magnus-Robins force*. This lift is proportional to stream velocity and vortex strength. Its discovery, by experiment, has long been attributed to the German physicist Gustav Magnus, who observed it in 1853. It is now known [40, 45] that the brilliant British engineer Benjamin Robins first reported a lift force on a spinning body in 1761. We see from the streamline patterns that the velocity on top of the cylinder is less, and, thus, from Bernoulli's equation, the pressure is higher. On the bottom, we see tightly packed streamlines, high velocity, and low pressure; viscosity is neglected. Inviscid theory predicts this force.

The surface velocity is given by Eq. (8.39). From Bernoulli's equation (8.3), neglecting gravity, the surface pressure  $p_s$  is given by

$$p_\infty + \frac{1}{2} \rho U_\infty^2 = p_s + \frac{1}{2} \rho \left( -2U_\infty \sin \theta + \frac{K}{a} \right)^2$$

or

$$p_s = p_\infty + \frac{1}{2} \rho U_\infty^2 (1 - 4 \sin^2 \theta + 4\beta \sin \theta - \beta^2) \quad (8.41)$$

where  $\beta = K/(U_\infty a)$  and  $p_\infty$  is the free-stream pressure. If  $b$  is the cylinder depth into the paper, the drag  $D$  is the integral over the surface of the horizontal component of pressure force:

$$D = - \int_0^{2\pi} (p_s - p_\infty) \cos \theta ba d\theta$$

where  $p_s - p_\infty$  is substituted from Eq. (8.41). But the integral of  $\cos \theta$  times any power of  $\sin \theta$  over a full cycle  $2\pi$  is identically zero. Thus we obtain the (perhaps surprising) result

$$D(\text{cylinder with circulation}) = 0 \quad (8.42)$$

This is a special case of d'Alembert's paradox, mentioned in Sec. 1.2:

According to inviscid theory, the drag of any body of any shape immersed in a uniform stream is identically zero.

D'Alembert published this result in 1752 and pointed out himself that it did not square with the facts for real fluid flows. This unfortunate paradox caused everyone to over-react and reject all inviscid theory until 1904, when Prandtl first pointed out the profound effect of the thin viscous boundary layer on the flow pattern in the rear, as in Fig. 7.2b, for example.

The lift force  $L$  normal to the stream, taken positive upward, is given by summation of vertical pressure forces:

$$L = - \int_0^{2\pi} (p_s - p_\infty) \sin \theta ba d\theta$$

Since the integral over  $2\pi$  of any odd power of  $\sin \theta$  is zero, only the third term in the parentheses in Eq. (8.41) contributes to the lift:

$$L = -\frac{1}{2} \rho U_\infty^2 \frac{4K}{aU_\infty} ba \int_0^{2\pi} \sin^2 \theta d\theta = -\rho U_\infty (2\pi K) b$$

or

$$\boxed{\frac{L}{b} = -\rho U_\infty \Gamma} \quad (8.43)$$

Notice that the lift seems independent of the radius  $a$  of the cylinder. Actually, though, as we shall see in Sec. 8.7, the circulation  $\Gamma$  depends on the body size and orientation through a physical requirement.

Equation (8.43) was generalized by W. M. Kutta in 1902 and independently by N. Joukowski in 1906 as follows:

According to inviscid theory, the lift per unit depth of any cylinder of any shape immersed in a uniform stream equals  $\rho U_\infty \Gamma$ , where  $\Gamma$  is the total net circulation contained within the body shape. The direction of the lift is  $90^\circ$  from the stream direction, rotating opposite to the circulation.

The problem in airfoil analysis, Sec. 8.7, is thus to determine the circulation  $\Gamma$  as a function of airfoil shape and orientation.

### Lift and Drag of Rotating Cylinders<sup>2</sup>


The flows in Fig. 8.14 are mathematical: a doublet plus a vortex plus a uniform stream. The physical realization could be a rotating cylinder in a free stream. The no-slip condition would cause the fluid in contact with the cylinder to move tangentially at velocity  $v_\theta = a\omega$ , setting up a net circulation  $\Gamma$ . Measurement of forces on a spinning cylinder is very difficult, and no reliable drag data are known to the author. However, Tokumaru and Dimotakis [22] used a clever auxiliary scheme to measure lift forces at  $Re_D = 3800$ .

Figure 8.15 shows lift and drag coefficients, based on frontal area ( $2ab$ ), for a rotating cylinder at  $Re_D = 3800$ . The drag curve is from CFD calculations [41]. Reported CFD drag results, from several different authors, are quite controversial because they do not agree, even qualitatively. The writer feels that Ref. 41 gives the most reliable results. Note that the experimental  $C_L$  increases to a value of 15.3 at  $a\omega/U_\infty = 10$ . This contradicts an early theory of Prandtl, in 1926, that the maximum possible value of  $C_L$  would be  $4\pi \approx 12.6$ , corresponding to the flow conditions in Fig. 8.14c. The inviscid theory for lift would be:

$$C_L = \frac{L}{\frac{1}{2}\rho U_\infty^2(2ba)} = \frac{2\pi\rho U_\infty K b}{\rho U_\infty^2 ba} = \frac{2\pi v_{\theta s}}{U_\infty} \quad (8.44)$$

where  $v_{\theta s} = K/a$  is the peripheral speed of the cylinder.

Figure 8.15 shows that the theoretical lift from Eq. (8.44) is much too high, but the measured lift is quite respectable, much larger in fact than a typical airfoil of the same chord length, as in Fig. 7.25. Thus rotating cylinders have practical possibilities. The Flettner rotor ship built in Germany in 1924 employed rotating vertical cylinders that developed a thrust due to any winds blowing past the ship. The Flettner design did not gain any popularity, but such inventions may be more attractive in this era of high energy costs.

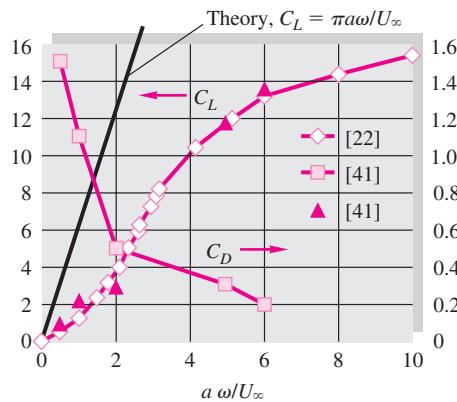

**Fig. 8.15** Drag and lift of a rotating cylinder of large aspect ratio at  $Re_D = 3800$ , after Tokumaru and Dimotakis [22] and Sengupta et al. [41].

<sup>2</sup>The writer is indebted to Prof. T. K. Sengupta of I.I.T. Kanpur for data and discussion for this subsection.

**EXAMPLE 8.3**

The experimental Flettner rotor sailboat at the University of Rhode Island is shown in Fig. E8.3. The rotor is 2.5 ft in diameter and 10 ft long and rotates at 220 r/min. It is driven by a small lawnmower engine. If the wind is a steady 10 kn and boat relative motion is neglected, what is the maximum thrust expected for the rotor? Assume standard air and water density.

**Solution**

Convert the rotation rate to  $\omega = 2\pi(220)/60 = 23.04 \text{ rad/s}$ . The wind velocity is 10 kn = 16.88 ft/s, so the velocity ratio is

$$\frac{a\omega}{U_\infty} = \frac{(1.25 \text{ ft})(23.04 \text{ rad/s})}{16.88 \text{ ft/s}} = 1.71$$

Using Fig. 8.15, we read  $C_D \approx 0.7$  and  $C_L \approx 2.5$ . From Table A.6, standard air density in BG units is 0.00238 slug/ft<sup>3</sup>. Then the estimated rotor lift and drag are

$$L = C_L \frac{1}{2} \rho U_\infty^2 2ba = (2.5) \frac{1}{2} \left( 0.00238 \frac{\text{slug}}{\text{ft}^3} \right) \left( 16.88 \frac{\text{ft}}{\text{s}} \right)^2 2(10 \text{ ft})(1.25 \text{ ft}) = 21.2 \text{ lbf}$$

$$D = C_D \frac{1}{2} \rho U_\infty^2 2ba = (0.7) \frac{1}{2} \left( 0.00238 \frac{\text{slug}}{\text{ft}^3} \right) \left( 16.88 \frac{\text{ft}}{\text{s}} \right)^2 2(10 \text{ ft})(1.25 \text{ ft}) = 5.9 \text{ lbf}$$

The maximum thrust available to the sailboat is the resultant of these two:

$$F = [(21.2)^2 + (5.9)^2]^{1/2} = 22.0 \text{ lbf} \quad \text{Ans.}$$

Note that water density did not enter into this calculation, which is a force due to *air*. If aligned along the boat's keel, this thrust will drive the boat through the water at a speed of about 4 kn.



**E8.3** (Courtesy of R. C. Lessmann, University of Rhode Island.)

*Comment:* For the sake of a numerical example, we have done something improper here. We have used data for  $Re_D = 3800$  to estimate forces when the rotor  $Re_D \approx 260,000$ . Do not do this in your real job after you graduate!

### The Kelvin Oval

A family of body shapes taller than they are wide can be formed by letting a uniform stream flow normal to a vortex pair. If  $U_\infty$  is to the right, the negative vortex  $-K$  is placed at  $y = +a$  and the counterclockwise vortex  $+K$  placed at  $y = -a$ , as in Fig. 8.16. The combined stream function is

$$\psi = U_\infty y - \frac{1}{2} K \ln \frac{x^2 + (y + a)^2}{x^2 + (y - a)^2} \quad (8.45)$$


The body shape is the line  $\psi = 0$ , and some of these shapes are shown in Fig. 8.16. For  $K/(U_\infty a) > 10$  the shape is within 1 percent of a Rankine oval (Fig. 8.13) turned 90°, but for small  $K/(U_\infty a)$  the waist becomes pinched in, and a figure-eight shape occurs at 0.5. For  $K/(U_\infty a) < 0.5$  the stream blasts right between the vortices and isolates two more or less circular body shapes, one surrounding each vortex.

A closed body of practically any shape can be constructed by proper superposition of sources, sinks, and vortices. See the advanced work in Refs. 1 to 3 for further details. A summary of elementary potential flows is given in Table 8.2.

### Potential Flow Analogs

For complicated potential flow geometries, one can resort to other methods than superposition of sources, sinks, and vortices. A variety of devices simulate solutions to Laplace's equation.

From 1897 to 1900 Hele-Shaw [9] developed a technique whereby laminar flow between very closely spaced parallel plates simulated potential flow when viewed

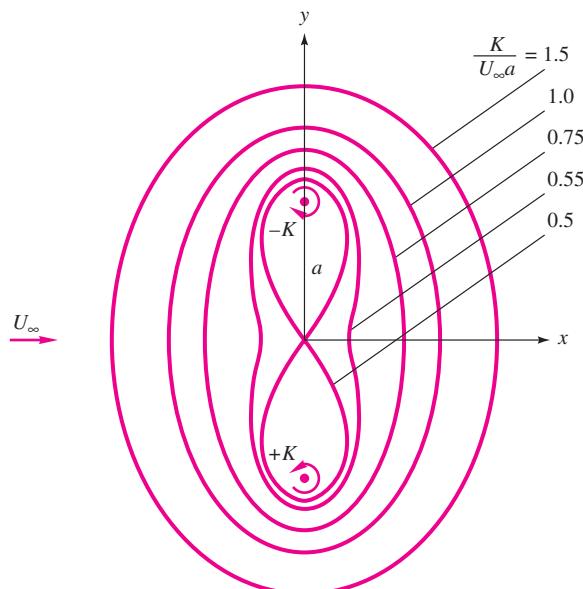

**Fig. 8.16** Kelvin oval body shapes as a function of the vortex strength parameter  $K/(U_\infty a)$ ; outer streamlines not shown.

**Table 8.2** Summary of Plane Incompressible Potential Flows

Type of flow	Potential functions	Remarks
Stream $iU$	$\psi = Uy$ $\phi = Ux$	See Fig. 8.3a
Line source ( $m > 0$ ) or sink ( $m < 0$ )	$\psi = m\theta$ $\phi = m \ln r$	See Fig. 8.3b
Line vortex	$\psi = -K \ln r$ $\phi = K\theta$	See Fig. 8.3c
Half-body	$\psi = Ur \sin \theta + m\theta$ $\phi = Ur \cos \theta + m \ln r$	See Fig. 8.9
Doublet	$\psi = \frac{-\lambda \sin \theta}{r}$ $\phi = \frac{\lambda \cos \theta}{r}$	See Fig. 8.12
Rankine oval	$\psi = Ur \sin \theta + m(\theta_1 - \theta_2)$	See Fig. 8.13
Cylinder with circulation	$\psi = U \sin \theta \left( r - \frac{a^2}{r} \right) - K \ln \frac{r}{a}$	See Fig. 8.14

from above the plates. Obstructions simulate body shapes, and dye streaks represent the streamlines. The Hele-Shaw apparatus makes an excellent laboratory demonstration of potential flow [10, pp. 197–198, 219–220]. Figure 8.17a illustrates Hele-Shaw (potential) flow through an array of cylinders, a flow pattern that would be difficult to analyze just using Laplace's equation. However beautiful this array pattern may be, it is not a good approximation to real (laminar viscous) array flow. Figure 8.17b shows experimental streakline patterns for a similar staggered-array flow at  $Re \approx 6400$ . We see that the interacting wakes of the real flow (Fig. 8.17b) cause intensive mixing and transverse motion, not the smooth streaming passage of the potential flow model (Fig. 8.17a). The moral is that this is an internal flow with multiple bodies and, therefore, not a good candidate for a realistic potential flow model.

Other flow-mapping techniques are discussed in Ref. 8. Electromagnetic fields also satisfy Laplace's equation, with voltage analogous to velocity potential and current lines analogous to streamlines. At one time commercial analog field plotters were available, using thin conducting paper cut to the shape of the flow geometry. Potential lines (voltage contours) were plotted by probing the paper with a potentiometer pointer. Hand-sketching “curvilinear square” techniques were also popular. The availability and the simplicity of computer potential flow methods [5 to 7] have made analog models obsolete.

#### EXAMPLE 8.4

A Kelvin oval from Fig. 8.16 has  $K/(U_\infty a) = 1.0$ . Compute the velocity at the top shoulder of the oval in terms of  $U_\infty$ .

#### Solution

We must locate the shoulder  $y = h$  from Eq. (8.45) for  $\psi = 0$  and then compute the velocity by differentiation. At  $\psi = 0$  and  $y = h$  and  $x = 0$ , Eq. (8.45) becomes

$$\frac{h}{a} = \frac{K}{U_\infty a} \ln \frac{h/a + 1}{h/a - 1}$$

With  $K/(U_\infty a) = 1.0$  and the initial guess  $h/a \approx 1.5$  from Fig. 8.16, we iterate and find the location  $h/a = 1.5434$ .


By inspection  $v = 0$  at the shoulder because the streamline is horizontal. Therefore the shoulder velocity is, from Eq. (8.45),

$$u \Big|_{y=h} = \frac{\partial \psi}{\partial y} \Big|_{y=h} = U_\infty + \frac{K}{h-a} - \frac{K}{h+a}$$


Introducing  $K = U_\infty a$  and  $h = 1.5434a$ , we obtain

$$u_{\text{shoulder}} = U_\infty(1.0 + 1.84 - 0.39) = 2.45U_\infty \quad \text{Ans.}$$

Because they are short-waisted compared with a circular cylinder, all the Kelvin ovals have shoulder velocity greater than the cylinder result  $2.0U_\infty$  from Eq. (8.39).

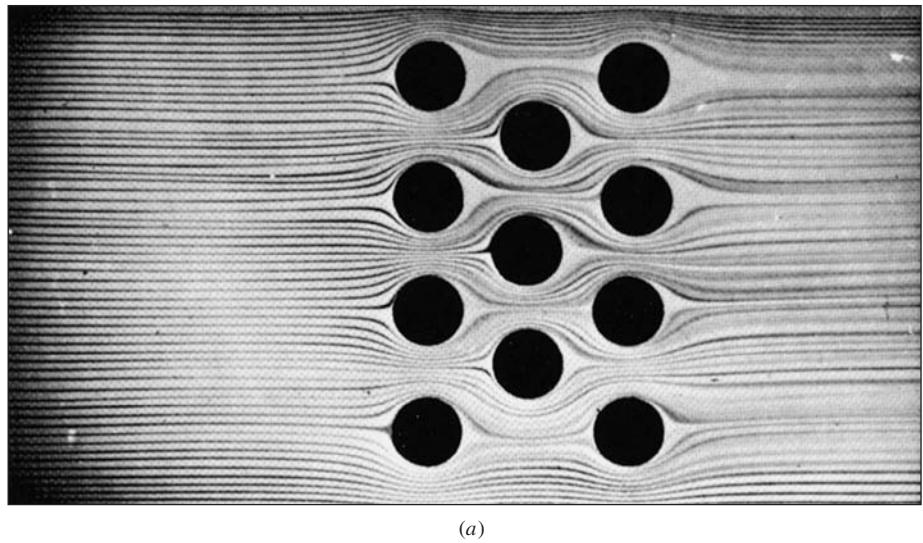

(a)

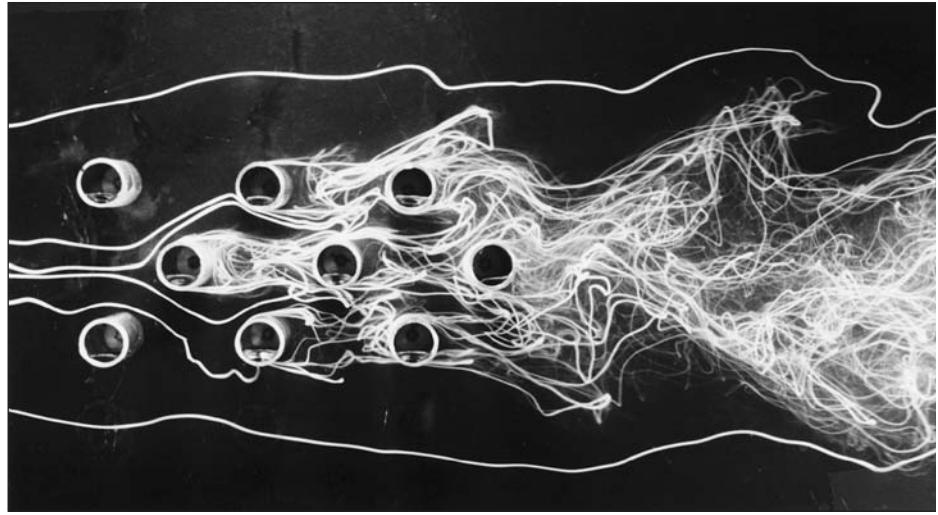

(b)

**Fig. 8.17** Flow past a staggered array of cylinders: (a) potential flow model using the Hele-Shaw apparatus (*TQ Education and Training Ltd.*); (b) experimental streaklines for actual staggered-array flow at  $\text{Re}_D \approx 6400$ . (From Ref. 36, Courtesy of Jack Hoyt, with the permission of the American Society of Mechanical Engineers.)

## 8.5 Other Plane Potential Flows<sup>3</sup>

References 2 to 4 treat many other potential flows of interest in addition to the cases presented in Secs. 8.3 and 8.4. In principle, any plane potential flow can be solved by the method of *conformal mapping*, by using the complex variable

$$z = x + iy \quad i = (-1)^{1/2}$$

It turns out that any arbitrary analytic function of this complex variable  $z$  has the remarkable property that both its real and its imaginary parts are solutions of Laplace's equation. If

$$\begin{aligned} f(z) &= f(x + iy) = f_1(x, y) + i f_2(x, y) \\ \text{then} \quad \frac{\partial^2 f_1}{\partial x^2} + \frac{\partial^2 f_1}{\partial y^2} &= 0 = \frac{\partial^2 f_2}{\partial x^2} + \frac{\partial^2 f_2}{\partial y^2} \end{aligned} \quad (8.46)$$

We shall assign the proof of this as Prob. W8.4. Even more remarkable if you have never seen it before is that lines of constant  $f_1$  will be everywhere perpendicular to lines of constant  $f_2$ :

$$\left( \frac{dy}{dx} \right)_{f_1=C} = -\frac{1}{(dy/dx)_{f_2=C}} \quad (8.47)$$

This is true for totally arbitrary  $f(z)$  as long as this function is analytic; that is, it must have a unique derivative  $df/dz$  at every point in the region.

The net result of Eqs. (8.46) and (8.47) is that the functions  $f_1$  and  $f_2$  can be interpreted to be the potential lines and streamlines of an inviscid flow. By long custom we let the real part of  $f(z)$  be the velocity potential and the imaginary part be the stream function:

$$f(z) = \phi(x, y) + i\psi(x, y) \quad (8.48)$$

We try various functions  $f(z)$  and see whether any interesting flow pattern results. Of course, most of them have already been found, and we simply report on them here.

We shall not go into the details, but there are excellent treatments of this complex-variable technique on both an introductory [4] and a more advanced [2, 3] level. The method is less important now because of the popularity of computer techniques.

As a simple example, consider the linear function

$$f(z) = U_\infty z = U_\infty x + iU_\infty y$$

It follows from Eq. (8.48) that  $\phi = U_\infty x$  and  $\psi = U_\infty y$ , which, we recall from Eq. (8.12), represents a uniform stream in the  $x$  direction. Once you get used to the complex variable, the solution practically falls in your lap.

To find the velocities, you may either separate  $\phi$  and  $\psi$  from  $f(z)$  and differentiate, or differentiate  $f$  directly:

$$\frac{df}{dz} = \frac{\partial \phi}{\partial x} + i \frac{\partial \psi}{\partial x} = -i \frac{\partial \phi}{\partial y} + \frac{\partial \psi}{\partial y} = u - iv \quad (8.49)$$

Thus the real part of  $df/dz$  equals  $u(x, y)$ , and the imaginary part equals  $-v(x, y)$ . To get a practical result, the derivative  $df/dz$  must exist and be unique, hence the requirement

<sup>3</sup>This section may be omitted without loss of continuity.

that  $f$  be an analytic function. For  $f(z) = U_\infty z$ ,  $df/dz = U_\infty = u$ , since it is real, and  $v = 0$ , as expected.

Sometimes it is convenient to use the polar coordinate form of the complex variable

$$z = x + iy = re^{i\theta} = r \cos \theta + ir \sin \theta$$

where

$$r = (x^2 + y^2)^{1/2} \quad \theta = \tan^{-1} \frac{y}{x}$$

This form is especially convenient when powers of  $z$  occur.

### Uniform Stream at an Angle of Attack

All the elementary plane flows of Sec. 8.2 have a complex-variable formulation. The uniform stream  $U_\infty$  at an angle of attack  $\alpha$  has the complex potential

$$f(z) = U_\infty z e^{-ia} \quad (8.50)$$

Compare this form with Eq. (8.22).

### Line Source at a Point $z_0$

Consider a line source of strength  $m$  placed off the origin at a point  $z_0 = x_0 + iy_0$ . Its complex potential is

$$f(z) = m \ln(z - z_0) \quad (8.51)$$

This can be compared with Eq. (8.13), which is valid only for the source at the origin. For a line sink, the strength  $m$  is negative.

### Line Vortex at a Point $z_0$

If a line vortex of strength  $K$  is placed at point  $z_0$ , its complex potential is

$$f(z) = -iK \ln(z - z_0) \quad (8.52)$$

to be compared with Eq. (8.14). Also compare to Eq. (8.51) to see that we reverse the meaning of  $\phi$  and  $\psi$  simply by multiplying the complex potential by  $-i$ .

### Flow around a Corner of Arbitrary Angle

Corner flow is an example of a pattern that cannot be conveniently produced by superimposing sources, sinks, and vortices. It has a strikingly simple complex representation:


$$f(z) = Az^n = Ar^n e^{in\theta} = Ar^n \cos n\theta + iAr^n \sin n\theta$$

where  $A$  and  $n$  are constants.

It follows from Eq. (8.48) that for this pattern

$$\phi = Ar^n \cos n\theta \quad \psi = Ar^n \sin n\theta \quad (8.53)$$

Streamlines from Eq. (8.53) are plotted in Fig. 8.18 for five different values of  $n$ . The flow is seen to represent a stream turning through an angle  $\beta = \pi/n$ . Patterns in Fig. 8.18d and e are not realistic on the downstream side of the corner, where separation will occur due to the adverse pressure gradient and sudden change of direction. In general, separation always occurs downstream of salient, or protruding corners, except in creeping flows at low Reynolds number  $Re < 1$ .

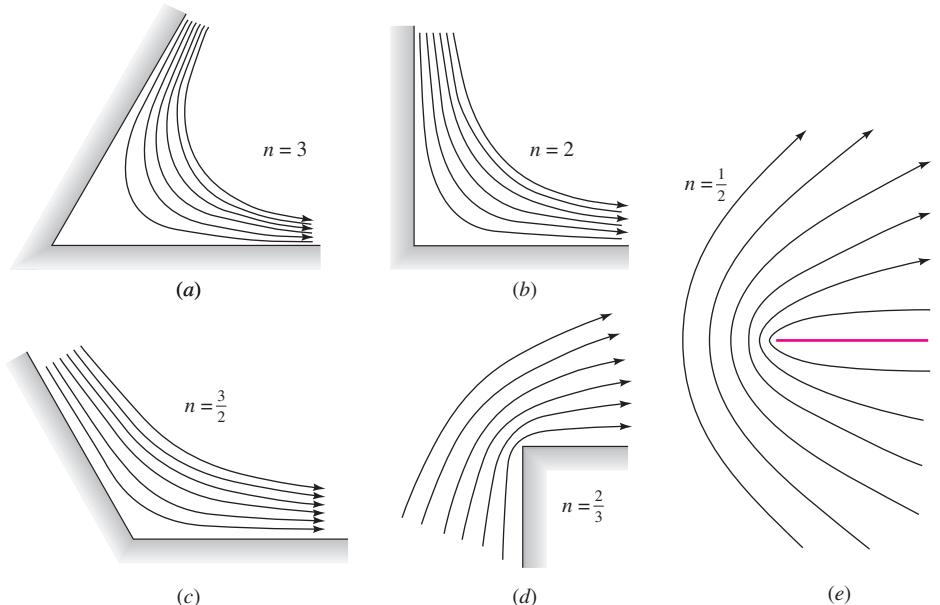

**Fig. 8.18** Streamlines for corner flow, Eq. (8.53), for corner angle  $\beta$  of (a)  $60^\circ$ , (b)  $90^\circ$ , (c)  $120^\circ$ , (d)  $270^\circ$ , and (e)  $360^\circ$ .

Since  $360^\circ = 2\pi$  is the largest possible corner, the patterns for  $n < \frac{1}{2}$  do not represent corner flow.

If we expand the plot of Fig. 8.18a to  $c$  to double size, we can represent stagnation flow toward a corner of angle  $2\beta = 2\pi/n$ . This is done in Fig. 8.19 for  $n = 3, 2$ , and  $1.5$ . These are very realistic flows; although they slip at the wall, they can be patched to boundary layer theories very successfully. We took a brief look at corner flows before, in Examples 4.5 and 4.9 and in Probs. P4.49 to P4.51.

### Flow Normal to a Flat Plate

We treat this case separately because the Kelvin ovals of Fig. 8.16 failed to degenerate into a flat plate as  $K$  became small. The flat plate normal to a uniform stream is an extreme case worthy of our attention.

Although the result is quite simple, the derivation is very complicated and is given, for example, in Ref. 2, Sec. 9.3. There are three changes of complex variable, or *mappings*, beginning with the basic cylinder flow solution of Fig. 8.14a. First the uniform stream is rotated to be vertical upward, then the cylinder is squeezed down into a plate shape, and finally the free stream is rotated back to the horizontal. The final result for complex potential is


$$f(z) = \phi + i\psi = U_\infty(z^2 + a^2)^{1/2} \quad (8.54)$$

where  $2a$  is the height of the plate. To isolate  $\phi$  or  $\psi$ , square both sides and separate real and imaginary parts:

$$\phi^2 - \psi^2 = U_\infty^2(x^2 - y^2 + a^2) \quad \phi\psi = U_\infty^2 xy$$

We can solve for  $\psi$  to determine the streamlines

$$\psi^4 + \psi^2 U_\infty^2(x^2 - y^2 + a^2) = U_\infty^4 x^2 y^2 \quad (8.55)$$

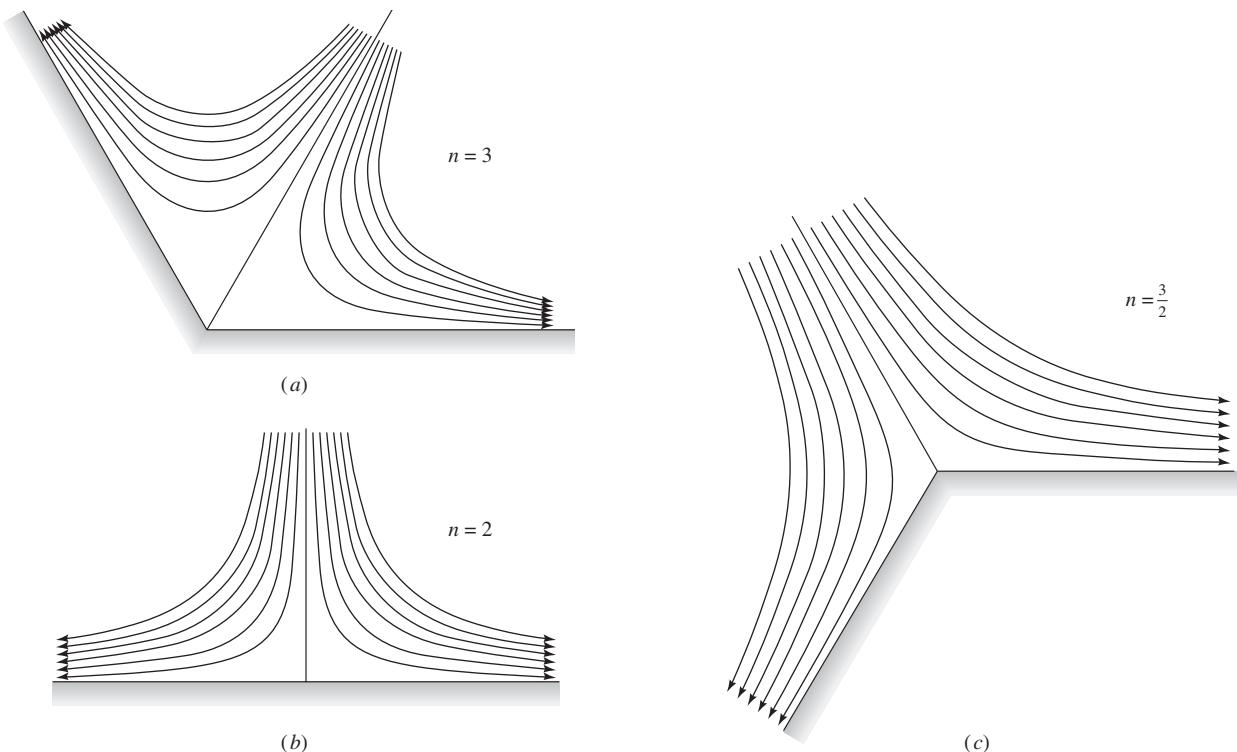

**Fig. 8.19** Streamlines for stagnation flow from Eq. (8.53) for corner angle  $2\beta$  of (a)  $120^\circ$ , (b)  $180^\circ$ , and (c)  $240^\circ$ .

Equation (8.55) is plotted in Fig. 8.20a, revealing a doubly symmetric pattern of streamlines that approach very closely to the plate and then deflect up and over, with very high velocities and low pressures near the plate tips.

The velocity  $v_s$  along the plate surface is found by computing  $df/dz$  from Eq. (8.54) and isolating the imaginary part:

$$\left. \frac{v_s}{U_\infty} \right|_{\text{plate surface}} = \frac{y/a}{(1 - y^2/a^2)^{1/2}} \quad (8.56)$$


Some values of surface velocity can be tabulated as follows:

$y/a$	0.0	0.2	0.4	0.6	0.707	0.8	0.9	1.0
$v_s/U_\infty$	0.0	0.204	0.436	0.750	1.00	1.33	2.07	$\infty$

The origin is a stagnation point; then the velocity grows linearly at first and very rapidly near the tip, with both velocity and acceleration being infinite at the tip.

As you might guess, Fig. 8.20a is not realistic. In a real flow the sharp salient edge causes separation, and a broad, low-pressure wake forms in the lee, as in Fig. 8.20b. Instead of being zero, the drag coefficient is very large,  $C_D \approx 2.0$  from Table 7.2.

A discontinuous potential flow theory that accounts for flow separation was devised by Helmholtz in 1868 and Kirchhoff in 1869. This free-streamline solution is shown in Fig. 8.20c, with the streamline that breaks away from the tip having a constant velocity

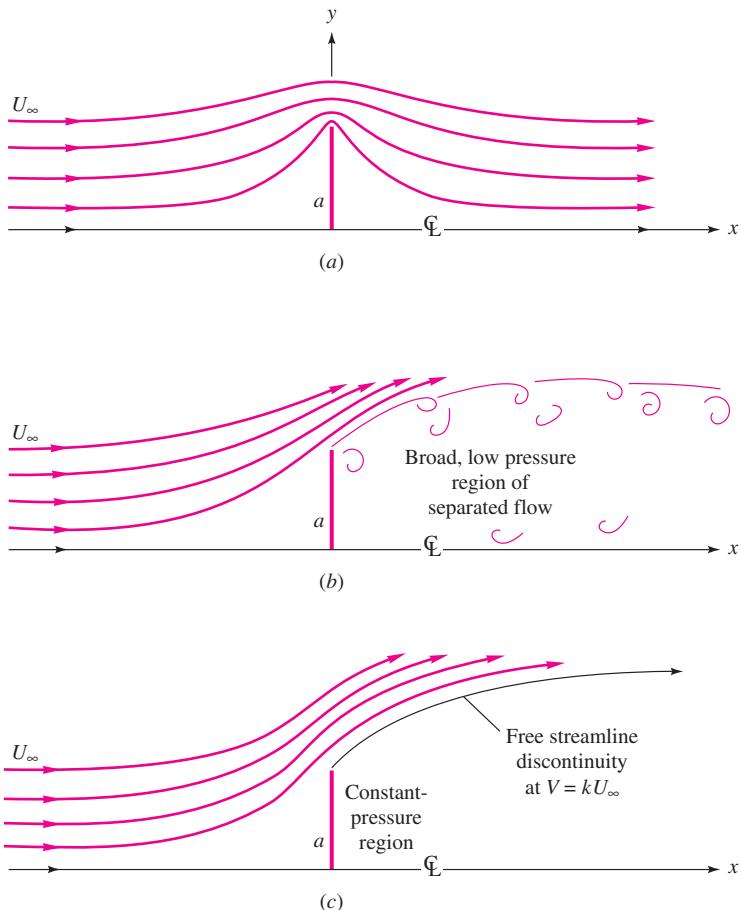


**Fig. 8.20** Streamlines in upper half-plane for flow normal to a flat plate of height  $2a$ : (a) continuous potential flow theory, Eq. (8.55); (b) actual measured flow pattern; (c) discontinuous potential theory with  $k \approx 1.5$ .

$V = kU_\infty$ . From Bernoulli's equation the pressure in the dead-water region behind the plate will equal  $p_r = p_\infty + \frac{1}{2}\rho U_\infty^2(1 - k^2)$  to match the pressure along the free streamline. For  $k = 1.5$  this Helmholtz-Kirchoff theory predicts  $p_r = p_\infty - 0.625\rho U_\infty^2$  and an average pressure on the front  $p_f = p_\infty + 0.375\rho U_\infty^2$ , giving an overall drag coefficient of 2.0, in agreement with experiment. However, the coefficient  $k$  is a priori unknown and must be tuned to experimental data, so free-streamline theory can be considered only a qualified success. For further details see Ref. 2, Sec. 11.2.

## 8.6 Images<sup>4</sup>

The previous solutions have all been for unbounded flows, such as a circular cylinder immersed in a broad expanse of uniformly streaming fluid, Fig. 8.14a. However, many practical problems involve a nearby rigid boundary constraining the flow, such as (1) groundwater flow near the bottom of a dam, (2) an airfoil near the ground, simulating landing or takeoff, or (3) a cylinder mounted in a wind tunnel with narrow

<sup>4</sup>This section may be omitted without loss of continuity.

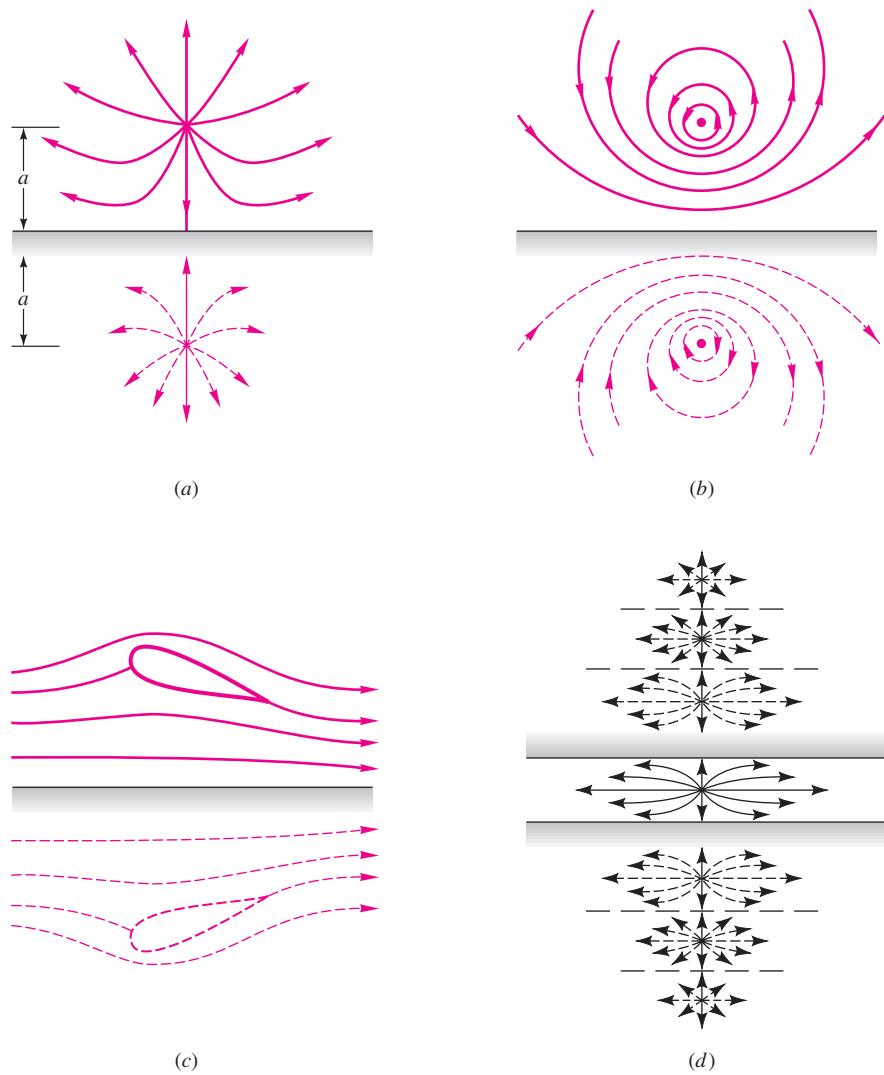

**Fig. 8.21** Constraining walls can be created by image flows: (a) source near a wall with identical image source; (b) vortex near a wall with image vortex of opposite sense; (c) airfoil in ground effect with image airfoil of opposite circulation; (d) source between two walls requiring an infinite row of images.

walls. In such cases the basic unbounded potential flow solutions can be modified for wall effects by the method of *images*.

Consider a line source placed a distance  $a$  from a wall, as in Fig. 8.21a. To create the desired wall, an image source of identical strength is placed the same distance below the wall. By symmetry the two sources create a plane surface streamline between them, which is taken to be the wall.

In Fig. 8.21b a vortex near a wall requires an image vortex the same distance below but of *opposite* rotation. We have shaded in the wall, but of course the pattern could also be interpreted as the flow near a vortex pair in an unbounded fluid.

In Fig. 8.21c an airfoil in a uniform stream near the ground is created by an image airfoil below the ground of opposite circulation and lift. This looks easy, but actually it is not because the airfoils are so close together that they interact and distort

each other's shapes. A rule of thumb is that nonnegligible shape distortion occurs if the body shape is within two chord lengths of the wall. To eliminate distortion, a whole series of "corrective" images must be added to the flow to recapture the shape of the original isolated airfoil. Reference 2, Sec. 7.75, has a good discussion of this procedure, which usually requires computer summation of the multiple images needed.


Figure 8.21d shows a source constrained between two walls. One wall required only one image in Fig. 8.21a, but *two* walls require an infinite array of image sources above and below the desired pattern, as shown. Usually computer summation is necessary, but sometimes a closed-form summation can be achieved, as in the infinite vortex row of Eq. (8.28).

### EXAMPLE 8.5

For the source near a wall as in Fig. 8.21a, the wall velocity is zero between the sources, rises to a maximum moving out along the wall, and then drops to zero far from the sources. If the source strength is  $8 \text{ m}^2/\text{s}$ , how far from the wall should the source be to ensure that the maximum velocity along the wall will be  $5 \text{ m/s}$ ?

### Solution

At any point  $x$  along the wall, as in Fig. E8.5, each source induces a radial outward velocity  $v_r = m/r$ , which has a component  $v_r \cos \theta$  along the wall. The total wall velocity is thus

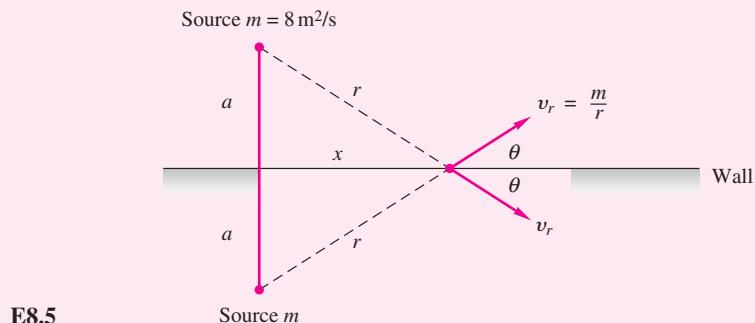

E8.5

$$u_{\text{wall}} = 2v_r \cos \theta$$

From the geometry of Fig. E8.5,  $r = (x^2 + a^2)^{1/2}$  and  $\cos \theta = x/r$ . Then the total wall velocity can be expressed as

$$u = \frac{2mx}{x^2 + a^2}$$

This is zero at  $x = 0$  and at  $x \rightarrow \infty$ . To find the maximum velocity, differentiate and set equal to zero:

$$\frac{du}{dx} = 0 \quad \text{at} \quad x = a \quad \text{and} \quad u_{\max} = \frac{m}{a}$$

We have omitted a bit of algebra in giving these results. For the given source strength and maximum velocity, the proper distance  $a$  is

$$a = \frac{m}{u_{\max}} = \frac{8 \text{ m}^2/\text{s}}{5 \text{ m/s}} = 1.6 \text{ m} \quad \text{Ans.}$$


For  $x > a$ , there is an adverse pressure gradient along the wall, and boundary layer theory should be used to predict separation.

## 8.7 Airfoil Theory<sup>5</sup>

As mentioned in conjunction with the Kutta-Joukowski lift theorem, Eq. (8.43), the problem in airfoil theory is to determine the net circulation  $\Gamma$  as a function of airfoil shape and free-stream angle of attack  $\alpha$ .

### The Kutta Condition

Even if the airfoil shape and free-stream angle of attack are specified, the potential flow theory solution is nonunique: An infinite family of solutions can be found corresponding to different values of circulation  $\Gamma$ . Four examples of this nonuniqueness were shown for the cylinder flows in Fig. 8.14. The same is true of the airfoil, and Fig. 8.22 shows three mathematically acceptable “solutions” to a given airfoil flow for small (Fig. 8.22a), large (Fig. 8.22b), and medium (Fig. 8.22c) net circulation.

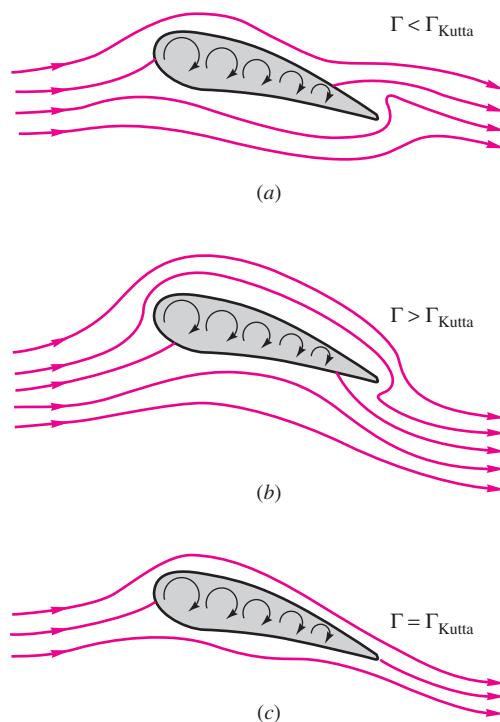

**Fig. 8.22** The Kutta condition properly simulates the flow about an airfoil; (a) too little circulation, stagnation point on rear upper surface; (b) too much, stagnation point on rear lower surface; (c) just right, Kutta condition requires smooth flow at trailing edge.

<sup>5</sup>This section may be omitted without loss of continuity.

You can guess which case best simulates a real airfoil from the earlier discussion of transient lift development in Fig. 7.23. It is the case (Fig. 8.22c), where the upper and lower flows meet and leave the trailing edge smoothly. If the trailing edge is rounded slightly, there will be a stagnation point there. If the trailing edge is sharp, approximating most airfoil designs, the upper- and lower-surface flow velocities will be equal as they meet and leave the airfoil.

This statement of the physically proper value of  $\Gamma$  is generally attributed to W. M. Kutta, hence the name *Kutta condition*, although some texts give credit to Joukowski and/or Chaplygin. All airfoil theories use the Kutta condition, which is in good agreement with experiment. It turns out that the correct circulation  $\Gamma_{\text{Kutta}}$  depends on flow velocity, angle of attack, and airfoil shape.

### Flat-Plate Airfoil Vortex Sheet Theory

The flat plate is the simplest airfoil, having no thickness or “shape,” but even its theory is not so simple. The problem can be solved by a complex-variable mapping [2, p. 480], but here we shall use a vortex sheet approach. Figure 8.23a shows a flat plate of length  $C$  simulated by a vortex sheet of variable strength  $\gamma(x)$ . The free stream  $U_\infty$  is at an angle of attack  $\alpha$  with respect to the plate chord line.

To make the lift “up” with flow from left to right as shown, we specify here that the circulation is positive clockwise. Recall from Fig. 8.11c that there is a jump in tangential velocity across a sheet equal to the local strength:

$$u_u - u_l = \gamma(x)$$

If we omit the free stream, the sheet should cause a rightward flow  $\delta u = +\frac{1}{2}\gamma$  on the upper surface and an equal and opposite leftward flow on the lower surface, as shown in Fig. 8.23a. The Kutta condition for this sharp trailing edge requires that this velocity difference vanish at the trailing edge to keep the exit flow smooth and parallel:

$$\gamma(C) = 0 \quad (8.57)$$

The proper solution must satisfy this condition, after which the total lift can be computed by summing the sheet strength over the whole airfoil. From Eq. (8.43) for a foil of depth  $b$ :


$$L = \rho U_\infty b \Gamma \quad \Gamma = \int_0^C \gamma(x) dx \quad (8.58)$$

An alternative way to compute lift is from the dimensionless pressure coefficient  $C_p$  on the upper and lower surfaces:

$$C_{p_{u,l}} = \frac{p_{u,l} - p_\infty}{\frac{1}{2}\rho U_\infty^2} = 1 - \frac{U_{u,l}^2}{U_\infty^2} \quad (8.59)$$

where the last expression follows from Bernoulli’s equation. The surface velocity squared is given by combining the uniform stream and the vortex sheet velocity components from Fig. 8.23a:

$$\begin{aligned} U_{u,l}^2 &= (U_\infty \cos \alpha \pm \delta u)^2 + (U_\infty \sin \alpha)^2 \\ &= U_\infty^2 \pm 2U_\infty \delta u \cos \alpha + \delta u^2 \approx U_\infty^2 \left(1 \pm \frac{2\delta u}{U_\infty}\right) \end{aligned} \quad (8.60)$$

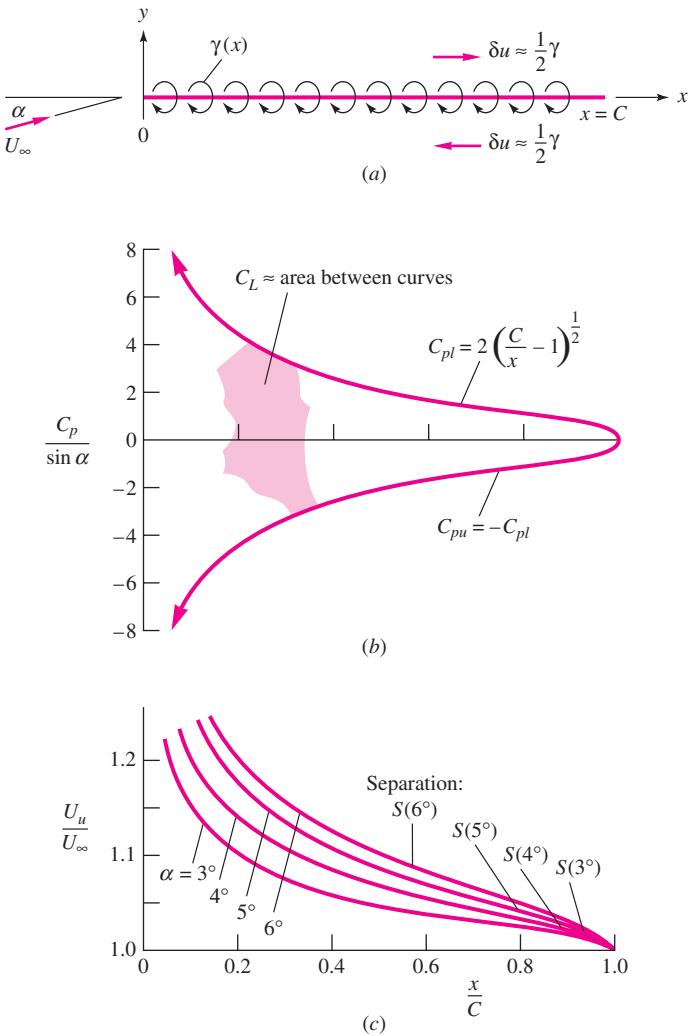

**Fig. 8.23** Vortex sheet solution for the flat-plate airfoil; (a) sheet geometry; (b) theoretical pressure coefficient on upper and lower surfaces; (c) upper-surface velocity with laminar separation points  $S$ .

where we have made the approximations  $\delta u \ll U_\infty$  and  $\cos \alpha \approx 1$  in the last expression, assuming a small angle of attack. Equations (8.59) and (8.60) combine to the first-order approximation

$$C_{p_{u,l}} = \mp \frac{2 \delta u}{U_\infty} = \mp \frac{\gamma}{U_\infty} \quad (8.61)$$

The lift force is the integral of the pressure difference over the length of the airfoil, assuming depth  $b$ :

$$L = \int_0^C (p_l - p_u)b \, dx$$

or

$$C_L = \frac{L}{\frac{1}{2} \rho U_\infty^2 b C} = \int_0^1 (C_{p_l} - C_{p_u}) \frac{dx}{C} = 2 \int_0^1 \frac{\gamma}{U_\infty} d\left(\frac{x}{C}\right) \quad (8.62)$$

Equations (8.58) and (8.62) are entirely equivalent within the small-angle approximations.

The sheet strength  $\gamma(x)$  is computed from the requirement that the net normal velocity  $v(x)$  be zero at the sheet ( $y = 0$ ), since the sheet represents a solid plate or stream surface. Consider a small piece of sheet  $\gamma dx$  located at position  $x_0$ . The velocity  $v$  at point  $x$  on the sheet is that of an infinitesimal line vortex of strength  $d\Gamma = -\gamma dx$ :

$$dv \Big|_x = \frac{d\Gamma}{2\pi r|_{x_0 \rightarrow x}} = \frac{-\gamma dx}{2\pi(x_0 - x)}$$

The total normal velocity induced by the entire sheet at point  $x$  is thus

$$v_{\text{sheet}} = - \int_0^C \frac{-\gamma dx}{2\pi(x_0 - x)} \quad (8.63)$$

Meanwhile, from Fig. 8.23a, the uniform stream induces a constant normal velocity at every point on the sheet given by

$$v_{\text{stream}} = U_\infty \sin \alpha$$

Setting the sum of  $v_{\text{sheet}}$  and  $v_{\text{stream}}$  equal to zero gives the integral equation

$$\int_0^C \frac{\gamma dx}{x_0 - x} = 2\pi U_\infty \sin \alpha \quad (8.64)$$

to be solved for  $\gamma(x)$  subject to the Kutta condition  $\gamma(C) = 0$  from Eq. (8.57).

Although Eq. (8.64) is quite formidable (and not only for beginners), in fact it was solved long ago by using integral formulas developed by Poisson in the nineteenth century. The sheet strength that satisfies Eq. (8.64) is

$$\gamma(x) = 2U_\infty \sin \alpha \left( \frac{C}{x} - 1 \right)^{1/2} \quad (8.65)$$

From Eq. (8.61) the surface pressure coefficients are thus

$$C_{p_{u,l}} = \mp 2 \sin \alpha \left( \frac{C}{x} - 1 \right)^{1/2} \quad (8.66)$$

Details of the calculations are given in advanced texts [for example, 11, Chap. 4].

The pressure coefficients from Eq. (8.66) are plotted in Fig. 8.23b, showing that the upper surface has pressure continually increasing with  $x$ —that is, an adverse gradient. The upper-surface velocity  $U_u \approx U_\infty + \delta u = U_\infty + \frac{1}{2}\gamma$  is plotted in Fig. 8.23c for various angles of attack. Above  $\alpha = 5^\circ$  the sheet contribution  $\delta u$  is about 20 percent of  $U_\infty$  so that the small-disturbance assumption is violated. Figure 8.23c also shows separation points computed by Thwaites's laminar boundary layer method, Eqs. (7.54) and (7.55). The prediction is that a flat plate would be extensively stalled on the upper surface for  $\alpha > 6^\circ$ , which is approximately correct.

The lift coefficient of the airfoil is proportional to the area between  $c_{p_l}$  and  $c_{p_u}$  in Fig. 8.23b, from Eq. (8.62):

$$C_L = 2 \int_0^1 \frac{\gamma}{U} d\left(\frac{x}{C}\right) = 4 \sin \alpha \int_0^1 \left( \frac{C}{x} - 1 \right)^{1/2} d\left(\frac{x}{C}\right) = 2\pi \sin \alpha \approx 2\pi \alpha \quad (8.67)$$

This is a classic result that was alluded to earlier in Eq. (7.70) without proof.

Also of interest is the moment coefficient about the leading edge (LE) of the airfoil, taken as positive counterclockwise:

$$C_{M_{LE}} = \frac{M_{LE}}{\frac{1}{2}\rho U_\infty^2 b C^2} = \int_0^1 (C_{p_l} - C_{p_u}) \frac{x}{C} d\left(\frac{x}{C}\right) = \frac{\pi}{2} \sin \alpha = \frac{1}{4} C_L \quad (8.68)$$

Thus the *center of pressure* (CP), or position of the resultant lift force, is at the one-quarter-chord point:

$$\left(\frac{x}{C}\right)_{CP} = \frac{1}{4} \quad (8.69)$$

This theoretical result is independent of the angle of attack.

These results can be compared with experimental results for NACA airfoils in Fig. 8.24. The thinnest NACA airfoil is  $t/C = 0.06$ , and the thickest is 24 percent, or  $t/C = 0.24$ . The lift curve slope  $dC_L/d\alpha$  is within 9 percent of the theoretical value of  $2\pi$  for all the various airfoil families at all thicknesses. Increasing thickness tends to increase both  $C_{L,\max}$  and the stall angle. The stall angle at  $t/C = 0.06$  is about  $8^\circ$  and would be even less for a flat plate, verifying the boundary layer separation estimates in Fig. 8.23c. Best performance is usually at about the 12 percent thickness point for any airfoil.

### Potential Theory for Thick Cambered Airfoils

The theory of thick cambered airfoils is covered in advanced texts [for example, 2 to 4]; Ref. 13 has a thorough and comprehensive review of both inviscid and viscous aspects of airfoil behavior.

Basically the theory uses a complex-variable mapping that transforms the flow about a cylinder with circulation in Fig. 8.14 into flow about a foil shape with circulation. The circulation is then adjusted to match the Kutta condition of smooth exit flow from the trailing edge.

Regardless of the exact airfoil shape, the inviscid mapping theory predicts that the correct circulation for any thick cambered airfoil is

$$\Gamma_{Kutta} = \pi b C U_\infty \left(1 + 0.77 \frac{t}{C}\right) \sin(\alpha + \beta) \quad (8.70)$$


where  $\beta = \tan^{-1}(2h/C)$  and  $h$  is the maximum camber, or maximum deviation of the airfoil midline from its chord line, as in Fig. 8.25a.

The lift coefficient of the infinite-span airfoil is thus

$$C_L = \frac{\rho U_\infty \Gamma}{\frac{1}{2} \rho U_\infty^2 b C} = 2\pi \left(1 + 0.77 \frac{t}{C}\right) \sin(\alpha + \beta) \quad (8.71)$$

This reduces to Eq. (8.67) when the thickness and camber are zero. Figure 8.24 shows that the thickness effect  $1 + 0.77t/C$  is not verified by experiment. Some airfoils increase lift with thickness, others decrease, and none approach the theory very closely, the primary reason being the boundary layer growth on the upper surface affecting the airfoil "shape." Thus it is customary to drop the thickness effect from the theory:

$$C_L \approx 2\pi \sin(\alpha + \beta) \quad (8.72)$$

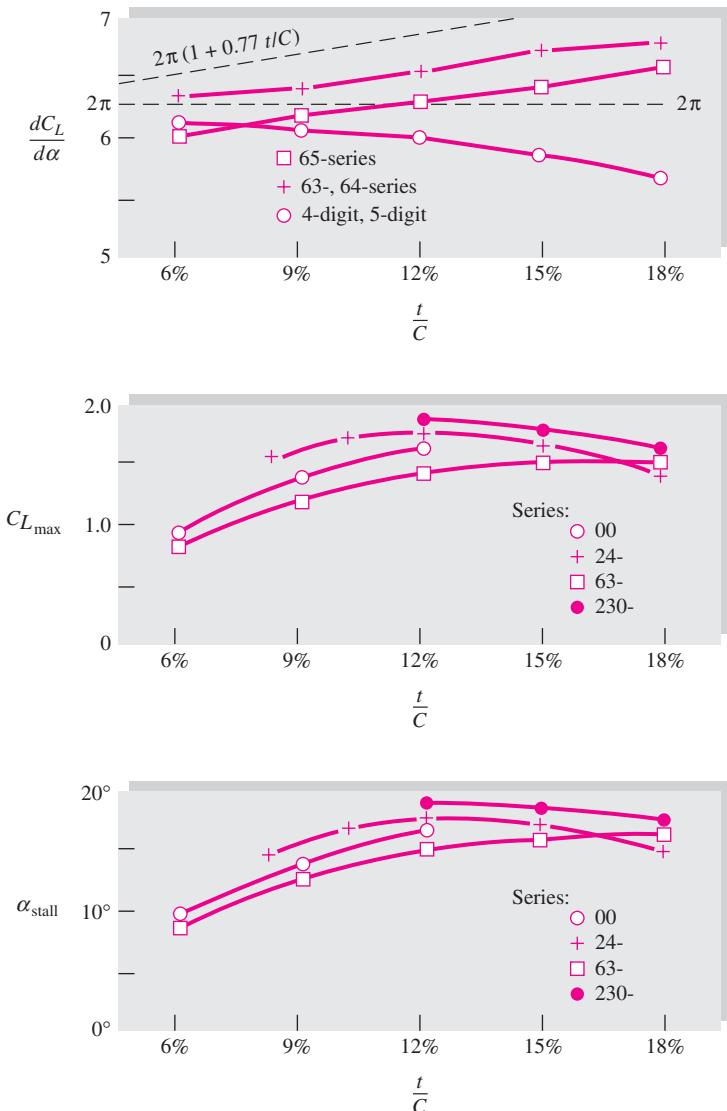

**Fig. 8.24** Lift characteristics of smooth NACA airfoils as a function of thickness ratio, for infinite aspect ratio. (From Ref. 12.)

The theory correctly predicts that a cambered airfoil will have finite lift at zero angle of attack and zero lift (ZL) at an angle

$$\alpha_{ZL} = -\beta = -\tan^{-1} \frac{2h}{C} \quad (8.73)$$


Equation (8.73) overpredicts the measured zero-lift angle by  $1^\circ$  or so, as shown in Table 8.3. The measured values are essentially independent of thickness. The designation XX in the NACA series indicates the thickness in percent, and the other digits refer to camber and other details. For example, the 2415 airfoil has 2 percent maximum camber (the first digit) occurring at 40 percent chord (the second digit) with

**Table 8.3** Zero-Lift Angle of NACA Airfoils


Airfoil series	Camber $h/C$ , %	Measured $\alpha_{ZL}$ , deg	Theory – $\beta$ , deg
24XX	2.0	-2.1	-2.3
44XX	4.0	-4.0	-4.6
230XX	1.8	-1.3	-2.1
63-2XX	2.2	-1.8	-2.5
63-4XX	4.4	-3.1	-5.0
64-1XX	1.1	-0.8	-1.2

15 percent maximum thickness (the last two digits). The maximum thickness need not occur at the same position as the maximum camber.


Figure 8.25b shows the measured position of the center of pressure of the various NACA airfoils, both symmetric and cambered. In all cases  $x_{CP}$  is within 0.02 chord length of the theoretical quarter-chord point predicted by Eq. (8.69).

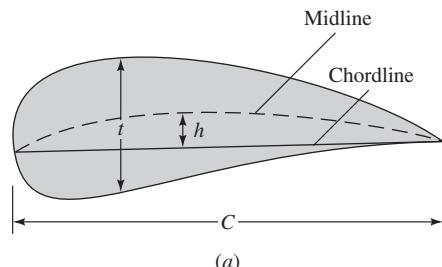

(a)

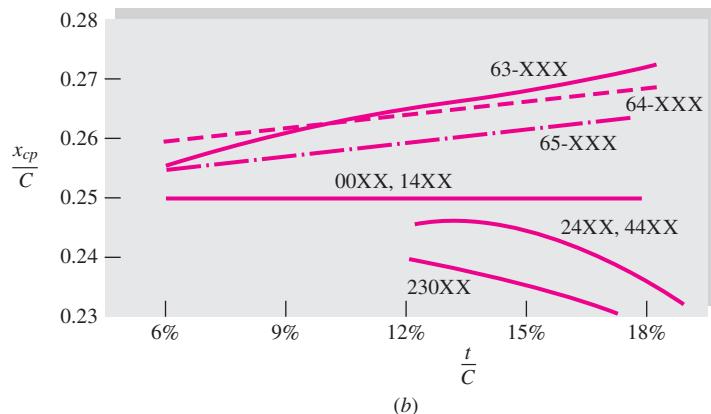

(b)

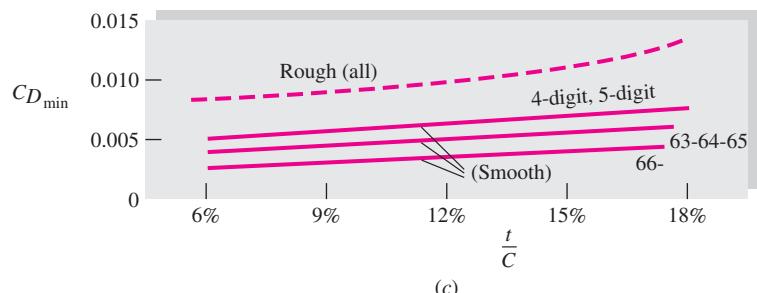

(c)

**Fig. 8.25** Characteristics of NACA airfoils: (a) typical thick cambered airfoil; (b) center-of-pressure data; and (c) minimum drag coefficient.

The standard cambered airfoils (24, 44, and 230 series) lie slightly forward of  $x/C = 0.25$  and the low-drag (60 series) foils slightly aft. The symmetric airfoils are at 0.25.

Figure 8.25c shows the minimum drag coefficient of NACA airfoils as a function of thickness. As mentioned earlier in conjunction with Fig. 7.25, these foils when smooth actually have less drag than turbulent flow parallel to a flat plate, especially the low-drag 60 series. However, for standard surface roughness all foils have about the same minimum drag, roughly 30 percent greater than that for a smooth flat plate.

### Wings of Finite Span

The results of airfoil theory and experiment in the previous subsection were for two-dimensional, or infinite-span, wings. But all real wings have tips and are therefore of finite span or finite aspect ratio AR, defined by

$$AR = \frac{b^2}{A_p} = \frac{b}{\bar{C}} \quad (8.74)$$

where  $b$  is the span length from tip to tip and  $A_p$  is the planform area of the wing as seen from above. The lift and drag coefficients of a finite-aspect-ratio wing depend strongly on the aspect ratio and slightly on the planform shape of the wing.

Vortices cannot end in a fluid; they must either extend to the boundary or form a closed loop. Figure 8.26a shows how the vortices that provide the wing circulation bend downstream at finite wing tips and extend far behind the wing to join the starting vortex (Fig. 7.23) downstream. The strongest vortices are shed from the tips, but some are shed from the body of the wing, as sketched schematically in Fig. 8.26b. The effective circulation  $\Gamma(y)$  of these trailing shed vortices is zero at the tips and usually a maximum at the center plane, or root, of the wing. In 1918 Prandtl successfully modeled this flow by replacing the wing by a single lifting line and a continuous sheet of semi-infinite trailing vortices of strength  $\gamma(\eta) = d\Gamma/dy$ , as in Fig. 8.26c. Each elemental piece of trailing sheet  $\gamma(\eta) d\eta$  induces a downwash, or downward velocity,  $dw(y)$ , given by

$$dw(y) = \frac{\gamma(\eta) d\eta}{4\pi(y - \eta)}$$

at position  $y$  on the lifting line. Note the denominator term  $4\pi$  rather than  $2\pi$  because the trailing vortex extends only from 0 to  $\infty$  rather than from  $-\infty$  to  $+\infty$ .


The total downwash  $w(y)$  induced by the entire trailing vortex system is thus

$$w(y) = \frac{1}{4\pi} \int_{-(1/2)b}^{(1/2)b} \frac{\gamma(\eta) d\eta}{y - \eta} \quad (8.75)$$

When the downwash is vectorially added to the approaching free stream  $U_\infty$ , the effective angle of attack at this section of the wing is reduced to

$$\alpha_{\text{eff}} = \alpha - \alpha_i \quad \alpha_i = \tan^{-1} \frac{w}{U_\infty} \approx \frac{w}{U_\infty} \quad (8.76)$$

where we have used a small-amplitude approximation  $w \ll U_\infty$ .

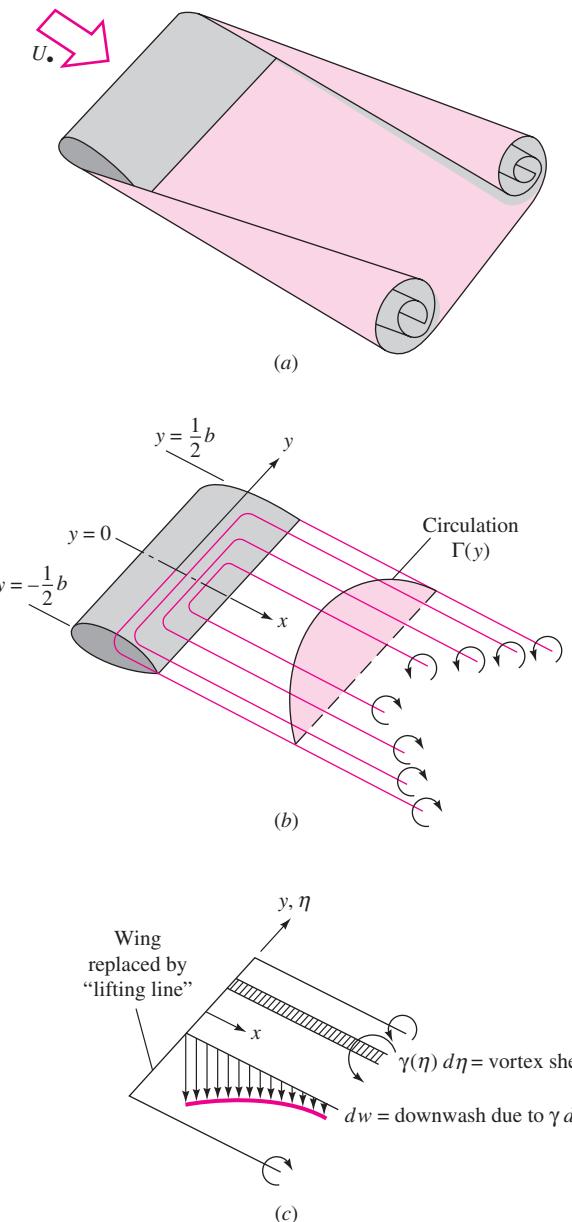

**Fig. 8.26** Lifting-line theory for a finite wing: (a) actual trailing-vortex system behind a wing; (b) simulation by vortex system “bound” to the wing; (c) downwash on the wing due to an element of the trailing-vortex system.

The final step is to assume that the local circulation  $\Gamma(y)$  is equal to that of a two-dimensional wing of the same shape and same effective angle of attack. From thin-airfoil theory, Eqs. (8.58) and (8.67), we have the estimate

$$C_L = \frac{\rho U_\infty \Gamma b}{\frac{1}{2} \rho U_\infty^2 b C} \approx 2\pi \alpha_{\text{eff}} \quad (8.77)$$

or

$$\Gamma \approx \pi C U_\infty \alpha_{\text{eff}}$$

Combining Eqs. (8.75) and (8.77), we obtain Prandtl's lifting-line theory for a finite-span wing:

$$\Gamma(y) = \pi C(y) U_\infty \left[ \alpha(y) - \frac{1}{4\pi U_\infty} \int_{-(1/2)b}^{(1/2)b} \frac{(d\Gamma/d\eta) d\eta}{y - \eta} \right] \quad (8.78)$$

This is an integrodifferential equation to be solved for  $\Gamma(y)$  subject to the conditions  $\Gamma(\frac{1}{2}b) = \Gamma(-\frac{1}{2}b) = 0$ . It is similar to the thin-airfoil integral equation (8.64) and even more formidable. Once it is solved, the total wing lift and induced drag are given by

$$L = \rho U_\infty \int_{-(1/2)b}^{(1/2)b} \Gamma(y) dy \quad D_i = \rho U_\infty \int_{-(1/2)b}^{(1/2)b} \Gamma(y) \alpha_i(y) dy \quad (8.79)$$

Here is a case where the drag is not zero in a frictionless theory because the downwash causes the lift to slant backward by angle  $\alpha_i$  so that it has a drag component parallel to the free-stream direction,  $dD_i = dL \sin \alpha_i \approx dL \alpha_i$ .

The complete solution to Eq. (8.78) for arbitrary wing planform  $C(y)$  and arbitrary twist  $\alpha(y)$  is treated in advanced texts [for example, 11]. It turns out that there is a simple representative solution for an untwisted wing of elliptical planform:

$$C(y) = C_0 \left[ 1 - \left( \frac{2y}{b} \right)^2 \right]^{1/2}$$

The area and aspect ratio of this wing are

$$A_p = \int_{-(1/2)b}^{(1/2)b} C dy = \frac{1}{4} \pi b C_0 \quad AR = \frac{4b}{\pi C_0} \quad (8.80)$$

The solution to Eq. (8.78) for this  $C(y)$  is an elliptical circulation distribution of exactly similar shape:

$$\Gamma(y) = \Gamma_0 \left[ 1 - \left( \frac{2y}{b} \right)^2 \right]^{1/2}$$

Substituting into Eq. (8.78) and integrating give a relation between  $\Gamma_0$  and  $C_0$ :

$$\Gamma_0 = \frac{\pi C_0 U_\infty \alpha}{1 + 2/AR}$$

where  $\alpha$  is assumed constant across the untwisted wing.

Substitution into Eq. (8.79) gives the elliptical wing lift:

$$L = \frac{1}{4} \pi^2 b C_0 \rho U_\infty^2 \alpha / (1 + 2/AR)$$

or

$$C_L = \frac{2\pi\alpha}{1 + 2/AR} \quad (8.81)$$

If we generalize this to a thick cambered finite wing of approximately elliptical planform, we obtain

$$C_L = \frac{2\pi \sin(\alpha + \beta)}{1 + 2/AR} \quad (8.82)$$

This result was given without proof as Eq. (7.70). From Eq. (8.75) the computed downwash for the elliptical wing is constant:


$$w(y) = \frac{2U_\infty\alpha}{2 + AR} = \text{const} \quad (8.83)$$

Finally, the induced drag coefficient from Eq. (8.76) is

$$C_{Di} = C_L \frac{w}{U_\infty} = \frac{C_L^2}{\pi AR} \quad (8.84)$$

This was given without proof as Eq. (7.71).

Figure 8.27 shows the effectiveness of this theory when tested against a nonelliptical cambered wing by Prandtl in 1921 [14]. Figures 8.27a and b show the measured lift curves and drag polars for five different aspect ratios. Note the increase in stall angle and drag and the decrease in lift slope as the aspect ratio decreases.

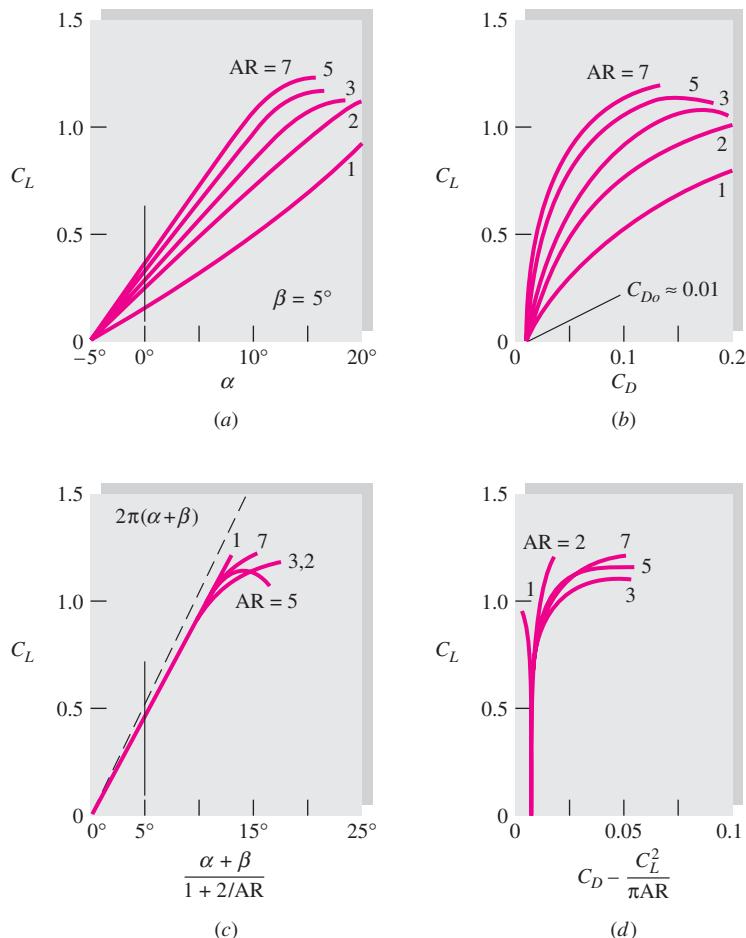

**Fig. 8.27** Comparison of theory and experiment for a finite wing:  
(a) measured lift [14]; (b) measured drag polar [14]; (c) lift reduced to infinite aspect ratio; (d) drag polar reduced to infinite aspect ratio.

Figure 8.27c shows the lift data replotted against effective angle of attack  $\alpha_{\text{eff}} = (\alpha + \beta)/(1 + 2/\text{AR})$ , as predicted by Eq. (8.82). These curves should be equivalent to an infinite-aspect-ratio wing, and they do collapse together except near stall. Their common slope  $dC_L/d\alpha$  is about 10 percent less than the theoretical value  $2\pi$ , but this is consistent with the thickness and shape effects noted in Fig. 8.24.

Figure 8.27d shows the drag data replotted with the theoretical induced drag  $C_{D_i} = C_L^2/(\pi\text{AR})$  subtracted out. Again, except near stall, the data collapse onto a single line of nearly constant infinite-aspect-ratio drag  $C_{D_0} \approx 0.01$ . We conclude that the finite-wing theory is very effective and may be used for design calculations.

### Aircraft Trailing Vortices

The trailing vortices in Fig. 8.26a are real, not just mathematical abstractions. On commercial aircraft, such vortices are long, strong, and lingering. They can stretch for miles behind a large aircraft and endanger the following planes by inducing drastic rolling moments. The vortex persistence governs the separation distance between planes at an airport and thus determines airport capacity. An example of strong trailing vortices is shown in Fig. 8.28. There is a continuing research effort to alleviate trailing vortices by breaking them up or otherwise causing them to decay. See the review article by Spalart [46].



**Fig. 8.28** Wingtip vortices from a smoke-visualization test of a Boeing 737. Vortices from large airplanes can be extremely dangerous to any following aircraft, especially small planes. This test was part of a research effort to alleviate these swirling wakes. (*NASA photo.*)

## 8.8 Axisymmetric Potential Flow<sup>6</sup>

The same superposition technique that worked so well for plane flow in Sec. 8.3 is also successful for axisymmetric potential flow. We give some brief examples here.

Most of the basic results carry over from plane to axisymmetric flow with only slight changes owing to the geometric differences. Consider the following related flows:

Basic plane fw	Counterpart axisymmetric fw
Uniform stream	Uniform stream
Line source or sink	Point source or sink
Line doublet	Point doublet
Line vortex	No counterpart
Rankine half-body cylinder	Rankine half-body of revolution
Rankine oval cylinder	Rankine oval of revolution
Circular cylinder	Sphere
Symmetric airfoil	Tear-shaped body

Since there is no such thing as a point vortex, we must forgo the pleasure of studying circulation effects in axisymmetric flow. However, as any smoker knows, there is an axisymmetric ring vortex, and there are also ring sources and ring sinks, which we leave to advanced texts [for example, 3].

### Spherical Polar Coordinates

Axisymmetric potential flows are conveniently treated in the spherical polar coordinates of Fig. 8.29. There are only two coordinates ( $r, \theta$ ), and flow properties are constant on a circle of radius  $r \sin \theta$  about the  $x$  axis.

The equation of continuity for incompressible flow in these coordinates is

$$\frac{\partial}{\partial r}(r^2 v_r \sin \theta) + \frac{\partial}{\partial \theta}(r v_\theta \sin \theta) = 0 \quad (8.85)$$

where  $v_r$  and  $v_\theta$  are radial and tangential velocity as shown. Thus a spherical polar stream function<sup>7</sup> exists such that

$$v_r = -\frac{1}{r^2 \sin \theta} \frac{\partial \psi}{\partial \theta} \quad v_\theta = \frac{1}{r \sin \theta} \frac{\partial \psi}{\partial r} \quad (8.86)$$

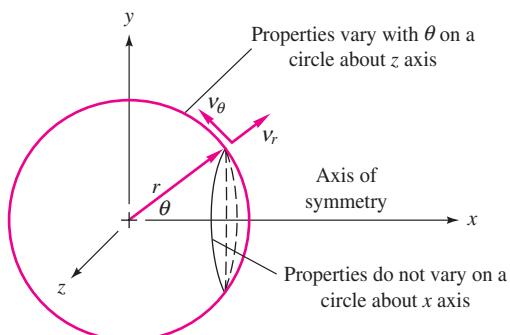


Fig. 8.29 Spherical polar coordinates for axisymmetric flow.

<sup>6</sup>This section may be omitted without loss of continuity.

<sup>7</sup>It is often called *Stokes' stream function*, having been used in a paper Stokes wrote in 1851 on viscous sphere flow.

In like manner a velocity potential  $\phi(r, \theta)$  exists such that

$$v_r = \frac{\partial \phi}{\partial r} \quad v_\theta = \frac{1}{r} \frac{\partial \phi}{\partial \theta} \quad (8.87)$$

These formulas serve to deduce the  $\psi$  and  $\phi$  functions for various elementary axisymmetric potential flows.

#### Uniform Stream in the $x$ Direction

A stream  $U_\infty$  in the  $x$  direction has components

$$v_r = U_\infty \cos \theta \quad v_\theta = -U_\infty \sin \theta$$

Substitution into Eqs. (8.86) and (8.87) and integrating give

$$\text{Uniform stream: } \psi = -\frac{1}{2}U_\infty r^2 \sin^2 \theta \quad \phi = U_\infty r \cos \theta \quad (8.88)$$

As usual, arbitrary constants of integration have been neglected.

#### Point Source or Sink

Consider a volume flux  $Q$  issuing from a point source. The flow will spread out radially and at radius  $r$  will equal  $Q$  divided by the area  $4\pi r^2$  of a sphere. Thus

$$v_r = \frac{Q}{4\pi r^2} = \frac{m}{r^2} \quad v_\theta = 0 \quad (8.89)$$

with  $m = Q/(4\pi)$  for convenience. Integrating (8.86) and (8.87) gives

$$\text{Point source} \quad \psi = m \cos \theta \quad \phi = -\frac{m}{r} \quad (8.90)$$

For a point sink, change  $m$  to  $-m$  in Eq. (8.90).

#### Point Doublet

Exactly as in Fig. 8.12, place a source at  $(x, y) = (-a, 0)$  and an equal sink at  $(+a, 0)$ , taking the limit as  $a$  becomes small with the product  $2am = \lambda$  held constant:

$$\psi_{\text{doublet}} = \lim_{\substack{a \rightarrow 0 \\ 2am = \lambda}} (m \cos \theta_{\text{source}} - m \cos \theta_{\text{sink}}) = \frac{\lambda \sin^2 \theta}{r} \quad (8.91)$$

We leave the proof of this limit as a problem. The point-doublet velocity potential is


$$\phi_{\text{doublet}} = \lim_{\substack{a \rightarrow 0 \\ 2am = \lambda}} \left( -\frac{m}{r_{\text{source}}} + \frac{m}{r_{\text{sink}}} \right) = \frac{\lambda \cos \theta}{r^2} \quad (8.92)$$

The streamlines and potential lines are shown in Fig. 8.30. Unlike the plane doublet flow of Fig. 8.12, neither set of lines represents perfect circles.

#### Uniform Stream plus a Point Source

By combining Eqs. (8.88) and (8.90), we obtain the stream function for a uniform stream plus a point source at the origin:

$$\psi = -\frac{1}{2}U_\infty r^2 \sin^2 \theta + m \cos \theta \quad (8.93)$$

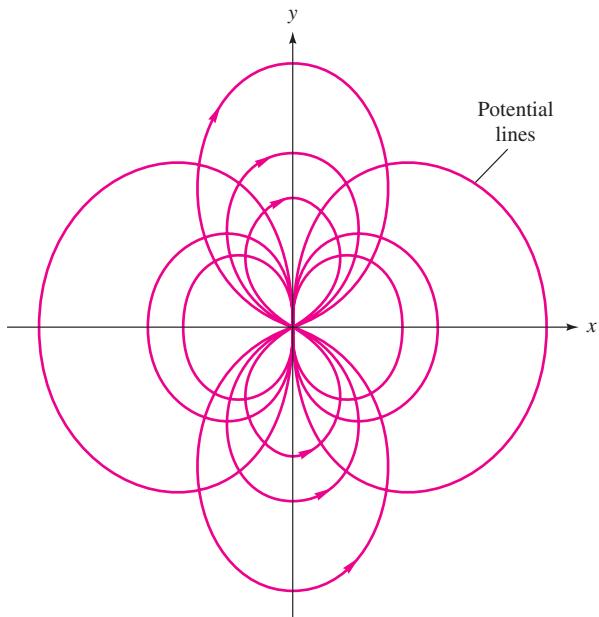

**Fig. 8.30** Streamlines and potential lines due to a point doublet at the origin, from Eqs. (8.91) and (8.92).


From Eq. (8.86) the velocity components are, by differentiation,

$$v_r = U_\infty \cos \theta + \frac{m}{r^2} \quad v_\theta = -U_\infty \sin \theta \quad (8.94)$$

Setting these equal to zero reveals a stagnation point at  $\theta = 180^\circ$  and  $r = a = (m/U_\infty)^{1/2}$ , as shown in Fig. 8.31. If we let  $m = U_\infty a^2$ , the stream function can be rewritten as

$$\frac{\psi}{U_\infty a^2} = \cos \theta - \frac{1}{2} \left( \frac{r}{a} \right)^2 \sin^2 \theta \quad (8.95)$$

The stream surface that passes through the stagnation point  $(r, \theta) = (a, \pi)$  has the value  $\psi = -U_\infty a^2$  and forms a half-body of revolution enclosing the point source, as

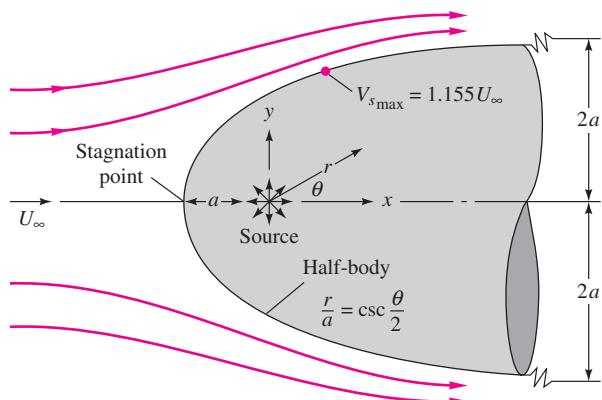

**Fig. 8.31** Streamlines for a Rankine half-body of revolution.

shown in Fig. 8.31. This half-body can be used to simulate a pitot tube. Far downstream the half-body approaches the constant radius  $R = 2a$  about the  $x$  axis. The maximum velocity and minimum pressure along the half-body surface occur at  $\theta = 70.5^\circ$ ,  $r = a\sqrt{3}$ ,  $V_s = 1.155U_\infty$ . Downstream of this point there is an adverse gradient as  $V_s$  slowly decelerates to  $U_\infty$ , but boundary layer theory indicates no flow separation. Thus Eq. (8.95) is a very realistic simulation of a real half-body flow. But when the uniform stream is added to a sink to form a half-body rear surface, similar to Fig. 8.9c, separation is predicted and the rear inviscid pattern is not realistic.

### Uniform Stream plus a Point Doublet

From Eqs. (8.88) and (8.91), combination of a uniform stream and a point doublet at the origin gives

$$\psi = -\frac{1}{2} U_\infty r^2 \sin^2 \theta + \frac{\lambda}{r} \sin^2 \theta \quad (8.96)$$

Examination of this relation reveals that the stream surface  $\psi = 0$  corresponds to the sphere of radius

$$r = a = \left( \frac{2\lambda}{U_\infty} \right)^{1/3} \quad (8.97)$$


This is exactly analogous to the cylinder flow of Fig. 8.14a formed by combining a uniform stream and a line doublet.

Letting  $\lambda = \frac{1}{2}U_\infty a^3$  for convenience, we rewrite Eq. (8.96) as

$$\frac{\psi}{\frac{1}{2}U_\infty a^2} = -\sin^2 \theta \left( \frac{r^2}{a^2} - \frac{a}{r} \right) \quad (8.98)$$

The streamlines for this sphere flow are plotted in Fig. 8.32. By differentiation from Eq. (8.86) the velocity components are

$$v_r = U_\infty \cos \theta \left( 1 - \frac{a^3}{r^3} \right) \quad v_\theta = -\frac{1}{2} U_\infty \sin \theta \left( 2 + \frac{a^3}{r^3} \right) \quad (8.99)$$

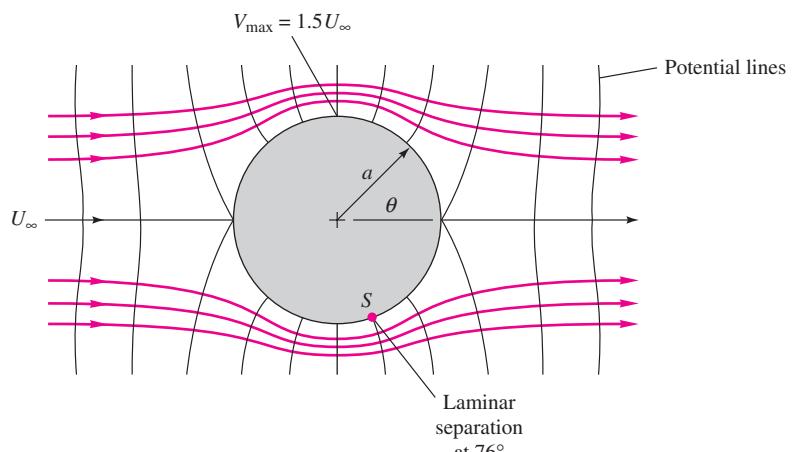

**Fig. 8.32** Streamlines and potential lines for inviscid flow past a sphere.

We see that the radial velocity vanishes at the sphere surface  $r = a$ , as expected. There is a stagnation point at the front ( $a, \pi$ ) and the rear ( $a, 0$ ) of the sphere. The maximum velocity occurs at the shoulder ( $a, \pm\frac{1}{2}\pi$ ), where  $v_r = 0$  and  $v_\theta = \mp 1.5U_\infty$ . The surface velocity distribution is

$$V_s = -v_\theta|_{r=a} = \frac{3}{2}U_\infty \sin \theta \quad (8.100)$$

Note the similarity to the cylinder surface velocity equal to  $2U_\infty \sin \theta$  from Eq. (8.39) with zero circulation.

Equation (8.100) predicts, as expected, an adverse pressure gradient on the rear ( $\theta < 90^\circ$ ) of the sphere. If we use this distribution with laminar boundary layer theory [for example, 15, p. 294], separation is computed to occur at about  $\theta = 76^\circ$ , so that in the actual flow pattern of Fig. 7.14 a broad wake forms in the rear. This wake interacts with the free stream and causes Eq. (8.100) to be inaccurate even in the front of the sphere. The measured maximum surface velocity is equal only to about  $1.3U_\infty$  and occurs at about  $\theta = 107^\circ$  (see Ref. 15, Sec. 4.10.4, for further details).

### The Concept of Hydrodynamic Mass

When a body moves through a fluid, it must push a finite mass of fluid out of the way. If the body is accelerated, the surrounding fluid must also be accelerated. The body behaves as if it were heavier by an amount called the *hydrodynamic mass* (also called the *added* or *virtual mass*) of the fluid. If the instantaneous body velocity is  $\mathbf{U}(t)$ , the summation of forces must include this effect:

$$\sum \mathbf{F} = (m + m_h) \frac{d\mathbf{U}}{dt} \quad (8.101)$$

where  $m_h$ , the hydrodynamic mass, is a function of body shape, the direction of motion, and (to a lesser extent) flow parameters such as the Reynolds number.

According to potential theory [2, Sec. 6.4; 3, Sec. 9.22],  $m_h$  depends only on the shape and direction of motion and can be computed by summing the total kinetic energy of the fluid relative to the body and setting this equal to an equivalent body energy:

$$KE_{\text{fluid}} = \int \frac{1}{2} dm V_{\text{rel}}^2 = \frac{1}{2} m_h U^2 \quad (8.102)$$


The integration of fluid kinetic energy can also be accomplished by a body-surface integral involving the velocity potential [16, Sec. 11].

Consider the previous example of a sphere immersed in a uniform stream. By subtracting out the stream velocity we can replot the flow as in Fig. 8.33, showing the streamlines relative to the moving sphere. Note the similarity to the doublet flow in Fig. 8.30. The relative velocity components are found by subtracting  $U$  from Eqs. (8.99):

$$v_r = -\frac{Ua^3 \cos \theta}{r^3} \quad v_\theta = -\frac{Ua^3 \sin \theta}{2r^3}$$

The element of fluid mass, in spherical polar coordinates, is

$$dm = \rho(2\pi r \sin \theta)r dr d\theta$$

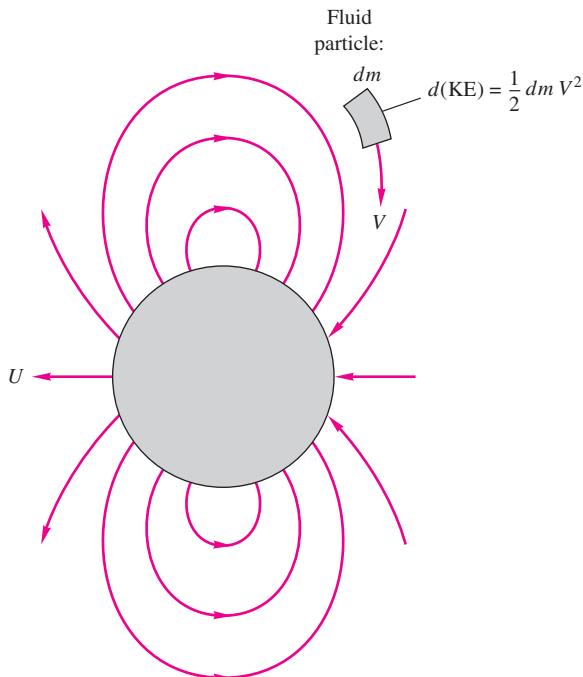

**Fig. 8.33** Potential flow streamlines relative to a moving sphere. Compare with Figs. 8.30 and 8.32.

When  $dm$  and  $V_{\text{rel}}^2 = v_r^2 + v_\theta^2$  are substituted into Eq. (8.102), the integral can be evaluated:

$$\text{KE}_{\text{fluid}} = \frac{1}{3} \rho \pi a^3 U^2$$

$$\text{or } m_h(\text{sphere}) = \frac{2}{3} \rho \pi a^3 \quad (8.103)$$

Thus, according to potential theory, the hydrodynamic mass of a sphere equals one-half of its displaced mass, independent of the direction of motion.

A similar result for a cylinder moving normal to its axis can be computed from Eqs. (8.38) after subtracting out the stream velocity. The result is

$$m_h(\text{cylinder}) = \rho \pi a^2 L \quad (8.104)$$

for a cylinder of length  $L$ , assuming two-dimensional motion. The cylinder's hydrodynamic mass equals its displaced mass.

Tables of hydrodynamic mass for various body shapes and directions of motion are given by Patton [17]. See also Ref. 21.

## 8.9 Numerical Analysis

When potential flow involves complicated geometries or unusual stream conditions, the classical superposition scheme of Secs. 8.3 and 8.4 becomes less attractive. Conformal mapping of body shapes, by using the complex-variable technique of Sec. 8.5, is no longer popular. Numerical analysis is the appropriate modern approach, and at least three different approaches are in use:

1. The finite element method (FEM) [6, 19]
2. The finite difference method (FDM) [5, 20, 23–27]

3. a. Integral methods with distributed singularities [18]
- b. The boundary element method [7, 38]

Methods 3a and 3b are closely related, having first been developed on an ad hoc basis by aerodynamicists in the 1960s [18] and then generalized into a multipurpose applied mechanics technique in the 1970s [7].

Methods 1 (or FEM) and 2 (or FDM), though strikingly different in concept, are comparable in scope, mesh size, and general accuracy. We concentrate here on the latter method for illustration purposes.

### The Finite Element Method

The finite element method [19] is applicable to all types of linear and nonlinear partial differential equations in physics and engineering. The computational domain is divided into small regions, usually triangular or quadrilateral. These regions are delineated with a finite number of *nodes* where the field variables—temperature, velocity, pressure, stream function, and so on—are to be calculated. The solution in each region is approximated by an algebraic combination of local nodal values. Then the approximate functions are integrated over the region, and their error is minimized, often by using a weighting function. This process yields a set of  $N$  algebraic equations for the  $N$  unknown nodal values. The nodal equations are solved simultaneously, by matrix inversion or iteration. For further details see Ref. 6 or 19.

### The Finite Difference Method

Although textbooks on numerical analysis [5, 20] apply finite difference techniques to many different problems, here we concentrate on potential flow. The idea of FDM is to approximate the partial derivatives in a physical equation by “differences” between nodal values spaced a finite distance apart—a sort of numerical calculus. The basic partial differential equation is thus replaced by a set of algebraic equations for the nodal values. For potential (inviscid) flow, these algebraic equations are linear, but they are generally nonlinear for viscous flows. The solution for nodal values is obtained by iteration or matrix inversion. Nodal spacings need not be equal.

Here we illustrate the two-dimensional Laplace equation, choosing for convenience the stream-function form


$$\frac{\partial^2 \psi}{\partial x^2} + \frac{\partial^2 \psi}{\partial y^2} = 0 \quad (8.105)$$

subject to known values of  $\psi$  along any body surface and known values of  $\partial\psi/\partial x$  and  $\partial\psi/\partial y$  in the free stream.

Our finite difference technique divides the flow field into equally spaced nodes, as shown in Fig. 8.34. To economize on the use of parentheses or functional notation, subscripts  $i$  and  $j$  denote the position of an arbitrary, equally spaced node, and  $\psi_{i,j}$  denotes the value of the stream function at that node:

$$\psi_{i,j} = \psi(x_0 + i \Delta x, y_0 + j \Delta y)$$

Thus  $\psi_{i+1,j}$  is just to the right of  $\psi_{i,j}$ , and  $\psi_{i,j+1}$  is just above.

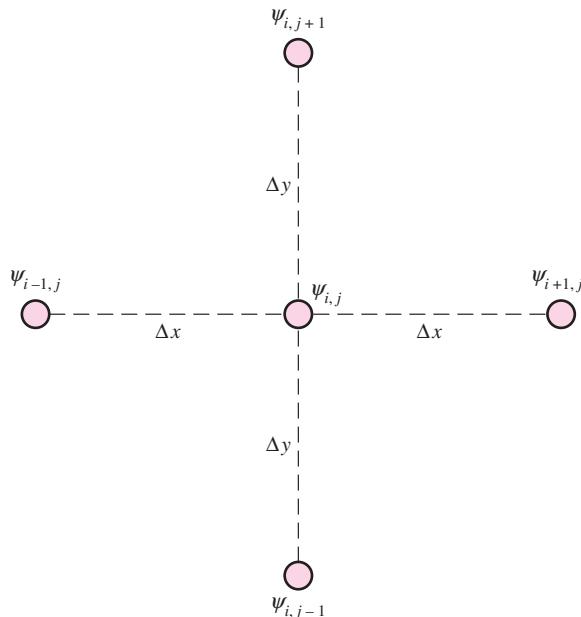

**Fig. 8.34** Definition sketch for a two-dimensional rectangular finite difference grid.

An algebraic approximation for the derivative  $\partial\psi/\partial x$  is

$$\frac{\partial\psi}{\partial x} \approx \frac{\psi(x + \Delta x, y) - \psi(x, y)}{\Delta x}$$

A similar approximation for the second derivative is

$$\frac{\partial^2\psi}{\partial x^2} \approx \frac{1}{\Delta x} \left[ \frac{\psi(x + \Delta x, y) - \psi(x, y)}{\Delta x} - \frac{\psi(x, y) - \psi(x - \Delta x, y)}{\Delta x} \right]$$

The subscript notation makes these expressions more compact:

$$\begin{aligned} \frac{\partial\psi}{\partial x} &\approx \frac{1}{\Delta x} (\psi_{i+1,j} - \psi_{i,j}) \\ \frac{\partial^2\psi}{\partial x^2} &\approx \frac{1}{\Delta x^2} (\psi_{i+1,j} - 2\psi_{i,j} + \psi_{i-1,j}) \end{aligned} \quad (8.106)$$

These formulas are exact in the calculus limit as  $\Delta x \rightarrow 0$ , but in numerical analysis we keep  $\Delta x$  and  $\Delta y$  finite, hence the term *finite differences*.

In an exactly similar manner we can derive the equivalent difference expressions for the  $y$  direction:

$$\begin{aligned} \frac{\partial\psi}{\partial y} &\approx \frac{1}{\Delta y} (\psi_{i,j+1} - \psi_{i,j}) \\ \frac{\partial^2\psi}{\partial y^2} &\approx \frac{1}{\Delta y^2} (\psi_{i,j+1} - 2\psi_{i,j} + \psi_{i,j-1}) \end{aligned} \quad (8.107)$$

The use of subscript notation allows these expressions to be programmed directly into a scientific computer language such as BASIC or FORTRAN.

When (8.106) and (8.107) are substituted into Laplace's equation (8.105), the result is the algebraic formula

$$2(1 + \beta)\psi_{i,j} \approx \psi_{i-1,j} + \psi_{i+1,j} + \beta(\psi_{i,j-1} + \psi_{i,j+1}) \quad (8.108)$$

where  $\beta = (\Delta x / \Delta y)^2$  depends on the mesh size selected. This finite difference model of Laplace's equation states that every nodal stream-function value  $\psi_{i,j}$  is a linear combination of its four nearest neighbors.

The most commonly programmed case is a square mesh ( $\beta = 1$ ), for which Eq. (8.108) reduces to

$$\psi_{i,j} \approx \frac{1}{4}(\psi_{i,j+1} + \psi_{i,j-1} + \psi_{i+1,j} + \psi_{i-1,j}) \quad (8.109)$$

Thus, for a square mesh, each nodal value equals the arithmetic average of the four neighbors shown in Fig. 8.29. The formula is easily remembered and easily programmed. If  $P(I, J)$  is a subscripted variable stream function, the BASIC or FORTRAN statement of (8.109) is

$$P(I, J) = 0.25 * (P(I, J + 1) + P(I, J - 1) + P(I + 1, J) + P(I - 1, J)) \quad (8.110)$$

This is applied in iterative fashion sweeping over each of the internal nodes ( $I, J$ ), with known values of  $P$  specified at each of the surrounding boundary nodes. Any initial guesses can be specified for the internal nodes  $P(I, J)$ , and the iteration process will converge to the final algebraic solution in a finite number of sweeps. The numerical error, compared with the exact solution of Laplace's equation, is proportional to the square of the mesh size.

Convergence can be speeded up by the *successive overrelaxation* (SOR) method, discussed by Cebeci [5]. The modified SOR form of the iteration is

$$\begin{aligned} P(I, J) &= P(I, J) + 0.25 * A * (P(I, J + 1) + P(I, J - 1) \\ &\quad + P(I + 1, J) + P(I - 1, J) - 4 * P(I, J)) \end{aligned} \quad (8.111)$$

The recommended value of the SOR convergence factor  $A$  is about 1.7. Note that the value  $A = 1.0$  reduces Eq. (8.111) to (8.110).


Let us illustrate the finite difference method with an example.

### EXAMPLE 8.6

Make a numerical analysis, using  $\Delta x = \Delta y = 0.2$  m, of potential flow in the duct expansion shown in Fig. 8.35. The flow enters at a uniform 10 m/s, where the duct width is 1 m, and is assumed to leave at a uniform velocity of 5 m/s, where the duct width is 2 m. There is a straight section 1 m long, a  $45^\circ$  expansion section, and a final straight section 1 m long.

### Solution

Using the mesh shown in Fig. 8.35 results in 45 boundary nodes and 91 internal nodes, with  $i$  varying from 1 to 16 and  $j$  varying from 1 to 11. The internal points are modeled by

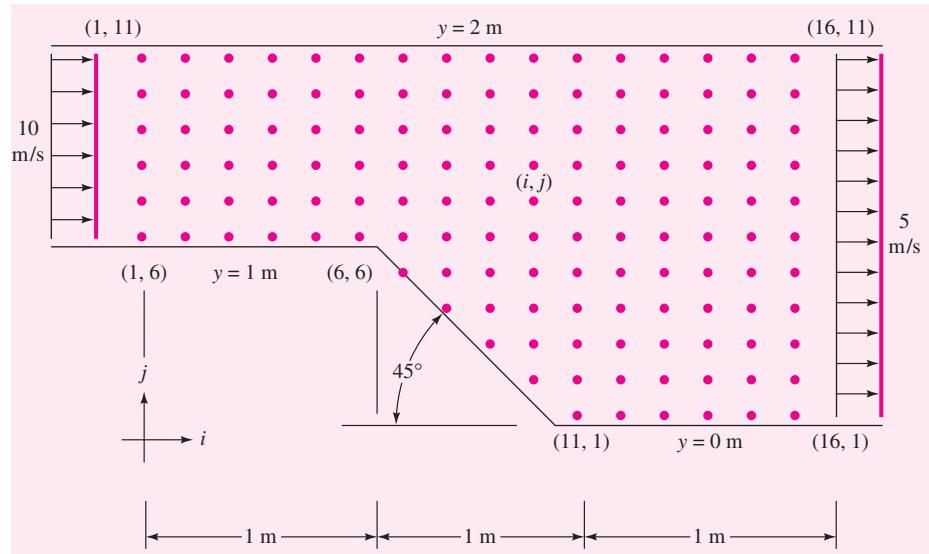

**Fig. 8.35** Numerical model of potential flow through a two-dimensional 45° expansion. The nodal points shown are 20 cm apart. There are 45 boundary nodes and 91 internal nodes.

Eq. (8.110). For convenience, let the stream function be zero along the lower wall. Then since the volume flow is  $(10 \text{ m/s})(1 \text{ m}) = 10 \text{ m}^2/\text{s}$  per unit depth, the stream function must equal  $10 \text{ m}^2/\text{s}$  along the upper wall. Over the entrance and exit planes, the stream function must vary linearly to give uniform velocities:

$$\text{Inlet: } \psi(1, J) = 2 * (J - 6) \quad \text{for } J = 7 \text{ to } 10$$

$$\text{Exit: } \psi(16, J) = J - 1 \quad \text{for } J = 2 \text{ to } 10$$

All these boundary values must be input to the program and are shown printed in Fig. 8.36.

Initial guesses are stored for the internal points, say, zero or an average value of  $5.0 \text{ m}^2/\text{s}$ . The program then starts at any convenient point, such as the upper left  $(2, 10)$ , and evaluates Eq. (8.110) at every internal point, repeating this sweep iteratively until there are no further changes (within some selected maximum change) in the nodal values. The results

$\psi = 10.00$	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00	10.00
8.00	8.02	8.04	8.07	8.12	8.20	8.30	8.41	8.52	8.62	8.71	8.79	8.85	8.91	8.95	9.00		
6.00	6.03	6.06	6.12	6.22	6.37	6.58	6.82	7.05	7.26	7.44	7.59	7.71	7.82	7.91	8.00		
4.00	4.03	4.07	4.13	4.26	4.48	4.84	5.24	5.61	5.93	6.19	6.41	6.59	6.74	6.88	7.00		
2.00	2.02	2.05	2.09	2.20	2.44	3.08	3.69	4.22	4.65	5.00	5.28	5.50	5.69	5.85	6.00		
$\psi = 0.00$	0.00	0.00	0.00	0.00	0.00	1.33	2.22	2.92	3.45	3.87	4.19	4.45	4.66	4.84	5.00		
						0.00	1.00	1.77	2.37	2.83	3.18	3.45	3.66	3.84	4.00		
						0.00	0.80	1.42	1.90	2.24	2.50	2.70	2.86	3.00			
						0.00	0.63	1.09	1.40	1.61	1.77	1.89	2.00				
						0.00	0.44	0.66	0.79	0.87	0.94	1.00					
						0.00	0.00	0.00	0.00	0.00	0.00	0.00					


**Fig. 8.36** Stream-function nodal values for the potential flow of Fig. 8.35. Boundary values are known inputs. Internal nodes are solutions to Eq. (8.110).

are the finite difference simulation of this potential flow for this mesh size; they are shown printed in Fig. 8.36 to three-digit accuracy. The reader should test a few nodes in Fig. 8.36 to verify that Eq. (8.110) is satisfied everywhere. The numerical accuracy of these printed values is difficult to estimate, since there is no known exact solution to this problem. In practice, one would keep decreasing the mesh size until there were no significant changes in nodal values.

Although Fig. 8.36 is the computer solution to the problem, these numbers must be manipulated to yield practical engineering results. For example, one can interpolate these numbers to sketch various streamlines of the flow. This is done in Fig. 8.37a. We see that the streamlines are curved both upstream and downstream of the corner regions, especially near the lower wall. This indicates that the flow is not one-dimensional.

The velocities at any point in the flow can be computed from finite difference formulas such as Eqs. (8.106) and (8.107). For example, at the point  $(I, J) = (3, 6)$ , from Eq. (8.107), the horizontal velocity is approximately

$$u(3, 6) \approx \frac{\psi(3, 7) - \psi(3, 6)}{\Delta y} = \frac{2.09 - 0.00}{0.2} = 10.45 \text{ m/s}$$

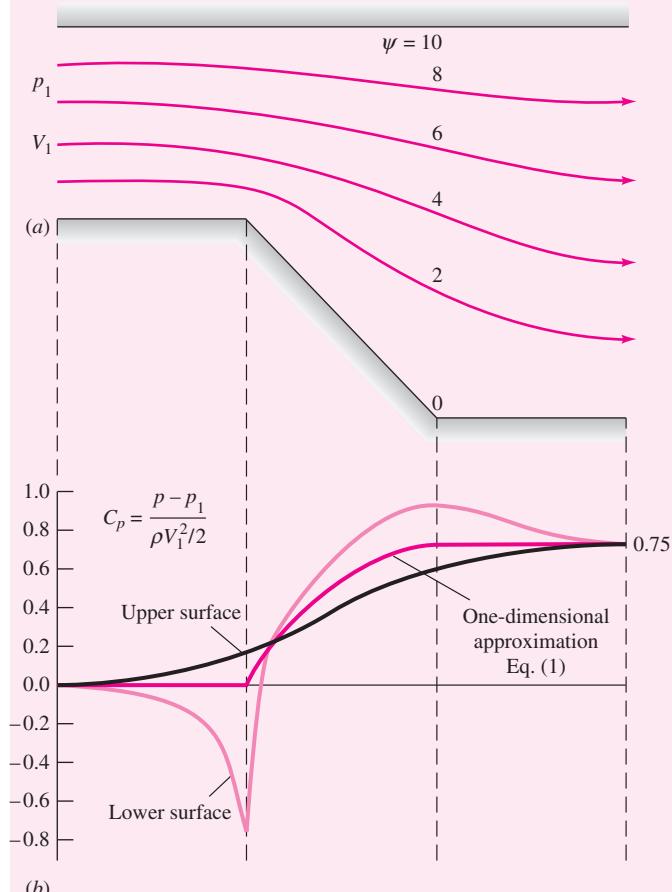

**Fig. 8.37** Useful results computed from Fig. 8.36: (a) streamlines of the flow; (b) pressure coefficient distribution along each wall.

and the vertical velocity is zero from Eq. (8.106). Directly above this on the upper wall, we estimate

$$u(3, 11) \approx \frac{\psi(3, 11) - \psi(3, 10)}{\Delta y} = \frac{10.00 - 8.07}{0.2} = 9.65 \text{ m/s}$$

The flow is not truly one-dimensional in the entrance duct. The lower wall, which contains the diverging section, accelerates the fluid, while the flat upper wall is actually decelerating the fluid.

Another output function, useful in making boundary layer analyses of the wall regions, is the pressure distribution along the walls. If  $p_1$  and  $V_1$  are the pressure and velocity at the entrance ( $I = 1$ ), conditions at any other point are computed from Bernoulli's equation (8.3), neglecting gravity:

$$p + \frac{1}{2}\rho V^2 = p_1 + \frac{1}{2}\rho V_1^2$$

which can be rewritten as a dimensionless pressure coefficient:

$$C_p = \frac{p - p_1}{\frac{1}{2}\rho V_1^2} = 1 - \left(\frac{V}{V_1}\right)^2$$

This determines  $p$  after  $V$  is computed from the stream-function differences in Fig. 8.36.

Figure 8.37b shows the computed wall pressure distributions as compared with the one-dimensional continuity approximation  $V_1 A_1 \approx V(x)A(x)$ , or

$$C_p(\text{one-dim}) \approx 1 - \left(\frac{A_1}{A}\right)^2 \quad (1)$$

The one-dimensional approximation, which is rather crude for this large ( $45^\circ$ ) expansion, lies between the upper and lower wall pressures. One-dimensional theory would be much more accurate for a  $10^\circ$  expansion.


Analyzing Fig. 8.37b, we predict that boundary layer separation will probably occur on the lower wall between the corners, where pressure is strongly rising (highly adverse gradient). Therefore potential theory is probably not too realistic for this flow, where viscous effects are strong. (Recall Figs. 6.27 and 7.8.)

Potential theory is *reversible*; that is, when we reverse the flow arrows in Fig. 8.37a, then Fig. 8.37b is still valid and would represent a  $45^\circ$  *contraction* flow. The pressure would fall on both walls (no separation) from  $x = 3$  m to  $x = 1$  m. Between  $x = 1$  m and  $x = 0$ , the pressure rises on the lower surface, indicating possible separation, probably just downstream of the corner.

This example should give the reader an idea of the usefulness and generality of numerical analysis of fluid flows.

## The Boundary Element Method

A relatively new technique for numerical solution of partial differential equations is the *boundary element method* (BEM). Reference 7 is an introductory textbook outlining the concepts of BEM. There are no interior elements. Rather, all nodes are placed on the boundary of the domain, as in Fig. 8.38. The “element” is a small piece of the boundary surrounding the node. The “strength” of the element can be either constant or variable.

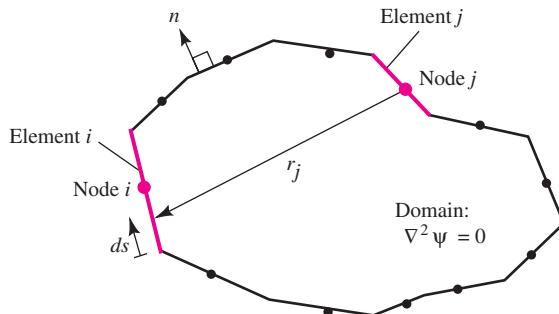

**Fig. 8.38** Boundary elements of constant strength in plane potential flow.

For plane potential flow, the method takes advantage of the particular solution

$$\psi^* = \frac{1}{2\pi} \ln \frac{1}{r} \quad (8.112)$$

which satisfies Laplace's equation,  $\nabla^2\psi = 0$ . Each element  $i$  is assumed to have a different strength  $\psi_i$ . Then  $r$  represents the distance from that element to any other point in the flow field. Summing all these elemental effects, with proper boundary conditions, will give the total solution to the potential flow problem.

At each element of the boundary, we typically know either the value of  $\psi$  or the value of  $\partial\psi/\partial n$ , where  $n$  is normal to the boundary. (Mixed combinations of  $\psi$  and  $\partial\psi/\partial n$  are also possible but are not discussed here.) The correct strengths  $\psi_i$  are such that these boundary conditions are satisfied at every element. Summing these effects over  $N$  elements requires integration by parts plus a careful evaluation of the (singular) effect of element  $i$  upon itself. The mathematical details are given in Ref. 7. The result is a set of  $N$  algebraic equations for the unknown boundary values. In the case of elements of constant strength, the final expression is

$$\frac{1}{2}\psi_i + \sum_{j=1}^N \psi_j \left( \int_j \frac{\partial\psi^*}{\partial n} ds \right) = \sum_{j=1}^N \left( \frac{\partial\psi}{\partial n} \right)_j \left( \int_j \psi^* ds \right) \quad i = 1 \text{ to } N \quad (8.113)$$

The integrals, which involve the logarithmic particular solution  $\psi^*$  from Eq. (8.112), are evaluated numerically for each element.

Equations (8.113) contain  $2N$  element values,  $\psi_i$  and  $(\partial\psi/\partial n)_i$ , of which  $N$  are known from the given boundary conditions. The remaining  $N$  are solved simultaneously from Eqs. (8.113). Generally this completes the analysis—only the boundary solution is computed, and interior points are not studied. In most cases, the boundary velocity and pressure are all that is needed.

We illustrated the method with stream function  $\psi$ . Naturally the entire technique also applies to velocity potential  $\phi$ , if we are given proper conditions on  $\phi$  or  $\partial\phi/\partial n$  at each boundary element. The method is readily extended to three dimensions [7, 38].

Reference 7 is a general introduction to boundary elements, while Ref. 38 emphasizes programming methods. Meanwhile, research continues. Dargush and Grigoriev [42] have developed a multilevel boundary element method for steady Stokes or *creeping* flows (see Sec. 7.6) in irregular geometries. Their scheme avoids the heavy memory and CPU-time requirements of most boundary element methods. They estimate that CPU time is reduced by a factor of 700,000 and required memory is reduced by a factor of 16,000.

## Viscous Flow Computer Models

Our previous finite difference model of Laplace's equation, as in Eq. (8.109), was very well behaved and converged nicely with or without overrelaxation. Much more care is needed to model the full Navier-Stokes equations. The challenges are quite different, and they have been met to a large extent, so there are now many textbooks [5, 20, 23 to 27] on (fully viscous) *computational fluid dynamics* (CFD). This is not a textbook on CFD, but we will address some of the issues in this section.

### One-Dimensional Unsteady Flow

We begin with a simplified problem, showing that even a single viscous term introduces new effects and possible instabilities. Recall (or review) Prob. P4.85, where a wall moves and drives a viscous fluid parallel to itself. Gravity is neglected. Let the wall be the plane  $y = 0$ , moving at a speed  $U_0(t)$ , as in Fig. 8.39. A uniform vertical grid, of spacing  $\Delta y$ , has nodes  $n$  at which the local velocity  $u_n^j$  is to be calculated, where superscript  $j$  denotes the time-step  $j\Delta t$ . The wall is  $n = 1$ . If  $u = u(y, t)$  only and  $v = w = 0$ , continuity,  $\nabla \cdot \mathbf{V} = 0$ , is satisfied, and we need only solve the  $x$ -momentum Navier-Stokes equation:

$$\frac{\partial u}{\partial t} = \nu \frac{\partial^2 u}{\partial y^2} \quad (8.114)$$


where  $\nu = \mu/\rho$ . Utilizing the same finite difference approximations as in Eq. (8.106), we may model Eq. (8.114) algebraically as a forward time difference and a central spatial difference:

$$\frac{u_n^{j+1} - u_n^j}{\Delta t} \approx \nu \frac{u_{n+1}^j - 2u_n^j + u_{n-1}^j}{\Delta y^2}$$

Rearrange and find that we can solve explicitly for  $u_n$  at the next time-step  $j + 1$ :

$$u_n^{j+1} \approx (1 - 2\sigma) u_n^j + \sigma(u_{n-1}^j + u_{n+1}^j) \quad \sigma = \frac{\nu \Delta t}{\Delta y^2} \quad (8.115)$$

Thus  $u$  at node  $n$  at the next time-step  $j + 1$  is a weighted average of three previous values, similar to the “four-nearest-neighbors” average in the laplacian model of

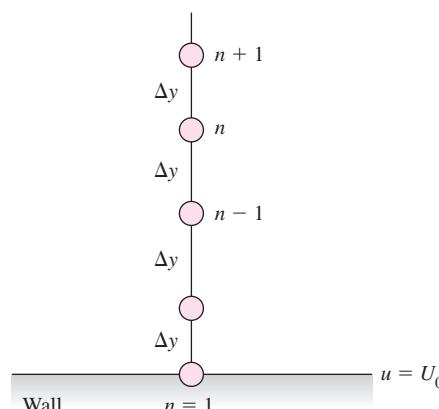

**Fig. 8.39** An equally spaced finite difference mesh for one-dimensional viscous flow [Eq. (8.114)].

Eq. (8.109). Since the new velocity is calculated immediately, Eq. (8.115) is called an *explicit* model. It differs from the well-behaved laplacian model, however, because it may be *unstable*. The weighting coefficients in Eq. (8.115) must all be positive to avoid divergence. Now  $\sigma$  is positive, but  $(1 - 2\sigma)$  may not be. Therefore, our explicit viscous flow model has a stability requirement:

$$\sigma = \frac{\nu \Delta t}{\Delta y^2} \leq \frac{1}{2} \quad (8.116)$$

Normally one would first set up the mesh size  $\Delta y$  in Fig. 8.39, after which Eq. (8.116) would limit the time-step  $\Delta t$ . The solutions for nodal values would then be stable, but not necessarily that accurate. The mesh sizes  $\Delta y$  and  $\Delta t$  could be reduced to increase accuracy, similar to the case of the potential flow laplacian model (8.109).

For example, to solve Prob. P4.85 numerically, one sets up a mesh with plenty of nodes (30 or more  $\Delta y$  within the expected viscous layer); selects  $\Delta t$  according to Eq. (8.116); and sets two boundary conditions<sup>8</sup> for all  $j$ :  $u_1 = U_0 \sin \omega t$  and  $u_N = 0$ , where  $N$  is the outermost node. For initial conditions, perhaps assume the fluid initially at rest:  $u_n^1 = 0$  for  $2 \leq n \leq N - 1$ . Sweeping the nodes  $2 \leq n \leq N - 1$  using Eq. (8.115) (an Excel spreadsheet is excellent for this), one generates numerical values of  $u_n^j$  for as long as one desires. After an initial transient, the final “steady” fluid oscillation will approach the classical solution in viscous flow textbooks [15]. Try Prob. P8.115 to demonstrate this.

### An Alternative Implicit Approach

In many finite difference problems, a stability limitation such as Eq. (8.116) requires an extremely small time-step. To allow larger steps, one can recast the model in an implicit fashion by evaluating the second-derivative model in Eq. (8.114) at the *next* time-step:

$$\frac{u_n^{j+1} - u_n^j}{\Delta t} \approx \nu \frac{u_{n+1}^{j+1} - 2u_n^{j+1} + u_{n-1}^{j+1}}{\Delta y^2}$$

This rearrangement is unconditionally stable for any  $\sigma$ , but now we have *three* unknowns:

$$-\sigma u_{n-1}^{j+1} + (1 + 2\sigma)u_n^{j+1} - \sigma u_{n+1}^{j+1} \approx u_n^j \quad (8.117)$$

This is an *implicit* model, meaning that one must solve a large system of algebraic equations for the new nodal values at time  $j + 1$ . Fortunately, the system is narrowly banded, with the unknowns confined to the principal diagonal and its two nearest diagonals. In other words, the coefficient matrix of Eq. (8.117) is *tridiagonal*, a happy event. A direct method, called the *tridiagonal matrix algorithm* (TDMA), is available and explained in most CFD texts [20, 23 to 27]. If you have not learned TDMA yet, Eq. (8.117) converges satisfactorily by rearrangement and iteration:

$$u_n^{j+1} \approx \frac{u_n^j + \sigma(u_{n-1}^{j+1} + u_{n+1}^{j+1})}{1 + 2\sigma} \quad (8.118)$$

<sup>8</sup>Finite differences are not analytical; one must set  $U_0$  and  $\omega$  equal to numerical values.

At each time-step  $j + 1$ , sweep the nodes  $2 \leq n \leq N - 1$  over and over, using Eq. (8.118), until the nodal values have converged. This implicit method is stable for any  $\sigma$ , however large. To ensure accuracy, though, one should keep  $\Delta t$  and  $\Delta y$  small compared to the basic time and length scales of the problem. This author's habit is to keep  $\Delta t$  and  $\Delta y$  small enough that nodal values change no more than 10 percent from one  $(n, j)$  to the next.

### EXAMPLE 8.7

SAE 30 oil at 20°C is at rest near a wall when the wall suddenly begins moving at a constant 1 m/s. Using the explicit model of Eq. (8.114), estimate the oil velocity at  $y = 3$  cm after 1 second of wall motion.

#### Solution

For SAE 30 oil, from Table A.3,  $\nu = 0.29/891 = 3.25 \text{ E-}4 \text{ m}^2/\text{s}$ . For convenience in putting a node exactly at  $y = 3$  cm, choose  $\Delta y = 0.01 \text{ m}$ . The stability limit (8.116) is  $\nu\Delta t/\Delta y^2 < 0.5$ , or  $\Delta t < 0.154 \text{ s}$ . Again for convenience, to hit  $t = 1 \text{ s}$  on the nose, choose  $\Delta t = 0.1 \text{ s}$ , or  $\sigma = 0.3255$  and  $(1 - 2\sigma) = 0.3491$ . Then our explicit algebraic model (8.115) for this problem is

$$u_n^{j+1} \approx 0.3491 u_n^j + 0.3255(u_{n-1}^j + u_{n+1}^j) \quad (1)$$

We apply this relation from  $n = 2$  out to at least  $n = N = 15$ , to make sure that the desired value of  $u$  at  $n = 3$  is accurate. The wall no-slip boundary requires  $u_1^j = 1.0 \text{ m/s}$  = constant for all  $j$ . The outer boundary condition is  $u_N = 0$ . The initial conditions are  $u_n^1 = 0$  for  $n \geq 2$ . We then apply Eq. (1) repeatedly for  $n \geq 2$  until we reach  $j = 11$ , which corresponds to  $t = 1 \text{ s}$ . This is easily programmed on a spreadsheet such as Excel. Here we print out only  $j = 1, 6$ , and 11 as follows:

$j$	$t$	$u_1$	$u_2$	$u_3$	$u_4$	$u_5$	$u_6$	$u_7$	$u_8$	$u_9$	$u_{10}$	$u_{11}$
1	0.000	1.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
6	0.500	1.000	0.601	0.290	0.107	0.027	0.004	0.000	0.000	0.000	0.000	0.000
11	1.000	1.000	0.704	0.446	<b>0.250</b>	0.123	0.052	0.018	0.005	0.001	0.000	0.000

Note: Units for  $t$  and  $u$ 's are s and m/s, respectively.

Our numerical estimate is  $u_4^{11} = u(3 \text{ cm}, 1 \text{ s}) \approx 0.250 \text{ m/s}$ , which is about 4 percent high—this problem has a known exact solution,  $u = 0.241 \text{ m/s}$  [15]. We could improve the accuracy indefinitely by decreasing  $\Delta y$  and  $\Delta t$ .

### Steady Two-Dimensional Laminar Flow

The previous example, unsteady one-dimensional flow, had only one viscous term and no convective accelerations. Let us look briefly at incompressible two-dimensional steady flow, which has four of each type of term, plus a nontrivial continuity equation:

Continuity: 
$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0 \quad (8.119a)$$

$$x \text{ momentum: } u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial x} + \nu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} \right) \quad (8.119b)$$

$$y \text{ momentum } u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} = -\frac{1}{\rho} \frac{\partial p}{\partial y} + \nu \left( \frac{\partial^2 v}{\partial x^2} + \frac{\partial^2 v}{\partial y^2} \right) \quad (8.119c)$$

These equations, to be solved for  $(u, v, p)$  as functions of  $(x, y)$ , are familiar to us from analytical solutions in Chaps. 4 and 6. However, to a numerical analyst, they are odd, because there is no *pressure equation*—that is, a differential equation for which the dominant derivatives involve  $p$ . This situation has led to several different “pressure adjustment” schemes in the literature [20, 23 to 27], most of which manipulate the continuity equation to insert a pressure correction.

A second difficulty in Eqs. (8.119b and c) is the presence of nonlinear convective accelerations such as  $u(\partial u / \partial x)$ , which creates asymmetry in viscous flows. Early attempts, which modeled such terms with a central difference, led to numerical instability. The remedy is to relate convection finite differences solely to the *upwind* flow entering the cell, ignoring the downwind cell. For example, the derivative  $\partial u / \partial x$  could be modeled, for a given cell, as  $(u_{\text{upwind}} - u_{\text{cell}}) / \Delta x$ . Such improvements have made fully viscous CFD an effective tool, with various commercial user-friendly codes available. For details beyond our scope, see Refs. 20 and 23 to 27.


Mesh generation and gridding have also become quite refined in modern CFD. Figure 8.40 illustrates a CFD solution of two-dimensional flow past an NACA 66(MOD) hydrofoil [28]. The gridding in Fig. 8.40a is of the C type, which wraps around the leading edge and trails off behind the foil, thus capturing the important near-wall and wake details without wasting nodes in front or to the sides. The grid size is 262 by 91.

The CFD model for this hydrofoil flow is also quite sophisticated: a full Navier-Stokes solver with turbulence modeling [29] and allowance for cavitation bubble formation when surface pressures drop below the local vapor pressure. Figure 8.40b compares computed and experimental surface pressure coefficients for an angle of attack of  $1^\circ$ . The dimensionless pressure coefficient is defined as  $C_p = (p_{\text{surface}} - p_\infty) / (\rho V_\infty^2 / 2)$ . The agreement is excellent, as indeed it is also for cases where the hydrofoil cavitates [28]. Clearly, when properly implemented for the proper flow cases, CFD can be an extremely effective tool for engineers.

## Commercial CFD Codes


The arrival of the third millennium has seen an enormous emphasis on computer applications in nearly every field, fluid mechanics being a prime example. It is now possible, at least for moderately complex geometries and flow patterns, to model on a computer, approximately, the equations of motion of fluid flow, with dedicated CFD textbooks available [5, 20, 23 to 27]. The flow region is broken into a fine grid of elements and nodes, which algebraically simulate the basic partial differential equations of flow. While simple two-dimensional flow simulations have long been reported and can be programmed as student exercises, three-dimensional flows, involving thousands or even millions of grid points, are now solvable with the modern supercomputer.

Although elementary computer modeling was treated briefly here, the general topic of CFD is essentially for advanced study or professional practice. The big change over

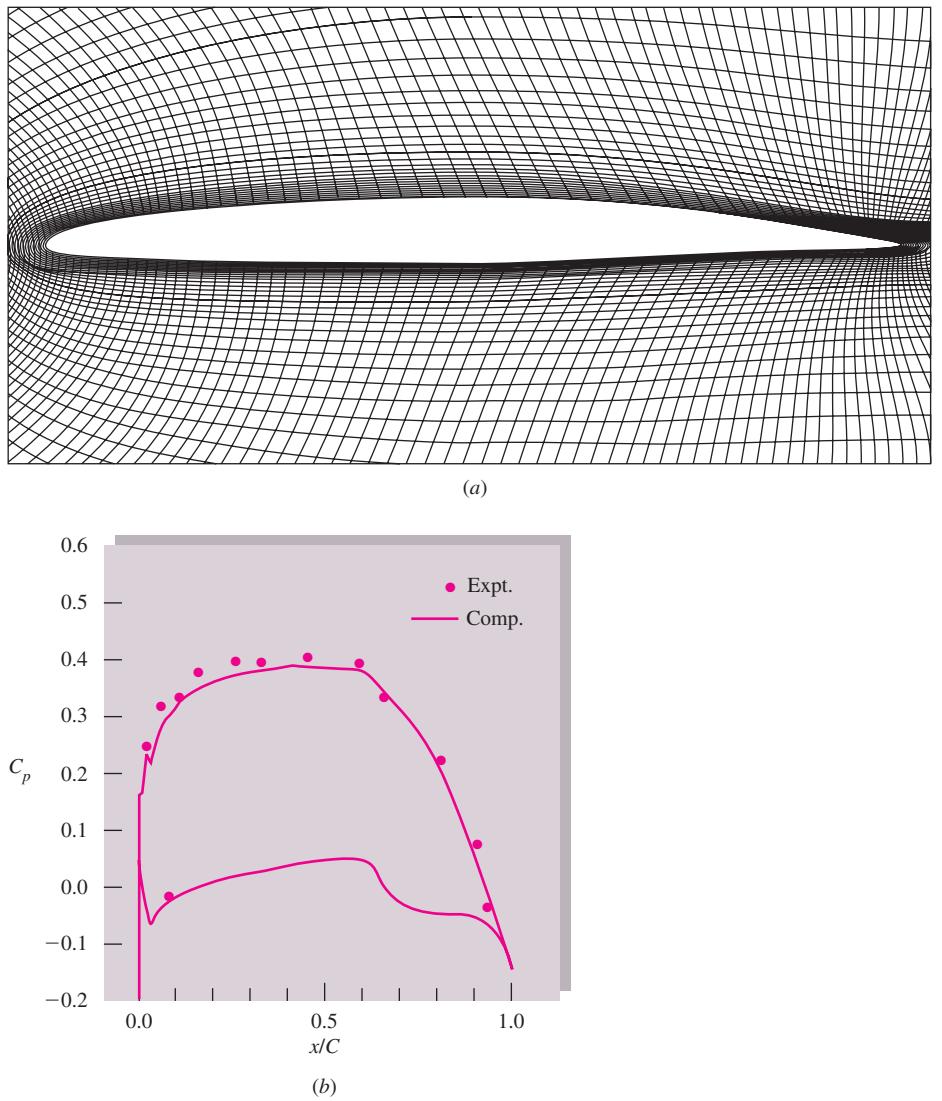

**Fig. 8.40** CFD results for water flow past an NASA 66(MOD) hydrofoil (from Ref. 28, with permission of the American Society of Mechanical Engineers): (a) C gridding, 262 by 91 nodes; (b) surface pressures at  $\alpha = 1^\circ$ .

the past decade is that engineers, rather than laboriously programming CFD problems themselves, can now take advantage of any of several commercial CFD codes. These extensive software packages allow engineers to construct a geometry and boundary conditions to simulate a given viscous flow problem. The software then grids the flow region and attempts to compute flow properties at each grid element. The convenience is great; the danger is also great. That is, computations are not merely automatic, like when using a hand calculator, but rather require care and concern from the user. Convergence and accuracy are real problems for the modeler. Use of the codes requires some art and experience. In particular, when the flow Reynolds number,  $Re = \rho VL/\mu$ , goes from moderate (laminar flow) to high (turbulent flow), the

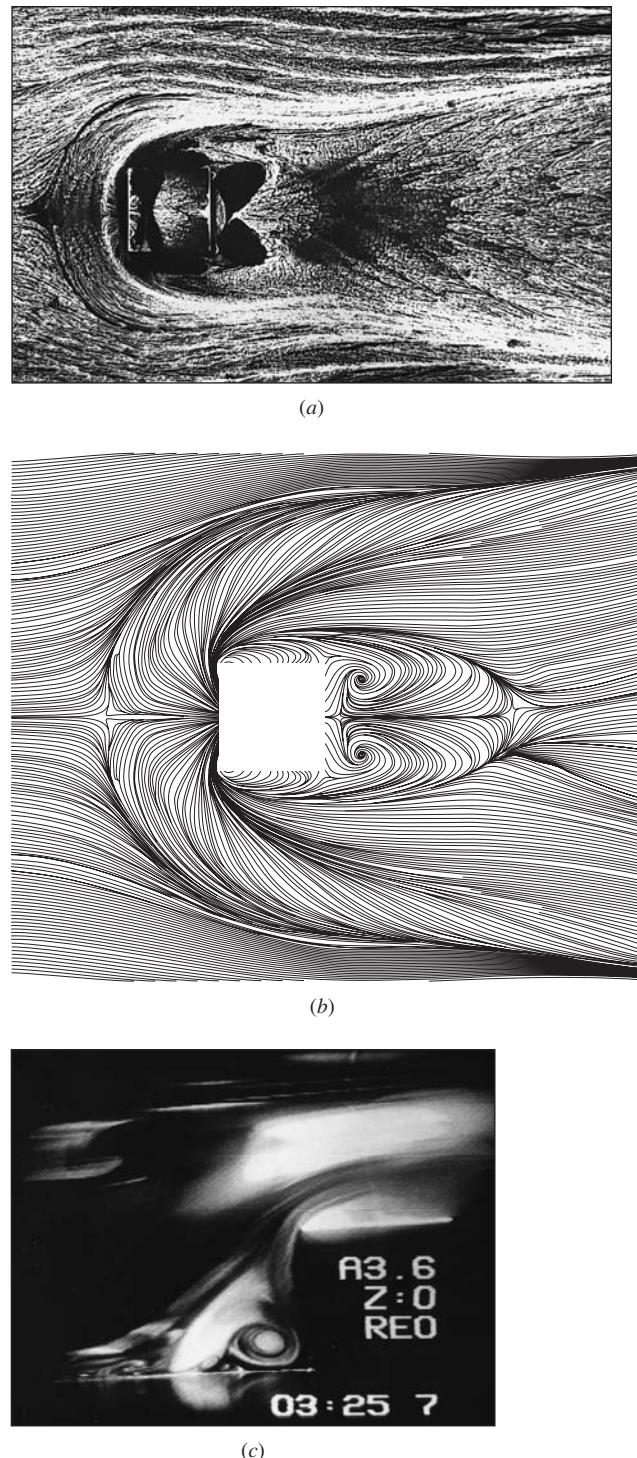

**Fig. 8.41** Flow over a surface-mounted cube creates a complex and perhaps unexpected pattern: (a) experimental oil-streak visualization of surface flow at  $Re = 40,000$  (based on cube height) (*Courtesy of Robert Martinuzzi with the permission of the American Society of Mechanical Engineers*); (b) computational large-eddy simulation of the surface flow in (a) (from Ref. 32, courtesy of Kishan Shah, Stanford University); and (c) a side view of the flow in (a) visualized by smoke generation and a laser light sheet (*Courtesy of Robert Martinuzzi with the permission of the American Society of Mechanical Engineers*).

accuracy of the simulation is no longer assured in any real sense. The reason is that turbulent flows are not completely resolved by the full equations of motion, and one resorts to using approximate turbulence models.

Turbulence models [29] are developed for particular geometries and flow conditions and may be inaccurate or unrealistic for others. This is discussed by Freitas [30], who compared eight different commercial code calculations (FLOW-3D, FLOTTRAN, STAR-CD, N3S, CFD-ACE, FLUENT, CFDS-FLOW3D, and NISA/3D-FLUID) with experimental results for five benchmark flow experiments. Calculations were made by the vendors themselves. Freitas concludes that commercial codes, though promising in general, can be inaccurate for certain laminar and turbulent flow situations. Cheng [25] discusses a popular new commercial program called FlowLab. Recent modifications to the standard turbulence models have improved their accuracy and reliability, as shown by Elkhoury [47].

An example of erratic CFD results has already been mentioned here, namely, the drag and lift of a rotating cylinder, Fig. 8.15. Perhaps because the flow itself is physically unstable [41, 44], results computed by different workers are strikingly different: Some predicted forces are high, some low, some increase, some decrease. The text by Sengupta [27] discusses why several popular CFD schemes can be unreliable.

In spite of this warning to treat CFD codes with care, one should also realize that the results of a given CFD simulation can be spectacular. Figure 8.41 illustrates turbulent flow past a cube mounted on the floor of a channel whose clearance is twice the cube height. Compare Fig. 8.41a, a top view of the experimental surface flow [31] as visualized by oil streaks, with Fig. 8.41b, a CFD supercomputer result using the method of large-eddy simulation [32, 33]. The agreement is remarkable. The C-shaped flow pattern in front of the cube is caused by formation of a horseshoe vortex, as seen in a side view of the experiment [31] in Fig. 8.41c. Horseshoe vortices commonly result when surface shear flows meet an obstacle. We conclude that CFD has a tremendous potential for flow prediction.

## Summary

This chapter has analyzed a highly idealized but very useful type of flow: inviscid, incompressible, irrotational flow, for which Laplace's equation holds for the velocity potential (8.1) and for the plane stream function (8.7). The mathematics is well developed, and solutions of potential flows can be obtained for practically any body shape.

Some solution techniques outlined here are (1) superposition of elementary line or point solutions in both plane and axisymmetric flow, (2) the analytic functions of a complex variable, (3) use of variable-strength vortex sheets, and (4) numerical analysis on a computer. Potential theory is especially useful and accurate for thin bodies such as airfoils. The only requirement is that the boundary layer be thin—in other words, that the Reynolds number be large.

For blunt bodies or highly divergent flows, potential theory serves as a first approximation, to be used as input to a boundary layer analysis. The reader should consult the advanced texts [for example, 2 to 4, 11 to 13] for further applications of potential theory. Section 8.9 discussed computational methods for viscous (nonpotential) flows.

## Problems


Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon may require the use of a computer. The standard end-of-chapter problems P8.1 to P8.115 (categorized in the problem list here) are followed by word problems W8.1 to W8.7, comprehensive problems C8.1 to C8.7, and design projects D8.1 to D8.3.

### Problem Distribution

Section	Topic	Problems
8.1	Introduction and review	P8.1–P8.7
8.2	Elementary plane flow solutions	P8.8–P8.17
8.3	Superposition of plane flows	P8.18–P8.34
8.4	Plane flow past closed-body shapes	P8.35–P8.59
8.5	The complex potential	P8.60–P8.71
8.6	Images	P8.72–P8.79
8.7	Airfoil theory: two-dimensional	P8.80–P8.84
8.7	Airfoil theory: finite-span wings	P8.85–P8.90
8.8	Axisymmetric potential flow	P8.91–P8.103
8.8	Hydrodynamic mass	P8.104–P8.105
8.9	Numerical methods	P8.106–P8.115

### Introduction and review

- P8.1** Prove that the streamlines  $\psi(r, \theta)$  in polar coordinates from Eqs. (8.10) are orthogonal to the potential lines  $\phi(r, \theta)$ .
- P8.2** The steady plane flow in Fig. P8.2 has the polar velocity components  $v_\theta = \Omega r$  and  $v_r = 0$ . Determine the circulation  $\Gamma$  around the path shown.

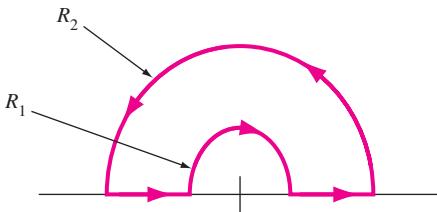

- P8.3** Using cartesian coordinates, show that each velocity component ( $u, v, w$ ) of a potential flow satisfies Laplace's equation separately.
- P8.4** Is the function  $1/r$  a legitimate velocity potential in plane polar coordinates? If so, what is the associated stream function  $\psi(r, \theta)$ ?
- P8.5** A proposed harmonic function  $F(x, y, z)$  is given by


$$F = 2x^2 + y^3 - 4xz + f(y)$$

(a) If possible, find a function  $f(y)$  for which the laplacian of  $F$  is zero. If you do indeed solve part (a), can your final function  $F$  serve as (b) a velocity potential or (c) a stream function?

- P8.6** Given the plane polar coordinate velocity potential  $\phi = Br^2\cos(2\theta)$ , where  $B$  is a constant. (a) Show that a stream function also exists. (b) Find the algebraic form of  $\psi(r, \theta)$ . (c) Find any stagnation points in this flow field. Consider a flow with constant density and viscosity. If the flow possesses a velocity potential as defined by Eq. (8.1), show that it exactly satisfies the full Navier-Stokes equations (4.38). If this is so, why for inviscid theory do we back away from the full Navier-Stokes equations?

### Elementary plane flow solutions

- P8.8** For the velocity distribution  $u = -B y, v = +Bx, w = 0$ , evaluate the circulation  $\Gamma$  about the rectangular closed curve defined by  $(x, y) = (1, 1), (3, 1), (3, 2)$ , and  $(1, 2)$ . Interpret your result, especially vis-à-vis the velocity potential.
- P8.9** Consider the two-dimensional flow  $u = -Ax, v = Ay$ , where  $A$  is a constant. Evaluate the circulation  $\Gamma$  around the rectangular closed curve defined by  $(x, y) = (1, 1), (4, 1), (4, 3)$ , and  $(1, 3)$ . Interpret your result, especially vis-à-vis the velocity potential.
- P8.10** A two-dimensional Rankine half-body, 8 cm thick, is placed in a water tunnel at 20°C. The water pressure far upstream along the body centerline is 105 kPa. What is the nose radius of the half-body? At what tunnel flow velocity will cavitation bubbles begin to form on the surface of the body?
- P8.11** A power plant discharges cooling water through the manifold in Fig. P8.11, which is 55 cm in diameter and 8 m high and is perforated with 25,000 holes 1 cm in diameter. Does this manifold simulate a line source? If so, what is the equivalent source strength  $m$ ?

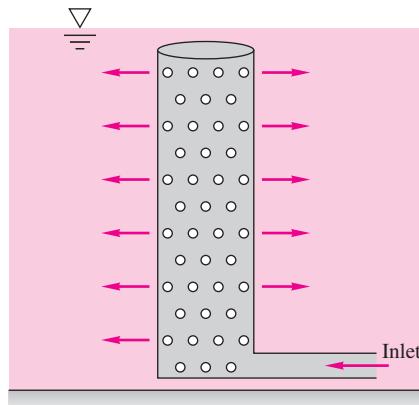

P8.11

- P8.12** Consider the flow due to a vortex of strength  $K$  at the origin. Evaluate the circulation from Eq. (8.23) about the clockwise path from  $(r, \theta) = (a, 0)$  to  $(2a, 0)$  to  $(2a, 3\pi/2)$  to  $(a, 3\pi/2)$  and back to  $(a, 0)$ . Interpret the result.

- P8.13** Starting at the stagnation point in Fig. 8.6, the fluid acceleration along the half-body surface rises to a maximum and eventually drops off to zero far downstream. (a) Does this maximum occur at the point in Fig. 8.6 where  $U_{\max} = 1.26U$ ? (b) If not, does the maximum acceleration occur before or after that point? Explain.

- P8.14** A tornado may be modeled as the circulating flow shown in Fig. P8.14, with  $v_r = v_z = 0$  and  $v_\theta(r)$  such that

$$v_\theta = \begin{cases} \frac{\omega r}{r} & r \leq R \\ \frac{\omega R^2}{r} & r > R \end{cases}$$

Determine whether this flow pattern is irrotational in either the inner or outer region. Using the  $r$ -momentum equation (D.5) of App. D, determine the pressure distribution  $p(r)$  in the tornado, assuming  $p = p_\infty$  as  $r \rightarrow \infty$ . Find the location and magnitude of the lowest pressure.

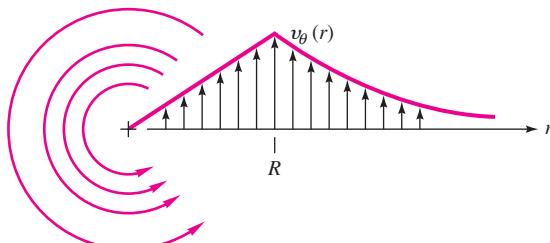


Fig. P8.14

- P8.15** A category-3 hurricane on the Saffir-Simpson scale ([www.encyclopedia.com](http://www.encyclopedia.com)) has a maximum velocity of 130 mi/h. Let the match-point radius be  $R = 18$  km (see Fig. P8.14). Assuming sea-level standard conditions at large  $r$ , (a) find the minimum pressure; (b) find the pressure at the match-point.

- P8.16** Air flows at 1.2 m/s along a flat surface when it encounters a jet of air issuing from the horizontal wall at point A, as in Fig. P8.16. The jet volume flow is  $0.4 \text{ m}^3/\text{s} \cdot \text{m}$  per unit depth into the paper. If the jet is approximated as an inviscid line source, (a) locate the stagnation point S on the wall. (b) How far vertically will the jet flow extend into the stream?

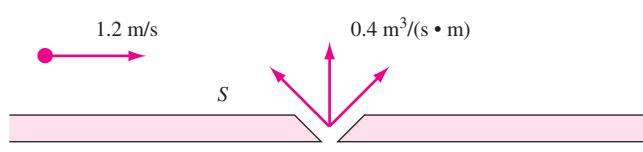


Fig. P8.16

- P8.17** Find the position  $(x, y)$  on the upper surface of the half-body in Fig. 8.9a for which the local velocity equals the uniform stream velocity. What should be the pressure at this point?

### Superposition of plane flows

- P8.18** Plot the streamlines and potential lines of the flow due to a line source of strength  $m$  at  $(a, 0)$  plus a source  $3m$  at  $(-a, 0)$ . What is the flow pattern viewed from afar?

- P8.19** Plot the streamlines and potential lines of the flow due to a line source of strength  $3m$  at  $(a, 0)$  plus a sink  $-m$  at  $(-a, 0)$ . What is the pattern viewed from afar?

- P8.20** Plot the streamlines of the flow due to a line vortex  $+K$  at  $(0, +a)$  and a vortex  $-K$  at  $(0, -a)$ . What is the pattern viewed from afar?

- P8.21** At point A in Fig. P8.21 is a clockwise line vortex of strength  $K = 12 \text{ m}^2/\text{s}$ . At point B is a line source of strength  $m = 25 \text{ m}^2/\text{s}$ . Determine the resultant velocity induced by these two at point C.

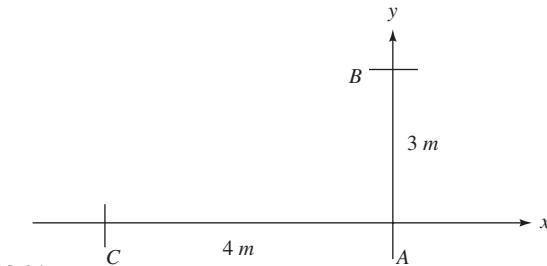


Fig. P8.21

- P8.22** Consider inviscid stagnation flow,  $\psi = Kxy$  (see Fig. 8.19b), superimposed with a source at the origin of strength  $m$ . Plot the resulting streamlines in the upper half-plane, using the length scale  $a = (m/K)^{1/2}$ . Give a physical interpretation of the flow pattern.

- P8.23** Find the resultant velocity vector induced at point A in Fig. P8.23 by the uniform stream, vortex, and line source.

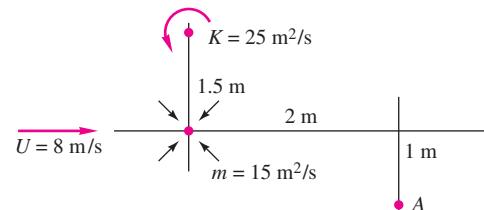


Fig. P8.23

- P8.24** Line sources of equal strength  $m = Ua$ , where  $U$  is a reference velocity, are placed at  $(x, y) = (0, a)$  and  $(0, -a)$ .


Sketch the stream and potential lines in the upper half plane.

Is  $y = 0$  a “wall”? If so, sketch the pressure coefficient

$$C_p = \frac{p - p_0}{\frac{1}{2}\rho U^2}$$


along the wall, where  $p_0$  is the pressure at  $(0, 0)$ . Find the minimum pressure point and indicate where flow separation might occur in the boundary layer.

- P8.25** Let the vortex/sink flow of Eq. (8.16) simulate a tornado as in Fig. P8.25. Suppose that the circulation about the tornado is  $\Gamma = 8500 \text{ m}^2/\text{s}$  and that the pressure at  $r = 40 \text{ m}$  is 2200 Pa less than the far-field pressure. Assuming inviscid flow at sea-level density, estimate (a) the appropriate sink strength  $-m$ , (b) the pressure at  $r = 15 \text{ m}$ , and (c) the angle  $\beta$  at which the streamlines cross the circle at  $r = 40 \text{ m}$  (see Fig. P8.25).

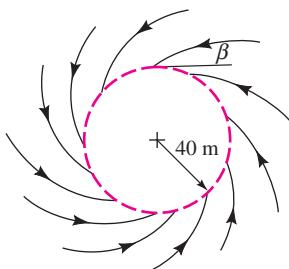

P8.25


- P8.26** A coastal power plant takes in cooling water through a vertical perforated manifold, as in Fig. P8.26. The total volume flow intake is  $110 \text{ m}^3/\text{s}$ . Currents of  $25 \text{ cm/s}$  flow past the manifold, as shown. Estimate (a) how far downstream and (b) how far normal to the paper the effects of the intake are felt in the ambient 8-m-deep waters.

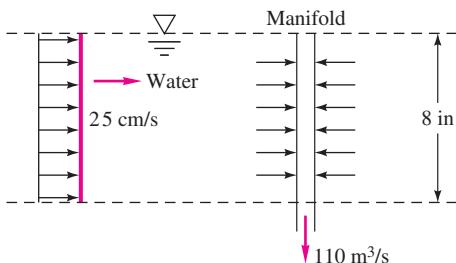

P8.26

- P8.27** Water at  $20^\circ\text{C}$  flows past a half-body as shown in Fig. P8.27. Measured pressures at points A and B are 160 kPa and 90 kPa, respectively, with uncertainties of 3 kPa each. Estimate the stream velocity and its uncertainty.

- P8.28** Sources of equal strength  $m$  are placed at the four symmetric positions  $(x, y) = (a, a), (-a, a), (-a, -a)$ , and  $(a, -a)$ . Sketch the streamline and potential line patterns. Do any plane “walls” appear?

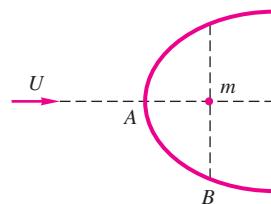


P8.27

- P8.29** A uniform water stream,  $U_\infty = 20 \text{ m/s}$  and  $\rho = 998 \text{ kg/m}^3$ , combines with a source at the origin to form a half-body. At  $(x, y) = (0, 1.2 \text{ m})$ , the pressure is 12.5 kPa less than  $p_\infty$ . (a) Is this point outside the body? Estimate (b) the appropriate source strength  $m$  and (c) the pressure at the nose of the body.


- P8.30** A tornado is simulated by a line sink  $m = -1000 \text{ m}^2/\text{s}$  plus a line vortex  $K = 1600 \text{ m}^2/\text{s}$ . Find the angle between any streamline and a radial line, and show that it is independent of both  $r$  and  $\theta$ . If this tornado forms in sea-level standard air, at what radius will the local pressure be equivalent to 29 inHg?

- P8.31** A Rankine half-body is formed as shown in Fig. P8.31. For the stream velocity and body dimension shown, compute (a) the source strength  $m$  in  $\text{m}^2/\text{s}$ , (b) the distance  $a$ , (c) the distance  $h$ , and (d) the total velocity at point A.

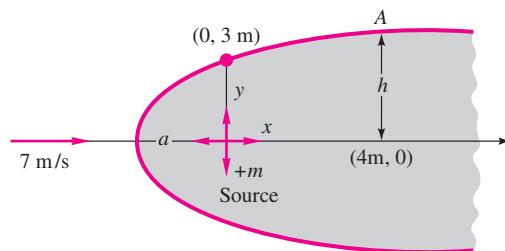

P8.31

- P8.32** A source and sink of equal strength,  $m = 25 \text{ m}^2/\text{s}$ , are near a wall, as in Fig. P8.32. Find the resultant velocity induced by this pair at point A on the wall.

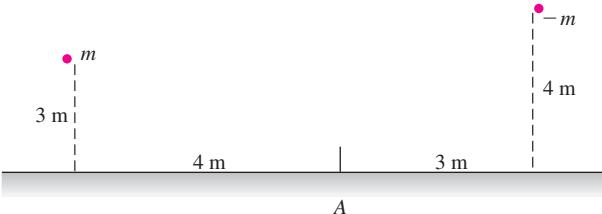


P8.32

- P8.33** Sketch the streamlines, especially the body shape, due to equal line sources  $+m$  at  $(0, +a)$  and  $(0, -a)$  plus a uniform stream  $U_\infty = ma$ .

- P8.34** Consider three equally spaced sources of strength  $m$  placed at  $(x, y) = (+a, 0), (0, 0)$ , and  $(-a, 0)$ . Sketch the resulting streamlines, noting the position of any stagnation points. What would the pattern look like from afar?

### Plane flow past closed-body shapes

- P8.35** A uniform stream,  $U_\infty = 4$  m/s, approaches a Rankine oval as in Fig. 8.13, with  $a = 50$  cm. Find the strength  $m$  of the source–sink pair, in  $\text{m}^2/\text{s}$ , which will cause the total length of the oval to be 250 cm. What is the maximum width of this oval?
- P8.36** When a line source–sink pair with  $m = 2 \text{ m}^2/\text{s}$  is combined with a uniform stream, it forms a Rankine oval whose minimum dimension is 40 cm. If  $a = 15$  cm, what are the stream velocity and the velocity at the shoulder? What is the maximum dimension?
- P8.37** A Rankine oval 2 m long and 1 m high is immersed in a stream  $U_\infty = 10$  m/s, as in Fig. P8.37. Estimate (a) the velocity at point A and (b) the location of point B where a particle approaching the stagnation point achieves its maximum deceleration.

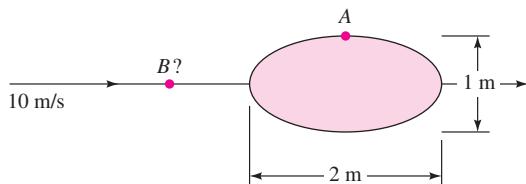


**P8.37**

- P8.38** Consider potential flow of a uniform stream in the  $x$  direction plus two equal sources, one at  $(x, y) = (0, +a)$  and the other at  $(x, y) = (0, -a)$ . Sketch your ideas of the body contours that would arise if the sources were (a) very weak and (b) very strong.
- P8.39** For the Rankine oval of Fig. P8.37, if the fluid is water at 20°C and the pressure far upstream along the body centerline is 115 kPa, determine the freestream velocity  $U_\infty$  for which the fluid will cavitate at point A.
- P8.40** Modify the Rankine oval in Fig. P8.37 so that the stream velocity and body length are the same but the thickness is unknown (not 1 m). The fluid is water at 30°C and the pressure far upstream along the body centerline is 108 kPa. Find the body thickness for which cavitation will occur at point A.
- P8.41** A Kelvin oval is formed by a line–vortex pair with  $K = 9 \text{ m}^2/\text{s}$ ,  $a = 1 \text{ m}$ , and  $U = 10 \text{ m/s}$ . What are the height, width, and shoulder velocity of this oval?
- P8.42** The vertical keel of a sailboat approximates a Rankine oval 125 cm long and 30 cm thick. The boat sails in seawater in standard atmosphere at 14 knots, parallel to the


keel. At a section 2 m below the surface, estimate the lowest pressure on the surface of the keel.

- P8.43** Consider water at 20°C flowing at 6 m/s past a 1-m-diameter circular cylinder. What doublet strength  $\lambda$  in  $\text{m}^3/\text{s}$  is required to simulate this flow? If the stream pressure is 200 kPa, use inviscid theory to estimate the surface pressure at  $\theta$  equal to (a) 180°, (b) 135°, and (c) 90°.
- P8.44** Suppose that circulation is added to the cylinder flow of Prob. P8.43 sufficient to place the stagnation points at  $\theta$  equal to 35° and 145°. What is the required vortex strength  $K$  in  $\text{m}^2/\text{s}$ ? Compute the resulting pressure and surface velocity at (a) the stagnation points and (b) the upper and lower shoulders. What will the lift per meter of cylinder width be?
- P8.45** If circulation  $K$  is added to the cylinder flow in Prob. P8.43, (a) for what value of  $K$  will the flow begin to cavitate at the surface? (b) Where on the surface will cavitation begin? (c) For this condition, where will the stagnation points lie?
- P8.46** A cylinder is formed by bolting two semicylindrical channels together on the inside, as shown in Fig. P8.46. There are 10 bolts per meter of width on each side, and the inside pressure is 50 kPa (gage). Using potential theory for the outside pressure, compute the tension force in each bolt if the fluid outside is sea-level air.

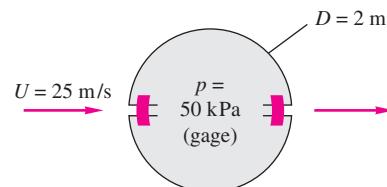

**P8.46**


- P8.47** A circular cylinder is fitted with two surface-mounted pressure sensors, to measure  $p_a$  at  $\theta = 180^\circ$  and  $p_b$  at  $\theta = 105^\circ$ . The intention is to use the cylinder as a stream velocimeter. Using inviscid theory, derive a formula for estimating  $U_\infty$  in terms of  $p_a$ ,  $p_b$ ,  $\rho$ , and the cylinder radius  $a$ .
- \*P8.48** Wind at  $U_\infty$  and  $p_\infty$  flows past a Quonset hut which is a half-cylinder of radius  $a$  and length  $L$  (Fig. P8.48). The internal pressure is  $p_i$ . Using inviscid theory, derive an expression for the upward force on the hut due to the difference between  $p_i$  and  $p_s$ .

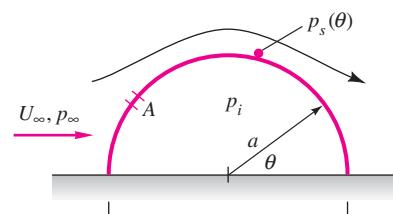

**P8.48**

- P8.49** In strong winds the force in Prob. P8.48 can be quite large. Suppose that a hole is introduced in the hut roof at point A to make  $p_i$  equal to the surface pressure there. At what angle  $\theta$  should hole A be placed to make the net wind force zero?

- P8.50** It is desired to simulate flow past a two-dimensional ridge or bump by using a streamline that passes above the flow over a cylinder, as in Fig. P8.50. The bump is to be  $a/2$  high, where  $a$  is the cylinder radius. What is the elevation  $h$  of this streamline? What is  $U_{\max}$  on the bump compared with stream velocity  $U$ ?

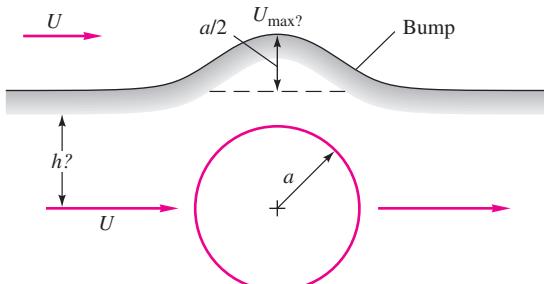**P8.50**


- P8.51** A hole is placed in the front of a cylinder to measure the stream velocity of sea-level fresh water. The measured pressure at the hole is 2840 lbf/ft<sup>2</sup>. If the hole is misaligned by 12° from the stream, and misinterpreted as stagnation pressure, what is the error in velocity?

- P8.52** The Flettner rotor sailboat in Fig. E8.3 has a water drag coefficient of 0.006 based on a wetted area of 45 ft<sup>2</sup>. If the rotor spins at 220 r/min, find the maximum boat velocity that can be achieved in a 15-mi/h wind. What is the optimum angle between the boat and the wind?

- P8.53** Modify Prob. P8.52 as follows. For the same sailboat data, find the wind velocity, in mi/h, that will drive the boat at an optimum speed of 8 kn parallel to its keel.

- P8.54** The original Flettner rotor ship was approximately 100 ft long, displaced 800 tons, and had a wetted area of 3500 ft<sup>2</sup>. As sketched in Fig. P8.54, it had two rotors 50 ft high and 9 ft in diameter rotating at 750 r/min, which is far outside the range of Fig. 8.15. The measured lift and drag coefficients for each rotor were about 10 and 4, respectively. If the ship is moored and subjected to a crosswind of 25 ft/s, as in Fig. P8.54, what will the wind force parallel and normal to the ship centerline be? Estimate the power required to drive the rotors.

- P8.55** Assume that the Flettner rotorship of Fig. P8.54 has a water resistance coefficient of 0.005. How fast will the ship sail in seawater at 20°C in a 20-ft/s wind if the keel aligns itself with the resultant force on the rotors? Hint: This is a problem in relative velocities.

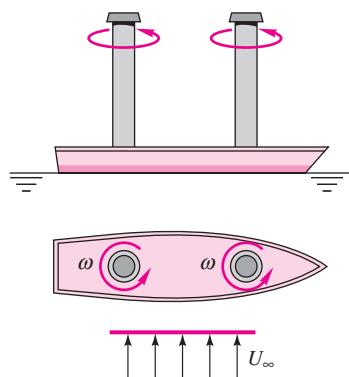**P8.54**

- P8.56** A proposed free-stream velocimeter would use a cylinder with pressure taps at  $\theta = 180^\circ$  and at  $150^\circ$ . The pressure difference would be a measure of stream velocity  $U_\infty$ . However, the cylinder must be aligned so that one tap exactly faces the free stream. Let the misalignment angle be  $\delta$ ; that is, the two taps are at  $(180^\circ + \delta)$  and  $(150^\circ + \delta)$ . Make a plot of the percentage error in velocity measurement in the range  $-20^\circ < \delta < +20^\circ$  and comment on the idea.

- P8.57** In principle, it is possible to use rotating cylinders as aircraft wings. Consider a cylinder 30 cm in diameter, rotating at 2400 r/min. It is to lift a 55-kN airplane cruising at 100 m/s. What should the cylinder length be? How much power is required to maintain this speed? Neglect end effects on the rotating wing.

- P8.58** Plot the streamlines due to the combined flow of a line sink  $-m$  at the origin plus line sources  $+m$  at  $(a, 0)$  and  $(4a, 0)$ . Hint: A cylinder of radius  $2a$  will appear.

- P8.59** The Transition® car-plane in Fig. 7.30 lifts a maximum of 1320 lbf at sea level. Suppose a 1-ft-diameter rotating cylinder, 27.5 ft long, replaces the wing, satisfying Fig. 8.15. (a) What rotation rate, in r/min, would lift the car-plane at a takeoff speed of 60 mi/h? (b) Estimate the drag of the cylinder at this rotation rate. Neglect end effects.

### The complex potential

- P8.60** One of the corner flow patterns of Fig. 8.18 is given by the cartesian stream function  $\psi = A(3yx^2 - y^3)$ . Which one? Can the correspondence be proved from Eq. (8.53)?

- P8.61** Plot the streamlines of Eq. (8.53) in the upper right quadrant for  $n = 4$ . How does the velocity increase with  $x$  outward along the  $x$  axis from the origin? For what corner angle and value of  $n$  would this increase be linear in  $x$ ? For what corner angle and  $n$  would the increase be as  $x^5$ ?

- P8.62** Combine stagnation flow, Fig. 8.19b, with a source at the origin:


$$f(z) = Az^2 + m \ln z$$

Plot the streamlines for  $m = AL^2$ , where  $L$  is a length scale. Interpret.

- P8.63** The superposition in Prob. P8.62 leads to stagnation flow near a curved bump, in contrast to the flat wall of Fig. 8.19b. Determine the maximum height  $H$  of the bump as a function of the constants  $A$  and  $m$ .

- P8.64** Consider the polar-coordinate stream function  $\psi = Br^{1.2} \sin(1.2\theta)$ , with  $B$  equal, for convenience, to  $1.0 \text{ ft}^{0.8}/\text{s}$ .  
 (a) Plot the streamline  $\psi = 0$  in the upper half plane.  
 (b) Plot the streamline  $\psi = 1.0$  and interpret the flow pattern.  
 (c) Find the locus of points above  $\psi = 0$  for which the resultant velocity =  $1.2 \text{ ft/s}$ .

- P8.65** Potential flow past a wedge of half-angle  $\theta$  leads to an important application of laminar boundary layer theory called the *Falkner-Skan flows* [15, pp. 239–245]. Let  $x$  denote distance along the wedge wall, as in Fig. P8.65, and let  $\theta = 10^\circ$ . Use Eq. (8.53) to find the variation of surface velocity  $U(x)$  along the wall. Is the pressure gradient adverse or favorable?

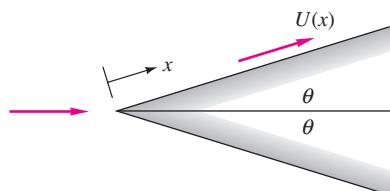


**P8.65**

- \***P8.66** The inviscid velocity along the wedge in Prob. P8.65 has the analytic form  $U(x) = Cx^m$ , where  $m = n - 1$  and  $n$  is the exponent in Eq. (8.53). Show that, for any  $C$  and  $n$ , computation of the boundary layer by Thwaites's method, Eqs. (7.53) and (7.54), leads to a unique value of the Thwaites parameter  $\lambda$ . Thus wedge flows are called *similar* [15, p. 241].

- P8.67** Investigate the complex potential function  $f(z) = U_\infty(z + a^2/z)$  and interpret the flow pattern.

- P8.68** Investigate the complex potential function  $f(z) = U_\infty z + m \ln [(z+a)/(z-a)]$  and interpret the flow pattern.

- P8.69** Investigate the complex potential  $f(z) = A \cosh [\pi(z/a)]$ , and plot the streamlines inside the region shown in Fig. P8.69. What hyphenated word (originally French) might describe such a flow pattern?

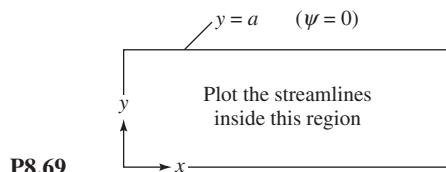


**P8.69**

- P8.70** Show that the complex potential  $f = U_\infty \{z + \frac{1}{4}a \coth [\pi(z/a)]\}$  represents flow past an oval shape placed

midway between two parallel walls  $y = \pm \frac{1}{2}a$ . What is a practical application?


- P8.71** Figure P8.71 shows the streamlines and potential lines of flow over a thin-plate weir as computed by the complex potential method. Compare qualitatively with Fig. 10.16a. State the proper boundary conditions at all boundaries. The velocity potential has equally spaced values. Why do the flow-net "squares" become smaller in the overflow jet?

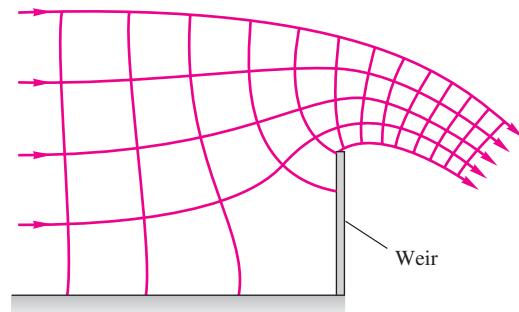

**P8.71**


### Images

- P8.72** Use the method of images to construct the flow pattern for a source  $+m$  near two walls, as shown in Fig. P8.72. Sketch the velocity distribution along the lower wall ( $y = 0$ ). Is there any danger of flow separation along this wall?

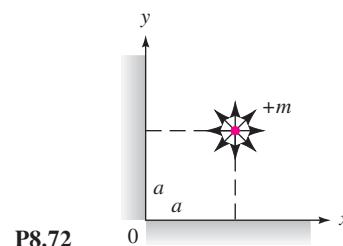


**P8.72**

- P8.73** Set up an image system to compute the flow of a source at unequal distances from two walls, as in Fig. P8.73. Find the point of maximum velocity on the  $y$  axis.

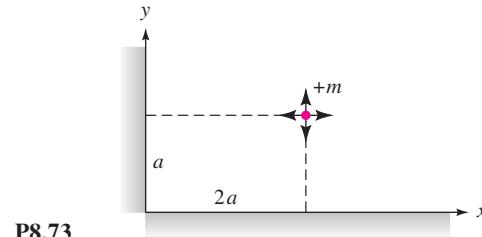


**P8.73**

- P8.74** A positive line vortex  $K$  is trapped in a corner, as in Fig. P8.74. Compute the total induced velocity vector at point  $B$ ,  $(x, y) = (2a, a)$ , and compare with the induced velocity when no walls are present.

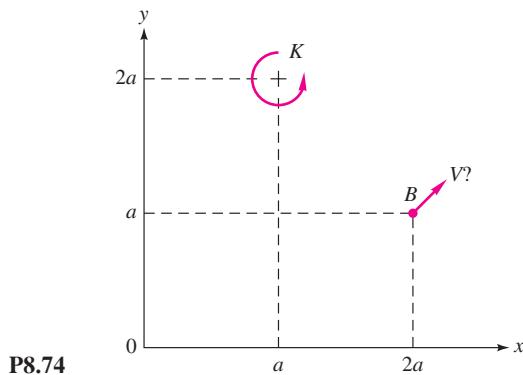


- P8.75** Using the four-source image pattern needed to construct the flow near a corner in Fig. P8.72, find the value of the source strength  $m$  that will induce a wall velocity of 4.0 m/s at the point  $(x, y) = (a, 0)$  just below the source shown, if  $a = 50$  cm.

- P8.76** Use the method of images to approximate the flow pattern past a cylinder a distance  $4a$  from a single wall, as in Fig. P8.76. To illustrate the effect of the wall, compute the velocities at corresponding points  $A$ ,  $B$ ,  $C$ , and  $D$ , comparing with a cylinder flow in an infinite expanse of fluid.

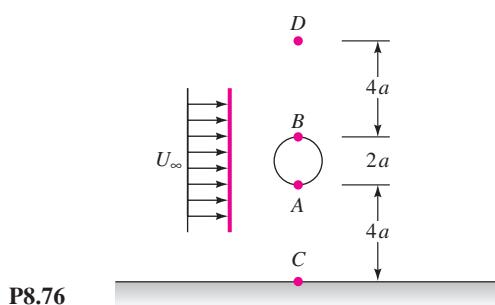


- P8.77** Discuss how the flow pattern of Prob. P8.58 might be interpreted to be an image system construction for circular walls. Why are there two images instead of one?

- \*P8.78** Indicate the system of images needed to construct the flow of a uniform stream past a Rankine half-body constrained between two parallel walls, as in Fig. P8.78. For the particular dimensions shown in this figure, estimate the position of the nose of the resulting half-body.

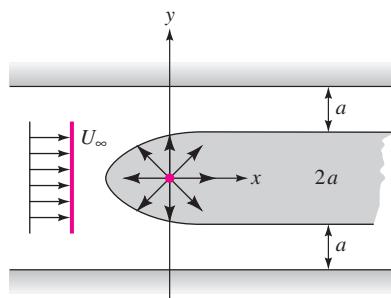

P8.78

- P8.79** Explain the system of images needed to simulate the flow of a line source placed unsymmetrically between two parallel walls as in Fig. P8.79. Compute the velocity on the lower wall at  $x = a$ . How many images are needed to estimate this velocity within 1 percent?

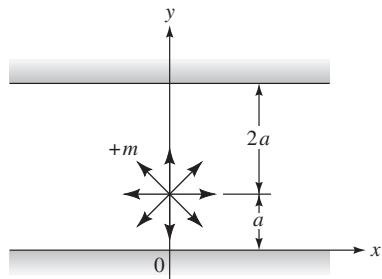

P8.79

### Airfoil theory: two-dimensional

- \*P8.80** The beautiful expression for lift of a two-dimensional airfoil, Eq. (8.72), arose from applying the Joukowski transformation,  $\zeta = z + a^2/z$ , where  $z = x + iy$  and  $\zeta = \eta + i\beta$ . The constant  $a$  is a length scale. The theory transforms a certain circle in the  $z$  plane into an airfoil in the  $\zeta$  plane. Taking  $a = 1$  unit for convenience, show that (a) a circle with center at the origin and radius  $> 1$  will become an ellipse in the  $\zeta$  plane and (b) a circle with center at  $x = -\epsilon \ll 1$ ,  $y = 0$ , and radius  $(1 + \epsilon)$  will become an airfoil shape in the  $\zeta$  plane. Hint: The Excel spreadsheet is excellent for solving this problem.

- \*P8.81** Given an airplane of weight  $W$ , wing area  $A$ , aspect ratio AR, and flying at an altitude where the density is  $\rho$ . Assume all drag and lift is due to the wing, which has an infinite-span drag coefficient  $C_{D\infty}$ . Further assume sufficient thrust to balance whatever drag is calculated. (a) Find an algebraic expression for the *best cruise velocity*  $V_b$ , which occurs when the ratio of drag to speed is a minimum. (b) Apply your formula to the data in Prob. P7.119 for which a laborious graphing procedure gave an answer  $V_b \approx 180$  m/s.

**P8.82** The ultralight plane *Gossamer Condor* in 1977 was the first to complete the Kremer Prize figure-eight course under human power. Its wingspan was 29 m, with  $C_{av} = 2.3$  m and a total mass of 95 kg. The drag coefficient was approximately 0.05. The pilot was able to deliver  $\frac{1}{4}$  hp to propel the plane. Assuming two-dimensional flow at sea level, estimate (a) the cruise speed attained, (b) the lift coefficient, and (c) the horsepower required to achieve a speed of 15 kn.

**P8.83** The Boeing 747-8 aircraft has a gross weight of 975,000 lbf, wing area of 5500 ft<sup>2</sup>, wingspan of 224.75 ft, and  $C_{D_0} = 0.022$ . When cruising at 35,000 ft standard altitude, the four engines each provide 13,500 lbf of thrust. Assuming that all lift and drag are due to the wing, estimate the cruise velocity, in mi/h.

**P8.84** Reference 12 contains inviscid theory calculations for the upper and lower surface velocity distributions  $V(x)$  over an airfoil, where  $x$  is the chordwise coordinate. A typical result for small angle of attack is as follows:

$x/c$	$V/U_\infty(\text{upper})$	$V/U_\infty(\text{lower})$
0.0	0.0	0.0
0.025	0.97	0.82
0.05	1.23	0.98
0.1	1.28	1.05
0.2	1.29	1.13
0.3	1.29	1.16
0.4	1.24	1.16
0.6	1.14	1.08
0.8	0.99	0.95
1.0	0.82	0.82

Use these data, plus Bernoulli's equation, to estimate (a) the lift coefficient and (b) the angle of attack if the airfoil is symmetric.

### Airfoil theory: finite-span wings

**P8.85** A wing of 2 percent camber, 5-in chord, and 30-in span is tested at a certain angle of attack in a wind tunnel with sea-level standard air at 200 ft/s and is found to have lift of 30 lbf and drag of 1.5 lbf. Estimate from wing theory (a) the angle of attack, (b) the minimum drag of the wing and the angle of attack at which it occurs, and (c) the maximum lift-to-drag ratio.


**P8.86** An airplane has a mass of 20,000 kg and flies at 175 m/s at 5000-m standard altitude. Its rectangular wing has a 3-m chord and a symmetric airfoil at 2.5° angle of attack. Estimate (a) the wing span, (b) the aspect ratio, and (c) the induced drag.

**P8.87** A freshwater boat of mass 400 kg is supported by a rectangular hydrofoil of aspect ratio 8, 2 percent camber, and 12 percent thickness. If the boat travels at 7 m/s and  $\alpha = 2.5^\circ$ , estimate (a) the chord length, (b) the power required if  $C_{D_\infty} = 0.01$ , and (c) the top speed if the boat is refitted with an engine that delivers 20 hp to the water.

**P8.88** The Transition® car-plane in Fig. 7.30 has a gross weight of 1320 lbf, a wingspan of 27.5 ft, and a wing area of 150 ft<sup>2</sup>. Assume that the wing uses an NACA 2412 airfoil. Estimate the angle of attack of this car-plane when cruising at 115 mi/h at a standard altitude of 8200 ft.

**P8.89** The Beechcraft T-34C aircraft has a gross weight of 5500 lbf and a wing area of 60 ft<sup>2</sup> and flies at 322 mi/h at 10,000-ft standard altitude. It is driven by a propeller that delivers 300 hp to the air. Assume for this problem that its airfoil is the NACA 2412 section described in Figs. 8.24, 8.25 and neglect all drag except the wing. What is the appropriate aspect ratio for the wing?

**P8.90** NASA is developing a swing-wing airplane called the Bird of Prey [37]. As shown in Fig. P8.90, the wings pivot like a pocketknife blade: forward (a), straight (b), or backward (c). Discuss a possible advantage for each of these wing positions. If you can't think of one, read the article [37] and report to the class.

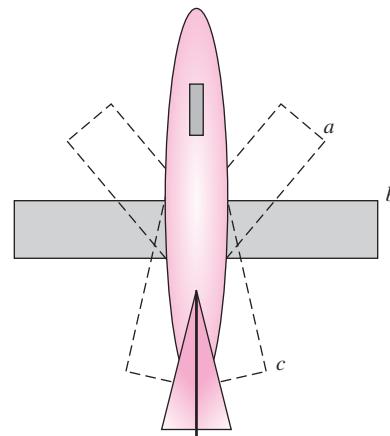

**P8.90**

### Axisymmetric potential flow


**P8.91** If  $\phi(r, \theta)$  in axisymmetric flow is defined by Eq. (8.85) and the coordinates are given in Fig. 8.29, determine what partial differential equation is satisfied by  $\phi$ .

**P8.92** A point source with volume flow  $Q = 30 \text{ m}^3/\text{s}$  is immersed in a uniform stream of speed 4 m/s. A Rankine half-body of revolution results. Compute (a) the distance from source to the stagnation point and (b) the two points  $(r, \theta)$  on the body surface where the local velocity equals 4.5 m/s.

- P8.93** The Rankine half-body of revolution (Fig. 8.31) could simulate the shape of a pitot-static tube (Fig. 6.30). According to inviscid theory, how far downstream from the nose should the static pressure holes be placed so that the local velocity is within  $\pm 0.5$  percent of  $U_\infty$ ? Compare your answer with the recommendation  $x \approx 8D$  in Fig. 6.30.

- P8.94** Determine whether the Stokes streamlines from Eq. (8.86) are everywhere orthogonal to the Stokes potential lines from Eq. (8.87), as is the case for Cartesian and plane polar coordinates.


- P8.95** Show that the axisymmetric potential flow formed by superposition of a point source  $+m$  at  $(x, y) = (-a, 0)$ , a point sink  $-m$  at  $(+a, 0)$ , and a stream  $U_\infty$  in the  $x$  direction forms a Rankine body of revolution as in Fig. P8.95. Find analytic expressions for determining the length  $2L$  and maximum diameter  $2R$  of the body in terms of  $m$ ,  $U_\infty$ , and  $a$ .

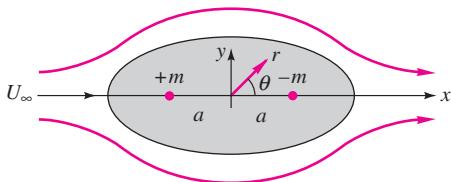

P8.95

- P8.96** Consider inviscid flow along the streamline approaching the front stagnation point of a sphere, as in Fig. 8.32. Find (a) the maximum fluid deceleration along this streamline and (b) its position.


- P8.97** The Rankine body of revolution in Fig. P8.97 is 60 cm long and 30 cm in diameter. When it is immersed in the low-pressure water tunnel as shown, cavitation may appear at point A. Compute the stream velocity  $U$ , neglecting surface wave formation, for which cavitation occurs.

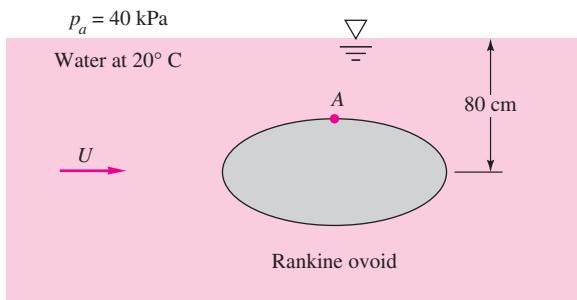

P8.97


- P8.98** We have studied the point source (sink) and the line source (sink) of infinite depth into the paper. Does it make any sense to define a finite-length line sink (source) as in Fig. P8.98? If so, how would you establish the mathematical properties of such a finite line sink? When combined with a uniform stream and a point source of equivalent strength

as in Fig. P8.98, should a closed-body shape be formed? Make a guess and sketch some of these possible shapes for various values of the dimensionless parameter  $m/(U_\infty L^2)$ .

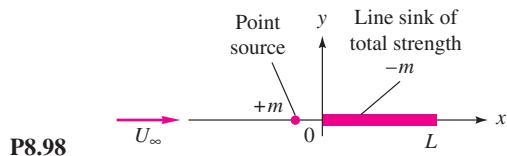


P8.98

- \*P8.99** Consider air flowing past a hemisphere resting on a flat surface, as in Fig. P8.99. If the internal pressure is  $p_i$ , find an expression for the pressure force on the hemisphere. By analogy with Prob. P8.49, at what point A on the hemisphere should a hole be cut so that the pressure force will be zero according to inviscid theory?

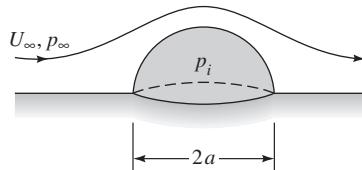

P8.99

- P8.100** A 1-m-diameter sphere is being towed at speed  $V$  in fresh water at 20°C as shown in Fig. P8.100. Assuming inviscid theory with an undistorted free surface, estimate the speed  $V$  in m/s at which cavitation will first appear on the sphere surface. Where will cavitation appear? For this condition, what will be the pressure at point A on the sphere, which is 45° up from the direction of travel?

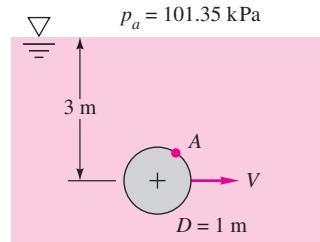

P8.100

- P8.101** Consider a steel sphere ( $\text{SG} = 7.85$ ) of diameter 2 cm, dropped from rest in water at 20°C. Assume a constant drag coefficient  $C_D = 0.47$ . Accounting for the sphere's hydrodynamic mass, estimate (a) its terminal velocity; and (b) the time to reach 99% of terminal velocity. Compare these to the results when hydrodynamic mass is neglected,  $V_{\text{terminal}} \approx 1.95$  m/s and  $t_{99\%} \approx 0.605$  s, and discuss.


- P8.102** A golf ball weighs 0.102 lbf and has a diameter of 1.7 in. A professional golfer strikes the ball at an initial velocity of 250 ft/s, an upward angle of 20°, and a backspin (front of the ball rotating upward). Assume that the lift

coefficient on the ball (based on frontal area) follows Fig. P7.108. If the ground is level and drag is neglected, make a simple analysis to predict the impact point (a) without spin and (b) with backspin of 7500 r/min.

- P8.103** Consider inviscid flow past a sphere, as in Fig. 8.32. Find (a) the point on the front surface where the fluid acceleration  $a_{\max}$  is maximum and (b) the magnitude of  $a_{\max}$ . (c) If the stream velocity is 1 m/s, find the sphere diameter for which  $a_{\max}$  is 10 times the acceleration of gravity. Comment.

### Hydrodynamic mass

- P8.104** Consider a cylinder of radius  $a$  moving at speed  $U_{\infty}$  through a still fluid, as in Fig. P8.104. Plot the streamlines relative to the cylinder by modifying Eq. (8.32) to give the relative flow with  $K = 0$ . Integrate to find the total relative kinetic energy, and verify the hydrodynamic mass of a cylinder from Eq. (8.104).

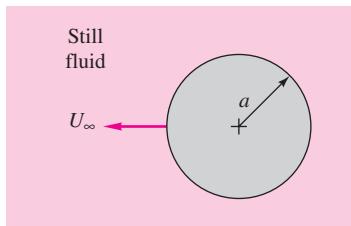


P8.104

- P8.105** A 22-cm-diameter solid aluminum sphere ( $\text{SG} = 2.7$ ) is accelerating at  $12 \text{ m/s}^2$  in water at  $20^\circ\text{C}$ . (a) According to potential theory, what is the hydrodynamic mass of the sphere? (b) Estimate the force being applied to the sphere at this instant.

### Numerical methods

- P8.106** Laplace's equation in plane polar coordinates, Eq. (8.11), is complicated by the variable radius. Consider the finite difference mesh in Fig. P8.106, with nodes  $(i, j)$  equally spaced  $\Delta\theta$  and  $\Delta r$  apart. Derive a

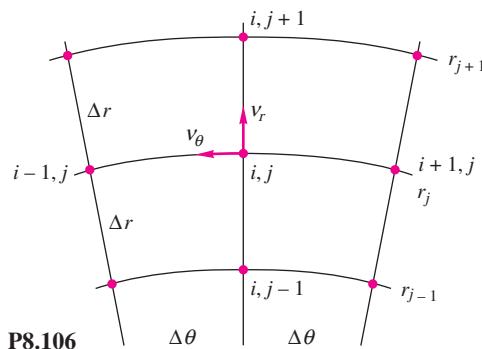


P8.106

finite difference model for Eq. (8.11) similar to the cartesian expression (8.109).


- P8.107** Set up the numerical problem of Fig. 8.35 for an expansion of  $30^\circ$ . A new grid system and a nonsquare mesh may be needed. Give the proper nodal equation and boundary conditions. If possible, program this  $30^\circ$  expansion and solve on a computer.

- P8.108** Consider two-dimensional potential flow into a step contraction as in Fig. P8.108. The inlet velocity  $U_1 = 7 \text{ m/s}$ , and the outlet velocity  $U_2$  is uniform. The nodes  $(i, j)$  are labeled in the figure. Set up the complete finite difference algebraic relations for all nodes. Solve, if possible, on a computer and plot the streamlines in the flow.

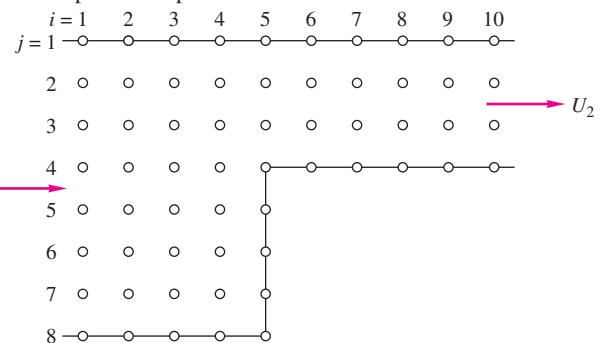

P8.108

- P8.109** Consider inviscid flow through a two-dimensional  $90^\circ$  bend with a contraction, as in Fig. P8.109. Assume uniform flow at the entrance and exit. Make a finite difference computer analysis for small grid size (at least 150 nodes), determine the dimensionless pressure distribution along the walls, and sketch the streamlines. (You may use either square or rectangular grids.)

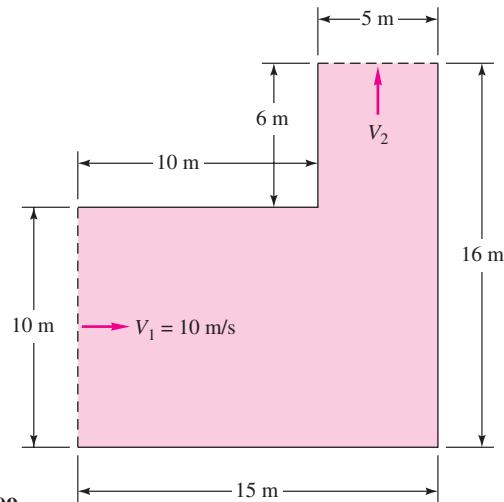

P8.109

- P8.110** For fully developed laminar incompressible flow through a straight noncircular duct, as in Sec. 6.8, the Navier-Stokes equations (4.38) reduce to

$$\frac{\partial^2 u}{\partial y^2} + \frac{\partial^2 u}{\partial z^2} = \frac{1}{\mu} \frac{dp}{dx} = \text{const} < 0$$

where  $(y, z)$  is the plane of the duct cross section and  $x$  is along the duct axis. Gravity is neglected. Using a nonsquare rectangular grid ( $\Delta x, \Delta y$ ), develop a finite difference model for this equation, and indicate how it may be applied to solve for flow in a rectangular duct of side lengths  $a$  and  $b$ .

- P8.111** Solve Prob. P8.110 numerically for a rectangular duct of side length  $b$  by  $2b$ , using at least 100 nodal points. Evaluate the volume flow rate and the friction factor, and compare with the results in Table 6.4:

$$Q \approx 0.1143 \frac{b^4}{\mu} \left( -\frac{dp}{dx} \right) \quad f \text{Re}_{D_h} \approx 62.19$$

where  $D_h = 4A/P = 4b/3$  for this case. Comment on the possible truncation errors of your model.

- P8.112** In CFD textbooks [5, 23–27], one often replaces the left-hand sides of Eqs. (8.119b and c) with the following two expressions, respectively:

$$\frac{\partial}{\partial x}(u^2) + \frac{\partial}{\partial y}(vu) \quad \text{and} \quad \frac{\partial}{\partial x}(uv) + \frac{\partial}{\partial y}(v^2)$$

Are these equivalent expressions, or are they merely simplified approximations? Either way, why might these forms be better for finite difference purposes?

- P8.113** Repeat Example 8.7 using the implicit method of Eq. (8.118). Take  $\Delta t = 0.2$  s and  $\Delta y = 0.01$  m, which ensures that an explicit model would diverge. Compare your accuracy with Example 8.7.

- P8.114** If your institution has an online potential flow boundary element computer code, consider flow past a symmetric


## Word Problems

- W8.1** What simplifications have been made, in the potential flow theory of this chapter, which result in the elimination of the Reynolds number, Froude number, and Mach number as important parameters?
- W8.2** In this chapter we superimpose many basic solutions, a concept associated with *linear* equations. Yet Bernoulli's equation (8.3) is *nonlinear*, being proportional to the square of the velocity. How, then, do we justify the use of superposition in inviscid flow analysis?
- W8.3** Give a physical explanation of circulation  $\Gamma$  as it relates to the lift force on an immersed body. If the line integral

airfoil, as in Fig. P8.114. The basic shape of an NACA symmetric airfoil is defined by the function [12]

$$\begin{aligned} \frac{2y}{t_{\max}} \approx & 1.4845\zeta^{1/2} - 0.63\zeta - 1.758\zeta^2 \\ & + 1.4215\zeta^3 - 0.5075\zeta^4 \end{aligned}$$

where  $\zeta = x/C$  and the maximum thickness  $t_{\max}$  occurs at  $\zeta = 0.3$ . Use this shape as part of the lower boundary for zero angle of attack. Let the thickness be fairly large, say,  $t_{\max} = 0.12, 0.15$ , or  $0.18$ . Choose a generous number of nodes ( $\geq 60$ ), and calculate and plot the velocity distribution  $V/U_\infty$  along the airfoil surface. Compare with the theoretical results in Ref. 12 for NACA 0012, 0015, or 0018 airfoils. If time permits, investigate the effect of the boundary lengths  $L_1, L_2$ , and  $L_3$ , which can initially be set equal to the chord length  $C$ .

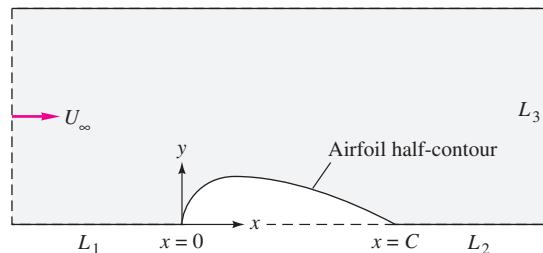

**P8.114**

- P8.115** Use the explicit method of Eq. (8.115) to solve Prob. P4.85 numerically for SAE 30 oil at  $20^\circ\text{C}$  with  $U_0 = 1$  m/s and  $\omega = M$  rad/s, where  $M$  is the number of letters in your surname. (This author will solve the problem for  $M = 5$ .) When steady oscillation is reached, plot the oil velocity versus time at  $y = 2$  cm.


defined by Eq. (8.23) is zero, it means that the integrand is a perfect differential—but of what variable?

- W8.4** Give a simple proof of Eq. (8.46)—namely, that both the real and imaginary parts of a function  $f(z)$  are laplacian if  $z = x + iy$ . What is the secret of this remarkable behavior?
- W8.5** Figure 8.18 contains five body corners. Without carrying out any calculations, explain physically what the value of the inviscid fluid velocity must be at each of these five corners. Is any flow separation expected?
- W8.6** Explain the Kutta condition physically. Why is it necessary?

- W8.7** We have briefly outlined finite difference and boundary element methods for potential flow but have neglected the *finite element* technique. Do some reading and write a

## Comprehensive Problems

- C8.1** Did you know that you can solve simple fluid mechanics problems with Microsoft Excel? The successive relaxation technique for solving the Laplace equation for potential flow problems is easily set up on a spreadsheet, since the stream function at each interior cell is simply the average of its four neighbors. As an example, solve for the irrotational potential flow through a contraction, as given in Fig. C8.1. Note: To avoid the “circular reference” error, you must turn on the iteration option. Use the help index for more information. For full credit, attach a printout of your spreadsheet, with stream function converged and the value of the stream function at each node displayed to four digits of accuracy.

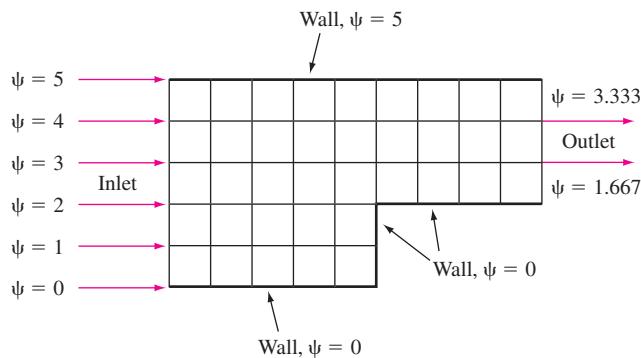
**C8.1**

- C8.2** Use an explicit method, similar to but not identical to Eq. (8.115), to solve the case of SAE 30 oil at 20°C starting from rest near a *fixed* wall. Far from the wall, the oil accelerates linearly; that is,  $u_\infty = u_N = at$ , where  $a = 9 \text{ m/s}^2$ . At  $t = 1 \text{ s}$ , determine (a) the oil velocity at  $y = 1 \text{ cm}$  and (b) the instantaneous boundary layer thickness (where  $u \approx 0.99 u_\infty$ ). Hint: There is a nonzero pressure gradient in the outer (nearly shear-free) stream,  $n = N$ , which must be included in Eq. (8.114) and your explicit model.


- C8.3** Consider plane inviscid flow through a symmetric diffuser, as in Fig. C8.3. Only the upper half is shown. The flow is to expand from inlet half-width  $h$  to exit half-width  $2h$ , as shown. The expansion angle  $\theta$  is 18.5° ( $L \approx 3h$ ). Set up a nonsquare potential flow mesh for this problem, and calculate and plot (a) the velocity distribution and (b) the pressure coefficient along the centerline. Assume uniform inlet and exit flows.

- C8.4** Use potential flow to approximate the flow of air being sucked up into a vacuum cleaner through a two-dimensional slit attachment, as in Fig. C8.4. In the  $xy$

brief essay on the use of the finite element method for potential flow problems.

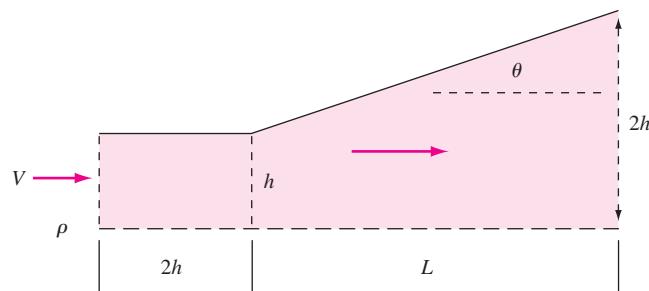**C8.3**


plane through the centerline of the attachment, model the flow as a line sink of strength  $(-m)$ , with its axis in the  $z$  direction at height  $a$  above the floor. (a) Sketch the streamlines and locate any stagnation points in the flow. (b) Find the magnitude of velocity  $V(x)$  along the floor in terms of the parameters  $a$  and  $m$ . (c) Let the pressure far away be  $p_\infty$ , where velocity is zero. Define a velocity scale  $U = m/a$ . Determine the variation of dimensionless pressure coefficient,  $C_p = (p - p_\infty)/(\rho U^2/2)$ , along the floor. (d) The vacuum cleaner is most effective where  $C_p$  is a minimum—that is, where velocity is maximum. Find the locations of minimum pressure coefficient along the  $x$  axis. (e) At which points along the  $x$  axis do you expect the vacuum cleaner to work most effectively? Is it best at  $x = 0$  directly beneath the slit, or at some other  $x$  location along the floor? Conduct a scientific experiment at home with a vacuum cleaner and some small pieces of dust or dirt to test your prediction. Report your results and discuss the agreement with prediction. Give reasons for any disagreements.

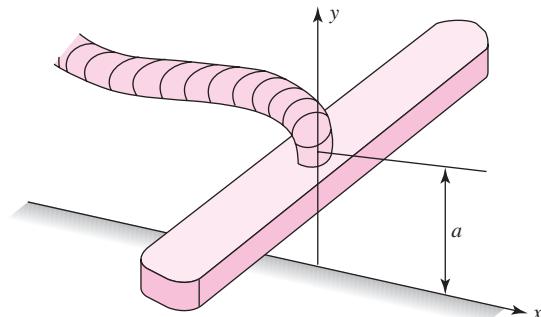**C8.4**

- C8.5** Consider a three-dimensional, incompressible, irrotational flow. Use the following two methods to prove that the viscous term in the Navier-Stokes equation is identically zero: (a) using vector notation; and (b) expanding out the scalar terms and substituting terms from the definition of irrotationality.

- C8.6** Reconsider the lift-drag data for the NACA 4412 airfoil from Prob. P8.83. (a) Again draw the polar lift-drag plot and compare qualitatively with Fig. 7.26. (b) Find the maximum value of the lift-to-drag ratio. (c) Demonstrate a straight-line construction on the polar plot that will immediately yield the maximum  $L/D$  in (b). (d) If an aircraft could use this two-dimensional wing in actual flight (no induced drag) and had a perfect pilot, estimate how far (in miles) this aircraft could glide to a sea-level runway if it lost power at 25,000 ft altitude.

- C8.7** Find a formula for the stream function for flow of a doublet of strength  $\lambda$  a distance  $a$  from a wall, as in Fig. C8.7. (a) Sketch the streamlines. (b) Are there any stagnation points? (c) Find the maximum velocity along the wall and its position.

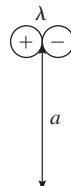


C8.7

## Design Projects

- D8.1** In 1927, Theodore von Kármán developed a scheme to use a uniform stream, plus a row of sources and sinks, to generate an arbitrary closed-body shape. A schematic of the idea is sketched in Fig. D8.1. The body is symmetric and at zero angle of attack. A total of  $N$  sources and sinks are distributed along the axis within the body, with strengths  $m_i$  at positions  $x_i$ , for  $i = 1$  to  $N$ . The object is to find the correct distribution of strengths that approximates a given body shape  $y(x)$  at a finite number of surface locations and then to compute the approximate surface velocity and pressure. The technique should work for either two-dimensional bodies (distributed line sources) or bodies of revolution (distributed point sources).

For our body shape let us select the NACA 0018 airfoil, given by the formula in Prob. P8.114 with  $t_{\max} = 0.18$ . Develop the ideas stated here into  $N$  simultaneous algebraic equations that can be used to solve for the  $N$  unknown line source/sink strengths. Then program your equations for a computer, with  $N \geq 20$ ; solve for  $m_i$ ; compute the surface velocities; and compare with the theoretical velocities for this shape in Ref. 12. Your goal should be to achieve accuracy within  $\pm 1$  percent of the

classical results. If necessary, you should adjust  $N$  and the locations of the sources.

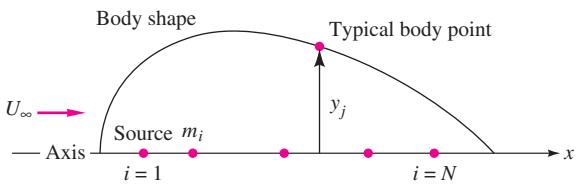

D8.1

- D8.2** Modify Prob. D8.1 to solve for the point-source distribution that approximates an “0018” body-of-revolution shape. Since no theoretical results are published, simply make sure that your results converge to  $\pm 1$  percent.

- D8.3** Consider water at 20°C flowing at 12 m/s in a water channel. A Rankine oval cylinder, 40 cm long, is to be placed parallel to the flow, where the water static pressure is 120 kPa. The oval’s thickness is a design parameter. Prepare a plot of the minimum pressure on the oval’s surface as a function of body thickness. Especially note the thicknesses where (a) the local pressure is 50 kPa and (b) cavitation first occurs on the surface.

## References

1. J. Wermer, *Potential Theory*, Springer-Verlag, New York, 2008.
2. J. M. Robertson, *Hydrodynamics in Theory and Application*, Prentice-Hall, Englewood Cliffs, NJ, 1965.
3. L. M. Milne-Thomson, *Theoretical Hydrodynamics*, 4th ed., Dover, New York, 1996.
4. T. Ransford, *Potential Theory in the Complex Plane*, Cambridge Univ. Press, New York, 1995.
5. T. Cebeci, *Computational Fluid Dynamics for Engineers*, Springer-Verlag, New York, 2005.
6. R. W. Lewis, P. Nithiarasu, and K. N. Seetharamu, *Fundamentals of the Finite Element Method for Heat and Fluid Flow*, Wiley, New York, 2004.
7. G. Beer, I. Smith, and C. Duenser, *The Boundary Element Method with Programming: For Engineers and Scientists*, Springer-Verlag, New York, 2008.

8. A. D. Moore, "Fields from Fluid Flow Mappers," *J. Appl. Phys.*, vol. 20, 1949, pp. 790–804.
9. H. J. S. Hele-Shaw, "Investigation of the Nature of the Surface Resistance of Water and of Streamline Motion under Certain Experimental Conditions," *Trans. Inst. Nav. Archit.*, vol. 40, 1898, p. 25.
10. S. W. Churchill, *Viscous Flows: The Practical Use of Theory*, Butterworth, Stoneham, MA, 1988.
11. J. D. Anderson, Jr., *Fundamentals of Aerodynamics*, 4th ed., McGraw-Hill, New York, 2007.
12. I. H. Abbott and A. E. von Doenhoff, *Theory of Wing Sections*, Dover, New York, 1981.
13. F. O. Smetana, *Introductory Aerodynamics and Hydrodynamics of Wings and Bodies: A Software-Based Approach*, AIAA, Reston, VA, 1997.
14. L. Prandtl, "Applications of Modern Hydrodynamics to Aeronautics," *NACA Rep. 116*, 1921.
15. F. M. White, *Viscous Fluid Flow*, 3d ed., McGraw-Hill, New York, 2005.
16. C. S. Yih, *Fluid Mechanics*, McGraw-Hill, New York, 1969.
17. K. T. Patton, "Tables of Hydrodynamic Mass Factors for Translational Motion," *ASME Winter Annual Meeting*, Paper 65-WA/UNT-2, 1965.
18. J. L. Hess and A. M. O. Smith, "Calculation of Nonlifting Potential Flow about Arbitrary Three-Dimensional Bodies," *J. Ship Res.*, vol. 8, 1964, pp. 22–44.
19. K. H. Huebner, *The Finite Element Method for Engineers*, 4<sup>th</sup> ed., Wiley, New York, 2001.
20. J. C. Tannehill, D. A. Anderson, and R. H. Pletcher, *Computational Fluid Mechanics and Heat Transfer*, 2d ed., Taylor and Francis, Bristol, PA, 1997.
21. J. N. Newman, *Marine Hydrodynamics*, M.I.T. Press, Cambridge, MA, 1977.
22. P. T. Tokumaru and P. E. Dimotakis, "The Lift of a Cylinder Executing Rotary Motions in a Uniform Flow," *J. Fluid Mechanics*, vol. 255, 1993, pp. 1–10.
23. J. H. Ferziger and M. Peric, *Computational Methods for Fluid Dynamics*, Springer-Verlag, New York, 1996.
24. P. J. Roache, *Fundamentals of Computational Fluid Dynamics*, Hermosa Pub., Albuquerque, NM, 1998.
25. C.-Y. Cheng, "An Introduction to Computational Fluid Dynamics and FlowLab," Chap. 13 of *Fluid Mechanics for Chemical Engineers*, 2nd ed., James O. Wilkes (ed.), Prentice-Hall, Upper Saddle River, NJ, 2005.
26. J. D. Anderson, *Computational Fluid Dynamics: The Basics with Applications*, McGraw-Hill, New York, 1995.
27. T. P. Sengupta, *Fundamentals of Computational Fluid Dynamics*, Orient Longman, Hyderabad, India, 2004.
28. M. Deshpande, J. Feng, and C. L. Merkle, "Numerical Modeling of the Thermodynamic Effects of Cavitation," *J. Fluids Eng.*, June 1997, pp. 420–427.
29. P. A. Durbin and R. B. A. Pettersson, *Statistical Theory and Modeling for Turbulent Flows*, Wiley, New York, 2001.
30. C. J. Freitas, "Perspective: Selected Benchmarks from Commercial CFD Codes," *J. Fluids Eng.*, vol. 117, June 1995, pp. 208–218.
31. R. Martinuzzi and C. Tropea, "The Flow around Surface-Mounted, Prismatic Obstacles in a Fully Developed Channel Flow," *J. Fluids Eng.*, vol. 115, March 1993, pp. 85–92.
32. K. B. Shah and J. H. Ferziger, "Fluid Mechanicians View of Wind Engineering: Large Eddy Simulation of Flow Past a Cubic Obstacle," *J. Wind Engineering and Industrial Aerodynamics*, vol. 67–68, 1997, pp. 221–224.
33. P. Sagaut, *Large Eddy Simulation for Incompressible Flows: An Introduction*, 3rd ed., Springer, New York, 2005.
34. W. J. Palm, *Introduction to MATLAB 7 for Engineers*, McGraw-Hill, New York, 2003.
35. A. Gilat, *MATLAB: An Introduction with Applications*, 2d ed., Wiley, New York, 2004.
36. J. W. Hoyt and R. H. J. Sellin, "Flow over Tube Banks—A Visualization Study," *J. Fluids Eng.*, vol. 119, June 1997, pp. 480–483.
37. S. Douglass, "Switchblade Fighter Bomber," *Popular Science*, Nov. 2000, pp. 52–55.
38. G. Beer, *Programming the Boundary Element Method: An Introduction for Engineers*, Wiley, New York, 2001.
39. J. D. Anderson, *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, Cambridge, UK, 1997.
40. B. Robins, *Mathematical Tracts 1 & 2*, J. Nourse, London, 1761.
41. T. K. Sengupta, A. Kasliwal, S. De, and M. Nair, "Temporal Flow Instability for Magnus-Robins Effect at High Rotation Rates," *J. Fluids and Structures*, vol. 17, 2003, pp. 941–953.
42. G. F. Dargush and M. M. Grigoriev, "Fast and Accurate Solutions of Steady Stokes Flows Using Multilevel Boundary Element Methods," *J. Fluids Eng.*, vol. 127, July 2005, pp. 640–646.
43. R. H. Kirchhoff, *Potential Flows: Computer Graphic Solutions*, Marcel Dekker, New York, 2001.
44. H. Werle, "Hydrodynamic Visualization of the Flow around a Streamlined Cylinder with Suction: Cousteau-Malavard Turbine Sail Model," *Le Recherche Aerospaciale*, vol. 4, 1984, pp. 29–38.
45. T. K. Sengupta and S. R. Talla, "Robins-Magnus Effect: A Continuing Saga," *Current Science*, vol. 86, no. 7, 2004, pp. 1033–1036.
46. P. R. Spalart, "Airplane Trailing Vortices," *Annual Review Fluid Mechanics*, vol. 30, 1998, pp. 107–138.
47. M. Elkhoury, "Assessment and Modification of One-Equation Models of Turbulence for Wall-Bounded Flows," *J. Fluids Eng.*, vol. 129, July 2007, pp. 921–928.



This is a one-in-a-million shot of the F-18 Hornet fighter plane passing through the speed of sound. Ensign John Gay, a photographer for the U.S. Navy, caught the photo just as the aircraft approached sonic speed in wet air. The speed is slightly below  $Ma = 1$ , and visible condensation shocks form on the surfaces where local velocity is supersonic. In an instant, the F-18 will be fully supersonic, and these shocks will be replaced by sharp conical shocks from the nose and other leading edges of the airplane. (*Photo supplied by the U.S. Navy.*)

# Chapter 9

## Compressible Flow

**Motivation.** All eight of our previous chapters have been concerned with “low-speed” or “incompressible” flow, where the fluid velocity is much less than its speed of sound. In fact, we did not even develop an expression for the speed of sound of a fluid. That is done in this chapter.

When a fluid moves at speeds comparable to its speed of sound, density changes become significant and the flow is termed *compressible*. Such flows are difficult to obtain in liquids, since high pressures of order 1000 atm are needed to generate sonic velocities. In gases, however, a pressure ratio of only 2:1 will likely cause sonic flow. Thus compressible gas flow is quite common, and this subject is often called *gas dynamics*.

Probably the two most important and distinctive effects of compressibility on flow are (1) *choking*, wherein the duct flow rate is sharply limited by the sonic condition, and (2) *shock waves*, which are nearly discontinuous property changes in a supersonic flow. The purpose of this chapter is to explain such striking phenomena and to familiarize the reader with engineering calculations of compressible flow.

Speaking of calculations, the present chapter is made to order for the Engineering Equation Solver (EES). Compressible flow analysis is filled with scores of complicated algebraic equations, most of which are very difficult to manipulate or invert. Consequently, for nearly a century, compressible flow textbooks have relied on extensive tables of Mach number relations (see App. B) for numerical work. With EES, however, any set of equations in this chapter can be typed out and solved for any variable—see part (b) of Example 9.13 for an especially intricate example. With such a tool, App. B serves only as a backup and indeed may soon vanish from textbooks.

### 9.1 Introduction: Review of Thermodynamics

We took a brief look in Chap. 4 [Eqs. (4.13) to (4.17)] to see when we might safely neglect the compressibility inherent in every real fluid. We found that the proper criterion for a nearly incompressible flow was a small Mach number

$$\text{Ma} = \frac{V}{a} \ll 1$$

where  $V$  is the flow velocity and  $a$  is the speed of sound of the fluid. Under small Mach number conditions, changes in fluid density are everywhere small in the flow field. The energy equation becomes uncoupled, and temperature effects can be either ignored or put aside for later study. The equation of state degenerates into the simple statement that density is nearly constant. This means that an incompressible flow requires only a momentum and continuity analysis, as we showed with many examples in Chaps. 7 and 8.

This chapter treats compressible flows, which have Mach numbers greater than about 0.3 and thus exhibit nonnegligible density changes. If the density change is significant, it follows from the equation of state that the temperature and pressure changes are also substantial. Large temperature changes imply that the energy equation can no longer be neglected. Therefore the work is doubled from two basic equations to four

1. Continuity equation
2. Momentum equation
3. Energy equation
4. Equation of state

to be solved simultaneously for four unknowns: pressure, density, temperature, and flow velocity ( $p$ ,  $\rho$ ,  $T$ ,  $V$ ). Thus the general theory of compressible flow is quite complicated, and we try here to make further simplifications, especially by assuming a reversible adiabatic or *isentropic* flow.

## The Mach Number

The Mach number is the dominant parameter in compressible flow analysis, with different effects depending on its magnitude. Aerodynamicists especially make a distinction between the various ranges of Mach number, and the following rough classifications are commonly used:

- $\text{Ma} < 0.3$ : *incompressible fw*, where density effects are negligible.
- $0.3 < \text{Ma} < 0.8$ : *subsonic fw*, where density effects are important but no shock waves appear.
- $0.8 < \text{Ma} < 1.2$ : *transonic fw*, where shock waves first appear, dividing subsonic and supersonic regions of the flow. Powered flight in the transonic region is difficult because of the mixed character of the flow field.
- $1.2 < \text{Ma} < 3.0$ : *supersonic fw*, where shock waves are present but there are no subsonic regions.
- $3.0 < \text{Ma}$ : *hypersonic fw* [11], where shock waves and other flow changes are especially strong.

The numerical values listed are only rough guides. These five categories of flow are appropriate to external high-speed aerodynamics. For internal (duct) flows, the most important question is simply whether the flow is subsonic ( $\text{Ma} < 1$ ) or supersonic ( $\text{Ma} > 1$ ), because the effect of area changes reverses, as we show in Sec. 9.4. Since supersonic flow effects may go against intuition, you should study these differences carefully.

## The Specific Heat Ratio

In addition to geometry and Mach number, compressible flow calculations also depend on a second dimensionless parameter, the *specific heat ratio* of the gas:

$$k = \frac{c_p}{c_v} \quad (9.1)$$

Earlier, in Chaps. 1 and 4, we used the same symbol  $k$  to denote the thermal conductivity of a fluid. We apologize for the duplication; thermal conductivity does not appear in these later chapters of the text.

Recall from Fig. 1.5 that  $k$  for the common gases decreases slowly with temperature and lies between 1.0 and 1.7. Variations in  $k$  have only a slight effect on compressible flow computations, and air,  $k \approx 1.40$ , is the dominant fluid of interest. Therefore, although we assign some problems involving other gases like steam and  $\text{CO}_2$  and helium, the compressible flow tables in App. B are based solely on the single value  $k = 1.40$  for air.

This text contains only a single chapter on compressible flow, but, as usual, whole books have been written on the subject. Here we list only certain recent or classical texts. References 1 to 4 are introductory or intermediate treatments, while Refs. 5 to 10 are advanced books. One can also become specialized within this specialty of compressible flow. Reference 11 concerns *hypersonic flow* —that is, at very high Mach numbers. Reference 12 explains the exciting new technique of direct simulation of gas flows with a *molecular dynamics model*. Compressible flow is also well suited for computational fluid dynamics (CFD), as described in Ref. 13. Finally, a short, thoroughly readable (no calculus) Ref. 14 describes the principles and promise of high-speed (supersonic) flight. From time to time we shall defer some specialized topic to these other texts.

We note in passing that at least two flow patterns depend strongly on very small density differences, acoustics, and natural convection. Acoustics [7, 9] is the study of sound wave propagation, which is accompanied by extremely small changes in density, pressure, and temperature. Natural convection is the gentle circulating pattern set up by buoyancy forces in a fluid stratified by uneven heating or uneven concentration of dissolved materials. Here we are concerned only with steady compressible flow where the fluid velocity is of magnitude comparable to that of the speed of sound.

## The Perfect Gas

In principle, compressible flow calculations can be made for any fluid equation of state, and we shall assign problems involving the steam tables [15], the gas tables [16], and liquids [Eq. (1.19)]. But in fact most elementary treatments are confined to the perfect gas with constant specific heats:

$$p = \rho RT \quad R = c_p - c_v = \text{const} \quad k = \frac{c_p}{c_v} = \text{const} \quad (9.2)$$

For all real gases,  $c_p$ ,  $c_v$ , and  $k$  vary with temperature but only moderately; for example,  $c_p$  of air increases 30 percent as temperature increases from 0 to 5000°F. Since we rarely deal with such large temperature changes, it is quite reasonable to assume constant specific heats.

Recall from Sec. 1.8 that the gas constant is related to a universal constant  $\Lambda$  divided by the gas molecular weight:

$$R_{\text{gas}} = \frac{\Lambda}{M_{\text{gas}}} \quad (9.3)$$

where  $\Lambda = 49,720 \text{ ft-lbf/(lbmol} \cdot ^\circ\text{R}) = 8314 \text{ J/(kmol} \cdot \text{K)}$

For air,  $M = 28.97$ , and we shall adopt the following property values for air throughout this chapter:

$$\begin{aligned} R &= 1716 \text{ ft}^2/(\text{s}^2 \cdot ^\circ\text{R}) = 287 \text{ m}^2/(\text{s}^2 \cdot \text{K}) & k &= 1.400 \\ c_v &= \frac{R}{k - 1} = 4293 \text{ ft}^2/(\text{s}^2 \cdot ^\circ\text{R}) = 718 \text{ m}^2/(\text{s}^2 \cdot \text{K}) & & (9.4) \\ c_p &= \frac{kR}{k - 1} = 6009 \text{ ft}^2/(\text{s}^2 \cdot ^\circ\text{R}) = 1005 \text{ m}^2/(\text{s}^2 \cdot \text{K}) \end{aligned}$$

Experimental values of  $k$  for eight common gases were shown in Fig. 1.5. From this figure and the molecular weight, the other properties can be computed, as in Eqs. (9.4).

The changes in the internal energy  $\hat{u}$  and enthalpy  $h$  of a perfect gas are computed for constant specific heats as

$$\hat{u}_2 - \hat{u}_1 = c_v(T_2 - T_1) \quad h_2 - h_1 = c_p(T_2 - T_1) \quad (9.5)$$

For variable specific heats one must integrate  $\hat{u} = \int c_v dT$  and  $h = \int c_p dT$  or use the gas tables [16]. Most modern thermodynamics texts now contain software for evaluating properties of nonideal gases [17], as does EES.

## Isentropic Process

The isentropic approximation is common in compressible flow theory. We compute the entropy change from the first and second laws of thermodynamics for a pure substance [17 or 18]:

$$T ds = dh - \frac{dp}{\rho} \quad (9.6)$$

Introducing  $dh = c_p dT$  for a perfect gas and solving for  $ds$ , we substitute  $\rho T = p/R$  from the perfect-gas law and obtain

$$\int_1^2 ds = \int_1^2 c_p \frac{dT}{T} - R \int_1^2 \frac{dp}{\rho} \quad (9.7)$$

If  $c_p$  is variable, the gas tables or EES will be needed, but for constant  $c_p$  we obtain the analytic results

$$s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} = c_v \ln \frac{T_2}{T_1} - R \ln \frac{\rho_2}{\rho_1} \quad (9.8)$$

Equations (9.8) are used to compute the entropy change across a shock wave (Sec. 9.5), which is an irreversible process.

For isentropic flow, we set  $s_2 = s_1$  and obtain these interesting power-law relations for an isentropic perfect gas:

$$\frac{p_2}{p_1} = \left(\frac{T_2}{T_1}\right)^{k/(k-1)} = \left(\frac{\rho_2}{\rho_1}\right)^k \quad (9.9)$$

These relations are used in Sec. 9.3.

### EXAMPLE 9.1

Argon flows through a tube such that its initial condition is  $p_1 = 1.7 \text{ MPa}$  and  $\rho_1 = 18 \text{ kg/m}^3$  and its final condition is  $p_2 = 248 \text{ kPa}$  and  $T_2 = 400 \text{ K}$ . Estimate (a) the initial temperature, (b) the final density, (c) the change in enthalpy, and (d) the change in entropy of the gas.

### Solution

From Table A.4 for argon,  $R = 208 \text{ m}^2/(\text{s}^2 \cdot \text{K})$  and  $k = 1.67$ . Therefore estimate its specific heat at constant pressure from Eq. (9.4):

$$c_p = \frac{kR}{k - 1} = \frac{1.67(208)}{1.67 - 1} \approx 519 \text{ m}^2/(\text{s}^2 \cdot \text{K})$$

The initial temperature and final density are estimated from the ideal-gas law, Eq. (9.2):

$$T_1 = \frac{p_1}{\rho_1 R} = \frac{1.7 \text{ E6 N/m}^2}{(18 \text{ kg/m}^3)[208 \text{ m}^2/(\text{s}^2 \cdot \text{K})]} = 454 \text{ K} \quad \text{Ans. (a)}$$

$$\rho_2 = \frac{p_2}{T_2 R} = \frac{248 \text{ E3 N/m}^2}{(400 \text{ K})[208 \text{ m}^2/(\text{s}^2 \cdot \text{K})]} = 2.98 \text{ kg/m}^3 \quad \text{Ans. (b)}$$

From Eq. (9.5) the enthalpy change is

$$h_2 - h_1 = c_p(T_2 - T_1) = 519(400 - 454) \approx -28,000 \text{ J/kg} \text{ (or m}^2/\text{s}^2\text{)} \quad \text{Ans. (c)}$$


The argon temperature and enthalpy decrease as we move down the tube. Actually, there may not be any external cooling; that is, the fluid enthalpy may be converted by friction to increased kinetic energy (Sec. 9.7).

Finally, the entropy change is computed from Eq. (9.8):

$$\begin{aligned} s_2 - s_1 &= c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \\ &= 519 \ln \frac{400}{454} - 208 \ln \frac{0.248 \text{ E6}}{1.7 \text{ E6}} \\ &= -66 + 400 \approx 334 \text{ m}^2/(\text{s}^2 \cdot \text{K}) \end{aligned} \quad \text{Ans. (d)}$$

The fluid entropy has increased. If there is no heat transfer, this indicates an irreversible process. Note that entropy has the same units as the gas constant and specific heat.

This problem is not just arbitrary numbers. It correctly simulates the behavior of argon moving subsonically through a tube with large frictional effects (Sec. 9.7).

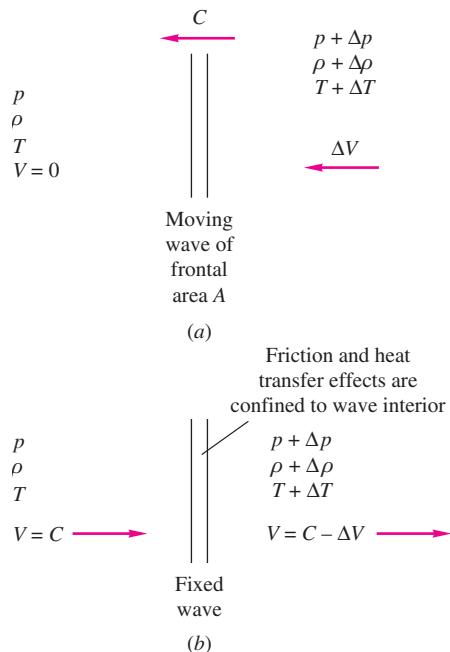

**Fig. 9.1** Control volume analysis of a finite-strength pressure wave: (a) control volume fixed to still fluid at left; (b) control volume moving left at wave speed  $C$ .

## 9.2 The Speed of Sound

The so-called speed of sound is the rate of propagation of a pressure pulse of infinitesimal strength through a still fluid. It is a thermodynamic property of a fluid. Let us analyze it by first considering a pulse of finite strength, as in Fig. 9.1. In Fig. 9.1a the pulse, or pressure wave, moves at speed  $C$  toward the still fluid ( $p$ ,  $\rho$ ,  $T$ ,  $V = 0$ ) at the left, leaving behind at the right a fluid of increased properties ( $p + \Delta p$ ,  $\rho + \Delta \rho$ ,  $T + \Delta T$ ) and a fluid velocity  $\Delta V$  toward the left following the wave but much slower. We can determine these effects by making a control volume analysis across the wave. To avoid the unsteady terms that would be necessary in Fig. 9.1a, we adopt instead the control volume of Fig. 9.1b, which moves at wave speed  $C$  to the left. The wave appears fixed from this viewpoint, and the fluid appears to have velocity  $C$  on the left and  $C - \Delta V$  on the right. The thermodynamic properties  $p$ ,  $\rho$ , and  $T$  are not affected by this change of viewpoint.

The flow in Fig. 9.1b is steady and one-dimensional across the wave. The continuity equation is thus, from Eq. (3.24),

$$\rho A C = (\rho + \Delta \rho)(A)(C - \Delta V)$$

$$\text{or} \quad \Delta V = C \frac{\Delta \rho}{\rho + \Delta \rho} \quad (9.10)$$

This proves our contention that the induced fluid velocity on the right is much smaller than the wave speed  $C$ . In the limit of infinitesimal wave strength (sound wave) this speed is itself infinitesimal.

Notice that there are no velocity gradients on either side of the wave. Therefore, even if fluid viscosity is large, frictional effects are confined to the interior of the wave. Advanced texts [for example, 9] show that the thickness of pressure waves in

gases is of order  $10^{-6}$  ft at atmospheric pressure. Thus we can safely neglect friction and apply the one-dimensional momentum equation (3.40) across the wave:

$$\sum F_{\text{right}} = \dot{m}(V_{\text{out}} - V_{\text{in}})$$

$$\text{or } pA - (p + \Delta p)A = (\rho A C)(C - \Delta V - C) \quad (9.11)$$

Again the area cancels, and we can solve for the pressure change:

$$\Delta p = \rho C \Delta V \quad (9.12)$$

If the wave strength is very small, the pressure change is small.

Finally, combine Eqs. (9.10) and (9.12) to give an expression for the wave speed:

$$C^2 = \frac{\Delta p}{\Delta \rho} \left( 1 + \frac{\Delta \rho}{\rho} \right) \quad (9.13)$$

The larger the strength  $\Delta \rho / \rho$  of the wave, the faster the wave speed; that is, powerful explosion waves move much more quickly than sound waves. In the limit of infinitesimal strength  $\Delta \rho \rightarrow 0$ , we have what is defined to be the speed of sound  $a$  of a fluid:

$$a^2 = \frac{\partial p}{\partial \rho} \quad (9.14)$$

But the evaluation of the derivative requires knowledge of the thermodynamic process undergone by the fluid as the wave passes. Sir Isaac Newton in 1686 made a famous error by deriving a formula for sound speed that was equivalent to assuming an isothermal process, the result being 20 percent too low for air, for example. He rationalized the discrepancy as being due to the “crassitude” (dust particles and so on) in the air; the error is certainly understandable when we reflect that it was made 180 years before the proper basis was laid for the second law of thermodynamics.

We now see that the correct process must be *adiabatic* because there are no temperature gradients except inside the wave itself. For vanishing-strength sound waves we therefore have an infinitesimal adiabatic or isentropic process. The correct expression for the sound speed is

$$a = \left( \frac{\partial p}{\partial \rho} \Big|_s \right)^{1/2} = \left( k \frac{\partial p}{\partial \rho} \Big|_T \right)^{1/2} \quad (9.15)$$

for any fluid, gas or liquid. Even a solid has a sound speed.

For a perfect gas, From Eq. (9.2) or (9.9), we deduce that the speed of sound is

$$a = \left( \frac{kp}{\rho} \right)^{1/2} = (kRT)^{1/2} \quad (9.16)$$

The speed of sound increases as the square root of the absolute temperature. For air, with  $k = 1.4$ , an easily memorized dimensional formula is

$$a(\text{ft/s}) \approx 49[T(\text{°R})]^{1/2} \quad (9.17)$$

$$a(\text{m/s}) \approx 20[T(\text{K})]^{1/2}$$

**Table 9.1** Sound Speed of Various Materials at 60°F (15.5°C) and 1 atm

Material	<i>a</i> , ft/s	<i>a</i> , m/s
Gases:		
H <sub>2</sub>	4,246	1,294
He	3,281	1,000
Air	1,117	340
Ar	1,040	317
CO <sub>2</sub>	873	266
CH <sub>4</sub>	607	185
<sup>238</sup> UF <sub>6</sub>	297	91
Liquids:		
Glycerin	6,100	1,860
Water	4,890	1,490
Mercury	4,760	1,450
Ethyl alcohol	3,940	1,200
Solids: <sup>*</sup>		
Aluminum	16,900	5,150
Steel	16,600	5,060
Hickory	13,200	4,020
Ice	10,500	3,200

\*Plane waves. Solids also have a *shear-wave speed*.

At sea-level standard temperature, 60°F = 520°R,  $a = 1117$  ft/s. This decreases in the upper atmosphere, which is cooler; at 50,000-ft standard altitude,  $T = -69.7^{\circ}\text{F} = 389.9^{\circ}\text{R}$  and  $a = 49(389.9)^{1/2} = 968$  ft/s, or 13 percent less.

Some representative values of sound speed in various materials are given in Table 9.1. For liquids and solids it is common to define the *bulk modulus*  $K$  of the material:

$$K = -V \left. \frac{\partial p}{\partial V} \right|_s = \rho \left. \frac{\partial p}{\partial \rho} \right|_s \quad (9.18)$$

In terms of bulk modulus, then,  $a = (K/\rho)^{1/2}$ . For example, at standard conditions, the bulk modulus of liquid carbon tetrachloride is 1.32 GPa absolute, and its density is 1590 kg/m<sup>3</sup>. Its speed of sound is therefore  $a = (1.32 \times 10^9 \text{ Pa}/1590 \text{ kg/m}^3)^{1/2} = 911 \text{ m/s} = 2980 \text{ ft/s}$ . Steel has a bulk modulus of about 2.0E11 Pa and water about 2.2E9 Pa (see Table A.3), or 90 times less than steel.

For solids, it is sometimes assumed that the bulk modulus is approximately equivalent to Young's modulus of elasticity  $E$ , but in fact their ratio depends on Poisson's ratio  $\sigma$ :

$$\frac{E}{K} = 3(1 - 2\sigma) \quad (9.19)$$

The two are equal for  $\sigma = \frac{1}{3}$ , which is approximately the case for many common metals such as steel and aluminum.

### EXAMPLE 9.2

Estimate the speed of sound of carbon monoxide at 200-kPa pressure and 300°C in m/s.

#### Solution

From Table A.4, for CO, the molecular weight is 28.01 and  $k \approx 1.40$ . Thus from Eq. (9.3)  $R_{\text{CO}} = 8314/28.01 = 297 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ , and the given temperature is 300°C + 273 = 573 K. Thus from Eq. (9.16) we estimate

$$a_{\text{CO}} = (kRT)^{1/2} = [1.40(297)(573)]^{1/2} = 488 \text{ m/s} \quad \text{Ans.}$$


## 9.3 Adiabatic and Isentropic Steady Flow

As mentioned in Sec. 9.1, the isentropic approximation greatly simplifies a compressible flow calculation. So does the assumption of adiabatic flow, even if nonisentropic.

Consider high-speed flow of a gas past an insulated wall, as in Fig. 9.2. There is no shaft work delivered to any part of the fluid. Therefore every streamtube in the flow satisfies the steady flow energy equation in the form of Eq. (3.70):

$$h_1 + \frac{1}{2}V_1^2 + gz_1 = h_2 + \frac{1}{2}V_2^2 + gz_2 - q + w_v \quad (9.20)$$

where point 1 is upstream of point 2. You may wish to review the details of Eq. (3.70) and its development. We saw in Example 3.20 that potential energy changes of a gas

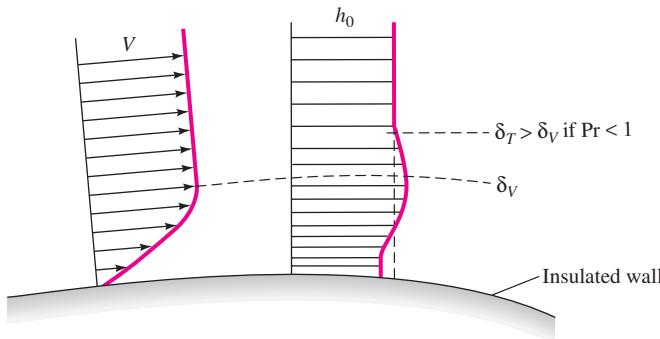

**Fig. 9.2** Velocity and stagnation enthalpy distributions near an insulated wall in a typical high-speed gas flow.

are extremely small compared with kinetic energy and enthalpy terms. We shall neglect the terms  $gz_1$  and  $gz_2$  in all gas dynamic analyses.

Inside the thermal and velocity boundary layers in Fig. 9.2 the heat transfer and viscous work terms  $q$  and  $w_v$  are not zero. But outside the boundary layer  $q$  and  $w_v$  are zero by definition, so that the outer flow satisfies the simple relation

$$h_1 + \frac{1}{2}V_1^2 = h_2 + \frac{1}{2}V_2^2 = \text{const} \quad (9.21)$$

The constant in Eq. (9.21) is equal to the maximum enthalpy that the fluid would achieve if brought to rest adiabatically. We call this value  $h_0$ , the *stagnation enthalpy* of the flow. Thus we rewrite Eq. (9.21) in the form

$$h + \frac{1}{2}V^2 = h_0 = \text{const} \quad (9.22)$$

This should hold for steady adiabatic flow of any compressible fluid outside the boundary layer. The wall in Fig. 9.2 could be either the surface of an immersed body or the wall of a duct. We have shown the details of Fig. 9.2; typically the thermal layer thickness  $\delta_T$  is greater than the velocity layer thickness  $\delta_V$  because most gases have a dimensionless Prandtl number  $\text{Pr}$  less than unity (see, for example, Ref. 19, sec. 4-3.2). Note that the stagnation enthalpy varies inside the thermal boundary layer, but its average value is the same as that at the outer layer due to the insulated wall.

For nonperfect gases we may have to use EES or the steam tables [15] or the gas tables [16] to implement Eq. (9.22). But for a perfect gas  $h = c_p T$ , and Eq. (9.22) becomes


$$c_p T + \frac{1}{2}V^2 = c_p T_0 \quad (9.23)$$

This establishes the stagnation temperature  $T_0$  of an adiabatic perfect-gas flow—that is, the temperature it achieves when decelerated to rest adiabatically.

An alternate interpretation of Eq. (9.22) occurs when the enthalpy and temperature drop to (absolute) zero, so that the velocity achieves a maximum value:

$$V_{\max} = (2h_0)^{1/2} = (2c_p T_0)^{1/2} \quad (9.24)$$

No higher flow velocity can occur unless additional energy is added to the fluid through shaft work or heat transfer (Sec. 9.8).

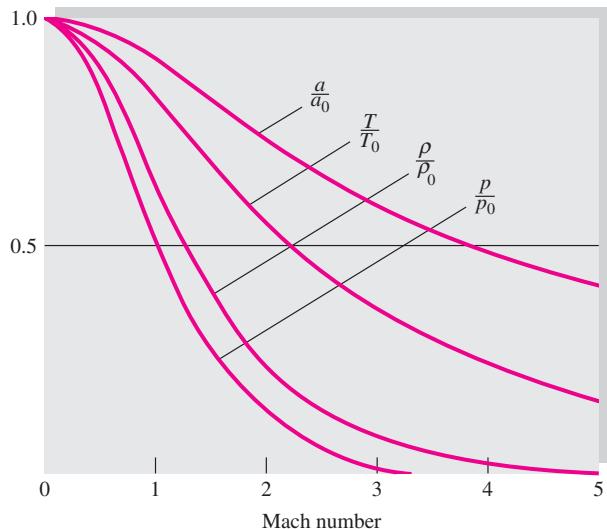

**Fig. 9.3** Adiabatic ( $T/T_0$  and  $a/a_0$ ) and isentropic ( $p/p_0$  and  $\rho/\rho_0$ ) properties versus Mach number for  $k = 1.4$ .

### Mach Number Relations

The dimensionless form of Eq. (9.23) brings in the Mach number  $\text{Ma}$  as a parameter, by using Eq. (9.16) for the speed of sound of a perfect gas. Divide through by  $c_p T$  to obtain

$$1 + \frac{V^2}{2c_p T} = \frac{T_0}{T} \quad (9.25)$$

But, from the perfect-gas law,  $c_p T = [kR/(k - 1)]T = a^2/(k - 1)$ , so that Eq. (9.25) becomes

$$1 + \frac{(k - 1)V^2}{2a^2} = \frac{T_0}{T}$$

or

$$\boxed{\frac{T_0}{T} = 1 + \frac{k - 1}{2} \text{Ma}^2 \quad \text{Ma} = \frac{V}{a}} \quad (9.26)$$

This relation is plotted in Fig. 9.3 versus the Mach number for  $k = 1.4$ . At  $\text{Ma} = 5$  the temperature has dropped to  $\frac{1}{6}T_0$ .

Since  $a \propto T^{1/2}$ , the ratio  $a_0/a$  is the square root of (9.26):

$$\frac{a_0}{a} = \left( \frac{T_0}{T} \right)^{1/2} = \left[ 1 + \frac{1}{2}(k - 1)\text{Ma}^2 \right]^{1/2} \quad (9.27)$$

Equation (9.27) is also plotted in Fig. 9.3. At  $\text{Ma} = 5$  the speed of sound has dropped to 41 percent of the stagnation value.

### Isentropic Pressure and Density Relations

Note that Eqs. (9.26) and (9.27) require only adiabatic flow and hold even in the presence of irreversibilities such as friction losses or shock waves.

If the flow is also *isentropic*, then for a perfect gas the pressure and density ratios can be computed from Eq. (9.9) as a power of the temperature ratio:

$$\frac{p_0}{p} = \left( \frac{T_0}{T} \right)^{k/(k-1)} = \left[ 1 + \frac{1}{2}(k - 1)Ma^2 \right]^{k/(k-1)} \quad (9.28a)$$

$$\frac{\rho_0}{\rho} = \left( \frac{T_0}{T} \right)^{1/(k-1)} = \left[ 1 + \frac{1}{2}(k - 1)Ma^2 \right]^{1/(k-1)} \quad (9.28b)$$

These relations are also plotted in Fig. 9.3; at  $Ma = 5$  the density is 1.13 percent of its stagnation value, and the pressure is only 0.19 percent of stagnation pressure.

The quantities  $p_0$  and  $\rho_0$  are the isentropic stagnation pressure and density, respectively that is, the pressure and density that the flow would achieve if brought isentropically to rest. In an adiabatic nonisentropic flow  $p_0$  and  $\rho_0$  retain their local meaning, but they vary throughout the flow as the entropy changes due to friction or shock waves. The quantities  $h_0$ ,  $T_0$ , and  $a_0$  are constant in an adiabatic nonisentropic flow (see Sec. 9.7 for further details).

### Relationship to Bernoulli's Equation

The isentropic assumptions (9.28) are effective, but are they realistic? Yes. To see why, take the differential of Eq. (9.22):

$$\text{Adiabatic:} \quad dh + V dV = 0 \quad (9.29)$$

Meanwhile, from Eq. (9.6), if  $ds = 0$  (isentropic process),

$$dh = \frac{dp}{\rho} \quad (9.30)$$

Combining (9.29) and (9.30), we find that an isentropic streamtube flow must be

$$\frac{dp}{\rho} + V dV = 0 \quad (9.31)$$

But this is exactly the Bernoulli relation, Eq. (3.54), for steady frictionless flow with negligible gravity terms. Thus we see that the isentropic flow assumption is equivalent to use of the Bernoulli or streamline form of the frictionless momentum equation.

### Critical Values at the Sonic Point

The stagnation values ( $a_0$ ,  $T_0$ ,  $p_0$ ,  $\rho_0$ ) are useful reference conditions in a compressible flow, but of comparable usefulness are the conditions where the flow is sonic,  $Ma = 1.0$ . These sonic, or *critical*, properties are denoted by asterisks:  $p^*$ ,  $\rho^*$ ,  $a^*$ , and  $T^*$ . They are certain ratios of the stagnation properties as given by Eqs. (9.26) to (9.28) when  $Ma = 1.0$ ; for  $k = 1.4$

$$\begin{aligned} \frac{p^*}{p_0} &= \left( \frac{2}{k+1} \right)^{k/(k-1)} = 0.5283 & \frac{\rho^*}{\rho_0} &= \left( \frac{2}{k+1} \right)^{1/(k-1)} = 0.6339 \\ \frac{T^*}{T_0} &= \frac{2}{k+1} = 0.8333 & \frac{a^*}{a_0} &= \left( \frac{2}{k+1} \right)^{1/2} = 0.9129 \end{aligned} \quad (9.32)$$

In all isentropic flow, all critical properties are constant; in adiabatic nonisentropic flow,  $a^*$  and  $T^*$  are constant, but  $p^*$  and  $\rho^*$  may vary.

The critical velocity  $V^*$  equals the sonic sound speed  $a^*$  by definition and is often used as a reference velocity in isentropic or adiabatic flow:

$$V^* = a^* = (kRT^*)^{1/2} = \left( \frac{2k}{k+1} RT_0 \right)^{1/2} \quad (9.33)$$

The usefulness of these critical values will become clearer as we study compressible duct flow with friction or heat transfer later in this chapter.

### Some Useful Numbers for Air

Since the great bulk of our practical calculations are for air,  $k = 1.4$ , the stagnation property ratios  $p/p_0$  and so on from Eqs. (9.26) to (9.28) are tabulated for this value in Table B.1. The increments in Mach number are rather coarse in this table because the values are meant as only a guide; these equations are now a trivial matter to manipulate on a hand calculator. Thirty years ago every text had extensive compressible flow tables with Mach number spacings of about 0.01, so that accurate values could be interpolated. Even today, reference books are available [20, 21, 29] with tables and charts and computer programs for a wide variety of compressible flow situations. Reference 22 contains formulas and charts applying to the thermodynamics of *real* (nonperfect) gas flows.

For  $k = 1.4$ , the following numerical versions of the isentropic and adiabatic flow formulas are obtained:

$$\begin{aligned} \frac{T_0}{T} &= 1 + 0.2 Ma^2 & \frac{p_0}{\rho} &= (1 + 0.2 Ma^2)^{2.5} \\ \frac{p_0}{p} &= (1 + 0.2 Ma^2)^{3.5} \end{aligned} \quad (9.34)$$

Or, if we are given the properties, it is equally easy to solve for the Mach number (again with  $k = 1.4$ ):

$$Ma^2 = 5 \left( \frac{T_0}{T} - 1 \right) = 5 \left[ \left( \frac{p_0}{\rho} \right)^{2/5} - 1 \right] = 5 \left[ \left( \frac{p_0}{p} \right)^{2/7} - 1 \right] \quad (9.35)$$

Note that these isentropic flow formulas serve as the equivalent of the frictionless adiabatic momentum and energy equations. They relate velocity to physical properties for a perfect gas, but they are *not* the “solution” to a gas dynamics problem. The complete solution is not obtained until the continuity equation has also been satisfied, for either one-dimensional (Sec. 9.4) or multidimensional (Sec. 9.9) flow.

One final note: These isentropic-ratio-versus-Mach-number formulas are seductive, tempting one to solve all problems by jumping right into the tables. Actually, many problems involving (dimensional) velocity and temperature can be solved more easily from the original raw dimensional energy equation (9.23) plus the perfect-gas law (9.2), as the next example will illustrate.

**EXAMPLE 9.3**

Air flows adiabatically through a duct. At point 1 the velocity is 240 m/s, with  $T_1 = 320$  K and  $p_1 = 170$  kPa. Compute (a)  $T_0$ , (b)  $p_0$ , (c)  $\rho_0$ , (d) Ma, (e)  $V_{\max}$ , and (f)  $V^*$ . At point 2 further downstream  $V_2 = 290$  m/s and  $p_2 = 135$  kPa. (g) What is the stagnation pressure  $p_{02}$ ?

**Solution**

- **Assumptions:** Let air be approximated as an ideal gas with constant  $k$ . The flow is adiabatic but *not* isentropic. Isentropic formulas are used *only* to compute local  $p_0$  and  $\rho_0$ , which vary.
- **Approach:** Use adiabatic and isentropic formulas to find the various properties.
- **Ideal gas parameters:** For air,  $R = 287 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ ,  $k = 1.40$ , and  $c_p = 1005 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ .
- **Solution steps (a, b, c, d):** With  $T_1$ ,  $p_1$  and  $V_1$  known, other properties at point 1 follow:

$$T_{01} = T_1 + \frac{V_1^2}{2c_p} = 320 + \frac{(240 \text{ m/s})^2}{2[1005 \text{ m}^2/(\text{s}^2 \cdot \text{K})]} = 320 + 29 = 349 \text{ K} \quad \text{Ans. (a)}$$

Once the Mach number is found from Eq. (9.35), local stagnation pressure and density follow:

$$\text{Ma}_1 = \sqrt{5\left(\frac{T_{01}}{T_1} - 1\right)} = \sqrt{5\left(\frac{349 \text{ K}}{320 \text{ K}} - 1\right)} = \sqrt{0.448} = 0.67 \quad \text{Ans. (b)}$$

$$p_{01} = p_1(1 + 0.2 \text{ Ma}_1)^{3.5} = (170 \text{ kPa})[1 + 0.2(0.67)^2]^{3.5} = 230 \text{ kPa} \quad \text{Ans. (d)}$$

$$\rho_{01} = \frac{p_{01}}{RT_{01}} = \frac{230,000 \text{ N/m}^2}{[287 \text{ m}^2/(\text{s}^2 \cdot \text{K})](349 \text{ K})} = 2.29 \frac{\text{N} \cdot \text{s}^2/\text{m}}{\text{m}^3} = 2.29 \frac{\text{kg}}{\text{m}^3} \quad \text{Ans. (c)}$$

- **Comment:** Note that we used dimensional (non-Mach-number) formulas where convenient.
- **Solution steps (e, f):** Both  $V_{\max}$  and  $V^*$  are directly related to stagnation temperature from Eqs. (9.24) and (9.33):

$$V_{\max} = \sqrt{2c_p T_0} = \sqrt{2[1005 \text{ m}^2/(\text{s}^2 \cdot \text{K})](349 \text{ K})} = 837 \frac{\text{m}}{\text{s}} \quad \text{Ans. (e)}$$

$$V^* = \sqrt{\frac{2k}{k+1} RT_0} = \sqrt{\frac{2(1.4)}{(1.4+1)} \left(287 \frac{\text{m}^2}{\text{s}^2 \cdot \text{K}}\right)(349 \text{ K})} = 342 \frac{\text{m}}{\text{s}} \quad \text{Ans. (f)}$$

- At point 2 downstream, the temperature is unknown, but since the flow is adiabatic, the stagnation temperature is constant:  $T_{01} = T_{02} = 349$  K. Thus, from Eq. (9.23),

$$T_2 = T_{02} - \frac{V_2^2}{2c_p} = 349 - \frac{(290 \text{ m/s})^2}{2[1005 \text{ m}^2/(\text{s}^2 \cdot \text{K})]} = 307 \text{ K}$$

Hence, from Eq. (9.28a), the isentropic stagnation pressure at point 2 is

$$p_{02} = p_2 \left( \frac{T_{02}}{T_2} \right)^{k/(k-1)} = (135 \text{ kPa}) \left( \frac{349 \text{ K}}{307 \text{ K}} \right)^{1.4/0.4} = 211 \text{ kPa} \quad \text{Ans. (g)}$$

- Comments: Part (g), a ratio-type ideal-gas formula, is more direct than finding the Mach number, which turns out to be  $Ma_2 = 0.83$ , and using the Mach number formula, Eq. (9.34) for  $p_{02}$ . Note that  $p_{02}$  is 8 percent less than  $p_{01}$ . The flow is nonisentropic: Entropy rises downstream, and stagnation pressure and density drop, due in this case to frictional losses.

## 9.4 Isentropic Flow with Area Changes

By combining the isentropic and/or adiabatic flow relations with the equation of continuity we can study practical compressible flow problems. This section treats the one-dimensional flow approximation.

Figure 9.4 illustrates the one-dimensional flow assumption. A real flow, Fig. 9.4a, has no slip at the walls and a velocity profile  $V(x, y)$  that varies across the duct section (compare with Fig. 7.8). If, however, the area change is small and the wall radius of curvature large

$$\frac{dh}{dx} \ll 1 \quad h(x) \ll R(x) \quad (9.36)$$

then the flow is approximately one-dimensional, as in Fig. 9.4b, with  $V \approx V(x)$  reacting to area change  $A(x)$ . Compressible flow nozzles and diffusers do not always satisfy conditions (9.36), but we use the one-dimensional theory anyway because of its simplicity.


For steady one-dimensional flow the equation of continuity is, from Eq. (3.24),

$$\rho(x)V(x)A(x) = \dot{m} = \text{const} \quad (9.37)$$

Before applying this to duct theory, we can learn a lot from the differential form of Eq. (9.37):

$$\frac{dp}{\rho} + \frac{dV}{V} + \frac{dA}{A} = 0 \quad (9.38)$$

The differential forms of the frictionless momentum equation (9.31) and the sound-speed relation (9.15) are recalled here for convenience:

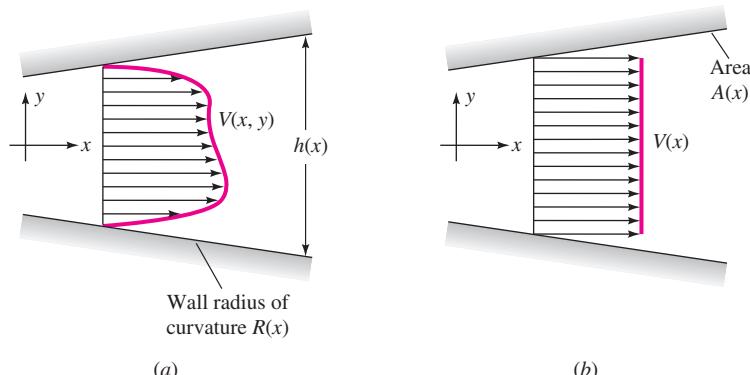

**Fig. 9.4** Compressible flow through a duct: (a) real-fluid velocity profile; (b) one-dimensional approximation.

Duct geometry	Subsonic $\text{Ma} < 1$	Supersonic $\text{Ma} > 1$
	$dA > 0$ $dV < 0$ $dp > 0$ Subsonic diffuser	$dV > 0$ $dp < 0$ Supersonic nozzle
	$dA < 0$ $dV > 0$ $dp < 0$ Subsonic nozzle	$dV < 0$ $dp > 0$ Supersonic diffuser

**Fig. 9.5** Effect of Mach number on property changes with area change in duct flow.

$$\begin{aligned} \text{Momentum} \quad & \frac{dp}{\rho} + V dV = 0 \\ \text{Sound speed:} \quad & dp = a^2 d\rho \end{aligned} \quad (9.39)$$

Now eliminate  $dp$  and  $d\rho$  between Eqs. (9.38) and (9.39) to obtain the following relation between velocity change and area change in isentropic duct flow:


$$\frac{dV}{V} = \frac{dA}{A} \frac{1}{\text{Ma}^2 - 1} = -\frac{dp}{\rho V^2} \quad (9.40)$$

Inspection of this equation, without actually solving it, reveals a fascinating aspect of compressible flow: Property changes are of opposite sign for subsonic and supersonic flow because of the term  $\text{Ma}^2 - 1$ . There are four combinations of area change and Mach number, summarized in Fig. 9.5.

From earlier chapters we are used to subsonic behavior ( $\text{Ma} < 1$ ): When area increases, velocity decreases and pressure increases, which is denoted a subsonic diffuser. But in supersonic flow ( $\text{Ma} > 1$ ), the velocity actually increases when the area increases, a supersonic nozzle. The same opposing behavior occurs for an area decrease, which speeds up a subsonic flow and slows down a supersonic flow.

What about the sonic point  $\text{Ma} = 1$ ? Since infinite acceleration is physically impossible, Eq. (9.40) indicates that  $dV$  can be finite only when  $dA = 0$ —that is, a minimum area (throat) or a maximum area (bulge). In Fig. 9.6 we patch together a throat section and a bulge section, using the rules from Fig. 9.5. The throat or converging-diverging section can smoothly accelerate a subsonic flow through sonic to supersonic flow, as in Fig. 9.6a. This is the only way a supersonic flow can be created by expanding the gas from a stagnant reservoir. The bulge section fails; the bulge Mach number moves away from a sonic condition rather than toward it.

Although supersonic flow downstream of a nozzle requires a sonic throat, the opposite is not true: A compressible gas can pass through a throat section without becoming sonic.

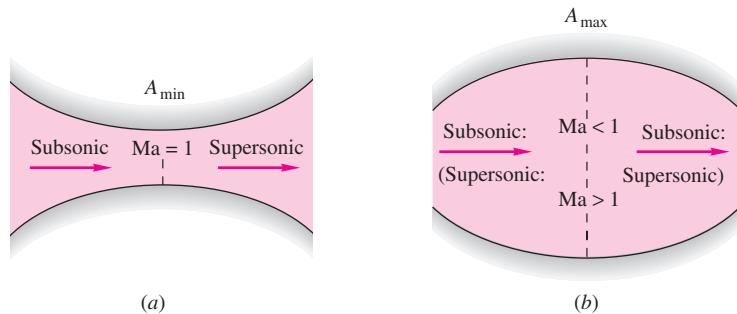

**Fig. 9.6** From Eq. (9.40), in flow through a throat (*a*) the fluid can accelerate smoothly through sonic and supersonic flow. In flow through the bulge (*b*) the flow at the bulge cannot be sonic on physical grounds.

### Perfect-Gas Area Change

We can use the perfect-gas and isentropic flow relations to convert the continuity relation (9.37) into an algebraic expression involving only area and Mach number, as follows. Equate the mass flow at any section to the mass flow under sonic conditions (which may not actually occur in the duct):

$$\rho V A = \rho^* V^* A^*$$

or

$$\frac{A}{A^*} = \frac{\rho^*}{\rho} \frac{V^*}{V} \quad (9.41)$$

Both the terms on the right are functions only of Mach number for isentropic flow. From Eqs. (9.28) and (9.32)

$$\frac{\rho^*}{\rho} = \frac{\rho^*}{\rho_0} \frac{\rho_0}{\rho} = \left\{ \frac{2}{k+1} \left[ 1 + \frac{1}{2}(k-1) \text{Ma}^2 \right] \right\}^{1/(k-1)} \quad (9.42)$$

From Eqs. (9.26) and (9.32) we obtain

$$\begin{aligned} \frac{V^*}{V} &= \frac{(kRT^*)^{1/2}}{V} = \frac{(kRT)^{1/2}}{V} \left( \frac{T^*}{T_0} \right)^{1/2} \left( \frac{T_0}{T} \right)^{1/2} \\ &= \frac{1}{\text{Ma}} \left\{ \frac{2}{k+1} \left[ 1 + \frac{1}{2}(k-1) \text{Ma}^2 \right] \right\}^{1/2} \end{aligned} \quad (9.43)$$


Combining Eqs. (9.41) to (9.43), we get the desired result:

$$\frac{A}{A^*} = \frac{1}{\text{Ma}} \left[ \frac{1 + \frac{1}{2}(k-1) \text{Ma}^2}{\frac{1}{2}(k+1)} \right]^{(1/2)(k+1)/(k-1)} \quad (9.44)$$

For  $k = 1.4$ , Eq. (9.44) takes the numerical form

$$\frac{A}{A^*} = \frac{1}{\text{Ma}} \frac{(1 + 0.2 \text{Ma}^2)^3}{1.728} \quad (9.45)$$

which is plotted in Fig. 9.7. Equations (9.45) and (9.34) enable us to solve any one-dimensional isentropic airflow problem given, say, the shape of the duct  $A(x)$  and the stagnation conditions and assuming that there are no shock waves in the duct.

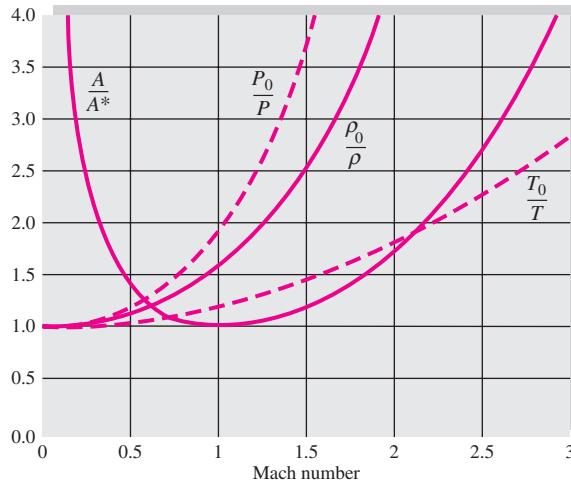

**Fig. 9.7** Area ratio and fluid properties versus Mach number for isentropic flow of a perfect gas with  $k = 1.4$ .

Figure 9.7 shows that the minimum area that can occur in a given isentropic duct flow is the sonic, or critical, throat area. All other duct sections must have  $A$  greater than  $A^*$ . In many flows a critical sonic throat is not actually present, and the flow in the duct is either entirely subsonic or, more rarely, entirely supersonic.

### Choking

From Eq. (9.41) the inverse ratio  $A^*/A$  equals  $\rho V/(\rho^* V^*)$ , the mass flow per unit area at any section compared with the critical mass flow per unit area. From Fig. 9.7 this inverse ratio rises from zero at  $Ma = 0$  to unity at  $Ma = 1$  and back down to zero at large  $Ma$ . Thus, for given stagnation conditions, the maximum possible mass flow passes through a duct when its throat is at the critical or sonic condition. The duct is then said to be *choked* and can carry no additional mass flow unless the throat is widened. If the throat is constricted further, the mass flow through the duct must decrease.

From Eqs. (9.32) and (9.33) the maximum mass flow is

$$\begin{aligned}\dot{m}_{\max} &= \rho^* A^* V^* = \rho_0 \left( \frac{2}{k+1} \right)^{1/(k-1)} A^* \left( \frac{2k}{k+1} RT_0 \right)^{1/2} \\ &= k^{1/2} \left( \frac{2}{k+1} \right)^{(1/2)(k+1)/(k-1)} A^* \rho_0 (RT_0)^{1/2}\end{aligned}\quad (9.46a)$$

For  $k = 1.4$  this reduces to

$$\dot{m}_{\max} = 0.6847 A^* \rho_0 (RT_0)^{1/2} = \frac{0.6847 p_0 A^*}{(RT_0)^{1/2}} \quad (9.46b)$$

For isentropic flow through a duct, the maximum mass flow possible is proportional to the throat area and stagnation pressure and inversely proportional to the square root

of the stagnation temperature. These are somewhat abstract facts, so let us illustrate with some examples.

### The Local Mass Flow Function

Equations (9.46) give the *maximum* mass flow, which occurs at the choking condition (sonic exit). They can be modified to predict the actual (nonmaximum) mass flow at any section where local area  $A$  and pressure  $p$  are known.<sup>1</sup> The algebra is convoluted, so here we give only the final result, expressed in dimensionless form:

$$\text{Mass flow function} = \frac{\dot{m}}{A} \frac{\sqrt{RT_0}}{p_0} = \sqrt{\frac{2k}{k-1} \left(\frac{p}{p_0}\right)^{2/k} \left[1 - \left(\frac{p}{p_0}\right)^{(k-1)/k}\right]} \quad (9.47)$$

We stress that  $p$  and  $A$  in this relation are the *local* values at position  $x$ . As  $p/p_0$  falls, this function rises rapidly and then levels out at the maximum of Eqs. (9.46). A few values may be tabulated here for  $k = 1.4$ :

$p/p_0$	1.0	0.98	0.95	0.9	0.8	0.7	0.6	$\leq 0.5283$
Function	0.0	0.1978	0.3076	0.4226	0.5607	0.6383	0.6769	0.6847

Equation (9.47) is handy if stagnation conditions are known and the flow is not choked.

When  $A/A^*$  is known and the Mach number is desired, no algebraic solution is known to the writer. Hand iteration with a good guess would suffice, but EES is ideal for this situation. Assume that  $A$  and  $A^*$  and  $k$  are known. Then all we need is the EES statement

$$A/A^* = (1/Ma)*((1 + 0.5*(k-1)*Ma^2)/0.5/(k + 1))^{(0.5*(k + 1)/(k-1))} \quad (9.48)$$

EES will provide the Mach number in a flash, for any real-gas  $k$  between 1.0 and 1.67.

Note that two solutions are possible for a given  $A/A^*$ , one subsonic and one supersonic. The proper solution cannot be selected without further information, such as known pressure or temperature at the given duct section.


#### EXAMPLE 9.4

Air flows isentropically through a duct. At section 1 the area is  $0.05 \text{ m}^2$  and  $V_1 = 180 \text{ m/s}$ ,  $p_1 = 500 \text{ kPa}$ , and  $T_1 = 470 \text{ K}$ . Compute (a)  $T_0$ , (b)  $\text{Ma}_1$ , (c)  $p_0$ , and (d) both  $A^*$  and  $\dot{m}$ . If at section 2 the area is  $0.036 \text{ m}^2$ , compute  $\text{Ma}_2$  and  $p_2$  if the flow is (e) subsonic or (f) supersonic. Assume  $k = 1.4$ .

<sup>1</sup>The author is indebted to Georges Aigret, of Chimay, Belgium, for suggesting this useful function.

**Solution****Part (a)**

A general sketch of the problem is shown in Fig. E9.4. With  $V_1$  and  $T_1$  known, the energy equation (9.23) gives

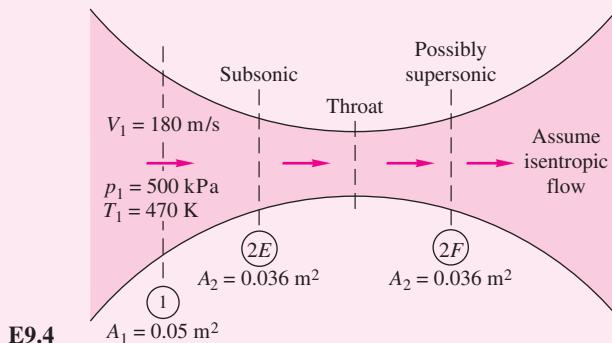

$$T_0 = T_1 + \frac{V_1^2}{2c_p} = 470 + \frac{(180)^2}{2(1005)} = 486 \text{ K} \quad \text{Ans. (a)}$$

**Part (b)**

The local sound speed  $a_1 = \sqrt{kRT_1} = [(1.4)(287)(470)]^{1/2} = 435 \text{ m/s}$ . Hence

$$\text{Ma}_1 = \frac{V_1}{a_1} = \frac{180}{435} = 0.414 \quad \text{Ans. (b)}$$

**Part (c)**

With  $\text{Ma}_1$  known, the stagnation pressure follows from Eq. (9.34):

$$p_0 = p_1(1 + 0.2 \text{ Ma}_1^2)^{3.5} = (500 \text{ kPa})[1 + 0.2(0.414)^2]^{3.5} = 563 \text{ kPa} \quad \text{Ans. (c)}$$

**Part (d)**

Similarly, from Eq. (9.45), the critical sonic throat area is

$$\frac{A_1}{A^*} = \frac{(1 + 0.2 \text{ Ma}_1^2)^3}{1.728 \text{ Ma}_1} = \frac{[1 + 0.2(0.414)^2]^3}{1.728(0.414)} = 1.547$$

$$\text{or} \quad A^* = \frac{A_1}{1.547} = \frac{0.05 \text{ m}^2}{1.547} = 0.0323 \text{ m}^2 \quad \text{Ans. (d)}$$

This throat must *actually be present* in the duct if the flow is to become supersonic.

We now know  $A^*$ . So to compute the mass flow we can use Eqs. (9.46), which remain valid, based on the numerical value of  $A^*$ , whether or not a throat actually exists:

$$\dot{m} = 0.6847 \frac{p_0 A^*}{\sqrt{RT_0}} = 0.6847 \frac{(563,000)(0.0323)}{\sqrt{(287)(486)}} = 33.4 \text{ kg/s} \quad \text{Ans. (d)}$$

Or we could fare equally well with our new “local mass flow” formula, Eq. (9.47), using, say, the pressure and area at section 1. Given  $p_1/p_0 = 500/563 = 0.889$ , Eq. (9.47) yields

$$\dot{m} \frac{\sqrt{287(486)}}{563,000(0.05)} = \sqrt{\frac{2(1.4)}{0.4} (0.889)^{2/1.4} [1 - (0.889)^{0.4/1.4}]} = 0.444 \quad \dot{m} = 33.4 \frac{\text{kg}}{\text{s}} \quad \text{Ans. (d)}$$

**Part (e)**

Assume *subsonic* flow corresponds to section 2E in Fig. E9.4. The duct contracts to an area ratio  $A_2/A^* = 0.036/0.0323 = 1.115$ , which we find on the left side of Fig. 9.7 or the

subsonic part of Table B.1. Neither the figure nor the table is that accurate. EES will give an arbitrarily accurate solution with only three statements (in SI units):

$$A_2 = 0.036$$

$$A_{\text{star}} = 0.0323$$

$$A_2/A_{\text{star}} = (1 + 0.2 \cdot \text{Ma}_2^2)^{-3/2} / 1.2^{-3/2} / \text{Ma}_2$$

Specify that you want a *subsonic* solution (e.g., limit  $\text{Ma}_2 < 1$ ), and EES reports

$$\text{Ma}_2 = 0.6758$$

*Ans. (e)*

[Ask for a supersonic solution (require  $\text{Ma}_2 > 1$ ) and you receive  $\text{Ma}_2 = 1.4001$ , which is the answer to part (f).] The pressure is given by the isentropic relation

$$p_2 = \frac{p_0}{[1 + 0.2(0.676)^2]^{3.5}} = \frac{563 \text{ kPa}}{1.358} \approx 415 \text{ kPa} \quad \text{Ans. (e)}$$

Part (e) does *not* require a throat, sonic or otherwise; the flow could simply be contracting subsonically from  $A_1$  to  $A_2$ .

### EES Part (f)

This time assume *supersonic* flow, corresponding to section 2F in Fig. E9.4. Again the area ratio is  $A_2/A^* = 0.036/0.0323 = 1.115$ , and we look on the *right* side of Fig. 9.7 or the supersonic part of Table B.1—the latter can be read quite accurately as  $\text{Ma}_2 \approx 1.40$ . EES will give a very accurate solution with the same three statements from part (e). Specify that you want a *supersonic* solution (e.g., limit  $\text{Ma}_2 > 1$ ), and EES reports

$$\text{Ma}_2 = 1.4001$$

*Ans. (f)*

Again the pressure is given by the isentropic relation at the new Mach number:

$$p_2 = \frac{p_0}{[1 + 0.2(1.4001)^2]^{3.5}} = \frac{563 \text{ kPa}}{3.183} = 177 \text{ kPa} \quad \text{Ans. (f)}$$

Note that the supersonic flow pressure level is much less than  $p_2$  in part (e), and a sonic throat *must* have occurred between sections 1 and 2F.

### EXAMPLE 9.5

It is desired to expand air from  $p_0 = 200 \text{ kPa}$  and  $T_0 = 500 \text{ K}$  through a throat to an exit Mach number of 2.5. If the desired mass flow is 3 kg/s, compute (a) the throat area and the exit (b) pressure, (c) temperature, (d) velocity, and (e) area, assuming isentropic flow, with  $k = 1.4$ .

### Solution

The throat area follows from Eq. (9.47), because the throat flow must be sonic to produce a supersonic exit:

$$A^* = \frac{\dot{m}(RT_0)^{1/2}}{0.6847p_0} = \frac{3.0[287(500)]^{1/2}}{0.6847(200,000)} = 0.00830 \text{ m}^2 = \frac{1}{4} \pi D^*{}^2$$

or

$$D_{\text{throat}} = 10.3 \text{ cm}$$

*Ans. (a)*

With the exit Mach number known, the isentropic flow relations give the pressure and temperature:

$$p_e = \frac{p_0}{[1 + 0.2(2.5)^2]^{3.5}} = \frac{200,000}{17.08} = 11,700 \text{ Pa} \quad \text{Ans. (b)}$$

$$T_e = \frac{T_0}{1 + 0.2(2.5)^2} = \frac{500}{2.25} = 222 \text{ K} \quad \text{Ans. (c)}$$

The exit velocity follows from the known Mach number and temperature:

$$V_e = Ma_e(kRT_e)^{1/2} = 2.5[1.4(287)(222)]^{1/2} = 2.5(299 \text{ m/s}) = 747 \text{ m/s} \quad \text{Ans. (d)}$$

The exit area follows from the known throat area and exit Mach number and Eq. (9.45):

$$\frac{A_e}{A^*} = \frac{[1 + 0.2(2.5)^2]^3}{1.728(2.5)} = 2.64$$


or  $A_e = 2.64A^* = 2.64(0.0083 \text{ m}^2) = 0.0219 \text{ m}^2 = \frac{1}{4}\pi D_e^2$

or  $D_e = 16.7 \text{ cm} \quad \text{Ans. (e)}$

One point might be noted: The computation of the throat area  $A^*$  did not depend in any way on the numerical value of the exit Mach number. The exit was supersonic; therefore the throat is sonic and choked, and no further information is needed.

## 9.5 The Normal Shock Wave

A common irreversibility occurring in supersonic internal or external flows is the normal shock wave sketched in Fig. 9.8. Except at near-vacuum pressures such shock waves are very thin (a few micrometers thick) and approximate a discontinuous change in flow properties. We select a control volume just before and after the wave, as in Fig. 9.8.

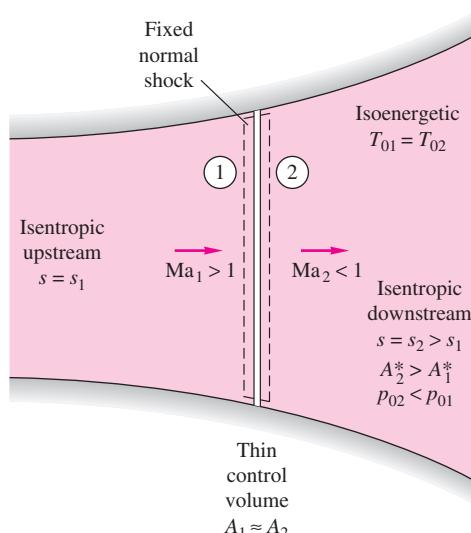

**Fig. 9.8** Flow through a fixed normal shock wave.

The analysis is identical to that of Fig. 9.1; that is, a shock wave is a fixed strong pressure wave. To compute all property changes rather than just the wave speed, we use all our basic one-dimensional steady flow relations, letting section 1 be upstream and section 2 be downstream:

$$\text{Continuity:} \quad \rho_1 V_1 = \rho_2 V_2 = G = \text{const} \quad (9.49a)$$

$$\text{Momentum:} \quad p_1 - p_2 = \rho_2 V_2^2 - \rho_1 V_1^2 \quad (9.49b)$$

$$\text{Energy:} \quad h_1 + \frac{1}{2}V_1^2 = h_2 + \frac{1}{2}V_2^2 = h_0 = \text{const} \quad (9.49c)$$

$$\text{Perfect gas:} \quad \frac{p_1}{\rho_1 T_1} = \frac{p_2}{\rho_2 T_2} \quad (9.49d)$$

$$\text{Constant } c_p: \quad h = c_p T \quad k = \text{const} \quad (9.49e)$$

Note that we have canceled out the areas  $A_1 \approx A_2$ , which is justified even in a variable duct section because of the thinness of the wave. The first successful analyses of these normal shock relations are credited to W. J. M. Rankine (1870) and A. Hugoniot (1887), hence the modern term *Rankine-Hugoniot relations*. If we assume that the upstream conditions ( $p_1$ ,  $V_1$ ,  $\rho_1$ ,  $h_1$ ,  $T_1$ ) are known, Eqs. (9.49) are five algebraic relations in the five unknowns ( $p_2$ ,  $V_2$ ,  $\rho_2$ ,  $h_2$ ,  $T_2$ ). Because of the velocity-squared term, two solutions are found, and the correct one is determined from the second law of thermodynamics, which requires that  $s_2 > s_1$ .

The velocities  $V_1$  and  $V_2$  can be eliminated from Eqs. (9.49a) to (9.49c) to obtain the Rankine-Hugoniot relation:

$$h_2 - h_1 = \frac{1}{2} (p_2 - p_1) \left( \frac{1}{\rho_2} + \frac{1}{\rho_1} \right) \quad (9.50)$$

This contains only thermodynamic properties and is independent of the equation of state. Introducing the perfect-gas law  $h = c_p T = kp/[(k - 1)\rho]$ , we can rewrite this as

$$\frac{\rho_2}{\rho_1} = \frac{1 + \beta p_2/p_1}{\beta + p_2/p_1} \quad \beta = \frac{k + 1}{k - 1} \quad (9.51)$$

We can compare this with the isentropic flow relation for a very weak pressure wave in a perfect gas:

$$\frac{\rho_2}{\rho_1} = \left( \frac{p_2}{p_1} \right)^{1/k} \quad (9.52)$$

Also, the actual change in entropy across the shock can be computed from the perfect-gas relation:

$$\frac{s_2 - s_1}{c_v} = \ln \left[ \frac{p_2}{p_1} \left( \frac{\rho_1}{\rho_2} \right)^k \right] \quad (9.53)$$

Assuming a given wave strength  $p_2/p_1$ , we can compute the density ratio and the entropy change and list them as follows for  $k = 1.4$ :

$\frac{p_2}{p_1}$	$\frac{p_2/p_1}{\text{Eq. (9.51)}}$	$\frac{s_2 - s_1}{c_v}$
$p_1$	<b>Isentropic</b>	
0.5	0.6154	-0.0134
0.9	0.9275	-0.00005
1.0	1.0	0.0
1.1	1.00704	0.00004
1.5	1.3333	0.0027
2.0	1.6250	0.0134

We see that the entropy change is negative if the pressure decreases across the shock, which violates the second law. Thus a rarefaction shock is impossible in a perfect gas.<sup>2</sup> We see also that weak shock waves ( $p_2/p_1 \leq 2.0$ ) are very nearly isentropic.

### Mach Number Relations

For a perfect gas all the property ratios across the normal shock are unique functions of  $k$  and the upstream Mach number  $\text{Ma}_1$ . For example, if we eliminate  $\rho_2$  and  $V_2$  from Eqs. (9.49a) to (9.49c) and introduce  $h = kp/[(k - 1)\rho]$ , we obtain

$$\frac{p_2}{p_1} = \frac{1}{k + 1} \left[ \frac{2\rho_1 V_1^2}{p_1} - (k - 1) \right] \quad (9.54)$$

But for a perfect gas  $\rho_1 V_1^2/p_1 = kV_1^2/(kRT_1) = k \text{Ma}_1^2$ , so that Eq. (9.54) is equivalent to

$$\frac{p_2}{p_1} = \frac{1}{k + 1} [2k \text{Ma}_1^2 - (k - 1)] \quad (9.55)$$

From this equation we see that, for any  $k$ ,  $p_2 > p_1$  only if  $\text{Ma}_1 > 1.0$ . Thus for flow through a normal shock wave, the upstream Mach number must be supersonic to satisfy the second law of thermodynamics.

What about the downstream Mach number? From the perfect-gas identity  $\rho V^2 = kp \text{Ma}^2$ , we can rewrite Eq. (9.49b) as

$$\frac{p_2}{p_1} = \frac{1 + k \text{Ma}_1^2}{1 + k \text{Ma}_2^2} \quad (9.56)$$

which relates the pressure ratio to both Mach numbers. By equating Eqs. (9.55) and (9.56) we can solve for

$$\text{Ma}_2^2 = \frac{(k - 1) \text{Ma}_1^2 + 2}{2k \text{Ma}_1^2 - (k - 1)} \quad (9.57)$$

Since  $\text{Ma}_1$  must be supersonic, this equation predicts for all  $k > 1$  that  $\text{Ma}_2$  must be subsonic. Thus a normal shock wave decelerates a flow almost discontinuously from supersonic to subsonic conditions.

<sup>2</sup>This is true also for most real gases; see Ref. 9, Sec. 7.3.

Further manipulation of the basic relations (9.49) for a perfect gas gives additional equations relating the change in properties across a normal shock wave in a perfect gas:

$$\frac{\rho_2}{\rho_1} = \frac{(k+1)\text{Ma}_1^2}{(k-1)\text{Ma}_1^2 + 2} = \frac{V_1}{V_2}$$

$$\frac{T_2}{T_1} = [2 + (k-1)\text{Ma}_1^2] \frac{2k\text{Ma}_1^2 - (k-1)}{(k+1)^2\text{Ma}_1^2} \quad (9.58)$$

$$T_{02} = T_{01}$$


$$\frac{p_{02}}{p_{01}} = \frac{\rho_{02}}{\rho_{01}} = \left[ \frac{(k+1)\text{Ma}_1^2}{2 + (k-1)\text{Ma}_1^2} \right]^{k/(k-1)} \left[ \frac{k+1}{2k\text{Ma}_1^2 - (k-1)} \right]^{1/(k-1)}$$

Of additional interest is the fact that the critical, or sonic, throat area  $A^*$  in a duct increases across a normal shock:


$$\frac{A_2^*}{A_1^*} = \frac{\text{Ma}_2}{\text{Ma}_1} \left[ \frac{2 + (k-1)\text{Ma}_1^2}{2 + (k-1)\text{Ma}_2^2} \right]^{(1/2)(k+1)/(k-1)} \quad (9.59)$$

All these relations are given in Table B.2 and plotted versus upstream Mach number  $\text{Ma}_1$  in Fig. 9.9 for  $k = 1.4$ . We see that pressure increases greatly while temperature and density increase moderately. The effective throat area  $A^*$  increases slowly at first and then rapidly. The failure of students to account for this change in  $A^*$  is a common source of error in shock calculations.

The stagnation temperature remains the same, but the stagnation pressure and density decrease in the same ratio; in other words, the flow across the shock is adiabatic but nonisentropic. Other basic principles governing the behavior of shock waves can

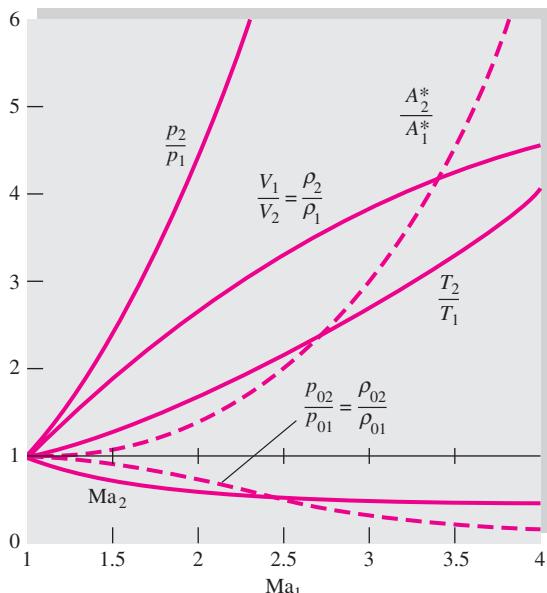

**Fig. 9.9** Change in flow properties across a normal shock wave for  $k = 1.4$ .

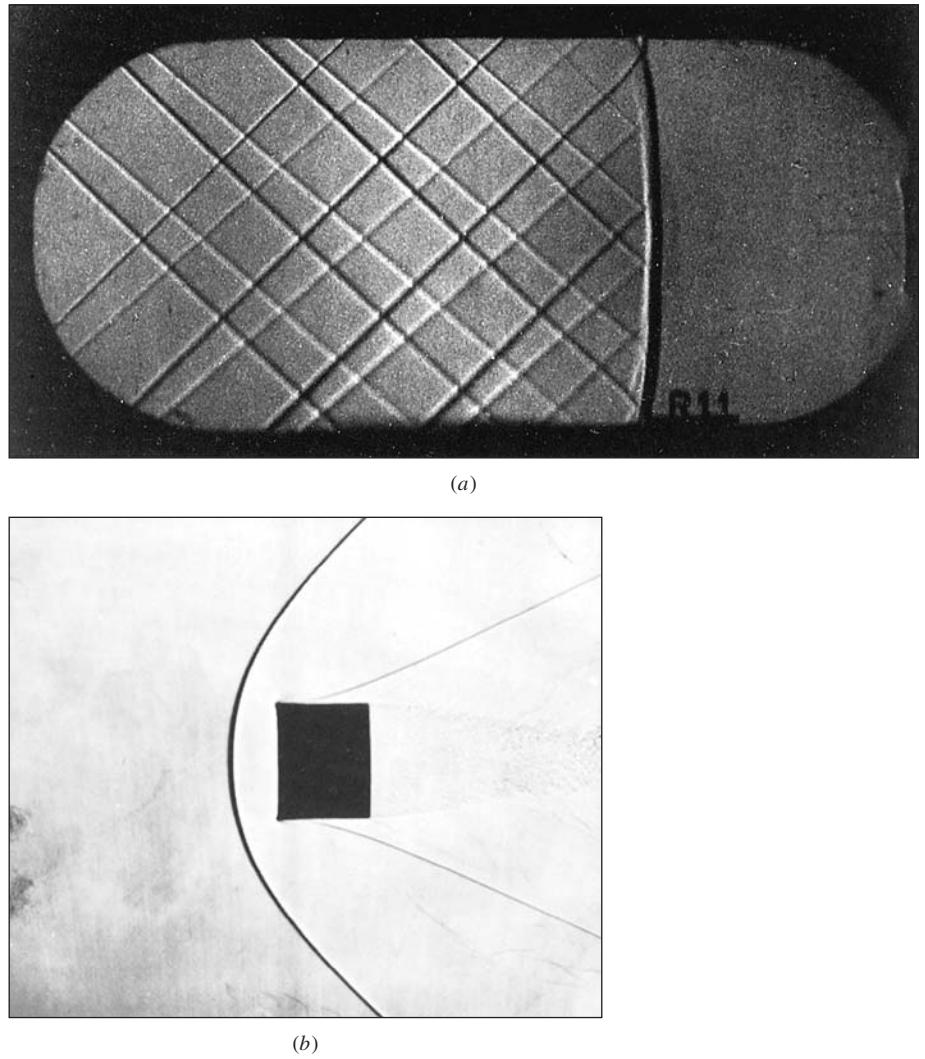

**Fig. 9.10** Normal shocks form in both internal and external flows. (a) Normal shock in a duct; note the Mach wave pattern to the left (upstream), indicating supersonic flow. (*Courtesy of U.S. Air Force Arnold Engineering Development Center.*) (b) Supersonic flow past a blunt body creates a normal shock at the nose; the apparent shock thickness and body-corner curvature are optical distortions. (*Courtesy of U.S. Army Ballistic Research Laboratory, Aberdeen Proving Ground.*)

be summarized as follows:

1. The upstream flow is supersonic, and the downstream flow is subsonic.
2. For perfect gases (and also for real fluids except under bizarre thermodynamic conditions) rarefaction shocks are impossible, and only a compression shock can exist.
3. The entropy increases across a shock with consequent decreases in stagnation pressure and stagnation density and an increase in the effective sonic throat area.
4. Weak shock waves are very nearly isentropic.

Normal shock waves form in ducts under transient conditions, such as in shock tubes, and in steady flow for certain ranges of the downstream pressure. Figure 9.10a shows a normal shock in a supersonic nozzle. Flow is from left to right. The oblique wave pattern to the left is formed by roughness elements on the nozzle walls and indicates

that the upstream flow is supersonic. Note the absence of these Mach waves (see Sec. 9.10) in the subsonic flow downstream.

Normal shock waves occur not only in supersonic duct flows but also in a variety of supersonic external flows. An example is the supersonic flow past a blunt body shown in Fig. 9.10b. The bow shock is curved, with a portion in front of the body that is essentially normal to the oncoming flow. This normal portion of the bow shock satisfies the property change conditions just as outlined in this section. The flow inside the shock near the body nose is thus subsonic and at relatively high temperature  $T_2 > T_1$ , and convective heat transfer is especially high in this region.


Each nonnormal portion of the bow shock in Fig. 9.10b satisfies the oblique shock relations to be outlined in Sec. 9.9. Note also the oblique recompression shock on the sides of the body. What has happened is that the subsonic nose flow has accelerated around the corners back to supersonic flow at low pressure, which must then pass through the second shock to match the higher downstream pressure conditions.

Note the fine-grained turbulent wake structure in the rear of the body in Fig. 9.10b. The turbulent boundary layer along the sides of the body is also clearly visible.

The analysis of a complex multidimensional supersonic flow such as in Fig. 9.10 is beyond the scope of this book. For further information see, e.g., Ref. 9, Chap. 9, or Ref. 5, Chap. 16.

## Moving Normal Shocks

The preceding analysis of the fixed shock applies equally well to the moving shock if we reverse the transformation used in Fig. 9.1. To make the upstream conditions simulate a still fluid, we move the shock of Fig. 9.8 to the left at speed  $V_1$ ; that is, we fix our coordinates to a control volume moving with the shock. The downstream flow then appears to move to the left at a slower speed  $V_1 - V_2$  following the shock. The thermodynamic properties are not changed by this transformation, so that all our Eqs. (9.50) to (9.59) are still valid.

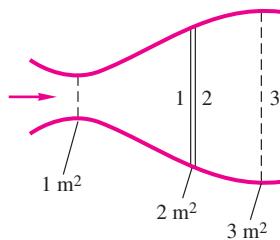

E9.6

### EXAMPLE 9.6

Air flows from a reservoir where  $p = 300 \text{ kPa}$  and  $T = 500 \text{ K}$  through a throat to section 1 in Fig. E9.6, where there is a normal shock wave. Compute (a)  $p_1$ , (b)  $p_2$ , (c)  $p_{02}$ , (d)  $A_2^*$ , (e)  $p_{03}$ , (f)  $A_3^*$ , (g)  $p_3$ , and (h)  $T_{03}$ .

### Solution

- **System sketch:** This is shown in Fig. E9.6. Between sections 1 and 2 is a normal shock.
- **Assumptions:** Isentropic flow before and after the shock. Lower  $p_0$  and  $\rho_0$  after the shock.
- **Approach:** After first noting that the throat is *sonic*, work your way from 1 to 2 to 3.
- **Property values:** For air,  $R = 287 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ ,  $k = 1.40$ , and  $c_p = 1005 \text{ m}^2/(\text{s}^2 \cdot \text{K})$ . The inlet stagnation pressure of 300 kPa is constant up to point 1.
- **Solution step (a):** A shock wave cannot exist unless  $\text{Ma}_1$  is supersonic. Therefore the throat is *sonic* and choked:  $A_{\text{throat}} = A_1^* = 1 \text{ m}^2$ . The area ratio gives  $\text{Ma}_1$  from Eq. (9.45) for  $k = 1.4$ :

$$\frac{A_1}{A_1^*} = \frac{2 \text{ m}^2}{1 \text{ m}^2} = 2.0 = \frac{1}{\text{Ma}_1} \frac{(1 + 0.2 \text{ Ma}_1^2)^3}{1.728} \quad \text{solve for} \quad \text{Ma}_1 = 2.1972$$

Such four-decimal-place accuracy might require iteration or the use of EES. Linear interpolation in Table B.1 would give  $\text{Ma}_1 \approx 2.194$ , quite good also. The pressure at section 1 then follows from the isentropic relation, Eq. (9.28):

$$p_1 = \frac{p_{01}}{(1 + 0.2\text{Ma}_1^2)^{3.5}} = \frac{300 \text{ kPa}}{[1 + 0.2(2.194)^2]^{3.5}} = 28.2 \text{ kPa} \quad \text{Ans. (a)}$$

- *Steps (b, c, d):* The pressure  $p_2$  is found from the normal shock Eq. (9.55) or Table B.2:

$$p_2 = \frac{p_1}{k+1} [2k\text{Ma}_1^2 - (k-1)] = \frac{28.2 \text{ kPa}}{(1.4+1)} [2(1.4)(2.194)^2 - (1.4-1)] = 154 \text{ kPa} \quad \text{Ans. (b)}$$

Similarly, for  $\text{Ma}_1 \approx 2.20$ , Table B.2 gives  $p_{02}/p_{01} \approx 0.628$  (EES gives 0.6294) and  $A_2^*/A_1^* \approx 1.592$  (EES gives 1.5888). Thus, to good accuracy,

$$p_{02} \approx 0.628p_{01} = 0.628(300 \text{ kPa}) \approx 188 \text{ kPa} \quad \text{Ans. (c)}$$

$$A_2^* = 1.59A_1^* = 1.59(1.0 \text{ m}^2) \approx 1.59 \text{ m}^2 \quad \text{Ans. (d)}$$

- *Comment:* To calculate  $A_2^*$  directly, without Table B.2, you would need to pause and calculate  $\text{Ma}_2 \approx 0.547$  from Eq. (9.57), since Eq. (9.59) involves both  $\text{Ma}_1$  and  $\text{Ma}_2$ .
- *Step (e, f):* The flow from 2 to 3 is isentropic (but at higher entropy than upstream of the shock); therefore

$$p_{03} = p_{02} \approx 188 \text{ kPa} \quad \text{Ans. (e)}$$

$$A_3^* = A_2^* \approx 1.59 \text{ m}^2 \quad \text{Ans. (f)}$$

- *Steps (g, h):* The flow is adiabatic throughout, so the stagnation temperature is constant:

$$T_{03} = T_{02} = T_{01} = 500 \text{ K} \quad \text{Ans. (h)}$$

Next, the area ratio, using the new sonic area, gives the Mach number at section 3:

$$\frac{A_3}{A_3^*} = \frac{3 \text{ m}^2}{1.59 \text{ m}^2} = 1.89 = \frac{1}{\text{Ma}_3} \frac{(1 + 0.2 \text{Ma}_3^2)^3}{1.728} \quad \text{solve for} \quad \text{Ma}_3 \approx 0.33$$


EES would yield  $\text{Ma}_3 = 0.327$ . Finally, with  $p_{02}$  known, Eq. (9.28) yields  $p_3$ :

$$p_3 = \frac{p_{02}}{(1 + 0.2 \text{Ma}_3^2)^{3.5}} \approx \frac{188 \text{ kPa}}{[1 + 0.2(0.33)^2]^{3.5}} \approx 174 \text{ kPa} \quad \text{Ans. (g)}$$

- *Comments:* EES would give  $p_3 = 175 \text{ kPa}$ , so we see that Table B.2 is satisfactory for this type of problem. A duct flow with a normal shock wave requires straightforward application of algebraic perfect-gas relations, coupled with a little thought as to which formula is appropriate for the given property.

### EXAMPLE 9.7

An explosion in air,  $k = 1.4$ , creates a spherical shock wave propagating radially into still air at standard conditions. At the instant shown in Fig. E9.7, the pressure just inside the shock is  $200 \text{ lbf/in}^2$  absolute. Estimate (a) the shock speed  $C$  and (b) the air velocity  $V$  just inside the shock.

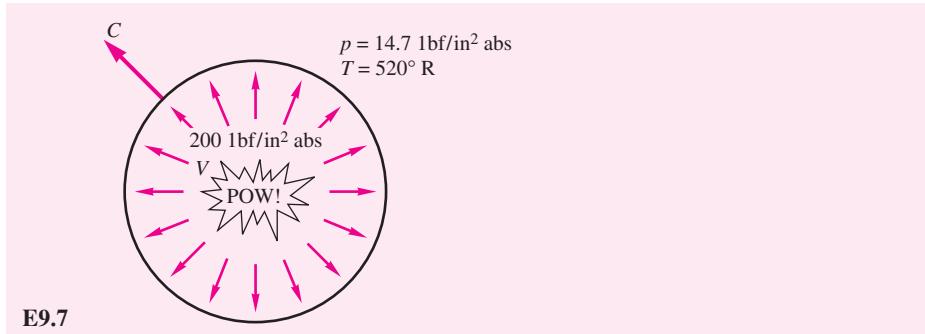**Solution****Part (a)**

In spite of the spherical geometry, the flow across the shock moves normal to the spherical wave front; hence the normal shock relations (9.50) to (9.59) apply. Fixing our control volume to the moving shock, we find that the proper conditions to use in Fig. 9.8 are

$$\begin{aligned} C &= V_1 & p_1 &= 14.7 \text{ lbf/in}^2 \text{ absolute} & T_1 &= 520^\circ \text{R} \\ V &= V_1 - V_2 & p_2 &= 200 \text{ lbf/in}^2 \text{ absolute} \end{aligned}$$

The speed of sound outside the shock is  $a_1 \approx 49T_1^{1/2} = 1117 \text{ ft/s}$ . We can find  $\text{Ma}_1$  from the known pressure ratio across the shock:

$$\frac{p_2}{p_1} = \frac{200 \text{ lbf/in}^2 \text{ absolute}}{14.7 \text{ lbf/in}^2 \text{ absolute}} = 13.61$$

From Eq. (9.55) or Table B.2

$$13.61 = \frac{1}{2.4} (2.8 \text{ Ma}_1^2 - 0.4) \quad \text{or} \quad \text{Ma}_1 = 3.436$$

Then, by definition of the Mach number,

$$C = V_1 = \text{Ma}_1 a_1 = 3.436(1117 \text{ ft/s}) = 3840 \text{ ft/s} \quad \text{Ans. (a)}$$

**Part (b)**

To find  $V_2$ , we need the temperature or sound speed inside the shock. Since  $\text{Ma}_1$  is known, from Eq. (9.58) or Table B.2 for  $\text{Ma}_1 = 3.436$  we compute  $T_2/T_1 = 3.228$ . Then

$$T_2 = 3.228T_1 = 3.228(520^\circ \text{R}) = 1679^\circ \text{R}$$

At such a high temperature we should account for non-perfect-gas effects or at least use the gas tables [16], but we won't. Here just estimate from the perfect-gas energy equation (9.23) that

$$V_2^2 = 2c_p(T_1 - T_2) + V_1^2 = 2(6010)(520 - 1679) + (3840)^2 = 815,000$$

$$\text{or} \quad V_2 \approx 903 \text{ ft/s}$$

Notice that we did this without bothering to compute  $\text{Ma}_2$ , which equals 0.454, or  $a_2 \approx 49T_2^{1/2} = 2000 \text{ ft/s}$ .

Finally, the air velocity behind the shock is

$$V = V_1 - V_2 = 3840 - 903 \approx 2940 \text{ ft/s} \quad \text{Ans. (b)}$$

Thus a powerful explosion creates a brief but intense blast wind as it passes.<sup>3</sup>

## 9.6 Operation of Converging and Diverging Nozzles

### Converging Nozzle

By combining the isentropic flow and normal shock relations plus the concept of sonic throat choking, we can outline the characteristics of converging and diverging nozzles.

First consider the converging nozzle sketched in Fig. 9.11a. There is an upstream reservoir at stagnation pressure  $p_0$ . The flow is induced by lowering the downstream outside, or *back*, pressure  $p_b$  below  $p_0$ , resulting in the sequence of states *a* to *e* shown in Fig. 9.11b and *c*.


For a moderate drop in  $p_b$  to states *a* and *b*, the throat pressure is higher than the critical value  $p^*$  that would make the throat sonic. The flow in the nozzle is subsonic throughout, and the jet exit pressure  $p_e$  equals the back pressure  $p_b$ . The mass flow is predicted by subsonic isentropic theory and is less than the critical value  $\dot{m}_{\max}$ , as shown in Fig. 9.11c.

For condition *c*, the back pressure exactly equals the critical pressure  $p^*$  of the throat. The throat becomes sonic, the jet exit flow is sonic,  $p_e = p_b$ , and the mass flow equals its maximum value from Eqs. (9.46). The flow upstream of the throat is subsonic everywhere and predicted by isentropic theory based on the local area ratio  $A(x)/A^*$  and Table B.1.

Finally, if  $p_b$  is lowered further to conditions *d* or *e* below  $p^*$ , the nozzle cannot respond further because it is choked at its maximum throat mass flow. The throat remains sonic with  $p_e = p^*$ , and the nozzle pressure distribution is the same as in state *c*, as sketched in Fig. 9.11b. The exit jet expands supersonically so that the jet pressure can be reduced from  $p^*$  down to  $p_b$ . The jet structure is complex and multidimensional and is not shown here. Being supersonic, the jet cannot send any signal upstream to influence the choked flow conditions in the nozzle.

If the stagnation plenum chamber is large or supplemented by a compressor, and if the discharge chamber is larger or supplemented by a vacuum pump, the converging nozzle flow will be steady or nearly so. Otherwise the nozzle will be blowing down, with  $p_0$  decreasing and  $p_b$  increasing, and the flow states will be changing from, say, state *e* backward to state *a*. Blowdown calculations are usually made by a quasi-steady analysis based on isentropic steady flow theory for the instantaneous pressures  $p_0(t)$  and  $p_b(t)$ .

<sup>3</sup>This is the principle of the *shock tube wind tunnel*, in which a controlled explosion creates a brief flow at very high Mach number, with data taken by fast-response instruments. See, e.g., Ref. 5.

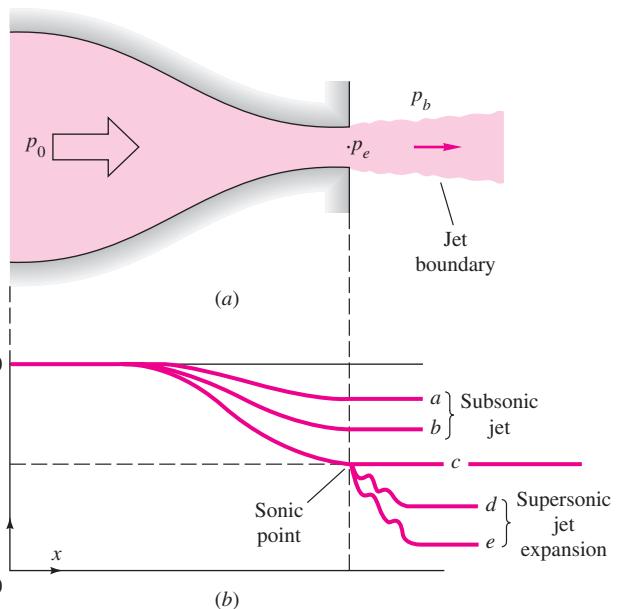

**Fig. 9.11** Operation of a converging nozzle: (a) nozzle geometry showing characteristic pressures; (b) pressure distribution caused by various back pressures; (c) mass flow versus back pressure.

### EXAMPLE 9.8

A converging nozzle has a throat area of  $6 \text{ cm}^2$  and stagnation air conditions of  $120 \text{ kPa}$  and  $400 \text{ K}$ . Compute the exit pressure and mass flow if the back pressure is (a)  $90 \text{ kPa}$  and (b)  $45 \text{ kPa}$ . Assume  $k = 1.4$ .

### Solution

From Eq. (9.32) for  $k = 1.4$  the critical (sonic) throat pressure is

$$\frac{p^*}{p_0} = 0.5283 \quad \text{or} \quad p^* = (0.5283)(120 \text{ kPa}) = 63.4 \text{ kPa}$$

If the back pressure is less than this amount, the nozzle flow is choked.

**Part (a)**

For  $p_b = 90 \text{ kPa} > p^*$ , the flow is subsonic, not choked. The exit pressure is  $p_e = p_b$ . The throat Mach number is found from the isentropic relation (9.35) or Table B.1:

$$\text{Ma}_e^2 = 5 \left[ \left( \frac{p_0}{p_e} \right)^{2/7} - 1 \right] = 5 \left[ \left( \frac{120}{90} \right)^{2/7} - 1 \right] = 0.4283 \quad \text{Ma}_e = 0.654$$

To find the mass flow, we could proceed with a serial attack on  $\text{Ma}_e$ ,  $T_e$ ,  $a_e$ ,  $V_e$ , and  $\rho_e$ , hence to compute  $\rho_e A_e V_e$ . However, since the local pressure is known, this part is ideally suited for the dimensionless mass flow function in Eq. (9.47). With  $p_e/p_0 = 90/120 = 0.75$ , compute

$$\frac{\dot{m} \sqrt{RT_0}}{Ap_0} = \sqrt{\frac{2(1.4)}{0.4} (0.75)^{2/1.4} [1 - (0.75)^{0.4/1.4}]} = 0.6052$$

hence  $\dot{m} = 0.6052 \frac{(0.0006)(120,000)}{\sqrt{287(400)}} = 0.129 \text{ kg/s}$  *Ans. (a)*

for  $p_e = p_b = 90 \text{ kPa}$  *Ans. (a)*

**Part (b)**

For  $p_b = 45 \text{ kPa} < p^*$ , the flow is choked, similar to condition *d* in Fig. 9.11b. The exit pressure is sonic:

$$p_e = p^* = 63.4 \text{ kPa} \quad \text{i} \text{Ans. (b)}$$

The (choked) mass flow is a maximum from Eq. (9.46b):

$$\dot{m} = \dot{m}_{\max} = \frac{0.6847 p_0 A_e}{(RT_0)^{1/2}} = \frac{0.6847 (120,000)(0.0006)}{[287(400)]^{1/2}} = 0.145 \text{ kg/s} \quad \text{i} \text{Ans. (b)}$$

Any back pressure less than 63.4 kPa would cause this same choked mass flow. Note that the 50 percent increase in exit Mach number, from 0.654 to 1.0, has increased the mass flow only 12 percent, from 0.128 to 0.145 kg/s.


**Converging-Diverging Nozzle**

Now consider the converging-diverging nozzle sketched in Fig. 9.12a. If the back pressure  $p_b$  is low enough, there will be supersonic flow in the diverging portion and a variety of shock wave conditions may occur, which are sketched in Fig. 9.12b. Let the back pressure be gradually decreased.

For curves *A* and *B* in Fig. 9.12b the back pressure is not low enough to induce sonic flow in the throat, and the flow in the nozzle is subsonic throughout. The pressure distribution is computed from subsonic isentropic area-change relations, such as in Table B.1. The exit pressure  $p_e = p_b$ , and the jet is subsonic.

For curve *C* the area ratio  $A_e/A_t$  exactly equals the critical ratio  $A_e/A^*$  for a subsonic  $\text{Ma}_e$  in Table B.1. The throat becomes sonic, and the mass flux reaches a maximum in Fig. 9.12c. The remainder of the nozzle flow is subsonic, including the exit jet, and  $p_e = p_b$ .

Now jump for a moment to curve *H*. Here  $p_b$  is such that  $p_b/p_0$  exactly corresponds to the critical area ratio  $A_e/A^*$  for a supersonic  $\text{Ma}_e$  in Table B.1. The diverging flow is entirely supersonic, including the jet flow, and  $p_e = p_b$ . This is called the *design pressure ratio* of the nozzle and is the back pressure suitable for operating a supersonic wind tunnel or an efficient rocket exhaust.

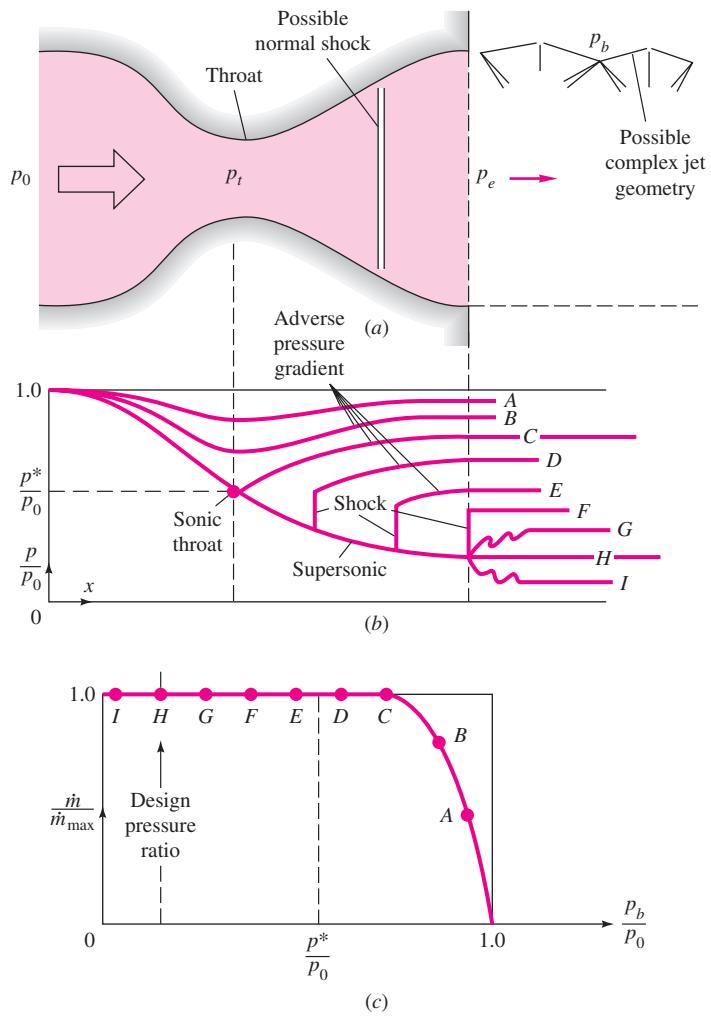

**Fig. 9.12** Operation of a converging-diverging nozzle: (a) nozzle geometry with possible flow configurations; (b) pressure distribution caused by various back pressures; (c) mass flow versus back pressure.

Now back up and suppose that  $p_b$  lies between curves  $C$  and  $H$ , which is impossible according to purely isentropic flow calculations. Then back pressures  $D$  to  $F$  occur in Fig. 9.12b. The throat remains choked at the sonic value, and we can match  $p_e = p_b$  by placing a normal shock at just the right place in the diverging section to cause a *subsonic diffuser* flow back to the back-pressure condition. The mass flow remains at maximum in Fig. 9.12c. At back pressure  $F$  the required normal shock stands in the duct exit. At back pressure  $G$  no single normal shock can do the job, and so the flow compresses outside the exit in a complex series of oblique shocks until it matches  $p_b$ .

Finally, at back pressure  $I$ ,  $p_b$  is lower than the design pressure  $H$ , but the nozzle is choked and cannot respond. The exit flow expands in a complex series of supersonic wave motions until it matches the low back pressure. See, Ref. 7, Sec. 5.4, for further details of these off-design jet flow configurations.

Note that for  $p_b$  less than back pressure  $C$ , there is supersonic flow in the nozzle, and the throat can receive no signal from the exit behavior. The flow remains choked, and the throat has no idea what the exit conditions are.

Note also that the normal shock-patching idea is idealized. Downstream of the shock, the nozzle flow has an adverse pressure gradient, usually leading to wall boundary layer separation. Blockage by the greatly thickened separated layer interacts strongly with the core flow (recall Fig. 6.27) and usually induces a series of weak two-dimensional compression shocks rather than a single one-dimensional normal shock (see, Ref. 9, pp. 292 and 293, for further details).

### EXAMPLE 9.9

A converging-diverging nozzle (Fig. 9.12a) has a throat area of  $0.002 \text{ m}^2$  and an exit area of  $0.008 \text{ m}^2$ . Air stagnation conditions are  $p_0 = 1000 \text{ kPa}$  and  $T_0 = 500 \text{ K}$ . Compute the exit pressure and mass flow for (a) design condition and the exit pressure and mass flow if (b)  $p_b \approx 300 \text{ kPa}$  and (c)  $p_b \approx 900 \text{ kPa}$ . Assume  $k = 1.4$ .

#### Solution

##### Part (a)

The design condition corresponds to supersonic isentropic flow at the given area ratio  $A_e/A_t = 0.008/0.002 = 4.0$ . We can find the design Mach number by iteration of the area ratio formula (9.45), or using EES:

$$\text{Ma}_{e,\text{design}} \approx 2.95$$

The design pressure ratio follows from Eq. (9.34):

$$\frac{p_0}{p_e} = [1 + 0.2(2.95)^2]^{3.5} = 34.1$$

$$\text{or} \quad p_{e,\text{design}} = \frac{1000 \text{ kPa}}{34.1} = 29.3 \text{ kPa} \quad \text{Ans. (a)}$$

Since the throat is clearly sonic at design conditions, Eq. (9.46b) applies:

$$\dot{m}_{\text{design}} = \dot{m}_{\text{max}} = \frac{0.6847 p_0 A_t}{(RT_0)^{1/2}} = \frac{0.6847(10^6 \text{ Pa})(0.002 \text{ m}^2)}{[287(500)]^{1/2}} = 3.61 \text{ kg/s} \quad \text{Ans. (a)}$$

##### Part (b)

For  $p_b = 300 \text{ kPa}$  we are definitely far below the subsonic isentropic condition  $C$  in Fig. 9.12b, but we may even be below condition  $F$  with a normal shock in the exit—that is, in condition  $G$ , where oblique shocks occur outside the exit plane. If it is condition  $G$ , then  $p_e = p_{e,\text{design}} = 29.3 \text{ kPa}$  because no shock has yet occurred. To find out, compute condition  $F$  by assuming an exit normal shock with  $\text{Ma}_1 = 2.95$ —that is, the design Mach number just upstream of the shock. From Eq. (9.55)

$$\frac{p_2}{p_1} = \frac{1}{2.4} [2.8(2.95)^2 - 0.4] = 9.99$$

$$\text{or} \quad p_2 = 9.99 p_1 = 9.99 p_{e,\text{design}} = 293 \text{ kPa}$$

Since this is less than the given  $p_b = 300 \text{ kPa}$ , there is a normal shock just upstream of the exit plane (condition  $E$ ). The exit flow is subsonic and equals the back pressure:

$$p_e = p_b = 300 \text{ kPa} \quad \text{Ans. (b)}$$

Also  $\dot{m} = \dot{m}_{\max} = 3.61 \text{ kg/s}$  Ans. (b)

The throat is still sonic and choked at its maximum mass flow.

### Part (c)

Finally, for  $p_b = 900 \text{ kPa}$ , which is up near condition  $C$ , we compute  $\text{Ma}_e$  and  $p_e$  for condition  $C$  as a comparison. Again  $A_e/A_t = 4.0$  for this condition, with a subsonic  $\text{Ma}_e$  estimated from Eq. (9.48):

$$\text{Ma}_e(C) \approx 0.147 \quad (\text{exact} = 0.14655)$$

Then the isentropic exit pressure ratio for this condition is

$$\frac{p_0}{p_e} = [1 + 0.2(0.147)^2]^{3.5} = 1.0152$$

or  $p_e = \frac{1000}{1.0152} = 985 \text{ kPa}$

The given back pressure of 900 kPa is less than this value, corresponding roughly to condition  $D$  in Fig. 9.12b. Thus for this case there is a normal shock just downstream of the throat, and the throat is choked:

$$p_e = p_b = 900 \text{ kPa} \quad \dot{m} = \dot{m}_{\max} = 3.61 \text{ kg/s} \quad \text{Ans. (c)}$$

For this large exit area ratio, the exit pressure would have to be larger than 985 kPa to cause a subsonic flow in the throat and a mass flow less than maximum.

## 9.7 Compressible Duct Flow with Friction<sup>4</sup>


Section 9.4 showed the effect of area change on a compressible flow while neglecting friction and heat transfer. We could now add friction and heat transfer to the area change and consider coupled effects, which is done in advanced texts [for example, 5, Chap. 8]. Instead, as an elementary introduction, this section treats only the effect of friction, neglecting area change and heat transfer. The basic assumptions are

1. Steady one-dimensional adiabatic flow.
2. Perfect gas with constant specific heats.
3. Constant-area straight duct.
4. Negligible shaft work and potential energy changes.
5. Wall shear stress correlated by a Darcy friction factor.

In effect, we are studying a Moody-type pipe friction problem but with large changes in kinetic energy, enthalpy, and pressure in the flow.

This type of duct flow—constant area, constant stagnation enthalpy, constant mass flow, but variable momentum (due to friction)—is often termed *Fanno flow*, after Gino

<sup>4</sup>This section may be omitted without loss of continuity.

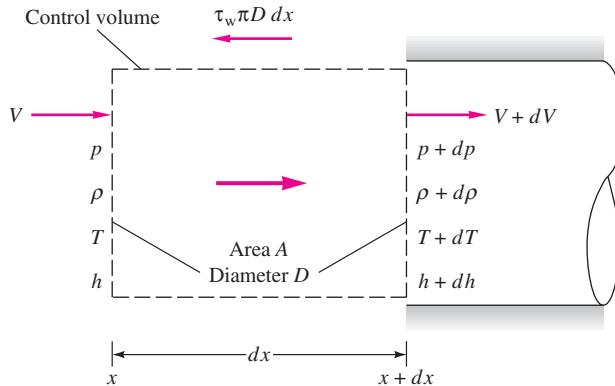

**Fig. 9.13** Elemental control volume for flow in a constant-area duct with friction.

Fanno, an Italian engineer born in 1882, who first studied this flow. For a given mass flow and stagnation enthalpy, a plot of enthalpy versus entropy for all possible flow states, subsonic or supersonic, is called a *Fanno line*. See Probs. P9.94 and P9.111 for examples of a Fanno line.

Consider the elemental duct control volume of area  $A$  and length  $dx$  in Fig. 9.13. The area is constant, but other flow properties ( $p, \rho, T, h, V$ ) may vary with  $x$ . Application of the three conservation laws to this control volume gives three differential equations:

$$\text{Continuity: } \rho V = \frac{\dot{m}}{A} = G = \text{const}$$

$$\text{or } \frac{dp}{\rho} + \frac{dV}{V} = 0 \quad (9.60a)$$

$$x \text{ momentum: } pA - (p + dp)A - \tau_w \pi D dx = \dot{m}(V + dV - V)$$

$$\text{or } dp + \frac{4\tau_w dx}{D} + \rho V dV = 0 \quad (9.60b)$$

$$\text{Energy: } h + \frac{1}{2}V^2 = h_0 = c_p T_0 = c_p T + \frac{1}{2}V^2$$

$$\text{or } c_p dT + V dV = 0 \quad (9.60c)$$

Since these three equations have five unknowns— $p, \rho, T, V$ , and  $\tau_w$ —we need two additional relations. One is the perfect-gas law:

$$p = \rho RT \quad \text{or} \quad \frac{dp}{p} = \frac{dp}{\rho} + \frac{dT}{T} \quad (9.61)$$

To eliminate  $\tau_w$  as an unknown, it is assumed that wall shear is correlated by a local Darcy friction factor  $f$

$$\tau_w = \frac{1}{8} f \rho V^2 = \frac{1}{8} f k p \text{ Ma}^2 \quad (9.62)$$

where the last form follows from the perfect-gas speed-of-sound expression  $a^2 = kp/\rho$ . In practice,  $f$  can be related to the local Reynolds number and wall roughness from, say, the Moody chart, Fig. 6.13.

Equations (9.60) and (9.61) are first-order differential equations and can be integrated, by using friction factor data, from any inlet section 1, where  $p_1$ ,  $T_1$ ,  $V_1$ , and so on are known, to determine  $p(x)$ ,  $T(x)$ , and the like along the duct. It is practically impossible to eliminate all but one variable to give, say, a single differential equation for  $p(x)$ , but all equations can be written in terms of the Mach number  $\text{Ma}(x)$  and the friction factor, by using this definition of Mach number:

$$V^2 = \text{Ma}^2 kRT$$

or

$$\frac{2 dV}{V} = \frac{2 d\text{Ma}}{\text{Ma}} + \frac{dT}{T} \quad (9.63)$$

### Adiabatic Flow

By eliminating variables between Eqs. (9.60) to (9.63), we obtain the working relations

$$\frac{dp}{p} = -k \text{Ma}^2 \frac{1 + (k - 1)\text{Ma}^2}{2(1 - \text{Ma}^2)} f \frac{dx}{D} \quad (9.64a)$$

$$\frac{dp}{\rho} = -\frac{k \text{Ma}^2}{2(1 - \text{Ma}^2)} f \frac{dx}{D} = -\frac{dV}{V} \quad (9.64b)$$

$$\frac{dp_0}{p_0} = \frac{dp_0}{\rho_0} = -\frac{1}{2} k \text{Ma}^2 f \frac{dx}{D} \quad (9.64c)$$

$$\frac{dT}{T} = -\frac{k(k - 1) \text{Ma}^4}{2(1 - \text{Ma}^2)} f \frac{dx}{D} \quad (9.64d)$$


$$\frac{d\text{Ma}^2}{\text{Ma}^2} = k \text{Ma}^2 \frac{1 + \frac{1}{2}(k - 1) \text{Ma}^2}{1 - \text{Ma}^2} f \frac{dx}{D} \quad (9.64e)$$

All these except  $dp_0/p_0$  have the factor  $1 - \text{Ma}^2$  in the denominator, so that, like the area change formulas in Fig. 9.5, subsonic and supersonic flow have opposite effects:

Property	Subsonic	Supersonic
$p$	Decreases	Increases
$\rho$	Decreases	Increases
$V$	Increases	Decreases
$p_0, \rho_0$	Decreases	Decreases
$T$	Decreases	Increases
$\text{Ma}$	Increases	Decreases
Entropy	Increases	Increases

We have added to this list that entropy must increase along the duct for either subsonic or supersonic flow as a consequence of the second law for adiabatic flow. For the same reason, stagnation pressure and density must both decrease.

The key parameter in this discussion is the Mach number. Whether the inlet flow is subsonic or supersonic, the duct Mach number always tends downstream toward  $\text{Ma} = 1$  because this is the path along which the entropy increases. If the pressure and density are computed from Eqs. (9.64a) and (9.64b) and the entropy from Eq. (9.53), the result can be plotted in Fig. 9.14 versus Mach number for  $k = 1.4$ .

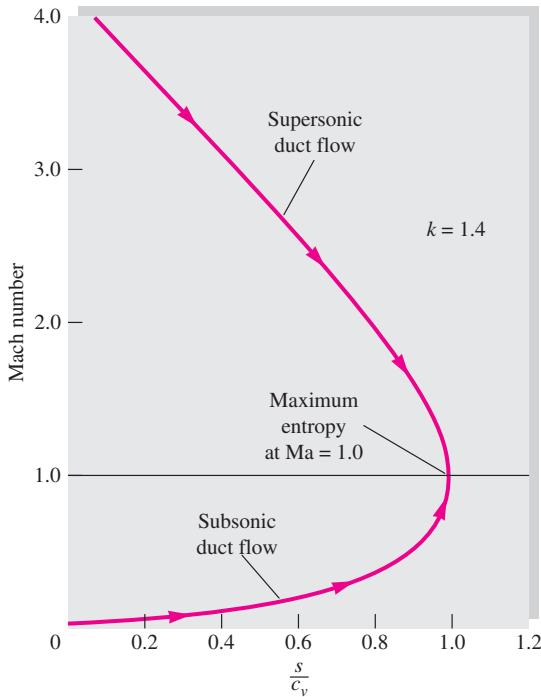

**Fig. 9.14** Adiabatic frictional flow in a constant-area duct always approaches  $\text{Ma} = 1$  to satisfy the second law of thermodynamics. The computed curve is independent of the value of the friction factor.

The maximum entropy occurs at  $\text{Ma} = 1$ , so that the second law requires that the duct flow properties continually approach the sonic point. Since  $p_0$  and  $\rho_0$  continually decrease along the duct due to the frictional (nonisentropic) losses, they are not useful as reference properties. Instead, the sonic properties  $p^*$ ,  $\rho^*$ ,  $T^*$ ,  $p_0^*$ , and  $\rho_0^*$  are the appropriate constant reference quantities in adiabatic duct flow. The theory then computes the ratios  $p/p^*$ ,  $T/T^*$ , and so forth as a function of local Mach number and the integrated friction effect.

To derive working formulas, we first attack Eq. (9.64e), which relates the Mach number to friction. Separate the variables and integrate:

$$\int_0^{L^*} f \frac{dx}{D} = \int_{\text{Ma}}^{1.0} \frac{1 - \text{Ma}^2}{k \text{Ma}^4 [1 + \frac{1}{2}(k-1)\text{Ma}^2]} d\text{Ma}^2 \quad (9.65)$$

The upper limit is the sonic point, whether or not it is actually reached in the duct flow. The lower limit is arbitrarily placed at the position  $x = 0$ , where the Mach number is  $\text{Ma}$ . The result of the integration is

$$\frac{\bar{f}L^*}{D} = \frac{1 - \text{Ma}^2}{k \text{Ma}^2} + \frac{k+1}{2k} \ln \frac{(k+1)\text{Ma}^2}{2 + (k-1)\text{Ma}^2} \quad (9.66)$$

where  $\bar{f}$  is the average friction factor between 0 and  $L^*$ . In practice, an average  $f$  is always assumed, and no attempt is made to account for the slight changes in Reynolds number along the duct. For noncircular ducts,  $D$  is replaced by the hydraulic diameter  $D_h = (4 \times \text{area})/\text{perimeter}$  as in Eq. 6.59.

Equation (9.66) is tabulated versus Mach number in Table B.3. The length  $L^*$  is the length of duct required to develop a duct flow from Mach number  $Ma$  to the sonic point. Many problems involve short ducts that never become sonic, for which the solution uses the differences in the tabulated “maximum,” or sonic, length. For example, the length  $\Delta L$  required to develop from  $Ma_1$  to  $Ma_2$  is given by

$$\bar{f} \frac{\Delta L}{D} = \left( \frac{\bar{f}L^*}{D} \right)_1 - \left( \frac{\bar{f}L^*}{D} \right)_2 \quad (9.67)$$

This avoids the need for separate tabulations for short ducts.

It is recommended that the friction factor  $\bar{f}$  be estimated from the Moody chart (Fig. 6.13) for the average Reynolds number and wall roughness ratio of the duct. Available data [23] on duct friction for compressible flow show good agreement with the Moody chart for subsonic flow, but the measured data in supersonic duct flow are up to 50 percent less than the equivalent Moody friction factor.

### EXAMPLE 9.10

Air flows subsonically in an adiabatic 2-cm-diameter duct. The average friction factor is 0.024. What length of duct is necessary to accelerate the flow from  $Ma_1 = 0.1$  to  $Ma_2 = 0.5$ ? What additional length will accelerate it to  $Ma_3 = 1.0$ ? Assume  $k = 1.4$ .

#### Solution

Equation (9.67) applies, with values of  $\bar{f}L^*/D$  computed from Eq. (9.66) or read from Table B.3:

$$\begin{aligned} \bar{f} \frac{\Delta L}{D} &= \frac{0.024 \Delta L}{0.02 \text{ m}} = \left( \frac{\bar{f}L^*}{D} \right)_{Ma=0.1} - \left( \frac{\bar{f}L^*}{D} \right)_{Ma=0.5} \\ &= 66.9216 - 1.0691 = 65.8525 \end{aligned}$$

$$\text{Thus } \Delta L = \frac{65.8525(0.02 \text{ m})}{0.024} = 55 \text{ m} \quad \text{Ans. (a)}$$

The additional length  $\Delta L'$  to go from  $Ma = 0.5$  to  $Ma = 1.0$  is taken directly from Table B.2:

$$\begin{aligned} f \frac{\Delta L'}{D} &= \left( \frac{fL^*}{D} \right)_{Ma=0.5} = 1.0691 \\ \text{or } \Delta L' &= L^*_{Ma=0.5} = \frac{1.0691(0.02 \text{ m})}{0.024} = 0.9 \text{ m} \quad \text{Ans. (b)} \end{aligned}$$

This is typical of these calculations: It takes 55 m to accelerate up to  $Ma = 0.5$  and then only 0.9 m more to get all the way up to the sonic point.

Formulas for other flow properties along the duct can be derived from Eqs. (9.64). Equation (9.64e) can be used to eliminate  $f dx/D$  from each of the other relations, giving, for example,  $dp/p$  as a function only of  $Ma$  and  $d Ma^2/Ma^2$ . For convenience in tabulating the results, each expression is then integrated all the way from  $(p, Ma)$  to

the sonic point ( $p^*$ , 1.0). The integrated results are

$$\frac{p}{p^*} = \frac{1}{\text{Ma}} \left[ \frac{k+1}{2 + (k-1)\text{Ma}^2} \right]^{1/2} \quad (9.68a)$$

$$\frac{\rho}{\rho^*} = \frac{V^*}{V} = \frac{1}{\text{Ma}} \left[ \frac{2 + (k-1)\text{Ma}^2}{k+1} \right]^{1/2} \quad (9.68b)$$

$$\frac{T}{T^*} = \frac{a^2}{a^{*2}} = \frac{k+1}{2 + (k-1)\text{Ma}^2} \quad (9.68c)$$

$$\frac{p_0}{p_0^*} = \frac{\rho_0}{\rho_0^*} = \frac{1}{\text{Ma}} \left[ \frac{2 + (k-1)\text{Ma}^2}{k+1} \right]^{(1/2)(k+1)/(k-1)} \quad (9.68d)$$

All these ratios are also tabulated in Table B.3. For finding changes between points  $\text{Ma}_1$  and  $\text{Ma}_2$  that are not sonic, products of these ratios are used. For example,

$$\frac{p_2}{p_1} = \frac{p_2}{p^*} \frac{p^*}{p_1} \quad (9.69)$$

since  $p^*$  is a constant reference value for the flow.

### EXAMPLE 9.11

For the duct flow of Example 9.10 assume that, at  $\text{Ma}_1 = 0.1$ , we have  $p_1 = 600 \text{ kPa}$  and  $T_1 = 450 \text{ K}$ . At section 2 farther downstream,  $\text{Ma}_2 = 0.5$ . Compute (a)  $p_2$ , (b)  $T_2$ , (c)  $V_2$ , and (d)  $p_{02}$ .

#### Solution

As preliminary information we can compute  $V_1$  and  $p_{01}$  from the given data:

$$V_1 = \text{Ma}_1 a_1 = 0.1[(1.4)(287)(450)]^{1/2} = 0.1(425 \text{ m/s}) = 42.5 \text{ m/s}$$

$$p_{01} = p_1(1 + 0.2 \text{ Ma}_1^2)^{3.5} = (600 \text{ kPa})[1 + 0.2(0.1)^2]^{3.5} = 604 \text{ kPa}$$

Now enter Table B.3 or Eqs. (9.68) to find the following property ratios:

Section	Ma	$p/p^*$	$T/T^*$	$V/V^*$	$p_0/p_0^*$
1	0.1	10.9435	1.1976	0.1094	5.8218
2	0.5	2.1381	1.1429	0.5345	1.3399

Use these ratios to compute all properties downstream:

$$p_2 = p_1 \frac{p_2/p^*}{p_1/p^*} = (600 \text{ kPa}) \frac{2.1381}{10.9435} = 117 \text{ kPa} \quad \text{Ans. (a)}$$

$$T_2 = T_1 \frac{T_2/T^*}{T_1/T^*} = (450 \text{ K}) \frac{1.1429}{1.1976} = 429 \text{ K} \quad \text{Ans. (b)}$$

$$V_2 = V_1 \frac{V_2/V^*}{V_1/V^*} = (42.5 \text{ m/s}) \frac{0.5345}{0.1094} = 208 \frac{\text{m}}{\text{s}} \quad \text{Ans. (c)}$$

$$p_{02} = p_{01} \frac{p_{02}/p_0^*}{p_{01}/p_0^*} = (604 \text{ kPa}) \frac{1.3399}{5.8218} = 139 \text{ kPa} \quad \text{Ans. (d)}$$

Note the 77 percent reduction in stagnation pressure due to friction. The formulas are seductive, so check your work by other means. For example, check  $p_{02} = p_2(1 + 0.2 \text{ Ma}_2^2)^{3.5}$ .

*Software comment:* EES is somewhat laborious for this type of problem because the basic pipe friction relations, Eqs. (9.68), have to be typed in twice, once for section 1 and once for section 2. Also,  $V_1$ ,  $a_1$ , and  $p_{01}$  have to be computed as just shown. The beauty thereafter is that Mach number is no longer dominant. One could specify  $p_2$  or  $T_2$  or  $V_2$  or  $p_{02}$  and EES would immediately give the full solution at section 2.


### Choking Due to Friction

The theory here predicts that for adiabatic frictional flow in a constant-area duct, no matter what the inlet Mach number  $\text{Ma}_1$  is, the flow downstream tends toward the sonic point. There is a certain duct length  $L^*(\text{Ma}_1)$  for which the exit Mach number will be exactly unity. The duct is then choked.

But what if the actual length  $L$  is greater than the predicted “maximum” length  $L^*$ ? Then the flow conditions must change, and there are two classifications.

**Subsonic Inlet.** If  $L > L^*(\text{Ma}_1)$ , the flow slows down until an inlet Mach number  $\text{Ma}_2$  is reached such that  $L = L^*(\text{Ma}_2)$ . The exit flow is sonic, and the mass flow has been reduced by *frictional choking*. Further increases in duct length will continue to decrease the inlet Ma and mass flow.

**Supersonic Inlet.** From Table B.3 we see that friction has a very large effect on supersonic duct flow. Even an infinite inlet Mach number will be reduced to sonic conditions in only 41 diameters for  $\bar{f} = 0.02$ . Some typical numerical values are

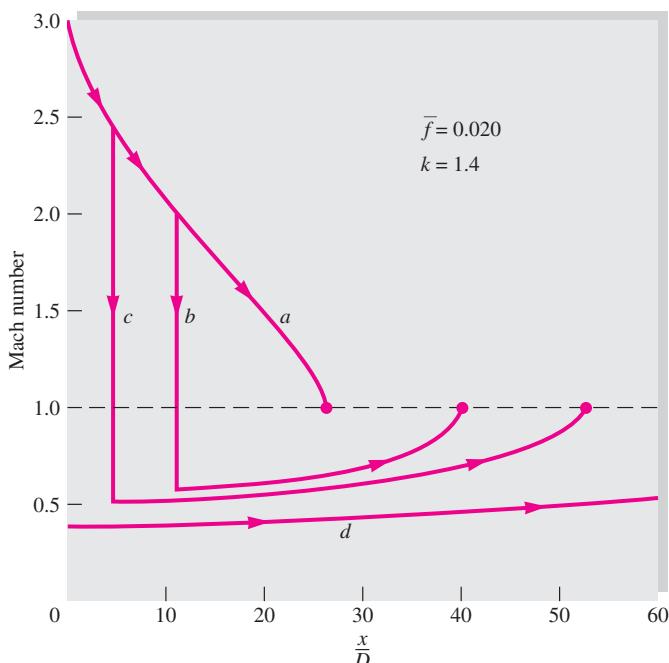

**Fig. 9.15** Behavior of duct flow with a nominal supersonic inlet condition  $\text{Ma} = 3.0$ : (a)  $L/D \leq 26$ , flow is supersonic throughout duct; (b)  $L/D = 40 > L^*/D$ , normal shock at  $\text{Ma} = 2.0$  with subsonic flow then accelerating to sonic exit point; (c)  $L/D = 53$ , shock must now occur at  $\text{Ma} = 2.5$ ; (d)  $L/D > 63$ , flow must be entirely subsonic and choked at exit.

shown in Fig. 9.15, assuming an inlet  $\text{Ma} = 3.0$  and  $\bar{f} = 0.02$ . For this condition  $L^* = 26$  diameters. If  $L$  is increased beyond  $26D$ , the flow will not choke but a normal shock will form at just the right place for the subsequent subsonic frictional flow to become sonic exactly at the exit. Figure 9.15 shows two examples, for  $L/D = 40$  and 53. As the length increases, the required normal shock moves upstream until, for Fig. 9.15, the shock is at the inlet for  $L/D = 63$ . Further increase in  $L$  causes the shock to move upstream of the inlet into the supersonic nozzle feeding the duct. Yet the mass flow is still the same as for the very short duct, because presumably the feed nozzle still has a sonic throat. Eventually, a very long duct will cause the feed-nozzle throat to become choked, thus reducing the duct mass flow. Thus supersonic friction changes the flow pattern if  $L > L^*$  but does not choke the flow until  $L$  is much larger than  $L^*$ .

### EXAMPLE 9.12

Air enters a 3-cm-diameter duct at  $p_0 = 200 \text{ kPa}$ ,  $T_0 = 500 \text{ K}$ , and  $V_1 = 100 \text{ m/s}$ . The friction factor is 0.02. Compute (a) the maximum duct length for these conditions, (b) the mass flow if the duct length is 15 m, and (c) the reduced mass flow if  $L = 30 \text{ m}$ .

#### Solution

##### Part (a)

First compute

$$T_1 = T_0 - \frac{\frac{1}{2}V_1^2}{c_p} = 500 - \frac{\frac{1}{2}(100 \text{ m/s})^2}{1005 \text{ m}^2/\text{s}^2 \cdot \text{K}} = 500 - 5 = 495 \text{ K}$$

$$a_1 = (kRT_1)^{1/2} \approx 20(495)^{1/2} = 445 \text{ m/s}$$

Thus

$$\text{Ma}_1 = \frac{V_1}{a_1} = \frac{100}{445} = 0.225$$

For this  $\text{Ma}_1$ , from Eq. (9.66) or interpolation in Table B.3,

$$\frac{\bar{f}L^*}{D} = 11.0$$

The maximum duct length possible for these inlet conditions is

$$L^* = \frac{(\bar{f}L^*/D)D}{\bar{f}} = \frac{11.0(0.03 \text{ m})}{0.02} = 16.5 \text{ m} \quad \text{Ans. (a)}$$

##### Part (b)

The given  $L = 15 \text{ m}$  is less than  $L^*$ , and so the duct is not choked and the mass flow follows from the inlet conditions:

$$\rho_{01} = \frac{p_{01}}{RT_0} = \frac{200,000 \text{ Pa}}{287(500 \text{ K})} = 1.394 \text{ kg/m}^3$$

$$\rho_1 = \frac{\rho_{01}}{[1 + 0.2(0.225)]^{2.5}} = \frac{1.394}{1.0255} = 1.359 \text{ kg/m}^3$$

whence

$$\dot{m} = \rho_1 A V_1 = (1.359 \text{ kg/m}^3) \left[ \frac{\pi}{4} (0.03 \text{ m})^2 \right] (100 \text{ m/s})$$

$$= 0.0961 \text{ kg/s}$$

$$\text{Ans. (b)}$$

**Part (c)**

Since  $L = 30 \text{ m}$  is greater than  $L^*$ , the duct must choke back until  $L = L^*$ , corresponding to a lower inlet  $\text{Ma}_1$ :

$$L^* = L = 30 \text{ m}$$

$$\frac{\bar{f}L^*}{D} = \frac{0.02(30 \text{ m})}{0.03 \text{ m}} = 20.0$$

**EES**

It is difficult to interpolate for  $fL/D = 20$  in Table B.3 and impossible to invert Eq. (9.66) for the Mach number without laborious iteration. But it is a breeze for EES to solve Eq. (9.66) for the Mach number, using the following three statements:

$$k = 1.4$$

$$fLD = 20$$

$$fLD = (1 - \text{Ma}^2)/k/\text{Ma}^2 + (k + 1)/2/k * \ln((k + 1)*\text{Ma}^2/(2 + (k - 1)*\text{Ma}^2))$$

Simply specify  $\text{Ma} < 1$  in the Variable Information menu, and EES reports

$$\text{Ma}_{\text{choked}} = 0.174 \quad (23 \text{ percent less})$$

$$T_{1,\text{new}} = \frac{T_0}{1 + 0.2(0.174)^2} = 497 \text{ K}$$

$$a_{1,\text{new}} \approx 20(497 \text{ K})^{1/2} = 446 \text{ m/s}$$

$$V_{1,\text{new}} = \text{Ma}_1 a_1 = 0.174(446) = 77.6 \text{ m/s}$$

$$\rho_{1,\text{new}} = \frac{\rho_{01}}{[1 + 0.2(0.174)^2]^{2.5}} = 1.373 \text{ kg/m}^3$$

$$\dot{m}_{\text{new}} = \rho_1 A V_1 = 1.373 \left[ \frac{\pi}{4} (0.03)^2 \right] (77.6)$$

$$= 0.0753 \text{ kg/s} \quad (22 \text{ percent less})$$

*Ans. (c)*

### Minor Losses in Compressible Flow

For incompressible pipe flow, as in Eq. (6.78), the loss coefficient  $K$  is the ratio of pressure head loss ( $\Delta p/\rho g$ ) to the velocity head ( $V^2/2g$ ) in the pipe. This is inappropriate in compressible pipe flow, where  $\rho$  and  $V$  are not constant. Benedict [24] suggests that the static pressure loss ( $p_1 - p_2$ ) be related to downstream conditions and a *static loss coefficient*  $K_s$ :

$$K_s = \frac{2(p_1 - p_2)}{\rho_2 V_2^2} \quad (9.70)$$

Benedict [24] gives examples of compressible losses in sudden contractions and expansions. If data are unavailable, a first approximation would be to use  $K_s \approx K$  from Section 6.9.

### Isothermal Flow with Friction: Long Pipelines

The adiabatic frictional flow assumption is appropriate to high-speed flow in short ducts. For flow in long ducts, such as natural gas pipelines, the gas state more closely

approximates an isothermal flow. The analysis is the same except that the isoenergetic energy equation (9.60c) is replaced by the simple relation

$$T = \text{const} \quad dT = 0$$

Again it is possible to write all property changes in terms of the Mach number. Integration of the Mach number–friction relation yields

$$\frac{\bar{f}L_{\max}}{D} = \frac{1 - k \text{Ma}^2}{k \text{Ma}^2} + \ln(k \text{Ma}^2) \quad (9.71)$$

which is the isothermal analog of Eq. (9.66) for adiabatic flow.

This friction relation has the interesting result that  $L_{\max}$  becomes zero not at the sonic point but at  $\text{Ma}_{\text{crit}} = 1/k^{1/2} = 0.845$  if  $k = 1.4$ . The inlet flow, whether subsonic or supersonic, tends downstream toward this limiting Mach number  $1/k^{1/2}$ . If the tube length  $L$  is greater than  $L_{\max}$  from Eq. (9.71), a subsonic flow will choke back to a smaller  $\text{Ma}_1$  and mass flow and a supersonic flow will experience a normal shock adjustment similar to Fig. 9.15.

The exit isothermal choked flow is not sonic, and so the use of the asterisk is inappropriate. Let  $p'$ ,  $\rho'$ , and  $V'$  represent properties at the choking point  $L = L_{\max}$ . Then the isothermal analysis leads to the following Mach number relations for the flow properties:

$$\frac{p}{p'} = \frac{1}{\text{Ma} k^{1/2}} \quad \frac{V}{V'} = \frac{\rho'}{\rho} = \text{Ma} k^{1/2} \quad (9.72)$$

The complete analysis and some examples are given in advanced texts [for example, 5, Sec. 6.4].

### Mass Flow for a Given Pressure Drop

An interesting by-product of the isothermal analysis is an explicit relation between the pressure drop and duct mass flow. This common problem requires numerical iteration for adiabatic flow, as outlined here. In isothermal flow, we may substitute  $dV/V = -dp/p$  and  $V^2 = G^2/[p/(RT)]^2$  in Eq. (9.63) to obtain

$$\frac{2p dp}{G^2 RT} + f \frac{dx}{D} - \frac{2 dp}{p} = 0$$

Since  $G^2 RT$  is constant for isothermal flow, this may be integrated in closed form between  $(x, p) = (0, p_1)$  and  $(L, p_2)$ :

$$G^2 = \left(\frac{m}{A}\right)^2 = \frac{p_1^2 - p_2^2}{RT[\bar{f}L/D + 2 \ln(p_1/p_2)]} \quad (9.73)$$

Thus mass flow follows directly from the known end pressures, without any use of Mach numbers or tables.

The writer does not know of any direct analogy to Eq. (9.73) for adiabatic flow. However, a useful adiabatic relation, involving velocities instead of pressures, is

$$V_1^2 = \frac{a_0^2[1 - (V_1/V_2)^2]}{k\bar{f}L/D + (k + 1) \ln(V_2/V_1)} \quad (9.74)$$

where  $a_0 = (kRT_0)^{1/2}$  is the stagnation speed of sound, constant for adiabatic flow. This may be combined with continuity for constant duct area  $V_1/V_2 = \rho_2/\rho_1$ , plus the following combination of adiabatic energy and the perfect-gas relation:

$$\frac{V_1}{V_2} = \frac{p_2}{p_1} \frac{T_1}{T_2} = \frac{p_2}{p_1} \left[ \frac{2a_0^2 - (k-1)V_1^2}{2a_0^2 - (k-1)V_2^2} \right] \quad (9.75)$$

If we are given the end pressures, neither  $V_1$  nor  $V_2$  will likely be known in advance. Here, if EES is not available, we suggest only the following simple procedure. Begin with  $a_0 \approx a_1$  and the bracketed term in Eq. (9.75) approximately equal to 1.0. Solve Eq. (9.75) for a first estimate of  $V_1/V_2$ , and use this value in Eq. (9.74) to get a better estimate of  $V_1$ . Use  $V_1$  to improve your estimate of  $a_0$ , and repeat the procedure. The process should converge in a few iterations.

Equations (9.73) and (9.74) have one flaw: With the Mach number eliminated, the frictional choking phenomenon is not directly evident. Therefore, assuming a subsonic inlet flow, one should check the exit Mach number  $\text{Ma}_2$  to ensure that it is not greater than  $1/k^{1/2}$  for isothermal flow or greater than 1.0 for adiabatic flow. We illustrate both adiabatic and isothermal flow with the following example.

### EXAMPLE 9.13

Air enters a pipe of 1-cm diameter and 1.2-m length at  $p_1 = 220 \text{ kPa}$  and  $T_1 = 300 \text{ K}$ . If  $\bar{f} = 0.025$  and the exit pressure is  $p_2 = 140 \text{ kPa}$ , estimate the mass flow for (a) isothermal flow and (b) adiabatic flow.

#### Solution

##### Part (a)

For isothermal flow Eq. (9.73) applies without iteration:

$$\begin{aligned} \frac{\bar{f}L}{D} + 2 \ln \frac{p_1}{p_2} &= \frac{(0.025)(1.2 \text{ m})}{0.01 \text{ m}} + 2 \ln \frac{220}{140} = 3.904 \\ G^2 &= \frac{(220,000 \text{ Pa})^2 - (140,000 \text{ Pa})^2}{[287 \text{ m}^2/(\text{s}^2 \cdot \text{K})](300 \text{ K})(3.904)} = 85,700 \quad \text{or} \quad G = 293 \text{ kg}/(\text{s} \cdot \text{m}^2) \end{aligned}$$

Since  $A = (\pi/4)(0.01 \text{ m})^2 = 7.85 \text{ E-5 m}^2$ , the isothermal mass flow estimate is

$$\dot{m} = GA = (293)(7.85 \text{ E-5}) \approx 0.0230 \text{ kg/s} \quad \text{Ans. (a)}$$

Check that the exit Mach number is not choked:

$$\begin{aligned} \rho_2 &= \frac{p_2}{RT} = \frac{140,000}{(287)(300)} = 1.626 \text{ kg/m}^3 & V_2 &= \frac{G}{\rho_2} = \frac{293}{1.626} = 180 \text{ m/s} \\ \text{or} \quad \text{Ma}_2 &= \frac{V_2}{\sqrt{kRT}} = \frac{180}{[1.4(287)(300)]^{1/2}} = \frac{180}{347} \approx 0.52 \end{aligned}$$

This is well below choking, and the isothermal solution is accurate.

##### EES Part (b)

For adiabatic flow, we can iterate by hand, in the time-honored fashion, using Eqs. (9.74) and (9.75) plus the definition of stagnation speed of sound. A few years ago the author

would have done just that, laboriously. However, EES makes handwork and manipulation of equations unnecessary, although careful programming and good guesses are required. If we ignore superfluous output such as  $T_2$  and  $V_2$ , 13 statements are appropriate. First, spell out the given physical properties (in SI units):

$$k = 1.4$$

$$P1 = 220000$$

$$P2 = 140000$$

$$T1 = 300$$

Next, apply the adiabatic friction relations, Eqs. (9.66) and (9.67), to both points 1 and 2:

$$f_{LD1} = (1 - Ma1^2) / k / Ma1^2 + (k + 1) / 2 / k * \ln((k + 1) * Ma1^2 / (2 + (k - 1) * Ma1^2))$$

$$f_{LD2} = (1 - Ma2^2) / k / Ma2^2 + (k + 1) / 2 / k * \ln((k + 1) * Ma2^2 / (2 + (k - 1) * Ma2^2))$$

$$\Delta f_{LD} = 0.025 * 1.2 / 0.01$$

$$f_{LD1} = f_{LD2} + \Delta f_{LD}$$

Then apply the pressure ratio formula (9.68a) to both points 1 and 2:

$$P1 / Pstar = ((k + 1) / (2 + (k - 1) * Ma1^2))^0.5 / Ma1$$

$$P2 / Pstar = ((k + 1) / (2 + (k - 1) * Ma2^2))^0.5 / Ma2$$

These are *adiabatic* relations, so we need not further spell out quantities such as  $T_0$  or  $a_0$  unless we want them as additional output.

The above 10 statements are a closed algebraic system, and EES will solve them for  $Ma_1$  and  $Ma_2$ . However, the problem asks for mass flow, so we complete the system:

$$V1 = Ma1 * \sqrt{1.4 * 287 * T1}$$

$$\rho_1 = P1 / 287 / T1$$

$$\dot{m} = \rho_1 * (\pi / 4 * 0.01^2) * V1$$

If we apply no constraints, EES reports “cannot solve” because its default allows all variables to lie between  $-\infty$  and  $+\infty$ . So we enter Variable Information and constrain  $Ma_1$  and  $Ma_2$  to lie between 0 and 1 (subsonic flow). EES still complains that it “cannot solve” but hints that “better guesses are needed.” Indeed, the default guesses for EES variables are normally 1.0, too large for the Mach numbers. Guess the Mach numbers equal to 0.8 or even 0.5, and EES still complains, for a subtle reason: Since  $f\Delta L/D = 0.025(1.2/0.01) = 3.0$ ,  $Ma_1$  can be no larger than 0.36 (see Table B.3). Finally, then, we guess  $Ma_1$  and  $Ma_2 = 0.3$  or 0.4, and EES reports the solution:

$$Ma_1 = 0.3343 \quad Ma_2 = 0.5175 \quad \frac{f_L}{D_1} = 3.935 \quad \frac{f_L}{D_2} = 0.9348$$

$$P^* = 67,892 \text{ Pa} \quad \dot{m} = 0.0233 \text{ kg/s}$$

*Ans. (b)*

Though the programming is complicated, the EES approach is superior to hand iteration; and, of course, we can save this program for use again with new data.

## 9.8 Frictionless Duct Flow with Heat Transfer<sup>5</sup>

Heat addition or removal has an interesting effect on a compressible flow. Advanced texts [for example, 5, Chap. 8] consider the combined effect of heat transfer coupled with friction and area change in a duct. Here we confine the analysis to heat transfer with no friction in a constant-area duct.

This type of duct flow—constant area, constant momentum, constant mass flow, but variable stagnation enthalpy (due to heat transfer)—is often termed *Rayleigh flow* after John William Strutt, Lord Rayleigh (1842–1919), a famous physicist and engineer. For a given mass flow and momentum, a plot of enthalpy versus entropy for all possible flow states, subsonic or supersonic, forms a *Rayleigh line*. See Probs. P9.110 and P9.111 for examples of a Rayleigh line.

Consider the elemental duct control volume in Fig. 9.16. Between sections 1 and 2 an amount of heat  $\delta Q$  is added (or removed) to each incremental mass  $\delta m$  passing through. With no friction or area change, the control volume conservation relations are quite simple:

$$\text{Continuity: } \rho_1 V_1 = \rho_2 V_2 = G = \text{const} \quad (9.76a)$$

$$x \text{ momentum: } p_1 - p_2 = G(V_2 - V_1) \quad (9.76b)$$

$$\text{Energy: } \dot{Q} = \dot{m}(h_2 + \frac{1}{2}V_2^2 - h_1 - \frac{1}{2}V_1^2)$$

$$\text{or } q = \frac{\dot{Q}}{\dot{m}} = \frac{\delta Q}{\delta m} = h_{02} - h_{01} \quad (9.76c)$$

The heat transfer results in a change in stagnation enthalpy of the flow. We shall not specify exactly how the heat is transferred—combustion, nuclear reaction, evaporation, condensation, or wall heat exchange—but simply that it happened in amount  $q$  between 1 and 2. We remark, however, that wall heat exchange is not a good candidate for the theory because wall convection is inevitably coupled with wall friction, which we neglected.


To complete the analysis, we use the perfect-gas and Mach number relations:

$$\begin{aligned} \frac{p_2}{p_2 T_2} &= \frac{p_1}{\rho_1 T_1} & h_{02} - h_{01} &= c_p(T_{02} - T_{01}) \\ \frac{V_2}{V_1} &= \frac{\text{Ma}_2 a_2}{\text{Ma}_1 a_1} = \frac{\text{Ma}_2}{\text{Ma}_1} \left( \frac{T_2}{T_1} \right)^{1/2} \end{aligned} \quad (9.77)$$


For a given heat transfer  $q = \delta Q/\delta m$  or, equivalently, a given change  $h_{02} - h_{01}$ , Eqs. (9.76) and (9.77) can be solved algebraically for the property ratios  $p_2/p_1$ ,  $\text{Ma}_2/\text{Ma}_1$ , and so on between inlet and outlet. Note that because the heat transfer allows the entropy to either increase or decrease, the second law imposes no restrictions on these solutions.

Before writing down these property ratio functions, we illustrate the effect of heat transfer in Fig. 9.17, which shows  $T_0$  and  $T$  versus Mach number in the duct. Heating increases  $T_0$ , and cooling decreases it. The maximum possible  $T_0$  occurs at  $\text{Ma} = 1.0$ , and we see that heating, whether the inlet is subsonic or supersonic, drives the duct Mach number toward unity. This is analogous to the effect of friction in the previous section. The temperature of a perfect gas increases from  $\text{Ma} = 0$  up to  $\text{Ma} = 1/k^{1/2}$  and then decreases. Thus there is a peculiar—or at least unexpected—region where heating (increasing  $T_0$ ) actually decreases the gas temperature, the difference being reflected in

<sup>5</sup>This section may be omitted without loss of continuity.

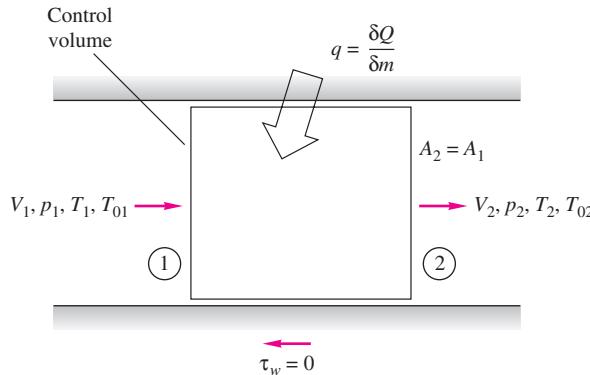

**Fig. 9.16** Elemental control volume for frictionless flow in a constant-area duct with heat transfer. The length of the element is indeterminate in this simplified theory.

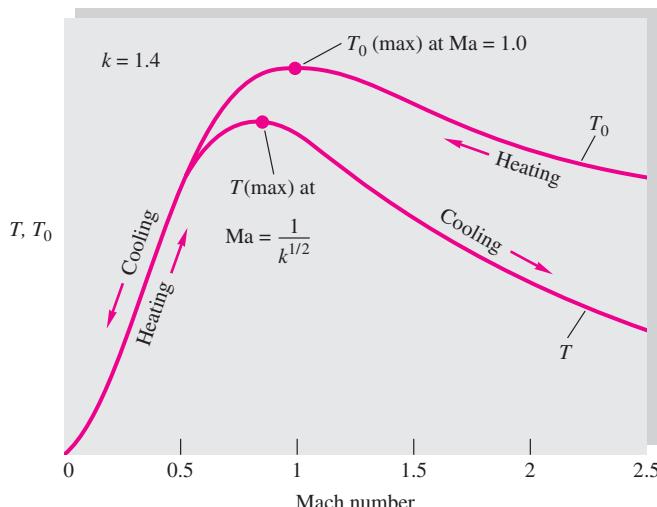

**Fig. 9.17** Effect of heat transfer on Mach number.

a large increase of the gas kinetic energy. For  $k = 1.4$  this peculiar area lies between  $\text{Ma} = 0.845$  and  $\text{Ma} = 1.0$  (interesting but not very useful information).

The complete list of the effects of simple  $T_0$  change on duct flow properties is as follows:

	Heating		Cooling	
	Subsonic	Supersonic	Subsonic	Supersonic
$T_0$	Increases	Increases	Decreases	Decreases
$\text{Ma}$	Increases	Decreases	Decreases	Increases
$p$	Decreases	Increases	Increases	Decreases
$\rho$	Decreases	Increases	Increases	Decreases
$V$	Increases	Decreases	Decreases	Increases
$p_0$	Decreases	Decreases	Increases	Increases
$s$	Increases	Increases	Decreases	Decreases
$T$	*	Increases	†	Decreases

\*Increases up to  $\text{Ma} = 1/k^{1/2}$  and decreases thereafter.

†Decreases up to  $\text{Ma} = 1/k^{1/2}$  and increases thereafter.

Probably the most significant item on this list is the stagnation pressure  $p_0$ , which always decreases during heating whether the flow is subsonic or supersonic. Thus heating does increase the Mach number of a flow but entails a loss in effective pressure recovery.

### Mach Number Relations

Equations (9.76) and (9.77) can be rearranged in terms of the Mach number and the results tabulated. For convenience, we specify that the outlet section is sonic,  $\text{Ma} = 1$ , with reference properties  $T_0^*$ ,  $T^*$ ,  $p^*$ ,  $\rho^*$ ,  $V^*$ , and  $p_0^*$ . The inlet is assumed to be at arbitrary Mach number  $\text{Ma}$ . Equations (9.76) and (9.77) then take the following form:

$$\frac{T_0}{T_0^*} = \frac{(k+1)\text{Ma}^2 [2 + (k-1)\text{Ma}^2]}{(1+k\text{Ma}^2)^2} \quad (9.78a)$$

$$\frac{T}{T^*} = \frac{(k+1)^2 \text{Ma}^2}{(1+k\text{Ma}^2)^2} \quad (9.78b)$$

$$\frac{p}{p^*} = \frac{k+1}{1+k\text{Ma}^2} \quad (9.78c)$$

$$\frac{V}{V^*} = \frac{\rho^*}{\rho} = \frac{(k+1)\text{Ma}^2}{1+k\text{Ma}^2} \quad (9.78d)$$

$$\frac{p_0}{p_0^*} = \frac{k+1}{1+k\text{Ma}^2} \left[ \frac{2 + (k-1)\text{Ma}^2}{k+1} \right]^{k/(k-1)} \quad (9.78e)$$

These formulas are all tabulated versus Mach number in Table B.4. The tables are very convenient if inlet properties  $\text{Ma}_1$ ,  $V_1$ , and the like are given but are somewhat cumbersome if the given information centers on  $T_{01}$  and  $T_{02}$ . Let us illustrate with an example.

#### EXAMPLE 9.14

A fuel-air mixture, approximated as air with  $k = 1.4$ , enters a duct combustion chamber at  $V_1 = 75 \text{ m/s}$ ,  $p_1 = 150 \text{ kPa}$ , and  $T_1 = 300 \text{ K}$ . The heat addition by combustion is  $900 \text{ kJ/kg}$  of mixture. Compute (a) the exit properties  $V_2$ ,  $p_2$ , and  $T_2$  and (b) the total heat addition that would have caused a sonic exit flow.

#### Solution

**Part (a)** First compute  $T_{01} = T_1 + V_1^2/(2c_p) = 300 + (75)^2/[2(1005)] = 303 \text{ K}$ . Then compute the change in stagnation temperature of the gas:

$$q = c_p(T_{02} - T_{01})$$

or 
$$T_{02} = T_{01} + \frac{q}{c_p} = 303 \text{ K} + \frac{900,000 \text{ J/kg}}{1005 \text{ J/(kg} \cdot \text{K)}} = 1199 \text{ K}$$

We have enough information to compute the initial Mach number:

$$a_1 = \sqrt{kRT_1} = [1.4(287)(300)]^{1/2} = 347 \text{ m/s} \quad \text{Ma}_1 = \frac{V_1}{a_1} = \frac{75}{347} = 0.216$$

For this Mach number, use Eq. (9.78a) or Table B.4 to find the sonic value  $T_0^*$ :

$$\text{At } \text{Ma}_1 = 0.216: \quad \frac{T_{01}}{T_0^*} \approx 0.1992 \quad \text{or} \quad T_0^* = \frac{303 \text{ K}}{0.1992} \approx 1521 \text{ K}$$

Then the stagnation temperature ratio at section 2 is  $T_{02}/T_0^* = 1199/1521 = 0.788$ , which corresponds in Table B.4 to a Mach number  $\text{Ma}_2 \approx 0.573$ .

Now use Eqs. (9.78) at  $\text{Ma}_1$  and  $\text{Ma}_2$  to tabulate the desired property ratios.

Section	Ma	V/V*	p/p*	T/T*
1	0.216	0.1051	2.2528	0.2368
2	0.573	0.5398	1.6442	0.8876

The exit properties are computed by using these ratios to find state 2 from state 1:

$$V_2 = V_1 \frac{V_2/V^*}{V_1/V^*} = (75 \text{ m/s}) \frac{0.5398}{0.1051} = 385 \text{ m/s} \quad \text{Ans. (a)}$$

$$p_2 = p_1 \frac{p_2/p^*}{p_1/p^*} = (150 \text{ kPa}) \frac{1.6442}{2.2528} = 109 \text{ kPa} \quad \text{Ans. (a)}$$

$$T_2 = T_1 \frac{T_2/T^*}{T_1/T^*} = (300 \text{ K}) \frac{0.8876}{0.2368} = 1124 \text{ K} \quad \text{Ans. (a)}$$

### Part (b)

The maximum allowable heat addition would drive the exit Mach number to unity:

$$T_{02} = T_0^* = 1521 \text{ K}$$

$$q_{\max} = c_p(T_0^* - T_{01}) = [1005 \text{ J/(kg} \cdot \text{K)}](1521 - 303 \text{ K}) \approx 1.22 \text{ E6 J/kg} \quad \text{Ans. (b)}$$

## Choking Effects Due to Simple Heating

Equation (9.78a) and Table B.4 indicate that the maximum possible stagnation temperature in simple heating corresponds to  $T_0^*$ , or the sonic exit Mach number. Thus, for given inlet conditions, only a certain maximum amount of heat can be added to the flow—for example, 1.22 MJ/kg in Example 9.14. For a subsonic inlet there is no theoretical limit on heat addition: The flow chokes more and more as we add more heat, with the inlet velocity approaching zero. For supersonic flow, even if  $\text{Ma}_1$  is infinite, there is a finite ratio  $T_{01}/T_0^* = 0.4898$  for  $k = 1.4$ . Thus if heat is added without limit to a supersonic flow, a normal shock wave adjustment is required to accommodate the required property changes.

In subsonic flow there is no theoretical limit to the amount of cooling allowed: The exit flow just becomes slower and slower, and the temperature approaches

zero. In supersonic flow only a finite amount of cooling can be allowed before the exit flow approaches infinite Mach number, with  $T_{02}/T_0^* = 0.4898$  and the exit temperature equal to zero. There are very few practical applications for supersonic cooling.

### EXAMPLE 9.15

What happens to the inlet flow in Example 9.14 if the heat addition is increased to 1400 kJ/kg and the inlet pressure and stagnation temperature are fixed? What will be the subsequent decrease in mass flow?

### Solution

For  $q = 1400 \text{ kJ/kg}$ , the exit will be choked at the stagnation temperature:

$$T_0^* = T_{01} + \frac{q}{c_p} = 303 + \frac{1.4 \times 10^6 \text{ J/kg}}{1005 \text{ J/(kg} \cdot \text{K)}} \approx 1696 \text{ K}$$

This is higher than the value  $T_0^* = 1521 \text{ K}$  in Example 9.14, so we know that condition 1 will have to choke down to a lower Mach number. The proper value is found from the ratio  $T_{01}/T_0^* = 303/1696 = 0.1787$ . From Table B.4 or Eq. (9.78a) for this condition, we read the new, lowered entrance Mach number:  $\text{Ma}_{1,\text{new}} \approx 0.203$ . With  $T_{01}$  and  $p_1$  known, the other inlet properties follow from this Mach number:

$$\begin{aligned} T_1 &= \frac{T_{01}}{1 + 0.2 \text{ Ma}_1^2} = \frac{303}{1 + 0.2(0.203)^2} = 301 \text{ K} \\ a_1 &= \sqrt{kRT_1} = [1.4(287)(301)]^{1/2} = 348 \text{ m/s} \\ V_1 &= \text{Ma}_1 a_1 = (0.203)(348 \text{ m/s}) = 71 \text{ m/s} \\ \rho_1 &= \frac{p_1}{RT_1} = \frac{150,000}{(287)(301)} = 1.74 \text{ kg/m}^3 \end{aligned}$$

Finally, the new lowered mass flow per unit area is

$$\frac{\dot{m}_{\text{new}}}{A} = \rho_1 V_1 = (1.74 \text{ kg/m}^3)(71 \text{ m/s}) = 123 \text{ kg/(s} \cdot \text{m}^2)$$

This is 7 percent less than in Example 9.14, due to choking by excess heat addition.

### Relationship to the Normal Shock Wave

The normal shock wave relations of Sec. 9.5 actually lurk within the simple heating relations as a special case. From Table B.4 or Fig. 9.17 we see that for a given stagnation temperature less than  $T_0^*$  two flow states satisfy the simple heating relations, one subsonic and the other supersonic. These two states have (1) the same value of  $T_0$ , (2) the same mass flow per unit area, and (3) the same value of  $p + \rho V^2$ . Therefore these two states are exactly equivalent to the conditions on each side of a normal shock wave. The second law would again require that the upstream flow  $\text{Ma}_1$  be supersonic.


To illustrate this point, take  $\text{Ma}_1 = 3.0$  and from Table B.4 read  $T_{01}/T_0^* = 0.6540$  and  $p_1/p^* = 0.1765$ . Now, for the same value  $T_{02}/T_0^* = 0.6540$ , use Table B.4 or Eq. (9.78a) to compute  $\text{Ma}_2 = 0.4752$  and  $p_2/p^* = 1.8235$ . The value of  $\text{Ma}_2$  is exactly what we read in the shock table, Table B.2, as the downstream Mach number when  $\text{Ma}_1 = 3.0$ . The pressure ratio for these two states is  $p_2/p_1 = (p_2/p^*)/(p_1/p^*) = 1.8235/0.1765 = 10.33$ , which again is just what we read in Table B.2 for  $\text{Ma}_1 = 3.0$ . This illustration is meant only to show the physical background of the simple heating relations; it would be silly to make a practice of computing normal shock waves in this manner.

## 9.9 Two-Dimensional Supersonic Flow

Up to this point we have considered only one-dimensional compressible flow theories. This illustrated many important effects, but a one-dimensional world completely loses sight of the wave motions that are so characteristic of supersonic flow. The only “wave motion” we could muster in a one-dimensional theory was the normal shock wave, which amounted only to a flow discontinuity in the duct.

### Mach Waves

When we add a second dimension to the flow, wave motions immediately become apparent if the flow is supersonic. Figure 9.18 shows a celebrated graphical

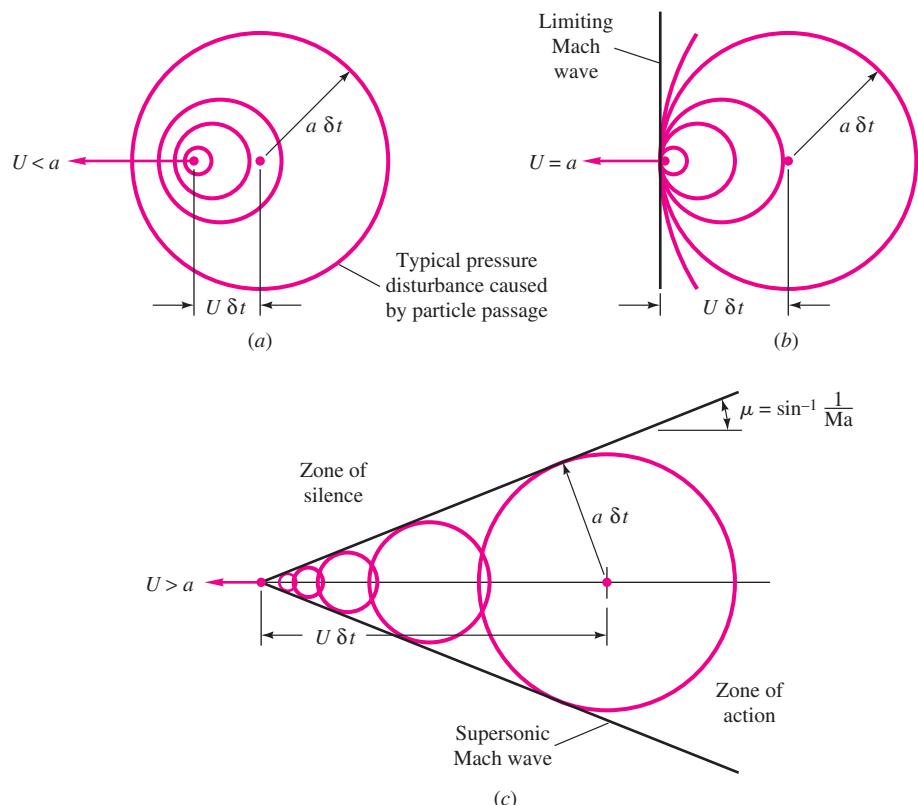

**Fig. 9.18** Wave patterns set up by a particle moving at speed  $U$  into still fluid of sound velocity  $a$ : (a) subsonic, (b) sonic, and (c) supersonic motion.

construction that appears in every fluid mechanics textbook and was first presented by Ernst Mach in 1887. The figure shows the pattern of pressure disturbances (sound waves) sent out by a small particle moving at speed  $U$  through a still fluid whose sound velocity is  $a$ .

As the particle moves, it continually crashes against fluid particles and sends out spherical sound waves emanating from every point along its path. A few of these spherical disturbance fronts are shown in Fig. 9.18. The behavior of these fronts is quite different according to whether the particle speed is subsonic or supersonic.

In Fig. 9.18a, the particle moves subsonically,  $U < a$ ,  $\text{Ma} = U/a < 1$ . The spherical disturbances move out in all directions and do not catch up with one another. They move well out in front of the particle also, because they travel a distance  $a \delta t$  during the time interval  $\delta t$  in which the particle has moved only  $U \delta t$ . Therefore a subsonic body motion makes its presence felt everywhere in the flow field: You can “hear” or “feel” the pressure rise of an oncoming body before it reaches you. This is apparently why that pigeon in the road, without turning around to look at you, takes to the air and avoids being hit by your car.

At sonic speed,  $U = a$ , Fig. 9.18b, the pressure disturbances move at exactly the speed of the particle and thus pile up on the left at the position of the particle into a sort of “front locus,” which is now called a *Mach wave*, after Ernst Mach. No disturbance reaches beyond the particle. If you are stationed to the left of the particle, you cannot “hear” the oncoming motion. If the particle blew its horn, you couldn’t hear that either: A sonic car can sneak up on a pigeon.


In supersonic motion,  $U > a$ , the lack of advance warning is even more pronounced. The disturbance spheres cannot catch up with the fast-moving particle that created them. They all trail behind the particle and are tangent to a conical locus called the *Mach cone*. From the geometry of Fig. 9.18c the angle of the Mach cone is seen to be

$$\mu = \sin^{-1} \frac{a \delta t}{U \delta t} = \sin^{-1} \frac{a}{U} = \sin^{-1} \frac{1}{\text{Ma}} \quad (9.79)$$

The higher the particle Mach number, the more slender the Mach cone; for example,  $\mu$  is  $30^\circ$  at  $\text{Ma} = 2.0$  and  $11.5^\circ$  at  $\text{Ma} = 5.0$ . For the limiting case of sonic flow,  $\text{Ma} = 1$ ,  $\mu = 90^\circ$ ; the Mach cone becomes a plane front moving with the particle, in agreement with Fig. 9.18b.

You cannot “hear” the disturbance caused by the supersonic particle in Fig. 9.18c until you are in the *zone of action* inside the Mach cone. No warning can reach your ears if you are in the *zone of silence* outside the cone. Thus an observer on the ground beneath a supersonic airplane does not hear the *sonic boom* of the passing cone until the plane is well past.

The Mach wave need not be a cone: Similar waves are formed by a small disturbance of any shape moving supersonically with respect to the ambient fluid. For example, the “particle” in Fig. 9.18c could be the leading edge of a sharp flat plate, which would form a Mach wedge of exactly the same angle  $\mu$ . Mach waves are formed by small roughnesses or boundary layer irregularities in a supersonic wind tunnel or at the surface of a supersonic body. Look again at Fig. 9.10: Mach waves are clearly visible along the body surface downstream of

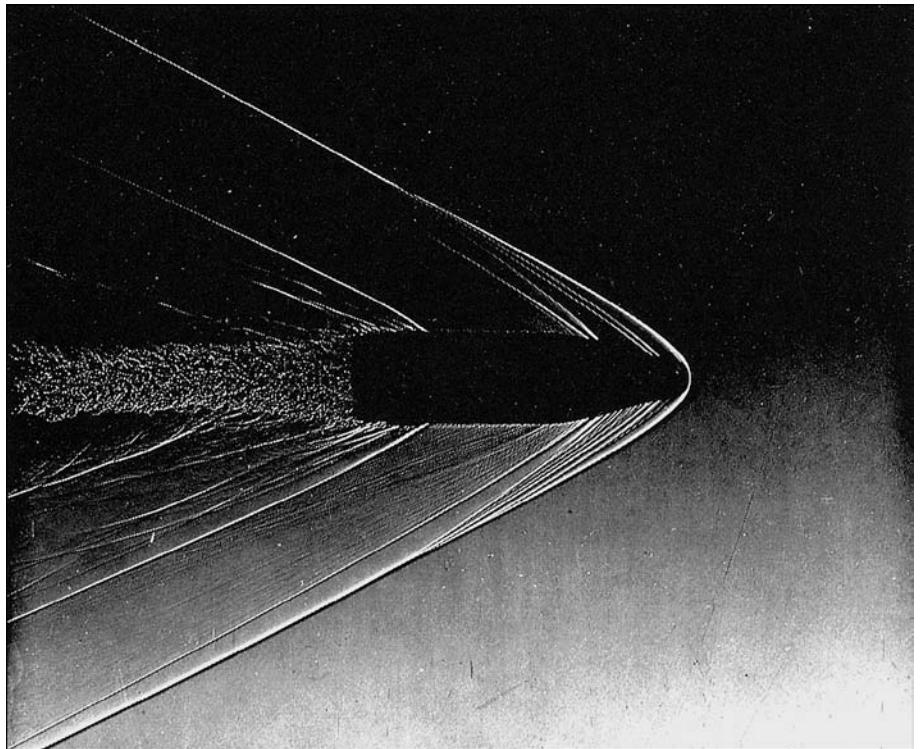

**Fig. 9.19** Supersonic wave pattern emanating from a projectile moving at  $\text{Ma} \approx 2.0$ . The heavy lines are oblique shock waves and the light lines Mach waves. (*Courtesy of U.S. Army Ballistic Research Laboratory, Aberdeen Proving Ground.*)


the recompression shock, especially at the rear corner. Their angle is about  $30^\circ$ , indicating a Mach number of about 2.0 along this surface. A more complicated system of Mach waves emanates from the supersonic projectile in Fig. 9.19. The Mach angles change, indicating a variable supersonic Mach number along the body surface. There are also several stronger oblique shock waves formed along the surface.

#### EXAMPLE 9.16

An observer on the ground does not hear the sonic boom caused by an airplane moving at 5-km altitude until it is 9 km past her. What is the approximate Mach number of the plane? Assume a small disturbance and neglect the variation of sound speed with altitude.

#### Solution


A finite disturbance like an airplane will create a finite-strength oblique shock wave whose angle will be somewhat larger than the Mach wave angle  $\mu$  and will curve downward due to the variation in atmospheric sound speed. If we neglect these effects, the altitude and distance are a measure of  $\mu$ , as seen in Fig. E9.16. Thus

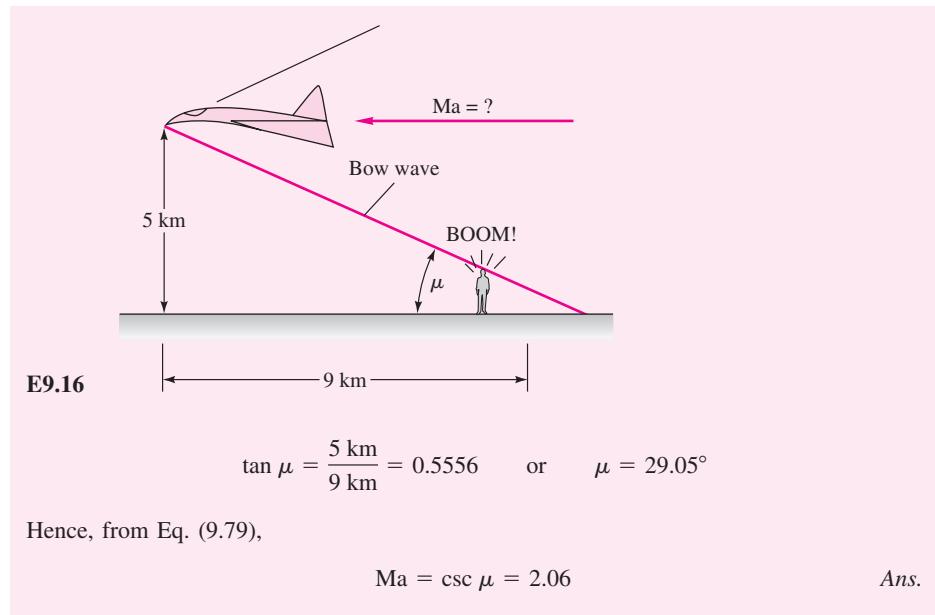

### The Oblique Shock Wave

Figures 9.10 and 9.19 and our earlier discussion all indicate that a shock wave can form at an oblique angle to the oncoming supersonic stream. Such a wave will deflect the stream through an angle  $\theta$ , unlike the normal shock wave, for which the downstream flow is in the same direction. In essence, an oblique shock is caused by the necessity for a supersonic stream to turn through such an angle. Examples could be a finite wedge at the leading edge of a body and a ramp in the wall of a supersonic wind tunnel.

The flow geometry of an oblique shock is shown in Fig. 9.20. As for the normal shock of Fig. 9.8, state 1 denotes the upstream conditions and state 2 is downstream. The shock angle has an arbitrary value  $\beta$ , and the downstream flow  $V_2$  turns at an angle  $\theta$  which is a function of  $\beta$  and state 1 conditions. The upstream flow is always supersonic, but the downstream Mach number  $\text{Ma}_2 = V_2/a_2$  may be subsonic, sonic, or supersonic, depending on the conditions.

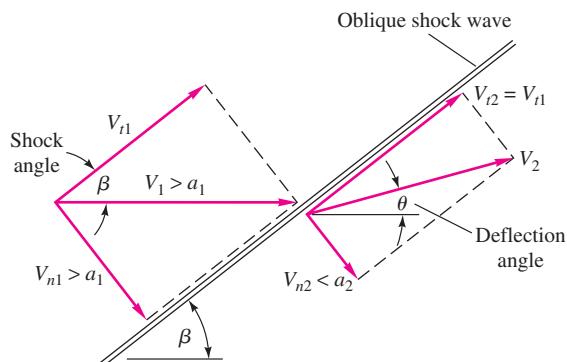

**Fig. 9.20** Geometry of flow through an oblique shock wave.

It is convenient to analyze the flow by breaking it up into normal and tangential components with respect to the wave, as shown in Fig. 9.20. For a thin control volume just encompassing the wave, we can then derive the following integral relations, canceling out  $A_1 = A_2$  on each side of the wave:

$$\text{Continuity:} \quad \rho_1 V_{n1} = \rho_2 V_{n2} \quad (9.80a)$$

$$\text{Normal momentum:} \quad p_1 - p_2 = \rho_2 V_{n2}^2 - \rho_1 V_{n1}^2 \quad (9.80b)$$

$$\text{Tangential momentum:} \quad 0 = \rho_1 V_{n1}(V_{t2} - V_{t1}) \quad (9.80c)$$

$$\text{Energy:} \quad h_1 + \frac{1}{2}V_{n1}^2 + \frac{1}{2}V_{t1}^2 = h_2 + \frac{1}{2}V_{n2}^2 + \frac{1}{2}V_{t2}^2 = h_0 \quad (9.80d)$$

We see from Eq. (9.80c) that there is no change in tangential velocity across an oblique shock:

$$V_{t2} = V_{t1} = V_t = \text{const} \quad (9.81)$$

Thus tangential velocity has as its only effect the addition of a constant kinetic energy  $\frac{1}{2}V_t^2$  to each side of the energy equation (9.80d). We conclude that Eqs. (9.80) are identical to the normal shock relations (9.49), with  $V_1$  and  $V_2$  replaced by the normal components  $V_{n1}$  and  $V_{n2}$ . All the various relations from Sec. 9.5 can be used to compute properties of an oblique shock wave. The trick is to use the “normal” Mach numbers in place of  $\text{Ma}_1$  and  $\text{Ma}_2$ :

$$\boxed{\text{Ma}_{n1} = \frac{V_{n1}}{a_1} = \text{Ma}_1 \sin \beta} \quad (9.82)$$

$$\boxed{\text{Ma}_{n2} = \frac{V_{n2}}{a_2} = \text{Ma}_2 \sin (\beta - \theta)}$$

Then, for a perfect gas with constant specific heats, the property ratios across the oblique shock are the analogs of Eqs. (9.55) to (9.58) with  $\text{Ma}_1$  replaced by  $\text{Ma}_{n1}$ :

$$\frac{p_2}{p_1} = \frac{1}{k+1} [2k \text{Ma}_1^2 \sin^2 \beta - (k-1)] \quad (9.83a)$$

$$\frac{p_2}{p_1} = \frac{\tan \beta}{\tan (\beta - \theta)} = \frac{(k+1) \text{Ma}_1^2 \sin^2 \beta}{(k-1) \text{Ma}_1^2 \sin^2 \beta + 2} = \frac{V_{n1}}{V_{n2}} \quad (9.83b)$$

$$\frac{T_2}{T_1} = [2 + (k-1) \text{Ma}_1^2 \sin^2 \beta] \frac{2k \text{Ma}_1^2 \sin^2 \beta - (k-1)}{(k+1)^2 \text{Ma}_1^2 \sin^2 \beta} \quad (9.83c)$$

$$T_{02} = T_{01} \quad (9.83d)$$

$$\frac{p_{02}}{p_{01}} = \left[ \frac{(k+1) \text{Ma}_1^2 \sin^2 \beta}{2 + (k-1) \text{Ma}_1^2 \sin^2 \beta} \right]^{k/(k-1)} \left[ \frac{k+1}{2k \text{Ma}_1^2 \sin^2 \beta - (k-1)} \right]^{1/(k-1)} \quad (9.83e)$$

$$\text{Ma}_{n2}^2 = \frac{(k-1) \text{Ma}_{n1}^2 + 2}{2k \text{Ma}_{n1}^2 - (k-1)} \quad (9.83f)$$

All these are tabulated in the normal shock Table B.2. If you wondered why that table listed the Mach numbers as  $\text{Ma}_{n1}$  and  $\text{Ma}_{n2}$ , it should be clear now that the table is also valid for the oblique shock wave.

Thinking all this over, we realize with hindsight that an oblique shock wave is the flow pattern one would observe by running along a normal shock wave (Fig. 9.8) at a constant tangential speed  $V_t$ . Thus the normal and oblique shocks are related by a galilean, or inertial, velocity transformation and therefore satisfy the same basic equations.

If we continue with this run-along-the-shock analogy, we find that the deflection angle  $\theta$  increases with speed  $V_t$  up to a maximum and then decreases. From the geometry of Fig. 9.20, the deflection angle is given by

$$\theta = \tan^{-1} \frac{V_t}{V_{n2}} - \tan^{-1} \frac{V_t}{V_{n1}} \quad (9.84)$$


If we differentiate  $\theta$  with respect to  $V_t$  and set the result equal to zero, we find that the maximum deflection occurs when  $V_t/V_{n1} = (V_{n2}/V_{n1})^{1/2}$ . We can substitute this back into Eq. (9.84) to compute

$$\theta_{\max} = \tan^{-1} r^{1/2} - \tan^{-1} r^{-1/2} \quad r = \frac{V_{n1}}{V_{n2}} \quad (9.85)$$

For example, if  $\text{Ma}_{n1} = 3.0$ , from Table B.2 we find that  $V_{n1}/V_{n2} = 3.8571$ , the square root of which is 1.9640. Then Eq. (9.85) predicts a maximum deflection of  $\tan^{-1} 1.9640 - \tan^{-1} (1/1.9640) = 36.03^\circ$ . The deflection is quite limited even for infinite  $\text{Ma}_{n1}$ : From Table B.2 for this case  $V_{n1}/V_{n2} = 6.0$ , and we compute from Eq. (9.85) that  $\theta_{\max} = 45.58^\circ$ .

This limited-deflection idea and other facts become more evident if we plot some of the solutions of Eqs. (9.83). For given values of  $V_1$  and  $a_1$ , assuming as usual that  $k = 1.4$ , we can plot all possible solutions for  $V_2$  downstream of the shock. Figure 9.21 does this in velocity-component coordinates  $V_x$  and  $V_y$ , with  $x$  parallel to  $V_1$ . Such a plot is called a *hodograph*. The heavy dark line that looks like a fat airfoil is the locus, or *shock polar*, of all physically possible solutions for the given  $\text{Ma}_1$ . The two dashed-line fishtails are solutions that increase  $V_2$ ; they are physically impossible because they violate the second law.

Examining the shock polar in Fig. 9.21, we see that a given deflection line of small angle  $\theta$  crosses the polar at two possible solutions: the *strong* shock, which greatly decelerates the flow, and the *weak* shock, which causes a much milder deceleration.

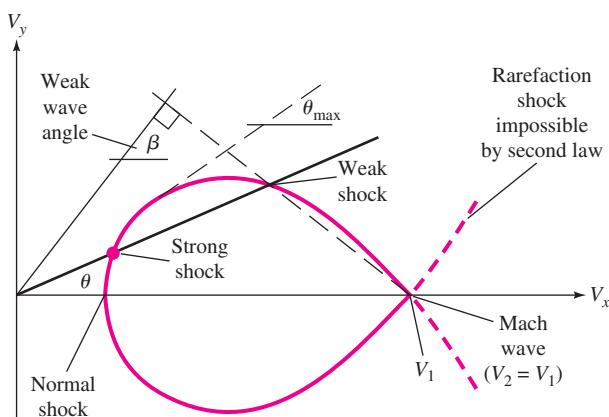


**Fig. 9.21** The oblique shock polar hodograph, showing double solutions (strong and weak) for small deflection angle and no solutions at all for large deflection.

The flow downstream of the strong shock is always subsonic, while that of the weak shock is usually supersonic but occasionally subsonic if the deflection is large. Both types of shock occur in practice. The weak shock is more prevalent, but the strong shock will occur if there is a blockage or high-pressure condition downstream.

Since the shock polar is only of finite size, there is a maximum deflection  $\theta_{\max}$ , shown in Fig. 9.21, that just grazes the upper edge of the polar curve. This verifies the kinematic discussion that led to Eq. (9.85). What happens if a supersonic flow is forced to deflect through an angle greater than  $\theta_{\max}$ ? The answer is illustrated in Fig. 9.22 for flow past a wedge-shaped body.

In Fig. 9.22a the wedge half-angle  $\theta$  is less than  $\theta_{\max}$ , and thus an oblique shock forms at the nose of wave angle  $\beta$  just sufficient to cause the oncoming supersonic stream to deflect through the wedge angle  $\theta$ . Except for the usually small effect of boundary layer growth (see, for example, Ref. 19, Sec. 7–5.2), the Mach number  $Ma_2$  is constant along the wedge surface and is given by the solution of Eqs. (9.83). The pressure, density, and temperature along the surface are also nearly constant, as predicted by Eqs. (9.83). When the flow reaches the corner of the wedge, it expands to higher Mach number and forms a wake (not shown) similar to that in Fig. 9.10.

In Fig. 9.22b the wedge half-angle is greater than  $\theta_{\max}$ , and an attached oblique shock is impossible. The flow cannot deflect at once through the entire angle  $\theta_{\max}$ , yet somehow the flow must get around the wedge. A detached curve shock wave forms in front of the body, discontinuously deflecting the flow through angles smaller than  $\theta_{\max}$ . The flow then curves, expands, and deflects subsonically around the wedge, becoming sonic and then supersonic as it passes the corner region. The flow just inside each point on the curved shock exactly satisfies the oblique shock relations (9.83) for

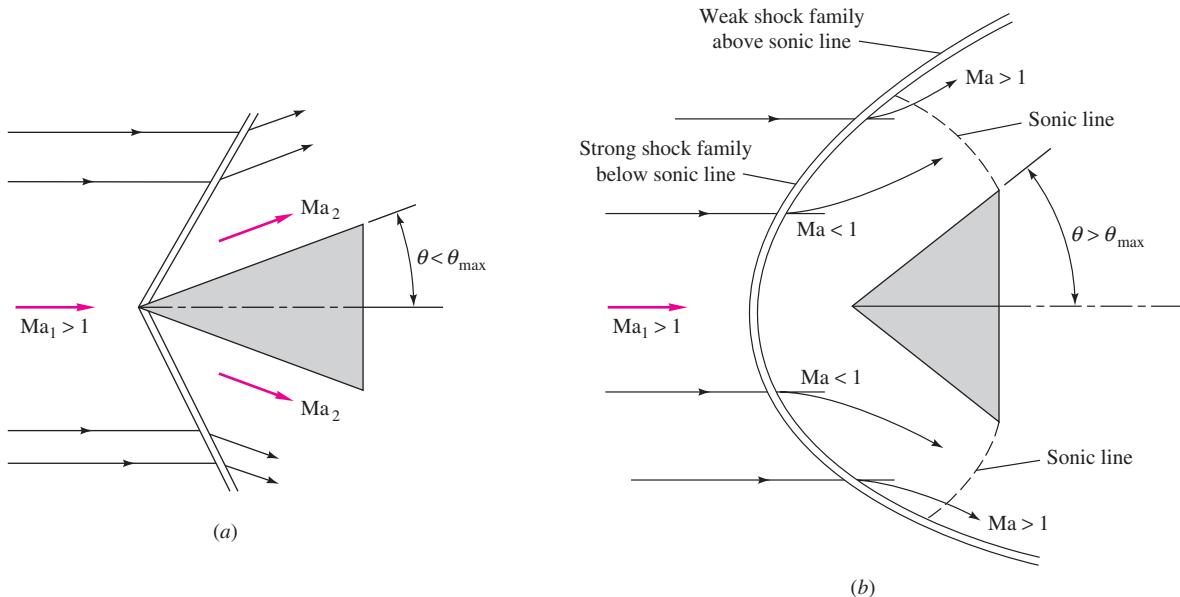

**Fig. 9.22** Supersonic flow past a wedge: (a) small wedge angle, attached oblique shock forms; (b) large wedge angle, attached shock not possible, broad curved detached shock forms.

that particular value of  $\beta$  and the given  $Ma_1$ . Every condition along the curved shock is a point on the shock polar of Fig. 9.21. Points near the front of the wedge are in the strong shock family, and points aft of the sonic line are in the weak shock family. The analysis of detached shock waves is extremely complex [13], and experimentation is usually needed, such as the shadowgraph optical technique of Fig. 9.10.

The complete family of oblique shock solutions can be plotted or computed from Eqs. (9.83). For a given  $k$ , the wave angle  $\beta$  varies with  $Ma_1$  and  $\theta$ , from Eq. (9.83b). By using a trigonometric identity for  $\tan(\beta - \theta)$  this can be rewritten in the more convenient form


$$\tan \theta = \frac{2 \cot \beta (Ma_1^2 \sin^2 \beta - 1)}{Ma_1^2 (k + \cos 2\beta) + 2} \quad (9.86)$$

All possible solutions of Eq. (9.86) for  $k = 1.4$  are shown in Fig. 9.23. For deflections  $\theta < \theta_{\max}$  there are two solutions: a weak shock (small  $\beta$ ) and a strong shock (large  $\beta$ ), as expected. All points along the dash-dot line for  $\theta_{\max}$  satisfy Eq. (9.85). A dashed line has been added to show where  $Ma_2$  is exactly sonic. We see that there is a narrow region near maximum deflection where the weak shock downstream flow is subsonic.

For zero deflections ( $\theta = 0$ ) the weak shock family satisfies the wave angle relation

$$\beta = \mu = \sin^{-1} \frac{1}{Ma_1} \quad (9.87)$$

Thus weak shocks of vanishing deflection are equivalent to Mach waves. Meanwhile the strong shocks all converge at zero deflection to the normal shock condition  $\beta = 90^\circ$ .

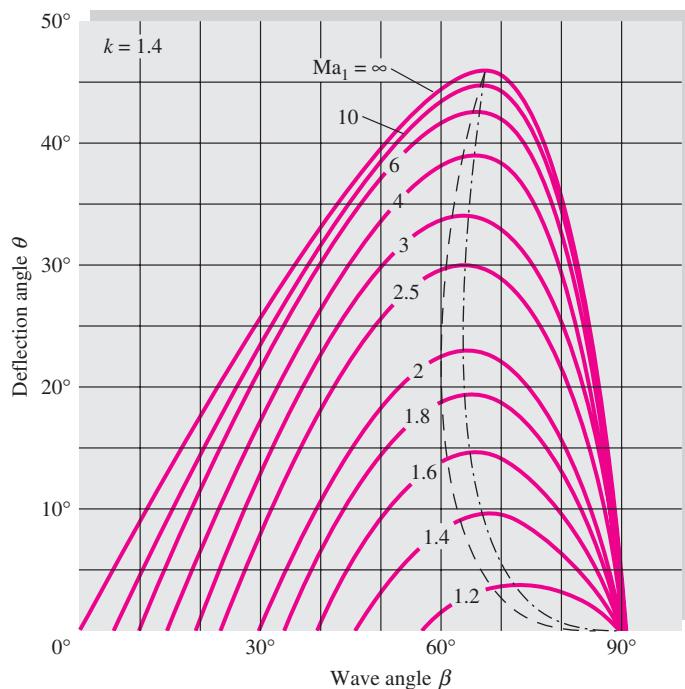

**Fig. 9.23** Oblique shock deflection versus wave angle for various upstream Mach numbers,  $k = 1.4$ : dash-dot curve, locus of  $\theta_{\max}$ , divides strong (right) from weak (left) shocks; dashed curve, locus of sonic points, divides subsonic  $Ma_2$  (right) from supersonic  $Ma_2$  (left).

Two additional oblique shock charts are given in App. B for  $k = 1.4$ , where Fig. B.1 gives the downstream Mach number  $\text{Ma}_2$  and Fig. B.2 the pressure ratio  $p_2/p_1$ , each plotted as a function of  $\text{Ma}_1$  and  $\theta$ . Additional graphs, tables, and computer programs are given in Refs. 20 and 21.

### Very Weak Shock Waves

For any finite  $\theta$  the wave angle  $\beta$  for a weak shock is greater than the Mach angle  $\mu$ . For small  $\theta$  Eq. (9.86) can be expanded in a power series in  $\tan \theta$  with the following linearized result for the wave angle:


$$\sin \beta = \sin \mu + \frac{k+1}{4 \cos \mu} \tan \theta + \dots + \mathcal{O}(\tan^2 \theta) + \dots \quad (9.88)$$

For  $\text{Ma}_1$  between 1.4 and 20.0 and deflections less than  $6^\circ$  this relation predicts  $\beta$  to within  $1^\circ$  for a weak shock. For larger deflections it can be used as a useful initial guess for iterative solution of Eq. (9.86).

Other property changes across the oblique shock can also be expanded in a power series for small deflection angles. Of particular interest is the pressure change from Eq. (9.83a), for which the linearized result for a weak shock is

$$\frac{p_2 - p_1}{p_1} = \frac{k \text{Ma}_1^2}{(k \text{Ma}_1^2 - 1)^{1/2}} \tan \theta + \dots + \mathcal{O}(\tan^2 \theta) + \dots \quad (9.89)$$

The differential form of this relation is used in the next section to develop a theory for supersonic expansion turns. Figure 9.24 shows the exact weak shock pressure jump

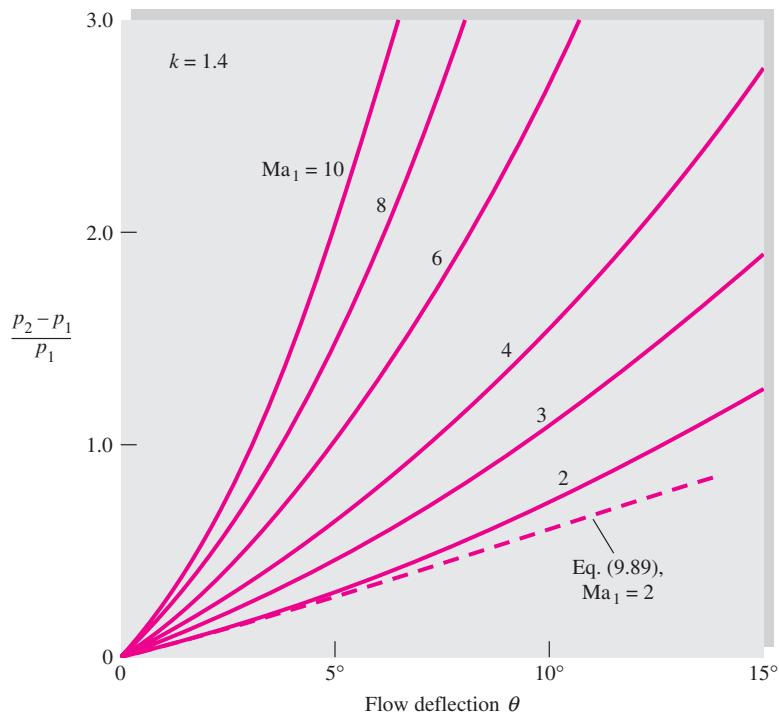


**Fig. 9.24** Pressure jump across a weak oblique shock wave from Eq. (9.83a) for  $k = 1.4$ . For very small deflections Eq. (9.89) applies.

computed from Eq. (9.83a). At very small deflections the curves are linear with slopes given by Eq. (9.89).

Finally, it is educational to examine the entropy change across a very weak shock. Using the same power series expansion technique, we can obtain the following result for small flow deflections:

$$\frac{s_2 - s_1}{c_p} = \frac{(k^2 - 1)Ma_1^6}{12(Ma_1^2 - 1)^{3/2}} \tan^3 \theta + \dots + O(\tan^4 \theta) + \dots \quad (9.90)$$

The entropy change is cubic in the deflection angle  $\theta$ . Thus weak shock waves are very nearly isentropic, a fact that is also used in the next section.

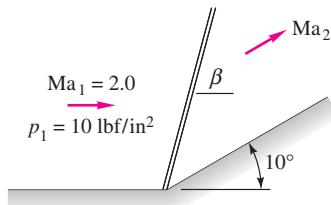

E9.17

EES

**EXAMPLE 9.17**

Air at  $Ma = 2.0$  and  $p = 10 \text{ lbf/in}^2$  absolute is forced to turn through  $10^\circ$  by a ramp at the body surface. A weak oblique shock forms as in Fig. E9.17. For  $k = 1.4$  compute from exact oblique shock theory (a) the wave angle  $\beta$ , (b)  $Ma_2$ , and (c)  $p_2$ . Also use the linearized theory to estimate (d)  $\beta$  and (e)  $p_2$ .

**Solution**

With  $Ma_1 = 2.0$  and  $\theta = 10^\circ$  known, we can estimate  $\beta \approx 40^\circ \pm 2^\circ$  from Fig. 9.23. For more (hand calculated) accuracy, we have to solve Eq. (9.86) by iteration. Or we can program Eq. (9.86) in EES with six statements (in SI units, with angles in degrees):

```
Ma = 2.0
k = 1.4
Theta = 10
Num = 2 * (Ma^2 * SIN(Beta)^2 - 1) / TAN(Beta)
Denom = Ma^2 * (k + COS(2 * Beta)) + 2
Beta = ARCTAN(Num/Denom)
```

Specify that  $Beta > 0$  and EES promptly reports an accurate result:

$$\beta = 39.32^\circ \quad \text{Ans. (a)}$$

The normal Mach number upstream is thus

$$Ma_{n1} = Ma_1 \sin \beta = 2.0 \sin 39.32^\circ = 1.267$$

With  $Ma_{n1}$  we can use the normal shock relations (Table B.2) or Fig. 9.9 or Eqs. (9.56) to (9.58) to compute

$$Ma_{n2} = 0.8031 \quad \frac{p_2}{p_1} = 1.707$$

Thus the downstream Mach number and pressure are

$$Ma_2 = \frac{Ma_{n2}}{\sin(\beta - \theta)} = \frac{0.8031}{\sin(39.32^\circ - 10^\circ)} = 1.64 \quad \text{Ans. (b)}$$

$$p_2 = (10 \text{ lbf/in}^2 \text{ absolute})(1.707) = 17.07 \text{ lbf/in}^2 \text{ absolute} \quad \text{Ans. (c)}$$

Notice that the computed pressure ratio agrees with Figs. 9.24 and B.2.

For the linearized theory the Mach angle is  $\mu = \sin^{-1}(1/2.0) = 30^\circ$ . Equation (9.88) then estimates that

$$\sin \beta \approx \sin 30^\circ + \frac{2.4 \tan 10^\circ}{4 \cos 30^\circ} = 0.622$$

or

$$\beta \approx 38.5^\circ$$

*Ans. (d)*

Equation (9.89) estimates that

$$\frac{p_2}{p_1} \approx 1 + \frac{1.4(2)^2 \tan 10^\circ}{(2^2 - 1)^{1/2}} = 1.57$$

or

$$p_2 \approx 1.57(10 \text{ lbf/in}^2 \text{ absolute}) \approx 15.7 \text{ lbf/in}^2 \text{ absolute}$$

*Ans. (e)*

These are reasonable estimates in spite of the fact that  $10^\circ$  is really not a "small" flow deflection.

## 9.10 Prandtl-Meyer Expansion Waves

The oblique shock solution of Sec. 9.9 is for a finite compressive deflection  $\theta$  that obstructs a supersonic flow and thus decreases its Mach number and velocity. The present section treats gradual changes in flow angle that are primarily *expansive*; they widen the flow area and increase the Mach number and velocity. The property changes accumulate in infinitesimal increments, and the linearized relations (9.88) and (9.89) are used. The local flow deflections are infinitesimal, so that the flow is nearly isentropic according to Eq. (9.90).


Figure 9.25 shows four examples, one of which (Fig. 9.25c) fails the test for gradual changes. The gradual compression of Fig. 9.25a is essentially isentropic, with a smooth increase in pressure along the surface, but the Mach angle increases along the surface and the waves tend to coalesce farther out into an oblique shock wave. The gradual expansion of Fig. 9.25b causes a smooth isentropic increase of Mach number and velocity along the surface, with diverging Mach waves formed.

The sudden compression of Fig. 9.25c cannot be accomplished by Mach waves: An oblique shock forms, and the flow is nonisentropic. This could be what you would see if you looked at Fig. 9.25a from far away. Finally, the sudden expansion of Fig. 9.25d is isentropic and forms a fan of centered Mach waves emanating from the corner. Note that the flow on any streamline passing through the fan changes smoothly to higher Mach number and velocity. In the limit as we near the corner the flow expands almost discontinuously at the surface. The cases in Fig. 9.25a, b, and d can all be handled by the Prandtl-Meyer supersonic wave theory of this section, first formulated by Ludwig Prandtl and his student Theodor Meyer in 1907 to 1908.

Note that none of this discussion makes sense if the upstream Mach number is subsonic, since Mach wave and shock wave patterns cannot exist in subsonic flow.

### The Prandtl-Meyer Perfect-Gas Function

Consider a small, nearly infinitesimal flow deflection  $d\theta$  such as occurs between the first two Mach waves in Fig. 9.25a. From Eqs. (9.88) and (9.89) we have, in

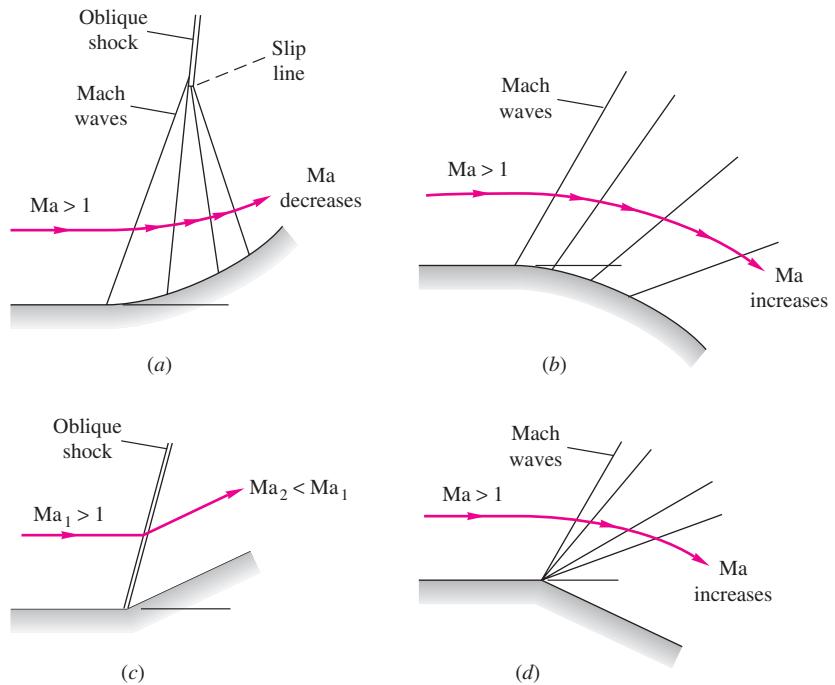

**Fig. 9.25** Some examples of supersonic expansion and compression: (a) gradual isentropic compression on a concave surface, Mach waves coalesce farther out to form oblique shock; (b) gradual isentropic expansion on convex surface, Mach waves diverge; (c) sudden compression, nonisentropic shock forms; (d) sudden expansion, centered isentropic fan of Mach waves forms.

the limit,

$$\beta \approx \mu = \sin^{-1} \frac{1}{Ma} \quad (9.91a)$$

$$\frac{dp}{p} \approx \frac{k Ma^2}{(Ma^2 - 1)^{1/2}} d\theta \quad (9.91b)$$

Since the flow is nearly isentropic, we have the frictionless differential momentum equation for a perfect gas:

$$dp = -\rho V dV = -kp Ma^2 \frac{dV}{V} \quad (9.92)$$

Combining Eqs. (9.91a) and (9.92) to eliminate  $dp$ , we obtain a relation between turning angle and velocity change:

$$d\theta = -(Ma^2 - 1)^{1/2} \frac{dV}{V} \quad (9.93)$$

This can be integrated into a functional relation for finite turning angles if we can relate  $V$  to  $Ma$ . We do this from the definition of Mach number:

$$V = Ma a$$

$$\text{or } \frac{dV}{V} = \frac{d Ma}{Ma} + \frac{da}{a} \quad (9.94)$$

Finally, we can eliminate  $da/a$  because the flow is isentropic and hence  $a_0$  is constant for a perfect gas:

$$a = a_0 \left[ 1 + \frac{1}{2}(k - 1) \text{Ma}^2 \right]^{-1/2}$$

or

$$\frac{da}{a} = \frac{-\frac{1}{2}(k - 1) \text{Ma} d \text{Ma}}{1 + \frac{1}{2}(k - 1) \text{Ma}^2} \quad (9.95)$$

Eliminating  $dV/V$  and  $da/a$  from Eqs. (9.93) to (9.95), we obtain a relation solely between turning angle and Mach number:

$$d\theta = -\frac{(\text{Ma}^2 - 1)^{1/2}}{1 + \frac{1}{2}(k - 1) \text{Ma}^2} \frac{d \text{Ma}}{\text{Ma}} \quad (9.96)$$

Before integrating this expression, we note that the primary application is to expansions: increasing Ma and decreasing  $\theta$ . Therefore, for convenience, we define the Prandtl-Meyer angle  $\omega(\text{Ma})$ , which increases when  $\theta$  decreases and is zero at the sonic point:

$$d\omega = -d\theta \quad \omega = 0 \quad \text{at} \quad \text{Ma} = 1 \quad (9.97)$$

Thus we integrate Eq. (9.96) from the sonic point to any value of Ma:

$$\int_0^\omega d\omega = \int_1^{\text{Ma}} \frac{(\text{Ma}^2 - 1)^{1/2}}{1 + \frac{1}{2}(k - 1) \text{Ma}^2} \frac{d \text{Ma}}{\text{Ma}} \quad (9.98)$$

The integrals are evaluated in closed form, with the result, in radians,

$$\omega(\text{Ma}) = K^{1/2} \tan^{-1} \left( \frac{\text{Ma}^2 - 1}{K} \right)^{1/2} - \tan^{-1} (\text{Ma}^2 - 1)^{1/2} \quad (9.99)$$

where

$$K = \frac{k + 1}{k - 1}$$

This is the *Prandtl-Meyer supersonic expansion function*, which is plotted in Fig. 9.26 and tabulated in Table B.5 for  $k = 1.4$ ,  $K = 6$ . The angle  $\omega$  changes rapidly at first and then levels off at high Mach number to a limiting value as  $\text{Ma} \rightarrow \infty$ :


$$\omega_{\max} = \frac{\pi}{2} (K^{1/2} - 1) = 130.45^\circ \quad \text{if} \quad k = 1.4 \quad (9.100)$$

Thus a supersonic flow can expand only through a finite turning angle before it reaches infinite Mach number, maximum velocity, and zero temperature.

Gradual expansion or compression between finite Mach numbers  $\text{Ma}_1$  and  $\text{Ma}_2$ , neither of which is unity, is computed by relating the turning angle  $\Delta\omega$  to the difference in Prandtl-Meyer angles for the two conditions

$$\Delta\omega_{1 \rightarrow 2} = \omega(\text{Ma}_2) - \omega(\text{Ma}_1) \quad (9.101)$$

The change  $\Delta\omega$  may be either positive (expansion) or negative (compression) as long as the end conditions lie in the supersonic range. Let us illustrate with an example.

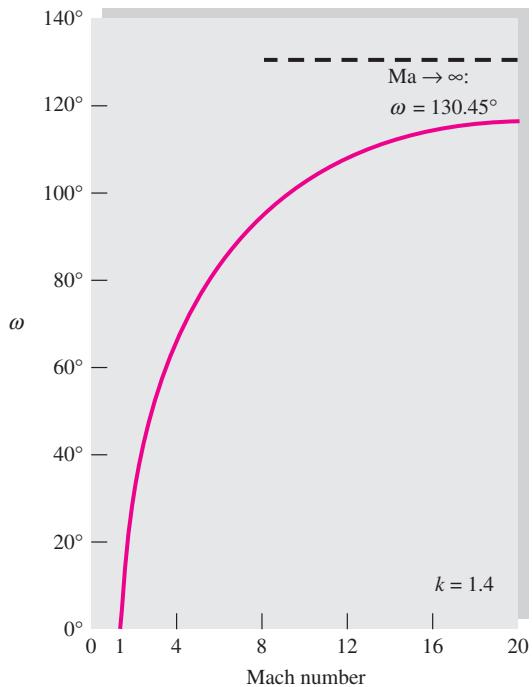

**Fig. 9.26** The Prandtl-Meyer super-sonic expansion from Eq. (9.99) for  $k = 1.4$ .

EES

### EXAMPLE 9.18

Air ( $k = 1.4$ ) flows at  $Ma_1 = 3.0$  and  $p_1 = 200$  kPa. Compute the final downstream Mach number and pressure for (a) an expansion turn of  $20^\circ$  and (b) a gradual compression turn of  $20^\circ$ .

#### Solution

##### Part (a)

The isentropic stagnation pressure is

$$p_0 = p_1 [1 + 0.2(3.0)^2]^{3.5} = 7347 \text{ kPa}$$

and this will be the same at the downstream point. For  $Ma_1 = 3.0$  we find from Table B.5 or Eq. (9.99) that  $\omega_1 = 49.757^\circ$ . The flow expands to a new condition such that

$$\omega_2 = \omega_1 + \Delta\omega = 49.757^\circ + 20^\circ = 69.757^\circ$$

EES

Inversion of Eq. (9.99), to find  $Ma$  when  $\omega$  is given, is impossible without iteration. Once again, our friend EES easily handles Eq. (9.99) with four statements (angles specified in degrees):

```
k = 1.4
```

```
C = ((k + 1) / (k - 1)) ^ 0.5
```

```
Omega = 69.757
```

```
Omega = C * ARCTAN((Ma ^ 2 - 1) ^ 0.5 / C) - ARCTAN((Ma ^ 2 - 1) ^ 0.5)
```

Specify that  $\text{Ma} > 1$ , and EES readily reports an accurate result:<sup>6</sup>

$$\text{Ma}_2 = 4.32$$

*Ans. (a)*

The isentropic pressure at this new condition is

$$p_2 = \frac{p_0}{[1 + 0.2(4.32)^2]^{3.5}} = \frac{7347}{230.1} = 31.9 \text{ kPa} \quad \text{Ans. (a)}$$

### Part (b)

The flow compresses to a lower Prandtl-Meyer angle:

$$\omega_2 = 49.757^\circ - 20^\circ = 29.757^\circ$$

Again from Eq. (9.99), Table B.5, or EES we compute that

$$\text{Ma}_2 = 2.125$$

*Ans. (b)*

$$p_2 = \frac{p_0}{[1 + 0.2(2.125)^2]^{3.5}} = \frac{7347}{9.51} = 773 \text{ kPa} \quad \text{Ans. (b)}$$

Similarly, we compute density and temperature changes by noticing that  $T_0$  and  $\rho_0$  are constant for isentropic flow.

## Application to Supersonic Airfoils


The oblique shock and Prandtl-Meyer expansion theories can be used to patch together a number of interesting and practical supersonic flow fields. This marriage, called *shock expansion theory*, is limited by two conditions: (1) Except in rare instances the flow must be supersonic throughout, and (2) the wave pattern must not suffer interference from waves formed in other parts of the flow field.

A very successful application of shock expansion theory is to supersonic airfoils. Figure 9.27 shows two examples, a flat plate and a diamond-shaped foil. In contrast to subsonic flow designs (Fig. 8.21), these airfoils must have sharp leading edges, which form attached oblique shocks or expansion fans. Rounded supersonic leading edges would cause detached bow shocks, as in Fig. 9.19 or 9.22b, greatly increasing the drag and lowering the lift.


In applying shock expansion theory, one examines each surface turning angle to see whether it is an expansion (“opening up”) or compression (obstruction) to the surface flow. Figure 9.27a shows a flat-plate foil at an angle of attack. There is a leading-edge shock on the lower edge with flow deflection  $\theta = \alpha$ , while the upper edge has an expansion fan with increasing Prandtl-Meyer angle  $\Delta\omega = \alpha$ . We compute  $p_3$  with expansion theory and  $p_2$  with oblique shock theory. The force on the plate is thus  $F = (p_2 - p_3)Cb$ , where  $C$  is the chord length and  $b$  the span width (assuming no wingtip effects). This force is normal to the plate, and thus the lift force normal to the stream is  $L = F \cos \alpha$ , and the drag parallel to the stream is  $D = F \sin \alpha$ . The dimensionless coefficients  $C_L$  and  $C_D$  have the same definitions as in low-speed flow, Eqs. (7.66), except that the perfect-gas law identity  $\frac{1}{2}\rho V^2 \equiv \frac{1}{2}kp \text{ Ma}^2$  is very useful here:

$$C_L = \frac{L}{\frac{1}{2}kp_\infty \text{ Ma}_\infty^2 bC} \quad C_D = \frac{D}{\frac{1}{2}kp_\infty \text{ Ma}_\infty^2 bC} \quad (9.102)$$

<sup>6</sup>The author saves these little programs for further use, giving them names such as *Prandtl-Meyer*.

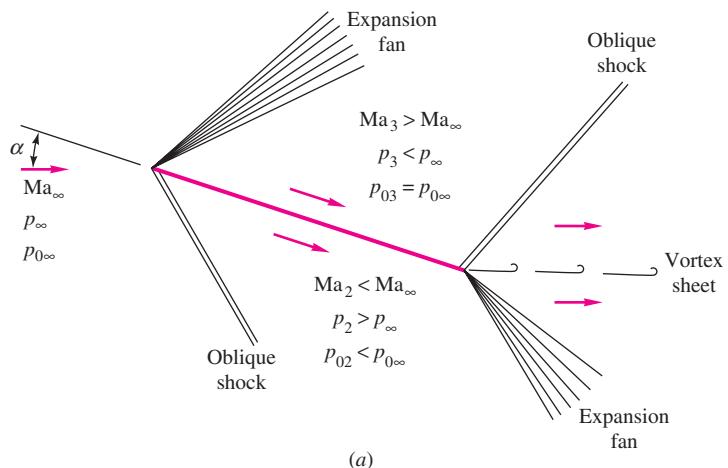

(a)

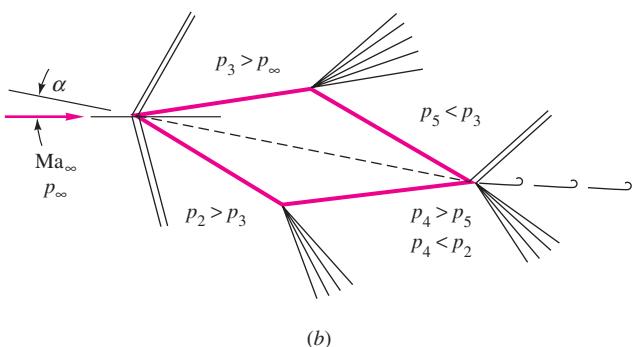

(b)

**Fig. 9.27** Supersonic airfoils:  
(a) flat plate, higher pressure on lower surface, drag due to small downstream component of net pressure force; (b) diamond foil, higher pressures on both lower surfaces, additional drag due to body thickness.

The typical supersonic lift coefficient is much smaller than the subsonic value  $C_L \approx 2\pi\alpha$ , but the lift can be very large because of the large value of  $\frac{1}{2}\rho V^2$  at supersonic speeds.

At the trailing edge in Fig. 9.27a, a shock and fan appear in reversed positions and bend the two flows back so that they are parallel in the wake and have the same pressure. They do not have quite the same velocity because of the unequal shock strengths on the upper and lower surfaces; hence a vortex sheet trails behind the wing. This is very interesting, but in the theory you ignore the trailing-edge pattern entirely, since it does not affect the surface pressures: The supersonic surface flow cannot “hear” the wake disturbances.

The diamond foil in Fig. 9.27b adds two more wave patterns to the flow. At this particular  $\alpha$  less than the diamond half-angle, there are leading-edge shocks on both surfaces, the upper shock being much weaker. Then there are expansion fans on each shoulder of the diamond: The Prandtl-Meyer angle change  $\Delta\omega$  equals the sum of the leading-edge and trailing-edge diamond half-angles. Finally, the trailing-edge pattern is similar to that of the flat plate (9.27a) and can be ignored in the calculation. Both lower-surface pressures  $p_2$  and  $p_4$  are greater than their upper counterparts, and the lift is nearly that of the flat plate. There is an additional drag due to thickness because  $p_4$  and  $p_5$  on the trailing surfaces are lower than their counterparts  $p_2$  and  $p_3$ . The diamond drag is greater than the flat-plate drag, but this must be endured in practice to achieve a wing structure strong enough to hold these forces.


The theory sketched in Fig. 9.27 is in good agreement with measured supersonic lift and drag as long as the Reynolds number is not too small (thick boundary layers) and the Mach number not too large (hypersonic flow). It turns out that for large  $Re_C$  and moderate supersonic  $Ma_\infty$  the boundary layers are thin and separation seldom occurs, so that the shock expansion theory, although frictionless, is quite successful. Let us look now at an example.

### EXAMPLE 9.19

A flat-plate airfoil with  $C = 2$  m is immersed at  $\alpha = 8^\circ$  in a stream with  $Ma_\infty = 2.5$  and  $p_\infty = 100$  kPa. Compute (a)  $C_L$  and (b)  $C_D$ , and compare with low-speed airfoils. Compute (c) lift and (d) drag in newtons per unit span width.

### Solution

Instead of using a lot of space outlining the detailed oblique shock and Prandtl-Meyer expansion computations, we list all pertinent results in Fig. E9.19 on the upper and lower surfaces. Using the theories of Secs. 9.9 and 9.10, you should verify every single one of the calculations in Fig. E9.19 to make sure that all details of shock expansion theory are well understood.

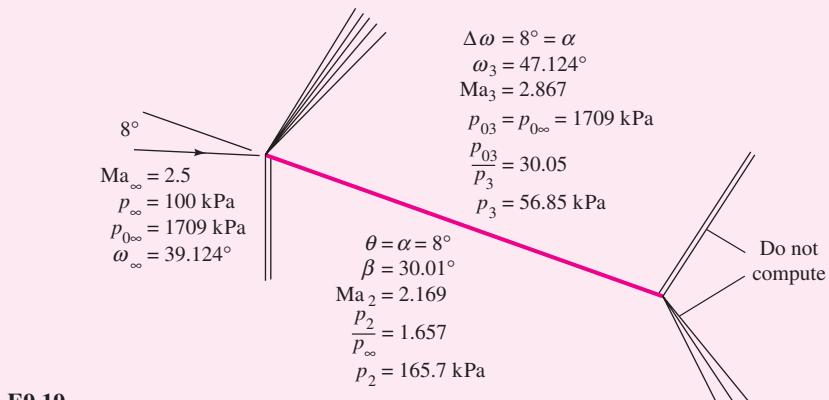

The important final results are  $p_2$  and  $p_3$ , from which the total force per unit width on the plate is

$$F = (p_2 - p_3)bC = (165.7 - 56.85)(kPa)(1\text{ m})(2\text{ m}) = 218\text{ kN}$$

The lift and drag per meter width are thus

$$L = F \cos 8^\circ = 216\text{ kN} \quad \text{Ans. (c)}$$

$$D = F \sin 8^\circ = 30\text{ kN} \quad \text{Ans. (d)}$$

These are very large forces for only  $2\text{ m}^2$  of wing area.

From Eq. (9.102) the lift coefficient is

$$C_L = \frac{216\text{ kN}}{\frac{1}{2}(1.4)(100\text{ kPa})(2.5)^2(2\text{ m}^2)} = 0.246 \quad \text{Ans. (a)}$$

The comparable low-speed coefficient from Eq. (8.67) is  $C_L = 2\pi \sin 8^\circ = 0.874$ , which is 3.5 times larger.

From Eq. (9.102) the drag coefficient is

$$C_D = \frac{30 \text{ kN}}{\frac{1}{2}(1.4)(100 \text{ kPa})(2.5)^2(2 \text{ m}^2)} = 0.035 \quad \text{Ans. (b)}$$

From Fig. 7.25 for the NACA 0009 airfoil  $C_D$  at  $\alpha = 8^\circ$  is about 0.009, or about 4 times smaller.

Notice that this supersonic theory predicts a finite drag in spite of assuming frictionless flow with infinite wing aspect ratio. This is called *wave drag*, and we see that the d'Alembert paradox of zero body drag does not occur in supersonic flow.

### Thin-Airfoil Theory

In spite of the simplicity of the flat-plate geometry, the calculations in Example 9.19 were laborious. In 1925 Ackeret [28] developed simple yet effective expressions for the lift, drag, and center of pressure of supersonic airfoils, assuming small thickness and angle of attack.

The theory is based on the linearized expression (9.89), where  $\tan \theta \approx$  surface deflection relative to the free stream and condition 1 is the free stream,  $\text{Ma}_1 = \text{Ma}_\infty$ . For the flat-plate airfoil, the total force  $F$  is based on

$$\begin{aligned} \frac{p_2 - p_3}{p_\infty} &= \frac{p_2 - p_\infty}{p_\infty} - \frac{p_3 - p_\infty}{p_\infty} \\ &= \frac{k \text{Ma}_\infty^2}{(\text{Ma}_\infty^2 - 1)^{1/2}} [\alpha - (-\alpha)] \end{aligned} \quad (9.103)$$

Substitution into Eq. (9.102) gives the linearized lift coefficient for a supersonic flat-plate airfoil:

$$C_L \approx \frac{(p_2 - p_3)bC}{\frac{1}{2}kp_\infty \text{Ma}_\infty^2 bC} \approx \frac{4\alpha}{(\text{Ma}_\infty^2 - 1)^{1/2}} \quad (9.104)$$

Computations for diamond and other finite-thickness airfoils show no first-order effect of thickness on lift. Therefore Eq. (9.104) is valid for any sharp-edged supersonic thin airfoil at a small angle of attack.

The flat-plate drag coefficient is

$$C_D = C_L \tan \alpha \approx C_L \alpha \approx \frac{4\alpha^2}{(\text{Ma}_\infty^2 - 1)^{1/2}} \quad (9.105)$$

However, the thicker airfoils have additional thickness drag. Let the chord line of the airfoil be the  $x$  axis, and let the upper-surface shape be denoted by  $y_u(x)$  and the lower profile by  $y_l(x)$ . Then the complete Ackeret drag theory (see Ref. 5, Sec. 14.6, for details) shows that the additional drag depends on the mean square of the slopes of the upper and lower surfaces, defined by

$$\overline{y'^2} = \frac{1}{C} \int_0^C \left( \frac{dy}{dx} \right)^2 dx \quad (9.106)$$

The final expression for drag [5, p. 442] is

$$C_D \approx \frac{4}{(\text{Ma}_\infty^2 - 1)^{1/2}} \left[ \alpha^2 + \frac{1}{2} (\bar{y}_u'^2 + \bar{y}_l'^2) \right] \quad (9.107)$$

These are all in reasonable agreement with more exact computations, and their extreme simplicity makes them attractive alternatives to the laborious but accurate shock expansion theory. Consider the following example.

### EXAMPLE 9.20

Repeat parts (a) and (b) of Example 9.19, using the linearized Ackeret theory.

#### Solution

From Eqs. (9.104) and (9.105) we have, for  $\text{Ma}_\infty = 2.5$  and  $\alpha = 8^\circ = 0.1396$  rad,

$$C_L \approx \frac{4(0.1396)}{(2.5^2 - 1)^{1/2}} = 0.244 \quad C_D = \frac{4(0.1396)^2}{(2.5^2 - 1)^{1/2}} = 0.034 \quad \text{Ans.}$$

These are less than 3 percent lower than the more exact computations of Example 9.19.

A further result of the Ackeret linearized theory is an expression for the position  $x_{CP}$  of the center of pressure (CP) of the force distribution on the wing:

$$\frac{x_{CP}}{C} = 0.5 + \frac{S_u - S_l}{2\alpha C^2} \quad (9.108)$$

where  $S_u$  is the cross-sectional area between the upper surface and the chord and  $S_l$  is the area between the chord and the lower surface. For a symmetric airfoil ( $S_l = S_u$ ) we obtain  $x_{CP}$  at the half-chord point, in contrast with the low-speed airfoil result of Eq. (8.69), where  $x_{CP}$  is at the quarter-chord.

The difference in difficulty between the simple Ackeret theory and shock expansion theory is even greater for a thick airfoil, as the following example shows.

### EXAMPLE 9.21

By analogy with Example 9.19 analyze a diamond, or double-wedge, airfoil of  $2^\circ$  half-angle and  $C = 2$  m at  $\alpha = 8^\circ$  and  $\text{Ma}_\infty = 2.5$ . Compute  $C_L$  and  $C_D$  by (a) shock expansion theory and (b) Ackeret theory. Pinpoint the difference from Example 9.19.

#### Solution


##### Part (a)

Again we omit the details of shock expansion theory and simply list the properties computed on each of the four airfoil surfaces in Fig. E9.21. Assume  $p_\infty = 100$  kPa. There are both a force  $F$  normal to the chord line and a force  $P$  parallel to the chord. For the normal force the pressure difference on the front half is  $p_2 - p_3 = 186.4 - 65.9 = 120.5$  kPa, and on the rear half it is  $p_4 - p_5 = 146.9 - 48.8 = 98.1$  kPa. The average pressure difference is  $\frac{1}{2}(120.5 + 98.1) = 109.3$  kPa, so that the normal force is

$$F = (109.3 \text{ kPa})(2 \text{ m}^2) = 218.6 \text{ kN}$$

For the chordwise force  $P$  the pressure difference on the top half is  $p_3 - p_5 = 65.9 - 48.8 = 17.1 \text{ kPa}$ , and on the bottom half it is  $p_2 - p_4 = 186.4 - 146.9 = 39.5 \text{ kPa}$ . The average difference is  $\frac{1}{2}(17.1 + 39.5) = 28.3 \text{ kPa}$ , which when multiplied by the frontal area (maximum thickness times 1-m width) gives

$$P = (28.3 \text{ kPa})(0.07 \text{ m})(1 \text{ m}) = 2.0 \text{ kN}$$

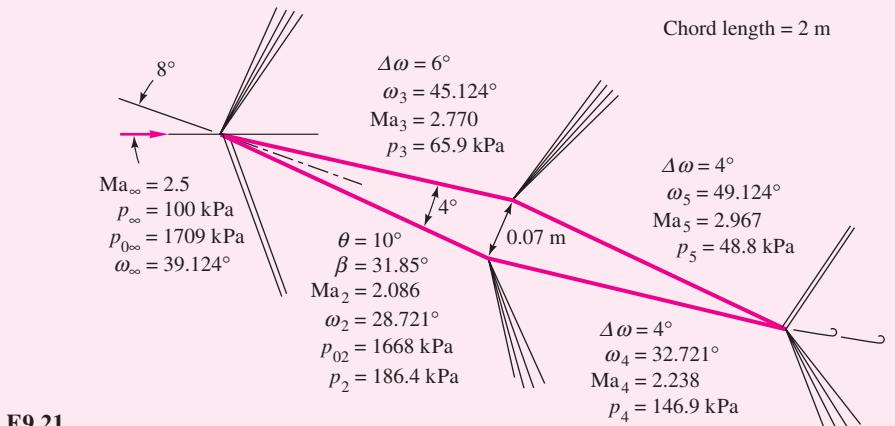

E9.21

Both  $F$  and  $P$  have components in the lift and drag directions. The lift force normal to the free stream is

$$L = F \cos 8^\circ - P \sin 8^\circ = 216.2 \text{ kN}$$

and

$$D = F \sin 8^\circ + P \cos 8^\circ = 32.4 \text{ kN}$$

For computing the coefficients, the denominator of Eq. (9.102) is the same as in Example 9.19:  $\frac{1}{2}k_p \infty \text{Ma}_\infty^2 b C = \frac{1}{2}(1.4)(100 \text{ kPa})(2.5)^2(2 \text{ m}^2) = 875 \text{ kN}$ . Thus, finally, shock expansion theory predicts

$$C_L = \frac{216.2 \text{ kN}}{875 \text{ kN}} = 0.247 \quad C_D = \frac{32.4 \text{ kN}}{875 \text{ kN}} = 0.0370 \quad \text{Ans. (a)}$$

### Part (b)

Meanwhile, by Ackeret theory,  $C_L$  is the same as in Example 9.20:

$$C_L = \frac{4(0.1396)}{(2.5^2 - 1)^{1/2}} = 0.244 \quad \text{Ans. (b)}$$

This is 1 percent less than the shock expansion result above. For the drag we need the mean-square slopes from Eq. (9.106):

$$\overline{y_u'^2} = \overline{y_l'^2} = \tan^2 2^\circ = 0.00122$$

Then Eq. (9.107) predicts this linearized result:

$$C_D = \frac{4}{(2.5^2 - 1)^{1/2}} [(0.1396)^2 + \frac{1}{2}(0.00122 + 0.00122)] = 0.0362 \quad \text{Ans. (b)}$$


This is 2 percent lower than shock expansion theory predicts. We could judge Ackeret theory to be "satisfactory." Ackeret theory predicts  $p_2 = 167 \text{ kPa}$  (-11 percent),  $p_3 = 60 \text{ kPa}$  (-9 percent),  $p_4 = 140 \text{ kPa}$  (-5 percent), and  $p_5 = 33 \text{ kPa}$  (-6 percent).

## Three-Dimensional Supersonic Flow


We have gone about as far as we can go in an introductory treatment of compressible flow. Of course, there is much more, and you are invited to study further in the references at the end of the chapter.

Three-dimensional supersonic flows are highly complex, especially if they concern blunt bodies, which therefore contain embedded regions of subsonic and transonic flow, as in Fig. 9.10. Some flows, however, yield to accurate theoretical treatment such as flow past a cone at zero incidence, as shown in Fig. 9.28. The exact theory of cone flow is discussed in advanced texts [for example, 5, Chap. 17], and extensive tables of such solutions have been published [25]. There are similarities between cone flow and the wedge flows illustrated in Fig. 9.22; an attached oblique shock, a thin turbulent boundary layer, and an expansion fan at the rear corner. However, the conical shock deflects the flow through an angle less than the cone half-angle, unlike the wedge shock. As in the wedge flow, there is a maximum cone angle above which the shock must detach, as in Fig. 9.22b. For  $k = 1.4$  and  $\text{Ma}_{\infty} = \infty$ , the maximum cone half-angle for an attached shock is about  $57^\circ$ , compared with the maximum wedge angle of  $45.6^\circ$  (see Ref. 25).

The use of computational fluid dynamics (CFD) is now very popular and successful in compressible flow studies [13]. For example, a supersonic cone flow such as Fig. 9.28, even at an angle of attack, can be solved by numerical simulation of the full three-dimensional (viscous) Navier-Stokes equations [26].

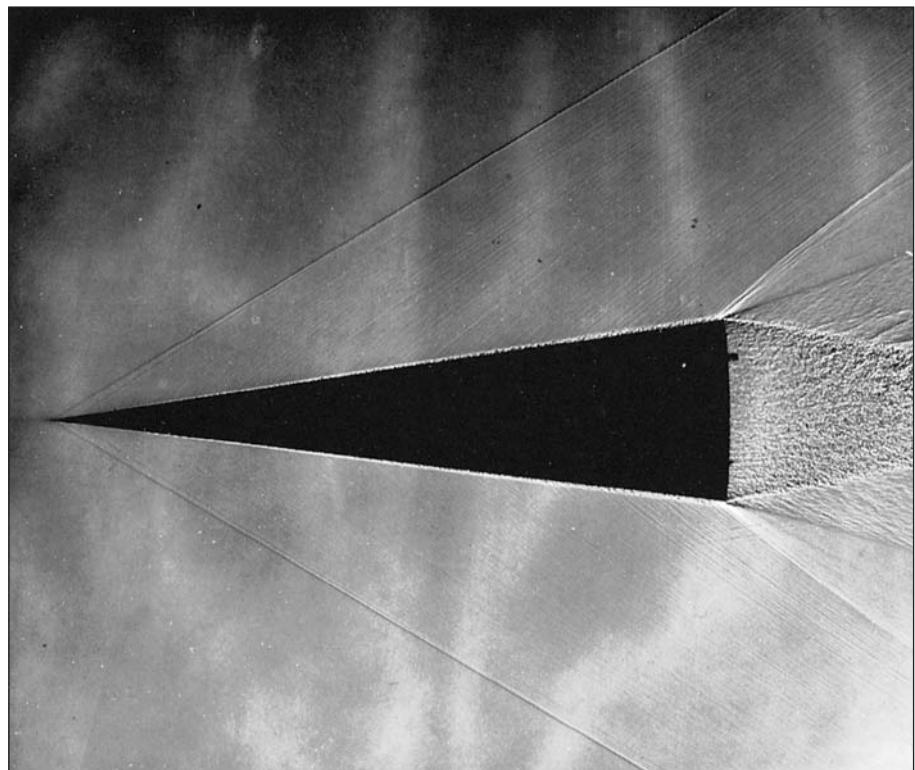

**Fig. 9.28** Shadowgraph of flow past an  $8^\circ$  half-angle cone at  $\text{Ma}_{\infty} = 2.0$ . The turbulent boundary layer is clearly visible. The Mach lines curve slightly, and the Mach number varies from 1.98 just inside the shock to 1.90 at the surface. (Courtesy of U.S. Army Ballistic Research Laboratory, Aberdeen Proving Ground.)

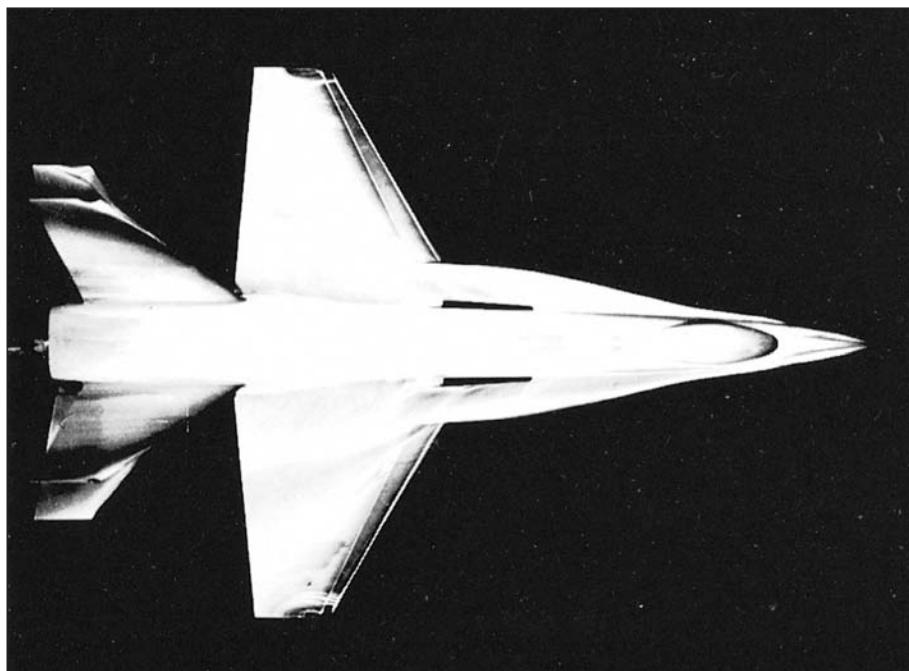

**Fig. 9.29** Wind tunnel test of the Cobra P-530 supersonic interceptor. The surface flow patterns are visualized by the smearing of oil droplets. (*Courtesy of Northrop Grumman.*)

For more complicated body shapes one usually resorts to experimentation in a supersonic wind tunnel. Figure 9.29 shows a wind tunnel study of supersonic flow past a model of an interceptor aircraft. The many junctions and wingtips and shape changes make theoretical analysis very difficult. Here the surface flow patterns, which indicate boundary layer development and regions of flow separation, have been visualized by the smearing of oil drops placed on the model surface before the test.

As we shall see in the next chapter, there is an interesting analogy between gas dynamic shock waves and the surface water waves that form in an open-channel flow. Chapter 11 of Ref. 9 explains how a water channel can be used in an inexpensive simulation of supersonic flow experiments.

### New Trends in Aeronautics

The previous edition of this text discussed the X-35 Joint Strike Fighter and two airliners, the Airbus A380 and the Boeing 787 Dreamliner. The Boeing 787 has been delayed by a worker strike and by weight and composite-material dilemmas. The 787 will not start deliveries until 2010 at the earliest. The Airbus A380 has also encountered production delays, but has at least 16 customers and, as of this date, has delivered 13 planes. Finally, the X-35 Joint Strike Fighter is caught in a cost bind, exacerbated by the worldwide economic slowdown. The Obama administration will have to decide how to compromise between the X-35 and the speedier, costlier, and more maneuverable F-22 fighter.

NASA is exploring an aeronautical dream—to fly, for example, from New York to Tokyo in two hours. In other words, they are designing a *hypersonic* ( $\text{Ma} \geq 6$ ) airplane, called the X43-A [30]. Conventional turbojet and ramjet engines are very inefficient at such high speeds. The proposed solution is a *scramjet* (supersonic combustion) ramjet. An artist's sketch of the aircraft is shown in Fig. 9.30.



**Fig. 9.30** The proposed X-43A hypersonic airplane. The scramjet engine is underneath. Air passing through the engine remains fully supersonic. (*Courtesy of the X-43A Development Team, DFRC, NASA.*)

Unlike conventional jet engines, the scramjet admits supersonic air, without causing shock waves, and also achieves supersonic combustion and exhausts at supersonic speeds. The drawback is that scramjets are extremely inefficient at low speeds, such as take-off and climbing. Tests to date of the X43-A have been accomplished by dropping the plane from a B-52 bomber and then accelerating it with a Pegasus rocket. When the scramjet kicks in, speeds greater than Mach 7 have been reached. This is twice the speed of the record set by the Air Force SR-71 Blackbird in 1990.

## Summary

This chapter briefly introduced a very broad subject, compressible flow, sometimes called *gas dynamics*. The primary parameter is the Mach number  $\text{Ma} = V/a$ , which is large and causes the fluid density to vary significantly. This means that the continuity and momentum equations must be coupled to the energy relation and the equation of state to solve for the four unknowns ( $p$ ,  $\rho$ ,  $T$ ,  $V$ ).

The chapter reviewed the thermodynamic properties of an ideal gas and derived a formula for the speed of sound of a fluid. The analysis was then simplified to one-dimensional steady adiabatic flow without shaft work, for which the stagnation enthalpy of the gas is constant. A further simplification to isentropic flow enables formulas to be derived for high-speed gas flow in a variable-area duct. This reveals the phenomenon of sonic-flow *choking* (maximum mass flow) in the throat of a nozzle. At supersonic velocities there is the possibility of a normal shock wave, where the gas discontinuously reverts to subsonic conditions. The normal shock explains the effect of back pressure on the performance of converging-diverging nozzles.

To illustrate nonisentropic flow conditions, the chapter briefly focused on constant-area duct flow with friction and with heat transfer, both of which lead to choking of the exit flow.

The chapter ended with a discussion of two-dimensional supersonic flow, where oblique shock waves and Prandtl-Meyer (isentropic) expansion waves appear. With a proper combination of shocks and expansions one can analyze supersonic airfoils.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon  will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon  may require the use of a computer. The standard end-of-chapter problems P9.1 to P9.157 (categorized in the problem list here) are followed by word problems W9.1 to W9.8, fundamentals of engineering exam problems FE9.1 to FE9.10, comprehensive problems C9.1 to C9.8, and design projects D9.1 and D9.2.

### Problem Distribution

Section	Topic	Problems
9.1	Introduction	P9.1–P9.9
9.2	The speed of sound	P9.10–P9.18
9.3	Adiabatic and isentropic flow	P9.19–P9.33
9.4	Isentropic flow with area changes	P9.34–P9.53
9.5	The normal shock wave	P9.54–P9.62
9.6	Converging and diverging nozzles	P9.63–P9.85
9.7	Duct flow with friction	P9.86–P9.106
9.8	Frictionless duct flow with heat transfer	P9.107–P9.115
9.9	Mach waves	P9.116–P9.121
9.9	The oblique shock wave	P9.122–P9.139
9.10	Prandtl-Meyer expansion waves	P9.140–P9.148
9.10	Supersonic airfoils	P9.149–P9.157

Farther downstream,  $p_2 = 30 \text{ kPa}$  and  $T_2 = 207^\circ\text{C}$ . Calculate  $V_2$  in m/s and  $s_2 - s_1$  in J/(kg · K) if the gas is (a) air,  $k = 1.4$ , and (b) argon,  $k = 1.67$ .

**P9.2** Solve Prob. P9.1 if the gas is steam. Use two approaches: (a) an ideal gas from Table A.4 and (b) real gas data from the steam tables [15].

If 8 kg of oxygen in a closed tank at  $200^\circ\text{C}$  and 300 kPa is heated until the pressure rises to 400 kPa, calculate (a) the new temperature, (b) the total heat transfer, and (c) the change in entropy.

**P9.4** Consider steady adiabatic airflow in a duct. At section B, the pressure is 154 kPa and the density is  $1.137 \text{ kg/m}^3$ . At section D, the pressure is 28.2 kPa and the temperature is  $-19^\circ\text{C}$ . (a) Find the entropy change, if any. (b) Which way is the air flowing?

**P9.5** Steam enters a nozzle at  $377^\circ\text{C}$ , 1.6 MPa, and a steady speed of 200 m/s and accelerates isentropically until it exits at saturation conditions. Estimate the exit velocity and temperature.

**P9.6** Use EES, other software, or the gas tables to estimate  $c_p$  and  $c_v$ , their ratio, and their difference, for  $\text{CO}_2$  at 800 K and compare with ideal-gas estimates similar to Eqs. (9.4).

**P9.7** Air flows through a variable-area duct. At section 1,  $A_1 = 20 \text{ cm}^2$ ,  $p_1 = 300 \text{ kPa}$ ,  $\rho_1 = 1.75 \text{ kg/m}^3$ , and  $V_1 = 122.5 \text{ m/s}$ . At section 2, the area is exactly the same, but the density is much lower:  $\rho_2 = 0.266 \text{ kg/m}^3$  and  $T_2 = 281 \text{ K}$ . There is no transfer of work or heat. Assume one-dimensional steady flow. (a) How can you reconcile these differences? (b) Find the mass flow at section 2. Calculate (c)  $V_2$ , (d)  $p_2$ , and (e)  $s_2 - s_1$ . Hint: This problem requires the continuity equation.

## Introduction

**P9.1** An ideal gas flows adiabatically through a duct. At section 1,  $p_1 = 140 \text{ kPa}$ ,  $T_1 = 260^\circ\text{C}$ , and  $V_1 = 75 \text{ m/s}$ .

- P9.8** Atmospheric air at 20°C enters and flows an insulated tank that is initially evacuated. Using a control volume analysis from Eq. (3.67), compute the tank air temperature when it is full.
- P9.9** Liquid hydrogen and oxygen are burned in a combustion chamber and fed through a rocket nozzle that exhausts at  $V_{\text{exit}} = 1600 \text{ m/s}$  to an ambient pressure of 54 kPa. The nozzle exit diameter is 45 cm, and the jet exit density is  $0.15 \text{ kg/m}^3$ . If the exhaust gas has a molecular weight of 18, estimate (a) the exit gas temperature, (b) the mass flow, and (c) the thrust developed by the rocket.


### The speed of sound

- P9.10** A certain aircraft flies at the same Mach number regardless of its altitude. Compared to its speed at 12,000-m standard altitude, it flies 127 km/h faster at sea level. Determine its Mach number.
- P9.11** At 300°C and 1 atm, estimate the speed of sound of (a) nitrogen, (b) hydrogen, (c) helium, (d) steam, and (e)  $^{238}\text{UF}_6$  ( $k \approx 1.06$ ).
- P9.12** Assume that water follows Eq. (1.19) with  $n \approx 7$  and  $B \approx 3000$ . Compute the bulk modulus (in kPa) and the speed of sound (in m/s) at (a) 1 atm and (b) 1100 atm (the deepest part of the ocean). (c) Compute the speed of sound at 20°C and 9000 atm and compare with the measured value of 2650 m/s (A. H. Smith and A. W. Lawson, *J. Chem. Phys.*, vol. 22, 1954, p. 351).
- P9.13** Consider steam at 500 K and 200 kPa. Estimate its speed of sound by three different methods: (a) using the handy new EES thermophysical function SOUNDSPED(Steam,  $p = p_1$ ,  $T = T_1$ ), (b) assuming an ideal gas from Table B.4, or (c) using finite differences for isentropic densities between 210 kPa and 190 kPa.
- P9.14** At 1 atm and 20°C, the density of methyl alcohol is 49.4 lbm/ft<sup>3</sup>. At 300 atm, its density increases to 50.9 lbm/ft<sup>3</sup>. Use this data to estimate the speed of sound. Comment on the possible uncertainty of this estimate.
- P9.15** The pressure-density relation for ethanol is approximated by Eq. (1.19) with  $B = 1600$  and  $n = 7$ . Use this relation to estimate the speed of sound of ethanol at 2000 atmospheres.
- P9.16** A weak pressure pulse  $\Delta p$  propagates through still air. Discuss the type of reflected pulse that occurs and the boundary conditions that must be satisfied when the wave strikes normal to, and is reflected from, (a) a solid wall and (b) a free liquid surface.
- P9.17** A submarine at a depth of 800 m sends a sonar signal and receives the reflected wave back from a similar submerged object in 15 s. Using Prob. P9.12 as a guide, estimate the distance to the other object.
- P9.18** Race cars at the Indianapolis Speedway average speeds of 185 mi/h. After determining the altitude of Indianapolis,

find the Mach number of these cars and estimate whether compressibility might affect their aerodynamics.

### Adiabatic and isentropic flow

- P9.19** In 1976, the SR-71A, flying at 20 km standard altitude, set a jet-powered aircraft speed record of 3326 km/h. Estimate the temperature, in °C, at its front stagnation point. At what Mach number would it have a front stagnation-point temperature of 500°C?
- P9.20** Air flows isentropically in a channel. Properties at section 1 are  $V_1 = 250 \text{ m/s}$ ,  $T_1 = 330 \text{ K}$ , and  $p_1 = 80 \text{ kPa}$ . At section 2 downstream, the temperature has dropped to 0°C. Find (a) the pressure, (b) velocity, and (c) Mach number at section 2.
- P9.21** CO<sub>2</sub> expands isentropically through a duct from  $p_1 = 125 \text{ kPa}$  and  $T_1 = 100^\circ\text{C}$  to  $p_2 = 80 \text{ kPa}$  and  $V_2 = 325 \text{ m/s}$ . Compute (a)  $T_2$ , (b)  $\text{Ma}_2$ , (c)  $T_0$ , (d)  $p_0$ , (e)  $V_1$ , and (f)  $\text{Ma}_1$ .
- P9.22** Given the pitot stagnation temperature and pressure and the static pressure measurements in Fig. P9.22, estimate the air velocity  $V$ , assuming (a) incompressible flow and (b) compressible flow.

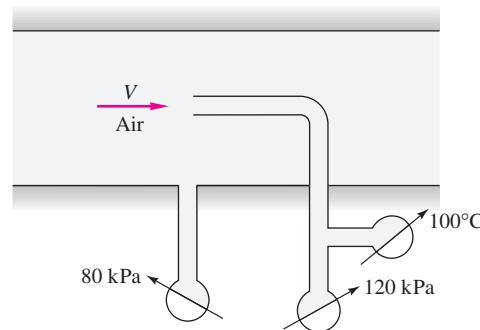

**P9.22**


- P9.23** A gas, assumed ideal, flows isentropically from point 1, where the velocity is negligible, the pressure is 200 kPa, and the temperature is 300°C, to point 2, where the pressure is 40 kPa. What is the Mach number  $\text{Ma}_2$  if the gas is (a) air, (b) argon, or (c) CH<sub>4</sub>? (d) Can you tell, without calculating, which gas will be the coldest at point 2?
- P9.24** For low-speed (nearly incompressible) gas flow, the stagnation pressure can be computed from Bernoulli's equation:

$$p_0 = p + \frac{1}{2} \rho V^2$$

(a) For higher subsonic speeds, show that the isentropic relation (9.28a) can be expanded in a power series as follows:

$$p_0 \approx p + \frac{1}{2} \rho V^2 \left( 1 + \frac{1}{4} \text{Ma}^2 + \frac{2-k}{24} \text{Ma}^4 + \dots \right)$$

- (b) Suppose that a pitot-static tube in air measures the pressure difference  $p_0 - p$  and uses the Bernoulli relation, with stagnation density, to estimate the gas velocity. At what Mach number will the error be 4 percent?
- P9.25** If it is known that the air velocity in the duct is 750 ft/s, use the mercury manometer measurement in Fig. P9.25 to estimate the static pressure in the duct in  $\text{lbf/in}^2$  absolute.

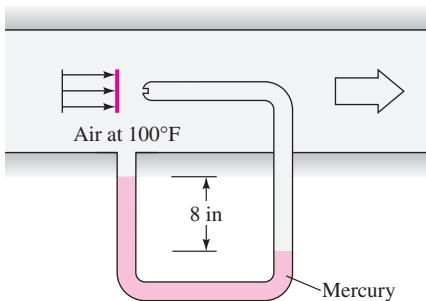

P9.25

- P9.26** Show that for isentropic flow of a perfect gas if a pitot-static probe measures  $p_0$ ,  $p$ , and  $T_0$ , the gas velocity can be calculated from

$$V^2 = 2c_p T_0 \left[ 1 - \left( \frac{p}{p_0} \right)^{(k-1)/k} \right]$$

What would be a source of error if a shock wave were formed in front of the probe?

- P9.27** A pitot tube, mounted on an airplane flying at 8000 m standard altitude, reads a stagnation pressure of 57 kPa. Estimate the plane's (a) velocity and (b) Mach number.


- P9.28** A large vacuum tank, held at 60 kPa absolute, sucks sea-level standard air through a converging nozzle whose throat diameter is 3 cm. Estimate (a) the mass flow rate through the nozzle and (b) the Mach number at the throat.

- P9.29** Steam from a large tank, where  $T = 400^\circ\text{C}$  and  $p = 1 \text{ MPa}$ , expands isentropically through a nozzle until, at a section of 2-cm diameter, the pressure is 500 kPa. Using EES or the steam tables [15], estimate (a) the temperature, (b) the velocity, and (c) the mass flow at this section. Is the flow subsonic?

- P9.30** When does the incompressible-flow assumption begin to fail for pressures? Construct a graph of  $p_0/p$  for incompressible flow of a perfect gas as compared to Eq. (9.28a). Plot both versus Mach number for  $0 \leq \text{Ma} \leq 0.6$  and decide for yourself where the deviation is too great.

- P9.31** Air flows adiabatically through a duct. At one section  $V_1 = 400 \text{ ft/s}$ ,  $T_1 = 200^\circ\text{F}$ , and  $p_1 = 35 \text{ lbf/in}^2$  absolute, while farther downstream  $V_2 = 1100 \text{ ft/s}$  and  $p_2 = 18 \text{ lbf/in}^2$  absolute. Compute (a)  $\text{Ma}_2$ , (b)  $U_{\max}$ , and (c)  $p_{02}/p_{01}$ .

- P9.32** The large compressed-air tank in Fig. P9.32 exhausts from a nozzle at an exit velocity of 235 m/s. The mercury manometer reads  $h = 30 \text{ cm}$ . Assuming isentropic flow, compute the pressure (a) in the tank and (b) in the atmosphere. (c) What is the exit Mach number?

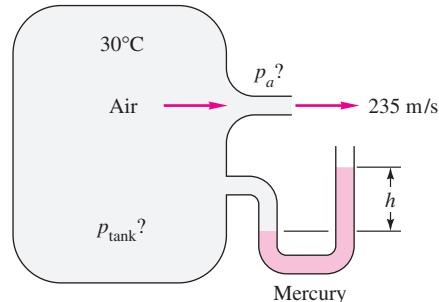

P9.32

- P9.33** Air flows isentropically from a reservoir, where  $p = 300 \text{ kPa}$  and  $T = 500 \text{ K}$ , to section 1 in a duct, where  $A_1 = 0.2 \text{ m}^2$  and  $V_1 = 550 \text{ m/s}$ . Compute (a)  $\text{Ma}_1$ , (b)  $T_1$ , (c)  $p_1$ , (d)  $\dot{m}$ , and (e)  $A^*$ . Is the flow choked?

### Isentropic flow with area changes

- P9.34** Carbon dioxide, in a large tank at  $100^\circ\text{C}$  and  $151 \text{ kPa}$ , exhausts to 1 atm through a converging nozzle whose throat area is  $5 \text{ cm}^2$ . Using isentropic ideal-gas theory, calculate (a) the exit temperature and (b) the mass flow.


- P9.35** Helium, at  $T_0 = 400 \text{ K}$ , enters a nozzle isentropically. At section 1, where  $A_1 = 0.1 \text{ m}^2$ , a pitot-static arrangement (see Fig. P9.25) measures stagnation pressure of 150 kPa and static pressure of 123 kPa. Estimate (a)  $\text{Ma}_1$ , (b) mass flow  $\dot{m}$ , (c)  $T_1$ , and (d)  $A^*$ .

- P9.36** An air tank of volume  $1.5 \text{ m}^3$  is initially at  $800 \text{ kPa}$  and  $20^\circ\text{C}$ . At  $t = 0$ , it begins exhausting through a converging nozzle to sea-level conditions. The throat area is  $0.75 \text{ cm}^2$ . Estimate (a) the initial mass flow in  $\text{kg/s}$ , (b) the time required to blow down to  $500 \text{ kPa}$ , and (c) the time at which the nozzle ceases being choked.

- P9.37** Make an exact control volume analysis of the blowdown process in Fig. P9.37, assuming an insulated tank with negligible kinetic and potential energy within. Assume critical flow at the exit, and show that both  $p_0$  and  $T_0$  decrease during blowdown. Set up first-order differential equations for  $p_0(t)$  and  $T_0(t)$ , and reduce and solve as far as you can. Prob. P9.37 makes an ideal senior project or combined laboratory and computer problem, as described in Ref. 27, Sec. 8.6. In Bober and Kenyon's lab experiment, the tank had a volume of  $0.0352 \text{ ft}^3$  and was initially filled with air at  $50 \text{ lb/in}^2$  gage and  $72^\circ\text{F}$ . Atmospheric pressure was  $14.5 \text{ lb/in}^2$  absolute, and the nozzle exit diameter was  $0.05 \text{ in}$ . After 2 s of blowdown, the measured tank pressure was

- P9.38** Prob. P9.37 makes an ideal senior project or combined laboratory and computer problem, as described in Ref. 27, Sec. 8.6. In Bober and Kenyon's lab experiment, the tank had a volume of  $0.0352 \text{ ft}^3$  and was initially filled with air at  $50 \text{ lb/in}^2$  gage and  $72^\circ\text{F}$ . Atmospheric pressure was  $14.5 \text{ lb/in}^2$  absolute, and the nozzle exit diameter was  $0.05 \text{ in}$ . After 2 s of blowdown, the measured tank pressure was


20 lb/in<sup>2</sup> gage and the tank temperature was  $-5^{\circ}\text{F}$ . Compare these values with the theoretical analysis of Prob. P9.37.

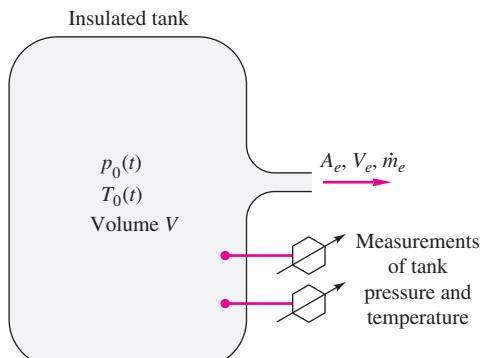

P9.37

- P9.39** Consider isentropic flow in a channel of varying area, from section 1 to section 2. We know that  $\text{Ma}_1 = 2.0$  and desire that the velocity ratio  $V_2/V_1$  be 1.2. Estimate (a)  $\text{Ma}_2$  and (b)  $A_2/A_1$ . (c) Sketch what this channel looks like. For example, does it converge or diverge? Is there a throat?
- P9.40** Steam, in a tank at 300 kPa and 600 K, discharges isentropically to a low-pressure atmosphere through a converging nozzle with exit area 5 cm<sup>2</sup>. (a) Using an ideal gas approximation from Table B.4, estimate the mass flow. (b) Without actual calculations, indicate how you would use real properties of steam, from EES, to find the mass flow.
- P9.41** Air, with a stagnation pressure of 100 kPa, flows through the nozzle in Fig. P9.41, which is 2 m long and has an area variation approximated by

$$A \approx 20 - 20x + 10x^2$$

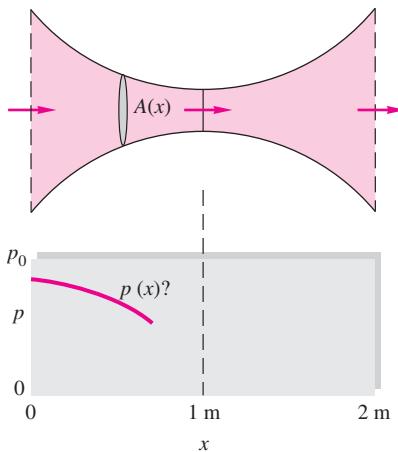


P9.41

with  $A$  in cm<sup>2</sup> and  $x$  in m. It is desired to plot the complete family of isentropic pressures  $p(x)$  in this nozzle, for the range of inlet pressures  $1 < p(0) < 100$  kPa. Indicate which inlet pressures are not physically possible and discuss briefly. If your computer has an online graphics routine, plot at least 15 pressure profiles; otherwise just hit the highlights and explain.

- P9.42** A bicycle tire is filled with air at an absolute pressure of 169.12 kPa, and the temperature inside is 30.0°C. Suppose the valve breaks, and air starts to exhaust out of the tire into the atmosphere ( $p_a = 100$  kPa absolute and  $T_a = 20.0^{\circ}\text{C}$ ). The valve exit is 2.00 mm in diameter and is the smallest cross-sectional area of the entire system. Frictional losses can be ignored here; one-dimensional isentropic flow is a reasonable assumption. (a) Find the Mach number, velocity, and temperature at the exit plane of the valve (initially). (b) Find the initial mass flow rate out of the tire. (c) Estimate the velocity at the exit plane using the incompressible Bernoulli equation. How well does this estimate agree with the “exact” answer of part (a)? Explain.
- P9.43** Air flows isentropically through a variable-area duct. At section 1,  $A_1 = 20$  cm<sup>2</sup>,  $p_1 = 300$  kPa,  $\rho_1 = 1.75$  kg/m<sup>3</sup>, and  $\text{Ma}_1 = 0.25$ . At section 2, the area is exactly the same, but the flow is much faster. Compute (a)  $V_2$ , (b)  $\text{Ma}_2$ , (c)  $T_2$ , and (d) the mass flow. (e) Is there a sonic throat between sections 1 and 2? If so, find its area.
- P9.44** In Prob. P3.34 we knew nothing about compressible flow at the time, so we merely assumed exit conditions  $p_2$  and  $T_2$  and computed  $V_2$  as an application of the continuity equation. Suppose that the throat diameter is 3 in. For the given stagnation conditions in the rocket chamber in Fig. P3.34 and assuming  $k = 1.4$  and a molecular weight of 26, compute the actual exit velocity, pressure, and temperature according to one-dimensional theory. If  $p_a = 14.7$  lbf/in<sup>2</sup> absolute, compute the thrust from the analysis of Prob. P3.68. This thrust is entirely independent of the stagnation temperature (check this by changing  $T_0$  to 2000°R if you like). Why?
- P9.45** Air flows isentropically from a large tank through a variable-area nozzle. At section 1, where  $A_1 = 12$  cm<sup>2</sup>, conditions are  $p_1 = 20.5$  kPa,  $T_1 = 232$  K, and  $V_1 = 733$  m/s. Find (a) the mass flow, (b)  $\text{Ma}_1$ , (c) the throat area, and (d) the pressure and temperature in the tank.
- P9.46** A one-dimensional isentropic airflow has the following properties at one section where the area is 53 cm<sup>2</sup>:  $p = 12$  kPa,  $\rho = 0.182$  kg/m<sup>3</sup>, and  $V = 760$  m/s. Determine (a) the throat area, (b) the stagnation temperature, and (c) the mass flow.
- P9.47** In wind tunnel testing near Mach 1, a small area decrease caused by model blockage can be important. Suppose the test section area is 1 m<sup>2</sup>, with unblocked test conditions

$\text{Ma} = 1.10$  and  $T = 20^\circ\text{C}$ . What model area will first cause the test section to choke? If the model cross section is  $0.004 \text{ m}^2$  (0.4 percent blockage), what percentage change in test section velocity results?

- P9.48** A force  $F = 1100 \text{ N}$  pushes a piston of diameter 12 cm through an insulated cylinder containing air at  $20^\circ\text{C}$ , as in Fig. P9.48. The exit diameter is 3 mm, and  $p_a = 1 \text{ atm}$ . Estimate (a)  $V_e$ , (b)  $V_p$ , and (c)  $\dot{m}_e$ .

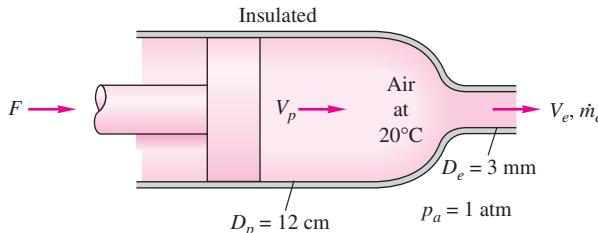**P9.48**

- P9.49** Consider the venturi nozzle of Fig. 6.40c, with  $D = 5 \text{ cm}$  and  $d = 3 \text{ cm}$ . Stagnation temperature is  $300 \text{ K}$ , and the upstream velocity  $V_1 = 72 \text{ m/s}$ . If the throat pressure is  $124 \text{ kPa}$ , estimate, with isentropic flow theory, (a)  $p_1$ , (b)  $\text{Ma}_2$ , and (c) the mass flow.

- P9.50** Carbon dioxide is stored in a tank at  $100 \text{ kPa}$  and  $330 \text{ K}$ . It discharges to a second tank through a converging nozzle whose exit area is  $5 \text{ cm}^2$ . What is the initial mass flow rate if the second tank has a pressure of (a)  $70 \text{ kPa}$  or (b)  $40 \text{ kPa}$ ?

- P9.51** The scramjet engine of Fig. 9.30 is supersonic throughout. A sketch is shown in Fig. C9.8. Test the following design. The flow enters at  $\text{Ma} = 7$  and air properties for  $10,000 \text{ m}$  altitude. Inlet area is  $1 \text{ m}^2$ , the minimum area is  $0.1 \text{ m}^2$ , and the exit area is  $0.8 \text{ m}^2$ . If there is no combustion, (a) will the flow still be supersonic in the throat? Also, determine (b) the exit Mach number, (c) exit velocity, and (d) exit pressure.


- P9.52** A converging-diverging nozzle exits smoothly to sea-level standard atmosphere. It is supplied by a  $40\text{-m}^3$  tank initially at  $800 \text{ kPa}$  and  $100^\circ\text{C}$ . Assuming isentropic flow in the nozzle, estimate (a) the throat area and (b) the tank pressure after 10 s of operation. The exit area is  $10 \text{ cm}^2$ .

- P9.53** Air flows steadily from a reservoir at  $20^\circ\text{C}$  through a nozzle of exit area  $20 \text{ cm}^2$  and strikes a vertical plate as in Fig. P9.53. The flow is subsonic throughout. A force of  $135 \text{ N}$  is required to hold the plate stationary. Compute (a)  $V_e$ , (b)  $\text{Ma}_e$ , and (c)  $p_0$  if  $p_a = 101 \text{ kPa}$ .

### The normal shock wave

- P9.54** The airflow in Prob. P9.46 undergoes a normal shock just past the section where data was given. Determine


the (a) Mach number, (b) pressure, and (c) velocity just downstream of the shock.

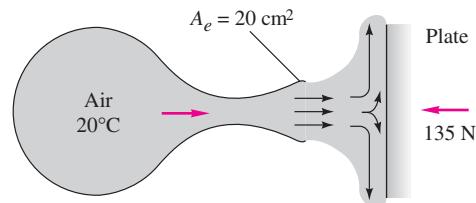**P9.53**

- P9.55** Air, supplied by a reservoir at  $450 \text{ kPa}$ , flows through a converging-diverging nozzle whose throat area is  $12 \text{ cm}^2$ . A normal shock stands where  $A_1 = 20 \text{ cm}^2$ . (a) Compute the pressure just downstream of this shock. Still farther downstream, at  $A_3 = 30 \text{ cm}^2$ , estimate (b)  $p_3$ , (c)  $A_3^*$ , and (d)  $\text{Ma}_3$ .

- P9.56** Air from a reservoir at  $20^\circ\text{C}$  and  $500 \text{ kPa}$  flows through a duct and forms a normal shock downstream of a throat of area  $10 \text{ cm}^2$ . By an odd coincidence it is found that the stagnation pressure downstream of this shock exactly equals the throat pressure. What is the area where the shock wave stands?

- P9.57** Air flows from a tank through a nozzle into the standard atmosphere, as in Fig. P9.57. A normal shock stands in the exit of the nozzle, as shown. Estimate (a) the pressure in the tank and (b) the mass flow.

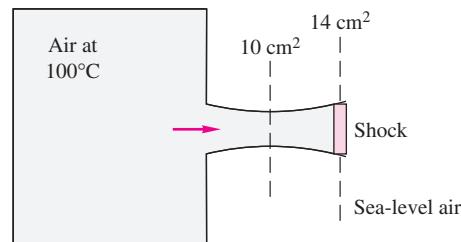**P9.57**

- P9.58** The data of Prob. P9.4 represent conditions before and after a normal shock wave. If the velocity at section B is  $238 \text{ m/s}$ , what are (a) the velocity at D, (b) the stagnation temperature, (c) the stagnation pressure at D, and (d) the Mach number at section D?

- P9.59** Air, at stagnation conditions of  $450 \text{ K}$  and  $250 \text{ kPa}$ , flows through a nozzle. At section 1, where the area is  $15 \text{ cm}^2$ , there is a normal shock wave. If the mass flow is  $0.4 \text{ kg/s}$ , estimate (a) the Mach number and (b) the stagnation pressure just downstream of the shock.


- P9.60** When a pitot tube such as in Fig. 6.30 is placed in a supersonic flow, a normal shock will stand in front of the probe. Suppose the probe reads  $p_0 = 190 \text{ kPa}$  and  $p = 150 \text{ kPa}$ .

If the stagnation temperature is 400 K, estimate the (supersonic) Mach number and velocity upstream of the shock.

- P9.61** Air flows from a large tank, where  $T = 376$  K and  $p = 360$  kPa, to a design condition where the pressure is 9800 Pa. The mass flow is 0.9 kg/s. However, there is a normal shock in the exit plane just after this condition is reached. Estimate (a) the throat area and, just downstream of the shock, (b) the Mach number, (c) the temperature, and (d) the pressure.
- P9.62** An atomic explosion propagates into still air at 14.7 lbf/in<sup>2</sup> absolute and 520°R. The pressure just inside the shock is 5000 lbf/in<sup>2</sup> absolute. Assuming  $k = 1.4$ , what are the speed  $C$  of the shock and the velocity  $V$  just inside the shock?

### Converging and diverging nozzles


- P9.63** Sea-level standard air is sucked into a vacuum tank through a nozzle, as in Fig. P9.63. A normal shock stands where the nozzle area is 2 cm<sup>2</sup>, as shown. Estimate (a) the pressure in the tank and (b) the mass flow.

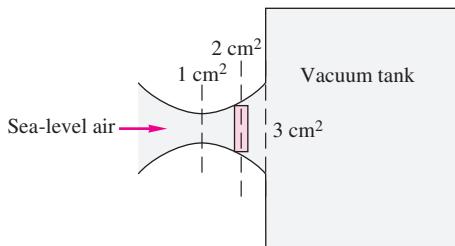

**P9.63**

- P9.64** Air, from a reservoir at 350 K and 500 kPa, flows through a converging-diverging nozzle. The throat area is 3 cm<sup>2</sup>. A normal shock appears, for which the downstream Mach number is 0.6405. (a) What is the area where the shock appears? Calculate (b) the pressure and (c) the temperature downstream of the shock.

- P9.65** Air flows through a converging-diverging nozzle between two large reservoirs, as shown in Fig. P9.65. A mercury manometer between the throat and the downstream reservoir reads  $h = 15$  cm. Estimate the downstream reservoir pressure. Is there a normal shock in the flow? If so, does it stand in the exit plane or farther upstream?

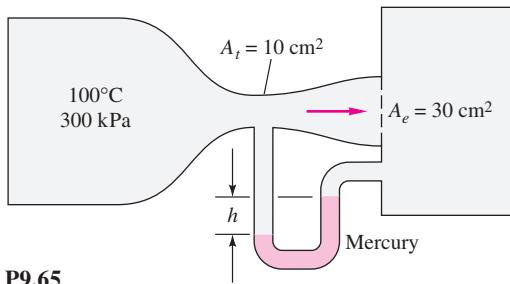

**P9.65**

- P9.66** In Prob. P9.65 what would be the mercury manometer reading  $h$  if the nozzle were operating exactly at supersonic design conditions?

- P9.67** A supply tank at 500 kPa and 400 K feeds air to a converging-diverging nozzle whose throat area is 9 cm<sup>2</sup>. The exit area is 46 cm<sup>2</sup>. State the conditions in the nozzle if the pressure outside the exit plane is (a) 400 kPa, (b) 120 kPa, and (c) 9 kPa. (d) In each of these cases, find the mass flow.
- P9.68** Air in a tank at 120 kPa and 300 K exhausts to the atmosphere through a 5-cm<sup>2</sup>-throat converging nozzle at a rate of 0.12 kg/s. What is the atmospheric pressure? What is the maximum mass flow possible at low atmospheric pressure?
- P9.69** With reference to Prob. P3.68, show that the thrust of a rocket engine exhausting into a vacuum is given by

$$F = \frac{p_0 A_e (1 + k Ma_e^2)}{\left(1 + \frac{k-1}{2} Ma_e^2\right)^{k/(k-1)}}$$

where  $A_e$  = exit area

$Ma_e$  = exit Mach number

$p_0$  = stagnation pressure in combustion chamber

Note that stagnation temperature does not enter into the thrust.

- P9.70** Air, with  $p_o = 500$  kPa and  $T_o = 600$  K, flows through a converging-diverging nozzle. The exit area is 51.2 cm<sup>2</sup>, and mass flow is 0.825 kg/s. What is the highest possible back pressure that will still maintain supersonic flow inside the diverging section?


- P9.71** A converging-diverging nozzle has a throat area of 10 cm<sup>2</sup> and an exit area of 20 cm<sup>2</sup>. It is supplied by an air tank at 250 kPa and 350 K. (a) What is the design pressure at the exit? At one operating condition, the exit properties are  $p_e = 183$  kPa,  $T_e = 340$  K, and  $V_e = 144$  m/s. (b) Can this condition be explained by a normal shock inside the nozzle? (c) If so, at what Mach number does the normal shock occur? Hint: Use the change in  $A^*$  to locate, if necessary, this location.

- P9.72** A large tank at 500 K and 165 kPa feeds air to a converging nozzle. The back pressure outside the nozzle exit is sea-level standard. What is the appropriate exit diameter if the desired mass flow is 72 kg/h?

- P9.73** Air flows isentropically in a converging-diverging nozzle with a throat area of 3 cm<sup>2</sup>. At section 1, the pressure is 101 kPa, the temperature is 300 K, and the velocity is 868 m/s. (a) Is the nozzle choked? Determine (b)  $A_1$  and (c) the mass flow. Suppose, without changing stagnation conditions or  $A_1$ , the (flexible) throat is reduced to 2 cm<sup>2</sup>. Assuming shock-free flow, will there be any change in the gas properties at section 1? If so, compute new  $p_1$ ,  $V_1$ , and  $T_1$  and explain.

- P9.74** Use your strategic ideas, from part (b) of Prob. P9.40, to actually carry out the calculations for mass flow of steam, with  $p_o = 300 \text{ kPa}$  and  $T_o = 600 \text{ K}$ , discharging through a converging nozzle of choked exit area  $5 \text{ cm}^2$ . Take advantage of the new EES thermodynamic function SPEEDSOUND(Steam,  $p = p_1$ ,  $s = s_1$ ).


- \*P9.75** A double-tank system in Fig. P9.75 has two identical converging nozzles of  $1\text{-in}^2$  throat area. Tank 1 is very large, and tank 2 is small enough to be in steady-flow equilibrium with the jet from tank 1. Nozzle flow is isentropic, but entropy changes between 1 and 3 due to jet dissipation in tank 2. Compute the mass flow. (If you give up, Ref. 9, pp. 288–290, has a good discussion.)

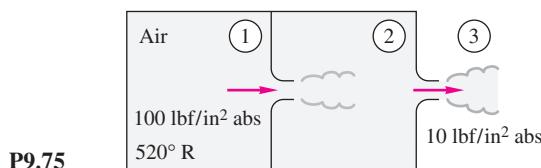

- P9.76** A large reservoir at  $20^\circ\text{C}$  and  $800 \text{ kPa}$  is used to fill a small insulated tank through a converging-diverging nozzle with  $1\text{-cm}^2$  throat area and  $1.66\text{-cm}^2$  exit area. The small tank has a volume of  $1 \text{ m}^3$  and is initially at  $20^\circ\text{C}$  and  $100 \text{ kPa}$ . Estimate the elapsed time when (a) shock waves begin to appear inside the nozzle and (b) the mass flow begins to drop below its maximum value.

- P9.77** [EES] A perfect gas (not air) expands isentropically through a supersonic nozzle with an exit area 5 times its throat area. The exit Mach number is 3.8. What is the specific-heat ratio of the gas? What might this gas be? If  $p_0 = 300 \text{ kPa}$ , what is the exit pressure of the gas?

- P9.78** The orientation of a hole can make a difference. Consider holes A and B in Fig. P9.78, which are identical but reversed. For the given air properties on either side, compute the mass flow through each hole and explain why they are different.

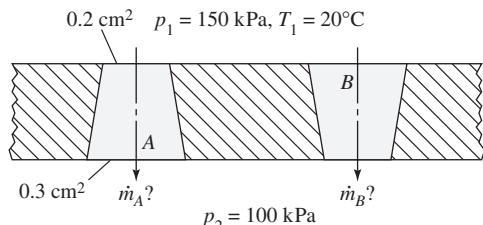

- P9.79** A large reservoir at  $600 \text{ K}$  supplies air flow through a converging-diverging nozzle with a throat area of  $2 \text{ cm}^2$ .

A normal shock wave forms at a section of area  $6 \text{ cm}^2$ . Just downstream of this shock, the pressure is  $150 \text{ kPa}$ . Calculate (a) the pressure in the throat, (b) the mass flow, and (c) the pressure in the reservoir.


- P9.80** A sea-level automobile tire is initially at  $32 \text{ lbf/in}^2$  gage pressure and  $75^\circ\text{F}$ . When it is punctured with a hole that resembles a converging nozzle, its pressure drops to  $15 \text{ lbf/in}^2$  gage in 12 min. Estimate the size of the hole, in thousandths of an inch. The tire volume is  $2.5 \text{ ft}^3$ .

- P9.81** Air, at  $p_o = 160 \text{ lbf/in}^2$  and  $T_o = 300^\circ\text{F}$ , flows isentropically through a converging-diverging nozzle. At section 1, where  $A_1 = 288 \text{ in}^2$ , the velocity is  $V_1 = 2068 \text{ ft/s}$ . Calculate (a)  $\text{Ma}_1$ , (b)  $A^*$ , (c)  $p_1$ , and (d) the mass flow, in slug/s.

- P9.82** Air at  $500 \text{ K}$  flows through a converging-diverging nozzle with throat area of  $1 \text{ cm}^2$  and exit area of  $2.7 \text{ cm}^2$ . When the mass flow is  $182.2 \text{ kg/h}$ , a pitot-static probe placed in the exit plane reads  $p_0 = 250.6 \text{ kPa}$  and  $p = 240.1 \text{ kPa}$ . Estimate the exit velocity. Is there a normal shock wave in the duct? If so, compute the Mach number just downstream of this shock.

- P9.83** When operating at design conditions (smooth exit to sea-level pressure), a rocket engine has a thrust of 1 million lbf. The chamber pressure and temperature are  $600 \text{ lbf/in}^2$  absolute and  $4000^\circ\text{R}$ , respectively. The exhaust gases approximate  $k = 1.38$  with a molecular weight of 26. Estimate (a) the exit Mach number and (b) the throat diameter.


- P9.84** Air flows through a duct as in Fig. P9.84, where  $A_1 = 24 \text{ cm}^2$ ,  $A_2 = 18 \text{ cm}^2$ , and  $A_3 = 32 \text{ cm}^2$ . A normal shock stands at section 2. Compute (a) the mass flow, (b) the Mach number, and (c) the stagnation pressure at section 3.

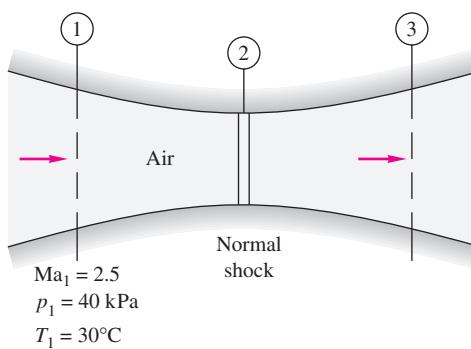

- P9.85** A typical carbon dioxide tank for a paintball gun holds about 12 oz of liquid  $\text{CO}_2$ . The tank is filled no more than one-third with liquid, which, at room temperature, maintains the gaseous phase at about 850 psia. (a) If a valve is opened that simulates a converging nozzle with an exit diameter of 0.050 in, what mass flow and exit velocity results? (b) Repeat the calculations for helium.

### Duct flow with friction

- P9.86** Air enters a 3-cm-diameter pipe 15 m long at  $V_1 = 73$  m/s,  $p_1 = 550$  kPa, and  $T_1 = 60^\circ\text{C}$ . The friction factor is 0.018. Compute  $V_2$ ,  $p_2$ ,  $T_2$ , and  $p_{02}$  at the end of the pipe. How much additional pipe length would cause the exit flow to be sonic?
- P9.87** Problem C6.9 gives data for a proposed Alaska-to-Canada natural gas (assume  $\text{CH}_4$ ) pipeline. If the design flow rate is 890 kg/s and the entrance conditions are 2500 lbf/in<sup>2</sup> and 140°F, determine the maximum length of adiabatic pipe before choking occurs.
- P9.88** Air flows adiabatically through a 2-cm-diameter pipe. Conditions at section 2 are  $p_2 = 100$  kPa,  $T_2 = 15^\circ\text{C}$ , and  $V_2 = 170$  m/s. The average friction factor is 0.024. At section 1, which is 55 meters upstream, find (a) the mass flow, (b)  $p_1$ , and (c)  $p_{01}$ .
- P9.89** Carbon dioxide flows through an insulated pipe 25 m long and 8 cm in diameter. The friction factor is 0.025. At the entrance,  $p = 300$  kPa and  $T = 400$  K. The mass flow is 1.5 kg/s. Estimate the pressure drop by (a) compressible and (b) incompressible (Sec. 6.6) flow theory. (c) For what pipe length will the exit flow be choked?
- P9.90** Air flows through a rough pipe 120 ft long and 3 in in diameter. Entrance conditions are  $p = 90$  lbf/in<sup>2</sup>,  $T = 68^\circ\text{F}$ , and  $V = 225$  ft/s. The flow chokes at the end of the pipe. (a) What is the average friction factor? (b) What is the pressure at the end of the pipe?
- P9.91** Air flows steadily from a tank through the pipe in Fig. P9.91. There is a converging nozzle on the end. If the mass flow is 3 kg/s and the nozzle is choked, estimate (a) the Mach number at section 1 and (b) the pressure inside the tank.

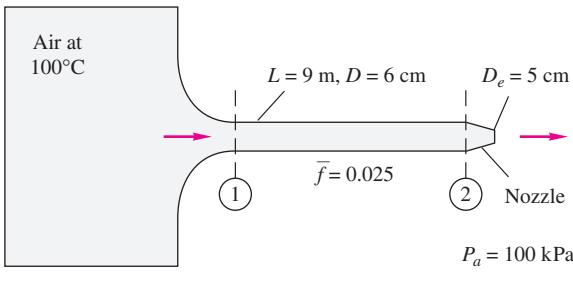**P9.91**

- P9.92** Air enters a 5-cm-diameter pipe at 380 kPa,  $3.3 \text{ kg/m}^3$ , and 120 m/s. The friction factor is 0.017. Find the pipe length for which the velocity (a) doubles, (b) triples, and (c) quadruples.
- P9.93** Air flows adiabatically in a 3-cm-diameter duct. The average friction factor is 0.015. If, at the entrance,

$V = 950$  m/s and  $T = 250$  K, how far down the tube will


(a) the Mach number be 1.8 or (b) the flow be choked?

- P9.94** Compressible pipe flow with friction, Sec. 9.7, assumes constant stagnation enthalpy and mass flow but variable momentum. Such a flow is often called *Fanno flow*, and a line representing all possible property changes on a temperature–entropy chart is called a *Fanno line*. Assuming a perfect gas with  $k = 1.4$  and the data of Prob. P9.86, draw a Fanno curve of the flow for a range of velocities from very low ( $\text{Ma} \ll 1$ ) to very high ( $\text{Ma} \gg 1$ ). Comment on the meaning of the maximum-entropy point on this curve.
- P9.95** Helium (Table A.4) enters a 5-cm-diameter pipe at  $p_1 = 550$  kPa,  $V_1 = 312$  m/s, and  $T_1 = 40^\circ\text{C}$ . The friction factor is 0.025. If the flow is choked, determine (a) the length of the duct and (b) the exit pressure.
- P9.96** Methane ( $\text{CH}_4$ ) flows through an insulated 15-cm-diameter pipe with  $f = 0.023$ . Entrance conditions are 600 kPa,  $100^\circ\text{C}$ , and a mass flow of 5 kg/s. What lengths of pipe will (a) choke the flow, (b) raise the velocity by 50 percent, or (c) decrease the pressure by 50 percent?
- P9.97** By making a few algebraic substitutions, show that Eq. (9.74) may be written in the density form

$$\rho_1^2 = \rho_2^2 + \rho^{*2} \left( \frac{2k}{k+1} \frac{\bar{f}L}{D} + 2 \ln \frac{\rho_1}{\rho_2} \right)$$

Why is this formula awkward if one is trying to solve for the mass flow when the pressures are given at sections 1 and 2?

- P9.98** Compressible laminar flow,  $f \approx 64/\text{Re}$ , may occur in capillary tubes. Consider air, at stagnation conditions of  $100^\circ\text{C}$  and 200 kPa, entering a tube 3 cm long and 0.1 mm in diameter. If the receiver pressure is near vacuum, estimate (a) the average Reynolds number, (b) the Mach number at the entrance, and (c) the mass flow in kg/h.
- P9.99** A compressor forces air through a smooth pipe 20 m long and 4 cm in diameter, as in Fig. P9.99. The air leaves at 101 kPa and  $200^\circ\text{C}$ . The compressor data for pressure rise

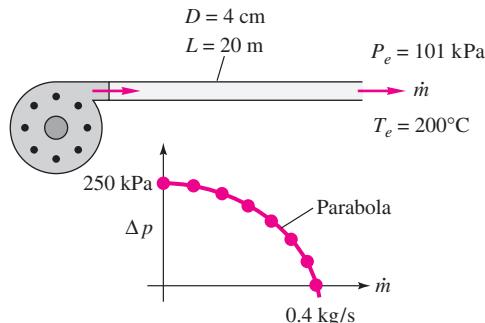
**P9.99**

versus mass flow are shown in the figure. Using the Moody chart to estimate  $\bar{f}$ , compute the resulting mass flow.

- P9.100** Air flows adiabatically through a pipe 10 cm in diameter and 66 m long. Entrance conditions are  $p_1 = 550$  kPa,  $T_1 = 350$  K, and  $V_1 = 75$  m/s. The average friction factor is 0.022. (a) Is the pipe flow choked at the exit? (b) What is the exit pressure? (c) At what distance down the pipe is the velocity 184 m/s?

- P9.101** How do the compressible pipe flow formulas behave for small pressure drops? Let air at 20°C enter a tube of diameter 1 cm and length 3 m. If  $\bar{f} = 0.028$  with  $p_1 = 102$  kPa and  $p_2 = 100$  kPa, estimate the mass flow in kg/h for (a) isothermal flow, (b) adiabatic flow, and (c) incompressible flow (Chap. 6) at the entrance density.

- P9.102** Air at 550 kPa and 100°C enters a smooth 1-m-long pipe and then passes through a second smooth pipe to a 30-kPa reservoir, as in Fig. P9.102. Using the Moody chart to compute  $\bar{f}$ , estimate the mass flow through this system. Is the flow choked?

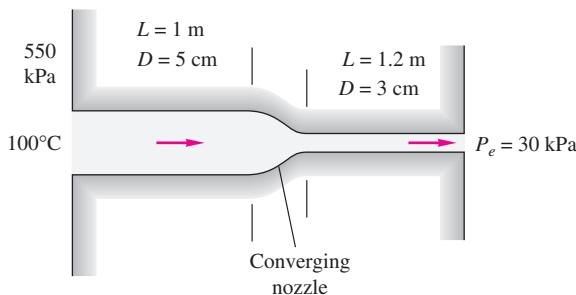

**P9.102**


- P9.103** Natural gas, with  $k \approx 1.3$  and a molecular weight of 16, is to be pumped through 100 km of 81-cm-diameter pipeline. The downstream pressure is 150 kPa. If the gas enters at 60°C, the mass flow is 20 kg/s, and  $\bar{f} = 0.024$ , estimate the required entrance pressure for (a) isothermal flow and (b) adiabatic flow.

- P9.104** A tank of oxygen (Table A.4) at 20°C is to supply an astronaut through an umbilical tube 12 m long and 1.5 cm in diameter. The exit pressure in the tube is 40 kPa. If the desired mass flow is 90 kg/h and  $\bar{f} = 0.025$ , what should be the pressure in the tank?

- P9.105** Modify Prob. P9.87 as follows. The pipeline will not be allowed to choke. It will have pumping stations about every 200 miles. (a) Find the length of pipe for which the pressure has dropped to 2000 lbf/in<sup>2</sup>. (b) What is the temperature at that point?

- P9.106** Air, from a 3 cubic meter tank initially at 300 kPa and 200°C, blows down adiabatically through a smooth pipe 1 cm in diameter and 2.5 m long. Estimate the time

required to reduce the tank pressure to 200 kPa. For simplicity, assume constant tank temperature and  $f \approx 0.020$ .

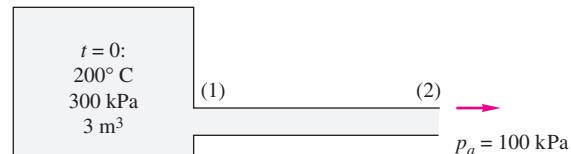

**P9.106**

### Frictionless fw with heat transfer

- P9.107** A fuel-air mixture, assumed equivalent to air, enters a duct combustion chamber at  $V_1 = 104$  m/s and  $T_1 = 300$  K. What amount of heat addition in kJ/kg will cause the exit flow to be choked? What will be the exit Mach number and temperature if 504 kJ/kg are added during combustion?

- P9.108** What happens to the inlet flow of Prob. P9.107 if the combustion yields 1500 kJ/kg heat addition and  $p_{01}$  and  $T_{01}$  remain the same? How much is the mass flow reduced?

- P9.109** A jet engine at 7000-m altitude takes in 45 kg/s of air and adds 550 kJ/kg in the combustion chamber. The chamber cross section is 0.5 m<sup>2</sup>, and the air enters the chamber at 80 kPa and 5°C. After combustion the air expands through an isentropic converging nozzle to exit at atmospheric pressure. Estimate (a) the nozzle throat diameter, (b) the nozzle exit velocity, and (c) the thrust produced by the engine.

- P9.110** Compressible pipe flow with heat addition, Sec. 9.8, assumes constant momentum ( $p + \rho V^2$ ) and constant mass flow but variable stagnation enthalpy. Such a flow is often called *Rayleigh fw*, and a line representing all possible property changes on a temperature–entropy chart is called a *Rayleigh line*. Assuming air passing through the flow state  $p_1 = 548$  kPa,  $T_1 = 588$  K,  $V_1 = 266$  m/s, and  $A = 1$  m<sup>2</sup>, draw a Rayleigh curve of the flow for a range of velocities from very low ( $Ma \ll 1$ ) to very high ( $Ma \gg 1$ ). Comment on the meaning of the maximum-entropy point on this curve.

- P9.111** Add to your Rayleigh line of Prob. P9.110 a Fanno line (see Prob. P9.94) for stagnation enthalpy equal to the value associated with state 1 in Prob. P9.110. The two curves will intersect at state 1, which is subsonic, and at a certain state 2, which is supersonic. Interpret these two states vis-à-vis Table B.2.

- P9.112** Air enters a duct subsonically at section 1 at 1.2 kg/s. When 650 kW of heat are added, the flow chokes at the exit at  $p_2 = 95$  kPa and  $T_2 = 700$  K. Assuming frictionless heat addition, estimate (a) the velocity and (b) the stagnation pressure at section 1.

- P9.113** Air enters a constant-area duct at  $p_1 = 90 \text{ kPa}$ ,  $V_1 = 520 \text{ m/s}$ , and  $T_1 = 558^\circ\text{C}$ . It is then cooled with negligible friction until it exits at  $p_2 = 160 \text{ kPa}$ . Estimate (a)  $V_2$ , (b)  $T_2$ , and (c) the total amount of cooling in  $\text{kJ/kg}$ .


- P9.114** The scramjet of Fig. 9.30 operates with supersonic flow throughout. An idealized sketch is in Fig. C9.8, at the end of this chapter. Assume that the heat addition of  $500 \text{ kJ/kg}$ , between sections 2 and 3, is frictionless and at constant area of  $0.2 \text{ m}^2$ . Given  $\text{Ma}_2 = 4.0$ ,  $p_2 = 260 \text{ kPa}$ , and  $T_2 = 420 \text{ K}$ . Assume airflow at  $k = 1.40$ . At the combustion section exit, find (a)  $\text{Ma}_3$ , (b)  $p_3$ , and (c)  $T_3$ .

- P9.115** Air enters a 5-cm-diameter pipe at  $380 \text{ kPa}$ ,  $3.3 \text{ kg/m}^3$ , and  $120 \text{ m/s}$ . Assume frictionless flow with heat addition. Find the amount of heat addition for which the velocity (a) doubles, (b) triples, and (c) quadruples.

### Mach waves


- P9.116** An observer at sea level does not hear an aircraft flying at 12,000-ft standard altitude until it is 5 (statute) mi past her. Estimate the aircraft speed in ft/s.

- P9.117** A tiny scratch in the side of a supersonic wind tunnel creates a very weak wave of angle  $17^\circ$ , as shown in Fig. P9.117, after which a normal shock occurs. The air temperature in region (1) is  $250 \text{ K}$ . Estimate the temperature in region (2).

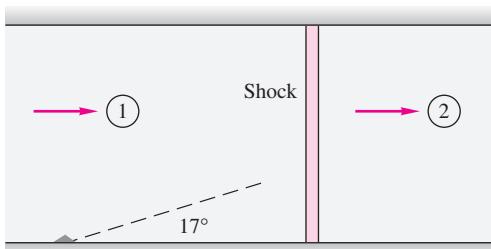


P9.117

- P9.118** A particle moving at uniform velocity in sea-level standard air creates the two disturbance spheres shown in Fig. P9.118. Compute the particle velocity and Mach number.

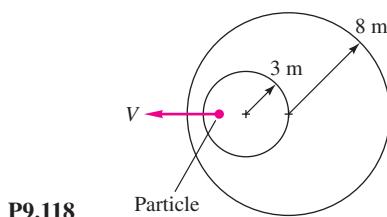


P9.118

- P9.119** The particle in Fig. P9.119 is moving supersonically in sea-level standard air. From the two given disturbance spheres, compute the particle Mach number, velocity, and Mach angle.

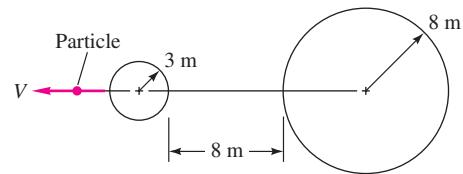

P9.119

- P9.120** The particle in Fig. P9.120 is moving in sea-level standard air. From the two disturbance spheres shown, estimate (a) the position of the particle at this instant and (b) the temperature in  $^\circ\text{C}$  at the front stagnation point of the particle.

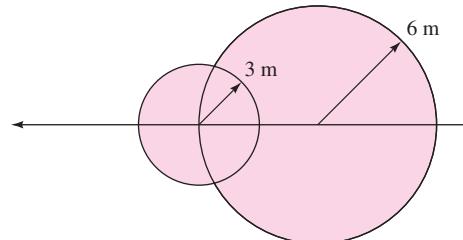


P9.120

- P9.121** A thermistor probe, in the shape of a needle parallel to the flow, reads a static temperature of  $-25^\circ\text{C}$  when inserted into a supersonic airstream. A conical disturbance cone of half-angle  $17^\circ$  is created. Estimate (a) the Mach number, (b) the velocity, and (c) the stagnation temperature of the stream.

### The oblique shock wave


- P9.122** Supersonic air takes a  $5^\circ$  compression turn, as in Fig. P9.122. Compute the downstream pressure and Mach number and the wave angle, and compare with small-disturbance theory.

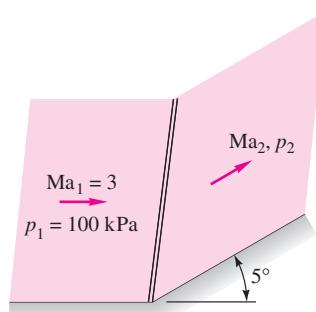

P9.122

**P9.123** The  $10^\circ$  deflection in Example 9.17 caused a final Mach number of 1.641 and a pressure ratio of 1.707. Compare this with the case of the flow passing through two  $5^\circ$  deflections. Comment on the results and why they might be higher or lower in the second case.

**P9.124** When a sea-level flow approaches a ramp of angle  $20^\circ$ , an oblique shock wave forms as in Figure P9.124. Calculate (a)  $\text{Ma}_1$ , (b)  $p_2$ , (c)  $T_2$ , and (d)  $V_2$ .

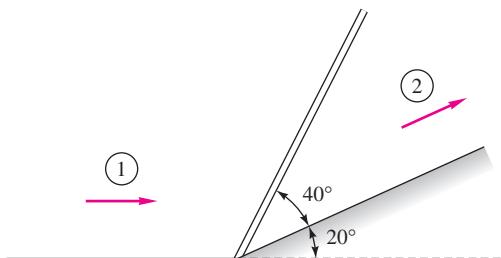


P9.124

**P9.125** We saw in the text that, for  $k = 1.40$ , the maximum possible deflection caused by an oblique shock wave occurs at infinite approach Mach number and is  $\theta_{\max} = 45.58^\circ$ . Assuming an ideal gas, what is  $\theta_{\max}$  for (a) argon and (b) carbon dioxide?

**P9.126** Consider airflow at  $\text{Ma}_1 = 2.2$ . Calculate, to two decimal places, (a) the deflection angle for which the downstream flow is sonic and (b) the maximum deflection angle.

**P9.127** Do the Mach waves upstream of an oblique shock wave intersect with the shock? Assuming supersonic downstream flow, do the downstream Mach waves intersect the shock? Show that for small deflections the shock wave angle  $\beta$  lies halfway between  $\mu_1$  and  $\mu_2 + \theta$  for any Mach number.


**P9.128** Air flows past a two-dimensional wedge-nosed body as in Fig. P9.128. Determine the wedge half-angle  $\delta$  for which the horizontal component of the total pressure force on the nose is 35 kN/m of depth into the paper.

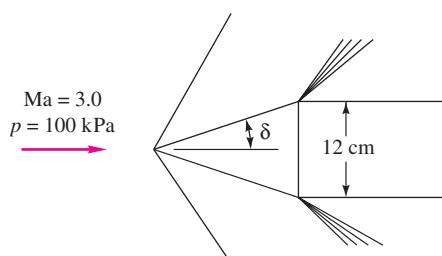

P9.128

**P9.129** Air flows at supersonic speed toward a compression ramp, as in Fig. P9.129. A scratch on the wall at point *a* creates

a wave of  $30^\circ$  angle, while the oblique shock created has a  $50^\circ$  angle. What is (a) the ramp angle  $\theta$  and (b) the wave angle  $\phi$  caused by a scratch at *b*?

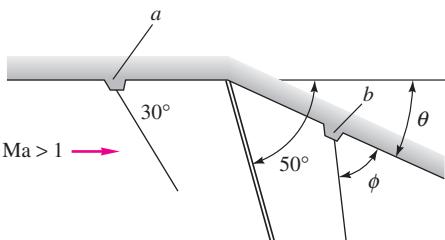

P9.129


**P9.130** A supersonic airflow, at a temperature of 300K, strikes a wedge and is deflected  $12^\circ$ . If the resulting shock wave is attached, and the temperature after the shock is 450K, (a) estimate the approach Mach number and wave angle. (b) Why are there two solutions?

**P9.131** The following formula has been suggested as an alternate to Eq. (9.86) to relate upstream Mach number to the oblique shock wave angle  $\beta$  and turning angle  $\theta$ :

$$\sin^2 \beta = \frac{1}{\text{Ma}_1^2} + \frac{(k+1) \sin \beta \sin \theta}{2 \cos(\beta - \theta)}$$


Can you prove or disprove this relation? If not, try a few numerical values and compare with the results from Eq. (9.86).

**P9.132** Air flows at  $\text{Ma} = 3$  and  $p = 10 \text{ lbf/in}^2$  absolute toward a wedge of  $16^\circ$  angle at zero incidence in Fig. P9.132. If the pointed edge is forward, what will be the pressure at point *A*? If the blunt edge is forward, what will be the pressure at point *B*?

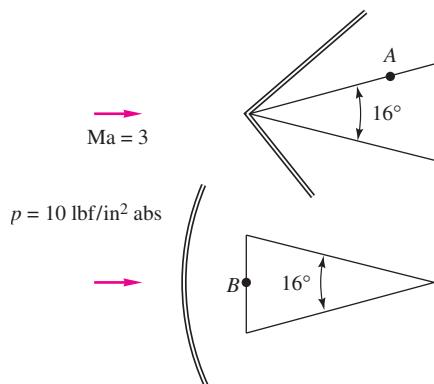

P9.132


**P9.133** Air flows supersonically toward the double-wedge system in Fig. P9.133. The  $(x, y)$  coordinates of the tips are given.

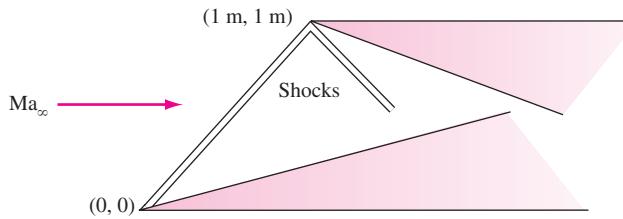

P9.133


The shock wave of the forward wedge strikes the tip of the aft wedge. Both wedges have  $15^\circ$  deflection angles. What is the free-stream Mach number?

- P9.134** When an oblique shock strikes a solid wall, it reflects as a shock of sufficient strength to cause the exit flow  $\text{Ma}_3$  to be parallel to the wall, as in Fig. P9.134. For airflow with  $\text{Ma}_1 = 2.5$  and  $p_1 = 100 \text{ kPa}$ , compute  $\text{Ma}_3$ ,  $p_3$ , and the angle  $\phi$ . EES

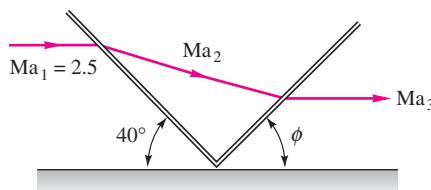


P9.134

- P9.135** A bend in the bottom of a supersonic duct flow induces a shock wave that reflects from the upper wall, as in Fig. P9.135. Compute the Mach number and pressure in region 3.

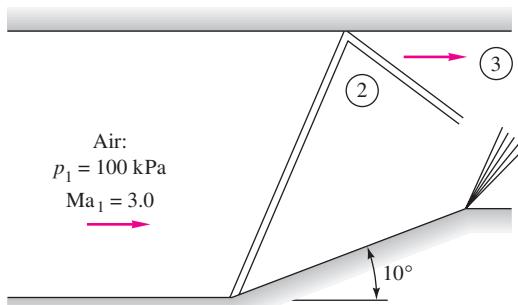


P9.135

- P9.136** Figure P9.136 is a special application of Prob. P9.135. With careful design, one can orient the bend on the lower wall so that the reflected wave is exactly canceled by the return bend, as shown. This is a method of reducing the Mach number in a channel (a supersonic diffuser). If the bend angle is  $\phi = 10^\circ$ , find (a) the downstream width  $h$  and (b) the downstream Mach number. Assume a weak shock wave. Handbook

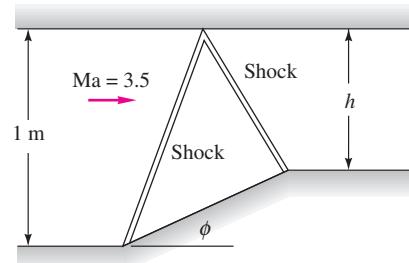


P9.136

- P9.137** A  $6^\circ$  half-angle wedge creates the reflected shock system in Fig. P9.137. If  $\text{Ma}_3 = 2.5$ , find (a)  $\text{Ma}_1$  and (b) the angle  $\alpha$ .

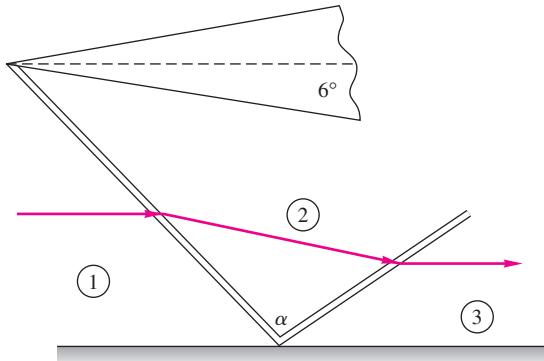


P9.137

- P9.138** The supersonic nozzle of Fig. P9.138 is overexpanded (case G of Fig. 9.12b) with  $A_e/A_t = 3.0$  and a stagnation pressure of  $350 \text{ kPa}$ . If the jet edge makes a  $4^\circ$  angle with the nozzle centerline, what is the back pressure  $p_r$  in kPa?

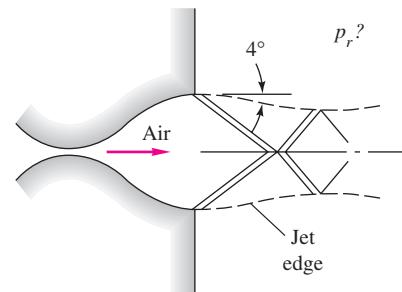

P9.138

- P9.139** Airflow at  $\text{Ma} = 2.2$  takes a compression turn of  $12^\circ$  and then another turn of angle  $\theta$  in Fig. P9.139. What is the maximum value of  $\theta$  for the second shock to be attached? Will the two shocks intersect for any  $\theta$  less than  $\theta_{\max}$ ? Handbook

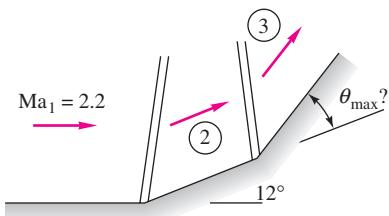


P9.139

### Prandtl-Meyer expansion waves

**P9.140** The solution to Prob. P9.122 is  $\text{Ma}_2 = 2.750$  and  $p_2 = 145.5 \text{ kPa}$ . Compare these results with an isentropic compression turn of  $5^\circ$ , using Prandtl-Meyer theory.

**P9.141** Supersonic airflow takes a  $5^\circ$  expansion turn, as in Fig. P9.141. Compute the downstream Mach number and pressure, and compare with small-disturbance theory.

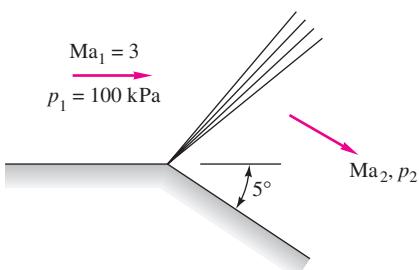

P9.141


**P9.142** A supersonic airflow at  $\text{Ma}_1 = 3.2$  and  $p_1 = 50 \text{ kPa}$  undergoes a compression shock followed by an isentropic expansion turn. The flow deflection is  $30^\circ$  for each turn. Compute  $\text{Ma}_2$  and  $p_2$  if (a) the shock is followed by the expansion and (b) the expansion is followed by the shock.

**P9.143** Airflow at  $\text{Ma}_1 = 3.2$  passes through a  $25^\circ$  oblique shock deflection. What isentropic expansion turn is required to bring the flow back to (a)  $\text{Ma}_1$  and (b)  $p_1$ ?

**P9.144** The  $10^\circ$  deflection in Example 9.17 caused the Mach number to drop to 1.64. (a) What turn angle will create a Prandtl-Meyer fan and bring the Mach number back up to 2.0? (b) What will be the final pressure?


**P9.145** Air at  $\text{Ma}_1 = 2.0$  and  $p_1 = 100 \text{ kPa}$  undergoes an isentropic expansion to a downstream pressure of 50 kPa. What is the desired turn angle in degrees?

**P9.146** Air flows supersonically over a surface that changes direction twice, as in Fig. P9.146. Calculate (a)  $\text{Ma}_2$  and (b)  $p_3$ .

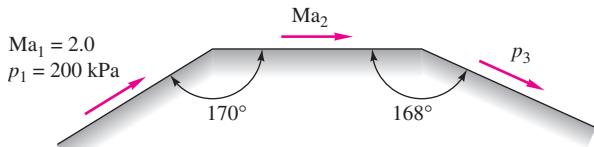


P9.146

**P9.147** A converging-diverging nozzle with a 4:1 exit-area ratio and  $p_0 = 500 \text{ kPa}$  operates in an underexpanded condition (case I of Fig. 9.12b) as in Fig. P9.147. The receiver pressure is  $p_a = 10 \text{ kPa}$ , which is less than the exit pressure, so that expansion waves form outside the exit. For the given conditions, what will the Mach number  $\text{Ma}_2$  and the angle  $\phi$  of the edge of the jet be? Assume  $k = 1.4$  as usual.

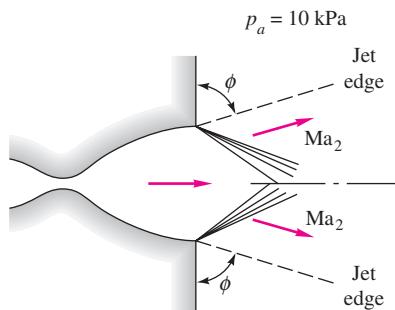

P9.147

**P9.148** Air flows supersonically over a circular-arc surface as in Fig. P9.148. Estimate (a) the Mach number  $\text{Ma}_2$  and (b) the pressure  $p_2$  as the flow leaves the circular surface.

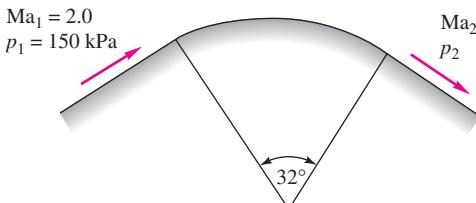


P9.148

### Supersonic airfoils

**P9.149** Air flows at  $\text{Ma}_\infty = 3.0$  past a doubly symmetric diamond airfoil whose front and rear included angles are both  $24^\circ$ . For zero angle of attack, compute the drag coefficient obtained using shock-expansion theory and compare with Ackeret theory.

**P9.150** A flat-plate airfoil with  $C = 1.2 \text{ m}$  is to have a lift of  $30 \text{ kN/m}$  when flying at 5000-m standard altitude with  $U_\infty = 641 \text{ m/s}$ . Using Ackeret theory, estimate (a) the angle of attack and (b) the drag force in N/m.

**P9.151** Air flows at  $\text{Ma} = 2.5$  past a half-wedge airfoil whose angles are  $4^\circ$ , as in Fig. P9.151. Compute the lift and drag coefficient at  $\alpha$  equal to (a)  $0^\circ$  and (b)  $6^\circ$ .

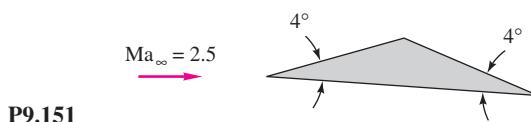

P9.151

**P9.152** The X-43 model A scramjet aircraft in Fig. 9.30 is small  $W = 3000 \text{ lbf}$ , and unmanned, only 12.33 ft long and 5.5 ft wide. The aerodynamics of a slender arrowhead-shaped hypersonic vehicle is beyond our scope. Instead, let us assume it is a flat plate airfoil of area  $2.0 \text{ m}^2$ . Let  $\text{Ma} = 7$  at 12,000 m standard altitude. Estimate the drag, by shock-expansion theory. Hint: Use Ackeret theory to estimate the angle of attack.

**P9.153** A supersonic transport has a mass of 65 Mg and cruises at 11-km standard altitude at a Mach number of 2.25. If the angle of attack is  $2^\circ$  and its wings can be approximated by flat plates, estimate (a) the required wing area in  $\text{m}^2$  and (b) the thrust required in N.

**\*P9.154** A symmetric supersonic airfoil has its upper and lower surfaces defined by a sine-wave shape:


$$y = \frac{t}{2} \sin \frac{\pi x}{C}$$

where  $t$  is the maximum thickness, which occurs at  $x = C/2$ . Use Ackeret theory to derive an expression for the drag coefficient at zero angle of attack. Compare your result with Ackeret theory for a symmetric double-wedge airfoil of the same thickness.

**\*P9.155** The F-35 airplane in Fig. 9.29 has a wingspan of 10 m and a wing area of  $41.8 \text{ m}^2$ . It cruises at about 10 km altitude with a gross weight of about 200 kN. At that

altitude, the engine develops a thrust of about 50 kN. Assume the wing has a symmetric diamond airfoil with a thickness of 8 percent, and accounts for all lift and drag. Estimate the cruise Mach number of the airplane. For extra credit, explain why there are *two* solutions.

**P9.156** A thin circular-arc airfoil is shown in Fig. P9.156. The leading edge is parallel to the free stream. Using linearized (small-turning-angle) supersonic flow theory, derive a formula for the lift and drag coefficient for this orientation, and compare with Ackeret-theory results for an angle of attack  $\alpha = \tan^{-1}(h/L)$ .

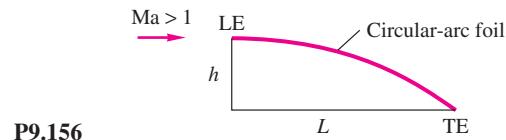

**P9.156**

**P9.157** The Ackeret airfoil theory of Eq. (9.104) is meant for *moderate* supersonic speeds,  $1.2 < \text{Ma} < 4$ . How does it fare for *hypersonic* speeds? To illustrate, calculate (a)  $C_L$  and (b)  $C_D$  for a flat-plate airfoil at  $\alpha = 5^\circ$  and  $\text{Ma}_\infty = 8.0$ , using shock-expansion theory, and compare with Ackeret theory. Comment.

## Word Problems

**W9.1** Notice from Table 9.1 that (a) water and mercury and (b) aluminum and steel have nearly the same speeds of sound, yet the second of each pair of materials is much denser. Can you account for this oddity? Can molecular theory explain it?

**W9.2** When an object approaches you at  $\text{Ma} = 0.8$ , you can hear it, according to Fig. 9.18a. But would there be a Doppler shift? For example, would a musical tone seem to you to have a higher or a lower pitch?

**W9.3** The subject of this chapter is commonly called *gas dynamics*. But can liquids not perform in this manner? Using water as an example, make a rule-of-thumb estimate of the pressure level needed to drive a water flow at velocities comparable to the sound speed.

**W9.4** Suppose a gas is driven at compressible subsonic speeds by a large pressure drop,  $p_1$  to  $p_2$ . Describe its behavior on an appropriately labeled Mollier chart for (a) friction-

less flow in a converging nozzle and (b) flow with friction in a long duct.

**W9.5** Describe physically what the “speed of sound” represents. What kind of pressure changes occur in air sound waves during ordinary conversation?

**W9.6** Give a physical description of the phenomenon of choking in a converging-nozzle gas flow. Could choking happen even if wall friction were not negligible?


**W9.7** Shock waves are treated as discontinuities here, but they actually have a very small finite thickness. After giving it some thought, sketch your idea of the distribution of gas velocity, pressure, temperature, and entropy through the inside of a shock wave.

**W9.8** Describe how an observer, running along a normal shock wave at finite speed  $V$ , will see what appears to be an oblique shock wave. Is there any limit to the running speed?

## Fundamentals of Engineering Exam Problems

One-dimensional compressible flow problems have become quite popular on the FE Exam, especially in the afternoon sessions. In the following problems, assume one-dimensional flow of ideal air,  $R = 287 \text{ J/(kg}\cdot\text{K)}$  and  $k = 1.4$ .

- FE9.1** For steady isentropic flow, if the absolute temperature increases 50 percent, by what ratio does the static pressure increase?  
 (a) 1.12, (b) 1.22, (c) 2.25, (d) 2.76, (e) 4.13
- FE9.2** For steady isentropic flow, if the density doubles, by what ratio does the static pressure increase?  
 (a) 1.22, (b) 1.32, (c) 1.44, (d) 2.64, (e) 5.66
- FE9.3** A large tank, at 500 K and 200 kPa, supplies isentropic airflow to a nozzle. At section 1, the pressure is only 120 kPa. What is the Mach number at this section?  
 (a) 0.63, (b) 0.78, (c) 0.89, (d) 1.00, (e) 1.83
- FE9.4** In Prob. FE9.3 what is the temperature at section 1?  
 (a) 300 K, (b) 408 K, (c) 417 K, (d) 432 K, (e) 500 K
- FE9.5** In Prob. FE9.3, if the area at section 1 is  $0.15 \text{ m}^2$ , what is the mass flow?  
 (a)  $38.1 \text{ kg/s}$ , (b)  $53.6 \text{ kg/s}$ , (c)  $57.8 \text{ kg/s}$ , (d)  $67.8 \text{ kg/s}$ ,  
 (e)  $77.2 \text{ kg/s}$
- FE9.6** For steady isentropic flow, what is the maximum possible mass flow through the duct in Fig. FE9.6?  
 (a)  $9.5 \text{ kg/s}$ , (b)  $15.1 \text{ kg/s}$ , (c)  $26.2 \text{ kg/s}$ , (d)  $30.3 \text{ kg/s}$ ,  
 (e)  $52.4 \text{ kg/s}$

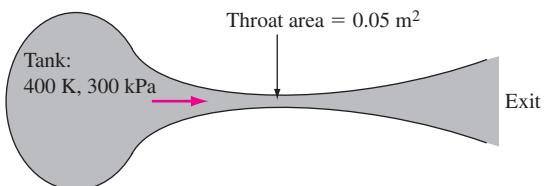


FE9.6

- FE9.7** If the exit Mach number in Fig. FE9.6 is 2.2, what is the exit area?  
 (a)  $0.10 \text{ m}^2$ , (b)  $0.12 \text{ m}^2$ , (c)  $0.15 \text{ m}^2$ , (d)  $0.18 \text{ m}^2$ ,  
 (e)  $0.22 \text{ m}^2$
- FE9.8** If there are no shock waves and the pressure at one duct section in Fig. FE9.6 is 55.5 kPa, what is the velocity at that section?  
 (a) 166 m/s, (b) 232 m/s, (c) 554 m/s, (d) 706 m/s,  
 (e) 774 m/s
- FE9.9** If, in Fig. FE9.6, there is a normal shock wave at a section where the area is  $0.07 \text{ m}^2$ , what is the air density just upstream of that shock?  
 (a)  $0.48 \text{ kg/m}^3$ , (b)  $0.78 \text{ kg/m}^3$ , (c)  $1.35 \text{ kg/m}^3$ ,  
 (d)  $1.61 \text{ kg/m}^3$ , (e)  $2.61 \text{ kg/m}^3$
- FE9.10** In Prob. FE9.9, what is the Mach number just downstream of the shock wave?  
 (a) 0.42, (b) 0.55, (c) 0.63, (d) 1.00, (e) 1.76

## Comprehensive Problems


- C9.1** The converging-diverging nozzle sketched in Fig. C9.1 is designed to have a Mach number of 2.00 at the exit plane (assuming the flow remains nearly isentropic). The flow travels from tank *a* to tank *b*, where tank *a* is much larger than tank *b*. (a) Find the area at the exit  $A_e$  and the back pressure  $p_b$  that will allow the system to operate at design conditions. (b) As time goes on, the back pressure will grow, since the second tank slowly fills up with more air. Since tank *a* is huge, the flow in the nozzle will remain the same, however, until a normal shock wave appears at the exit plane. At what back pressure will this occur? (c) If tank *b* is held at constant temperature,  $T = 20^\circ\text{C}$ , estimate how long it will take for the flow to go from design conditions to the condition of part (b)—that is, with a shock wave at the exit plane.
- C9.2** Two large air tanks, one at 400 K and 300 kPa and the other at 300 K and 100 kPa, are connected by a straight

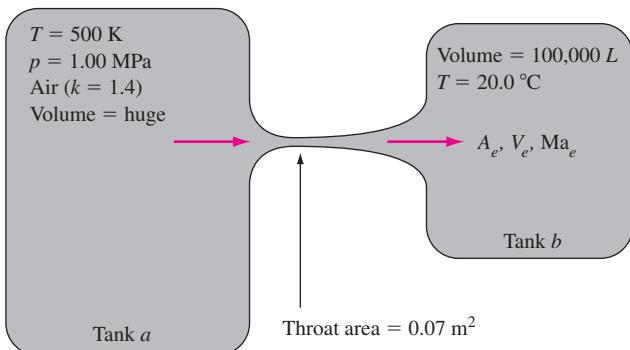

C9.1

tube 6 m long and 5 cm in diameter. The average friction factor is 0.0225. Assuming adiabatic flow, estimate the mass flow through the tube.

- \*C9.3** Figure C9.3 shows the exit of a converging-diverging nozzle, where an oblique shock pattern is formed. In the exit plane, which has an area of  $15 \text{ cm}^2$ , the air pressure is  $16 \text{ kPa}$  and the temperature is  $250 \text{ K}$ . Just outside the exit shock, which makes an angle of  $50^\circ$  with the exit plane, the temperature is  $430 \text{ K}$ . Estimate (a) the mass flow, (b) the throat area, (c) the turning angle of the exit flow, and, in the tank supplying the air, (d) the pressure and (e) the temperature.

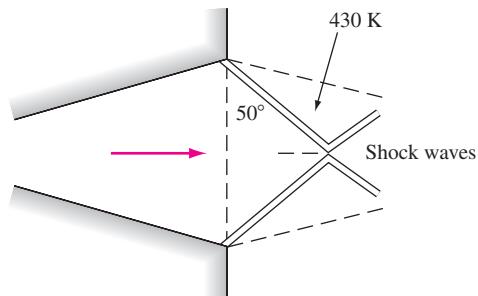

C9.3

- C9.4** The properties of a dense gas (high pressure and low temperature) are often approximated by van der Waals's equation of state [17, 18]:

$$p = \frac{\rho RT}{1 - b_1\rho} - a_1\rho^2$$

where constants  $a_1$  and  $b_1$  can be found from the critical temperature and pressure

$$a_1 = \frac{27R^2T_c^2}{64p_c} = 9.0 \times 10^5 \text{ lbf} \cdot \text{ft}^4/\text{slug}^2$$

for air, and

$$b_1 = \frac{RT_c}{8p_c} = 0.65 \text{ ft}^3/\text{slug}$$

for air. Find an analytic expression for the speed of sound of a van der Waals gas. Assuming  $k = 1.4$ , compute the speed of sound of air in ft/s at  $-100^\circ\text{F}$  and 20 atm for (a) a perfect gas and (b) a van der Waals gas. What percentage higher density does the van der Waals relation predict?

- C9.5** Consider one-dimensional steady flow of a nonideal gas, steam, in a converging nozzle. Stagnation conditions are  $p_0 = 100 \text{ kPa}$  and  $T_0 = 200^\circ\text{C}$ . The nozzle exit diameter is 2 cm. If the nozzle exit pressure is 70 kPa, calculate the mass flow and the exit temperature for real steam, either from the steam tables or using EES. (As a first estimate, assume steam to be an ideal gas from Table A.4.) Is the flow choked? How does EES estimate the exit Mach number? (b) Find the nozzle exit pressure and mass flow for which the steam flow is choked, using EES or the steam tables.


- C9.6** Extend Prob. C9.5 as follows. Let the nozzle be converging-diverging, with an exit diameter of 3 cm. Assume isentropic flow. (a) Find the exit Mach number, pressure, and temperature for an ideal gas from Table A.4. Does the mass flow agree with the value of  $0.0452 \text{ kg/s}$  in Prob. C9.5? (b) Investigate, briefly, the use of EES for this problem and explain why part (a) is unrealistic and poor convergence of EES is obtained. Hint: Study the pressure and temperature state predicted by part (a).

- C9.7** Professor Gordon Holloway and his student, Jason Bettle, of the University of New Brunswick obtained the following tabulated data for blow-down air flow through a converging-diverging nozzle similar in shape to Fig. P3.22. The supply tank pressure and temperature were  $29 \text{ psig}$  and  $74^\circ\text{F}$ , respectively. Atmospheric pressure was  $14.7 \text{ psia}$ . Wall pressures and centerline stagnation pressures were measured in the expansion section, which was a frustum of a cone. The nozzle throat is at  $x = 0$ .

$x(\text{cm})$	0	1.5	3	4.5	6	7.5	9
Diameter (cm)	1.00	1.098	1.195	1.293	1.390	1.488	1.585
$p_{\text{wall}} (\text{psig})$	7.7	-2.6	-4.9	-7.3	-6.5	-10.4	-7.4
$p_{\text{stagnation}} (\text{psig})$	29	26.5	22.5	18	16.5	14	10

Use the stagnation pressure data to estimate the local Mach number. Compare the measured Mach numbers and wall pressures with the predictions of one-dimensional theory. For  $x > 9 \text{ cm}$ , the stagnation pressure data was not thought by Holloway and Bettle to be a valid measure of Mach number. What is the probable reason?

- C9.8** Engineers call the supersonic combustion, in the scramjet of Fig. 9.30, almost miraculous, "like lighting a match in a hurricane." Figure C9.8 is a crude idealization of the engine. Air enters, burns fuel in the narrow section, then exits, all at supersonic speeds. There are no shock waves. Assume areas of  $1 \text{ m}^2$  at sections 1 and 4 and  $0.2 \text{ m}^2$  at sections 2 and 3. Let the entrance conditions be  $\text{Ma}_1 = 6$ , at 10,000 m standard altitude. Assume isentropic flow from 1 to 2, frictionless heat transfer from 2 to 3 with  $Q = 500 \text{ kJ/kg}$ , and isentropic flow from 3 to 4. Calculate the exit conditions and the thrust produced.

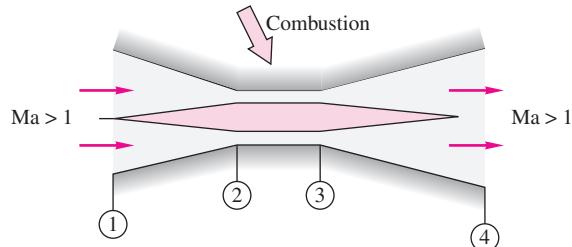


C9.8

## Design Projects

- D9.1** It is desired to select a rectangular wing for a fighter aircraft. The plane must be able (a) to take off and land on a 4500-ft-long sea-level runway and (b) to cruise supersonically at  $\text{Ma} = 2.3$  at 28,000-ft altitude. For simplicity, assume a wing with zero sweepback. Let the aircraft maximum weight equal  $(30 + n)(1000)$  lbf, where  $n$  is the number of letters in your surname. Let the available sea-level maximum thrust be one-third of the maximum weight, decreasing at altitude proportional to ambient density. Making suitable assumptions about the effect of finite aspect ratio on wing lift and drag, select a wing of minimum area sufficient to perform these takeoff/landing and cruise requirements. Some thought should be given to analyzing the wingtips and wing roots in supersonic flight, where Mach cones form and the flow is not two-dimensional. If no satisfactory solution is possible, gradually increase the available thrust to converge to an acceptable design.
- D9.2** Consider supersonic flow of air at sea-level conditions past a wedge of half-angle  $\theta$ , as shown in Fig. D9.2. Assume that the pressure on the back of the wedge equals the fluid pres-

sure as it exits the Prandtl-Meyer fan. (a) Suppose  $\text{Ma}_{\infty} = 3.0$ . For what angle  $\theta$  will the supersonic wave drag coefficient  $C_D$ , based on frontal area, be exactly 0.5? (b) Suppose that  $\theta = 20^\circ$ . Is there a free-stream Mach number for which the wave drag coefficient  $C_D$ , based on frontal area, will be exactly 0.5? (c) Investigate the percentage increase in  $C_D$  from (a) and (b) due to including boundary layer friction drag in the calculation.

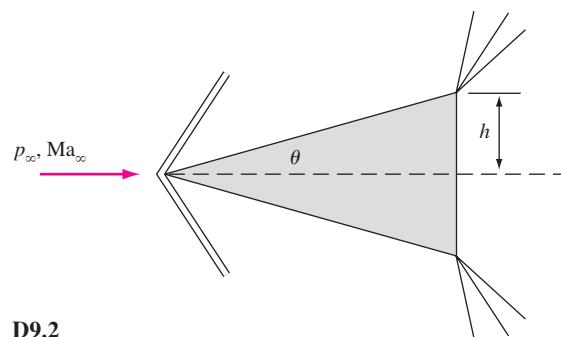

D9.2

## References

1. J. E. A. John and T. G. Keith, *Gas Dynamics*, 3d ed., Pearson Education, Upper Saddle River, NJ, 2005.
2. B. K. Hodge and K. Koenig, *Compressible Fluid Dynamics: With Personal Computer Applications*, Pearson Prentice-Hall, Upper Saddle River, NJ, 1995.
3. R. D. Zucker and O. Biblarz, 2d ed., *Fundamentals of Gas Dynamics*, Wiley, New York, 2002.
4. J. D. Anderson, *Modern Compressible Flow: with Historical Perspective*, 3d ed., McGraw-Hill, New York, 2002.
5. A. H. Shapiro, *The Dynamics and Thermodynamics of Compressible Fluid Flow*, 2 vols., Wiley, New York, 1953.
6. C. Cercignani, *Rarefied Gas Dynamics*, Cambridge University Press, New York, 2000.
7. H. W. Liepmann and A. Roshko, *Elements of Gas Dynamics*, Dover, New York, 2001.
8. I. Straskraba, *Introduction to the Mathematical Theory of Compressible Flow*, Oxford University Press, New York, 2004.
9. P. A. Thompson, *Compressible Fluid Dynamics*, McGraw-Hill, New York, 1972.
10. P. H. Oosthuizen and W. E. Carscallen, *Compressible Fluid Flow*, McGraw-Hill, New York, 2003.
11. J. D. Anderson, *Hypersonic and High Temperature Gas Dynamics*, 2d ed., AIAA, Reston, VA, 2006.
12. G. A. Bird, *Molecular Gas Dynamics and the Direct Simulation of Gas Flows*, Clarendon Press, Oxford, 1994.
13. D. D. Knight, *Elements of Numerical Methods for Compressible Flows*, Cambridge University Press, New York, 2006.
14. L. W. Reithmaier, *Mach 1 and Beyond: The Illustrated Guide to High-Speed Flight*, McGraw-Hill, 1994.
15. W. T. Parry, *ASME International Steam Tables for Industrial Use*, ASME, New York, 2000.
16. J. H. Keenan et al., *Gas Tables: International Version*, Krieger Publishing, Melbourne, FL, 1992.
17. Y. A. Cengel and M. A. Boles, *Thermodynamics: An Engineering Approach*, 5th ed., McGraw-Hill, New York, 2007.
18. M. J. Moran and H. A. Shapiro, *Fundamentals of Engineering Thermodynamics*, Wiley, New York, 2007.
19. F. M. White, *Viscous Fluid Flow*, 3d ed., McGraw-Hill, New York, 2005.
20. J. Palmer, K. Ramsden, and E. Goodger, *Compressible Flow Tables for Engineers: With Appropriate Computer Programs*, Scholium Intl., Port Washington, NY, 1989.
21. M. R. Lindeburg, *Consolidated Gas Dynamics Tables*, Professional Publications, Inc., Belmont, CA, 1994.

22. A. M. Shekhtman, *Gasdynamic Functions of Real Gases*, Taylor and Francis, New York, 1991.
23. J. H. Keenan and E. P. Neumann, "Measurements of Friction in a Pipe for Subsonic and Supersonic Flow of Air," *Journal of Applied Mechanics*, vol. 13, no. 2, 1946, p. A-91.
24. R. P. Benedict, *Fundamentals of Pipe Flow*, John Wiley, New York, 1980.
25. J. L. Sims, *Tables for Supersonic Flow around Right Circular Cones at Zero Angle of Attack*, NASA SP-3004, 1964 (see also NASA SP-3007).
26. J. L. Thomas, "Reynolds Number Effects on Supersonic Asymmetrical Flows over a Cone," *Journal of Aircraft*, vol. 30, no. 4, 1993, pp. 488–495.
27. W. Bober and R. A. Kenyon, *Fluid Mechanics*, Wiley, New York, 1980.
28. J. Ackeret, "Air Forces on Airfoils Moving Faster than Sound Velocity," *NACA Tech. Memo.* 317, 1925.
29. W. B. Brower, *Theory, Tables and Data for Compressible Flow*, Taylor & Francis, New York, 1990.
30. M. Belfiore, "The Hypersonic Age is Near," *Popular Science*, January 2008, pp. 36–41.



A giant water release from the Xiaolangdi reservoir in central China's Henan province. The release washes silt from the riverbed and provides water to drought areas downstream. This spectacular open channel flow can be analyzed by the methods of the present chapter, although it is somewhat beyond the imagination of this writer. (*Courtesy of the Associated Press.*)

# Chapter 10

## Open-Channel Flow

**Motivation.** An *open-channel flow* denotes a flow with a free surface touching an atmosphere, like a river or a canal or a flume. Closed-duct flows (Chap. 6) are full of fluid, either liquid or gas, have no free surface within, and are driven by a pressure gradient along the duct axis. The open-channel flows here are driven by gravity alone, and the pressure gradient at the atmospheric interface is negligible. The basic force balance in an open channel is between gravity and friction.

Open-channel flows are an especially important mode of fluid mechanics for civil and environmental engineers. One needs to predict the flow rates and water depths that result from a given channel geometry, whether natural or artificial, and a given wet-surface roughness. Water is almost always the relevant fluid, and the channel size is usually large. Thus open-channel flows are generally turbulent, three-dimensional, sometimes unsteady, and often quite complex. This chapter presents some simple engineering theories and experimental correlations for steady flow in straight channels of regular geometry. We can borrow and use some concepts from duct flow analysis: hydraulic radius, friction factor, and head losses.

### 10.1 Introduction

Simply stated, open-channel flow is the flow of a liquid in a conduit with a free surface. There are many practical examples, both artificial (flumes, spillways, canals, weirs, drainage ditches, culverts) and natural (streams, rivers, estuaries, floodplains). This chapter introduces the elementary analysis of such flows, which are dominated by the effects of gravity.

The presence of the free surface, which is essentially at atmospheric pressure, both helps and hurts the analysis. It helps because the pressure can be taken as constant along the free surface, which therefore is equivalent to the *hydraulic grade line* (HGL) of the flow. Unlike flow in closed ducts, the pressure gradient is not a direct factor in open-channel flow, where the balance of forces is confined to gravity and friction.<sup>1</sup> But the free surface complicates the analysis because its shape is a priori unknown:

<sup>1</sup>Surface tension is rarely important because open channels are normally quite large and have a very large Weber number. Surface tension affects small models of large channels.

The depth profile changes with conditions and must be computed as part of the problem, especially in unsteady problems involving wave motion.

Before proceeding, we remark, as usual, that whole books have been written on open-channel hydraulics [1 to 7, 32]. There are also specialized texts devoted to wave motion [8 to 10] and to engineering aspects of coastal free-surface flows [11 to 13]. This chapter is only an introduction to broader and more detailed treatments. The writer recommends, as an occasional break from free-surface flow analysis, Ref. 31, which is an enchanting and spectacular gallery of ocean wave photographs.

## The One-Dimensional Approximation

An open channel always has two sides and a bottom, where the flow satisfies the no-slip condition. Therefore even a straight channel has a three-dimensional velocity distribution. Some measurements of straight-channel velocity contours are shown in Fig. 10.1. The profiles are quite complex, with maximum velocity typically occurring in the midplane about 20 percent below the surface. In very broad shallow channels the maximum velocity is near the surface, and the velocity profile is nearly logarithmic from the bottom to the free surface, as in Eq. (6.65). In noncircular channels there are also secondary motions similar to Fig. 6.16 for closed-duct flows. If the channel curves or meanders, the secondary motion intensifies due to centrifugal effects, with high velocity occurring near the outer radius of the bend. Curved natural channels are subject to strong bottom erosion and deposition effects.

With the advent of the supercomputer, it is possible to make numerical simulations of complex flow patterns such as in Fig. 10.1 [27, 28]. However, the practical engineering approach, used here, is to make a one-dimensional flow approximation, as in Fig. 10.2. Since the liquid density is nearly constant, the steady flow continuity equation reduces to constant-volume flow  $Q$  along the channel

$$Q = V(x)A(x) = \text{const} \quad (10.1)$$

where  $V$  is average velocity and  $A$  the local cross-sectional area, as sketched in Fig. 10.2.

A second one-dimensional relation between velocity and channel geometry is the energy equation, including friction losses. If points 1 (upstream) and 2 (downstream) are on the free surface,  $p_1 = p_2 = p_a$ , and we have, for steady flow,


$$\frac{V_1^2}{2g} + z_1 = \frac{V_2^2}{2g} + z_2 + h_f \quad (10.2)$$

where  $z$  denotes the total elevation of the free surface, which includes the water depth  $y$  (see Fig. 10.2a) plus the height of the (sloping) bottom. The friction head loss  $h_f$  is analogous to head loss in duct flow from Eq. (6.10):


$$h_f \approx f \frac{x_2 - x_1}{D_h} \frac{V_{\text{av}}^2}{2g} \quad D_h = \text{hydraulic diameter} = \frac{4A}{P} \quad (10.3)$$

where  $f$  is the average friction factor (Fig. 6.13) between sections 1 and 2. Since channels are irregular in shape, their “size” is taken to be the hydraulic *radius*:

$$R_h = \frac{1}{4} D_h = \frac{A}{P} \quad (10.4)$$

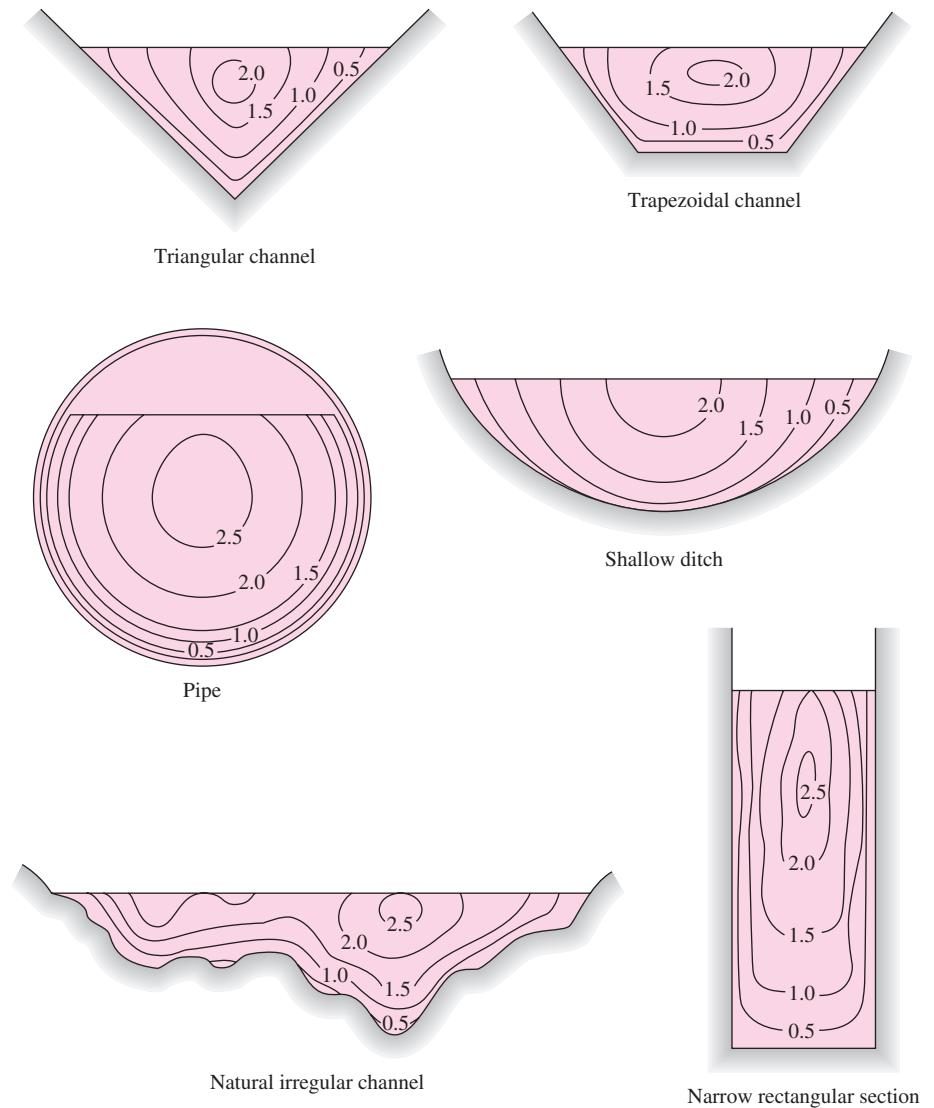

**Fig. 10.1** Measured isovelocity contours in typical straight open-channel flows. (From Ref. 2.)

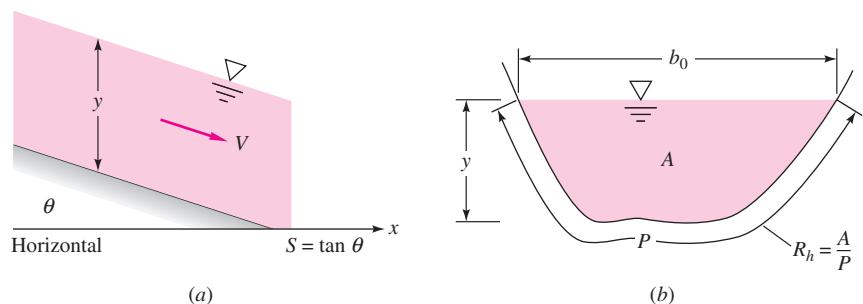

**Fig. 10.2** Geometry and notation for open-channel flow: (a) side view; (b) cross section. All these parameters are constant in uniform flow.

The local Reynolds number of the channel would be  $\text{Re} = VR_h/\nu$ , which is usually highly turbulent ( $>1 \times 10^5$ ). The only commonly occurring laminar channel flows are the thin sheets that form as rainwater drains from crowned streets and airport runways.

The wetted perimeter  $P$  (see Fig. 10.2b) includes the sides and bottom of the channel but not the free surface and, of course, not the parts of the sides above the water level. For example, if a rectangular channel is  $b$  wide and  $h$  high and contains water to depth  $y$ , its wetted perimeter is

$$P = b + 2y$$

not  $2b + 2h$ .


Although the Moody chart (Fig. 6.13) would give a good estimate of the friction factor in channel flow, in practice it is seldom used. An alternative correlation due to Robert Manning, discussed in Sec. 10.2, is the formula of choice in open-channel hydraulics.

### Flow Classification by Depth Variation

The most common method of classifying open-channel flows is by the rate of change of the free-surface depth. The simplest and most widely analyzed case is *uniform fw*, where the depth and area (hence the velocity in steady flow) remain constant. Uniform flow conditions are approximated by long straight runs of constant-slope and constant-area channel. A channel in uniform flow is said to be moving at its *normal depth*  $y_n$ , which is an important design parameter.

If the channel slope or cross section changes or there is an obstruction in the flow, then the depth changes and the flow is said to be *varied*. The flow is *gradually varying* if the one-dimensional approximation is valid and *rapidly varying* if not. Some examples of this method of classification are shown in Fig. 10.3. The classes can be summarized as follows:

1. Uniform flow (constant depth and slope).
2. Varied flow:
  - a. Gradually varied (one-dimensional).
  - b. Rapidly varied (multidimensional).

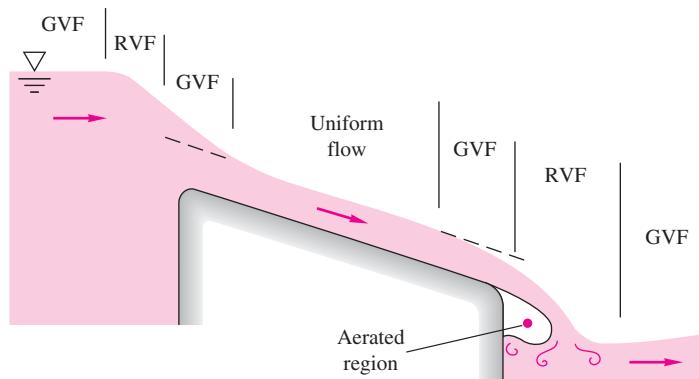

**Fig. 10.3** Open-channel flow classified by regions of rapidly varying flow (RVF), gradually varying flow (GVF), and uniform flow depth profiles.

Typically uniform flow is separated from rapidly varying flow by a region of gradually varied flow. Gradually varied flow can be analyzed by a first-order differential equation (Sec. 10.6), but rapidly varying flow usually requires experimentation or three-dimensional computational fluid dynamics [14].

### Flow Classification by Froude Number

A second and very useful classification of open-channel flow is by the dimensionless Froude number,  $Fr$ , which is the ratio of channel velocity to the speed of propagation of a small-disturbance wave in the channel. For a rectangular or very wide constant-depth channel, this takes the form

$$Fr = \frac{\text{flow velocity}}{\text{surface wave speed}} = \frac{V}{\sqrt{gy}} \quad (10.5)$$

where  $y$  is the water depth. The flow behaves differently depending on these three flow regimes:


Fr < 1.0	subcritical flow
Fr = 1.0	critical flow
Fr > 1.0	supercritical flow

(10.6)

The Froude number for irregular channels is defined in Sec. 10.4. As mentioned in Sec. 9.10, there is a strong analogy here with the three compressible flow regimes of the Mach number: subsonic ( $Ma < 1$ ), sonic ( $Ma = 1$ ), and supersonic ( $Ma > 1$ ). We shall use the analogy in Sec. 10.4. The analogy is pursued in Ref. 21.

### Surface Wave Speed

The Froude number denominator  $(gy)^{1/2}$  is the speed of an infinitesimal shallow-water surface wave. We can derive this with reference to Fig. 10.4a, which shows a wave of height  $\delta y$  propagating at speed  $c$  into still liquid. To achieve a steady flow inertial frame of reference, we fix the coordinates on the wave as in Fig. 10.4b, so that the still water moves to the right at velocity  $c$ . Figure 10.4 is exactly analogous to Fig. 9.1, which analyzed the speed of sound in a fluid. It can be used to analyze tidal bores, Fig. P10.86, which are described by Chanson [34].

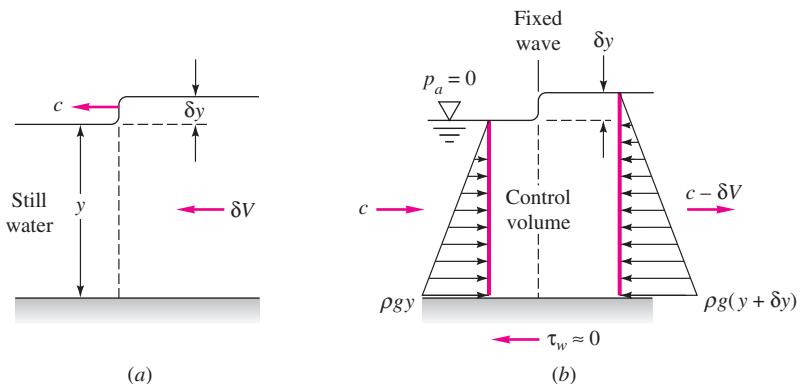

**Fig. 10.4** Analysis of a small surface wave propagating into still shallow water; (a) moving wave, nonsteady frame; (b) fixed wave, inertial frame of reference.

For the control volume of Fig. 10.4b, the one-dimensional continuity relation is, for channel width  $b$ ,

$$\rho cyb = \rho(c - \delta V)(y + \delta y)b$$

or

$$\delta V = c \frac{\delta y}{y + \delta y} \quad (10.7)$$

This is analogous to Eq. (9.10); the velocity change  $\delta V$  induced by a surface wave is small if the wave is “weak,”  $\delta y \ll y$ . If we neglect bottom friction in the short distance across the wave in Fig. 10.4b, the momentum relation is a balance between the net hydrostatic pressure force and momentum:

$$-\frac{1}{2}\rho g b[(y + \delta y)^2 - y^2] = \rho c b y(c - \delta V - c)$$

or

$$g\left(1 + \frac{\frac{1}{2}\delta y}{y}\right)\delta y = c \delta V \quad (10.8)$$

This is analogous to Eq. (9.12). By eliminating  $\delta V$  between Eqs. (10.7) and (10.8) we obtain the desired expression for wave propagation speed:


$$c^2 = gy\left(1 + \frac{\delta y}{y}\right)\left(1 + \frac{\frac{1}{2}\delta y}{y}\right) \quad (10.9)$$

The “stronger” the wave height  $\delta y$ , the faster the wave speed  $c$ , by analogy with Eq. (9.13). In the limit of an infinitesimal wave height  $\delta y \rightarrow 0$ , the speed becomes

$$c_0^2 = gy \quad (10.10)$$

This is the surface-wave equivalent of fluid sound speed  $a$ , and thus the Froude number in channel flow  $Fr = V/c_0$  is the analog of the Mach number. For  $y = 1$  m,  $c_0 = 3.1$  m/s.

As in gas dynamics, a channel flow can accelerate from subcritical to critical to supercritical flow and then return to subcritical flow through a sort of normal shock called a *hydraulic jump* (Sec. 10.5). This is illustrated in Fig. 10.5. The flow upstream of the sluice gate is subcritical. It then accelerates to critical and supercritical flow as it passes under the gate, which serves as a sort of “nozzle.” Further downstream the

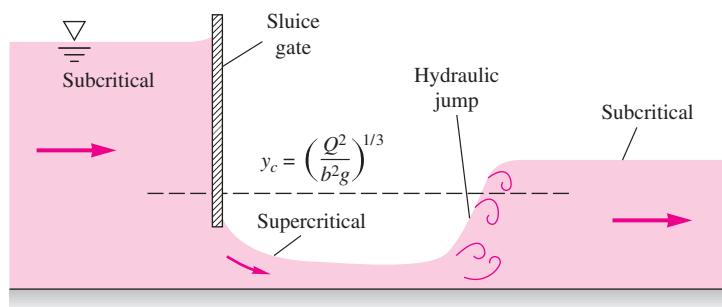

**Fig. 10.5** Flow under a sluice gate accelerates from subcritical to critical to supercritical flow and then jumps back to subcritical flow.

flow “shocks” back to subcritical flow because the downstream “receiver” height is too high to maintain supercritical flow. Note the similarity with the nozzle gas flows of Fig. 9.12.

The critical depth  $y_c = [Q^2/(b^2g)]^{1/3}$  is sketched as a dashed line in Fig. 10.5 for reference. Like the normal depth  $y_n$ ,  $y_c$  is an important parameter in characterizing open-channel flow (see Sec. 10.4).

An excellent discussion of the various regimes of open-channel flow is given in Ref. 15.

## 10.2 Uniform Flow; The Chézy Formula

Uniform flow can occur in long straight runs of constant slope and constant channel cross section. The water depth is constant at  $y = y_n$ , and the velocity is constant at  $V = V_0$ . Let the slope be  $S_0 = \tan \theta$ , where  $\theta$  is the angle the bottom makes with the horizontal, considered positive for downhill flow. Then Eq. (10.2), with  $V_1 = V_2 = V_0$ , becomes

$$h_f = z_1 - z_2 = S_0 L \quad (10.11)$$

where  $L$  is the horizontal distance between sections 1 and 2. The head loss thus balances the loss in height of the channel. The flow is essentially fully developed, so that the Darcy-Weisbach relation, Eq. (6.10), holds

$$h_f = f \frac{L}{D_h} \frac{V_0^2}{2g} \quad D_h = 4R_h \quad (10.12)$$

with  $D_h = 4A/P$  used to accommodate noncircular channels. The geometry and notation for open-channel flow analysis are shown in Fig. 10.2.

By combining Eqs. (10.11) and (10.12) we obtain an expression for flow velocity in uniform channel flow:


$$V_0 = \left( \frac{8g}{f} \right)^{1/2} R_h^{1/2} S_0^{1/2} \quad (10.13)$$

For a given channel shape and bottom roughness, the quantity  $(8g/f)^{1/2}$  is constant and can be denoted by  $C$ . Equation (10.13) becomes

$$V_0 = C(R_h S_0)^{1/2} \quad Q = CA(R_h S_0)^{1/2} \quad \tau_{avg} = \rho g R_h S_0 \quad (10.14)$$

These are called the *Chézy formulas*, first developed by the French engineer Antoine Chézy in conjunction with his experiments on the Seine River and the Courpalet Canal in 1769. The quantity  $C$ , called the *Chézy coefficient*, varies from about 60 ft<sup>1/2</sup>/s for small rough channels to 160 ft<sup>1/2</sup>/s for large smooth channels (30 to 90 m<sup>1/2</sup>/s in SI units).

Over the past century a great deal of hydraulics research [16] has been devoted to the correlation of the Chézy coefficient with the roughness, shape, and slope of various open channels. Correlations are due to Ganguillet and Kutter in 1869, Manning in 1889, Bazin in 1897, and Powell in 1950 [16]. All these formulations are discussed in delicious detail in Ref. 2, Chap. 5. Here we confine our treatment to Manning’s correlation, the most popular.

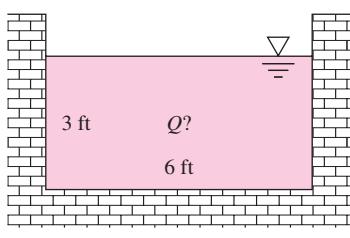

E10.1

**EXAMPLE 10.1**

A straight rectangular channel is 6 ft wide and 3 ft deep and laid on a slope of  $2^\circ$ . The friction factor is 0.022. Estimate the uniform flow rate in cubic feet per second.

**Solution**

- System sketch:** The channel cross section is shown in Fig. E10.1.
- Assumptions:** Steady, uniform channel flow with  $\theta = 2^\circ$ .
- Approach:** Evaluate the Chézy formula, Eq. (10.13) or (10.14).
- Property values:** Please note that there are *no* fluid physical properties involved in the Chézy formula. Can you explain this?
- Solution step:** Simply evaluate each term in the Chézy formula, Eq. (10.13):

$$C = \sqrt{\frac{8g}{f}} = \sqrt{\frac{8(32.2 \text{ ft/s}^2)}{0.022}} = 108 \frac{\text{ft}^{1/2}}{\text{s}} \quad A = by = (6 \text{ ft})(3 \text{ ft}) = 18 \text{ ft}^2$$

$$R_h = \frac{A}{P_{\text{wet}}} = \frac{18 \text{ ft}^2}{(3 + 6 + 3 \text{ ft})} = 1.5 \text{ ft} \quad S_0 = \tan(\theta) = \tan(2^\circ)$$

$$\text{Then } Q = CAR_h^{1/2}S_0^{1/2} = \left(108 \frac{\text{ft}^{1/2}}{\text{s}}\right)(18 \text{ ft}^2)(1.5 \text{ ft})^{1/2}(\tan 2^\circ)^{1/2} \approx 450 \text{ ft}^3/\text{s} \quad \text{Ans.}$$

- Comments:** Uniform flow estimates are straightforward if the geometry is simple. Results are independent of water density and viscosity because the flow is fully rough and driven by gravity. Note the high flow rate, larger than some rivers. Two degrees is a substantial channel slope.

**The Manning Roughness Correlation**

The most fundamentally sound approach to the Chézy formula is to use Eq. (10.13) with  $f$  estimated from the Moody friction factor chart, Fig. 6.13. Indeed, the open-channel research establishment [18] strongly recommends use of the friction factor in all calculations. Since typical channels are large and rough, we would generally use the fully rough turbulent flow limit of Eq. (6.48)

$$f \approx \left(2.0 \log \frac{14.8 R_h}{\epsilon}\right)^{-2} \quad (10.15)$$

where  $\epsilon$  is the roughness height, with typical values listed in Table 10.1.

In spite of the attractiveness of this friction factor approach, most engineers prefer to use a simple (dimensional) correlation published in 1891 by Robert Manning [17], an Irish engineer. In tests with real channels, Manning found that the Chézy coefficient  $C$  increased approximately as the sixth root of the channel size. He proposed the simple formula

$$C = \left(\frac{8g}{f}\right)^{1/2} \approx \alpha \frac{R_h^{1/6}}{n} \quad (10.16)$$

where  $n$  is a roughness parameter. Since the formula is clearly not dimensionally consistent, it requires a conversion factor  $\alpha$  that changes with the system of units used:

$$\alpha = 1.0 \quad \text{SI units} \quad \alpha = 1.486 \quad \text{BG units} \quad (10.17)$$

**Table 10.1** Experimental Values of Manning's  $n$  Factor\*

	<i>n</i>	ft	Average roughness height $\epsilon$	mm
Artificial lined channels:				
Glass	$0.010 \pm 0.002$	0.0011	0.3	
Brass	$0.011 \pm 0.002$	0.0019	0.6	
Steel, smooth	$0.012 \pm 0.002$	0.0032	1.0	
Painted	$0.014 \pm 0.003$	0.0080	2.4	
Riveted	$0.015 \pm 0.002$	0.012	3.7	
Cast iron	$0.013 \pm 0.003$	0.0051	1.6	
Concrete, finished	$0.012 \pm 0.002$	0.0032	1.0	
Unfinished	$0.014 \pm 0.002$	0.0080	2.4	
Planed wood	$0.012 \pm 0.002$	0.0032	1.0	
Clay tile	$0.014 \pm 0.003$	0.0080	2.4	
Brickwork	$0.015 \pm 0.002$	0.012	3.7	
Asphalt	$0.016 \pm 0.003$	0.018	5.4	
Corrugated metal	$0.022 \pm 0.005$	0.12	37	
Rubble masonry	$0.025 \pm 0.005$	0.26	80	
Excavated earth channels:				
Clean	$0.022 \pm 0.004$	0.12	37	
Gravelly	$0.025 \pm 0.005$	0.26	80	
Weedy	$0.030 \pm 0.005$	0.8	240	
Stony, cobbles	$0.035 \pm 0.010$	1.5	500	
Natural channels:				
Clean and straight	$0.030 \pm 0.005$	0.8	240	
Sluggish, deep pools	$0.040 \pm 0.010$	3	900	
Major rivers	$0.035 \pm 0.010$	1.5	500	
Floodplains:				
Pasture, farmland	$0.035 \pm 0.010$	1.5	500	
Light brush	$0.05 \pm 0.02$	6	2000	
Heavy brush	$0.075 \pm 0.025$	15	5000	
Trees	$0.15 \pm 0.05$	?	?	

\*A more complete list is given in Ref. 2, pp. 110–113.

Recall that we warned about this awkwardness in Example 1.4. You may verify that  $\alpha$  is the cube root of the conversion factor between the meter and your chosen length scale: In BG units,  $\alpha = (3.2808 \text{ ft/m})^{1/3} = 1.486$ .<sup>2</sup>

The Manning formula for uniform flow velocity is thus

$$\boxed{\begin{aligned} V_0 (\text{m/s}) &\approx \frac{1.0}{n} [R_h (\text{m})]^{2/3} S_0^{1/2} \\ V_0 (\text{ft/s}) &\approx \frac{1.486}{n} [R_h (\text{ft})]^{2/3} S_0^{1/2} \end{aligned}} \quad (10.18)$$

<sup>2</sup>An interesting discussion of the history and “dimensionality” of Manning’s formula is given in Ref. 2, pp. 98–99.

The channel slope  $S_0$  is dimensionless, and  $n$  is taken to be the same in both systems. The volume flow rate simply multiplies this result by the area:

Uniform flow:

$$Q = V_0 A \approx \frac{\alpha}{n} A R_h^{2/3} S_0^{1/2} \quad (10.19)$$

Experimental values of  $n$  (and the corresponding roughness height) are listed in Table 10.1 for various channel surfaces. There is a factor-of-15 variation from a smooth glass surface ( $n \approx 0.01$ ) to a tree-lined floodplain ( $n \approx 0.15$ ). Due to the irregularity of typical channel shapes and roughness, the scatter bands in Table 10.1 should be taken seriously. For routine calculations, always use the average roughness in Table 10.1.

Since Manning's sixth-root size variation is not exact, real channels can have a variable  $n$  depending on the water depth. The Mississippi River near Memphis, Tennessee, has  $n \approx 0.032$  at 40-ft flood depth, 0.030 at normal 20-ft depth, and 0.040 at 5-ft low-stage depth. Seasonal vegetative growth and factors such as bottom erosion can also affect the value of  $n$ . Even nearly identical man-made channels can vary. Brater et al. [19] report that U.S. Bureau of Reclamation tests, on large concrete-lined canals, yielded values of  $n$  ranging from 0.012 to 0.017.

### EXAMPLE 10.2

Engineers find that the most efficient rectangular channel (maximum uniform flow for a given area) flows at a depth equal to half the bottom width. Consider a rectangular brickwork channel laid on a slope of 0.006. What is the best bottom width for a flow rate of 100 ft<sup>3</sup>/s?

#### Solution

- *Assumptions:* Uniform flow in a straight channel of constant of slope  $S = 0.006$ .
- *Approach:* Use the Manning formula in English units, Eq. (10.19), to predict the flow rate.
- *Property values:* For brickwork, from Table 10.1, the roughness factor  $n \approx 0.015$ .
- *Solution:* For bottom width  $b$ , take the water depth to be  $y = b/2$ . Equation (10.19) becomes

$$A = by = b(b/2) = \frac{b^2}{2} \quad R_h = \frac{A}{P} = \frac{by}{b + 2y} = \frac{b^2/2}{b + 2(b/2)} = \frac{b}{4}$$

$$Q = \frac{\alpha}{n} A R_h^{2/3} S^{1/2} = \frac{1.486}{0.015} \left(\frac{b^2}{2}\right) \left(\frac{b}{4}\right)^{2/3} (0.006)^{1/2} = 100 \frac{\text{ft}^3}{\text{s}}$$

$$\text{Clean this up: } b^{8/3} = 65.7 \quad \text{solve for } b \approx 4.8 \text{ ft} \quad \text{Ans.}$$


- *Comments:* The Manning approach is simple and effective. The Moody friction factor method, Eq. (10.14), requires laborious iteration and leads to a result  $b \approx 4.81$  ft.

### Normal Depth Estimates

With water depth  $y$  known, the computation of  $Q$  is quite straightforward. However, if  $Q$  is given, the computation of the normal depth  $y_n$  may require iteration. Since the normal depth is a characteristic flow parameter, this is an important type of problem.

**EXAMPLE 10.3**

The asphalt-lined trapezoidal channel in Fig. E10.3 carries 300 ft<sup>3</sup>/s of water under uniform flow conditions when  $S = 0.0015$ . What is the normal depth  $y_n$ ?

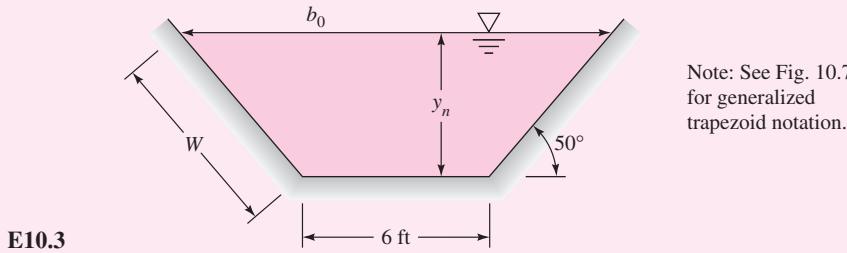**Solution**

From Table 10.1, for asphalt,  $n \approx 0.016$ . The area and hydraulic radius are functions of  $y_n$ , which is unknown:

$$\begin{aligned} b_0 &= 6 \text{ ft} + 2y_n \cot 50^\circ & A &= \frac{1}{2}(6 + b_0)y_n = 6y_n + y_n^2 \cot 50^\circ \\ P &= 6 + 2W = 6 + 2y_n \csc 50^\circ \end{aligned}$$

From Manning's formula (10.19) with a known  $Q = 300$  ft<sup>3</sup>/s, we have

$$\begin{aligned} 300 &= \frac{1.49}{0.016} (6y_n + y_n^2 \cot 50^\circ) \left( \frac{6y_n + y_n^2 \cot 50^\circ}{6 + 2y_n \csc 50^\circ} \right)^{2/3} (0.0015)^{1/2} \\ \text{or } (6y_n + y_n^2 \cot 50^\circ)^{5/3} &= 83.2(6 + 2y_n \csc 50^\circ)^{2/3} \end{aligned} \quad (1)$$

One can iterate Eq. (1) laboriously and eventually find  $y_n \approx 4.6$  ft. However, it is a perfect candidate for EES. Instead of manipulating and programming the final formula, one might simply evaluate each separate part of the Chézy equation (in English units, with angles in degrees):

$$\begin{aligned} P &= 6 + 2*yn/\sin(50) \\ A &= 6*yn + yn^2/\tan(50) \\ Rh &= A/P \\ 300 &= 1.49/0.016*A*Rh^{(2/3)}*0.0015^{0.5} \end{aligned}$$

Select Solve from the menu bar, and EES complains of "negative numbers to a power." Go back to Variable Information on the menu bar and make sure that  $y_n$  is positive. EES then immediately solves for


$$P = 17.95 \quad A = 45.04 \quad R_h = 2.509 \quad y_n = 4.577 \text{ ft} \quad \text{Ans.}$$

Generally, EES is ideal for open-channel flow problems where the depth is unknown.


**Uniform Flow in a Partly Full Circular Pipe**

Consider the partially full pipe of Fig. 10.6a in uniform flow. The maximum velocity and flow rate actually occur before the pipe is completely full. In terms of the pipe radius  $R$  and the angle  $\theta$  up to the free surface, the geometric properties are

$$A = R^2 \left( \theta - \frac{\sin 2\theta}{2} \right) \quad P = 2R\theta \quad R_h = \frac{R}{2} \left( 1 - \frac{\sin 2\theta}{2\theta} \right)$$

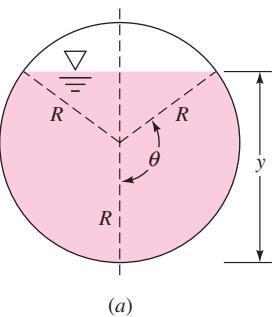

(a)

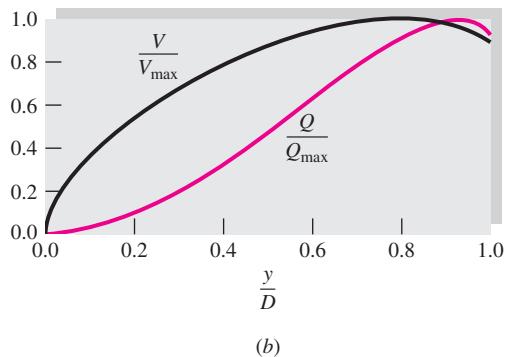

**Fig. 10.6** Uniform flow in a partly full circular channel: (a) geometry; (b) velocity and flow rate versus depth.

The Manning formulas (10.19) predict a uniform flow as follows:

$$V_0 \approx \frac{\alpha}{n} \left[ \frac{R}{2} \left( 1 - \frac{\sin 2\theta}{2\theta} \right) \right]^{2/3} S_0^{1/2} \quad Q = V_0 R^2 \left( \theta - \frac{\sin 2\theta}{2} \right) \quad (10.20)$$

For a given  $n$  and slope  $S_0$ , we may plot these two relations versus  $y/D$  in Fig. 10.6b. There are two different maxima, as follows:


$$V_{\max} = 0.718 \frac{\alpha}{n} R^{2/3} S_0^{1/2} \quad \text{at} \quad \theta = 128.73^\circ \quad \text{and} \quad y = 0.813D$$

$$Q_{\max} = 2.129 \frac{\alpha}{n} R^{8/3} S_0^{1/2} \quad \text{at} \quad \theta = 151.21^\circ \quad \text{and} \quad y = 0.938D \quad (10.21)$$

As shown in Fig. 10.6b, the maximum velocity is 14 percent more than the velocity when running full, and similarly the maximum discharge is 8 percent more. Since real pipes running nearly full tend to have somewhat unstable flow, these differences are not that significant.

### 10.3 Efficient Uniform-Flow Channels

The engineering design of an open channel has many parameters. If the channel surface can erode or scour, a low-velocity design might be sought. A dirt channel could be planted with grass to minimize erosion. For nonerodible surfaces, construction and lining costs might dominate, suggesting a cross section of minimum wetted perimeter. Nonerodible channels can be designed for maximum flow.

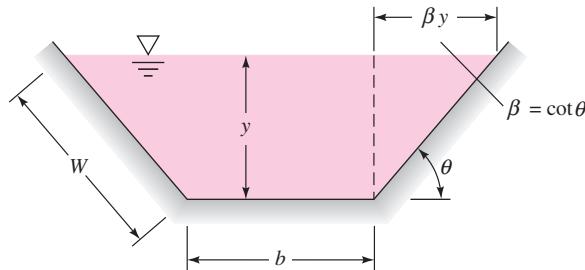

**Fig. 10.7** Geometry of a trapezoidal channel section.

The simplicity of Manning's formulation (10.19) enables us to analyze channel flows to determine the most efficient low-resistance sections for given conditions. The most common problem is that of maximizing  $R_h$  for a given flow area and discharge. Since  $R_h = A/P$ , maximizing  $R_h$  for given  $A$  is the same as minimizing the wetted perimeter  $P$ . There is no general solution for arbitrary cross sections, but an analysis of the trapezoid section will show the basic results.

Consider the generalized trapezoid of angle  $\theta$  in Fig. 10.7. For a given side angle  $\theta$ , the flow area is

$$A = by + \beta y^2 \quad \beta = \cot \theta \quad (10.22)$$

The wetted perimeter is

$$P = b + 2W = b + 2y(1 + \beta^2)^{1/2} \quad (10.23)$$

Eliminating  $b$  between (10.22) and (10.23) gives

$$P = \frac{A}{y} - \beta y + 2y(1 + \beta^2)^{1/2} \quad (10.24)$$

To minimize  $P$ , evaluate  $dP/dy$  for constant  $A$  and  $\beta$  and set equal to zero. The result is

$$A = y^2[2(1 + \beta^2)^{1/2} - \beta] \quad P = 4y(1 + \beta^2)^{1/2} - 2\beta y \quad R_h = \frac{1}{2}y \quad (10.25)$$

The last result is very interesting: For any angle  $\theta$ , the most efficient cross section for uniform flow occurs when the hydraulic radius is half the depth.

Since a rectangle is a trapezoid with  $\beta = 0$ , the most efficient rectangular section is such that

$$A = 2y^2 \quad P = 4y \quad R_h = \frac{1}{2}y \quad b = 2y \quad (10.26)$$

To find the correct depth  $y$ , these relations must be solved in conjunction with Manning's flow rate formula (10.19) for the given discharge  $Q$ .

### Best Trapezoid Angle

Equations (10.25) are valid for any value of  $\beta$ . What is the best value of  $\beta$  for a given depth and area? To answer this question, evaluate  $dP/d\beta$  from Eq. (10.24) with  $A$  and  $y$  held constant. The result is

$$2\beta = (1 + \beta^2)^{1/2} \quad \beta = \cot \theta = \frac{1}{3^{1/2}}$$

or

$$\theta = 60^\circ \quad (10.27)$$

Thus the maximum-flow trapezoid section is half a hexagon.

Similar calculations with a circular channel section running partially full show best efficiency for a semicircle,  $y = \frac{1}{2}D$ . In fact, the semicircle is the best of all possible channel sections (minimum wetted perimeter for a given flow area). The percentage improvement over, say, half a hexagon is very slight, however.

### EXAMPLE 10.4

- (a) What are the best dimensions  $y$  and  $b$  for a rectangular brick channel designed to carry  $5 \text{ m}^3/\text{s}$  of water in uniform flow with  $S_0 = 0.001$ ? (b) Compare results with a half-hexagon and semicircle.

#### Solution

##### Part (a)

From Eq. (10.26),  $A = 2y^2$  and  $R_h = \frac{1}{2}y$ . Manning's formula (10.19) in SI units gives, with  $n \approx 0.015$  from Table 10.1,

$$Q = \frac{1.0}{n} AR_h^{2/3} S_0^{1/2} \quad \text{or} \quad 5 \text{ m}^3/\text{s} = \frac{1.0}{0.015} (2y^2) \left( \frac{1}{2} y \right)^{2/3} (0.001)^{1/2}$$

which can be solved for

$$\begin{aligned} y^{8/3} &= 1.882 \text{ m}^{8/3} \\ y &= 1.27 \text{ m} \end{aligned} \quad \text{Ans.}$$

The proper area and width are

$$A = 2y^2 = 3.21 \text{ m}^2 \quad b = \frac{A}{y} = 2.53 \text{ m} \quad \text{Ans.}$$

##### Part (b)

It is constructive to see what flow rate a half-hexagon and semicircle would carry for the same area of  $3.214 \text{ m}^2$ .

For the half-hexagon (HH), with  $\beta = 1/3^{1/2} = 0.577$ , Eq. (10.25) predicts

$$A = y_{\text{HH}}^2 [2(1 + 0.577^2)^{1/2} - 0.577] = 1.732 y_{\text{HH}}^2 = 3.214$$

or  $y_{\text{HH}} = 1.362 \text{ m}$ , whence  $R_h = \frac{1}{2}y = 0.681 \text{ m}$ . The half-hexagon flow rate is thus

$$Q = \frac{1.0}{0.015} (3.214)(0.681)^{2/3} (0.001)^{1/2} = 5.25 \text{ m}^3/\text{s}$$

or about 5 percent more than that for the rectangle.

For a semicircle,  $A = 3.214 \text{ m}^2 = \pi D^2/8$ , or  $D = 2.861 \text{ m}$ , whence  $P = \frac{1}{2}\pi D = 4.494 \text{ m}$  and  $R_h = A/P = 3.214/4.494 = 0.715 \text{ m}$ . The semicircle flow rate will thus be

$$Q = \frac{1.0}{0.015} (3.214)(0.715)^{2/3} (0.001)^{1/2} = 5.42 \text{ m}^3/\text{s}$$

or about 8 percent more than that of the rectangle and 3 percent more than that of the half-hexagon.

## 10.4 Specific Energy; Critical Depth

The total head of any incompressible flow is the sum of its velocity head  $\alpha V^2/(2g)$ , pressure head  $p/\gamma$ , and potential head  $z$ . For open-channel flow, surface pressure is everywhere atmospheric, so that channel energy is a balance between velocity and

elevation head only. Since the flow is turbulent, we assume that  $\alpha \approx 1$ —recall Eq. (3.77). The final result is the quantity called *specific energy*  $E$ , as suggested by Bakhmeteff [1] in 1913:

$$E = y + \frac{V^2}{2g} \quad (10.28)$$

where  $y$  is the water depth. It is seen from Fig. 10.8 that  $E$  is the height of the *energy grade line* (EGL) above the channel bottom. For a given flow rate, there are usually two states possible, called *alternate states*, for the same specific energy. There is also a minimum energy,  $E_{\min}$ , which corresponds to a Froude number of unity.

### Rectangular Channels

Consider the possible states at a given location. Let  $q = Q/b = Vy$  be the discharge per unit width of a rectangular channel. Then, with  $q$  constant, Eq. (10.28) becomes


$$E = y + \frac{q^2}{2gy^2} \quad q = \frac{Q}{b} \quad (10.29)$$

Figure 10.8 is a plot of  $y$  versus  $E$  for constant  $q$  from Eq. (10.29). There is a minimum value of  $E$  at a certain value of  $y$  called the *critical depth*. By setting  $dE/dy = 0$  at constant  $q$ , we find that  $E_{\min}$  occurs at

$$y = y_c = \left( \frac{q^2}{g} \right)^{1/3} = \left( \frac{Q^2}{b^2 g} \right)^{1/3} \quad (10.30)$$

The associated minimum energy is

$$E_{\min} = E(y_c) = \frac{3}{2}y_c \quad (10.31)$$

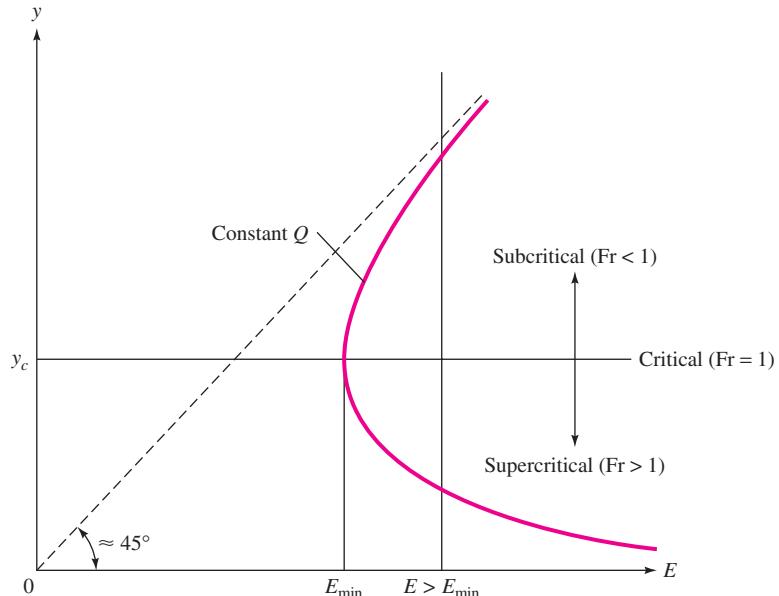

**Fig. 10.8** Illustration of a specific energy curve. The curve for each flow rate  $Q$  has a minimum energy corresponding to critical flow. For energy greater than minimum, there are two *alternate* flow states, one subcritical and one supercritical.

The depth  $y_c$  corresponds to channel velocity equal to the shallow-water wave propagation speed  $C_0$  from Eq. (10.10). To see this, rewrite Eq. (10.30) as

$$q^2 = gy_c^3 = (gy_c)y_c^2 = V_c^2 y_c \quad (10.32)$$

By comparison it follows that the critical channel velocity is

$$V_c = (gy_c)^{1/2} = C_0 \quad \text{Fr} = 1 \quad (10.33)$$

For  $E < E_{\min}$  no solution exists in Fig. 10.8, and thus such a flow is impossible physically. For  $E > E_{\min}$  two solutions are possible: (1) large depth with  $V < V_c$ , called *subcritical*, and (2) small depth with  $V > V_c$ , called *supercritical*. In subcritical flow, disturbances can propagate upstream because wave speed  $C_0 > V$ . In supercritical flow, waves are swept downstream: Upstream is a zone of silence, and a small obstruction in the flow will create a wedge-shaped wave exactly analogous to the Mach waves in Fig. 9.18c.<sup>3</sup> The angle of these waves must be

$$\mu = \sin^{-1} \frac{C_0}{V} = \sin^{-1} \frac{(gy)^{1/2}}{V} \quad (10.34)$$

The wave angle and the depth can thus be used as a simple measurement of supercritical flow velocity.

Note from Fig. 10.8 that small changes in  $E$  near  $E_{\min}$  cause a large change in the depth  $y$ , by analogy with small changes in duct area near the sonic point in Fig. 9.7. Thus critical flow is neutrally stable and is often accompanied by waves and undulations in the free surface. Channel designers should avoid long runs of near-critical flow.

### EXAMPLE 10.5

A wide rectangular clean-earth channel has a flow rate  $q = 50 \text{ ft}^3/(\text{s} \cdot \text{ft})$ . (a) What is the critical depth? (b) What type of flow exists if  $y = 3 \text{ ft}$ ?

#### Solution

##### Part (a)

The critical depth is independent of channel roughness and simply follows from Eq. (10.30):

$$y_c = \left( \frac{q^2}{g} \right)^{1/3} = \left( \frac{50^2}{32.2} \right)^{1/3} = 4.27 \text{ ft} \quad \text{Ans. (a)}$$

##### Part (b)

If the actual depth is 3 ft, which is less than  $y_c$ , the flow must be *supercritical*. Ans. (b)

## Nonrectangular Channels

If the channel width varies with  $y$ , the specific energy must be written in the form

$$E = y + \frac{Q^2}{2gA^2} \quad (10.35)$$

<sup>3</sup>This is the basis of the water channel analogy for supersonic gas dynamics experimentation [21, Chap. 11].

The critical point of minimum energy occurs where  $dE/dy = 0$  at constant  $Q$ . Since  $A = A(y)$ , Eq. (10.35) yields, for  $E = E_{\min}$ ,

$$\frac{dA}{dy} = \frac{gA^3}{Q^2} \quad (10.36)$$

But  $dA = b_0 dy$ , where  $b_0$  is the channel width at the free surface. Therefore Eq. (10.36) is equivalent to

$$A_c = \left( \frac{b_0 Q^2}{g} \right)^{1/3} \quad (10.37a)$$

$$V_c = \frac{Q}{A_c} = \left( \frac{g A_c}{b_0} \right)^{1/2} \quad (10.37b)$$

For a given channel shape  $A(y)$  and  $b_0(y)$  and a given  $Q$ , Eqs. (10.37) have to be solved by trial and error or by EES to find the critical area  $A_c$ , from which  $V_c$  can be computed.

By comparing the actual depth and velocity with the critical values, we can determine the local flow condition.

$y > y_c, V < V_c$ : subcritical flow ( $\text{Fr} < 1$ )

$y = y_c, V = V_c$ : critical flow ( $\text{Fr} = 1$ )

$y < y_c, V > V_c$ : supercritical flow ( $\text{Fr} < 1$ )

Note that  $V_c$  is equal to the speed of propagation  $c$  of a shallow water wave in the channel and is dependent upon the depth, as in Fig. 10.4a. For a rectangular channel,  $c = (gy)^{1/2}$ .

### Critical Uniform Flow: The Critical Slope

If a critical channel flow is also moving uniformly (at constant depth), it must correspond to a *critical slope*  $S_c$ , with  $y_n = y_c$ . This condition is analyzed by equating Eq. (10.37a) to the Chézy (or Manning) formula:

$$Q^2 = \frac{g A_c^3}{b_0} = C^2 A_c^2 R_h S_c = \frac{\alpha^2}{n^2} A_c^2 R_h^{4/3} S_c$$

or

$$S_c = \frac{n^2 g A_c}{\alpha^2 b_0 R_h^{4/3}} = \frac{n^2 V_c^2}{\alpha^2 R_h^{4/3}} = \frac{n^2 g}{\alpha^2 R_h^{1/3}} \frac{P}{b_0} = \frac{f}{8} \frac{P}{b_0} \quad (10.38)$$


where  $\alpha^2$  equals 1.0 for SI units and 2.208 for BG units. Equation (10.38) is valid for any channel shape. For a wide rectangular channel,  $b_0 \gg y_c$ , the formula reduces to

$$\text{Wide rectangular channel: } S_c \approx \frac{n^2 g}{\alpha^2 y_c^{1/3}} \approx \frac{f}{8}$$

This is a special case, a reference point. In most channel flows  $y_n \neq y_c$ . For fully rough turbulent flow, the critical slope varies between 0.002 and 0.008.

**EXAMPLE 10.6**

The  $50^\circ$  triangular channel in Fig. E10.6 has a flow rate  $Q = 16 \text{ m}^3/\text{s}$ . Compute (a)  $y_c$ , (b)  $V_c$ , and (c)  $S_c$  if  $n = 0.018$ .

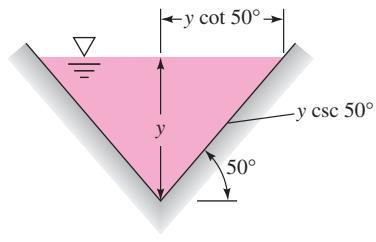**Solution****Part (a)**

E10.6

**Part (b)**

The critical flow condition satisfies Eq. (10.37a):

$$\begin{aligned} P &= 2y \csc 50^\circ & A &= y^2 \cot 50^\circ \\ R_h &= \frac{1}{2}y \cos 50^\circ & b_0 &= 2y \cot 50^\circ \end{aligned} \quad (1)$$

or

$$\begin{aligned} gA_c^3 &= b_0 Q^2 \\ g(y_c^2 \cot 50^\circ)^3 &= (2y_c \cot 50^\circ) Q^2 \\ y_c &= \left( \frac{2Q^2}{g \cot^2 50^\circ} \right)^{1/5} = \left[ \frac{2(16)^2}{9.81(0.839)^2} \right]^{1/5} = 2.37 \text{ m} \end{aligned} \quad \text{Ans. (a)}$$

With  $y_c$  known, from Eqs. (1) we compute  $P_c = 6.18 \text{ m}$ ,  $R_{hc} = 0.760 \text{ m}$ ,  $A_c = 4.70 \text{ m}^2$ , and  $b_{0c} = 3.97 \text{ m}$ . The critical velocity from Eq. (10.37b) is

$$V_c = \frac{Q}{A_c} = \frac{16 \text{ m}^3/\text{s}}{4.70 \text{ m}^2} = 3.41 \text{ m/s} \quad \text{Ans. (b)}$$

**Part (c)**

With  $n = 0.018$ , we compute from Eq. (10.38) a critical slope:

$$S_c = \frac{gn^2 P}{\alpha^2 R_h^{1/3} b_0} = \frac{9.81(0.018)^2(6.18)}{1.0(0.760)^{1/3}(3.97)} = 0.00542 \quad \text{Ans. (c)}$$

**Frictionless Flow over a Bump**


A rough analogy to compressible gas flow in a nozzle (Fig. 9.12) is open-channel flow over a bump, as in Fig. 10.9a. The behavior of the free surface is sharply different according to whether the approach flow is subcritical or supercritical. The height of the bump also can change the character of the results. For frictionless two-dimensional flow, sections 1 and 2 in Fig. 10.9a are related by continuity and momentum:

$$V_1 y_1 = V_2 y_2 \quad \frac{V_1^2}{2g} + y_1 = \frac{V_2^2}{2g} + y_2 + \Delta h$$

Eliminating  $V_2$  between these two gives a cubic polynomial equation for the water depth  $y_2$  over the bump:

$$y_2^3 - E_2 y_2^2 + \frac{V_1^2 y_1^2}{2g} = 0 \quad \text{where } E_2 = \frac{V_1^2}{2g} + y_1 - \Delta h \quad (10.39)$$

This equation has one negative and two positive solutions if  $\Delta h$  is not too large. Its behavior is illustrated in Fig. 10.9b and depends on whether condition 1 is on the upper or lower leg of the energy curve. The specific energy  $E_2$  is exactly  $\Delta h$  less than the approach energy  $E_1$ , and point 2 will lie on the same leg of the curve as  $E_1$ . A subcritical approach,

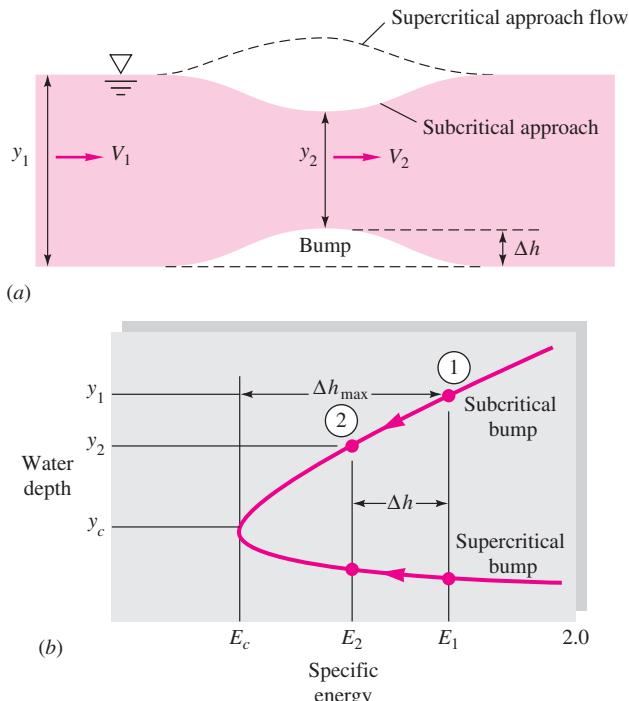

**Fig. 10.9** Frictionless two-dimensional flow over a bump:  
(a) definition sketch showing Froude number dependence;  
(b) specific energy plot showing bump size and water depths.

$\text{Fr}_1 < 1$ , will cause the water level to decrease at the bump. Supercritical approach flow,  $\text{Fr}_1 > 1$ , causes a water level increase over the bump.

If the bump height reaches  $\Delta h_{\max} = E_1 - E_c$ , as illustrated in Fig. 10.9b, the flow at the crest will be exactly critical ( $\text{Fr} = 1$ ). If  $\Delta h > \Delta h_{\max}$ , there are no physically correct solutions to Eq. (10.39). That is, a bump too large will “choke” the channel and cause frictional effects, typically a hydraulic jump (Sec. 10.5).

These bump arguments are reversed if the channel has a *depression* ( $\Delta h < 0$ ): Subcritical approach flow will cause a water level rise and supercritical flow a fall in depth. Point 2 will be  $|\Delta h|$  to the right of point 1, and critical flow cannot occur.

### EXAMPLE 10.7

Water flow in a wide channel approaches a 10-cm-high bump at 1.5 m/s and a depth of 1 m. Estimate (a) the water depth  $y_2$  over the bump and (b) the bump height that will cause the crest flow to be critical.

### Solution

#### Part (a)

First check the approach Froude number, assuming  $C_0 = \sqrt{gy}$ :

$$\text{Fr}_1 = \frac{V_1}{\sqrt{gy_1}} = \frac{1.5 \text{ m/s}}{\sqrt{(9.81 \text{ m/s}^2)(1.0 \text{ m})}} = 0.479 \quad (\text{subcritical})$$

For subcritical approach flow, if  $\Delta h$  is not too large, we expect a depression in the water level over the bump and a higher subcritical Froude number at the crest. With  $\Delta h = 0.1$  m, the specific energy levels must be

$$E_1 = \frac{V_1^2}{2g} + y_1 = \frac{(1.5)^2}{2(9.81)} + 1.0 = 1.115 \text{ m} \quad E_2 = E_1 - \Delta h = 1.015 \text{ m}$$


This physical situation is shown on a specific energy plot in Fig. E10.7. With  $y_1$  in meters, Eq. (10.39) takes on the numerical values

$$y_2^3 - 1.015y_2^2 + 0.115 = 0$$

There are three real roots:  $y_2 = +0.859$  m,  $+0.451$  m, and  $-0.296$  m. The third (negative) solution is physically impossible. The second (smaller) solution is the *supercritical* condition for  $E_2$  and is not possible for this subcritical bump. The first solution is correct:

$$y_2(\text{subcritical}) \approx 0.859 \text{ m} \quad \text{Ans. (a)}$$

The surface level has dropped by  $y_1 - y_2 - \Delta h = 1.0 - 0.859 - 0.1 = 0.041$  m. The crest velocity is  $V_2 = V_1 y_1 / y_2 = 1.745$  m/s. The Froude number at the crest is  $\text{Fr}_2 = 0.601$ . Flow downstream of the bump is subcritical. These flow conditions are shown in Fig. E10.7.

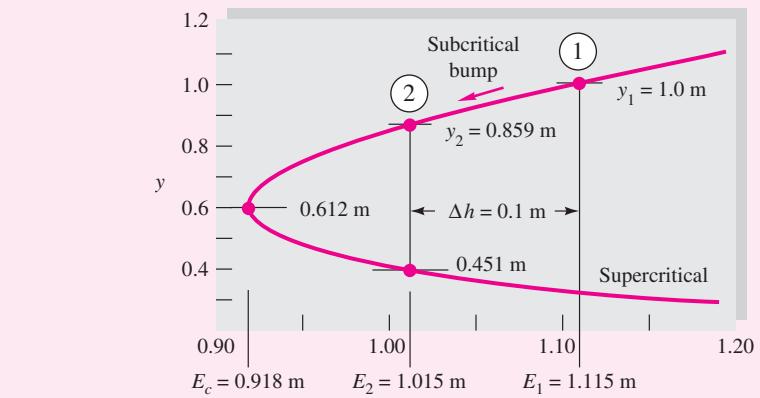

E10.7

E

**Part (b)**


For critical flow in a wide channel, with  $q = Vy = 1.5 \text{ m}^2/\text{s}$ , from Eq. (10.31),

$$E_{2,\min} = E_c = \frac{3}{2} y_c = \frac{3}{2} \left( \frac{q^2}{g} \right)^{1/3} = \frac{3}{2} \left[ \frac{(1.5 \text{ m}^2/\text{s})^2}{9.81 \text{ m/s}^2} \right]^{1/3} = 0.918 \text{ m}$$

Therefore the maximum height for frictionless flow over this particular bump is

$$\Delta h_{\max} = E_1 - E_{2,\min} = 1.115 - 0.918 = 0.197 \text{ m} \quad \text{Ans. (b)}$$

For this bump, the solution of Eq. (10.39) is  $y_2 = y_c = 0.612$  m, and the Froude number is unity at the crest. At critical flow the surface level has dropped by  $y_1 - y_2 - \Delta h = 0.191$  m.

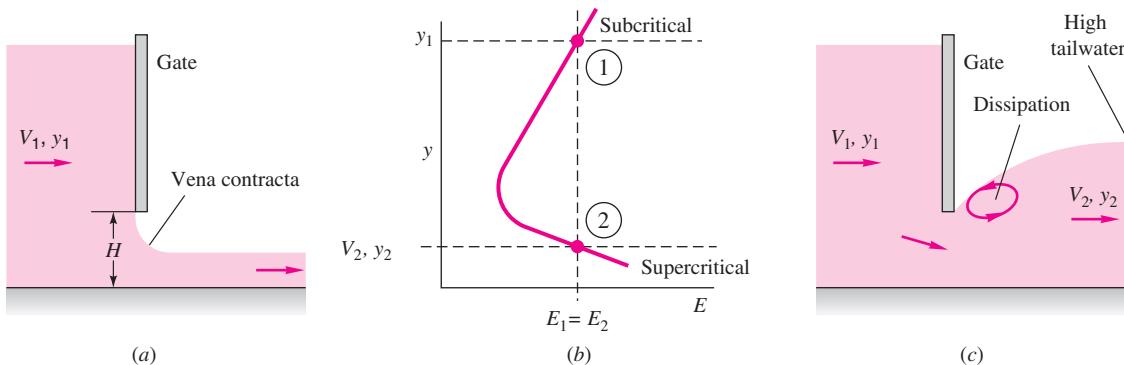

**Fig. 10.10** Flow under a sluice gate passes through critical flow: (a) free discharge with vena contracta; (b) specific energy for free discharge; (c) dissipative flow under a drowned gate.

### Flow under a Sluice Gate

A sluice gate is a bottom opening in a wall, as sketched in Fig. 10.10a, commonly used in control of rivers and channel flows. If the flow is allowed free discharge through the gap, as in Fig. 10.10a, the flow smoothly accelerates from subcritical (upstream) to critical (near the gap) to supercritical (downstream). The gate is then analogous to a converging-diverging nozzle in gas dynamics, as in Fig. 9.12, operating at its *design condition* (similar to point H in Fig. 9.12b).

For free discharge, friction may be neglected, and since there is no bump ( $\Delta h = 0$ ), Eq. (10.39) applies with  $E_1 = E_2$ :

$$y_2^3 - \left( \frac{V_1^2}{2g} + y_1 \right) y_2^2 + \frac{V_1^2 y_1^2}{2g} = 0 \quad (10.40)$$

Given subcritical upstream flow ( $V_1, y_1$ ), this cubic equation has only one positive real solution: supercritical flow at the same specific energy, as in Fig. 10.10b. The flow rate varies with the ratio  $y_2/y_1$ ; we ask, as a problem exercise, to show that the flow rate is a maximum when  $y_2/y_1 = \frac{2}{3}$ .

The free discharge, Fig. 10.10a, contracts to a depth  $y_2$  about 40 percent less than the gate's gap height, as shown. This is similar to a free *orifice* discharge, as in Fig. 6.39. If  $H$  is the height of the gate gap and  $b$  is the gap width into the paper, we can approximate the flow rate by orifice theory:

$$Q = C_d b H \sqrt{2gy_1} \quad \text{where} \quad C_d \approx \frac{0.61}{\sqrt{1 + 0.61H/y_1}} \quad (10.41)$$

in the range  $H/y_1 < 0.5$ . Thus a continuous variation in flow rate is accomplished by raising the gate.

If the tailwater is high, as in Fig. 10.10c, free discharge is not possible. The sluice gate is said to be *drowned* or partially drowned. There will be energy dissipation in the exit flow, probably in the form of a drowned hydraulic jump, and the downstream flow will return to subcritical. Equations (10.40) and (10.41) do not apply to this situation, and experimental discharge correlations are necessary [3, 19]. See Prob. P10.77.



**Fig. 10.11** Hydraulic jump in a laboratory open channel. Note the extreme, dissipative turbulence in the downstream flow. Data are given in Prob. P10.94. (*Courtesy of Prof. Hubert Chanson, University of Queensland.*)

## 10.5 The Hydraulic Jump

In open-channel flow a supercritical flow can change quickly back to a subcritical flow by passing through a hydraulic jump, as in Fig. 10.5. The upstream flow is fast and shallow, and the downstream flow is slow and deep, analogous to the normal shock wave of Fig. 9.8. Unlike the infinitesimally thin normal shock, the hydraulic jump is quite thick, ranging in length from 4 to 6 times the downstream depth  $y_2$  [20].


Being extremely turbulent and agitated, the hydraulic jump is a very effective energy dissipator and is a feature of stilling-basin and spillway applications [20]. Figure 10.11 shows the jump formed in a laboratory open channel. It is very important that such jumps be located on specially designed aprons; otherwise the channel bottom will be badly scoured by the agitation. Jumps also mix fluids very effectively and have application to sewage and water treatment designs.

### Classification

The principal parameter affecting hydraulic jump performance is the upstream Froude number  $Fr_1 = V_1/(gy_1)^{1/2}$ . The Reynolds number and channel geometry have only a secondary effect. As detailed in Ref. 20, the following ranges of operation can be outlined, as illustrated in Fig. 10.12:

- |                         |   |
|-------------------------|---|
| $Fr_1 < 1.0$ :          | Jump impossible, violates second law of thermodynamics.   |
| $Fr_1 = 1.0$ to $1.7$ : | Standing-wave or <i>undular jump</i> about $4y_2$ long; low dissipation, less than 5 percent.   |
| $Fr_1 = 1.7$ to $2.5$ : | Smooth surface rise with small rollers, known as a <i>weak jump</i> ; dissipation 5 to 15 percent.  |
| $Fr_1 = 2.5$ to $4.5$ : | Unstable, <i>oscillating jump</i> ; each irregular pulsation creates a large wave that can travel downstream for miles, damaging earth banks and other structures. Not recommended for design conditions. Dissipation 15 to 45 percent. |
| $Fr_1 = 4.5$ to $9.0$ : | Stable, well-balanced, <i>steady jump</i> ; best performance and action, insensitive to downstream conditions. Best design range. Dissipation 45 to 70 percent.   |
| $Fr_1 > 9.0$ :          | Rough, somewhat intermittent <i>strong jump</i> , but good performance. Dissipation 70 to 85 percent.   |

Further details can be found in Ref. 20 and Ref. 2, Chap. 15.

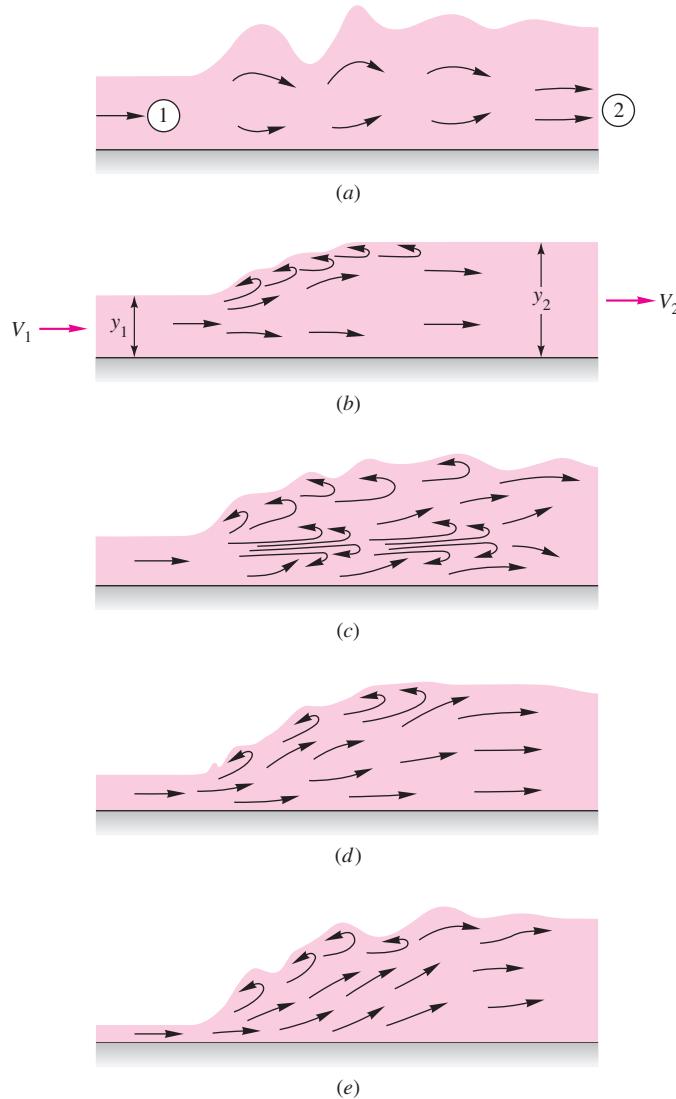

**Fig. 10.12** Classification of hydraulic jumps: (a)  $Fr = 1.0$  to 1.7: undular jump; (b)  $Fr = 1.7$  to 2.5: weak jump; (c)  $Fr = 2.5$  to 4.5: oscillating jump; (d)  $Fr = 4.5$  to 9.0: steady jump; (e)  $Fr > 9.0$ : strong jump. (Adapted from Ref. 20.)

### Theory for a Horizontal Jump

A jump that occurs on a steep channel slope can be affected by the difference in water-weight components along the flow. The effect is small, however, so that the classic theory assumes that the jump occurs on a horizontal bottom.

You will be pleased to know that we have already analyzed this problem in Sec. 10.1. A hydraulic jump is exactly equivalent to the strong fixed wave in Fig. 10.4b, where the change in depth  $\delta y$  is not neglected. If  $V_1$  and  $y_1$  upstream are known,  $V_2$  and  $y_2$  are computed by applying continuity and momentum across the wave, as in Eqs. (10.7) and (10.8). Equation (10.9) is therefore the correct solution for a jump if we interpret  $C$  and  $y$  in Fig. 10.4b as upstream conditions  $V_1$  and  $y_1$ , respectively, with  $C - \delta V$  and  $y + \delta y$  being the downstream conditions  $V_2$  and  $y_2$ , respectively, as in Fig. 10.12b.

Equation (10.9) becomes

$$V_1^2 = \frac{1}{2}gy_1\eta(\eta + 1) \quad (10.42)$$

where  $\eta = y_2/y_1$ . Introducing the Froude number  $Fr_1 = V_1/(gy_1)^{1/2}$  and solving this quadratic equation for  $\eta$ , we obtain

$$\frac{2y_2}{y_1} = -1 + (1 + 8Fr_1^2)^{1/2} \quad (10.43)$$

With  $y_2$  thus known,  $V_2$  follows from the wide-channel continuity relation:

$$V_2 = \frac{V_1y_1}{y_2} \quad (10.44)$$

Finally, we can evaluate the dissipation head loss across the jump from the steady flow energy equation:

$$h_f = E_1 - E_2 = \left(y_1 + \frac{V_1^2}{2g}\right) - \left(y_2 + \frac{V_2^2}{2g}\right)$$

Introducing  $y_2$  and  $V_2$  from Eqs. (10.43) and (10.44), we find after considerable algebraic manipulation that

$$h_f = \frac{(y_2 - y_1)^3}{4y_1y_2} \quad (10.45)$$

Equation (10.45) shows that the dissipation loss is positive only if  $y_2 > y_1$ , which is a requirement of the second law of thermodynamics. Equation (10.43) then requires that  $Fr_1 > 1.0$ ; that is, the upstream flow must be supercritical. Finally, Eq. (10.44) shows that  $V_2 < V_1$  and the downstream flow is subcritical. All these results agree with our previous experience analyzing the normal shock wave.

The present theory is for hydraulic jumps in wide or rectangular horizontal channels. For the theory of prismatic or sloping channels see advanced texts [for example, 2, Chaps. 15 and 16].

### EXAMPLE 10.8

Water flows in a wide channel at  $q = 10 \text{ m}^3/(\text{s} \cdot \text{m})$  and  $y_1 = 1.25 \text{ m}$ . If the flow undergoes a hydraulic jump, compute (a)  $y_2$ , (b)  $V_2$ , (c)  $Fr_2$ , (d)  $h_f$ , (e) the percentage dissipation, (f) the power dissipated per unit width, and (g) the temperature rise due to dissipation if  $c_p = 4200 \text{ J}/(\text{kg} \cdot \text{K})$ .

#### Solution

##### Part (a)

The upstream velocity is

$$V_1 = \frac{q}{y_1} = \frac{10 \text{ m}^3/(\text{s} \cdot \text{m})}{1.25 \text{ m}} = 8.0 \text{ m/s}$$

The upstream Froude number is therefore

$$\text{Fr}_1 = \frac{V_1}{(gy_1)^{1/2}} = \frac{8.0}{[9.81(1.25)]^{1/2}} = 2.285$$

From Fig. 10.12 this is a weak jump. The depth  $y_2$  is obtained from Eq. (10.43):

$$\frac{2y_2}{y_1} = -1 + [1 + 8(2.285)^2]^{1/2} = 5.54$$

or  $y_2 = \frac{1}{2}y_1(5.54) = \frac{1}{2}(1.25)(5.54) = 3.46 \text{ m}$  *Ans. (a)*

**Part (b)** From Eq. (10.44) the downstream velocity is

$$V_2 = \frac{V_1 y_1}{y_2} = \frac{8.0(1.25)}{3.46} = 2.89 \text{ m/s}$$
 *Ans. (b)*

**Part (c)** The downstream Froude number is

$$\text{Fr}_2 = \frac{V_2}{(gy_2)^{1/2}} = \frac{2.89}{[9.81(3.46)]^{1/2}} = 0.496$$
 *Ans. (c)*

**Part (d)** As expected,  $\text{Fr}_2$  is subcritical. From Eq. (10.45) the dissipation loss is

$$h_f = \frac{(3.46 - 1.25)^3}{4(3.46)(1.25)} = 0.625 \text{ m}$$
 *Ans. (d)*

**Part (e)** The percentage dissipation relates  $h_f$  to upstream energy:

$$E_1 = y_1 + \frac{V_1^2}{2g} = 1.25 + \frac{(8.0)^2}{2(9.81)} = 4.51 \text{ m}$$

Hence Percentage loss =  $(100) \frac{h_f}{E_1} = \frac{100(0.625)}{4.51} = 14 \text{ percent}$  *Ans. (e)*

**Part (f)** The power dissipated per unit width is

$$\begin{aligned} \text{Power} &= \rho g q h_f = (9800 \text{ N/m}^3)[10 \text{ m}^3/(\text{s} \cdot \text{m})](0.625 \text{ m}) \\ &= 61.3 \text{ kW/m} \end{aligned}$$
 *Ans. (f)*

**Part (g)** Finally, the mass flow rate is  $\dot{m} = \rho q = (1000 \text{ kg/m}^3)[10 \text{ m}^3/(\text{s} \cdot \text{m})] = 10,000 \text{ kg}/(\text{s} \cdot \text{m})$ , and the temperature rise from the steady flow energy equation is

$$\text{Power dissipated} = \dot{m} c_p \Delta T$$

or  $61,300 \text{ W/m} = [10,000 \text{ kg}/(\text{s} \cdot \text{m})][4200 \text{ J}/(\text{kg} \cdot \text{K})]\Delta T$

from which

$$\Delta T = 0.0015 \text{ K}$$
 *Ans. (g)*

The dissipation is large, but the temperature rise is negligible.

## 10.6 Gradually Varied Flow<sup>4</sup>

In practical channel flows both the bottom slope and the water depth change with position, as in Fig. 10.3. An approximate analysis is possible if the flow is gradually varied, such as if the slopes are small and changes not too sudden. The basic assumptions are

1. Slowly changing bottom slope.
2. Slowly changing water depth (no hydraulic jumps).
3. Slowly changing cross section.
4. One-dimensional velocity distribution.
5. Pressure distribution approximately hydrostatic.

The flow then satisfies the continuity relation (10.1) plus the energy equation with bottom friction losses included. The two unknowns for steady flow are velocity  $V(x)$  and water depth  $y(x)$ , where  $x$  is distance along the channel.

### Basic Differential Equation

Consider the length of channel  $dx$  illustrated in Fig. 10.13. All the terms that enter the steady flow energy equation are shown, and the balance between  $x$  and  $x + dx$  is

$$\frac{V^2}{2g} + y + S_0 dx = S dx + \frac{V^2}{2g} + d\left(\frac{V^2}{2g}\right) + y + dy$$

or

$$\frac{dy}{dx} + \frac{d}{dx}\left(\frac{V^2}{2g}\right) = S_0 - S \quad (10.46)$$

where  $S_0$  is the slope of the channel bottom (positive as shown in Fig. 10.13) and  $S$  is the slope of the EGL (which drops due to wall friction losses).

To eliminate the velocity derivative, differentiate the continuity relation:

$$\frac{dQ}{dx} = 0 = A \frac{dV}{dx} + V \frac{dA}{dx} \quad (10.47)$$


But  $dA = b_0 dy$ , where  $b_0$  is the channel width at the surface. Eliminating  $dV/dx$  between Eqs. (10.46) and (10.47), we obtain

$$\frac{dy}{dx} \left( 1 - \frac{V^2 b_0}{gA} \right) = S_0 - S \quad (10.48)$$

Finally, recall from Eq. (10.37) that  $V^2 b_0 / (gA)$  is the square of the Froude number of the local channel flow. The final desired form of the gradually varied flow equation is

$$\frac{dy}{dx} = \frac{S_0 - S}{1 - Fr^2} \quad (10.49)$$

<sup>4</sup>This section may be omitted without loss of continuity.

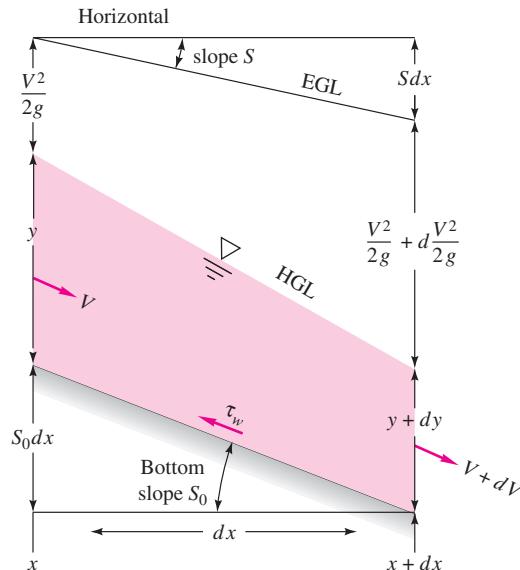

**Fig. 10.13** Energy balance between two sections in a gradually varied open-channel flow.

This equation changes sign according as the Froude number is subcritical or supercritical and is analogous to the one-dimensional gas dynamic area-change formula (9.40).

The numerator of Eq. (10.49) changes sign according as  $S_0$  is greater or less than  $S$ , which is the slope equivalent to uniform flow at the same discharge  $Q$ :


$$S = S_{0n} = \frac{f}{D_h} \frac{V^2}{2g} = \frac{V^2}{R_h C^2} = \frac{n^2 V^2}{\alpha^2 R_h^{4/3}} \quad (10.50)$$

where  $C$  is the Chézy coefficient. The behavior of Eq. (10.49) thus depends on the relative magnitude of the local bottom slope  $S_0(x)$ , compared with (1) uniform flow,  $y = y_n$ , and (2) critical flow,  $y = y_c$ . As in Eq. (10.38), the dimensional parameter  $\alpha^2$  equals 1.0 for SI units and 2.208 for BG units.

### Classification of Solutions

It is customary to compare the actual channel slope  $S_0$  with the critical slope  $S_c$  for the same  $Q$  from Eq. (10.38). There are five classes for  $S_0$ , giving rise to 12 distinct types of solution curves, all of which are illustrated in Fig. 10.14:

Slope class	Slope notation	Depth class	Solution curves
$S_0 > S_c$	Steep	$y_c > y_n$	S-1, S-2, S-3
$S_0 = S_c$	Critical	$y_c = y_n$	C-1, C-3
$S_0 < S_c$	Mild	$y_c < y_n$	M-1, M-2, M-3
$S_0 = 0$	Horizontal	$y_n = \infty$	H-2, H-3
$S_0 < 0$	Adverse	$y_n = \text{imaginary}$	A-2, A-3

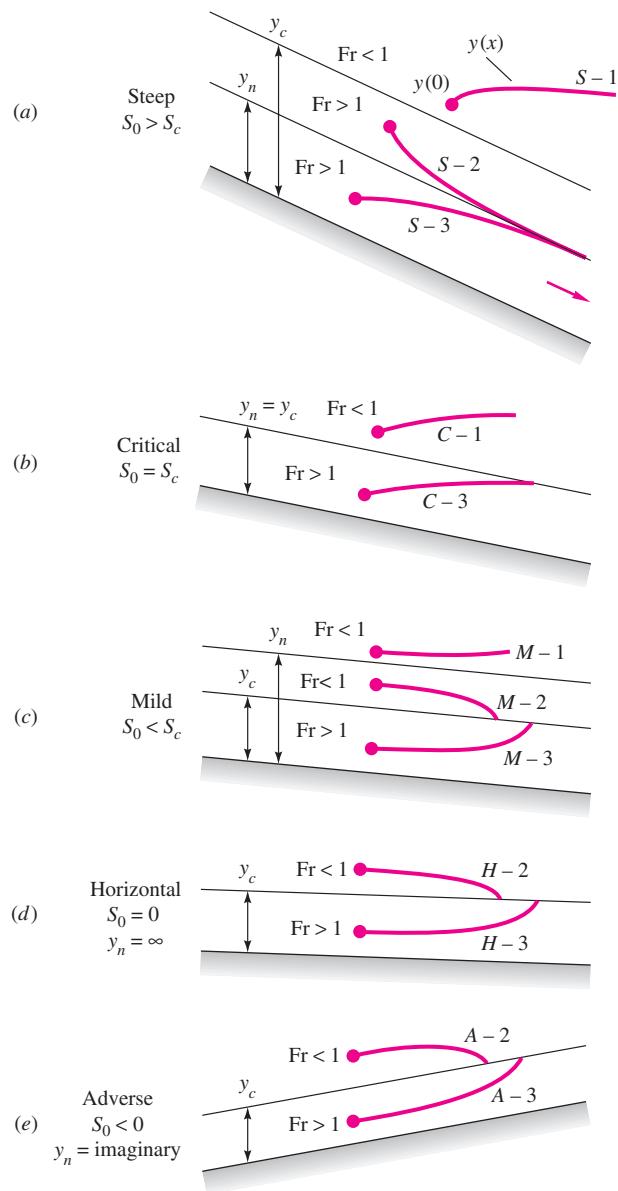

**Fig. 10.14** Gradually varied flow for five classes of channel slope, showing the 12 basic solution curves.

The solution letters S, C, M, H, and A obviously denote the names of the five types of slope. The numbers 1, 2, 3 relate to the position of the initial point on the solution curve with respect to the normal depth  $y_n$  and the critical depth  $y_c$ . In type 1 solutions, the initial point is above both  $y_n$  and  $y_c$ , and in all cases the water depth solution  $y(x)$  becomes even deeper and farther away from  $y_n$  and  $y_c$ . In type 2 solutions, the

initial point lies between  $y_n$  and  $y_c$ , and if there is no change in  $S_0$  or roughness, the solution tends asymptotically toward the lower of  $y_n$  or  $y_c$ . In type 3 cases, the initial point lies below both  $y_n$  and  $y_c$ , and the solution curve tends asymptotically toward the lower of these.

Figure 10.14 shows the basic character of the local solutions, but in practice, of course,  $S_0$  varies with  $x$ , and the overall solution patches together the various cases to form a continuous depth profile  $y(x)$  compatible with a given initial condition and a given discharge  $Q$ . There is a fine discussion of various composite solutions in Ref. 2, Chap. 9; see also Ref. 22, Sec. 12.7.

## Numerical Solution

The basic relation for gradually varied flow, Eq. (10.49), is a first-order ordinary differential equation that can be easily solved numerically. For a given constant-volume flow rate  $Q$ , it may be written in the form

$$\frac{dy}{dx} = \frac{S_0 - n^2 Q^2 / (\alpha^2 A^2 R_h^{4/3})}{1 - Q^2 b_0 / (g A^3)} \quad (10.51)$$

subject to an initial condition  $y = y_0$  at  $x = x_0$ . It is assumed that the bottom slope  $S_0(x)$  and the cross-sectional shape parameters ( $b_0$ ,  $P$ ,  $A$ ) are known everywhere along the channel. Then one may solve Eq. (10.51) for local water depth  $y(x)$  by any standard numerical method. The author uses an Excel spreadsheet for a personal computer. Step sizes  $\Delta x$  may be selected so that each change  $\Delta y$  is limited to no greater than, say, 1 percent. The solution curves are generally well behaved unless there are discontinuous changes in channel parameters. Note that if one approaches the critical depth  $y_c$ , the denominator of Eq. (10.51) approaches zero, so small step sizes are required. It helps physically to know what type solution curve (M-1, S-2, or the like) you are proceeding along, but this is not mathematically necessary.

---

### EXAMPLE 10.9

---

Let us extend the data of Example 10.5 to compute a portion of the profile shape. Given is a wide channel with  $n = 0.022$ ,  $S_0 = 0.0048$ , and  $q = 50 \text{ ft}^3/(\text{s} \cdot \text{ft})$ . If  $y_0 = 3 \text{ ft}$  at  $x = 0$ , how far along the channel  $x = L$  does it take the depth to rise to  $y_L = 4 \text{ ft}$ ? Is the 4-ft depth position upstream or downstream in Fig. E10.9a?


---

### Solution

---

In Example 10.5 we computed  $y_c = 4.27 \text{ ft}$ . Since our initial depth  $y = 3 \text{ ft}$  is less than  $y_c$ , we know the flow is supercritical. Let us also compute the normal depth for the given slope  $S_0$  by setting  $q = 50 \text{ ft}^3/(\text{s} \cdot \text{ft})$  in the Chézy formula (10.19) with  $R_h = y_n$ :

$$q = \frac{\alpha}{n} A R_h^{2/3} S_0^{1/2} = \frac{1.486}{0.022} [y_n(1 \text{ ft})] y_n^{2/3} (0.0048)^{1/2} = 50 \text{ ft}^3/(\text{s} \cdot \text{ft})$$

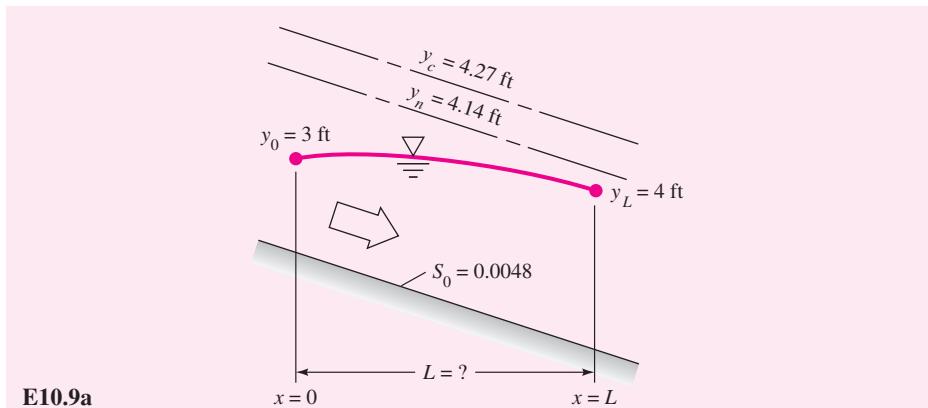

Solve for:

$$y_n \approx 4.14 \text{ ft}$$


Thus both  $y(0) = 3 \text{ ft}$  and  $y(L) = 4 \text{ ft}$  are less than  $y_n$ , which is less than  $y_c$ , so we *must* be on an S-3 curve, as in Fig. 10.14a. For a wide channel, Eq. (10.51) reduces to

$$\frac{dy}{dx} = \frac{S_0 - n^2 q^2 / (\alpha^2 y^{10/3})}{1 - q^2 / (gy^3)}$$

$$\approx \frac{0.0048 - (0.022)^2 (50)^2 / (2.208 y^{10/3})}{1 - (50)^2 / (32.2 y^3)} \quad \text{with } y(0) = 3 \text{ ft}$$

The initial slope is  $y'(0) \approx 0.00494$ , and a step size  $\Delta x = 5 \text{ ft}$  would cause a change  $\Delta y \approx (0.00494)(5 \text{ ft}) \approx 0.025 \text{ ft}$ , less than 1 percent. We therefore integrate numerically with  $\Delta x = 5 \text{ ft}$  to determine when the depth  $y = 4 \text{ ft}$  is achieved. Tabulate some values:

$x, \text{ ft}$	0	50	100	150	200	230
$y, \text{ ft}$	3.00	3.25	3.48	3.70	3.90	4.00

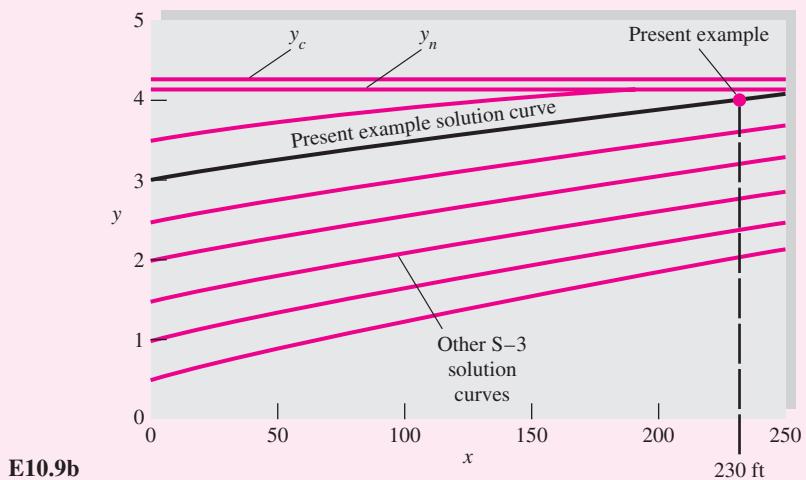

The water depth, still supercritical, reaches  $y = 4$  ft at

$$x \approx 230 \text{ ft downstream} \quad \text{Ans.}$$

We verify from Fig. 10.14a that water depth does increase downstream on an S-3 curve. The solution curve  $y(x)$  is shown as the bold line in Fig. E10.9b.

For little extra effort we can investigate the entire family of S-3 solution curves for this problem. Figure E10.9b also shows what happens if the initial depth is varied from 0.5 to 3.5 ft in increments of 0.5 ft. All S-3 solutions smoothly rise and asymptotically approach the uniform flow condition  $y = y_n = 4.14$  ft.

### Approximate Solution for Irregular Channels

Direct numerical solution of Eq. (10.51) is appropriate when we have analytical formulas for the channel variations  $A(x)$ ,  $S_0(x)$ ,  $n(x)$ ,  $b_0(x)$ , and  $R_h(x)$ . For natural channels, however, cross sections are often highly irregular, and data can be sparse and unevenly spaced. For such cases, civil engineers use an approximate method to estimate gradual flow changes. Write Eq. (10.46) in finite-difference form between two depths  $y$  and  $y + \Delta y$ :

$$\Delta x \approx \frac{E(y + \Delta y) - E(y)}{(S_0 - S_{\text{avg}})} \quad \text{where } E = y + \frac{V^2}{2g} \quad (10.52)$$

Average values of velocity, slope, and hydraulic radius are estimated between the two sections. For example,

$$V_{\text{avg}} \approx \frac{1}{2}[V(y) + V(y + \Delta y)]; R_{h, \text{avg}} \approx \frac{1}{2}[R_h(y) + R_h(y + \Delta y)]; S_{\text{avg}} \approx \frac{n^2 V_{\text{avg}}^2}{\alpha^2 R_{h, \text{avg}}^{4/3}}$$

Again, computation can proceed either upstream or downstream, using small values of  $\Delta y$ . Further details of such computations are given in Chap. 10 of Ref. 2.

### EXAMPLE 10.10

Repeat Example 10.9 using the approximate method of Eq. (10.52) with a 0.25-foot increment in  $\Delta y$ . Find the distance required for  $y$  to rise from 3 ft to 4 ft.

#### Solution

Recall from Example 10.9 that  $n = 0.022$ ,  $S_0 = 0.0048$ , and  $q = 50 \text{ ft}^3/(\text{s-ft})$ . Note that  $R_h = y$  for a wide channel. Make a table with  $y$  varying from 3.0 to 4.0 ft in increments of 0.25 ft, computing  $V = q/y$ ,  $E = y + V^2/(2g)$ , and  $S_{\text{avg}} = [n^2 V^2 / (2.208 y^{4/3})]_{\text{avg}}$ :

$y, \text{ ft}$	$V (\text{ft/s}) = 50/y$	$E = y + V^2/(2g)$	$S$	$S_{\text{avg}}$	$\Delta x = \Delta E / (S_0 - S)_{\text{avg}}$	$x = \Sigma \Delta x$
3.0	16.67	7.313	0.01407	—	—	0
3.25	15.38	6.925	0.01078	0.01243	51	51
3.5	14.29	6.669	0.00842	0.00960	53	104
3.75	13.33	6.511	0.00669	0.00756	57	161
4.0 ft	12.50 ft/s	6.426 ft	0.00539	0.00604	69 ft	230 ft

*Comment:* The accuracy is excellent, giving the same result,  $x = 230$  ft, as the Excel spreadsheet numerical integration in Example 10.9. Much of this accuracy is due to the smooth, slowly varying nature of the profile. Less precision is expected when the channel is irregular and given as uneven cross sections.

## Some Illustrative Composite-Flow Transitions

The solution curves in Fig. 10.14 are somewhat simplistic, since they postulate constant-bottom slopes. In practice, channel slopes can vary greatly,  $S_0 = S_0(x)$ , and the solution curves can cross between two regimes. Other parameter changes, such as  $A(x)$ ,  $b_0(x)$ , and  $n(x)$ , can cause interesting composite-flow profiles. Some examples are shown in Fig. 10.15.<sup>5</sup>

Figure 10.15a shows a transition from a mild slope to a steep slope in a constant-width channel. The initial M-2 curve must change to an S-2 curve farther down the steep slope. The only way this can happen physically is for the solution curve to pass smoothly through the critical depth, as shown. The critical point is mathematically *singular* [2, Sec. 9.6], and the flow near this point is generally *rapidly*, not gradually, varied. The flow pattern, accelerating from subcritical to supercritical, is similar to a converging-diverging nozzle in gas dynamics. Other scenarios for Fig. 10.15a are impossible. For example, the upstream curve cannot be M-1, for the break in slope would cause an S-1 curve that would move away from uniform steep flow.

Figure 10.15b shows a mild slope that suddenly changes to an even milder slope. The approach flow is assumed uniform, and the break in slope makes its presence known upstream. The water depth moves smoothly along an M-1 curve until it exactly merges, at the break point, with a uniform flow at the new (milder) depth  $y_{n2}$ .


Figure 10.15c shows a steep slope that suddenly changes to a less steep slope. Note for both slopes that  $y_n < y_c$ . Because of the supercritical ( $V > V_c$ ) approach flow, the break in slope cannot make its presence known upstream. Thus, not until the break point does an S-3 curve form, and then this profile proceeds smoothly to uniform flow at the new (higher) normal depth.

Figure 10.15d shows a steep slope that suddenly changes to a mild slope. Various cases may occur, possibly beyond the ability of this author to describe. The two cases shown depend on the relative magnitude of the mild slope. If the downstream depth  $y_{n2}$  is shallow, an M-3 curve will start at the break and develop until the local supercritical flow is just sufficient to form a hydraulic jump up to the new normal depth. As  $y_{n2}$  increases, the jump moves upstream until, for the “high” case shown, it forms on the steep side, followed by an S-1 curve that merges into normal depth  $y_{n2}$  at the break point.

Figure 10.15e illustrates a *free overfall* with a mild slope. This acts as a *control section* to the upstream flow, which then forms an M-2 curve and accelerates to critical flow near the overfall. The falling stream will be supercritical. The overfall “controls” the water depths upstream and can serve as an initial condition for computation of  $y(x)$ . This is the type of flow that occurs in a weir or waterfall, Sec. 10.7.

The examples in Fig. 10.15 show that changing conditions in open-channel flow can result in complex flow patterns. Many more examples of composite-flow profiles are given in Ref. 2, pp. 229–233.

<sup>5</sup>The author is indebted to Prof. Bruce Larock for clarification of these transition profiles.

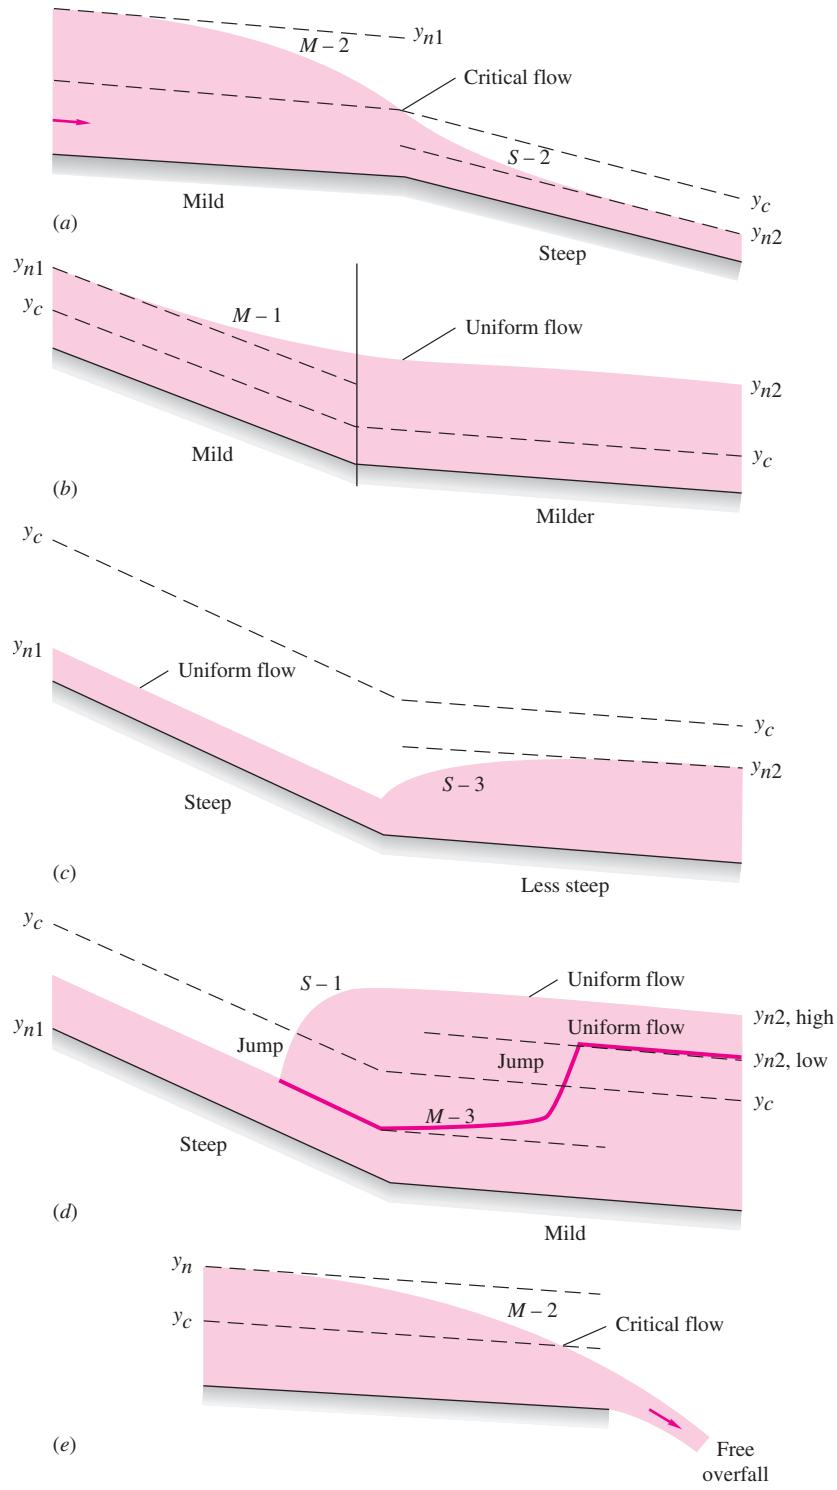

**Fig. 10.15** Some examples of composite-flow transition profiles.

## 10.7 Flow Measurement and Control by Weirs


A *weir*, of which the ordinary dam is an example, is a channel obstruction over which the flow must deflect. For simple geometries the channel discharge  $Q$  correlates with gravity and with the blockage height  $H$  to which the upstream flow is backed up above the weir elevation (see Fig. 10.16). Thus a weir is a simple but effective open-channel flowmeter. We used a weir as an example of dimensional analysis in Prob. P5.32.

Figure 10.16 shows two common weirs, sharp-crested and broad-crested, assumed to be very wide. In both cases the flow upstream is subcritical, accelerates to critical near the top of the weir, and spills over into a supercritical *nappe*. For both weirs the discharge  $q$  per unit width is proportional to  $g^{1/2}H^{3/2}$  but with somewhat different coefficients. The short-crested (or thin-plate) weir nappe should be *ventilated* to the atmosphere; that is, it should spring clear of the weir crest. Unventilated or drowned nappes are more difficult to correlate and depend on tailwater conditions. (The spillway of Fig. 10.11 is a sort of unventilated weir.)


A very complete discussion of weirs, including other designs such as the polygonal “Crump” weir and various contracting flumes, is given in the text by Ackers et al. [23]. See Prob. P10.122.

### Analysis of Sharp-Crested Weirs

It is possible to analyze weir flow by inviscid potential theory with an unknown (but solvable) free surface, as in Fig. P8.71. Here, however, we simply use one-dimensional flow theory plus dimensional analysis to develop suitable weir flow rate correlations.

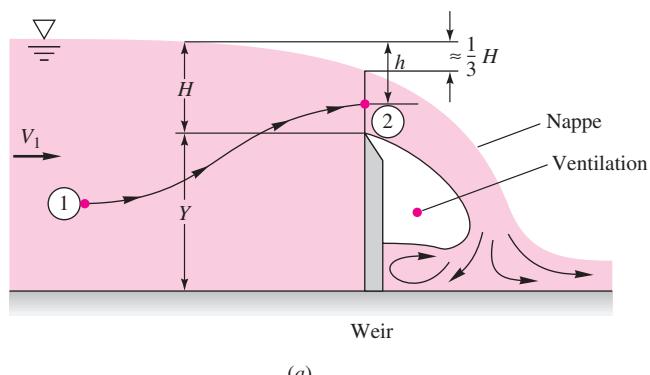

(a)

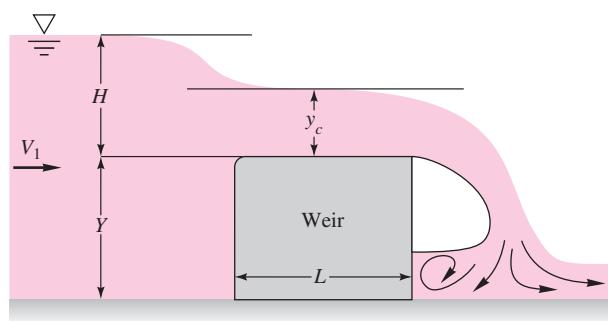

(b)

**Fig. 10.16** Flow over wide, well-ventilated weirs: (a) sharp-crested; (b) broad-crested.

A very early theoretical approach is credited to J. Weisbach in 1855. The velocity head at any point 2 above the weir crest is assumed to equal the total head upstream; in other words, Bernoulli's equation is used with no losses:

$$\frac{V_2^2}{2g} + H - h \approx \frac{V_1^2}{2g} + H \quad \text{or} \quad V_2(h) \approx \sqrt{2gh + V_1^2}$$

where  $h$  is the vertical distance down to point 2, as shown in Fig. 10.16a. If we accept for the moment, without proof, that the flow over the crest draws down to  $h_{\min} \approx H/3$ , the volume flow  $q = Q/b$  over the crest is approximately

$$\begin{aligned} q &= \int_{\text{crest}}^H V_2 dh \approx \int_{H/3}^H (2gh + V_1^2)^{1/2} dh \\ &= \frac{2}{3} \sqrt{2g} \left[ \left( H + \frac{V_1^2}{2g} \right)^{3/2} - \left( \frac{H}{3} + \frac{V_1^2}{2g} \right)^{3/2} \right] \end{aligned}$$

Normally the upstream velocity head  $V_1^2/(2g)$  is neglected, so this expression reduces to Sharp-crested theory:  $q \approx 0.81(\frac{2}{3})(2g)^{1/2}H^{3/2}$  (10.53)

This formula is functionally correct, but the coefficient 0.81 is too high and should be replaced by an experimentally determined discharge coefficient.

### Analysis of Broad-Crested Weirs

The broad-crested weir of Fig. 10.16b can be analyzed more accurately because it creates a short run of nearly one-dimensional critical flow, as shown. Bernoulli's equation from upstream to the weir crest yields

$$\frac{V_1^2}{2g} + Y + H \approx \frac{V_c^2}{2g} + Y + y_c$$

If the crest is very wide into the paper,  $V_c^2 = gy_c$  from Eq. (10.33). Thus we can solve for

$$y_c \approx \frac{2H}{3} + \frac{V_1^2}{3g} \approx \frac{2H}{3}$$

This result was used without proof to derive Eq. (10.53). Finally, the flow rate follows from wide-channel critical flow, Eq. (10.32):

$$\text{Broad-crested theory: } q = \sqrt{gy_c^3} \approx \frac{1}{\sqrt{3}} \left( \frac{2}{3} \right) \sqrt{2g} \left( H + \frac{V_1^2}{2g} \right)^{3/2} \quad (10.54)$$

Again we may usually neglect the upstream velocity head  $V_1^2/(2g)$ . The coefficient  $1/\sqrt{3} \approx 0.577$  is about right, but experimental data are preferred.

### Experimental Weir Discharge Coefficients

Theoretical weir flow formulas may be modified experimentally as follows. Eliminate the numerical coefficients  $\frac{2}{3}$  and  $\sqrt{2}$ , for which there is much sentimental attachment in the literature, and reduce the formula to

$$Q_{\text{weir}} = C_d b \sqrt{g} \left( H + \frac{V_1^2}{2g} \right)^{3/2} \approx C_d b \sqrt{g} H^{3/2} \quad (10.55)$$

where  $b$  is the crest width and  $C_d$  is a dimensionless, experimentally determined *weir discharge coefficient*, which may vary with the weir geometry, Reynolds number, and Weber number. Many data for many different weirs have been reported in the literature, as detailed in Ref. 23.

An accurate ( $\pm 2$  percent) composite correlation for wide ventilated sharp crests is recommended as follows [23]:

$$\text{Wide sharp-crested weir: } C_d \approx 0.564 + 0.0846 \frac{H}{Y} \quad \text{for } \frac{H}{Y} \leq 2 \quad (10.56)$$

The Reynolds numbers  $V_1 H / \nu$  for these data vary from  $1 \times 10^4$  to  $2 \times 10^6$ , but the formula should apply to higher  $Re$ , such as large dams on rivers.

The broad-crested weir of Fig. 10.16b is considerably more sensitive to geometric parameters, including the surface roughness  $\epsilon$  of the crest. If the leading-edge nose is rounded,  $R/L \geq 0.05$ , available data [23, Chap. 7] may be correlated as follows:

$$\text{Round-nosed broad-crested weir: } C_d \approx 0.544 \left( 1 - \frac{\delta^*/L}{H/L} \right)^{3/2} \quad (10.57)$$

$$\text{where } \frac{\delta^*}{L} \approx 0.001 + 0.2\sqrt{\epsilon/L}$$

The chief effect is due to turbulent boundary layer displacement-thickness growth  $\delta^*$  on the crest as compared to upstream head  $H$ . The formula is limited to  $H/L < 0.7$ ,  $\epsilon/L \leq 0.002$ , and  $V_1 H / \nu > 3 \times 10^5$ . If the nose is round, there is no significant effect of weir height  $Y$ , at least if  $H/Y < 2.4$ .

If the broad-crested weir has a sharp leading edge, thus commonly called a *rectangular* weir, the discharge may depend on the weir height  $Y$ . However, in a certain range of weir height and length,  $C_d$  is nearly constant:

$$\begin{aligned} \text{Sharp-nosed } & C_d \approx 0.462 \quad \text{for } 0.08 < \frac{H}{L} < 0.33 \\ \text{broad-crested } & \text{weir:} \\ & \text{and } 0.22 < \frac{H}{Y} < 0.56 \end{aligned} \quad (10.58)$$

Surface roughness is not a significant factor here. For  $H/L < 0.08$  there is large scatter ( $\pm 10$  percent) in the data. For  $H/L > 0.33$  and  $H/Y > 0.56$ ,  $C_d$  increases up to 10 percent due to each parameter, and complex charts are needed for the discharge coefficient [19, Chap. 5].

### EXAMPLE 10.11

A weir in a horizontal channel is 1 m high and 4 m wide. The water depth upstream is 1.6 m. Estimate the discharge if the weir is (a) sharp-crested and (b) round-nosed with an unfinished concrete broad crest 1.2 m long. Neglect  $V_1^2/(2g)$ .

**Solution****Part (a)**

We are given  $Y = 1$  m and  $H + Y \approx 1.6$  m, hence  $H \approx 0.6$  m. Since  $H \ll b$ , we assume that the weir is “wide.” For a sharp crest, Eq. (10.56) applies:

$$C_d \approx 0.564 + 0.0846 \frac{0.6 \text{ m}}{1 \text{ m}} \approx 0.615$$

Then the discharge is given by the basic correlation, Eq. (10.55):

$$Q = C_d b \sqrt{g H^{3/2}} = (0.615)(4 \text{ m}) \sqrt{(9.81 \text{ m/s}^2)(0.6 \text{ m})^{3/2}} \approx 3.58 \text{ m}^3/\text{s} \quad \text{Ans. (a)}$$

We check that  $H/Y = 0.6 < 2.0$  for Eq. (10.56) to be valid. From continuity,  $V_1 = Q/(b Y_1) = 3.58/[(4.0)(1.6)] = 0.56$  m/s, giving a Reynolds number  $V_1 H / \nu \approx 3.4 \times 10^5$ .

**Part (b)**

For a round-nosed broad-crested weir, Eq. (10.57) applies. For an unfinished concrete surface, read  $\epsilon \approx 2.4$  mm from Table 10.1. Then the displacement thickness is

$$\frac{\delta^*}{L} \approx 0.001 + 0.2\sqrt{\epsilon/L} = 0.001 + 0.2\left(\frac{0.0024 \text{ m}}{1.2 \text{ m}}\right)^{1/2} \approx 0.00994$$

Then Eq. (10.57) predicts the discharge coefficient:

$$C_d \approx 0.544 \left(1 - \frac{0.00994}{0.6 \text{ m}/1.2 \text{ m}}\right)^{3/2} \approx 0.528$$

The estimated flow rate is thus

$$Q = C_d b \sqrt{g H^{3/2}} = 0.528(4 \text{ m}) \sqrt{(9.81 \text{ m}^2/\text{s})(0.6 \text{ m})^{3/2}} \approx 3.07 \text{ m}^3/\text{s} \quad \text{Ans. (b)}$$

Check that  $H/L = 0.5 < 0.7$  as required. The approach Reynolds number is  $V_1 H / \nu \approx 2.9 \times 10^5$ , just barely below the recommended limit in Eq. (10.57).

Since  $V_1 \approx 0.5$  m/s,  $V_1^2/(2g) \approx 0.012$  m, so the error in taking total head equal to 0.6 m is about 2 percent. We could correct this for upstream velocity head if desired.

**Other Thin-Plate Weir Designs**

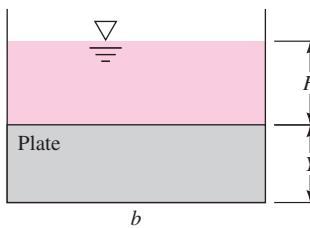
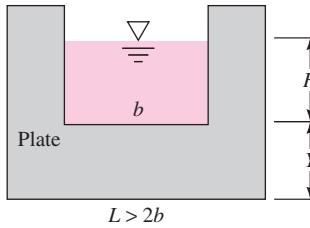
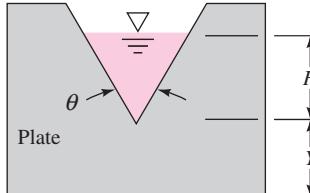
Weirs are often used for flow measurement and control of artificial channels. The two most common shapes are a rectangle and a V notch, as shown in Table 10.2. All should be fully ventilated and not drowned.

Table 10.2a shows a full-width rectangle, which will have slight end-boundary-layer effects but no end contractions. For a thin-plate design, the top is approximately sharp-crested, and Eq. (10.56) should give adequate accuracy, as shown in the table. Since the overfall spans the entire channel, artificial ventilation may be needed, such as holes in the channel walls.

Table 10.2b shows a partial-width rectangle,  $b < L$ , which will cause the sides of the overfall to contract inward and reduce the flow rate. An adequate contraction correction [23, 24] is to reduce the effective weir width by  $0.1H$ , as shown in the table. It seems, however, that this type of weir is rather sensitive to small effects, such as plate thickness and sidewall boundary layer growth. Small heads ( $H < 75$  mm) and small slot widths ( $b < 30$  cm) are not recommended. See Refs. 23 and 24 for further details.

The V notch, in Table 10.2c, is intrinsically interesting in that its overfall has only one length scale,  $H$ —there is no separate “width.” The discharge will thus be

**Table 10.2** Thin-Plate Weirs for Flow Measurement

Thin-plate weir	Flow-rate correlation
	$Q \approx (0.564 + 0.0846 \frac{H}{Y}) b g^{1/2} H^{3/2}$
	$Q \approx 0.581(b - 0.1H)g^{1/2}H^{3/2} \quad H < 0.5Y$
	$Q \approx 0.44 \tan \frac{\theta}{2} g^{1/2} H^{5/2} \quad 20^\circ < \theta < 100^\circ$

(c) V notch.

proportional to  $H^{5/2}$ , rather than a power of  $\frac{3}{2}$ . Application of Bernoulli's equation to the triangular opening, in the spirit of Eq. (10.52), leads to the following ideal flow rate for a V notch:

$$\text{V notch:} \quad Q_{\text{ideal}} = \frac{8\sqrt{2}}{15} \tan \frac{\theta}{2} g^{1/2} H^{5/2} \quad (10.59)$$

where  $\theta$  is the total included angle of the notch. The actual measured flow is about 40 percent less than this, due to contraction similar to a thin-plate orifice. In terms of an experimental discharge coefficient, the recommended formula is

$$Q_{\text{V notch}} \approx C_d \tan \frac{\theta}{2} g^{1/2} H^{5/2} \quad C_d \approx 0.44 \quad \text{for} \quad 20^\circ < \theta < 100^\circ \quad (10.60)$$

for heads  $H > 50$  mm. For smaller heads, both Reynolds number and Weber number effects may be important, and a recommended correction [23] is

$$\text{Low heads, } H < 50 \text{ mm:} \quad C_{d, \text{V notch}} \approx 0.44 + \frac{0.9}{(\text{Re We})^{1/6}} \quad (10.61)$$

where  $\text{Re} = \rho g^{1/2} H^{3/2}/\mu$  and  $\text{We} = \rho g H^2/Y$ , with  $Y$  being the coefficient of surface tension. Liquids other than water may be used with this formula, as long as  $\text{Re} > 300/\tan(\theta/2)^{3/4}$  and  $\text{We} > 300$ .

A number of other thin-plate weir designs—trapezoidal, parabolic, circular arc, and U-shaped—are discussed in Ref. 25, which also contains considerable data on broad-crested weirs. See also Refs. 29 and 30.

### EXAMPLE 10.12

A V notch weir is to be designed to meter an irrigation channel flow. For ease in reading the upstream water-level gage, a reading  $H \geq 30$  cm is desired for the design flow rate of 150 m<sup>3</sup>/h. What is the appropriate angle  $\theta$  for the V notch?

#### Solution

- *Assumptions:* Steady flow, negligible Weber number effect because  $H > 50$  mm.
- *Approach:* Equation (10.60) applies with, we hope, a notch angle  $20^\circ < \theta < 100^\circ$ .
- *Property values:* If surface tension is neglected, no fluid properties are needed. Why?
- *Solution:* Apply Equation (10.60) to the known flow rate and solve for  $\theta$ :

$$Q = \frac{150 \text{ m}^3/\text{h}}{3600 \text{ s/h}} = 0.0417 \frac{\text{m}^3}{\text{s}} \geq C_d \tan\left(\frac{\theta}{2}\right) g^{1/2} H^{5/2} = 0.44 \tan\left(\frac{\theta}{2}\right) \left(9.81 \frac{\text{m}}{\text{s}^2}\right)^{1/2} (0.3 \text{ m})^{5/2}$$

Solve for  $\tan\left(\frac{\theta}{2}\right) \leq 0.613 \quad \text{or} \quad \theta \leq 63^\circ$  Ans.


- *Comments:* An angle of  $63^\circ$  will create an upstream head of 30 cm. Any angle less than that will create an even larger head. Weir formulas depend primarily on gravity and geometry. Fluid properties such as  $(\rho, \mu, Y)$  enter only as slight modifications or as correction factors.

## Backwater Curves

A weir is a flow barrier that not only alters the local flow over the weir but also modifies the flow depth distribution far upstream. Any strong barrier in an open-channel flow creates a *backwater curve*, which can be computed by the gradually varied flow theory of Sec. 10.6. If  $Q$  is known, the weir formula, Eq. (10.55), determines  $H$  and hence the water depth just upstream of the weir,  $y = H + Y$ , where  $Y$  is the weir height. We then compute  $y(x)$  upstream of the weir from Eq. (10.51), following in this case an M-1 curve (Fig. 10.14c). Such a barrier, where the water depth correlates with the flow rate, is called a channel *control point*. These are the starting points for numerical analysis of floodwater profiles in rivers [26].

### EXAMPLE 10.13

A rectangular channel 8 m wide, with a flow rate of 30 m<sup>3</sup>/s, encounters a 4-m-high sharp-edged dam, as shown in Fig. E10.13a. Determine the water depth 2 km upstream if the channel slope is  $S_0 = 0.0004$  and  $n = 0.025$ .

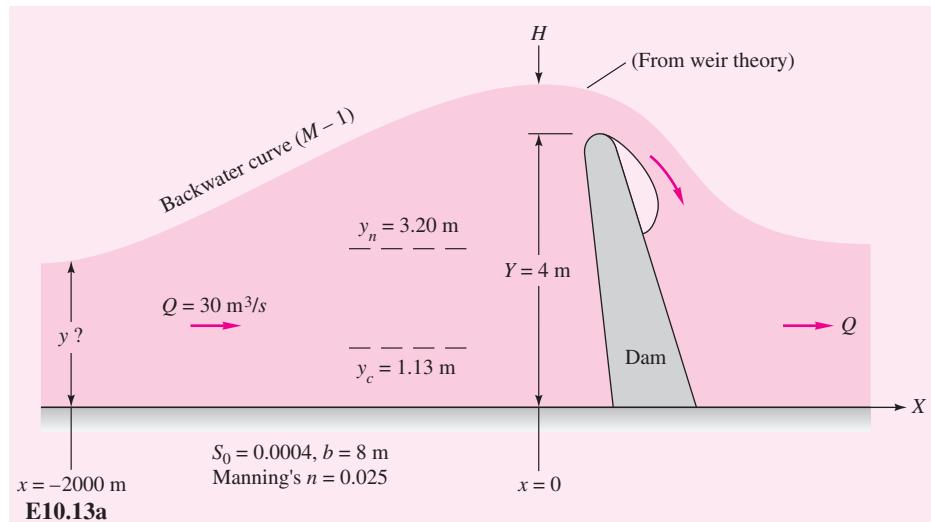**Solution**

First determine the head  $H$  produced by the dam, using sharp-crested full-width weir theory, Eq. (10.56):

$$Q = 30 \text{ m}^3/\text{s} = C_d b g^{1/2} H^{3/2} = \left( 0.564 + 0.0846 \frac{H}{4 \text{ m}} \right) (8 \text{ m})(9.81 \text{ m/s}^2)^{1/2} H^{3/2}$$

Since the term  $0.0846H/4$  in parentheses is small, we may proceed by iteration or EES to the solution  $H \approx 1.59 \text{ m}$ . Then our initial condition at  $x = 0$ , just upstream of the dam, is  $y(0) = Y + H = 4 + 1.59 = 5.59 \text{ m}$ . Compare this to the critical depth from Eq. (10.30):

$$y_c = \left( \frac{Q^2}{b^2 g} \right)^{1/3} = \left[ \frac{(30 \text{ m}^3/\text{s})^2}{(8 \text{ m})^2 (9.81 \text{ m/s}^2)} \right]^{1/3} = 1.13 \text{ m}$$

Since  $y(0)$  is greater than  $y_c$ , the flow upstream is subcritical. Finally, for reference purposes, estimate the normal depth from the Chézy equation (10.19):

$$Q = 30 \text{ m}^3/\text{s} = \frac{\alpha}{n} b y R_h^{2/3} S_0^{1/2} = \frac{1.0}{0.025} (8 \text{ m}) y_n \left( \frac{8 y_n}{8 + 2 y_n} \right)^{2/3} (0.0004)^{1/2}$$

By trial and error or EES solve for  $y_n \approx 3.20 \text{ m}$ . If there are no changes in channel width or slope, the water depth far upstream of the dam will approach this value. All these reference values  $y(0)$ ,  $y_c$ , and  $y_n$  are shown in Fig. E10.13b.

Since  $y(0) > y_n > y_c$ , the solution will be an M-1 curve as computed from gradually varied theory, Eq. (10.51), for a rectangular channel with the given input data:


$$\frac{dy}{dx} \approx \frac{S_0 - n^2 Q^2 / (\alpha^2 A^2 R_h^{4/3})}{1 - Q^2 b_0 / (g A^3)} \quad \alpha = 1.0 \quad A = 8y \quad n = 0.025 \quad R_h = \frac{8y}{8 + 2y} \quad b_0 = 8$$

Beginning with  $y = 5.59 \text{ m}$  at  $x = 0$ , we integrate backward to  $x = -2000 \text{ m}$ . For the Runge-Kutta method, four-figure accuracy is achieved for  $\Delta x = -100 \text{ m}$ . The complete solution curve is shown in Fig. E10.13b. The desired solution value is

At  $x = -2000 \text{ m}$ :

$y \approx 5.00 \text{ m}$

*Ans.*

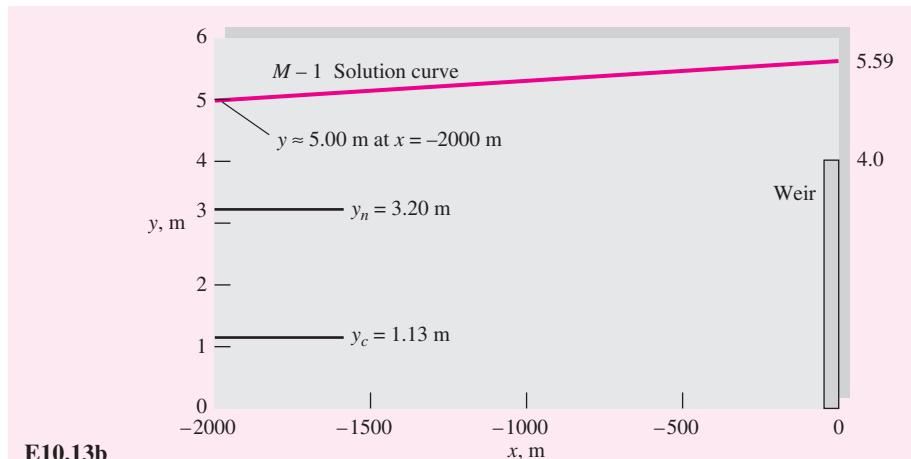

Thus, even 2 km upstream, the dam has produced a “backwater” that is 1.8 m above the normal depth that would occur without a dam. For this example, a near-normal depth of, say, 10 cm greater than  $y_n$ , or  $y \approx 3.3$  m, would not be achieved until  $x = -13,400$  m. Backwater curves are quite far-reaching upstream, especially in flood stages.

## Summary

This chapter has introduced open-channel flow analysis, limited to steady, one-dimensional flow conditions. The basic analysis combines the continuity equation with the extended Bernoulli equation including friction losses.

Open-channel flows are classified either by depth variation or by Froude number, the latter being analogous to the Mach number in compressible duct flow (Chap. 9). Flow at constant slope and depth is called uniform flow and satisfies the classical Chézy equation (10.19). Straight prismatic channels can be optimized to find the cross section that gives maximum flow rate with minimum friction losses. As the slope and flow velocity increase, the channel reaches a *critical* condition of Froude number unity, where velocity equals the speed of a small-amplitude surface wave in the channel. Every channel has a critical slope that varies with the flow rate and roughness. If the flow becomes supercritical ( $Fr > 1$ ), it may undergo a hydraulic jump to a greater depth and lower (subcritical) velocity, analogous to a normal shock wave.

The analysis of gradually varied flow leads to a differential equation (10.51) that can be solved by numerical methods. The chapter ends with a discussion of the flow over a dam or weir, where the total flow rate can be correlated with upstream water depth.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon may require the use of a com-

puter. The standard end-of-chapter problems P10.1 to P10.128 (categorized in the problem list here) are followed by word problems W10.1 to W10.13, fundamentals of engineering exam problems FE10.1 to FE10.7, comprehensive problems C10.1 to C10.7, and design projects D10.1 and D10.2.

**Problem Distribution**

Section	Topic	Problems
10.1	Introduction: Froude number, wave speed	P10.1–P10.10
10.2	Uniform flow: the Chézy formula	P10.11–P10.36
10.3	Efficient uniform-flow channels	P10.37–P10.47
10.4	Specific energy: critical depth	P10.48–P10.58
10.4	Flow over a bump	P10.59–P10.68
10.4	Sluice gate flow	P10.69–P10.78
10.5	The hydraulic jump	P10.79–P10.96
10.6	Gradually varied flow	P10.97–P10.112
10.7	Weirs and flumes	P10.113–P10.123
10.7	Backwater curves	P10.124–P10.128


**Introduction: Froude number, wave speed**

**P10.1** The formula for shallow-water wave propagation speed, Eq. (10.9) or (10.10), is independent of the physical properties of the liquid, like density, viscosity, or surface tension. Does this mean that waves propagate at the same speed in water, mercury, gasoline, and glycerin? Explain.

**P10.2** Water at 20°C flows in a 30-cm-wide rectangular channel at a depth of 10 cm and a flow rate of 80,000 cm<sup>3</sup>/s. Estimate (a) the Froude number and (b) the Reynolds number.

**P10.3** Narragansett Bay is approximately 21 (statute) mi long and has an average depth of 42 ft. Tidal charts for the area indicate a time delay of 30 min between high tide at the mouth of the bay (Newport, Rhode Island) and its head (Providence, Rhode Island). Is this delay correlated with the propagation of a shallow-water tidal crest wave through the bay? Explain.


**P10.4** The water channel flow in Fig. P10.4 has a free surface in three places. Does it qualify as an open-channel flow? Explain. What does the dashed line represent?

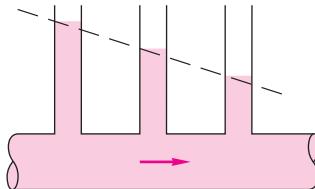

P10.4


**P10.5** Water flows down a rectangular channel that is 4 ft wide and 3 ft deep. The flow rate is 15,000 gal/min. Estimate the Froude number of the flow.

**P10.6** Pebbles dropped successively at the same point, into a water channel flow of depth 42 cm, create two circular ripples, as in Fig. P10.6. From this information estimate (a) the Froude number and (b) the stream velocity.

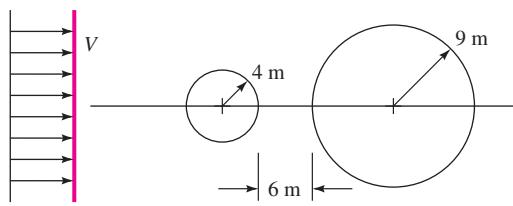

P10.6

**P10.7** Pebbles dropped successively at the same point, into a water channel flow of depth 65 cm, create two circular ripples, as in Fig. P10.7. From this information estimate (a) the Froude number and (b) the stream velocity.

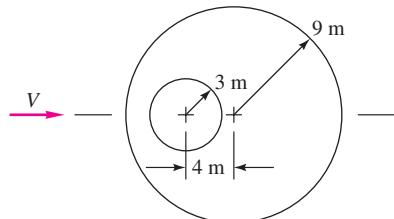

P10.7

**P10.8** An earthquake near the Kenai Peninsula, Alaska, creates a single “tidal” wave (called a *tsunami*) that propagates southward across the Pacific Ocean. If the average ocean depth is 4 km and seawater density is 1025 kg/m<sup>3</sup>, estimate the time of arrival of this tsunami in Hilo, Hawaii.

**P10.9** Equation (10.10) is for a single disturbance wave. For periodic small-amplitude surface waves of wavelength  $\lambda$  and period  $T$ , inviscid theory [8 to 10] predicts a wave propagation speed

$$c_0^2 = \frac{g\lambda}{2\pi} \tanh \frac{2\pi y}{\lambda}$$

where  $y$  is the water depth and surface tension is neglected. (a) Determine if this expression is affected by the Reynolds number, Froude number, or Weber number. Derive the limiting values of this expression for (b)  $y \ll \lambda$  and (c)  $y \gg \lambda$ . (d) For what ratio  $y/\lambda$  is the wave speed within 1 percent of limit (c)?

**P10.10** If surface tension  $Y$  is included in the analysis of Prob. P10.9, the resulting wave speed is [8 to 10]

$$c_0^2 = \left( \frac{g\lambda}{2\pi} + \frac{2\pi Y}{\rho\lambda} \right) \tanh \frac{2\pi y}{\lambda}$$

(a) Determine if this expression is affected by the Reynolds number, Froude number, or Weber number. Derive the limiting values of this expression for (b)  $y \ll \lambda$  and (c)  $y \gg \lambda$ . (d) Finally determine the wavelength  $\lambda_{\text{crit}}$  for a minimum value of  $c_0$ , assuming that  $y \gg \lambda$ .

### Uniform flow: the Chéy formula

**P10.11** A rectangular channel is 2 m wide and contains water 3 m deep. If the slope is  $0.85^\circ$  and the lining is corrugated metal, estimate the discharge for uniform flow.

**P10.12** (a) For laminar draining of a wide thin sheet of water on pavement sloped at angle  $\theta$ , as in Fig. P4.36, show that the flow rate is given by


$$Q = \frac{\rho g b h^3 \sin \theta}{3\mu}$$

where  $b$  is the sheet width and  $h$  its depth. (b) By (somewhat laborious) comparison with Eq. (10.13), show that this expression is compatible with a friction factor  $f = 24/\text{Re}$ , where  $\text{Re} = V_{av}h/\nu$ .

**P10.13** A large pond drains down an asphalt rectangular channel that is 2 ft wide. The channel slope is  $0.8$  degrees. If the flow is uniform, at a depth of 21 in, estimate the time to drain 1 acre-foot of water.

**P10.14** The Chéy formula (10.18) is independent of fluid density and viscosity. Does this mean that water, mercury, alcohol, and SAE 30 oil will all flow down a given open channel at the same rate? Explain.


**P10.15** The painted-steel channel of Fig. P10.15 is designed, without the barrier, for a flow rate of  $6 \text{ m}^3/\text{s}$  at a normal depth of 1 m. Determine (a) the design slope of the channel and (b) the reduction in total flow rate if the proposed painted-steel central barrier is installed.

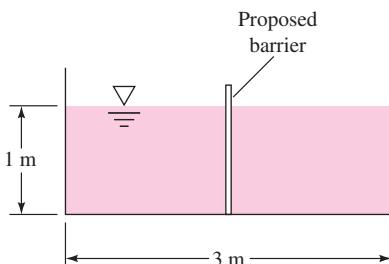

**P10.15**

**P10.16** A brickwork rectangular channel is 120 cm wide and laid on a slope of 2 m per km. (a) Find the normal flow rate when the water depth is 40 cm. (b) For the same slope, find the water depth that will double the flow rate in part (a). Comment.

**P10.17** The trapezoidal channel of Fig. P10.17 is made of brick-work and slopes at 1:500. Determine the flow rate if the normal depth is 80 cm.

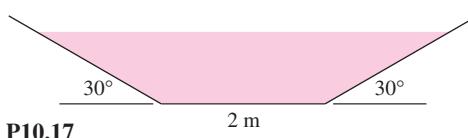

**P10.17**

**P10.18** A V-shaped painted steel channel, similar to Fig. E10.6, has an included angle of 90 degrees. If the slope, in uniform flow, is 3 m per km, estimate (a) the flow rate, in  $\text{m}^3/\text{s}$  and (b) the average wall shear stress. Take  $y = 2 \text{ m}$ .

**P10.19** Modify Prob. P10.18, the  $90^\circ$  Vee-channel, to let the surface be clean earth, which erodes if the average velocity exceeds  $6 \text{ ft/s}$ . Find the maximum depth that avoids erosion. The slope is still 3 m per km.

**P10.20** A circular corrugated metal storm drain is flowing half full over a slope 4 ft/mi. Estimate the normal discharge if the drain diameter is 8 ft.


**P10.21** An engineer makes careful measurements with a weir (see Sec. 10.7) that monitors a rectangular unfinished concrete channel laid on a slope of  $1^\circ$ . She finds, perhaps with surprise, that when the water depth doubles from 2 ft 2 inches to 4 ft 4 inches, the normal flow rate more than doubles, from 200 to  $500 \text{ ft}^3/\text{s}$ . (a) Is this plausible? (b) If so, estimate the channel width.

**P10.22** A trapezoidal aqueduct (Fig. 10.7) has  $b = 5 \text{ m}$  and  $\theta = 40^\circ$  and carries a normal flow of  $60 \text{ m}^3/\text{s}$  of water when  $y = 3.2 \text{ m}$ . For clay tile surfaces, estimate the required elevation drop in m/km.

**P10.23** It is desired to excavate a clean-earth channel as a trapezoidal cross section with  $\theta = 60^\circ$  (see Fig. 10.7). The expected flow rate is  $500 \text{ ft}^3/\text{s}$ , and the slope is 8 ft per mile. The uniform flow depth is planned, for efficient performance, such that the flow cross section is half a hexagon. What is the appropriate bottom width of the channel?

**P10.24** A rectangular channel, laid out on a  $0.5^\circ$  slope, delivers a flow rate of 5000 gal/min in uniform flow when the depth is 1 ft and the width is 3 ft. (a) Estimate the value of Manning's factor  $n$ . (b) What water depth will triple the flow rate?

**P10.25** The equilateral-triangle channel in Fig. P10.25 has constant slope  $S_o$  and constant Manning factor  $n$ . If  $y = a/2$ , find an analytic expression for the flow rate  $Q$ .

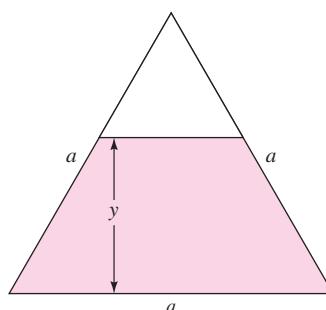

**P10.25**

**P10.26** In the spirit of Fig. 10.6b, analyze a rectangular channel in uniform flow with constant area  $A = by$ , constant slope, but varying width  $b$  and depth  $y$ . Plot the resulting flow

rate  $Q$ , normalized by its maximum value  $Q_{\max}$ , in the range  $0.2 < b/y < 4.0$ , and comment on whether it is crucial for discharge efficiency to have the channel flow at a depth exactly equal to half the channel width.

- P10.27** A circular corrugated-metal water channel has a slope of 1:800 and a diameter of 6 ft. (a) Estimate the normal discharge, in gal/min, when the water depth is 4 ft. (b) For this condition, calculate the average wall shear stress.

- P10.28** Show that, for any straight prismatic channel in uniform flow, the average wall shear stress is given by

$$\tau_{av} \approx \rho g R_h S_0$$

If you happen to spot this result early, you can use it in solving Prob. P10.27.

- P10.29** Suppose that the trapezoidal channel of Fig. P10.17 contains sand and silt that we wish not to erode. According to an empirical correlation by A. Shields in 1936, the average wall shear stress  $\tau_{crit}$  required to erode sand particles of diameter  $d_p$  is approximated by


$$\frac{\tau_{crit}}{(\rho_s - \rho)g d_p} \approx 0.5$$

where  $\rho_s \approx 2400 \text{ kg/m}^3$  is the density of sand. If the slope of the channel in Fig. P10.17 is 1:900 and  $n \approx 0.014$ , determine the maximum water depth to keep from eroding particles of 1-mm diameter.

- P10.30** A clay tile V-shaped channel, with an included angle of  $90^\circ$ , is 1 km long and is laid out on a 1:400 slope. When running at a depth of 2 m, the upstream end is suddenly closed while the lower end continues to drain. Assuming quasi-steady normal discharge, find the time for the channel depth to drop to 20 cm.

- P10.31** An unfinished-concrete 6-ft-diameter sewer pipe flows half full. What is the appropriate slope to deliver 50,000 gal/min of water in uniform flow?

- P10.32** Does half a V-shaped channel perform as well as a full V-shaped channel? The answer to Prob. 10.18 is  $Q = 12.4 \text{ m}^3/\text{s}$ . (Do not reveal this to your friends still working on P10.18.) For the painted-steel half-V in Fig. P10.32, at the same slope of 3:1000, find the flow area that gives the same  $Q$  and compare with P10.18.

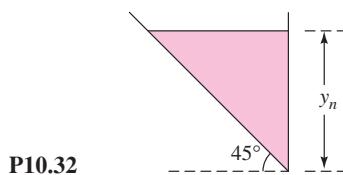


P10.32

- P10.33** Five sewer pipes, each a 2-m-diameter clay tile pipe running half full on a slope of  $0.25^\circ$ , empty into a single

asphalt pipe, also laid out at  $0.25^\circ$ . If the large pipe is also to run half full, what should be its diameter?

- P10.34** A brick rectangular channel with  $S_0 = 0.002$  is designed to carry  $230 \text{ ft}^3/\text{s}$  of water in uniform flow. There is an argument over whether the channel width should be 4 or 8 ft. Which design needs fewer bricks? By what percentage?

- P10.35** In flood stage a natural channel often consists of a deep main channel plus two floodplains, as in Fig. P10.35. The floodplains are often shallow and rough. If the channel has the same slope everywhere, how would you analyze this situation for the discharge? Suppose that  $y_1 = 20 \text{ ft}$ ,  $y_2 = 5 \text{ ft}$ ,  $b_1 = 40 \text{ ft}$ ,  $b_2 = 100 \text{ ft}$ ,  $n_1 = 0.020$ , and  $n_2 = 0.040$ , with a slope of 0.0002. Estimate the discharge in  $\text{ft}^3/\text{s}$ .

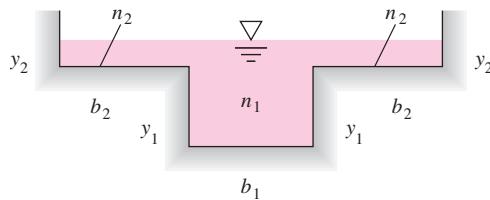

P10.35

- P10.36** The Blackstone River in northern Rhode Island normally flows at about  $25 \text{ m}^3/\text{s}$  and resembles Fig. P10.35 with a clean-earth center channel,  $b_1 \approx 20 \text{ m}$  and  $y_1 \approx 3 \text{ m}$ . The bed slope is about 2 ft/mi. The sides are heavy brush with  $b_2 \approx 150 \text{ m}$ . During hurricane Carol in 1955, a record flow rate of  $1000 \text{ m}^3/\text{s}$  was estimated. Use this information to estimate the maximum flood depth  $y_2$  during this event.

### Efficient uniform-flow channels


- P10.37** A triangular channel (see Fig. E10.6) is to be constructed of corrugated metal and will carry  $8 \text{ m}^3/\text{s}$  on a slope of 0.005. The supply of sheet metal is limited, so the engineers want to minimize the channel surface. What are (a) the best included angle  $\theta$  for the channel, (b) the normal depth for part (a), and (c) the wetted perimeter for part (b)?

- P10.38** For the half-Vee channel in Fig. P10.32, let the interior angle of the Vee be  $\theta$ . For a given value of area, slope, and  $n$ , find the value of  $\theta$  for which the flow rate is a maximum. To avoid cumbersome algebra, simply plot  $Q$  versus  $\theta$  for constant  $A$ .

- P10.39** A trapezoidal channel has  $n = 0.022$  and  $S_0 = 0.0003$  and is made in the shape of a half-hexagon for maximum efficiency. What should the length of the side of the hexagon be if the channel is to carry  $225 \text{ ft}^3/\text{s}$  of water? What is the discharge of a semicircular channel of the same cross-sectional area and the same  $S_0$  and  $n$ ?

- P10.40** Using the geometry of Fig. 10.6a, prove that the most efficient circular open channel (maximum hydraulic radius for a given flow area) is a semicircle.

- P10.41** Determine the most efficient value of  $\theta$  for the V-shaped channel of Fig. P10.41.

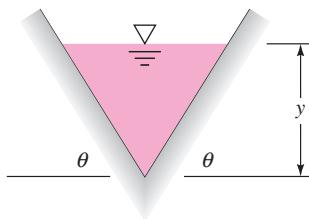**P10.41**

- P10.42** It is desired to deliver 30,000 gal/min of water in a brick-work channel laid on a slope of 1:100. Which would require fewer bricks, in uniform flow: (a) a V-channel with  $\theta = 45^\circ$ , as in Fig. P10.41, or (b) an efficient rectangular channel with  $b = 2y$ ?

- P10.43** What are the most efficient dimensions for a riveted steel rectangular channel to carry  $4.8 \text{ m}^3/\text{s}$  at a slope of 1:900?

- P10.44** What are the most efficient dimensions for a half-hexagon cast iron channel to carry 15,000 gal/min on a slope of  $0.16^\circ$ ?


- P10.45** Calculus tells us that the most efficient wall angle for a V-shaped channel (Fig. P10.41) is  $\theta = 45^\circ$ . It yields the highest normal flow rate for a given area. But is this a sharp or a flat maximum? For a flow area of  $1 \text{ m}^2$  and an unfinished-concrete channel with a slope of 0.004, plot the normal flow rate  $Q$ , in  $\text{m}^3/\text{s}$ , versus angle for the range  $30^\circ \leq \theta \leq 60^\circ$  and comment.

- P10.46** It is suggested that a channel that reduces erosion has a parabolic shape, as in Fig. P10.46. Formulas for area and perimeter of the parabolic cross section are as follows [7, p. 36]:

$$A = \frac{2}{3}bh_0; P = \frac{b}{2}\left[\sqrt{1 + \alpha^2} + \frac{1}{\alpha} \ln(\alpha + \sqrt{1 + \alpha^2})\right]$$

$$\text{where } \alpha = \frac{4h_0}{b}$$

For uniform flow conditions, determine the most efficient ratio  $h_0/b$  for this channel (minimum perimeter for a given constant area).

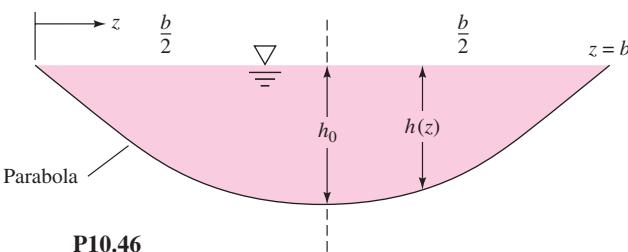**P10.46**


- P10.47** Calculus tells us that the most efficient water depth for a rectangular channel (such as Fig. E10.1) is  $y/b = 1/2$ . It yields the highest normal flow rate for a given area. But is this a sharp or a flat maximum? For a flow area of  $1 \text{ m}^2$  and a clay tile channel with a slope of 0.006, plot the normal flow rate  $Q$ , in  $\text{m}^3/\text{s}$ , versus  $y/b$  for the range  $0.3 \leq y/b \leq 0.7$  and comment.

### Specific energy: critical depth

- P10.48** A wide, clean-earth river has a flow rate  $q = 150 \text{ ft}^3/(\text{s} \cdot \text{ft})$ . What is the critical depth? If the actual depth is 12 ft, what is the Froude number of the river? Compute the critical slope by (a) Manning's formula and (b) the Moody chart.

- P10.49** Find the critical depth of the brick channel in Prob. P10.34 for both the 4- and 8-ft widths. Are the normal flows subcritical or supercritical?

- P10.50** A pencil point piercing the surface of a rectangular channel flow creates a wedge-like  $25^\circ$  half-angle wave, as in Fig. P10.50. If the channel surface is painted steel and the depth is 35 cm, determine (a) the Froude number, (b) the critical depth, and (c) the critical slope for uniform flow.

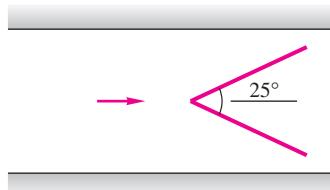**P10.50**

- P10.51** An asphalt circular channel, of diameter 75 cm, is flowing half-full at an average velocity of 3.4 m/s. Estimate (a) the volume flow rate, (b) the Froude number, and (c) the critical slope.

- P10.52** Water flows full in an asphalt half-hexagon channel of bottom width  $W$ . The flow rate is  $12 \text{ m}^3/\text{s}$ . Estimate  $W$  if the Froude number is exactly 0.60.

- P10.53** For the river flow of Prob. P10.48, find the depth  $y_2$  that has the same specific energy as the given depth  $y_1 = 12 \text{ ft}$ . These are called *conjugate depths*. What is  $\text{Fr}_2$ ?

- P10.54** A clay tile V-shaped channel has an included angle of  $70^\circ$  and carries  $8.5 \text{ m}^3/\text{s}$ . Compute (a) the critical depth, (b) the critical velocity, and (c) the critical slope for uniform flow.

- P10.55** A trapezoidal channel resembles Fig. 10.7 with  $b = 1 \text{ m}$  and  $\theta = 50^\circ$ . The water depth is 2 m, and the flow rate is  $32 \text{ m}^3/\text{s}$ . If you stick your fingernail in the surface, as in Fig. P10.50, what half-angle wave might appear?


- P10.56** A 4-ft-diameter finished-concrete sewer pipe is half full of water. (a) In the spirit of Fig. 10.4a, estimate the speed of propagation of a small-amplitude wave propagating along the channel. (b) If the water is flowing at 14,000 gal/min, calculate the Froude number.

**P10.57** Consider the V-shaped channel of arbitrary angle in Fig. P10.41. If the depth is  $y$ , (a) find an analytic expression for the propagation speed  $c_0$  of a small-disturbance wave along this channel. [Hint: Eliminate flow rate from the analyses in Sec. 10.4.] If  $\theta = 45^\circ$  and the depth is 1 m, determine (b) the propagation speed and (c) the flow rate if the channel is running at a Froude number of 1/3.

**P10.58** To follow up the half-full circular channel of Prob. P10.56, calculate (a) the critical slope and (b) the actual slope if the uniform flow rate is 14,000 gal/min.

### Flow over a bump

**P10.59** Uniform water flow in a wide brick channel of slope 0.02° moves over a 10-cm bump as in Fig. P10.59. A slight depression in the water surface results. If the minimum water depth over the bump is 50 cm, compute (a) the velocity over the bump and (b) the flow rate per meter of width.

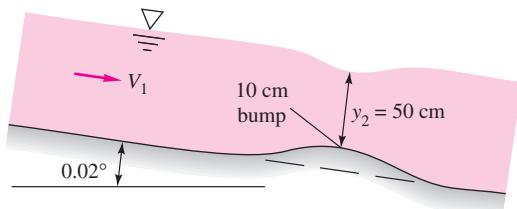

**P10.59**

**P10.60** Water, flowing in a rectangular channel 2 m wide, encounters a bottom bump 10 cm high. The approach depth is 60 cm, and the flow rate 4.8 m<sup>3</sup>/s. Determine (a) the water depth, (b) velocity, and (c) Froude number above the bump. Hint: The change in water depth is rather slight, only about 8 cm.


**P10.61** Modify Prob. P10.59 as follows. Again assuming uniform subcritical approach flow ( $V_1, y_1$ ), find (a) the flow rate and (b)  $y_2$  for which the flow at the crest of the bump is exactly critical ( $\text{Fr}_2 = 1.0$ ).

**P10.62** Consider the flow in a wide channel over a bump, as in Fig. P10.62. One can estimate the water depth change or transition with frictionless flow. Use continuity and the Bernoulli equation to show that

$$\frac{dy}{dx} = -\frac{dh/dx}{1 - V^2/(gy)}$$

Is the drawdown of the water surface realistic in Fig. P10.62? Explain under what conditions the surface might rise above its upstream position  $y_0$ .

**P10.63** In Fig. P10.62 let  $V_0 = 1 \text{ m/s}$  and  $y_0 = 1 \text{ m}$ . If the maximum bump height is 15 cm, estimate (a) the Froude number over the top of the bump and (b) the maximum depression in the water surface.

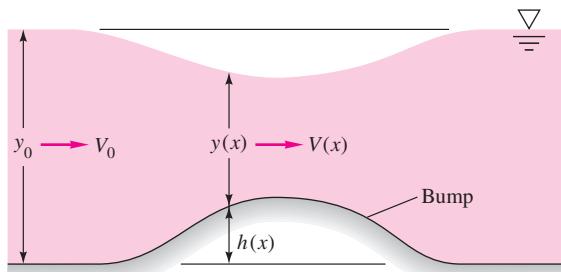

**P10.62**

**P10.64** For the rectangular channel in Prob. P10.60, the Froude number over the bump is about 1.37, which is 17 percent less than the approach value. For the same entrance conditions, find the bump height  $\Delta h$  that causes the bump Froude number to be 1.00.

**P10.65** Program and solve the differential equation of “frictionless flow over a bump,” from Prob. P10.62, for entrance conditions  $V_0 = 1 \text{ m/s}$  and  $y_0 = 1 \text{ m}$ . Let the bump have the convenient shape  $h = 0.5h_{\max}[1 - \cos(2\pi x/L)]$ , which simulates Fig. P10.62. Let  $L = 3 \text{ m}$ , and generate a numerical solution for  $y(x)$  in the bump region  $0 < x < L$ . If you have time for only one case, use  $h_{\max} = 15 \text{ cm}$  (Prob. P10.63), for which the maximum Froude number is 0.425. If more time is available, it is instructive to examine a complete family of surface profiles for  $h_{\max} \approx 1 \text{ cm}$  up to 35 cm (which is the solution of Prob. P10.64).


**P10.66** In Fig. P10.62 let  $V_0 = 6 \text{ m/s}$  and  $y_0 = 1 \text{ m}$ . If the maximum bump height is 35 cm, estimate (a) the Froude number over the top of the bump and (b) the maximum increase in the water surface level.

**P10.67** Modify Prob. P10.63 so that the 15-cm change in bottom level is a *depression*, not a bump. Estimate (a) the Froude number above the depression and (b) the maximum change in water depth.

**P10.68** Modify Prob. P10.65 to have a supercritical approach condition  $V_0 = 6 \text{ m/s}$  and  $y_0 = 1 \text{ m}$ . If you have time for only one case, use  $h_{\max} = 35 \text{ cm}$  (Prob. P10.66), for which the maximum Froude number is 1.47. If more time is available, it is instructive to examine a complete family of surface profiles for  $1 \text{ cm} < h_{\max} < 52 \text{ cm}$  (which is the solution to Prob. P10.67).

### Sluice gate fw

**\*P10.69** Given is the flow of a channel of large width  $b$  under a sluice gate, as in Fig. P10.69. Assuming frictionless steady flow with negligible upstream kinetic energy, derive a formula for the dimensionless flow ratio  $Q^2/(y_1^3 b^2 g)$  as a function of the ratio  $y_2/y_1$ . Show by differentiation that the maximum flow occurs at  $y_2 = 2y_1/3$ .

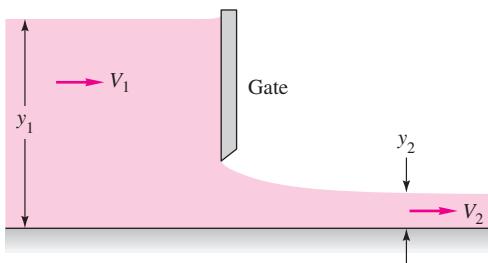


P10.69

**P10.70** The spectacular water release in the chapter-opener photo flows through a giant sluice gate. Assume that the gate is 23 m wide, and its opening is 8 m high. The water depth far upstream is 32 m. Assuming free discharge, estimate the volume flow rate through the gate.

**P10.71** In Fig. P10.69 let  $y_1 = 95$  cm and  $y_2 = 50$  cm. Estimate the flow rate per unit width if the upstream kinetic energy is (a) neglected and (b) included.

\***P10.72** Water approaches the wide sluice gate of Fig. P10.72 at  $V_1 = 0.2$  m/s and  $y_1 = 1$  m. Accounting for upstream kinetic energy, estimate at the outlet, section 2, the (a) depth, (b) velocity, and (c) Froude number.

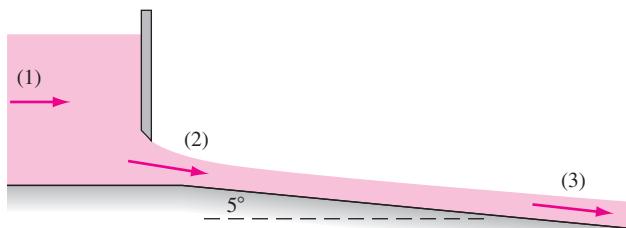

P10.72


**P10.73** In Fig. P10.69, let  $y_1 = 6$  ft and the gate width  $b = 8$  ft. Find the gate opening  $H$  that would allow a free-discharge flow of 30,000 gal/min under the gate.

**P10.74** With respect to Fig. P10.69, show that, for frictionless flow, the upstream velocity may be related to the water levels by

$$V_1 = \sqrt{\frac{2g(y_1 - y_2)}{K^2 - 1}}$$


where  $K = y_1/y_2$ .

**P10.75** A tank of water 1 m deep, 3 m long, and 4 m wide into the paper has a closed sluice gate on the right side, as in Fig. P10.75. At  $t = 0$  the gate is opened to a gap of 10 cm. Assuming quasi-steady sluice gate theory, estimate the time required for the water level to drop to 50 cm. Assume free outflow.

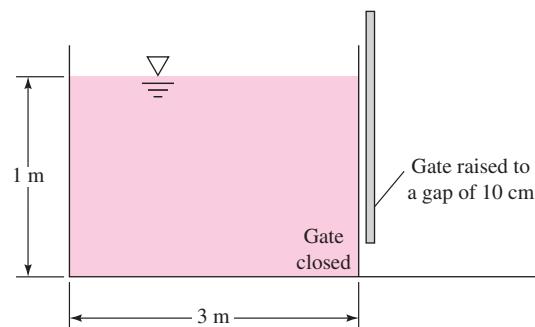


P10.75

**P10.76** Figure P10.76 shows a horizontal flow of water through a sluice gate, a hydraulic jump, and over a 6-ft sharp-crested weir. Channel, gate, jump, and weir are all 8 ft wide unfinished concrete. Determine (a) the flow rate in  $\text{ft}^3/\text{s}$  and (b) the normal depth.

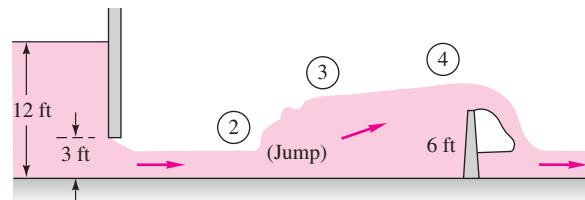

P10.76

**P10.77** Equation (10.41) for sluice gate discharge is for free outflow. If the outflow is drowned, as in Fig. 10.10c, there is dissipation, and  $C_d$  drops sharply, as shown in Fig. P10.77, taken from Ref. 2. Use this data to restudy Prob. 10.73, with  $H = 9$  in. Plot the estimated flow rate, in gal/min, versus  $y_2$  in the range  $0.5 \text{ ft} < y_2 < 5 \text{ ft}$ .

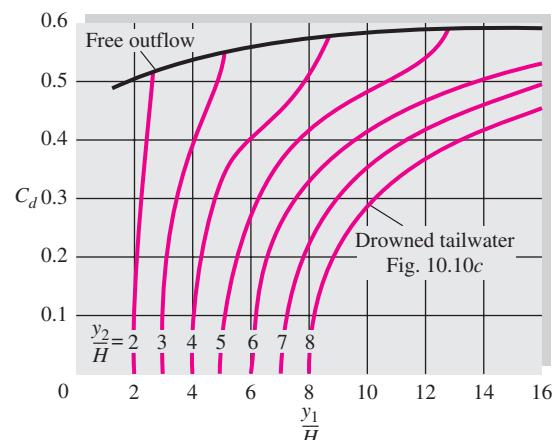

P10.77 (From Ref. 2, p. 509.)

- P10.78** In Fig. P10.69, free discharge, a gate opening of 0.72 ft will allow a flow rate of 30,000 gal/min. Recall  $y_1 = 6$  ft and the gate width  $b = 8$  ft. Suppose that the gate is drowned (Fig. P10.77), with  $y_2 = 4$  ft. What gate opening would then be required?

### The hydraulic jump

- P10.79** Show that the Froude number downstream of a hydraulic jump will be given by

$$Fr_2 = 8^{1/2} Fr_1 / [(1 + 8 Fr_1^2)^{1/2} - 1]^{3/2}$$

Does the formula remain correct if we reverse subscripts 1 and 2? Why?


- P10.80** Water, flowing horizontally in a wide channel of depth 30 cm, undergoes a hydraulic jump whose energy dissipation is 71 percent. Estimate (a) the downstream depth and (b) the volume flow rate per meter of width.

- EES P10.81** Water flows in a wide channel at  $q = 25 \text{ ft}^3/(\text{s} \cdot \text{ft})$ ,  $y_1 = 1 \text{ ft}$ , and then undergoes a hydraulic jump. Compute  $y_2$ ,  $V_2$ ,  $Fr_2$ ,  $h_f$ , the percentage of dissipation, and the horsepower dissipated per unit width. What is the critical depth?

- P10.82** Downstream of a wide hydraulic jump the flow is 4 ft deep and has a Froude number of 0.5. Estimate (a)  $y_1$ , (b)  $V_1$ , (c)  $Fr_1$ , (d) the percentage of dissipation, and (e)  $y_c$ .

- P10.83** A wide-channel flow undergoes a hydraulic jump from 40 to 140 cm. Estimate (a)  $V_1$ , (b)  $V_2$ , (c) the critical depth, in cm, and (d) the percentage of dissipation.

- \*P10.84** Consider the flow under the sluice gate of Fig. P10.84. If  $y_1 = 10 \text{ ft}$  and all losses are neglected except the dissipation in the jump, calculate  $y_2$  and  $y_3$  and the percentage of dissipation, and sketch the flow to scale with the EGL included. The channel is horizontal and wide.

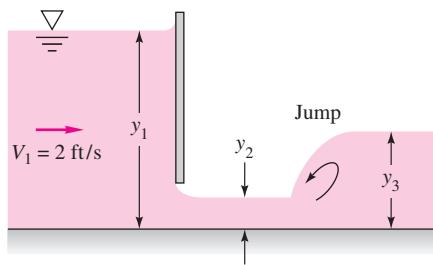

- P10.85** In Prob. P10.72 the exit velocity from the sluice gate is 4.33 m/s. If there is a hydraulic jump just downstream of section 2, determine the downstream (a) velocity, (b) depth, (c) Froude number, and (d) percentage of dissipation. Neglect the effect of the nonhorizontal bottom (see Prob. P10.91).

- P10.86** A *bore* is a hydraulic jump that propagates upstream into a still or slower-moving fluid, as in Fig. P10.86, on the Sé-Sâne channel, near Mont Saint Michel in northwest France. The bore is moving at about 10 ft/s and is about one foot high. Estimate (a) the depth of the water in this area and (b) the velocity induced by the wave.




**P10.86** Tidal bore on the Sé-Sâne river channel in northwest France. (Courtesy of Prof. Hubert Chanson, University of Queensland.)

- P10.87** A *tidal bore* may occur when the ocean tide enters an estuary against an oncoming river discharge, such as on the Severn River in England. Suppose that the tidal bore is 10 ft deep and propagates at 13 mi/h upstream into a river that is 7 ft deep. Estimate the river current in kn.

- P10.88** For the situation in Fig. P10.84, suppose that at section 3 the depth is 2 m and the Froude number is 0.25. Estimate (a) the flow rate per meter of width, (b)  $y_c$ , (c)  $y_1$ , (d) the percentage of dissipation in the jump, and (e) the gap height  $H$  of the gate.

- P10.89** Water 30 cm deep is in uniform flow down a 1° unfinished concrete slope when a hydraulic jump occurs, as in Fig. P10.89. If the channel is very wide, estimate the water depth  $y_2$  downstream of the jump.

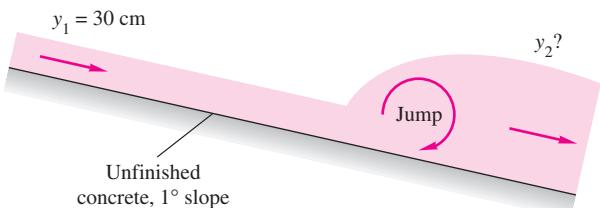

**P10.89**

- P10.90** For the gate/jump/weir system sketched in Fig. P10.76, the flow rate was determined to be 379 ft<sup>3</sup>/s. Determine

(a) the water depths  $y_2$  and  $y_3$ , and (b) the Froude numbers  $Fr_2$  and  $Fr_3$  before and after the hydraulic jump.

**\*P10.91** No doubt you used the horizontal-jump formula (10.43) to solve Prob. P10.89, which is reasonable since the slope is so small. However, Chow [2, p. 425] points out that hydraulic jumps are *higher* on sloped channels, due to “the weight of the fluid in the jump.” Make a control volume sketch of a sloping jump to show why this is so. The sloped-jump chart given in Chow’s Fig. 15-20 may be approximated by the following curve fit:

$$\frac{2y_2}{y_1} \approx [(1 + 8 Fr_1^2)^{1/2} - 1] e^{3.5S_0}$$

where  $0 < S_0 < 0.3$  are the channel slopes for which data are available. Use this correlation to modify your solution to Prob. P10.89. If time permits, make a graph of  $y_2/y_1$  ( $\leq 20$ ) versus  $Fr_1$  ( $\leq 15$ ) for various  $S_0$  ( $\leq 0.3$ ).

**P10.92** A familiar sight is the circular hydraulic jump formed by a faucet jet falling onto a flat sink surface, as in Fig. P10.92. Because of the shallow depths, this jump is strongly dependent on bottom friction, viscosity, and surface tension [35]. It is also unstable and can form remarkable noncircular shapes, as shown in the website <<http://web.mit.edu/jeffa/www/jump.htm>>.




**P10.92** A circular hydraulic jump in a kitchen sink. (Courtesy of Prof. Hubert Chanson, University of Queensland.)

For this problem, assume that two-dimensional jump theory is valid. If the water depth outside the jump is 4 mm, the radius at which the jump appears is  $R = 3$  cm, and

the faucet flow rate is 100 cm<sup>3</sup>/s, find the conditions just upstream of the jump.


**P10.93** Water in a horizontal channel accelerates smoothly over a bump and then undergoes a hydraulic jump, as in Fig. P10.93. If  $y_1 = 1$  m and  $y_3 = 40$  cm, estimate (a)  $V_1$ , (b)  $V_3$ , (c)  $y_4$ , and (d) the bump height  $h$ .

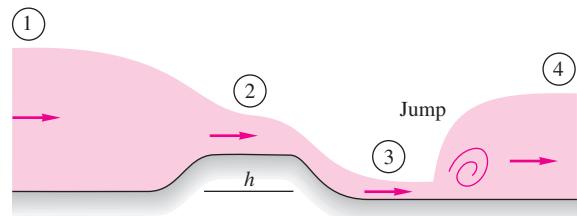

**P10.93**

**P10.94** In Fig. 10.11, the upstream flow is only 2.65 cm deep. The channel is 50 cm wide, and the flow rate is 0.0359 m<sup>3</sup>/s. Determine (a) the upstream Froude number, (b) the downstream velocity, (c) the downstream depth, and (d) the percent dissipation.

**P10.95** A 10-cm-high bump in a wide horizontal water channel creates a hydraulic jump just upstream and the flow pattern in Fig. P10.95. Neglecting losses except in the jump, for the case  $y_3 = 30$  cm, estimate (a)  $V_4$ , (b)  $y_4$ , (c)  $V_1$ , and (d)  $y_1$ .

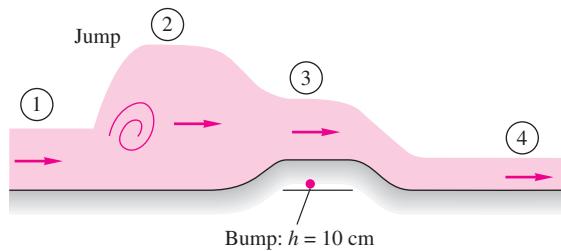

**P10.95**

**P10.96** For the circular hydraulic jump in Fig. P10.92, the water depths before and after the jump are 2 mm and 4 mm, respectively. Assume that two-dimensional jump theory is valid. If the faucet flow rate is 150 cm<sup>3</sup>/s, estimate the radius  $R$  at which the jump will appear.

### Gradually varied fw


**P10.97** A brickwork rectangular channel 4 m wide is flowing at 8.0 m<sup>3</sup>/s on a slope of 0.1°. Is this a mild, critical, or steep slope? What type of gradually varied solution curve are we on if the local water depth is (a) 1 m, (b) 1.5 m, and (c) 2 m?

**P10.98** A gravelly earth wide channel is flowing at  $10 \text{ m}^3/\text{s}$  per meter of width on a slope of  $0.75^\circ$ . Is this a mild, critical, or steep slope? What type of gradually varied solution curve are we on if the local water depth is (a) 1 m, (b) 2 m, or (c) 3 m?

**P10.99** A clay tile V-shaped channel of included angle  $60^\circ$  is flowing at  $1.98 \text{ m}^3/\text{s}$  on a slope of  $0.33^\circ$ . Is this a mild, critical, or steep slope? What type of gradually varied solution curve are we on if the local water depth is (a) 1 m, (b) 2 m, or (c) 3 m?


**P10.100** If bottom friction is included in the sluice gate flow of Prob. P10.84, the depths ( $y_1, y_2, y_3$ ) will vary with  $x$ . Sketch the type and shape of gradually varied solution curve in each region (1, 2, 3), and show the regions of rapidly varied flow.

**P10.101** Consider the gradual change from the profile beginning at point  $a$  in Fig. P10.101 on a mild slope  $S_{01}$  to a mild but steeper slope  $S_{02}$  downstream. Sketch and label the curve  $y(x)$  expected.

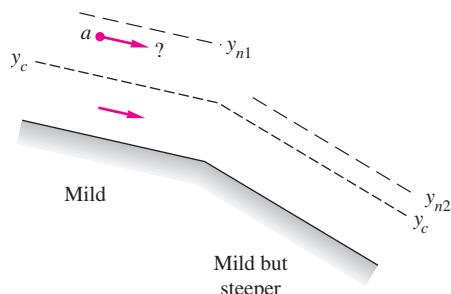

**P10.101**


**\*P10.102** The wide-channel flow in Fig. P10.102 changes from a steep slope to one even steeper. Beginning at points  $a$  and  $b$ , sketch and label the water surface profiles expected for gradually varied flow.

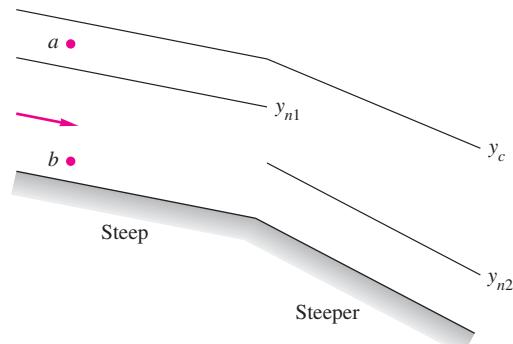

**P10.102**

**P10.103** A circular painted-steel channel, of radius 50 cm, is running half-full at  $1.2 \text{ m}^3/\text{s}$  on a slope of  $5 \text{ m/km}$ . Determine (a) whether the slope is mild or steep and (b) what type of gradually varied solution applies at this point. (c) Use the approximate method of Eq. (10.52), and a single depth increment  $\Delta y = 5 \text{ cm}$ , to calculate the estimated  $\Delta x$  for this new  $y$ .


**P10.104** The rectangular-channel flow in Fig. P10.104 expands to a cross section 50 percent wider. Beginning at points  $a$  and  $b$ , sketch and label the water surface profiles expected for gradually varied flow.

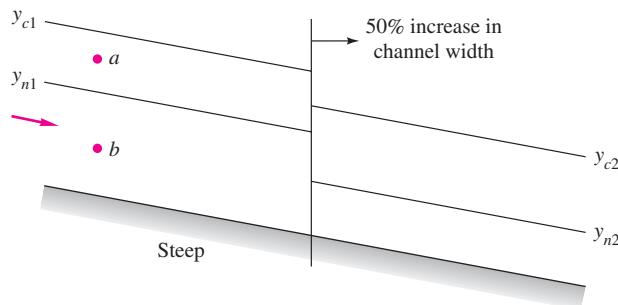

**P10.104**

**P10.105** In Prob. P10.84 the frictionless solution is  $y_2 = 0.82 \text{ ft}$ , which we denote as  $x = 0$  just downstream of the gate. If the channel is horizontal with  $n = 0.018$  and there is no hydraulic jump, compute from gradually varied theory the downstream distance where  $y = 2.0 \text{ ft}$ .

**P10.106** A rectangular channel with  $n = 0.018$  and a constant slope of 0.0025 increases its width linearly from  $b$  to  $2b$  over a distance  $L$ , as in Fig. P10.106. (a) Determine the variation  $y(x)$  along the channel if  $b = 4 \text{ m}$ ,  $L = 250 \text{ m}$ , the initial depth is  $y(0) = 1.05 \text{ m}$ , and the flow rate is  $7 \text{ m}^3/\text{s}$ . (b) Then, if your computer program is running well, determine the initial depth  $y(0)$  for which the exit flow will be exactly critical.

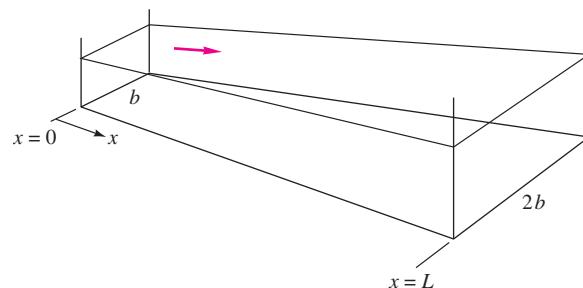


**P10.106**

- P10.107** A clean-earth wide-channel flow is climbing an adverse slope with  $S_0 = -0.002$ . If the flow rate is  $q = 4.5 \text{ m}^3/(\text{s} \cdot \text{m})$ , use gradually varied theory to compute the distance for the depth to drop from 3.0 to 2.0 m.

- P10.108** Water flows at  $1.5 \text{ m}^3/\text{s}$  along a straight, riveted-steel  $90^\circ$  V-shaped channel (see Fig. 10.41,  $\theta = 45^\circ$ ). At section 1, the water depth is 1.0 m. (a) As we proceed downstream, will the water depth rise or fall? Explain. (b) Depending upon your answer to part (a), calculate, in one numerical swoop, from gradually varied theory, the distance downstream for which the depth rises (or falls) 0.1 m.

- P10.109** Figure P10.109 illustrates a free overfall or *dropdown* flow pattern, where a channel flow accelerates down a slope and falls freely over an abrupt edge. As shown, the flow reaches critical just before the overfall. Between  $y_c$  and the edge the flow is rapidly varied and does not satisfy gradually varied theory. Suppose that the flow rate is  $q = 1.3 \text{ m}^3/(\text{s} \cdot \text{m})$  and the surface is unfinished concrete. Use Eq. (10.51) to estimate the water depth 300 m upstream as shown.

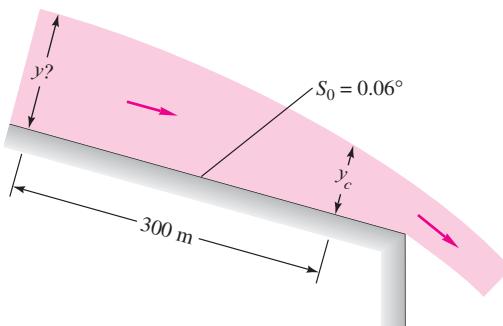


**P10.109**

- P10.110** We assumed frictionless flow in solving the bump case, Prob. P10.65, for which  $V_2 = 1.21 \text{ m/s}$  and  $y_2 = 0.826 \text{ m}$  over the crest when  $h_{\max} = 15 \text{ cm}$ ,  $V_1 = 1 \text{ m/s}$ , and  $y_1 = 1 \text{ m}$ . However, if the bump is long and rough, friction may be important. Repeat Prob. P10.65 for the same bump shape,  $h = 0.5h_{\max}[1 - \cos(2\pi x/L)]$ , to compute conditions (a) at the crest and (b) at the end of the bump,  $x = L$ . Let  $h_{\max} = 15 \text{ cm}$  and  $L = 100 \text{ m}$ , and assume a clean-earth surface.

- P10.111** Solve Prob. P10.105 (a horizontal variation along an H-3 curve) by the approximate method of Eq. (10.52), beginning at  $(x, y) = (0, 0.82 \text{ ft})$  and using a depth increment  $\Delta y = 0.2 \text{ ft}$ . (The final increment should be  $\Delta y = 0.18 \text{ ft}$  to bring us exactly to  $y = 2.0 \text{ ft}$ .)

- P10.112** The clean-earth channel in Fig. P10.112 is 6 m wide and slopes at  $0.3^\circ$ . Water flows at  $30 \text{ m}^3/\text{s}$  in the channel and

enters a reservoir so that the channel depth is 3 m just before the entry. Assuming gradually varied flow, how far is the distance  $L$  to a point in the channel where  $y = 2 \text{ m}$ ? What type of curve is the water surface?

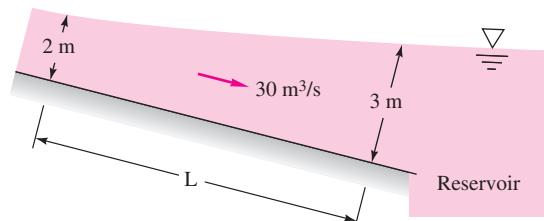


**P10.112**

### Weirs and flumes

- P10.113** Figure P10.113 shows a channel contraction section often called a *venturi flume* [23, p. 167] because measurements of  $y_1$  and  $y_2$  can be used to meter the flow rate. Show that if losses are neglected and the flow is one-dimensional and subcritical, the flow rate is given by

$$Q = \left[ \frac{2g(y_1 - y_2)}{1/(b_2^2 y_2^2) - 1/(b_1^2 y_1^2)} \right]^{1/2}$$

Apply this to the special case  $b_1 = 3 \text{ m}$ ,  $b_2 = 2 \text{ m}$ , and  $y_1 = 1.9 \text{ m}$ . (a) Find the flow rate if  $y_2 = 1.5 \text{ m}$ . (b) Also find the depth  $y_2$  for which the flow becomes critical in the throat.

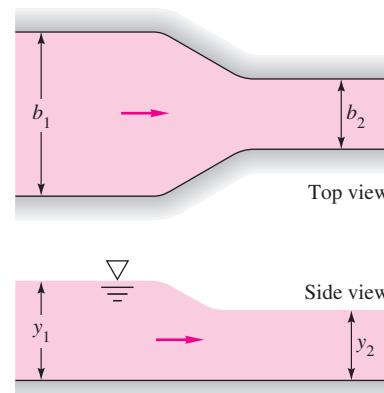

**P10.113**

- P10.114** For the gate/jump/weir system sketched in Fig. P10.76, the flow rate was determined to be  $379 \text{ ft}^3/\text{s}$ . Determine the water depth  $y_4$  just upstream of the weir.


- P10.115** Gradually varied theory, Eq. (10.49), neglects the effect of width changes,  $db/dx$ , assuming that they are small.

But they are not small for a short, sharp contraction such as the venturi flume in Fig. P10.113. Show that, for a rectangular section with  $b = b(x)$ , Eq. (10.49) should be modified as follows:

$$\frac{dy}{dx} \approx \frac{S_0 - S + [V^2/(gb)](db/dx)}{1 - Fr^2}$$

Investigate a criterion for reducing this relation to Eq. (10.49).

- P10.116** A Cipolletti weir, popular in irrigation systems, is trapezoidal, with sides sloped at 1:4 horizontal to vertical, as in Fig. P10.116. The following are flow-rate values, from the U.S. Dept. of Agriculture, for a few different system parameters:

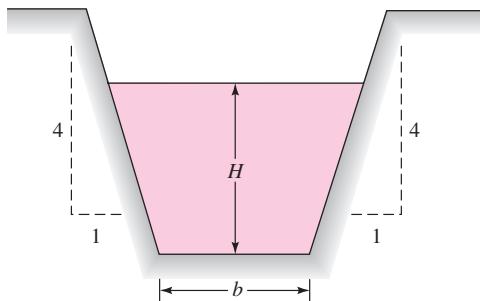

**P10.116**


$H$ , ft	0.8	1.0	1.35	1.5
$b$ , ft	1.5	2.0	2.5	3.5
$Q$ , gal/min	1620	3030	5920	9740

Use this data to correlate a Cipolletti weir formula with a reasonably constant weir coefficient.


- P10.117** A popular flow-measurement device in agriculture is the *Parshall flume* [33], Fig. P10.117, named after its inventor, Ralph L. Parshall, who developed it in 1922 for the U.S. Bureau of Reclamation. The subcritical approach flow is driven, by a steep constriction, to go critical ( $y = y_c$ ) and then supercritical. It gives a constant reading  $H$  for a wide range of tailwaters. Derive a formula for estimating  $Q$  from measurement of  $H$  and knowledge of constriction width  $b$ . Neglect the entrance velocity head.

- \*P10.118** Using a Bernoulli-type analysis similar to Fig. 10.16a, show that the theoretical discharge of the V-shaped weir in Fig. P10.118 is given by

$$Q = 0.7542g^{1/2} \tan \alpha H^{5/2}$$

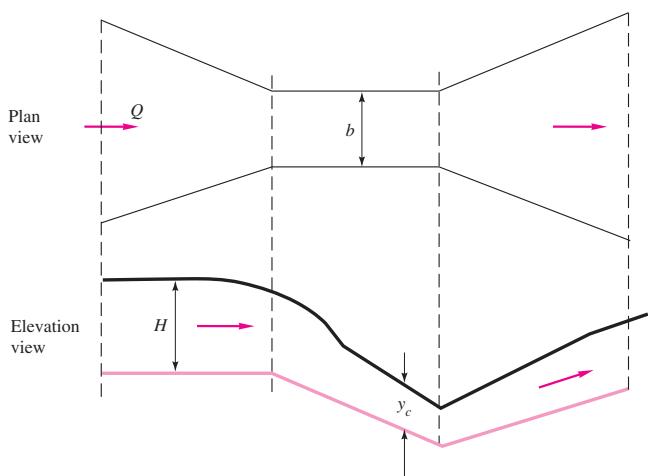

**P10.117** The Parshall flume

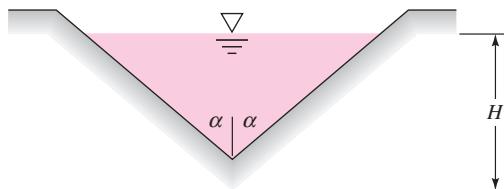


**\*P10.118**

- P10.119** Data by A. T. Lenz for water at 20°C (reported in Ref. 23) show a significant increase of discharge coefficient of V-notch weirs (Fig. P10.118) at low heads. For  $\alpha = 20^\circ$ , some measured values are as follows:

$H$ , ft	0.2	0.4	0.6	0.8	1.0
$C_d$	0.499	0.470	0.461	0.456	0.452

Determine if these data can be correlated with the Reynolds and Weber numbers vis-à-vis Eq. (10.61). If not, suggest another correlation.

- P10.120** The rectangular channel in Fig. P10.120 contains a V-notch weir as shown. The intent is to meter flow rates between 2.0 and 6.0 m<sup>3</sup>/s with an upstream hook gage

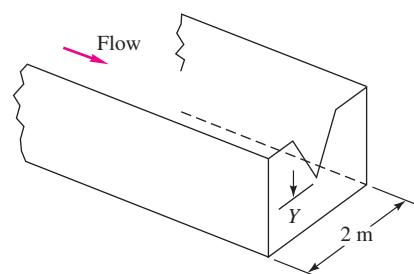

**P10.120**

set to measure water depths between 2.0 and 2.75 m. What are the most appropriate values for the notch height  $Y$  and the notch half-angle  $\alpha$ ?


- P10.121** Water flow in a rectangular channel is to be metered by a thin-plate weir with side contractions, as in Table 10.2b, with  $L = 6$  ft and  $Y = 1$  ft. It is desired to measure flow rates between 1500 and 3000 gal/min with only a 6-in change in upstream water depth. What is the most appropriate length for the weir width  $b$ ?

- P10.122** In 1952 E. S. Crump developed the triangular weir shape shown in Fig. P10.122 [23, Chap. 4]. The front slope is 1:2 to avoid sediment deposition, and the rear slope is 1:5 to maintain a stable tailwater flow. The beauty of the design is that it has a unique discharge correlation up to near-drowning conditions,  $H_2/H_1 \leq 0.75$ :

$$Q = C_d b g^{1/2} \left( H_1 + \frac{V_1^2}{2g} - k_h \right)^{3/2}$$

where  $C_d \approx 0.63$  and  $k_h \approx 0.3$  mm

The term  $k_h$  is a low-head loss factor. Suppose that the weir is 3 m wide and has a crest height  $Y = 50$  cm. If the water depth upstream is 65 cm, estimate the flow rate in gal/min.

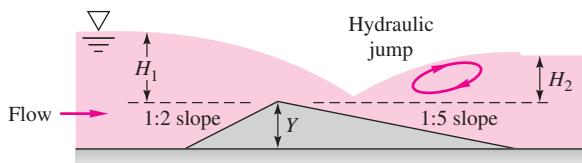

**P10.122** The Crump weir [23, Chap. 4]

- \***P10.123** The Crump weir calibration in Prob. P10.122 is for *modular* flow, which occurs when the flow rate is independent of downstream tailwater. When the weir becomes drowned, the flow rate decreases by the following factor:

$$Q = Q_{\text{mod}} f$$


where  $f \approx 1.035 \left[ 0.817 - \left( \frac{H_2^*}{H_1^*} \right)^4 \right]^{0.0647}$

for  $0.70 \leq H_2^*/H_1^* \leq 0.93$ , where  $H^*$  denotes  $H_1 + V_1^2/(2g) - k_h$  for brevity. The weir is then *double-gaged* to measure both  $H_1$  and  $H_2$ . Suppose that the weir crest is 1 m high and 2 m wide. If the measured upstream and downstream water depths are 2.0 and 1.9 m, respectively, estimate the flow rate in gal/min. Comment on the possible uncertainty of your estimate.

### Backwater curves

- P10.124** Water flows at  $600 \text{ ft}^3/\text{s}$  in a rectangular channel 22 ft wide with  $n \approx 0.024$  and a slope of  $0.1^\circ$ . A dam increases the depth to 15 ft, as in Fig. P10.124. Using

gradually varied theory, estimate the distance  $L$  upstream at which the water depth will be 10 ft. What type of solution curve are we on? What should be the water depth asymptotically far upstream?

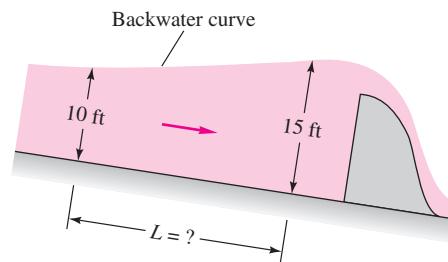


**P10.124**

- P10.125** The Tupperware dam on the Blackstone River is 12 ft high, 100 ft wide, and sharp-edged. It creates a backwater similar to Fig. P10.124. Assume that the river is a weedy-earth rectangular channel 100 ft wide with a flow rate of  $800 \text{ ft}^3/\text{s}$ . Estimate the water depth 2 mi upstream of the dam if  $S_0 = 0.001$ .

- P10.126** Suppose that the rectangular channel of Fig. P10.120 is made of riveted steel and carries a flow of  $8 \text{ m}^3/\text{s}$  on a slope of  $0.15^\circ$ . If the V-notch weir has  $\alpha = 30^\circ$  and  $Y = 50$  cm, estimate, from gradually varied theory, the water depth 100 m upstream.

- P10.127** A clean earth river is 50 ft wide and averages  $600 \text{ ft}^3/\text{s}$ . It contains a dam that increases the water depth to 8 ft, to provide head for a hydropower plant. The bed slope is 0.0025. (a) What is the normal depth of this river? (b) Engineers propose putting flashboards on the dam to raise the water level to 10 ft. Residents a half mile upstream are worried about flooding above their present water depth of about 2.2 ft. Using Eq. (10.52) in one big half-mile step, estimate the new water depth upstream.

- P10.128** A rectangular channel 4 m wide is blocked by a broad-crested weir 2 m high, as in Fig. P10.128. The channel is horizontal for 200 m upstream and then slopes at  $0.7^\circ$  as shown. The flow rate is  $12 \text{ m}^3/\text{s}$ , and  $n = 0.03$ . Compute the water depth  $y$  at 300 m upstream from gradually varied theory.

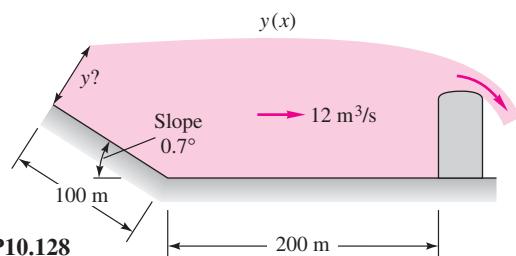

**P10.128**

## Word Problems

- W10.1** Free-surface problems are driven by gravity. Why do so many of the formulas in this chapter contain the *square root* of the acceleration of gravity?
- W10.2** Explain why the flow under a sluice gate, Fig. 10.10, either is or is not analogous to compressible gas flow through a converging-diverging nozzle, Fig. 9.12.
- W10.3** In uniform open-channel flow, what is the balance of forces? Can you use such a force balance to derive the Chézy equation (10.13)?
- W10.4** A shallow-water wave propagates at the speed  $c_0 \approx (gy)^{1/2}$ . What makes it propagate? That is, what is the balance of forces in such wave motion? In which direction does such a wave propagate?
- W10.5** Why is the Manning friction correlation, Eq. (10.16), used almost universally by hydraulics engineers, instead of the Moody friction factor?
- W10.6** During horizontal channel flow over a bump, is the specific energy constant? Explain.
- W10.7** Cite some similarities, and perhaps some dissimilarities, between a hydraulic jump and a gas dynamic normal shock wave.
- W10.8** Give three examples of rapidly varied flow. For each case, cite reasons why it does not satisfy one or more of the five basic assumptions of gradually varied flow theory.
- W10.9** Is a free overfall, Fig. 10.15e, similar to a weir? Could it be calibrated versus flow rate in the same manner as a weir? Explain.
- W10.10** Cite some similarities, and perhaps some dissimilarities, between a weir and a Bernoulli obstruction flowmeter from Sec. 6.12.
- W10.11** Is a bump, Fig. 10.9a, similar to a weir? If not, when does a bump become large enough, or sharp enough, to be a weir?
- W10.12** After doing some reading and/or thinking, explain the design and operation of a *long-throated flume*.
- W10.13** Describe the design and operation of a *critical-depth flume*. What are its advantages compared to the venturi flume of Prob. P10.113?

## Fundamentals of Engineering Exam Problems

The FE Exam is fairly light on open-channel problems in the general (morning) session, but this subject plays a big part in the specialized civil engineering (afternoon) exam.

- FE10.1** Consider a rectangular channel 3 m wide laid on a 1° slope. If the water depth is 2 m, the hydraulic radius is (a) 0.43 m, (b) 0.6 m, (c) 0.86 m, (d) 1.0 m, (e) 1.2 m
- FE10.2** For the channel of Prob. FE10.1, the most efficient water depth (best flow for a given slope and resistance) is (a) 1 m, (b) 1.5 m, (c) 2 m, (d) 2.5 m, (e) 3 m
- FE10.3** If the channel of Prob. FE10.1 is built of rubble cement (Manning's  $n \approx 0.020$ ), what is the uniform flow rate when the water depth is 2 m?  
(a) 6  $\text{m}^3/\text{s}$ , (b) 18  $\text{m}^3/\text{s}$ , (c) 36  $\text{m}^3/\text{s}$ , (d) 40  $\text{m}^3/\text{s}$ ,  
(e) 53  $\text{m}^3/\text{s}$

- FE10.4** For the channel of Prob. FE10.1, if the water depth is 2 m and the uniform flow rate is 24  $\text{m}^3/\text{s}$ , what is the approximate value of Manning's roughness factor  $n$ ?  
(a) 0.015, (b) 0.020, (c) 0.025, (d) 0.030, (e) 0.035
- FE10.5** For the channel of Prob. FE10.1, if Manning's roughness factor  $n \approx 0.020$  and  $Q \approx 29 \text{ m}^3/\text{s}$ , what is the normal depth  $y_n$ ?  
(a) 1 m, (b) 1.5 m, (c) 2 m, (d) 2.5 m, (e) 3 m
- FE10.6** For the channel of Prob. FE10.1, if  $Q \approx 24 \text{ m}^3/\text{s}$ , what is the critical depth  $y_c$ ?  
(a) 1.0 m, (b) 1.26 m, (c) 1.5 m, (d) 1.87 m, (e) 2.0 m
- FE10.7** For the channel of Prob. FE10.1, if  $Q \approx 24 \text{ m}^3/\text{s}$  and the depth is 2 m, what is the Froude number of the flow?  
(a) 0.50, (b) 0.77, (c) 0.90, (d) 1.00, (e) 1.11

## Comprehensive Problems

- C10.1** February 1998 saw the failure of the earthen dam impounding California Jim's Pond in southern Rhode Island. The resulting flood raised temporary havoc in the nearby village of Peace Dale. The pond is 17 acres in area and 15 ft deep and was full from heavy rains. The breach in the dam was 22 ft wide and 15 ft deep. Estimate the time required for the pond to drain to a depth of 2 ft.

- C10.2** A circular, unfinished concrete drainpipe is laid on a slope of 0.0025 and is planned to carry from 50 to 300  $\text{ft}^3/\text{s}$  of runoff water. Design constraints are that (1) the water depth should be no more than three-fourths of the diameter and (2) the flow should always be subcritical. What is the appropriate pipe diameter to satisfy these requirements? If no commercial pipe is exactly this calculated


size, should you buy the next smallest or the next largest pipe?

- C10.3** Extend Prob. P10.72, whose solution was  $V_2 \approx 4.33$  m/s. (a) Use gradually varied theory to estimate the water depth 10 m downstream at section (3) for the  $5^\circ$  unfinished concrete slope shown in Fig. P10.72. (b) Repeat your calculation for an *upward* (adverse) slope of  $5^\circ$ . (c) When you find that part (b) is impossible with gradually varied theory, explain why and repeat for an adverse slope of  $1^\circ$ .
- C10.4** It is desired to meter an asphalt rectangular channel of width 1.5 m, which is designed for uniform flow at a depth of 70 cm and a slope of 0.0036. The vertical sides of the channel are 1.2 m high. Consider using a thin-plate rectangular weir, either full or partial width (Table 10.2a,b) for this purpose. Sturm [7, p. 51] recommends, for accurate correlation, that such a weir have  $Y \geq 9$  cm and  $H/Y \leq 2.0$ . Determine the feasibility of installing such a weir that will be accurate and yet not cause the water to overflow the sides of the channel.

- C10.5** Figure C10.5 shows a hydraulic model of a *compound weir*, one that combines two different shapes. (a) Other than measurement, for which it might be poor, what could be the engineering reason for such a weir? (b) For the

prototype river, assume that both sections have sides at a  $70^\circ$  angle to the vertical, with the bottom section having a base width of 2 m and the upper section having a base width of 4.5 m, including the cut-out portion. The heights of lower and upper horizontal sections are 1 m and 2 m, respectively. Use engineering estimates and make a plot of upstream water depth versus Petaluma River flow rate in the range 0 to  $4 \text{ m}^3/\text{s}$ . (c) For what river flow rate will the water overflow the top of the dam?

- C10.6** Figure C10.6 shows a horizontal flow of water through a sluice gate, a hydraulic jump, and over a 6-ft sharp-crested weir. Channel, gate, jump, and weir are all 8 ft wide unfinished concrete. Determine (a) the flow rate, (b) the normal depth, (c)  $y_2$ , (d)  $y_3$ , and (e)  $y_4$ .

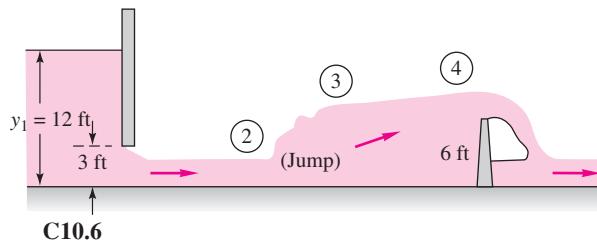


C10.6



**C10.5** (Courtesy of the U.S. Army Corps of Engineers Waterways Experiment Station.)

- C10.7** Consider the V-shaped channel in Fig. C10.7, with an arbitrary angle  $\theta$ . Make a continuity and momentum analysis of a small disturbance  $\delta y \ll y$ , as in Fig. 10.4. Show that the wave propagation speed in this channel is independent of  $\theta$  and does *not* equal the wide-channel result  $c_0 = (gy)^{1/2}$ .

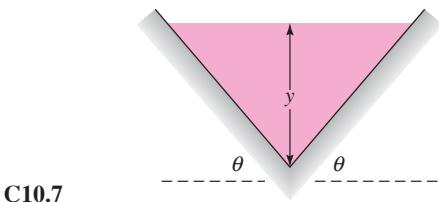

C10.7

## Design Projects

- D10.1** A straight weedy-earth channel has the trapezoidal shape of Fig. 10.7, with  $b = 4$  m and  $\theta = 35^\circ$ . The channel has a constant bottom slope of 0.001. The flow rate varies seasonally from 5 up to 10 m<sup>3</sup>/s. It is desired to place a sharp-edged weir across the channel so that the water depth 1 km upstream remains at  $2.0\text{ m} \pm 10\text{ percent}$  throughout the year. Investigate the possibility of accomplishing this with a full-width weir; if successful, determine the proper weir height  $Y$ . If unsuccessful, try other alternatives, such as (a) a full-width broad-crested weir or (b) a weir with side contractions or (c) a V-notch weir. Whatever your final design, cite the seasonal variation of normal depths and critical depths for comparison with the desired year-round depth of 2 m.
- D10.2** The Caroselli Dam on the Pawcatuck River is 10 ft high, 90 ft wide, and sharp edged. The Coakley Com-

pany uses this head to generate hydropower electricity and wants *more* head. They ask the town for permission to raise the dam higher. The river above the dam may be approximated as rectangular, 90 ft wide, sloping upstream at 12 ft per statute mile, and with a stony, cobbled bed. The average flow rate is 400 ft<sup>3</sup>/s, with a 30-year predicted flood rate of 1200 ft<sup>3</sup>/s. The river sides are steep until 1 mi upstream, where there are low-lying residences. The town council agrees the dam may be heightened if the new river level near these houses, during the 30-year flood, is no more than 3 ft higher than the present level during average flow conditions. You, as project engineer, have to predict how high the dam crest can be raised and still meet this requirement.

## References

1. B. A. Bakhmeteff, *Hydraulics of Open Channels*, McGraw-Hill, New York, 1932.
2. V. T. Chow, *Open Channel Hydraulics*, Prentice-Hall, Upper Saddle River, NJ, 1959.
3. M. H. Chaudhry, *Open Channel Flow*, 2d ed., Springer, New York, 2007.
4. S. Montes, *Hydraulics of Open Channel Flow*, ASCE, Reston, VA, 1998.
5. H. Chanson, *The Hydraulics of Open Channel Flow*, 2d ed., Elsevier, New York, 2004.
6. J. O. Akan, *Open Channel Hydraulics*, Butterworth-Heinemann, Woburn, MA, 2006.
7. T. W. Sturm, *Open Channel Hydraulics*, McGraw-Hill, New York, 2001.
8. J. Pedlosky, *Waves in the Ocean and Atmosphere: Introduction to Wave Dynamics*, Springer, New York, 2003.
9. L. H. Holthuijsen, *Waves in Oceanic and Coastal Waters*, Cambridge University Press, New York, 2007.
10. M. K. Ochi, *Ocean Waves: The Stochastic Approach*, Cambridge University Press, London, 2008.
11. A. T. Ippen, *Estuary and Coastline Hydrodynamics*, McGraw-Hill, New York, 1966.
12. M. B. Abbott and W. A. Price, *Coastal, Estuarial, and Harbor Engineers Reference Book*, Taylor & Francis, New York, 1994.
13. P. D. Komar, *Beach Processes and Sedimentation*, 2d ed., Pearson Education, Upper Saddle River, NJ, 1998.
14. W. Yue, C.-L. Lin, and V. C. Patel, "Large Eddy Simulation of Turbulent Open Channel Flow with Free Surface Simulated by Level Set Method," *Physics of Fluids*, vol. 17, no. 2, Feb. 2005, pp. 1–12.
15. J. M. Robertson and H. Rouse, "The Four Regimes of Open Channel Flow," *Civ. Eng.*, vol. 11, no. 3, March 1941, pp. 169–171.
16. R. W. Powell, "Resistance to Flow in Rough Channels," *Trans. Am. Geophys. Union*, vol. 31, no. 4, August 1950, pp. 575–582.
17. R. Manning, "On the Flow of Water in Open Channels and Pipes," *Trans. I.C.E. Ireland*, vol. 20, 1891, pp. 161–207.
18. "Friction Factors in Open Channels, Report of the Committee on Hydromechanics," *ASCE J. Hydraul. Div.*, March 1963, pp. 97–143.
19. E. F. Brater, H. W. King, J. E. Lindell, and C. Y. Wei, *Handbook of Hydraulics*, 7th ed., McGraw-Hill, New York, 1996.

20. U.S. Bureau of Reclamation, "Research Studies on Stilling Basins, Energy Dissipators, and Associated Appurtenances," *Hydraulic Lab. Rep. Hyd-399*, June 1, 1955.
21. P. A. Thompson, *Compressible-Fluid Dynamics*, McGraw-Hill, New York, 1972.
22. R. M. Olson and S. J. Wright, *Essentials of Engineering Fluid Mechanics*, 5th ed., Harper & Row, New York, 1990.
23. P. Ackers et al., *Weirs and Flumes for Flow Measurement*, Wiley, New York, 1978.
24. M. G. Bos, J. A. Replogle, and A. J. Clemmens, *Flow Measuring Flumes for Open Channel Systems*, American Soc. Agricultural and Biological Engineers, St. Joseph, MI, 1991.
25. M. G. Bos, *Long-Throated Plumes and Broad-Crested Weirs*, Springer-Verlag, New York, 1984.
26. D. H. Hoggan, *Computer-Assisted Floodplain Hydrology and Hydraulics*, 2d ed., McGraw-Hill, New York, 1996.
27. W. Rodi, *Turbulence Models and Their Application in Hydraulics*, A. A. Balkema, Leiden, The Netherlands, 1993.
28. P. D. Durbin, B. A. Pettersson, and B. A. Reif, *Theory and Modeling of Turbulent Flows*, Wiley, New York, 2001.
29. R. Baban, *Design of Diversion Weirs: Small Scale Irrigation in Hot Climates*, Wiley, New York, 1995.
30. H. Chanson, *Hydraulic Design of Stepped Cascades, Channels, Weirs, and Spillways*, Pergamon Press, New York, 1994.
31. D. Kampion and A. Brewer, *The Book of Waves: Form and Beauty on the Ocean*, 3d ed., Rowman and Littlefield, Lanham, MD, 1997.
32. L. Mays, *Water Resources Engineering*, Wiley, New York, 2005.
33. D. K. Walkowiak (ed.), *Isco Open Channel Flow Measurement Handbook*, 5th ed., Teledyne Isco, Inc., Lincoln, NE, 2006.
34. H. Chanson, "Photographic Observations of Tidal Bores (Mascarets) in France," Hydraulic Model Report CH71/08, The University of Queensland, 2008, 104 pages.
35. E. J. Watson, "The Spread of a Liquid Jet over a Horizontal Plane," *J. Fluid Mechanics*, vol. 20, 1964, pp. 481–499.



With demand increasing for finite fossil fuel resources, renewable energy projects are crucial. As of October 2004, this 5M model, constructed by REpower Systems AG of Hamburg, Germany, became the world's largest wind turbine. The rotor is 126 m in diameter and, at peak conditions, delivers 5 MW of power. It rotates from 7 to 12 r/min, cuts in at winds of 3.5 m/s, and cuts out at 30 m/s. Subsequent models will be installed in the North Sea. (*Photo courtesy of REpower Systems AG.*)

# Chapter 11

## Turbomachinery

**Motivation.** The most common practical engineering application for fluid mechanics is the design of fluid machinery. The most numerous types are machines that *add* energy to the fluid (the pump family), but also important are those that *extract* energy (turbines). Both types are usually connected to a rotating shaft, hence the name *turbomachinery*.

The purpose of this chapter is to make elementary engineering estimates of the performance of fluid machines. The emphasis will be on nearly incompressible flow: liquids or low-velocity gases. Basic flow principles are discussed, but not the detailed construction of the machines.

### 11.1 Introduction and Classification

Turbomachines divide naturally into those that add energy (pumps) and those that extract energy (turbines). The prefix *turbo-* is a Latin word meaning “spin” or “whirl,” appropriate for rotating devices.

The pump is the oldest fluid energy transfer device known. At least two designs date before Christ: (1) the undershot-bucket waterwheels, or *norias*, used in Asia and Africa (1000 B.C.) and (2) Archimedes’ screw pump (250 B.C.), still being manufactured today to handle solid–liquid mixtures. Paddlewheel turbines were used by the Romans in 70 B.C., and Babylonian windmills date back to 700 B.C. [1].

Machines that deliver liquids are simply called *pumps*, but if gases are involved, three different terms are in use, depending on the pressure rise achieved. If the pressure rise is very small (a few inches of water), a gas pump is called a *fan*; up to 1 atm, it is usually called a *blower*; and above 1 atm it is commonly termed a *compressor*.

### Classification of Pumps

There are two basic types of pumps: positive-displacement and dynamic or momentum-change pumps. There are several billion of each type in use in the world today.

*Positive-displacement pumps* (PDPs) force the fluid along by volume changes. A cavity opens, and the fluid is admitted through an inlet. The cavity then closes, and the fluid is squeezed through an outlet. The mammalian heart is a good example, and many mechanical designs are in wide use. References 35–38 give a summary of PDPs.

A brief classification of PDP designs is as follows:

- A. Reciprocating
  - 1. Piston or plunger
  - 2. Diaphragm
- B. Rotary
  - 1. Single rotor
    - a. Sliding vane
    - b. Flexible tube or lining
    - c. Screw
    - d. Peristaltic (wave contraction)
  - 2. Multiple rotors
    - a. Gear
    - b. Lobe
    - c. Screw
    - d. Circumferential piston

All PDPs deliver a pulsating or periodic flow as the cavity volume opens, traps, and squeezes the fluid. Their great advantage is the delivery of any fluid regardless of its viscosity.


Figure 11.1 shows schematics of the operating principles of seven of these PDPs. It is rare for such devices to be run backward, so to speak, as turbines or energy extractors, the steam engine (reciprocating piston) being a classic exception.

Since PDPs compress mechanically against a cavity filled with liquid, a common feature is that they develop immense pressures if the outlet is shut down for any reason. Sturdy construction is required, and complete shutoff would cause damage if pressure relief valves were not used.

Dynamic pumps simply add momentum to the fluid by means of fast-moving blades or vanes or certain special designs. There is no closed volume: The fluid increases momentum while moving through open passages and then converts its high velocity to a pressure increase by exiting into a diffuser section. Dynamic pumps can be classified as follows:


- A. Rotary
  - 1. Centrifugal or radial exit flow
  - 2. Axial flow
  - 3. Mixed flow (between radial and axial)
- B. Special designs
  - 1. Jet pump or ejector (see Fig. P3.36)
  - 2. Electromagnetic pumps for liquid metals
  - 3. Fluid-actuated: gas lift or hydraulic ram

We shall concentrate in this chapter on the rotary designs, sometimes called *rotodynamic pumps*. Other designs of both PDP and dynamic pumps are discussed in specialized texts [for example, 3, 31].

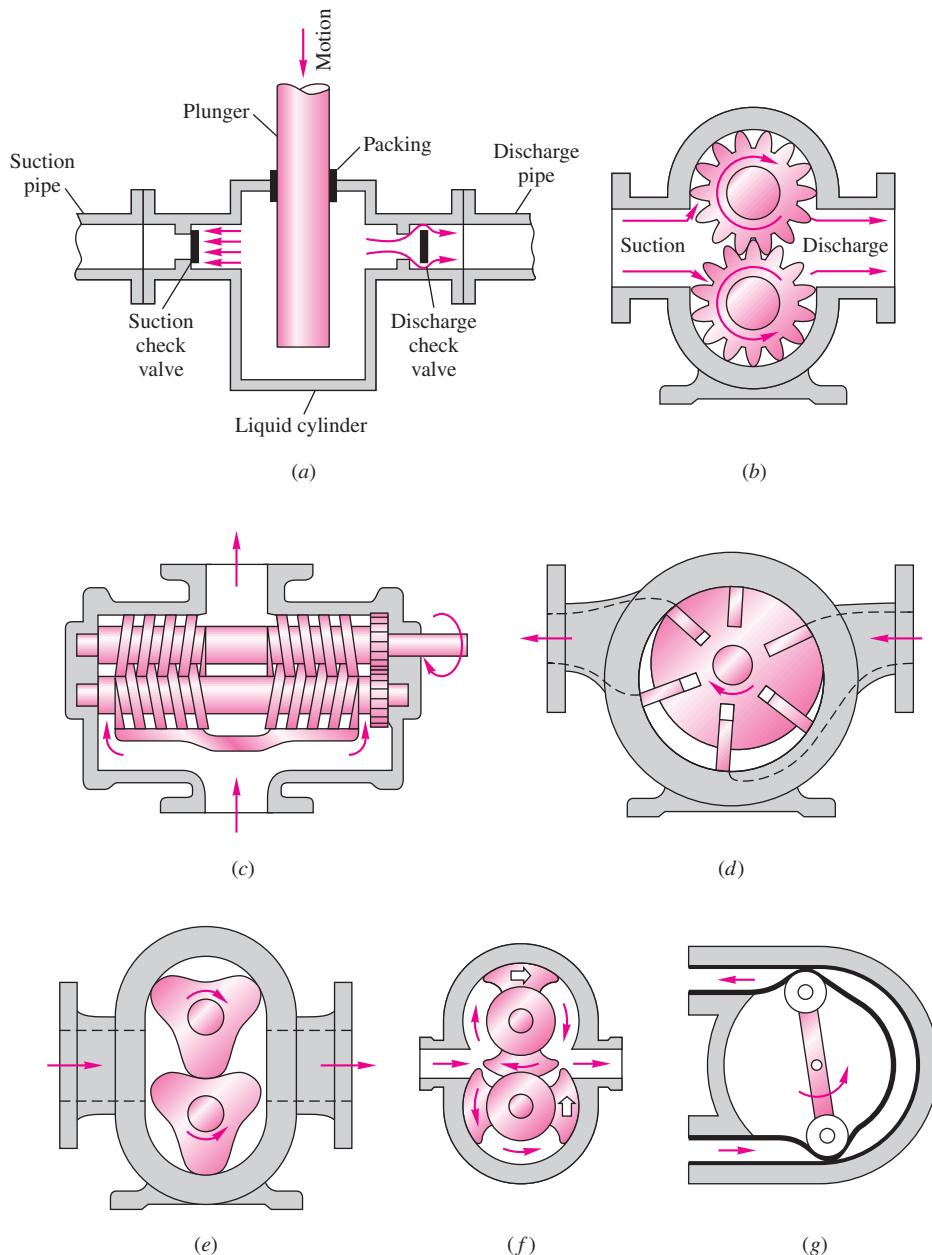

**Fig. 11.1** Schematic design of positive-displacement pumps:  
 (a) reciprocating piston or plunger,  
 (b) external gear pump, (c) double-screw pump, (d) sliding vane,  
 (e) three-lobe pump, (f) double circumferential piston, (g) flexible-tube squeegee.

Dynamic pumps generally provide a higher flow rate than PDPs and a much steadier discharge but are ineffective in handling high-viscosity liquids. Dynamic pumps also generally need *priming*; if they are filled with gas, they cannot suck up a liquid from below into their inlet. The PDP, on the other hand, is self-priming for most applications. A dynamic pump can provide very high flow rates (up to 300,000 gal/min) but usually with moderate pressure rises (a few atmospheres). In contrast, a PDP can

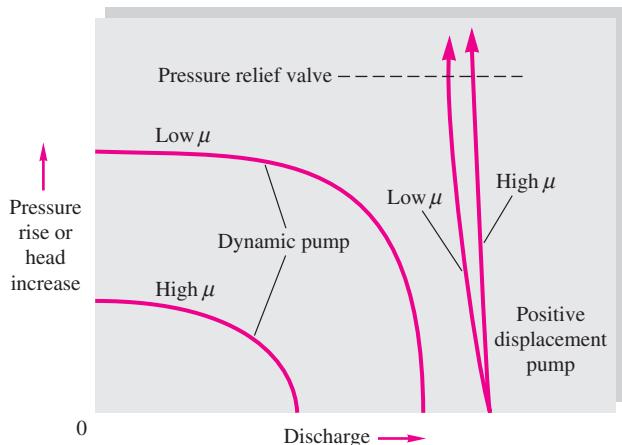

**Fig. 11.2** Comparison of performance curves of typical dynamic and positive-displacement pumps at constant speed.

operate up to very high pressures (300 atm) but typically produces low flow rates (100 gal/min).

The relative *performance* ( $\Delta p$  versus  $Q$ ) is quite different for the two types of pump, as shown in Fig. 11.2. At constant shaft rotation speed, the PDP produces nearly constant flow rate and virtually unlimited pressure rise, with little effect of viscosity. The flow rate of a PDP cannot be varied except by changing the displacement or the speed. The reliable constant-speed discharge from PDPs has led to their wide use in metering flows [35].


The dynamic pump, by contrast in Fig. 11.2, provides a continuous constant-speed variation of performance, from near-maximum  $\Delta p$  at zero flow (shutoff conditions) to zero  $\Delta p$  at maximum flow rate. High-viscosity fluids sharply degrade the performance of a dynamic pump.

As usual—and for the last time in this text—we remind the reader that this is merely an introductory chapter. Many books are devoted solely to turbomachines: generalized treatments [2 to 7], texts specializing in pumps [8 to 16, 30, 31], fans [17 to 20], compressors [21 to 23], gas turbines [24 to 26], hydropower [27, 28, 32], and PDPs [35 to 38]. There are several useful handbooks [29 to 32], and at least two undergraduate textbooks [33, 34] have a comprehensive discussion of turbomachines. The reader is referred to these sources for further details.

## 11.2 The Centrifugal Pump

Let us begin our brief look at rotodynamic machines by examining the characteristics of the centrifugal pump. As sketched in Fig. 11.3, this pump consists of an impeller rotating within a casing. Fluid enters axially through the *eye* of the casing, is caught up in the impeller blades, and is whirled tangentially and radially outward until it leaves through all circumferential parts of the impeller into the diffuser part of the casing. The fluid gains both velocity and pressure while passing through the impeller. The doughnut-shaped diffuser, or *scroll*, section of the casing decelerates the flow and further increases the pressure.

The impeller blades are usually *backward-curved*, as in Fig. 11.3, but there are also radial and forward-curved blade designs, which slightly change the output pressure.

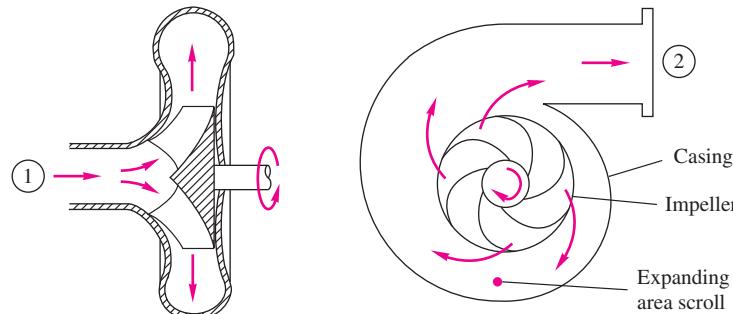

**Fig. 11.3** Cutaway schematic of a typical centrifugal pump.

The blades may be *open* (separated from the front casing only by a narrow clearance) or *closed* (shrouded from the casing on both sides by an impeller wall). The diffuser may be *vaneless*, as in Fig. 11.3, or fitted with fixed vanes to help guide the flow toward the exit.

### Basic Output Parameters

Assuming steady flow, the pump basically increases the Bernoulli head of the flow between point 1, the eye, and point 2, the exit. From Eq. (3.73), neglecting viscous work and heat transfer, this change is denoted by  $H$ :

$$H = \left( \frac{p}{\rho g} + \frac{V^2}{2g} + z \right)_2 - \left( \frac{p}{\rho g} + \frac{V^2}{2g} + z \right)_1 = h_s - h_f \quad (11.1)$$

where  $h_s$  is the pump head supplied and  $h_f$  the losses. The net head  $H$  is a primary output parameter for any turbomachine. Since Eq. (11.1) is for incompressible flow, it must be modified for gas compressors with large density changes.

Usually  $V_2$  and  $V_1$  are about the same,  $z_2 - z_1$  is no more than a meter or so, and the net pump head is essentially equal to the change in pressure head:

$$H \approx \frac{p_2 - p_1}{\rho g} = \frac{\Delta p}{\rho g} \quad (11.2)$$

The power delivered to the fluid simply equals the specific weight times the discharge times the net head change:

$$P_w = \rho g Q H \quad (11.3)$$

This is traditionally called the *water horsepower*. The power required to drive the pump is the *brake horsepower*<sup>1</sup>

$$\text{bhp} = \omega T \quad (11.4)$$

where  $\omega$  is the shaft angular velocity and  $T$  the shaft torque. If there were no losses,  $P_w$  and brake horsepower would be equal, but of course  $P_w$  is actually less, and the *efficiency*  $\eta$  of the pump is defined as

$$\eta = \frac{P_w}{\text{bhp}} = \frac{\rho g Q H}{\omega T} \quad (11.5)$$

<sup>1</sup>Conversion factors may be needed: 1 hp = 550 ft · lbf/s = 746 W.

The chief aim of the pump designer is to make  $\eta$  as high as possible over as broad a range of discharge  $Q$  as possible.

The efficiency is basically composed of three parts: volumetric, hydraulic, and mechanical. The *volumetric efficiency* is

$$\eta_v = \frac{Q}{Q + Q_L} \quad (11.6)$$

where  $Q_L$  is the loss of fluid due to leakage in the impeller casing clearances. The *hydraulic efficiency* is

$$\eta_h = 1 - \frac{h_f}{h_s} \quad (11.7)$$

where  $h_f$  has three parts: (1) *shock* loss at the eye due to imperfect match between inlet flow and the blade entrances, (2) *friction* losses in the blade passages, and (3) *circulation* loss due to imperfect match at the exit side of the blades.

Finally, the *mechanical efficiency* is

$$\eta_m = 1 - \frac{P_f}{\text{bhp}} \quad (11.8)$$

where  $P_f$  is the power loss due to mechanical friction in the bearings, packing glands, and other contact points in the machine.

By definition, the total efficiency is simply the product of its three parts:

$$\eta \equiv \eta_v \eta_h \eta_m \quad (11.9)$$


The designer has to work in all three areas to improve the pump.

## Elementary Pump Theory

You may have thought that Eqs. (11.1) to (11.9) were formulas from pump *theory*. Not so; they are merely definitions of performance parameters and cannot be used in any predictive mode. To actually *predict* the head, power, efficiency, and flow rate of a pump, two theoretical approaches are possible: (1) simple one-dimensional flow formulas and (2) complex computer models that account for viscosity and three-dimensionality. Many of the best design improvements still come from testing and experience, and pump research remains a very active field [39]. The last 10 years have seen considerable advances in *computational fluid dynamics* (CFD) modeling of flow in turbomachines [42], and at least eight commercial turbulent flow three-dimensional CFD codes are now available.

To construct an elementary theory of pump performance, we assume one-dimensional flow and combine idealized fluid velocity vectors through the impeller with the angular momentum theorem for a control volume, Eq. (3.59).

The idealized velocity diagrams are shown in Fig. 11.4. The fluid is assumed to enter the impeller at  $r = r_1$  with velocity component  $w_1$  tangent to the blade angle  $\beta_1$  plus circumferential speed  $u_1 = \omega r_1$  matching the tip speed of the impeller. Its absolute entrance velocity is thus the vector sum of  $w_1$  and  $u_1$ , shown as  $V_1$ . Similarly, the flow

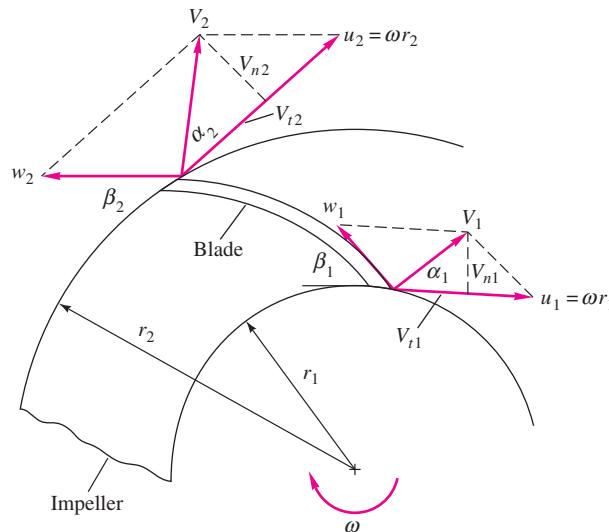

**Fig. 11.4** Inlet and exit velocity diagrams for an idealized pump impeller.

exits at  $r = r_2$  with component  $w_2$  parallel to the blade angle  $\beta_2$  plus tip speed  $u_2 = \omega r_2$ , with resultant velocity  $V_2$ .

We applied the angular momentum theorem to a turbomachine in Example 3.18 (Fig. 3.15) and arrived at a result for the applied torque  $T$ :

$$T = \rho Q(r_2 V_{t2} - r_1 V_{t1}) \quad (11.10)$$

where  $V_{t1}$  and  $V_{t2}$  are the absolute circumferential velocity components of the flow. The power delivered to the fluid is thus

$$P_w = \omega T = \rho Q(u_2 V_{t2} - u_1 V_{t1})$$

or

$$H = \frac{P_w}{\rho g Q} = \frac{1}{g}(u_2 V_{t2} - u_1 V_{t1})$$

(11.11)

These are the *Euler turbomachine equations*, showing that the torque, power, and ideal head are functions only of the rotor-tip velocities  $u_{1,2}$  and the absolute fluid tangential velocities  $V_{t1,2}$ , independent of the axial velocities (if any) through the machine.

Additional insight is gained by rewriting these relations in another form. From the geometry of Fig. 11.4

$$V^2 = u^2 + w^2 - 2uw \cos \beta \quad w \cos \beta = u - V_t$$

or

$$uV_t = \frac{1}{2}(V^2 + u^2 - w^2) \quad (11.12)$$

Substituting this into Eq. (11.11) gives

$$H = \frac{1}{2g}[(V_2^2 - V_1^2) + (u_2^2 - u_1^2) - (w_2^2 - w_1^2)] \quad (11.13)$$

Thus the ideal head relates to the absolute plus the relative kinetic energy change of the fluid minus the rotor-tip kinetic energy change. Finally, substituting for  $H$  from its definition in Eq. (11.1) and rearranging, we obtain the classic relation

$$\frac{p}{\rho g} + z + \frac{w^2}{2g} - \frac{r^2\omega^2}{2g} = \text{const} \quad (11.14)$$

This is the *Bernoulli equation in rotating coordinates* and applies to either two- or three-dimensional ideal incompressible flow.

For a centrifugal pump, the power can be related to the radial velocity  $V_n = V_r \tan \alpha$  and the continuity relation

$$P_w = \rho Q(u_2 V_{n2} \cot \alpha_2 - u_1 V_{n1} \cot \alpha_1) \quad (11.15)$$

where

$$V_{n2} = \frac{Q}{2\pi r_2 b_2} \quad \text{and} \quad V_{n1} = \frac{Q}{2\pi r_1 b_1}$$

and where  $b_1$  and  $b_2$  are the blade widths at inlet and exit. With the pump parameters  $r_1$ ,  $r_2$ ,  $\beta_1$ ,  $\beta_2$ , and  $\omega$  known, Eq. (11.11) or Eq. (11.15) is used to compute idealized power and head versus discharge. The “design” flow rate  $Q^*$  is commonly estimated by assuming that the flow enters exactly normal to the impeller:

$$\alpha_1 = 90^\circ \quad V_{n1} = V_1 \quad (11.16)$$


We can expect this simple analysis to yield estimates within  $\pm 25$  percent for the head, water horsepower, and discharge of a pump. Let us illustrate with an example.

### EXAMPLE 11.1

Given are the following data for a commercial centrifugal water pump:  $r_1 = 4$  in,  $r_2 = 7$  in,  $\beta_1 = 30^\circ$ ,  $\beta_2 = 20^\circ$ , speed = 1440 r/min. Estimate (a) the design point discharge, (b) the water horsepower, and (c) the head if  $b_1 = b_2 = 1.75$  in.

#### Solution

##### Part (a)

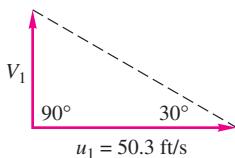

E11.1a

The angular velocity is  $\omega = 2\pi$  r/s =  $2\pi(1440/60) = 150.8$  rad/s. Thus the tip speeds are  $u_1 = \omega r_1 = 150.8(4/12) = 50.3$  ft/s and  $u_2 = \omega r_2 = 150.8(7/12) = 88.0$  ft/s. From the inlet velocity diagram, Fig. E11.1a, with  $\alpha_1 = 90^\circ$  for design point, we compute

$$V_{n1} = u_1 \tan 30^\circ = 29.0 \text{ ft/s}$$

whence the discharge is

$$\begin{aligned} Q &= 2\pi r_1 b_1 V_{n1} = (2\pi) \left( \frac{4}{12} \text{ ft} \right) \left( \frac{1.75}{12} \text{ ft} \right) \left( 29.0 \frac{\text{ft}}{\text{s}} \right) \\ &= (8.87 \text{ ft}^3/\text{s})(60 \text{ s/min}) \left( \frac{1728}{231} \text{ gal/ft}^3 \right) \\ &= 3980 \text{ gal/min} \end{aligned}$$


*Ans. (a)*

(The actual pump produces about 3500 gal/min.)

**Part (b)**

The outlet radial velocity follows from  $Q$ :

$$V_{n2} = \frac{Q}{2\pi r_2 b_2} = \frac{8.87 \text{ ft}^3/\text{s}}{2\pi(\frac{7}{12} \text{ ft})(\frac{1.75}{12} \text{ ft})} = 16.6 \text{ ft/s}$$

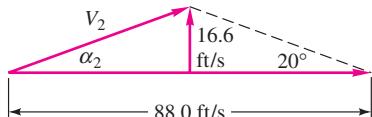

E11.1b

This enables us to construct the outlet velocity diagram as in Fig. E11.1b, given  $\beta_2 = 20^\circ$ . The tangential component is

$$V_{t2} = u_2 - V_{n2} \cot \beta_2 = 88.0 - 16.6 \cot 20^\circ = 42.4 \text{ ft/s}$$

$$\alpha_2 = \tan^{-1} \frac{16.6}{42.4} = 21.4^\circ$$

The power is then computed from Eq. (11.11) with  $V_{t1} = 0$  at the design point:

$$\begin{aligned} P_w &= \rho Q u_2 V_{t2} = (1.94 \text{ slugs}/\text{ft}^3)(8.87 \text{ ft}^3/\text{s})(88.0 \text{ ft/s})(42.4 \text{ ft/s}) \\ &= \frac{64,100 \text{ ft} \cdot \text{lbf/s}}{550 \text{ ft-lbf/(s-hp)}} = 117 \text{ hp} \end{aligned} \quad \text{Ans. (b)}$$

(The actual pump delivers about 125 water horsepower, requiring 147 bhp at 85 percent efficiency.)

**Part (c)**

Finally, the head is estimated from Eq. (11.11):

$$H \approx \frac{P_w}{\rho g Q} = \frac{64,100 \text{ ft} \cdot \text{lbf/s}}{(62.4 \text{ lbf}/\text{ft}^3)(8.87 \text{ ft}^3/\text{s})} = 116 \text{ ft} \quad \text{Ans. (c)}$$

(The actual pump develops about 140-ft head.) Improved methods for obtaining closer estimates are given in advanced references [for example, 7, 8, and 31].

### Effect of Blade Angle on Pump Head

The simple theory just discussed can be used to predict an important blade-angle effect. If we neglect inlet angular momentum, the theoretical water horsepower is

$$P_w = \rho Q u_2 V_{t2} \quad (11.17)$$

where


$$V_{t2} = u_2 - V_{n2} \cot \beta_2 \quad V_{n2} = \frac{Q}{2\pi r_2 b_2}$$

Then the theoretical head from Eq. (11.11) becomes

$$H \approx \frac{u_2^2}{g} - \frac{u_2 \cot \beta_2}{2\pi r_2 b_2} Q \quad (11.18)$$

The head varies linearly with discharge  $Q$ , having a shutoff value  $u_2^2/g$ , where  $u_2$  is the exit blade-tip speed. The slope is negative if  $\beta_2 < 90^\circ$  (backward-curved blades) and positive for  $\beta_2 > 90^\circ$  (forward-curved blades). This effect is shown in Fig. 11.5 and is accurate only at low flow rates.

The measured shutoff head of centrifugal pumps is only about 60 percent of the theoretical value  $H_0 = \omega^2 r_2^2/g$ . With the advent of the laser-doppler anemometer, researchers can now make detailed three-dimensional flow measurements inside pumps and can even animate the data into a movie [40].

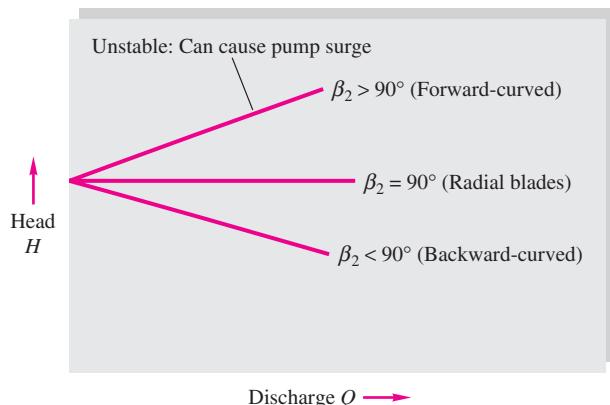

**Fig. 11.5** Theoretical effect of blade exit angle on pump head versus discharge.

The positive slope condition in Fig. 11.5 can be unstable and can cause pump *surge*, an oscillatory condition where the pump “hunts” for the proper operating point. Surge may cause only rough operation in a liquid pump, but it can be a major problem in gas compressor operation. For this reason a backward-curved or radial blade design is generally preferred. A survey of the problem of pump stability is given by Greitzer [41].

### 11.3 Pump Performance Curves and Similarity Rules


Since the theory of the previous section is rather qualitative, the only solid indicator of a pump’s performance lies in extensive testing. For the moment let us discuss the centrifugal pump in particular. The general principles and the presentation of data are exactly the same for mixed flow and axial flow pumps and compressors.

Performance charts are almost always plotted for constant shaft rotation speed  $n$  (in r/min usually). The basic independent variable is taken to be discharge  $Q$  (in gal/min usually for liquids and  $\text{ft}^3/\text{min}$  for gases). The dependent variables, or “output,” are taken to be head  $H$  (pressure rise  $\Delta p$  for gases), brake horsepower (bhp), and efficiency  $\eta$ .

Figure 11.6 shows typical performance curves for a centrifugal pump. The head is approximately constant at low discharge and then drops to zero at  $Q = Q_{\max}$ . At this speed and impeller size, the pump cannot deliver any more fluid than  $Q_{\max}$ . The positive slope part of the head is shown dashed; as mentioned earlier, this region can be unstable and can cause hunting for the operating point.

The efficiency  $\eta$  is always zero at no flow and at  $Q_{\max}$ , and it reaches a maximum, perhaps 80 to 90 percent, at about  $0.6Q_{\max}$ . This is the *design flow rate*  $Q^*$  or *best efficiency point* (BEP),  $\eta = \eta_{\max}$ . The head and horsepower at BEP will be termed  $H^*$  and  $P^*$  (or bhp\*), respectively. It is desirable that the efficiency curve be flat near  $\eta_{\max}$ , so that a wide range of efficient operation is achieved. However, some designs simply do not achieve flat efficiency curves. Note that  $\eta$  is not independent of  $H$  and  $P$  but rather is calculated from the relation in Eq. (11.5),  $\eta = \rho g Q H / P$ .

As shown in Fig. 11.6, the horsepower required to drive the pump typically rises monotonically with the flow rate. Sometimes there is a large power rise beyond

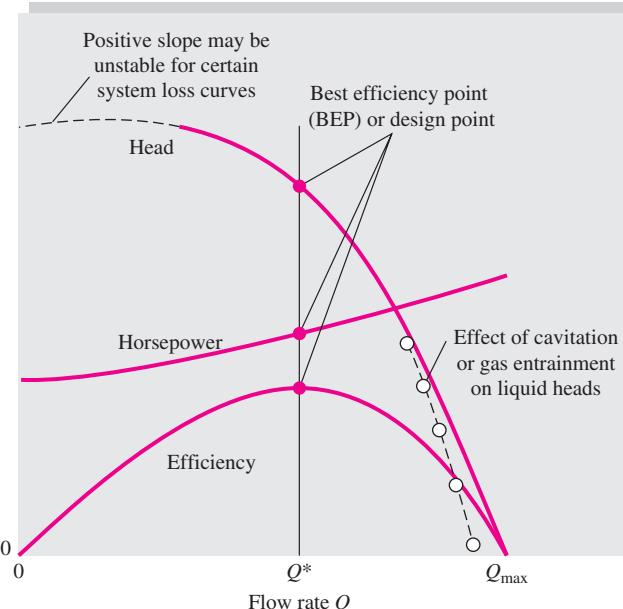


**Fig. 11.6** Typical centrifugal pump performance curves at constant impeller rotation speed. The units are arbitrary.

the BEP, especially for radial-tipped and forward-curved blades. This is considered undesirable because a much larger motor is then needed to provide high flow rates. Backward-curved blades typically have their horsepower level off above BEP (“nonoverloading” type of curve).

### Measured Performance Curves

Figure 11.7 shows actual performance data for a commercial centrifugal pump. Figure 11.7a is for a basic casing size with three different impeller diameters. The head curves  $H(Q)$  are shown, but the horsepower and efficiency curves have to be inferred from the contour plots. Maximum discharges are not shown, being far outside the normal operating range near the BEP. Everything is plotted raw, of course [feet, horsepower, gallons per minute (1 U.S. gal = 231 in<sup>3</sup>)] since it is to be used directly by designers. Figure 11.7b is the same pump design with a 20 percent larger casing, a lower speed, and three larger impeller diameters. Comparing the two pumps may be a little confusing: The larger pump produces exactly the same discharge but only half the horsepower and half the head. This will be readily understood from the scaling or similarity laws we are about to formulate.

A point often overlooked is that raw curves like Fig. 11.7 are strictly applicable to a fluid of a certain density and viscosity, in this case water. If the pump were used to deliver, say, mercury, the brake horsepower would be about 13 times higher while  $Q$ ,  $H$ , and  $\eta$  would be about the same. But in that case  $H$  should be interpreted as feet of *mercury*, not feet of water. If the pump were used for SAE 30 oil, all data would change (brake horsepower,  $Q$ ,  $H$ , and  $\eta$ ) due to the large change in viscosity (Reynolds number). Again this should become clear with the similarity rules.

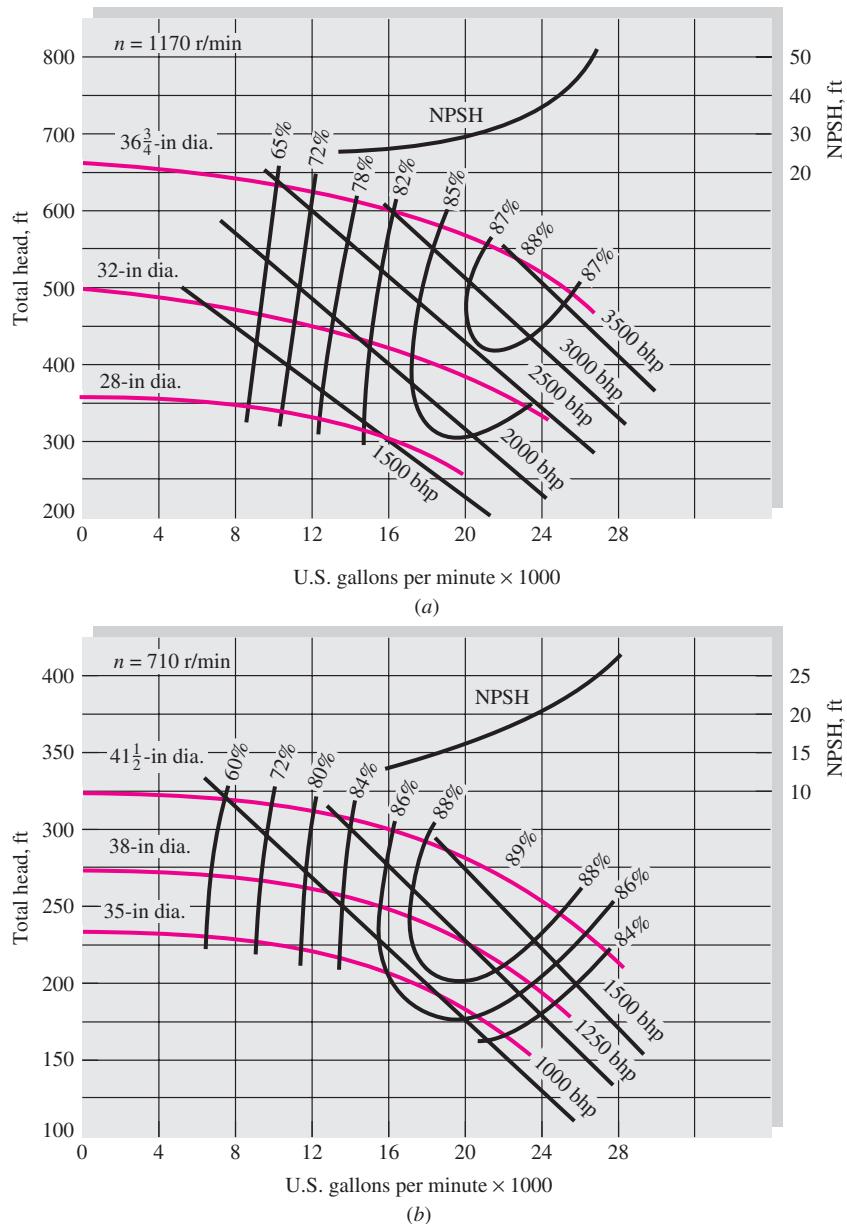

**Fig. 11.7** Measured-performance curves for two models of a centrifugal water pump: (a) basic casing with three impeller sizes; (b) 20 percent larger casing with three larger impellers at slower speed. (Courtesy of Ingersoll-Rand Corporation, Cameron Pump Division.)

### Net Positive-Suction Head

In the top of Fig. 11.7 is plotted the *net positive-suction head* (NPSH), which is the head required at the pump inlet to keep the liquid from cavitating or boiling. The pump inlet or suction side is the low-pressure point where cavitation will first occur. The NPSH is defined as

$$\text{NPSH} = \frac{p_i}{\rho g} + \frac{V_i^2}{2g} - \frac{p_v}{\rho g} \quad (11.19)$$

where  $p_i$  and  $V_i$  are the pressure and velocity at the pump inlet and  $p_v$  is the vapor pressure of the liquid. Given the left-hand side, NPSH, from the pump performance curve, we must ensure that the right-hand side is equal or greater in the actual system to avoid cavitation.

If the pump inlet is placed at a height  $Z_i$  above a reservoir whose free surface is at pressure  $p_a$ , we can use Bernoulli's equation to rewrite NPSH as

$$\text{NPSH} = \frac{p_a}{\rho g} - Z_i - h_{fi} - \frac{p_v}{\rho g} \quad (11.20)$$

where  $h_{fi}$  is the friction head loss between the reservoir and the pump inlet. Knowing  $p_a$  and  $h_{fi}$ , we can set the pump at a height  $Z_i$  that will keep the right-hand side greater than the "required" NPSH plotted in Fig. 11.7.

If cavitation does occur, there will be pump noise and vibration, pitting damage to the impeller, and a sharp dropoff in pump head and discharge. In some liquids this deterioration starts before actual boiling, as dissolved gases and light hydrocarbons are liberated.

### Deviations from Ideal Pump Theory

The actual pump head data in Fig. 11.7 differ considerably from ideal theory, Eq. (11.18). Take, for example, the 36.75-in-diameter pump at 1170 r/min in Fig. 11.7a. The theoretical shutoff head is

$$H_0(\text{ideal}) = \frac{\omega^2 r_2^2}{g} = \frac{[1170(2\pi/60) \text{ rad/s}]^2[(36.75/2)/(12) \text{ ft}]^2}{32.2 \text{ ft/s}^2} = 1093 \text{ ft}$$

From Fig. 11.7a, at  $Q = 0$ , we read the actual shutoff head to be only 670 ft, or 61 percent of the theoretical value (see Prob. P11.24). This is a sharp dropoff and is indicative of nonrecoverable losses of three types:

1. *Impeller recirculation loss*, significant only at low flow rates.
2. *Friction losses* on the blade and passage surfaces, which increase monotonically with the flow rate.
3. *Shock'loss* due to mismatch between the blade angles and the inlet flow direction, especially significant at high flow rates.

These are complicated three-dimensional flow effects and hence are difficult to predict. Although, as mentioned, numerical (CFD) techniques are becoming more important [42], modern performance prediction is still a blend of experience, empirical correlations, idealized theory, and CFD modifications [45].

#### EXAMPLE 11.2

The 32-in pump of Fig. 11.7a is to pump 24,000 gal/min of water at 1170 r/min from a reservoir whose surface is at 14.7 lbf/in<sup>2</sup> absolute. If head loss from reservoir to pump inlet is 6 ft, where should the pump inlet be placed to avoid cavitation for water at (a) 60°F,  $p_v = 0.26$  lbf/in<sup>2</sup> absolute, SG = 1.0 and (b) 200°F,  $p_v = 11.52$  lbf/in<sup>2</sup> absolute, SG = 0.9635?

**Solution****Part (a)**

For either case read from Fig. 11.7a at 24,000 gal/min that the required NPSH is 40 ft. For this case  $\rho g = 62.4 \text{ lbf}/\text{ft}^3$ . From Eq. (11.20) it is necessary that

$$\text{NPSH} \leq \frac{p_a - p_v}{\rho g} - Z_i - h_{fi}$$

or  $40 \text{ ft} \leq \frac{(14.7 - 0.26 \text{ lbf/in}^2)(144 \text{ in}^2/\text{ft}^2)}{62.4 \text{ lbf}/\text{ft}^3} - Z_i - 6.0$

or  $Z_i \leq 27.3 - 40 = -12.7 \text{ ft}$  *Ans. (a)*

The pump must be placed at least 12.7 ft below the reservoir surface to avoid cavitation.

**Part (b)**

For this case  $\rho g = 62.4(0.9635) = 60.1 \text{ lbf}/\text{ft}^3$ . Equation (11.20) applies again with the higher  $p_v$ :

$$40 \text{ ft} \leq \frac{(14.7 - 11.52 \text{ lbf/in}^2)(144 \text{ in}^2/\text{ft}^2)}{60.1 \text{ lbf}/\text{ft}^3} - Z_i - 6.0$$

or  $Z_i \leq 1.6 - 40 = -38.4 \text{ ft}$  *Ans. (b)*

The pump must now be placed at least 38.4 ft below the reservoir surface. These are unusually stringent conditions because a large, high-discharge pump requires a large NPSH.

**Dimensionless Pump Performance**

For a given pump design, the output variables  $H$  and brake horsepower should be dependent on discharge  $Q$ , impeller diameter  $D$ , and shaft speed  $n$ , at least. Other possible parameters are the fluid density  $\rho$ , viscosity  $\mu$ , and surface roughness  $\epsilon$ . Thus the performance curves in Fig. 11.7 are equivalent to the following assumed functional relations:<sup>2</sup>

$$gH = f_1(Q, D, n, \rho, \mu, \epsilon) \quad \text{bhp} = f_2(Q, D, n, \rho, \mu, \epsilon) \quad (11.21)$$

This is a straightforward application of dimensional analysis principles from Chap. 5. As a matter of fact, it was given as an exercise (Ex. 5.3). For each function in Eq. (11.21) there are seven variables and three primary dimensions ( $M$ ,  $L$ , and  $T$ ); hence we expect  $7 - 3 = 4$  dimensionless pi groups, and that is what we get. You can verify as an exercise that appropriate dimensionless forms for Eqs. (11.21) are

$$\begin{aligned} \frac{gH}{n^2 D^2} &= g_1 \left( \frac{Q}{n D^3}, \frac{\rho n D^2}{\mu}, \frac{\epsilon}{D} \right) \\ \frac{\text{bhp}}{\rho n^3 D^5} &= g_2 \left( \frac{Q}{n D^3}, \frac{\rho n D^2}{\mu}, \frac{\epsilon}{D} \right) \end{aligned} \quad (11.22)$$

<sup>2</sup>We adopt  $gH$  as a variable instead of  $H$  for dimensional reasons.

The quantities  $\rho n D^2 / \mu$  and  $\epsilon/D$  are recognized as the Reynolds number and roughness ratio, respectively. Three new pump parameters have arisen:

$$\text{Capacity coefficient } C_Q = \frac{Q}{nD^3}$$

$$\text{Head coefficient } C_H = \frac{gH}{n^2 D^2}$$

$$\text{Power coefficient } C_P = \frac{\text{bhp}}{\rho n^3 D^5}$$

(11.23)

Note that only the power coefficient contains fluid density, the parameters  $C_Q$  and  $C_H$  being kinematic types.

Figure 11.7 gives no warning of viscous or roughness effects. The Reynolds numbers are from 0.8 to  $1.5 \times 10^7$ , or fully turbulent flow in all passages probably. The roughness is not given and varies greatly among commercial pumps. But at such high Reynolds numbers we expect more or less the same percentage effect on all these pumps. Therefore it is common to assume that the Reynolds number and the roughness ratio have a constant effect, so that Eqs. (11.23) reduce to, approximately,

$$C_H \approx C_H(C_Q) \quad C_P \approx C_P(C_Q) \quad (11.24)$$

For geometrically similar pumps, we expect head and power coefficients to be (nearly) unique functions of the capacity coefficient. We have to watch out that the pumps are geometrically similar or nearly so because (1) manufacturers put different-sized impellers in the same casing, thus violating geometric similarity, and (2) large pumps have smaller ratios of roughness and clearances to impeller diameter than small pumps. In addition, the more viscous liquids will have significant Reynolds number effects; for example, a factor-of-3 or more viscosity increase causes a clearly visible effect on  $C_H$  and  $C_P$ .


The efficiency  $\eta$  is already dimensionless and is uniquely related to the other three. It varies with  $C_Q$  also:

$$\eta \equiv \frac{C_H C_Q}{C_P} = \eta(C_Q)$$

(11.25)

We can test Eqs. (11.24) and (11.25) from the data of Fig. 11.7. The impeller diameters of 32 and 38 in are approximately 20 percent different in size, and so their ratio of impeller to casing size is the same. The parameters  $C_Q$ ,  $C_H$ , and  $C_P$  are computed with  $n$  in r/s,  $Q$  in  $\text{ft}^3/\text{s}$  ( $\text{gal}/\text{min} \times 2.23 \times 10^{-3}$ ),  $H$  and  $D$  in ft,  $g = 32.2 \text{ ft/s}^2$ , and brake horsepower in horsepower times 550  $\text{ft} \cdot \text{lbf}/(\text{s} \cdot \text{hp})$ . The nondimensional data are then plotted in Fig. 11.8. A dimensionless suction head coefficient is also defined:

$$C_{HS} = \frac{g(NPSH)}{n^2 D^2} = C_{HS}(C_Q) \quad (11.26)$$

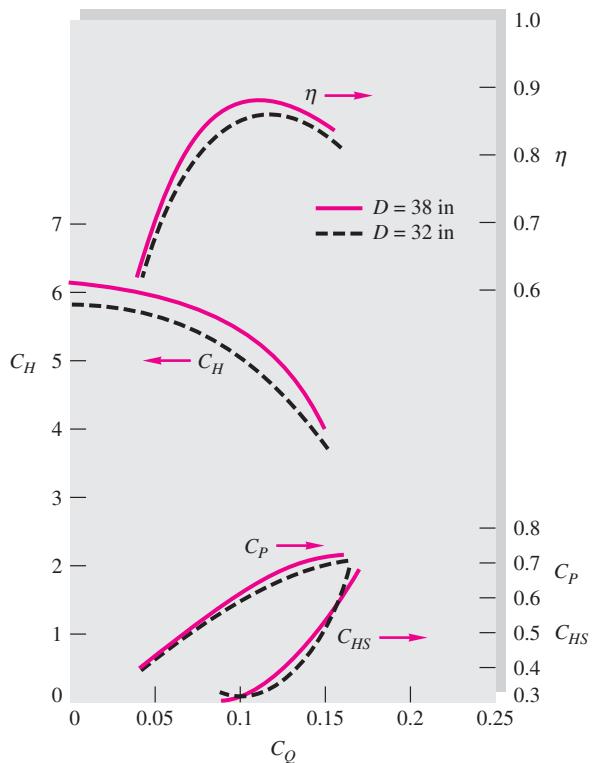

**Fig. 11.8** Nondimensional plot of the pump performance data from Fig. 11.7. These numbers are not representative of other pump designs.

The coefficients  $C_P$  and  $C_{HS}$  are seen to correlate almost perfectly into a single function of  $C_Q$ , while  $\eta$  and  $C_H$  data deviate by a few percent. The last two parameters are more sensitive to slight discrepancies in model similarity; since the larger pump has smaller roughness and clearance ratios and a 40 percent larger Reynolds number, it develops slightly more head and is more efficient. The overall effect is a resounding victory for dimensional analysis.

The best efficiency point in Fig. 11.8 is approximately

$$\begin{aligned} C_{Q^*} &\approx 0.115 & C_{P^*} &\approx 0.65 \\ \eta_{\max} &\approx 0.88 & & \\ C_{H^*} &\approx 5.0 & C_{HS^*} &\approx 0.37 \end{aligned} \quad (11.27)$$

These values can be used to estimate the BEP performance of any size pump in this geometrically similar family. In like manner, the shutoff head is  $C_H(0) \approx 6.0$ , and by extrapolation the shutoff power is  $C_P(0) \approx 0.25$  and the maximum discharge is  $C_{Q,\max} \approx 0.23$ . Note, however, that Fig. 11.8 gives no reliable information about, say, the 28- or 35-in impellers in Fig. 11.7, which have a different impeller-to-casing-size ratio and thus must be correlated separately.

By comparing values of  $n^2D^2$ ,  $nD^3$ , and  $n^3D^5$  for two pumps in Fig. 11.7, we can see readily why the large pump had the same discharge but less power and head:

	<b>D, ft</b>	<b>n, r/s</b>	<b>Discharge <math>ND^3</math>, ft<sup>3</sup>/s</b>	<b>Head <math>n^2D^2/g</math>, ft</b>	<b>Power <math>\rho n^3 D^5 / 550</math>, hp</b>
Fig. 11.7a	32/12	1170/60	370	84	3527
Fig. 11.7b	38/12	710/60	376	44	1861
Ratio	—	—	1.02	0.52	0.53

Discharge goes as  $ND^3$ , which is about the same for both pumps. Head goes as  $n^2D^2$  and power as  $n^3D^5$  for the same  $\rho$  (water), and these are about half as much for the larger pump. The NPSH goes as  $n^2D^2$  and is also half as much for the 38-in pump.

### EXAMPLE 11.3

A pump from the family of Fig. 11.8 has  $D = 21$  in and  $n = 1500$  r/min. Estimate (a) discharge, (b) head, (c) pressure rise, and (d) brake horsepower of this pump for water at 60°F and best efficiency.

#### Solution

##### Part (a)

In BG units take  $D = 21/12 = 1.75$  ft and  $n = 1500/60 = 25$  r/s. At 60°F,  $\rho$  of water is 1.94 slugs/ft<sup>3</sup>. The BEP parameters are known from Fig. 11.8 or Eqs. (11.27). The BEP discharge is thus

$$Q^* = C_Q n D^3 = 0.115(25 \text{ r/s})(1.75 \text{ ft})^3 = (15.4 \text{ ft}^3/\text{s}) \left( 448.8 \frac{\text{gal/min}}{\text{ft}^3/\text{s}} \right) = 6900 \text{ gal/min}$$

Ans. (a)

##### Part (b)

Similarly, the BEP head is

$$H^* = \frac{C_H n^2 D^2}{g} = \frac{5.0(25)^2(1.75)^2}{32.2} = 300 \text{-ft water}$$

Ans. (b)

##### Part (c)

Since we are not given elevation or velocity head changes across the pump, we neglect them and estimate

$$\Delta p \approx \rho g H = 1.94(32.2)(300) = 18,600 \text{ lbf/ft}^2 = 129 \text{ lbf/in}^2$$

Ans. (c)

##### Part (d)

Finally, the BEP power is

$$P^* = C_P \rho n^3 D^5 = 0.65(1.94)(25)^3(1.75)^5$$

$$= \frac{323,000 \text{ ft} \cdot \text{lbf/s}}{550} = 590 \text{ hp}$$

Ans. (d)

### EXAMPLE 11.4

We want to build a pump from the family of Fig. 11.8, which delivers 3000 gal/min water at 1200 r/min at best efficiency. Estimate (a) the impeller diameter, (b) the maximum discharge, (c) the shutoff head, and (d) the NPSH at best efficiency.

**Solution****Part (a)**

$3000 \text{ gal/min} = 6.68 \text{ ft}^3/\text{s}$  and  $1200 \text{ r/min} = 20 \text{ r/s}$ . At BEP we have

$$Q^* = C_{Q^*} n D^3 = 6.68 \text{ ft}^3/\text{s} = (0.115)(20)D^3$$

$$D = \left[ \frac{6.68}{0.115(20)} \right]^{1/3} = 1.43 \text{ ft} = 17.1 \text{ in} \quad \text{Ans. (a)}$$

**Part (b)**

The maximum  $Q$  is related to  $Q^*$  by a ratio of capacity coefficients:

$$Q_{\max} = \frac{Q^* C_{Q,\max}}{C_{Q^*}} \approx \frac{3000(0.23)}{0.115} = 6000 \text{ gal/min} \quad \text{Ans. (b)}$$

**Part (c)**

From Fig. 11.8 we estimated the shutoff head coefficient to be 6.0. Thus

$$H(0) \approx \frac{C_H(0)n^2 D^2}{g} = \frac{6.0(20)^2(1.43)^2}{32.2} = 152 \text{ ft} \quad \text{Ans. (c)}$$

**Part (d)**

Finally, from Eq. (11.27), the NPSH at BEP is approximately

$$\text{NPSH}^* = \frac{C_{HS^*} n^2 D^2}{g} = \frac{0.37(20)^2(1.43)^2}{32.2} = 9.4 \text{ ft} \quad \text{Ans. (d)}$$

Since this is a small pump, it will be less efficient than the pumps in Fig. 11.8, probably about 85 percent maximum.


**Similarity Rules**

The success of Fig. 11.8 in correlating pump data leads to simple rules for comparing pump performance. If pump 1 and pump 2 are from the same geometric family and are operating at homologous points (the same dimensionless position on a chart such as Fig. 11.8), their flow rates, heads, and powers will be related as follows:

$$\begin{aligned} \frac{Q_2}{Q_1} &= \frac{n_2}{n_1} \left( \frac{D_2}{D_1} \right)^3 & \frac{H_2}{H_1} &= \left( \frac{n_2}{n_1} \right)^2 \left( \frac{D_2}{D_1} \right)^2 \\ \frac{P_2}{P_1} &= \frac{\rho_2}{\rho_1} \left( \frac{n_2}{n_1} \right)^3 \left( \frac{D_2}{D_1} \right)^5 \end{aligned} \quad (11.28)$$

These are the *similarity rules*, which can be used to estimate the effect of changing the fluid, speed, or size on any dynamic turbomachine—pump or turbine—within a geometrically similar family. A graphic display of these rules is given in Fig. 11.9, showing the effect of speed and diameter changes on pump performance. In Fig. 11.9a the size is held constant and the speed is varied 20 percent, while Fig. 11.9b shows a 20 percent size change at constant speed. The curves are plotted to scale but with arbitrary units. The speed effect (Fig. 11.9a) is substantial, but the size effect (Fig. 11.9b) is even more dramatic, especially for power, which varies as  $D^5$ . Generally we see that a given pump family can be adjusted in size and speed to fit a variety of system characteristics.

Strictly speaking, we would expect for perfect similarity that  $\eta_1 = \eta_2$ , but we have seen that larger pumps are more efficient, having a higher Reynolds number and lower roughness and clearance ratios. Two empirical correlations are recommended for

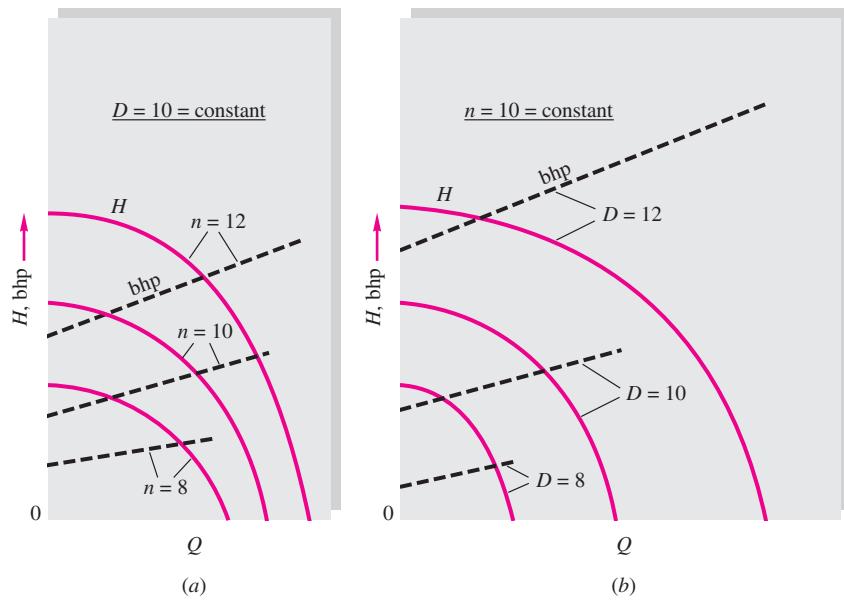

**Fig. 11.9** Effect of changes in size and speed on homologous pump performance: (a) 20 percent change in speed at constant size; (b) 20 percent change in size at constant speed.

maximum efficiency. One, developed by Moody [43] for turbines but also used for pumps, is a size effect. The other, suggested by Anderson [44] from thousands of pump tests, is a flow rate effect:

$$\text{Size changes [43]:} \quad \frac{1 - \eta_2}{1 - \eta_1} \approx \left( \frac{D_1}{D_2} \right)^{1/4} \quad (11.29a)$$


$$\text{Flow rate changes [44]:} \quad \frac{0.94 - \eta_2}{0.94 - \eta_1} \approx \left( \frac{Q_1}{Q_2} \right)^{0.32} \quad (11.29b)$$

Anderson's formula (11.29b) makes the practical observation that even an infinitely large pump will have losses. He thus proposes a maximum possible efficiency of 94 percent, rather than 100 percent. Anderson recommends that the same formula be used for turbines if the constant 0.94 is replaced by 0.95. The formulas in Eq. (11.29) assume the same value of surface roughness for both machines—one could micropolish a small pump and achieve the efficiency of a larger machine.

### Effect of Viscosity

Centrifugal pumps are often used to pump oils and other viscous liquids up to 1000 times the viscosity of water. But the Reynolds numbers become low turbulent or even laminar, with a strong effect on performance. Figure 11.10 shows typical test curves of head and brake horsepower versus discharge. High viscosity causes a dramatic drop in head and discharge and increases in power requirements. The efficiency also drops substantially according to the following typical results:

$\mu/\mu_{\text{water}}$	1.0	10.0	100	1000
$\eta_{\max}, \%$	85	76	52	11

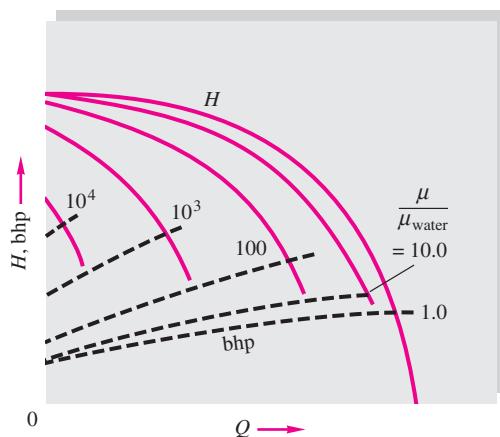

**Fig. 11.10** Effect of viscosity on centrifugal pump performance.

Beyond about  $300\mu_{\text{water}}$  the deterioration in performance is so great that a positive-displacement pump is recommended.

## 11.4 Mixed- and Axial-Flow Pumps: The Specific Speed

We have seen from the previous section that the modern centrifugal pump is a formidable device, able to deliver very high heads and reasonable flow rates with excellent efficiency. It can match many system requirements. But basically the centrifugal pump is a high-head, low-flow machine, whereas there are many applications requiring low head and high discharge. To see that the centrifugal design is not convenient for such systems, consider the following example.

### EXAMPLE 11.5

We want to use a centrifugal pump from the family of Fig. 11.8 to deliver 100,000 gal/min of water at 60°F with a head of 25 ft. What should be (a) the pump size and speed and (b) brake horsepower, assuming operation at best efficiency?

#### Solution

**Part (a)** Enter the known head and discharge into the BEP parameters from Eq. (11.27):

$$H^* = 25 \text{ ft} = \frac{C_H n^2 D^2}{g} = \frac{5.0 n^2 D^2}{32.2}$$

$$Q^* = 100,000 \text{ gal/min} = 222.8 \text{ ft}^3/\text{s} = C_Q n D^3 = 0.115 n D^3$$

The two unknowns are  $n$  and  $D$ . Solve simultaneously for

$$D = 12.4 \text{ ft} \quad n = 1.03 \text{ r/s} = 62 \text{ r/min} \quad \text{Ans. (a)}$$

EES

If you wish to avoid algebraic manipulation, simply program the two simultaneous equations from Part (a) in EES, using English units:

$$25 = 5.0 * n^2 * D^2 / 32.2$$

$$222.8 = 0.115 * n * D^3$$

Specify in Variable Information that  $n$  and  $D$  are positive, and EES promptly returns the correct solution:  $D = 12.36 \text{ ft}$  and  $n = 1.027 \text{ r/s}$ .


### Part (b)

The most efficient horsepower is then, from Eq. (11.27),


$$\text{bhp}^* \approx C_{P*}\rho n^3 D^5 = \frac{0.65(1.94)(1.03)^3(12.4)^5}{550} = 720 \text{ hp} \quad \text{Ans. (b)}$$

The solution to Example 11.5 is mathematically correct but results in a grotesque pump: an impeller more than 12 ft in diameter, rotating so slowly one can visualize oxen walking in a circle turning the shaft.

Other dynamic pump designs provide low head and high discharge. For example, there is a type of 38-in, 710 r/min pump, with the same input parameters as Fig. 11.7b, which will deliver the 25-ft head and 100,000 gal/min flow rate called for in Example 11.5. This is done by allowing the flow to pass through the impeller with an axial-flow component and less centrifugal component. The passages can be opened up to the increased flow rate with very little size increase, but the drop in radial outlet velocity decreases the head produced. These are the mixed-flow (part radial, part axial) and axial-flow (propeller-type) families of dynamic pump. Some vane designs are sketched in Fig. 11.11, which introduces an interesting new “design” parameter, the specific speed  $N_s$  or  $N'_s$ .

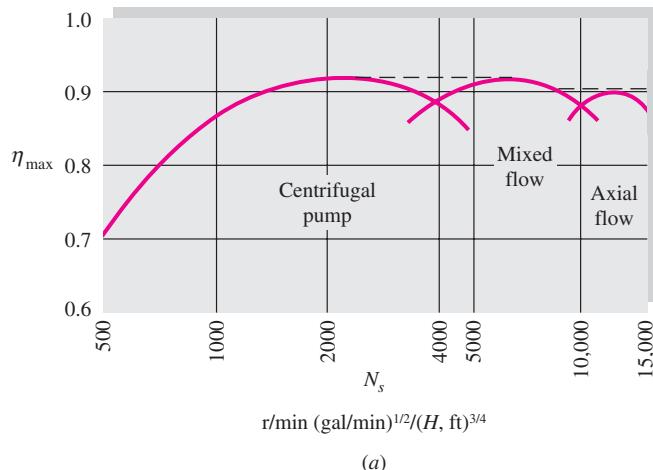

(a)

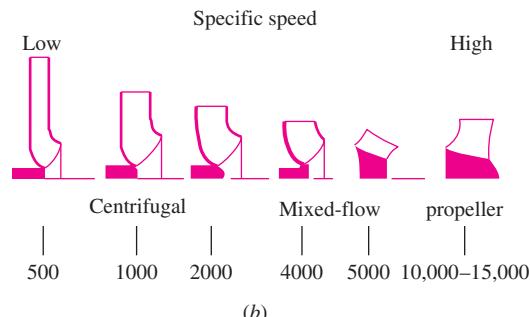

**Fig. 11.11** (a) Optimum efficiency and (b) vane design of dynamic pump families as a function of specific speed.

## The Specific Speed

Most pump applications involve a known head and discharge for the particular system, plus a speed range dictated by electric motor speeds or cavitation requirements. The designer then selects the best size and shape (centrifugal, mixed, axial) for the pump. To help this selection, we need a dimensionless parameter involving speed, discharge, and head but not size. This is accomplished by eliminating the diameter between  $C_Q$  and  $C_H$ , applying the result only to the BEP. This ratio is called the *specific speed* and has both a dimensionless form and a somewhat lazy, practical form:

Rigorous form:

$$N'_s = \frac{C_{Q^*}^{1/2}}{C_{H^*}^{3/4}} = \frac{n(Q^*)^{1/2}}{(gH^*)^{3/4}} \quad (11.30a)$$

Lazy but common:

$$N_s = \frac{(r/min)(gal/min)^{1/2}}{[H \text{ (ft)}]^{3/4}} \quad (11.30b)$$

In other words, practicing engineers do not bother to change  $n$  to revolutions per second or  $Q^*$  to cubic feet per second or to include gravity with head, although the latter would be necessary for, say, a pump on the moon. The conversion factor is

$$N_s = 17,182N'_s$$

Note that  $N_s$  is applied only to BEP; thus a single number characterizes an entire family of pumps. For example, the family of Fig. 11.8 has  $N'_s \approx (0.115)^{1/2}/(5.0)^{3/4} = 0.1014$ ,  $N_s = 1740$ , regardless of size or speed.

It turns out that the specific speed is directly related to the most efficient pump design, as shown in Fig. 11.11. Low  $N_s$  means low  $Q$  and high  $H$ , hence a centrifugal pump, and large  $N_s$  implies an axial pump. The centrifugal pump is best for  $N_s$  between 500 and 4000, the mixed-flow pump for  $N_s$  between 4000 and 10,000, and the axial-flow pump for  $N_s$  above 10,000. Note the changes in impeller shape as  $N_s$  increases.

## Suction Specific Speed

If we use NPSH rather than  $H$  in Eq. (11.30), the result is called *suction-specific speed*:

Rigorous:

$$N'_{ss} = \frac{nQ^{1/2}}{(g \text{ NPSH})^{3/4}} \quad (11.31a)$$


Lazy:

$$N_{ss} = \frac{(r/min)(gal/min)^{1/2}}{[\text{NPSH (ft)}]^{3/4}} \quad (11.31b)$$

where NPSH denotes the available suction head of the system. Data from Wislicenus [4] show that a given pump is in danger of inlet cavitation if

$$N'_{ss} \geq 0.47 \quad N_{ss} \geq 8100$$

In the absence of test data, this relation can be used, given  $n$  and  $Q$ , to estimate the minimum required NPSH.

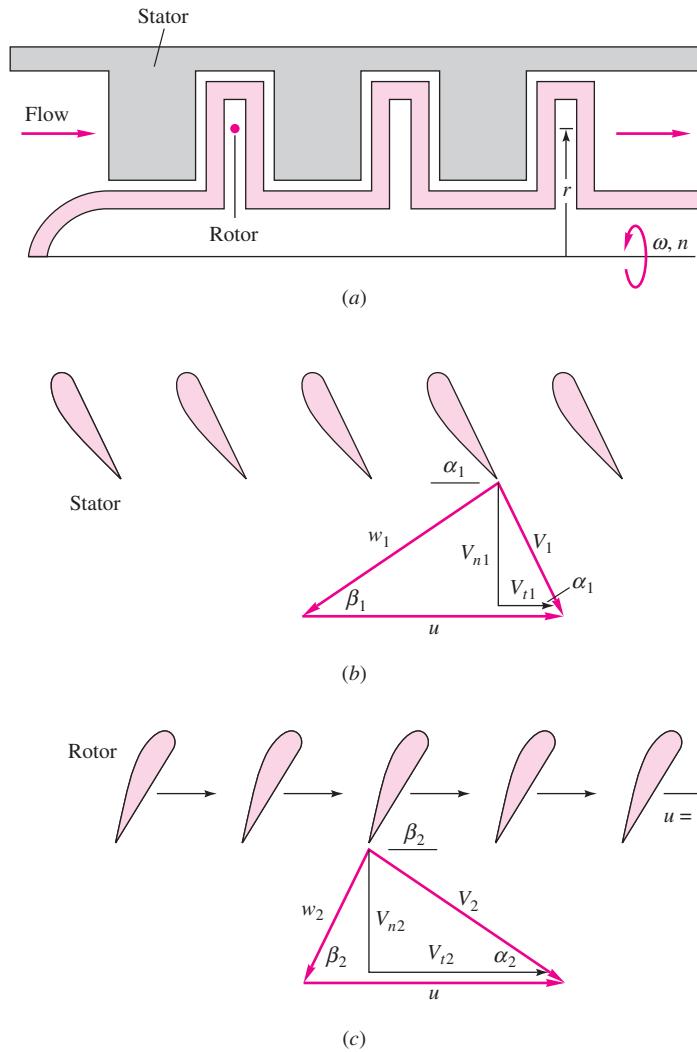

**Fig. 11.12** Analysis of an axial-flow pump: (a) basic geometry; (b) stator blades and exit velocity diagram; (c) rotor blades and exit velocity diagram.

### Axial-Flow Pump Theory

A multistage axial-flow geometry is shown in Fig. 11.12a. The fluid essentially passes almost axially through alternate rows of fixed *stator* blades and moving *rotor* blades. The incompressible flow assumption is frequently used even for gases because the pressure rise per stage is usually small.

The simplified vector diagram analysis assumes that the flow is one-dimensional and leaves each blade row at a relative velocity exactly parallel to the exit blade angle. Figure 11.12b shows the stator blades and their exit velocity diagram. Since the stator is fixed, ideally the absolute velocity  $V_1$  is parallel to the trailing edge of the blade. After vectorially subtracting the rotor tangential velocity  $u$  from  $V_1$ , we obtain the velocity  $w_1$  relative to the rotor, which ideally should be parallel to the rotor leading edge.

Figure 11.12c shows the rotor blades and their exit velocity diagram. Here the relative velocity  $w_2$  is parallel to the blade trailing edge, while the absolute velocity  $V_2$  should be designed to smoothly enter the next row of stator blades.

The theoretical power and head are given by Euler's turbine relation (11.11). Since there is no radial flow, the inlet and exit rotor speeds are equal,  $u_1 = u_2$ , and one-dimensional continuity requires that the axial-velocity component remain constant:

$$V_{n1} = V_{n2} = V_n = \frac{Q}{A} = \text{const}$$

From the geometry of the velocity diagrams, the normal velocity (or volume flow) can be directly related to the blade rotational speed  $u$ :

$$u = \omega r_{av} = V_n(\cot \alpha_1 + \cot \beta_1) = V_n(\cot \alpha_2 + \cot \beta_2) \quad (11.32)$$

Thus the flow rate can be predicted from the rotational speed and the blade angles. Meanwhile, since  $V_{t1} = V_n \cot \alpha_1$  and  $V_{t2} = u - V_n \cot \beta_2$ , Euler's relation (11.11) for the pump head becomes

$$\begin{aligned} gH &= uV_n(\cot \alpha_2 - \cot \alpha_1) \\ &= u^2 - uV_n(\cot \alpha_1 + \cot \beta_2) \end{aligned} \quad (11.33)$$

the preferred form because it relates to the blade angles  $\alpha_1$  and  $\beta_2$ . The shutoff or no-flow head is seen to be  $H_0 = u^2/g$ , just as in Eq. (11.18) for a centrifugal pump. The blade-angle parameter  $\cot \alpha_1 + \cot \beta_2$  can be designed to be negative, zero, or positive, corresponding to a rising, flat, or falling head curve, as in Fig. 11.5.

Strictly speaking, Eq. (11.33) applies only to a single streamtube of radius  $r$ , but it is a good approximation for very short blades if  $r$  denotes the average radius. For long blades it is customary to sum Eq. (11.33) in radial strips over the blade area. Such complexity may not be warranted since theory, being idealized, neglects losses and usually predicts the head and power larger than those in actual pump performance.

### Performance of an Axial-Flow Pump


At high specific speeds, the most efficient choice is an axial-flow, or propeller, pump, which develops high flow rate and low head. A typical dimensionless chart for a propeller pump is shown in Fig. 11.13. Note, as expected, the higher  $C_Q$  and lower  $C_H$  compared with Fig. 11.8. The head curve drops sharply with discharge, so that a large system head change will cause a mild flow change. The power curve drops with head also, which means a possible overloading condition if the system discharge should suddenly decrease. Finally, the efficiency curve is rather narrow and triangular, as opposed to the broad, parabolic-shaped centrifugal pump efficiency (Fig. 11.8).

By inspection of Fig. 11.13,  $C_{Q*} \approx 0.55$ ,  $C_{H*} \approx 1.07$ ,  $C_{P*} \approx 0.70$ , and  $\eta_{\max} \approx 0.84$ . From this we compute  $N'_s \approx (0.55)^{1/2}/(1.07)^{3/4} = 0.705$ ,  $N_s = 12,000$ . The relatively low efficiency is due to small pump size:  $d = 14$  in,  $n = 690$  r/min,  $Q^* = 4400$  gal/min.

A repetition of Example 11.5 using Fig. 11.13 would show that this propeller pump family can provide a 25-ft head and 100,000 gal/min discharge if  $D = 46$  in and  $n = 430$  r/min, with bhp = 750; this is a much more reasonable design solution, with improvements still possible at larger- $N_s$  conditions.


### Pump Performance versus Specific Speed

Specific speed is such an effective parameter that it is used as an indicator of both performance and efficiency. Figure 11.14 shows a correlation of the optimum efficiency of a pump as a function of the specific speed and capacity. Because the

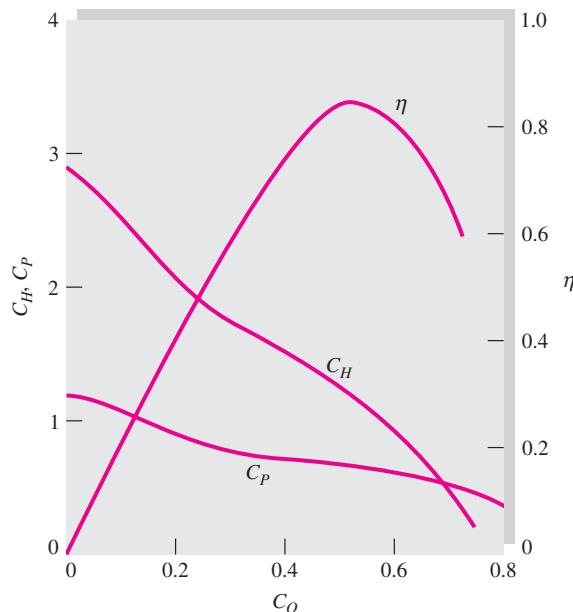


**Fig. 11.13** Dimensionless performance curves for a typical axial-flow pump,  $N_s = 12,000$ . Constructed from data given by Stepanoff [8] for a 14-in pump at 690 r/min.

dimensional parameter  $Q$  is a rough measure of both size and Reynolds number,  $\eta$  increases with  $Q$ . When this type of correlation was first published by Wislicenus [4] in 1947, it became known as *the pump curve*, a challenge to all manufacturers. We can check that the pumps of Figs. 11.7 and 11.13 fit the correlation very well.

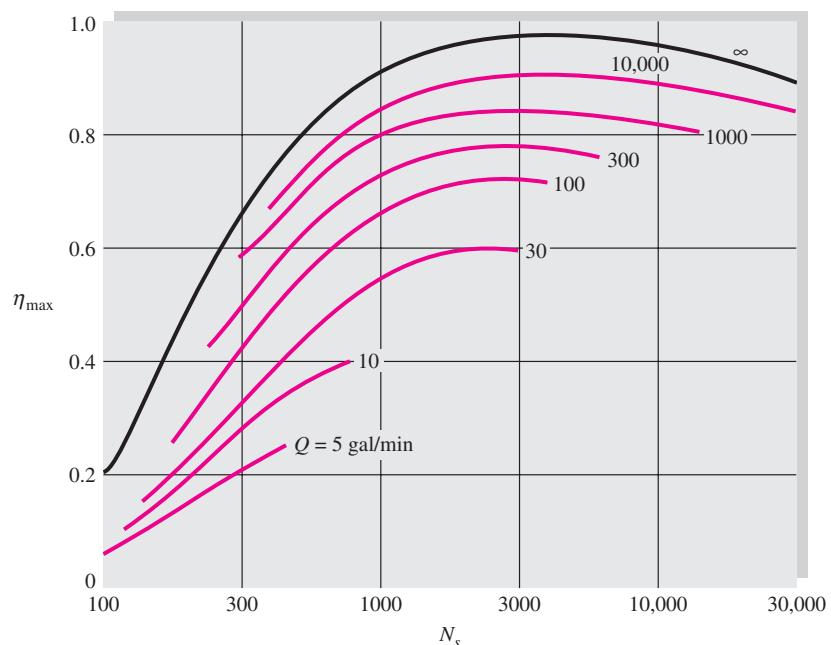

**Fig. 11.14** Optimum efficiency of pumps versus capacity and specific speed. (Adapted from Refs. 4 and 31.)

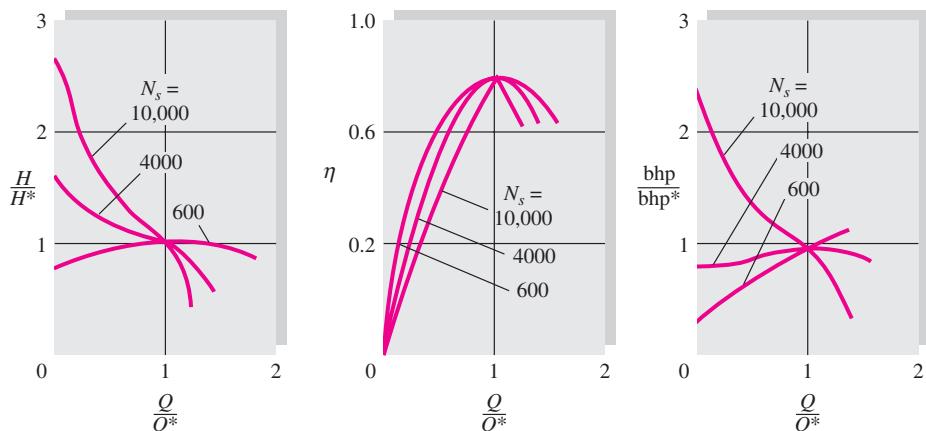

**Fig. 11.15** Effect of specific speed on pump performance curves.

Figure 11.15 shows the effect of specific speed on the shape of the pump performance curves, normalized with respect to the BEP point. The numerical values shown are representative but somewhat qualitative. The high-specific-speed pumps ( $N_s \approx 10,000$ ) have head and power curves that drop sharply with discharge, implying overload or start-up problems at low flow. Their efficiency curve is very narrow.

A low-specific-speed pump ( $N_s = 600$ ) has a broad efficiency curve, a rising power curve, and a head curve that “drops” at shutoff, implying possible surge or hunting problems.

### The Free Propeller

The propeller-style pump of Fig. 11.12 is enclosed in a duct and captures all the approach flow. In contrast, the *free propeller*, for either aircraft or marine applications, acts in an unbounded fluid and thus is much less effective. The analog of propeller-pump pressure rise is the free propeller *thrust* per unit area ( $\pi D^2/4$ ) swept out by the blades. In a customary dimensional analysis, thrust  $T$  and power required  $P$  are functions of fluid density  $\rho$ , rotation rate  $n$  (rev/s), forward velocity  $V$ , and propeller diameter  $D$ . Viscosity effects are small and neglected. You might enjoy analyzing this as a Chap. 5 assignment. The NACA (now the NASA) chose  $(\rho, n, D)$  as repeating variables, and the results are the accepted parameters:


$$C_T = \text{thrust coefficient} = \frac{T}{\rho n^2 D^4} = \text{fcn}(J), \quad J = \text{advance ratio} = \frac{V}{nD}$$

$$C_P = \text{power coefficient} = \frac{P}{\rho n^3 D^5} = \text{fcn}(J), \quad \eta = \text{efficiency} = \frac{VT}{P} = \frac{JC_T}{C_P} \quad (11.34)$$

The advance ratio,  $J$ , which compares forward velocity to a measure proportional to blade tip speed, has a strong effect upon thrust and power.

Figure 11.16 shows performance data for a propeller used on the Cessna 172 aircraft. The thrust and power coefficients are small, of  $\mathcal{O}(0.05)$ , and are multiplied by 10 for plotting convenience. Maximum efficiency is 83 percent at  $J = 0.7$ , where  $C_T^* \approx 0.040$  and  $C_P^* \approx 0.034$ .

There are several engineering methods for designing propellers. These theories are described in specialized texts, both for marine [60] and aircraft [61] propellers.

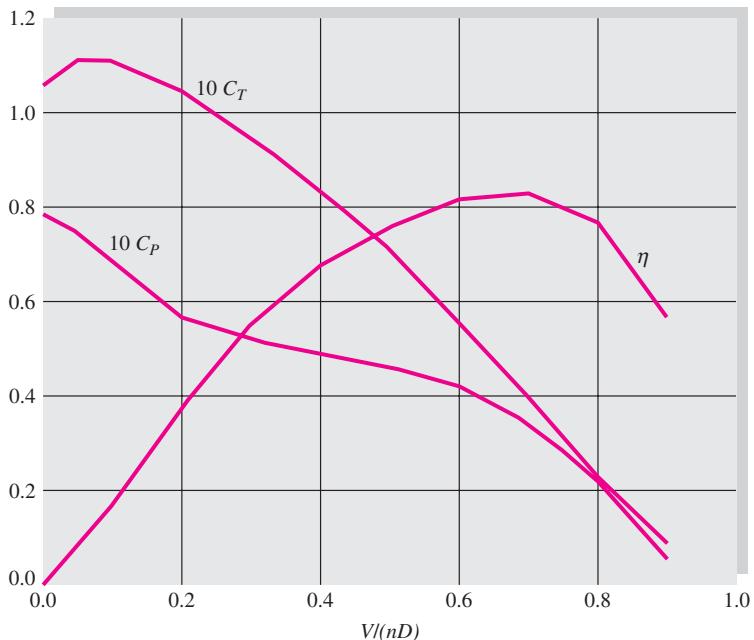

**Fig. 11.16** Performance data for a free propeller used on the Cessna 172 aircraft. Compare to Fig. 11.13 for a (ducted) propeller pump. The thrust and power coefficients are much smaller for the free propeller.


### Computational Fluid Dynamics

The design of turbomachinery has traditionally been highly experimental, with simple theories, such as in Sec. 11.2, only able to predict trends. Dimensionless correlations, such as Fig. 11.15, are useful but require extensive experimentation. Consider that flow in a pump is three-dimensional; unsteady (both periodic and turbulent); and involves flow separation, recirculation in the impeller, unsteady blade wakes passing through the diffuser, and blade roots, tips, and clearances. It is no wonder that one-dimensional theory cannot give firm quantitative predictions.

Modern computer analysis can give realistic results and is becoming a useful tool for turbomachinery designers. A good example is Ref. 56, reporting combined experimental and computational results for a centrifugal pump diffuser. A photograph of the device is shown in Fig. 11.17a. It is made of clear Perspex, so that laser measurements of particle tracking velocimetry (LPTV) and doppler anemometry (LDA) could be taken throughout the system. The data were compared with a CFD simulation of the impeller and diffuser, using the grids shown in Fig. 11.17b. The computations used a turbulence formulation called the  $k-\epsilon$  model, popular in commercial CFD codes (see Sec. 8.9). Results were good but not excellent. The CFD model predicted velocity and pressure data adequately up until flow separation, after which it was only qualitative. Clearly, CFD is developing a significant role in turbomachinery design [42, 45].

### 11.5 Matching Pumps to System Characteristics


The ultimate test of a pump is its match with the operating system characteristics. Physically, the system head must match the head produced by the pump, and this intersection should occur in the region of best efficiency.

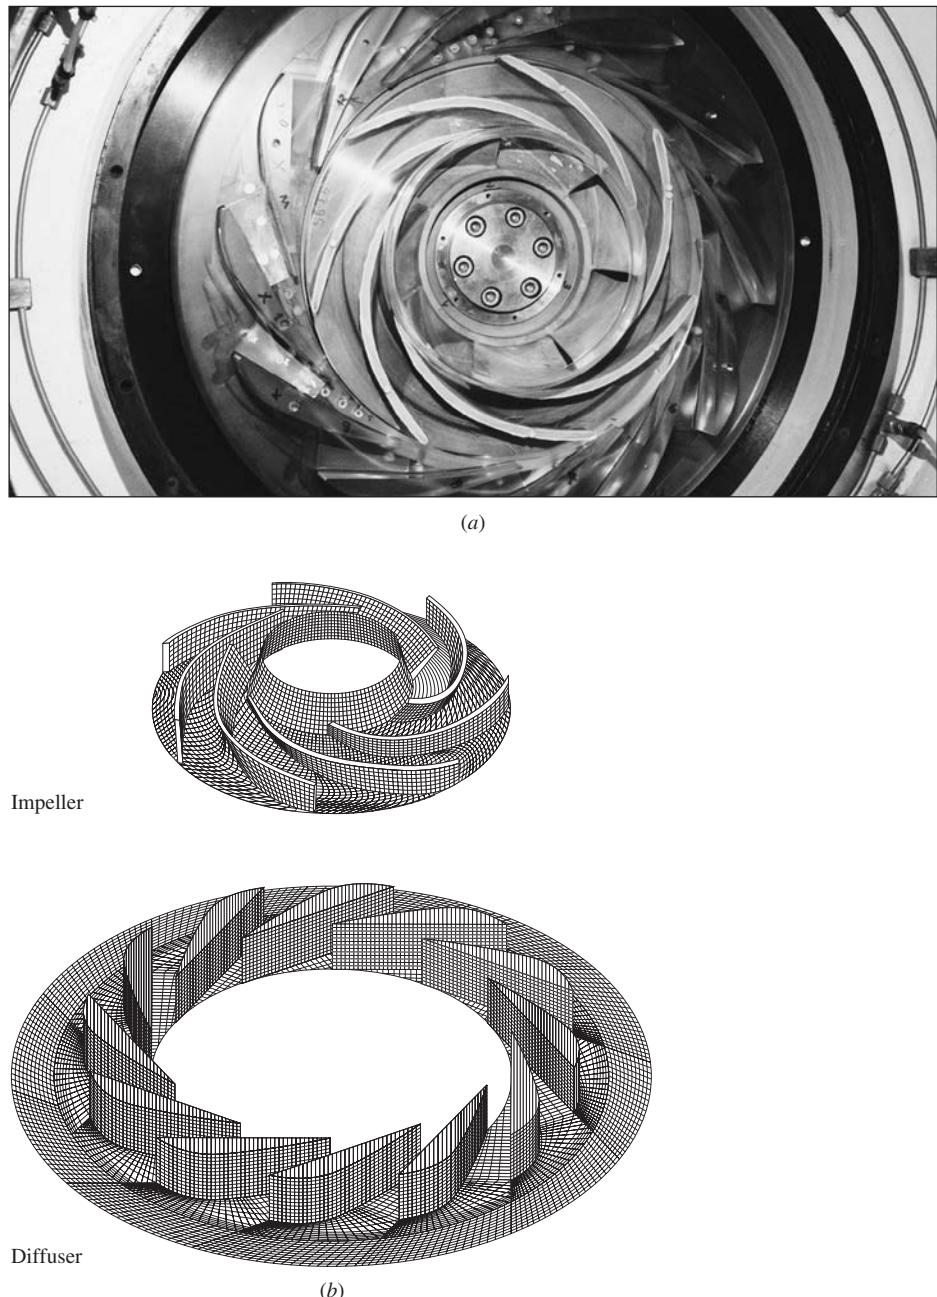

**Fig. 11.17** Turbomachinery design now involves both experimentation and computational fluid dynamics (CFD): (a) a centrifugal impeller and diffuser (*courtesy of K. Eisele et al., Flow Analysis in a Pump Diffuser: Part 1, Measurements: Part 2, CFD, Journal of Fluids Eng. Vol. 119, December 1997, pp. 968984/American Society of Mechanical Engineers*); (b) a three-dimensional CFD model grid for this system (*from Ref. 56 by permission of the American Society of Mechanical Engineers*).

The system head will probably contain a static elevation change  $z_2 - z_1$  plus friction losses in pipes and fittings:

$$H_{\text{sys}} = (z_2 - z_1) + \frac{V^2}{2g} \left( \sum \frac{fL}{D} + \sum K \right)$$

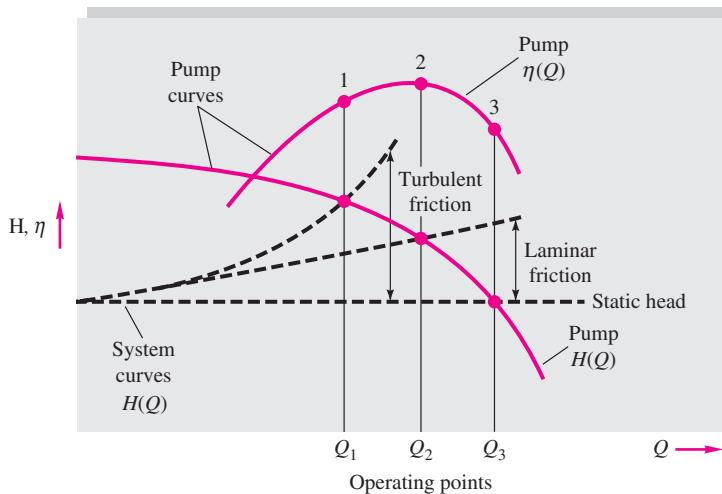

**Fig. 11.18** Illustration of pump operating points for three types of system head curves.

where  $\Sigma K$  denotes minor losses and  $V$  is the flow velocity in the principal pipe. Since  $V$  is proportional to the pump discharge  $Q$ , the equation represents a system head curve  $H_s(Q)$ . Three examples are shown in Fig. 11.18: a static head  $H_s = a$ , static head plus laminar friction  $H_s = a + bQ$ , and static head plus turbulent friction  $H_s = a + cQ^2$ . The intersection of the system curve with the pump performance curve  $H(Q)$  defines the operating point. In Fig. 11.18 the laminar friction operating point is at maximum efficiency while the turbulent and static curves are off design. This may be unavoidable if system variables change, but the pump should be changed in size or speed if its operating point is consistently off design. Of course, a perfect match may not be possible because commercial pumps have only certain discrete sizes and speeds. Let us illustrate these concepts with an example.

### EXAMPLE 11.6

We want to use the 32-in pump of Fig. 11.7a at 1170 r/min to pump water at 60°F from one reservoir to another 120 ft higher through 1500 ft of 16-in-ID pipe with friction factor  $f = 0.030$ . (a) What will the operating point and efficiency be? (b) To what speed should the pump be changed to operate at the BEP?

#### Solution

##### Part (a)

For reservoirs the initial and final velocities are zero; thus the system head is

$$H_s = z_2 - z_1 + \frac{V^2 f L}{2g D} = 120 \text{ ft} + \frac{V^2 0.030(1500 \text{ ft})}{2g \frac{16}{12} \text{ ft}}$$

From continuity in the pipe,  $V = Q/A = Q/\left[\frac{1}{4}\pi\left(\frac{16}{12}\text{ ft}\right)^2\right]$ , and so we substitute for  $V$  to get


$$H_s = 120 + 0.269Q^2 \quad Q \text{ in ft}^3/\text{s} \quad (1)$$

Since Fig. 11.7a uses thousands of gallons per minute for the abscissa, we convert  $Q$  in Eq. (1) to this unit:

$$H_s = 120 + 1.335Q^2 \quad Q \text{ in } 10^3 \text{ gal/min} \quad (2)$$

We can plot Eq. (2) on Fig. 11.7a and see where it intersects the 32-in pump head curve, as in Fig. E11.6. A graphical solution gives approximately

$$H \approx 430 \text{ ft} \quad Q \approx 15,000 \text{ gal/min}$$

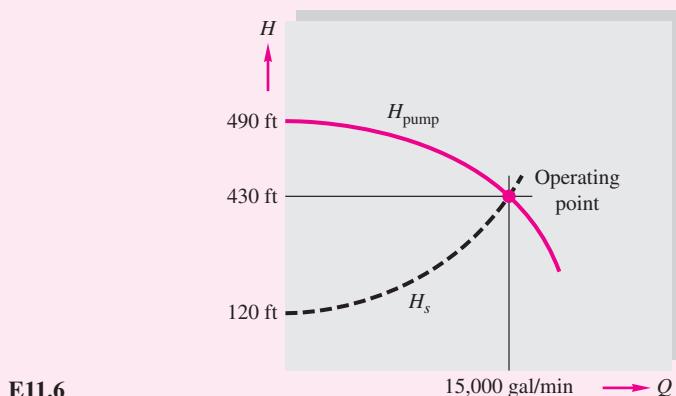

The efficiency is about 82 percent, slightly off design.

An analytic solution is possible if we fit the pump head curve to a parabola, which is very accurate:

$$H_{\text{pump}} \approx 490 - 0.26Q^2 \quad Q \text{ in } 10^3 \text{ gal/min} \quad (3)$$

Equations (2) and (3) must match at the operating point:

$$490 - 0.26Q^2 = 120 + 1.335Q^2$$

or 
$$Q^2 = \frac{490 - 120}{0.26 + 1.335} = 232$$

$$Q = 15.2 \times 10^3 \text{ gal/min} = 15,200 \text{ gal/min} \quad \text{Ans. (a)}$$


$$H = 490 - 0.26(15.2)^2 = 430 \text{ ft} \quad \text{Ans. (a)}$$

### Part (b)


To move the operating point to BEP, we change  $n$ , which changes both  $Q \propto n$  and  $H \propto n^2$ . From Fig. 11.7a, at BEP,  $H^* \approx 386$  ft; thus for any  $n$ ,  $H^* = 386(n/1170)^2$ . Also read  $Q^* \approx 20 \times 10^3$  gal/min; thus for any  $n$ ,  $Q^* = 20(n/1170)$ . Match  $H^*$  to the system characteristics, Eq. (2):

$$H^* = 386 \left( \frac{n}{1170} \right)^2 \approx 120 + 1.335 \left( 20 \frac{n}{1170} \right)^2 \quad \text{Ans. (b)}$$

which gives  $n^2 < 0$ . Thus it is impossible to operate at maximum efficiency with this particular system and pump.

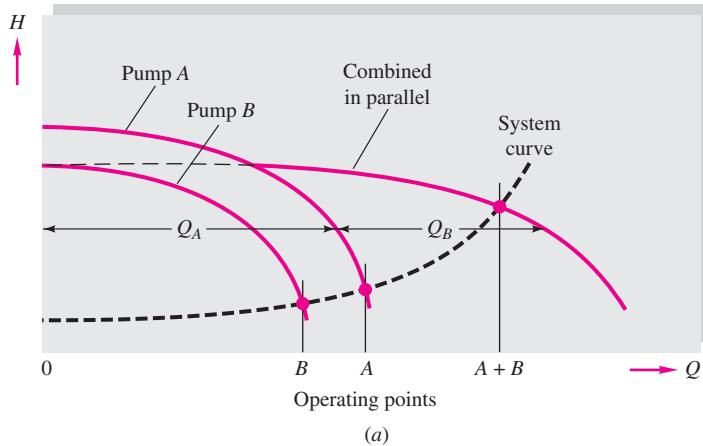

(a)

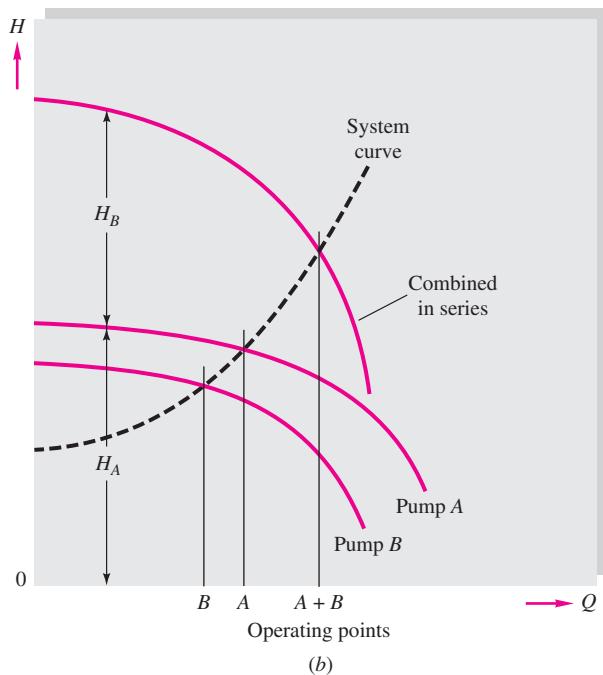

(b)

**Fig. 11.19** Performance and operating points of two pumps operating singly and (a) in parallel or (b) in series.

### Pumps Combined in Parallel

If a pump provides the right head but too little discharge, a possible remedy is to combine two similar pumps in parallel, sharing the same suction and inlet conditions. A parallel arrangement is also used if delivery demand varies, so that one pump is used at low flow and the second pump is started up for higher discharges. Both pumps should have check valves to avoid backflow when one is shut down.

The two pumps in parallel need not be identical. Physically, their flow rates will sum for the same head, as illustrated in Fig. 11.19a. If pump A has more head than pump B, pump B cannot be added in until the operating head is below the shutoff head of pump B. Since the system curve rises with  $Q$ , the combined delivery  $Q_{A+B}$  will be less than the separate operating discharges  $Q_A + Q_B$  but certainly greater than

either one. For a very flat (static) curve two similar pumps in parallel will deliver nearly twice the flow. The combined brake horsepower is found by adding brake horsepower for each of pumps *A* and *B* at the same head as the operating point. The combined efficiency equals  $\rho g(Q_{A+B})(H_{A+B})/(550 \text{ bhp}_{A+B})$ .

If pumps *A* and *B* are not identical, as in Fig. 11.19*a*, pump *B* should not be run and cannot even be started up if the operating point is above its shutoff head.

### Pumps Combined in Series

If a pump provides the right discharge but too little head, consider adding a similar pump in series, with the output of pump *B* fed directly into the suction side of pump *A*. As sketched in Fig. 11.19*b*, the physical principle for summing in series is that the two heads add at the same flow rate to give the combined performance curve. The two need not be identical at all, since they merely handle the same discharge; they may even have different speeds, although normally both are driven by the same shaft.

The need for a series arrangement implies that the system curve is steep that is, it requires higher head than either pump *A* or *B* can provide. The combined operating point head will be more than either *A* or *B* separately but not as great as their sum. The combined power is the sum of brake horsepower for *A* and *B* at the operating point flow rate. The combined efficiency is

$$\frac{\rho g(Q_{A+B})(H_{A+B})}{550 \text{ bhp}_{A+B}}$$

similar to parallel pumps.


Whether pumps are used in series or in parallel, the arrangement will be uneconomical unless both pumps are operating near their best efficiency.

### Multistage Pumps

For very high heads in continuous operation, the solution is a multistage pump, with the exit of one impeller feeding directly into the eye of the next. Centrifugal, mixed-flow, and axial-flow pumps have all been grouped in as many as 50 stages, with heads up to 8000 ft of water and pressure rises up to 5000 lbf/in<sup>2</sup> absolute. Figure 11.20 shows a section of a seven-stage centrifugal propane compressor that develops 300 lbf/in<sup>2</sup> rise at 40,000 ft<sup>3</sup>/min and 35,000 bhp.

### Compressors

Most of the discussion in this chapter concerns incompressible flow—that is, negligible change in fluid density. Even the pump of Fig. 11.7, which can produce 600 ft of head at 1170 r/min, will increase standard air pressure only by 46 lbf/ft<sup>2</sup>, about a 2 percent change in density. The picture changes at higher speeds,  $\Delta p \propto n^2$ , and multiple stages, where very large changes in pressure and density are achieved. Such devices are called *compressors*, as in Fig. 11.20. The concept of static head,  $H = \Delta p/\rho g$ , becomes inappropriate, since  $\rho$  varies. Compressor performance is measured by (1) the pressure ratio across the stage  $p_2/p_1$  and (2) the change in stagnation enthalpy ( $h_{02} - h_{01}$ ), where  $h_0 = h + \frac{1}{2}V^2$  (see Sec. 9.3). Combining *m* stages in series results in  $p_{\text{final}}/p_{\text{initial}} \approx (p_2/p_1)^m$ . As density increases, less area is needed: note the decrease in impeller size from right to left in Fig. 11.20. Compressors may be either of the centrifugal or axial-flow type [21 to 23].

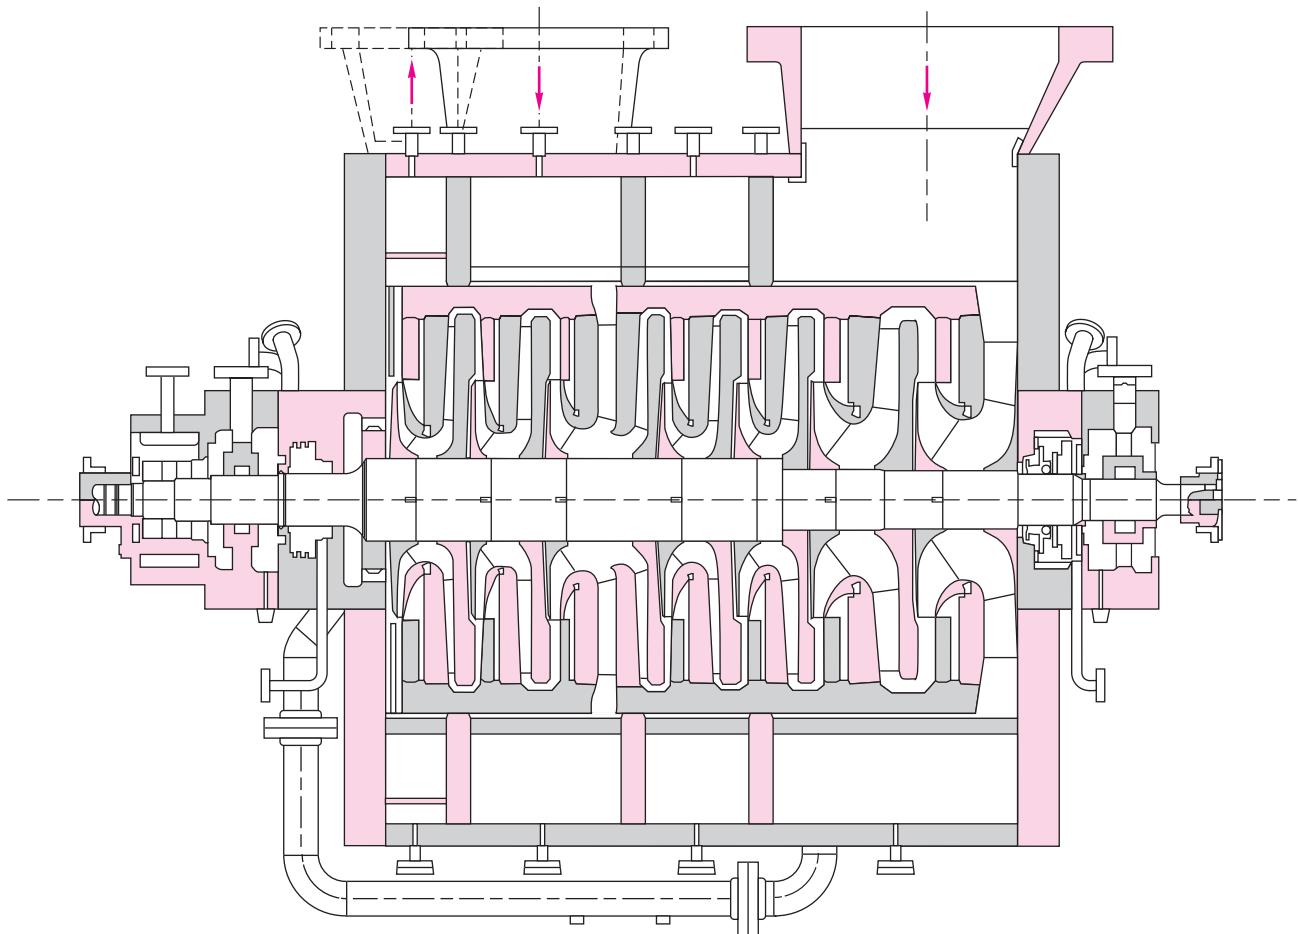

**Fig. 11.20** Cross section of a seven-stage centrifugal propane compressor that delivers 40,000 ft<sup>3</sup>/min at 35,000 bhp and a pressure rise of 300 lbf/in<sup>2</sup>. Note the second inlet at stage 5 and the varying impeller designs. (*Courtesy of DeLaval-Stork V.O.F., Centrifugal Compressor Division.*)

Compressor efficiency, from inlet condition 1 to final outlet  $f$ , is defined by the change in gas enthalpy, assuming an adiabatic process:

$$\eta_{\text{comp}} = \frac{h_f - h_{01}}{h_{0f} - h_{01}} \approx \frac{T_f - T_{01}}{T_{0f} - T_{01}}$$

Compressor efficiencies are similar to hydraulic machines ( $\eta_{\text{max}} \approx 70$  to 80 percent), but the mass flow range is more limited: on the low side by compressor *surge*, where blade stall and vibration occur, and on the high side by *choking* (Sec. 9.4), where the Mach number reaches 1.0 somewhere in the system. Compressor mass flow is normally plotted using the same type of dimensionless function formulated in Eq. (9.47):  $\dot{m}(RT_0)^{1/2}/(D^2 p_0)$ , which will reach a maximum when choking occurs. For further details, see Refs. 21 to 23.

**EXAMPLE 11.7**

Investigate extending Example 11.6 by using two 32-in pumps in parallel to deliver more flow. Is this efficient?

**Solution**

Since the pumps are identical, each delivers  $\frac{1}{2}Q$  at the same 1170 r/min speed. The system curve is the same, and the balance-of-head relation becomes

$$H = 490 - 0.26(\frac{1}{2}Q)^2 = 120 + 1.335Q^2$$

$$\text{or } Q^2 = \frac{490 - 120}{1.335 + 0.065} \quad Q = 16,300 \text{ gal/min} \quad \text{Ans.}$$

This is only 7 percent more than a single pump. Each pump delivers  $\frac{1}{2}Q = 8130$  gal/min, for which the efficiency is only 60 percent. The total brake horsepower required is 3200, whereas a single pump used only 2000 bhp. This is a poor design.

**EXAMPLE 11.8**

Suppose the elevation change in Example 11.6 is raised from 120 to 500 ft, greater than a single 32-in pump can supply. Investigate using two 32-in pumps in series at 1170 r/min.

**Solution**

Since the pumps are identical, the total head is twice as much and the constant 120 in the system head curve is replaced by 500. The balance of heads becomes


$$H = 2(490 - 0.26Q^2) = 500 + 1.335Q^2$$

$$\text{or } Q^2 = \frac{980 - 500}{1.335 + 0.52} \quad Q = 16.1 \times 10^3 \text{ gal/min} \quad \text{Ans.}$$

The operating head is  $500 + 1.335(16.1)^2 = 845$  ft, or 97 percent more than that for a single pump in Example 11.5. Each pump is operating at  $16.1 \times 10^3$  gal/min, which from Fig. 11.7a is 83 percent efficient, a pretty good match to the system. To pump at this operating point requires 4100 bhp, or about 2050 bhp for each pump.

**Gas Turbines**

Some modern devices contain both pumps and turbines. A classic case is the *gas turbine*, which combines a compressor, a combustion chamber, a turbine, and, often, a fan. Gas turbines are used to drive aircraft, helicopters, Army tanks, and small electric power plants. They have a higher power-to-weight ratio than reciprocating engines, but they spin at very high speeds and require high temperature materials and thus are costly. The compressor raises the inlet air to pressures as much as 30 to 40 times higher, before entering the combustion chamber. The heated air then passes through a turbine, which drives the compressor. The airflow then exits to provide the thrust and is generally a supersonic flow.

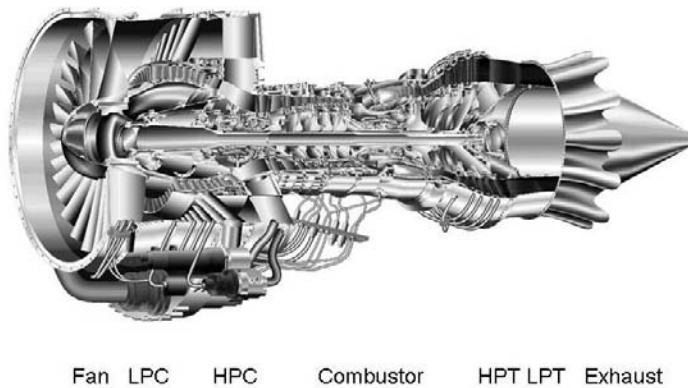

**Fig. 11.21** Cutaway view of a Pratt & Whitney 6000 turbofan aircraft engine. (Copyright United Technologies Corporation 2008. Used with permission.)


The example illustrated in Fig. 11.21 is a Pratt & Whitney 6000 turbofan aircraft engine. The large entrance fan greatly increases the airflow into the engine, some of which bypasses the compressors. The central flow enters a low-pressure (LPC) and a high-pressure (HPC) compressor and thence into the combustor. After combustion, the hot, high-velocity gases pass through a high-pressure turbine (HPT), which drives the HPC, and a low-pressure turbine (LPT), which separately drives both the LPC and the fan. The exhaust gases then create the thrust in the usual momentum-exchange manner. The engine shown, designed for shorter airline flights, has a maximum thrust of 24,000 lbf.

## 11.6 Turbines

A turbine extracts energy from a fluid that possesses high head, but it is fatuous to say a turbine is a pump run backward. Basically there are two types, reaction and impulse, the difference lying in the manner of head conversion. In the *reaction turbine*, the fluid fills the blade passages, and the head change or pressure drop occurs within the impeller. Reaction designs are of the radial-flow, mixed-flow, and axial-flow types and are essentially dynamic devices designed to admit the high-energy fluid and extract its momentum. An *impulse turbine* first converts the high head through a nozzle into a high-velocity jet, which then strikes the blades at one position as they pass by. The impeller passages are not fluid-filled, and the jet flow past the blades is essentially at constant pressure. Reaction turbines are smaller because fluid fills all the blades at one time.

### Reaction Turbines

Reaction turbines are low-head, high-flow devices. The flow is opposite that in a pump, entering at the larger-diameter section and discharging through the eye after giving up most of its energy to the impeller. Early designs were very inefficient because they lacked stationary guide vanes at the entrance to direct the flow smoothly into the impeller passages. The first efficient inward-flow turbine was built in 1849 by James B. Francis, a U.S. engineer, and all radial- or mixed-flow designs are now called *Francis turbines*. At still lower heads, a turbine can be designed more compactly with purely axial flow and is termed a *propeller turbine* [52]. The propeller may be either fixed-blade or adjustable (Kaplan type), the latter being complicated mechanically but much more efficient at low-power settings.

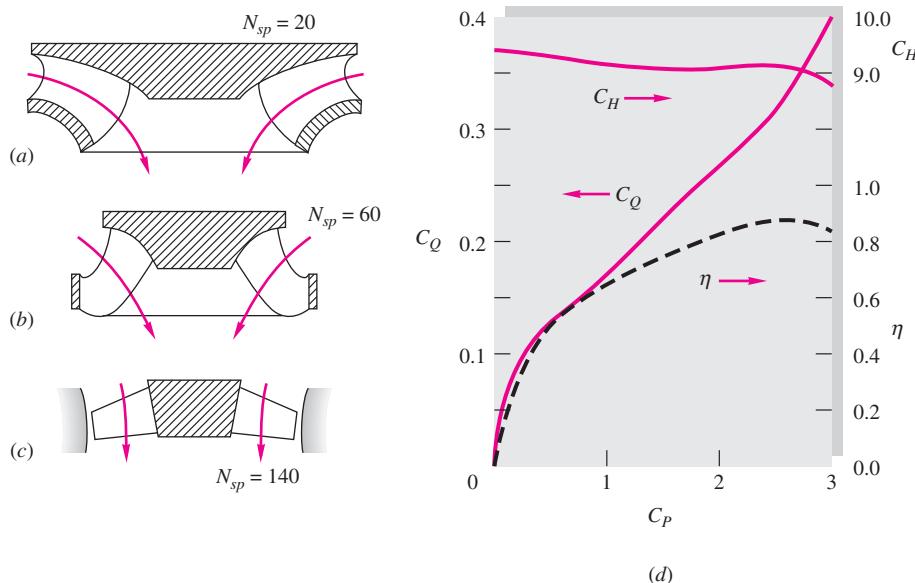

**Fig. 11.22** Reaction turbines:  
(a) Francis, radial type; (b) Francis mixed-flow; (c) propeller axial-flow;  
(d) performance curves for a Francis turbine,  $n = 600$  r/min,  
 $D = 2.25$  ft,  $N_{sp} = 29$ .

Figure 11.22 shows sketches of runner designs for Francis radial, Francis mixed-flow, and propeller-type turbines.

### Idealized Radial Turbine Theory

The Euler turbomachine formulas (11.11) also apply to energy-extracting machines if we reverse the flow direction and reshape the blades. Figure 11.23 shows a radial turbine runner. Again assume one-dimensional frictionless flow through the blades. Adjustable inlet guide vanes are absolutely necessary for good efficiency. They bring the inlet flow to the blades at angle  $\alpha_2$  and absolute velocity  $V_2$  for minimum “shock” or directional-mismatch loss. After vectorially adding in the runner tip speed  $u_2 = \omega r_2$ , the outer blade angle should be set at angle  $\beta_2$  to accommodate the relative velocity  $w_2$ , as shown in the figure. (See Fig. 11.4 for the analogous radial pump velocity diagrams.)

Application of the angular momentum control volume theorem, Eq. (3.59), to Fig. 11.23 (see Example 3.18 for a similar case) yields an idealized formula for the power  $P$  extracted by the runner:


$$P = \omega T = \rho \omega Q(r_2 V_{t2} - r_1 V_{t1}) = \rho Q(u_2 V_2 \cos \alpha_2 - u_1 V_1 \cos \alpha_1) \quad (11.35)$$

where  $V_{t2}$  and  $V_{t1}$  are the absolute inlet and outlet circumferential velocity components of the flow. Note that Eq. (11.35) is identical to Eq. (11.11) for a radial pump, except that the blade shapes are different.

The absolute inlet normal velocity  $V_{n2} = V_2 \sin \alpha_2$  is proportional to the flow rate  $Q$ . If the flow rate changes and the runner speed  $u_2$  is constant, the vanes must be adjusted to a new angle  $\alpha_2$  so that  $w_2$  still follows the blade surface. Thus adjustable inlet vanes are very important to avoid shock loss.

### Power Specific Speed

Turbine parameters are similar to those of a pump, but the dependent variable is the output brake horsepower, which depends on the inlet flow rate  $Q$ , available head  $H$ ,

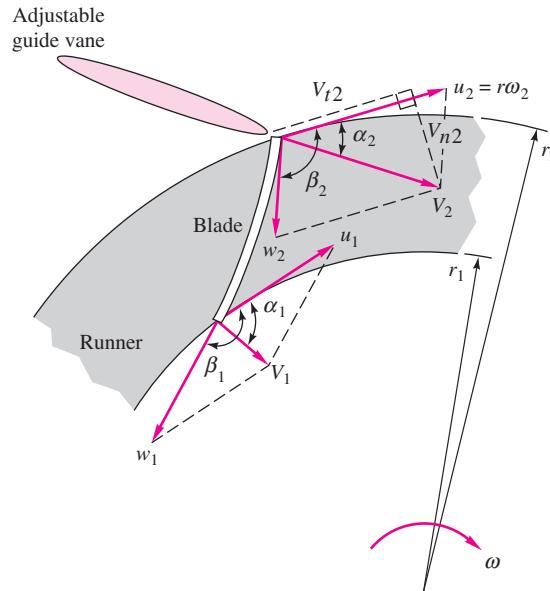

**Fig. 11.23** Inlet and outlet velocity diagrams for an idealized radial-flow reaction turbine runner.

impeller speed  $n$ , and diameter  $D$ . The efficiency is the output brake horsepower divided by the available water horsepower  $\rho g Q H$ . The dimensionless forms are  $C_Q$ ,  $C_H$ , and  $C_P$ , defined just as for a pump, Eqs. (11.23). If we neglect Reynolds number and roughness effects, the functional relationships are written with  $C_P$  as the independent variable:

$$C_H = \frac{gH}{n^2 D^2} = C_H(C_P) \quad C_Q = \frac{Q}{n D^3} = C_Q(C_P) \quad \eta = \frac{\text{bhp}}{\rho g Q H} = \eta(C_P) \quad (11.36)$$

where  $C_P = \frac{\text{bhp}}{\rho n^3 D^5}$

Figure 11.22d shows typical performance curves for a small Francis radial turbine. The maximum efficiency point is called the *normal power*; and the values for this particular turbine are

$$\eta_{\max} = 0.89 \quad C_{P*} = 2.70 \quad C_{Q*} = 0.34 \quad C_{H*} = 9.03$$

A parameter that compares the output power with the available head, independent of size, is found by eliminating the diameter between  $C_H$  and  $C_P$ . It is called the *power specific speed*:

Rigorous form:

$$N'_{sp} = \frac{C_P^{1/2}}{C_H^{5/4}} = \frac{n(\text{bhp})^{1/2}}{\rho^{1/2}(gH)^{5/4}} \quad (11.37a)$$

Lazy but common:

$$N_{sp} = \frac{(\text{r/min})(\text{bhp})^{1/2}}{[H(\text{ft})]^{5/4}} \quad (11.37b)$$

For water,  $\rho = 1.94 \text{ slugs/ft}^3$  and  $N_{sp} = 273.3N'_{sp}$ . The various turbine designs divide up nicely according to the range of power specific speed, as follows:

Turbine type	$N_{sp}$ range	$C_H$ range
Impulse	1–10	15–50
Francis	10–110	5–25
Propeller:		
Water	100–250	1–4
Gas, steam	25–300	10–80

Note that  $N_{sp}$ , like  $N_s$  for pumps, is defined only with respect to the BEP and has a single value for a given turbine family. In Fig. 11.22d,  $N_{sp} = 273.3(2.70)^{1/2}/(9.03)^{5/4} = 29$ , regardless of size.

Like pumps, turbines of large size are generally more efficient, and Eqs. (11.29) can be used as an estimate when data are lacking.

The design of a complete large-scale power-generating turbine system is a major engineering project, involving inlet and outlet ducts, trash racks, guide vanes, wicket gates, spiral cases, generator with cooling coils, bearings and transmission gears, runner blades, draft tubes, and automatic controls. Some typical large-scale reaction turbine designs are shown in Fig. 11.24. The reversible pump-and-turbine design of Fig. 11.24d requires special care for adjustable guide vanes to be efficient for flow in either direction.

The largest (1000-MW) hydropower designs are awesome when viewed on a human scale, as shown in Fig. 11.25. The economic advantages of small-scale model testing are evident from this photograph of the Francis turbine units at Grand Coulee Dam.

## Impulse Turbines


For high head and relatively low power (that is, low  $N_{sp}$ ) not only would a reaction turbine require too high a speed but also the high pressure in the runner would require a massive casing thickness. The impulse turbine of Fig. 11.26 is ideal for this situation. Since  $N_{sp}$  is low,  $n$  will be low and the high pressure is confined to the small nozzle, which converts the head to an atmospheric pressure jet of high velocity  $V_j$ . The jet strikes the buckets and imparts a momentum change similar to that in our control volume analysis for a moving vane in Example 3.10 or Prob. P3.51. The buckets have an elliptical split-cup shape, as in Fig. 11.26b. They are named *Pelton wheels*, after Lester A. Pelton (1829–1908), who produced the first efficient design.

In Example 3.10 we found that the force per unit mass flow on a single moving vane, or in this case a single Pelton bucket, was  $(V_j - u)(1 - \cos\beta)$ , where  $u$  is the vane velocity and  $\beta$  is the exit angle of the jet. For a single vane, as in Example 3.10, the mass flow would be  $\rho A_j(V_j - u)$ , but for a Pelton wheel, where buckets keep entering the jet and capture all the flow, the mass flow would be  $\rho Q = \rho A_j V_j$ . An alternative analysis uses the Euler turbomachine equation (11.11) and the velocity diagram of Fig. 11.26c. Noting that  $u_1 = u_2 = u$ , we substitute the absolute exit and inlet tangential velocities into the turbine power relation:


$$P = \rho Q(u_1 V_{t1} - u_2 V_{t2}) = \rho Q\{uV_j - u[u + (V_j - u)\cos\beta]\}$$

or


$$P = \rho Qu(V_j - u)(1 - \cos\beta) \quad (11.38)$$

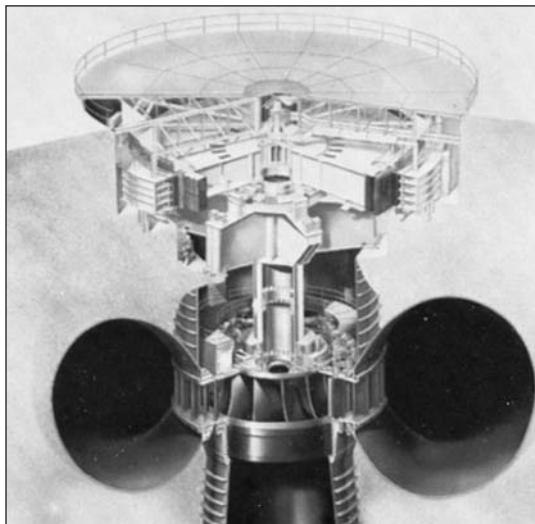


(a)

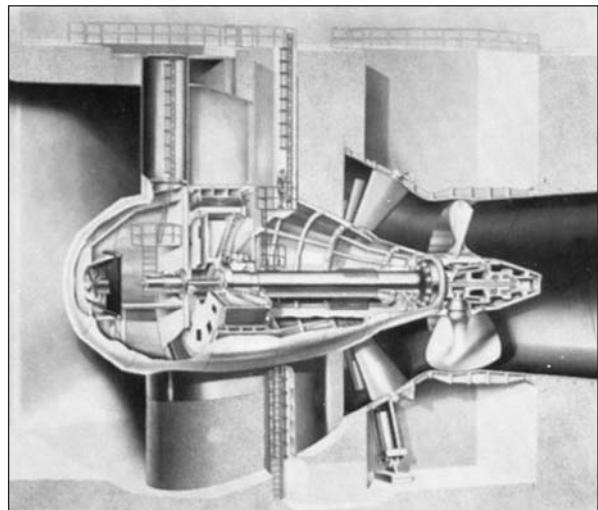

(c)

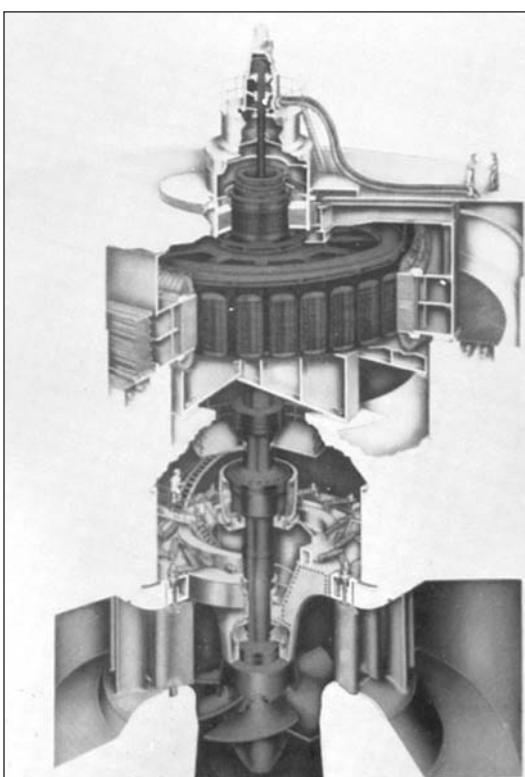


(b)

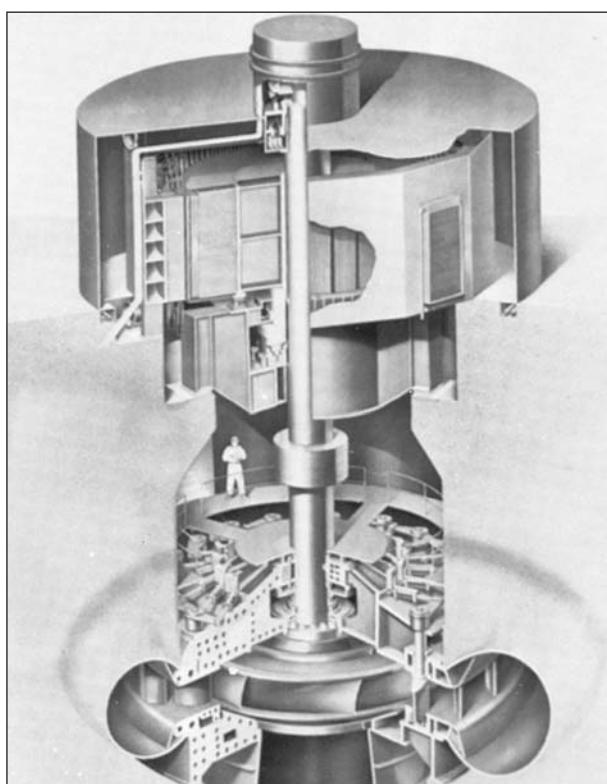


(d)

**Fig. 11.24** Large-scale turbine designs depend on available head and flow rate and operating conditions: (a) Francis (radial); (b) Kaplan (propeller); (c) bulb mounting with propeller runner; (d) reversible pump turbine with radial runner. (*Courtesy of Voith Siemens Hydro Power.*)

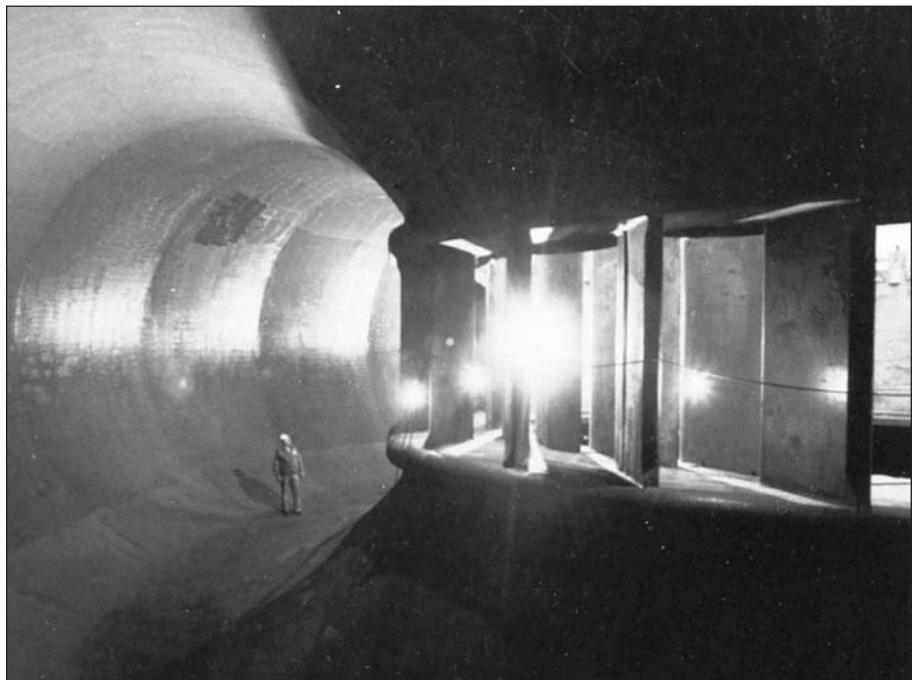

**Fig. 11.25** Interior view of the 1.1-million hp (820-MW) turbine units on the Grand Coulee Dam of the Columbia River, showing the spiral case, the outer fixed vanes (“stay ring”), and the inner adjustable vanes (“wicket gates”). (Courtesy of Voith Siemens Hydro Power.)

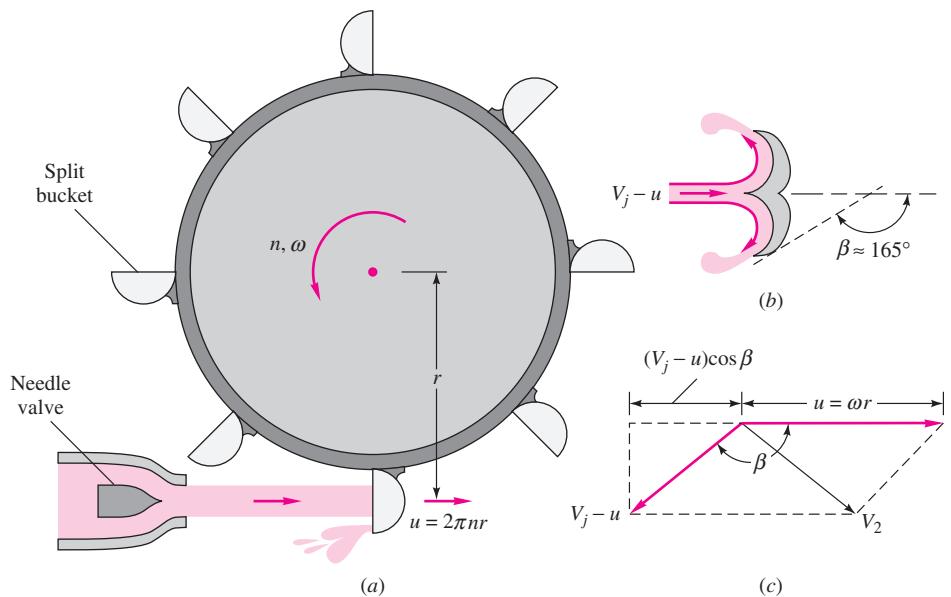

**Fig. 11.26** Impulse turbine:  
(a) side view of wheel and jet;  
(b) top view of bucket; (c) typical velocity diagram.

where  $u = 2\pi n r$  is the bucket linear velocity and  $r$  is the *pitch radius*, or distance to the jet centerline. A bucket angle  $\beta = 180^\circ$  gives maximum power but is physically impractical. In practice,  $\beta \approx 165^\circ$ , or  $1 - \cos \beta \approx 1.966$  or only 2 percent less than maximum power.

From Eq. (11.38) the theoretical power of an impulse turbine is parabolic in bucket speed  $u$  and is maximum when  $dP/du = 0$ , or

$$u^* = 2\pi n^* r = \frac{1}{2} V_j \quad (11.39)$$

For a perfect nozzle, the entire available head would be converted to jet velocity  $V_j = (2gH)^{1/2}$ . Actually, since there are 2 to 8 percent nozzle losses, a velocity coefficient  $C_v$  is used:

$$V_j = C_v (2gH)^{1/2} \quad 0.92 \leq C_v \leq 0.98 \quad (11.40)$$

By combining Eqs. (11.36) and (11.40), the theoretical impulse turbine efficiency becomes

$$\eta = 2(1 - \cos \beta)\phi(C_v - \phi) \quad (11.41)$$

where

$$\phi = \frac{u}{(2gH)^{1/2}} = \text{peripheral velocity factor}$$


Maximum efficiency occurs at  $\phi = \frac{1}{2}C_v \approx 0.47$ .

Figure 11.27 shows Eq. (11.41) plotted for an ideal turbine ( $\beta = 180^\circ$ ,  $C_v = 1.0$ ) and for typical working conditions ( $\beta = 160^\circ$ ,  $C_v = 0.94$ ). The latter case predicts  $\eta_{\max} = 85$  percent at  $\phi = 0.47$ , but the actual data for a 24-in Pelton wheel test are somewhat less efficient due to windage, mechanical friction, backsplashing, and nonuniform bucket flow. For this test  $\eta_{\max} = 80$  percent, and, generally speaking, an impulse turbine is not quite as efficient as the Francis or propeller turbines at their BEPs.


Figure 11.28 shows the optimum efficiency of the three turbine types, and the importance of the power specific speed  $N_{sp}$  as a selection tool for the designer. These efficiencies are optimum and are obtained in careful design of large machines.

The water power available to a turbine may vary due to either net head or flow rate changes, both of which are common in field installations such as hydroelectric plants. The demand for turbine power also varies from light to heavy, and the operating response is a change in the flow rate by adjustment of a gate valve or needle valve (Fig. 11.26a). As shown in Fig. 11.29, all three turbine types achieve fairly uniform efficiency as a function of the level of power being extracted. Especially effective is the adjustable-blade (Kaplan-type) propeller turbine, while the poorest is a fixed-blade propeller. The term *rated power* in Fig. 11.29 is the largest power delivery guaranteed by the manufacturer, as opposed to *normal power*, which is delivered at maximum efficiency.


For further details of design and operation of turbomachinery, the readable and interesting treatment in Ref. 33 is especially recommended. The feasibility of micro-hydropower is discussed in Refs. 27, 28, and 46.

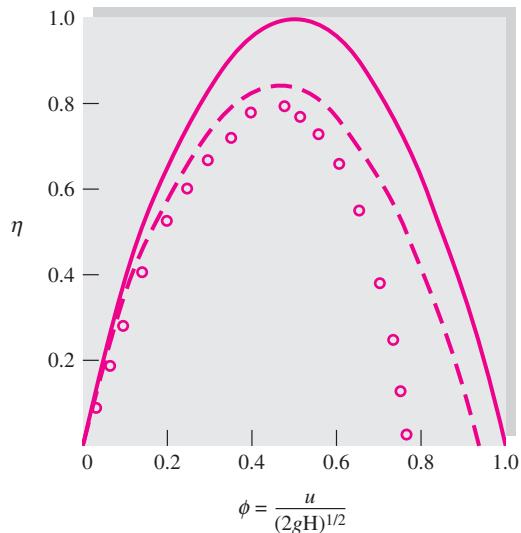

**Fig. 11.27** Efficiency of an impulse turbine calculated from Eq. (11.41): solid curve = ideal,  $\beta = 180^\circ$ ,  $C_v = 1.0$ ; dashed curve = actual,  $\beta = 160^\circ$ ,  $C_v = 0.94$ ; open circles = data, Pelton wheel, diameter = 2 ft.

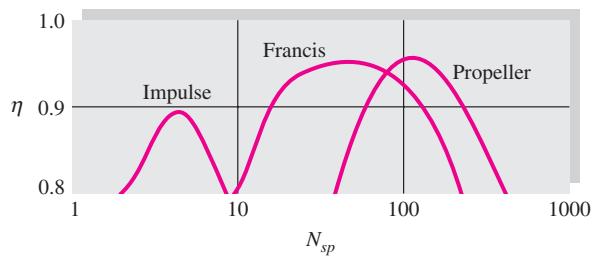

**Fig. 11.28** Optimum efficiency of turbine designs.

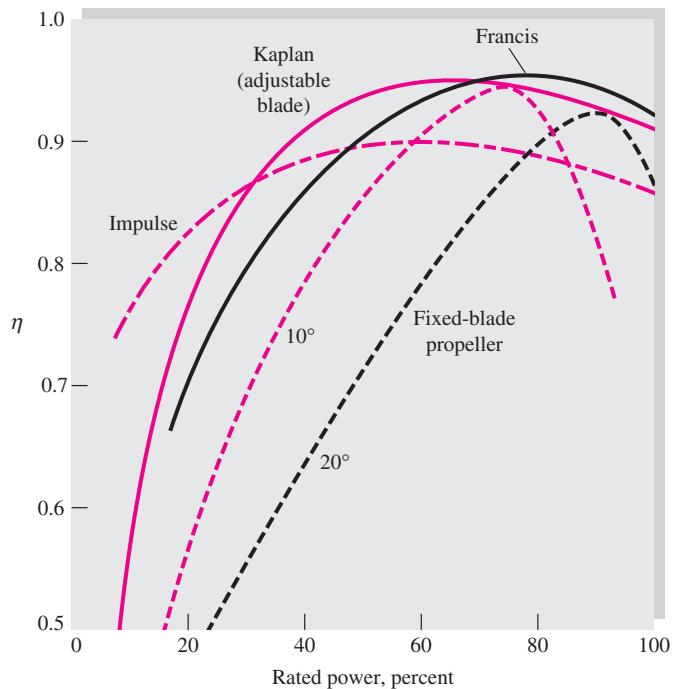

**Fig. 11.29** Efficiency versus power level for various turbine designs at constant speed and head.

**EXAMPLE 11.9**

Investigate the possibility of using (a) a Pelton wheel similar to Fig. 11.27 or (b) the Francis turbine family of Fig. 11.22d to deliver 30,000 bhp from a net head of 1200 ft.

**Solution****Part (a)**

From Fig. 11.28, the most efficient Pelton wheel occurs at about

$$N_{sp} \approx 4.5 = \frac{(r/min)(30,000 \text{ bhp})^{1/2}}{(1200 \text{ ft})^{1.25}}$$

or

$$n = 183 \text{ r/min} = 3.06 \text{ r/s}$$

From Fig. 11.27 the best operating point is

$$\phi \approx 0.47 = \frac{\pi D(3.06 \text{ r/s})}{[2(32.2)(1200)]^{1/2}}$$

or

$$D = 13.6 \text{ ft} \quad \text{Ans. (a)}$$

This Pelton wheel is perhaps a little slow and a trifle large. You could reduce  $D$  and increase  $n$  by increasing  $N_{sp}$  to, say, 6 or 7 and accepting the slight reduction in efficiency. Or you could use a double-hung, two-wheel configuration, each delivering 15,000 bhp, which changes  $D$  and  $n$  by the factor  $2^{1/2}$ :

$$\text{Double wheel: } n = (183)2^{1/2} = 260 \text{ r/min} \quad D = \frac{13.6}{2^{1/2}} = 9.6 \text{ ft} \quad \text{Ans. (a)}$$

**Part (b)**

The Francis wheel of Fig. 11.22d must have

$$N_{sp} = 29 = \frac{(r/min)(30,000 \text{ bhp})^{1/2}}{(1200 \text{ ft})^{1.25}}$$

or

$$n = 1183 \text{ r/min} = 19.7 \text{ r/s}$$

Then the optimum power coefficient is

$$C_{P*} = 2.70 = \frac{P}{\rho n^3 D^5} = \frac{30,000(550)}{(1.94)(19.7)^3 D^5}$$

or

$$D^5 = 412 \quad D = 3.33 \text{ ft} = 40 \text{ in} \quad \text{Ans. (b)}$$

This is a faster speed than normal practice, and the casing would have to withstand 1200 ft of water or about 520 lbf/in<sup>2</sup> internal pressure, but the 40-in size is extremely attractive. Francis turbines are now being operated at heads up to 1500 ft.

**Wind Turbines**

Wind energy has long been used as a source of mechanical power. The familiar four-bladed windmills of Holland, England, and the Greek islands have been used for centuries to pump water, grind grain, and saw wood. Modern research concentrates on the ability of wind turbines to generate electric power. Koepll [47] stresses the potential for propeller-type machines. Spera [49] gives a detailed discussion of the technical and economic feasibility of large-scale electric power generation by wind. See also Refs. 47, 48, 50, and 51.

Some examples of wind turbine designs are shown in Fig. 11.30. The familiar American multiblade farm windmill (Fig. 11.30a) is of low efficiency, but thousands are in use as a rugged, reliable, and inexpensive way to pump water. A more efficient design is the propeller mill in Fig. 11.30b, similar to the pioneering Smith-Putnam 1250-kW two-bladed system that operated on Grampa's Knob, 12 mi west of Rutland, Vermont, from 1941 to 1945. The Smith-Putnam design broke because of inadequate blade strength, but it withstood winds up to 115 mi/h and its efficiency was amply demonstrated [47].

The Dutch, American multiblade, and propeller mills are examples of *horizontal-axis wind turbines* (HAWTs), which are efficient but somewhat awkward in that they require extensive bracing and gear systems when combined with an electric generator. Thus a competing family of *vertical-axis wind turbines* (VAWTs) has been proposed to simplify gearing and strength requirements. Figure 11.30c shows the “eggbeater” VAWT invented by G. J. M. Darrieus in 1925. To minimize centrifugal stresses, the twisted blades of the Darrieus turbine follow a *troposkien* curve formed by a chain anchored at two points on a spinning vertical rod. The Darrieus design has the advantage that the generator and gearbox may be placed on the ground for easy access. It is not as efficient, though, as a HAWT, and, furthermore, it is not self-starting. The largest Darrieus device known to the writer is a 4.2 MW turbine, 100 m in diameter, at Cap Chat, Québec, Canada.

The four-arm Dutch-type windmill in Fig. 11.30d is found throughout Europe and the Middle East and dates back to the 9th century. In the Netherlands, they are primarily used to drain lowlands. The mill in the photo was built in 1787 to grind corn. It is now a Rhode Island tourist attraction.

### Idealized Wind Turbine Theory

The ideal, frictionless efficiency of a propeller windmill was predicted by A. Betz in 1920, using the simulation shown in Fig. 11.31. The propeller is represented by an *actuator disk*, which creates across the propeller plane a pressure discontinuity of area  $A$  and local velocity  $V$ . The wind is represented by a streamtube of approach velocity  $V_1$  and a slower downstream wake velocity  $V_2$ . The pressure rises to  $p_b$  just before the disk and drops to  $p_a$  just after, returning to free-stream pressure in the far wake. To hold the propeller rigid when it is extracting energy from the wind, there must be a leftward force  $F$  on its support, as shown.

A control-volume–horizontal-momentum relation applied between sections 1 and 2 gives


$$\sum F_x = -F = \dot{m}(V_2 - V_1)$$

A similar relation for a control volume just before and after the disk gives


$$\sum F_x = -F + (p_b - p_a)A = \dot{m}(V_a - V_b) = 0$$

Equating these two yields the propeller force:

$$F = (p_b - p_a)A = \dot{m}(V_1 - V_2) \quad (11.42)$$

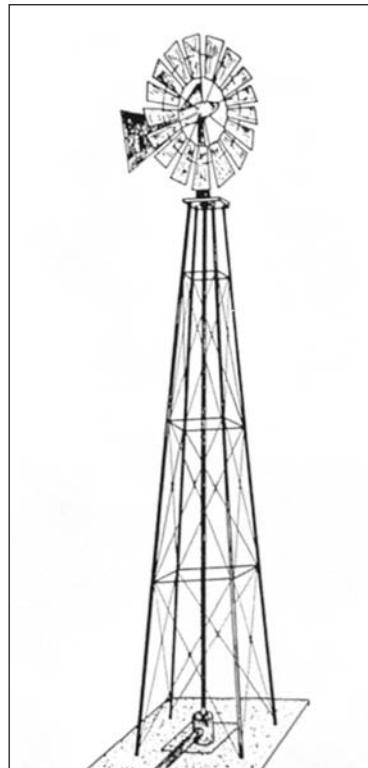

(a)

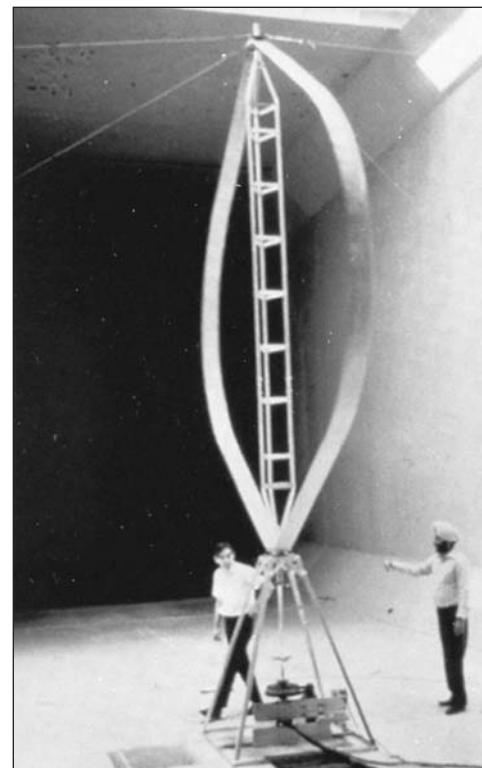

(c)




(b)



(d)

**Fig. 11.30** Wind turbine designs:  
(a) the American multiblade farm  
HAWT; (b) a modern three-blade,  
750 kW HAWT on a wind farm in  
Plouarzel, France (*courtesy of  
Hubert Chanson*); (c) The Darrieus  
VAWT (*courtesy of National  
Research Council Canada*); (d) a  
four-blade Dutch-type windmill,  
built in 1787 in Jamestown, Rhode  
Island (*courtesy of F. M. White*).

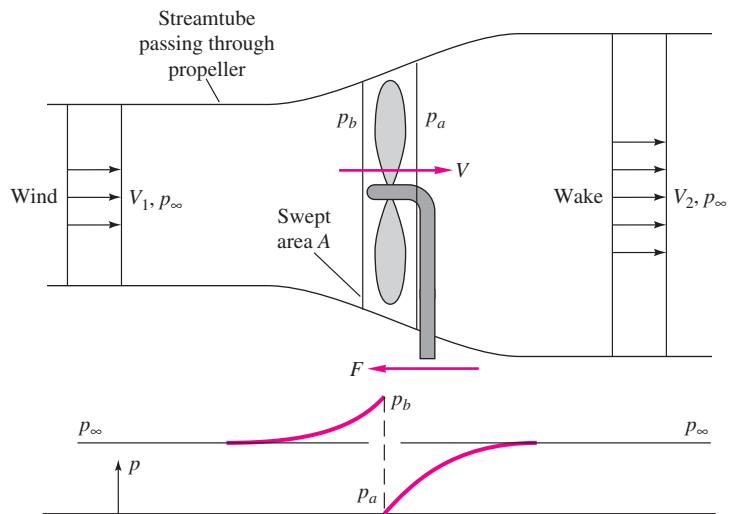

**Fig. 11.31** Idealized actuator disk and streamtube analysis of flow through a windmill.

Assuming ideal flow, the pressures can be found by applying the incompressible Bernoulli relation up to the disk:

$$\text{From 1 to } b: \quad p_\infty + \frac{1}{2}\rho V_1^2 = p_b + \frac{1}{2}\rho V^2$$

$$\text{From } a \text{ to 2:} \quad p_a + \frac{1}{2}\rho V^2 = p_\infty + \frac{1}{2}\rho V_2^2$$

Subtracting these and noting that  $\dot{m} = \rho A V$  through the propeller, we can substitute for  $p_b - p_a$  in Eq. (11.42) to obtain

$$p_b - p_a = \frac{1}{2}\rho(V_1^2 - V_2^2) = \rho V(V_1 - V_2)$$

$$\text{or} \quad V = \frac{1}{2}(V_1 + V_2) \quad (11.43)$$

Continuity and momentum thus require that the velocity  $V$  through the disk equal the average of the wind and far-wake speeds.

Finally, the power extracted by the disk can be written in terms of  $V_1$  and  $V_2$  by combining Eqs. (11.42) and (11.43):

$$P = FV = \rho A V^2 (V_1 - V_2) = \frac{1}{4}\rho A (V_1^2 - V_2^2)(V_1 + V_2) \quad (11.44)$$


For a given wind speed  $V_1$ , we can find the maximum possible power by differentiating  $P$  with respect to  $V_2$  and setting equal to zero. The result is

$$P = P_{\max} = \frac{8}{27}\rho A V_1^3 \quad \text{at } V_2 = \frac{1}{3}V_1 \quad (11.45)$$

which corresponds to  $V = 2V_1/3$  through the disk.

The maximum available power to the propeller is the mass flow through the propeller times the total kinetic energy of the wind:

$$P_{\text{avail}} = \frac{1}{2}\dot{m}V_1^2 = \frac{1}{2}\rho A V_1^3$$

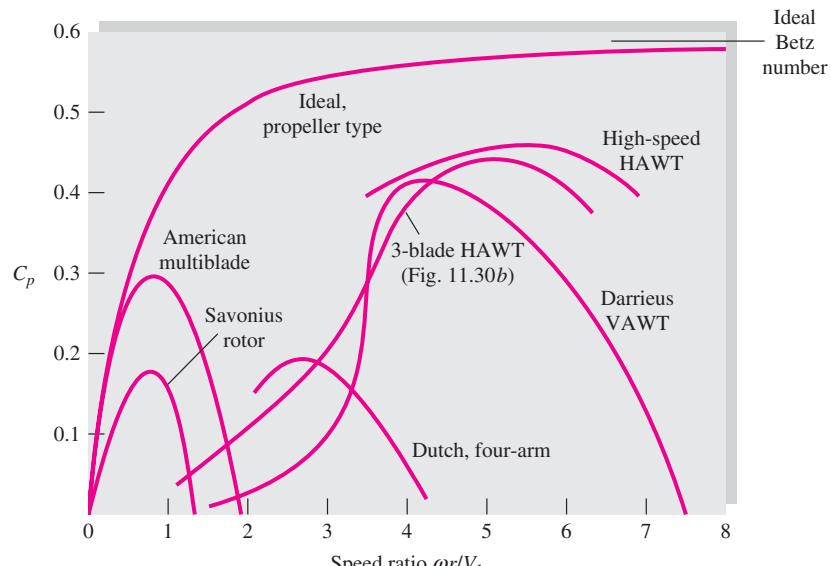

**Fig. 11.32** Estimated performance of various wind turbine designs as a function of blade-tip speed ratio. (From Ref. 53.)

Thus the maximum possible efficiency of an ideal frictionless wind turbine is usually stated in terms of the *power coefficient*:

$$C_P = \frac{P}{\frac{1}{2} \rho A V_1^3} \quad (11.46)$$


Equation (11.45) states that the total power coefficient is

$$C_{P,\max} = \frac{16}{27} = 0.593 \quad (11.47)$$

This is called the *Betz number* and serves as an ideal with which to compare the actual performance of real windmills.

Figure 11.32 shows the measured power coefficients of various wind turbine designs. The independent variable is not  $V_2/V_1$  (which is artificial and convenient only in the ideal theory) but the ratio of blade-tip speed  $\omega r$  to wind speed. Note that the tip can move much faster than the wind, a fact disturbing to the laity but familiar to engineers in the behavior of iceboats and sailing vessels. The Darrieus has the many advantages of a vertical axis but has little torque at low speeds (see Fig. 11.32) and also rotates more slowly at maximum power than a propeller, thus requiring a higher gear ratio for the generator. The Savonius rotor (Fig. 6.29b) has been suggested as a VAWT design because it produces power at very low wind speeds, but it is inefficient and susceptible to storm damage because it cannot be feathered in high winds.

As shown in Fig. 11.33, there are many areas of the world where wind energy is an attractive alternative, such as Ireland, Greenland, Iceland, Argentina, Chile, New Zealand, and Newfoundland. Robinson [53] points out that Australia, with only moderate winds, could generate half its electricity with wind turbines. Inexhaustible and available, the winds, coupled with low-cost turbine designs, promise a bright future for this alternative.

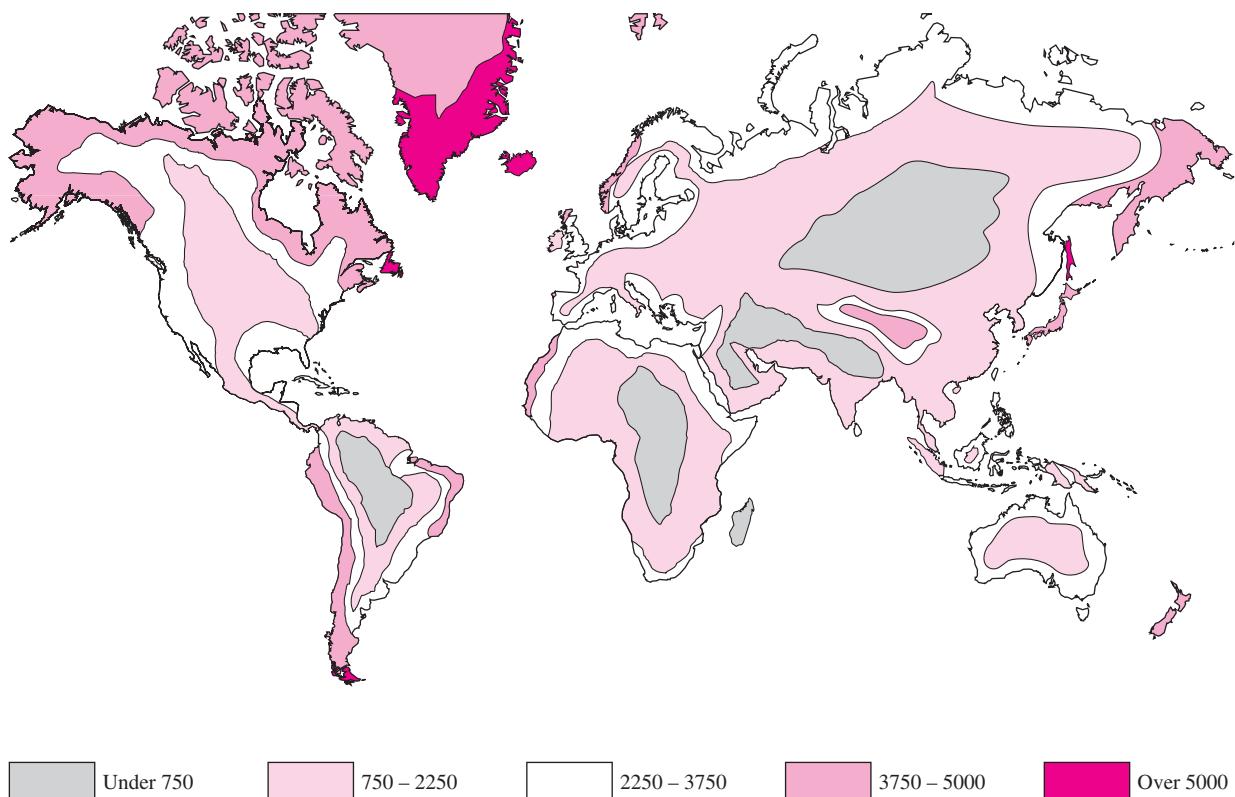

**Fig. 11.33** World availability of land-based wind energy: estimated annual electric output in kWh/kW of a wind turbine rated at 11.2 m/s (25 mi/h). (From Ref. 54.)

With fossil fuel limited, and increasing worry about global warming, the prospects for wind power are assured. Global wind speed data by Archer and Jacobsen [62] show that harnessing a modest fraction of available wind energy could supply *all* of the earth's electricity needs. No one expects that to happen, but the American Wind Energy Association [59] projects that 20 percent of America's power could be wind generated by the year 2030. After a slow start, the U.S. in 2008 became the country with the most wind power generation:

Country	Capacity in 2008, GW	Percent of world total
United States	25.2	20.8
Germany	23.9	19.8
Spain	16.8	13.9
China	12.2	10.1
India	9.6	8.0
Rest of the world	33.1	27.4
<b>TOTALS</b>	<b>120.8</b>	<b>100.0</b>

The growth in wind energy generation has been excellent, but 121 GW is still only 1 percent of total world electricity needs. Most of the future growth will probably be

land-based, because of the high costs of construction, transmission, and maintenance of offshore wind turbines. In the United States, emphasis has shifted to localized turbines, due to the high cost of transmission lines from isolated wind farms. For example, three separate large (1.5 MW) turbines are now being planned for the writer's small seaside village. In general, costs will be high, and the political debate fractious, but the future of wind energy seems bright.

## Summary

Turbomachinery design is perhaps the most practical and most active application of the principles of fluid mechanics. There are billions of pumps and turbines in use in the world, and thousands of companies are seeking improvements. This chapter has discussed both positive-displacement devices and, more extensively, rotodynamic machines. With the centrifugal pump as an example, the basic concepts of torque, power, head, flow rate, and efficiency were developed for a turbomachine. Nondimensionalization leads to the pump similarity rules and some typical dimensionless performance curves for axial and centrifugal machines. The single most useful pump parameter is the specific speed, which delineates the type of design needed. An interesting design application is the theory of pumps combined in series and in parallel.

Turbines extract energy from flowing fluids and are of two types: impulse turbines, which convert the momentum of a high-speed stream, and reaction turbines, where the pressure drop occurs within the blade passages in an internal flow. By analogy with pumps, the power specific speed is important for turbines and is used to classify them into impulse, Francis, and propeller-type designs. A special case of reaction turbine with unconfined flow is the wind turbine. Several types of windmills were discussed and their relative performances compared.

## Problems

Most of the problems herein are fairly straightforward. More difficult or open-ended assignments are labeled with an asterisk. Problems labeled with an EES icon  will benefit from the use of the Engineering Equation Solver (EES), while problems labeled with a computer icon  may require the use of a computer. The standard end-of-chapter problems P11.1 to P11.107 (categorized in the problem list here) are followed by word problems W11.1 to W11.10, comprehensive problems C11.1 to C11.8, and design project D11.1.

### Problem Distribution

Section	Topic	Problems
11.1	Introduction and classification	P11.1–P11.14
11.2	Centrifugal pump theory	P11.15–P11.21
11.3	Pump performance and similarity rules	P11.22–P11.41
11.3	Net positive-suction head	P11.42–P11.44
11.4	Specific speed: mixed- and axial-flow pumps	P11.45–P11.62
11.5	Matching pumps to system characteristics	P11.63–P11.73
11.5	Pumps in parallel or series	P11.74–P11.81
11.5	Pump instability	P11.82–P11.83
11.6	Reaction and impulse turbines	P11.84–P11.99
11.6	Wind turbines	P11.100–P11.107


### Introduction and classification

- P11.1** Describe the geometry and operation of a human peristaltic PDP that is cherished by every romantic person on earth. How do the two ventricles differ?
- P11.2** What would be the technical classification of the following turbomachines: (a) a household fan, (b) a windmill, (c) an aircraft propeller, (d) a fuel pump in a car, (e) an eductor, (f) a fluid-coupling transmission, and (g) a power plant steam turbine?
- P11.3** A PDP can deliver almost any fluid, but there is always a limiting very high viscosity for which performance will deteriorate. Can you explain the probable reason?
- P11.4** An interesting turbomachine is the *torque converter*, which combines both a pump and a turbine to change torque between two shafts. Do some research on this concept and describe it, with a report, sketches, and performance data, to the class.
- P11.5** What type of pump is shown in Fig. P11.5? How does it operate?



P11.5

- P11.6** Figure P11.6 shows two points a half-period apart in the operation of a pump. What type of pump is this [13]? How does it work? Sketch your best guess of flow rate versus time for a few cycles.

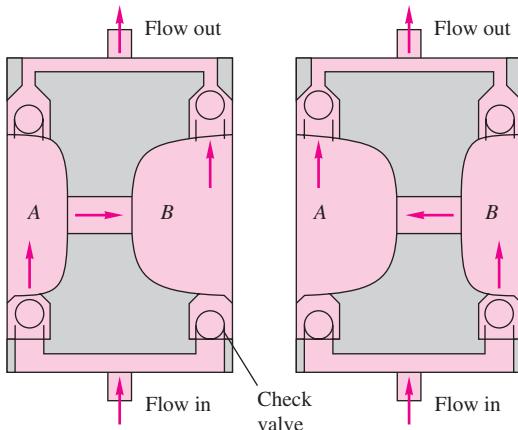

P11.6

- P11.7** A piston PDP has a 5-in diameter and a 2-in stroke and operates at 750 r/min with 92 percent volumetric efficiency. (a) What is its delivery, in gal/min? (b) If the pump delivers SAE 10W oil at 20°C against a head of 50 ft, what horsepower is required when the overall efficiency is 84 percent?

- P11.8** A centrifugal pump delivers 550 gal/min of water at 20°C when the brake horsepower is 22 and the efficiency is 71 percent. (a) Estimate the head rise in ft and the pressure rise in lbf/in<sup>2</sup>. (b) Also estimate the head rise and horsepower if instead the delivery is 550 gal/min of gasoline at 20°C.

- P11.9** Figure P11.9 shows the measured performance of the Vickers model PVQ40 piston pump when delivering SAE 10W oil at 180°F ( $\rho \approx 910 \text{ kg/m}^3$ ). Make some general observations about these data vis-à-vis Fig. 11.2 and your intuition about the behavior of piston pumps.

**P11.10** Suppose that the pump of Fig. P11.9 is run at 1100 r/min against a pressure rise of 210 bar. (a) Using the measured displacement, estimate the theoretical delivery in gal/min. From the chart, estimate (b) the actual delivery and (c) the overall efficiency.

- P11.11** A pump delivers 1500 L/min of water at 20°C against a pressure rise of 270 kPa. Kinetic and potential energy changes are negligible. If the driving motor supplies 9 kW, what is the overall efficiency?

- P11.12** In a test of the centrifugal pump shown in Fig. P11.12, the following data are taken:  $p_1 = 100 \text{ mmHg}$  (vacuum) and  $p_2 = 500 \text{ mmHg}$  (gage). The pipe diameters are  $D_1 = 12 \text{ cm}$  and  $D_2 = 5 \text{ cm}$ . The flow rate is 180 gal/min of light oil ( $\text{SG} = 0.91$ ). Estimate (a) the head developed, in meters, and (b) the input power required at 75 percent efficiency.


- P11.13** A 3.5 hp pump delivers 1140 lbf of ethylene glycol at 20°C in 12 seconds, against a head of 17 ft. Calculate the efficiency of the pump.

- P11.14** A pump delivers gasoline at 20°C and 12 m<sup>3</sup>/h. At the inlet  $p_1 = 100 \text{ kPa}$ ,  $z_1 = 1 \text{ m}$ , and  $V_1 = 2 \text{ m/s}$ . At the exit  $p_2 = 500 \text{ kPa}$ ,  $z_2 = 4 \text{ m}$ , and  $V_2 = 3 \text{ m/s}$ . How much power is required if the motor efficiency is 75 percent?


### Centrifugal pump theory

- P11.15** A lawn sprinkler can be used as a simple turbine. As shown in Fig. P11.15, flow enters normal to the paper in the center and splits evenly into  $Q/2$  and  $V_{\text{rel}}$  leaving each nozzle. The arms rotate at angular velocity  $\omega$  and do work on a shaft. Draw the velocity diagram for this turbine. Neglecting friction, find an expression for the power delivered to the shaft. Find the rotation rate for which the power is a maximum.


- P11.16** The centrifugal pump in Fig. P11.16 has  $r_1 = 15 \text{ cm}$ ,  $r_2 = 25 \text{ cm}$ ,  $b_1 = b_2 = 6 \text{ cm}$ , and rotates *clockwise* at 600 r/min. A sample blade is shown. Assume  $\alpha_1 = 90^\circ$ . Estimate the theoretical flow rate and head produced, for water at 20°C, and comment.

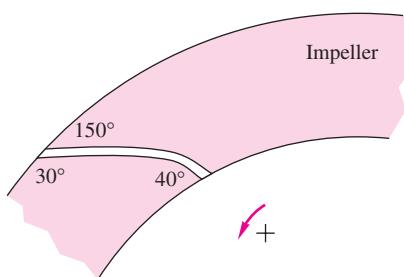


P11.16

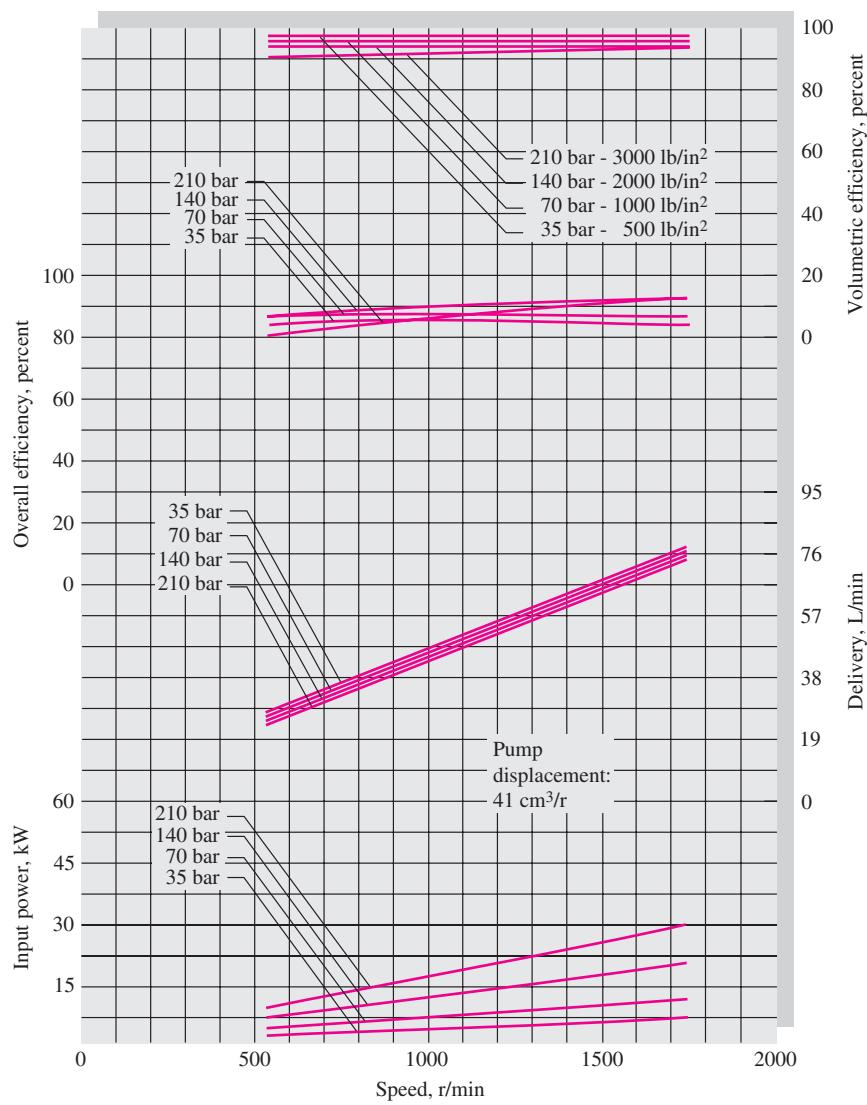

**Fig. P11.9** Performance of the model PVQ40 piston pump delivering SAE 10W oil at 180°F. (Courtesy of Vickers Inc., PDN/PACE Division.)

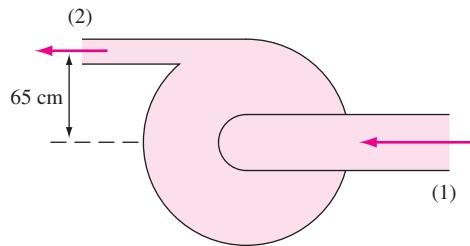


**P11.12**

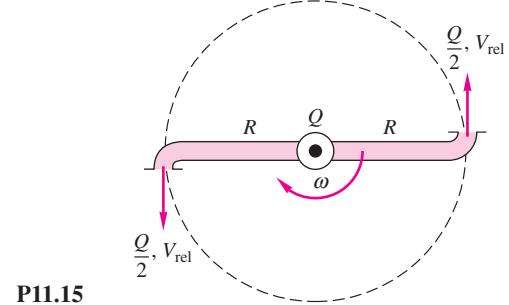

**P11.15**

- P11.17** A centrifugal pump has  $d_1 = 7$  in,  $d_2 = 13$  in,  $b_1 = 4$  in,  $b_2 = 3$  in,  $\beta_1 = 25^\circ$ , and  $\beta_2 = 40^\circ$  and rotates at 1160 r/min. If the fluid is gasoline at 20°C and the flow enters the blades radially, estimate the theoretical (a) flow rate in gal/min, (b) horsepower, and (c) head in ft.

- P11.18** A jet of velocity  $V$  strikes a vane that moves to the right at speed  $V_c$ , as in Fig. P11.18. The vane has a turning angle  $\theta$ . Derive an expression for the power delivered to the vane by the jet. For what vane speed is the power maximum?

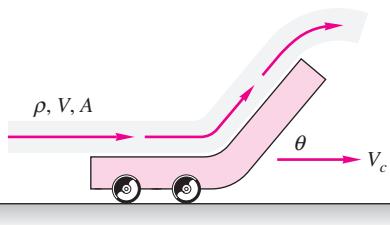


P11.18

- P11.19** A centrifugal pump has  $r_2 = 9$  in,  $b_2 = 2$  in, and  $\beta_2 = 35^\circ$  and rotates at 1060 r/min. If it generates a head of 180 ft, determine the theoretical (a) flow rate in gal/min and (b) horsepower. Assume near-radial entry flow.

- P11.20** Suppose that Prob. P11.19 is reversed into a statement of the theoretical power  $P_w \approx 153$  hp. Can you then compute the theoretical (a) flow rate and (b) head? Explain and resolve the difficulty that arises.

- P11.21** The centrifugal pump of Fig. P11.21 develops a flow rate of 4200 gal/min of gasoline at 20°C with near-radial absolute inflow. Estimate the theoretical (a) horsepower, (b) head rise, and (c) appropriate blade angle at the inner radius.

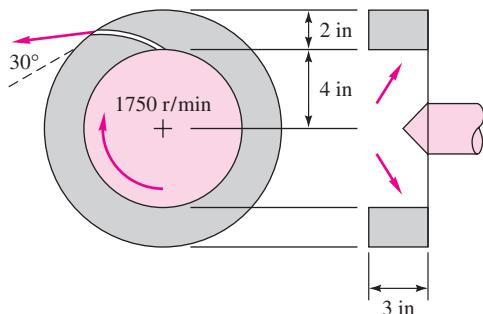

P11.21

### Pump performance and similarity rules

- P11.22** A 37-cm-diameter centrifugal pump, running at 2140 r/min with water at 20°C, produces the following performance data:

$Q, \text{ m}^3/\text{s}$	0.0	0.05	0.10	0.15	0.20	0.25	0.30
$H, \text{ m}$	105	104	102	100	95	85	67
$P, \text{ kW}$	100	115	135	171	202	228	249

(a) Determine the best efficiency point. (b) Plot  $C_H$  versus  $C_Q$ . (c) If we desire to use this same pump family to deliver 7000 gal/min of kerosene at 20°C at an input power of 400 kW, what pump speed (in r/min) and impeller size (in cm) are needed? What head will be developed?

- P11.23** At what speed, when pumping water, should the 41.5-in pump of Fig. 11.7b be run to realize (a) a head of 100 ft? For this condition, what are the resulting (b) flow rate and (c) brake horsepower?

- P11.24** Figure P11.24 shows performance data for the Taco, Inc., model 4013 pump. Compute the ratios of measured shutoff head to the ideal value  $U^2/g$  for all seven impeller sizes. Determine the average and standard deviation of this ratio and compare it to the average for the six impellers in Fig. 11.7.

- P11.25** At what speed in r/min should the 35-in-diameter pump of Fig. 11.7b be run to produce a head of 400 ft at a discharge of 20,000 gal/min? What brake horsepower will be required? Hint: Fit  $H(Q)$  to a formula.

- P11.26** Would the smallest, or the largest, of the seven Taco Inc. pumps in Fig. P11.24 be better (a) for producing, near best efficiency, a water flow rate of 600 gal/min and a head of 95 ft? (b) At what speed, in r/min, should this pump be run? (c) What input power is required?

- P11.27** The 12-in pump of Fig. P11.24 is to be scaled up in size to provide a head of 90 ft and a flow rate of 1000 gal/min at BEP. Determine the correct (a) impeller diameter, (b) speed in r/min, and (c) horsepower required. EES


- P11.28** Tests by the Byron Jackson Co. of a 14.62-in-diameter centrifugal water pump at 2134 r/min yield the following data:

$Q, \text{ ft}^3/\text{s}$	0	2	4	6	8	10
$H, \text{ ft}$	340	340	340	330	300	220
bhp	135	160	205	255	330	330

What is the BEP? What is the specific speed? Estimate the maximum discharge possible.

- P11.29** If the scaling laws are applied to the pump of Prob. P11.28 for the same impeller diameter, determine (a) the speed for which the shutoff head will be 280 ft, (b) the speed for which the BEP flow rate will be 8.0  $\text{ft}^3/\text{s}$ , and (c) the speed for which the BEP conditions will require 80 hp.

- P11.30** A pump, geometrically similar to the 38-in-diameter model in Fig. 11.7b, has a diameter of 24 in and is to develop 300 bhp at BEP when pumping gasoline (not water). Determine (a) the appropriate speed, in r/min, (b) the BEP head, and (c) the BEP flow rate.

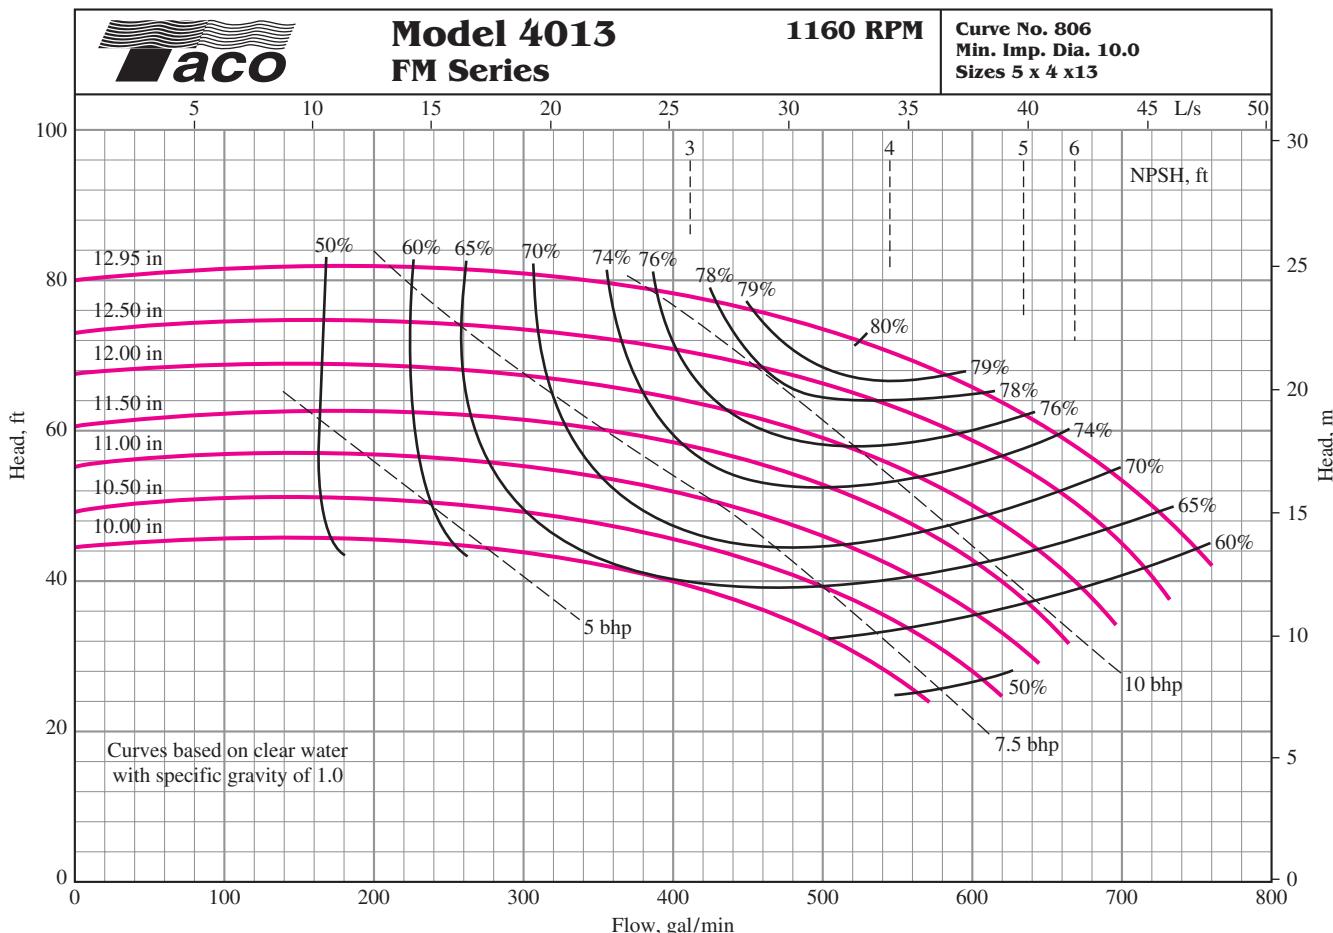

**P11.24** Performance data for a centrifugal pump. (*Courtesy of Taco, Inc., Cranston, Rhode Island.*)

- P11.31** A centrifugal pump with backward-curved blades has the following measured performance when tested with water at 20°C:

$Q$ , gal/min	0	400	800	1200	1600	2000	2400
$H$ , ft	123	115	108	101	93	81	62
$P$ , hp	30	36	40	44	47	48	46


- (a) Estimate the best efficiency point and the maximum efficiency. (b) Estimate the most efficient flow rate, and the resulting head and brake horsepower, if the diameter is doubled and the rotation speed increased by 50 percent.

- P11.32** The data of Prob. P11.31 correspond to a pump speed of 1200 r/min. (Were you able to solve Prob. P11.31 without this knowledge?) (a) Estimate the diameter of the impeller. (*Hint:* See Prob. P11.24 for a clue.)

(b) Using your estimate from part (a), calculate the BEP parameters  $C_Q^*$ ,  $C_H^*$ , and  $C_B^*$  and compare with Eqs. (11.27). (c) For what speed of this pump would the BEP head be 280 ft?

- P11.33** In Prob. P11.31, the pump BEP flow rate is 2000 gal/min, the impeller diameter is 16 in, and the speed is 1200 r/min. Scale this pump with the similarity rules to find (a) the diameter and (b) the speed that will deliver a BEP water flow rate of 4000 gal/min and a head of 180 ft. (c) What brake horsepower will be required for this new condition?

- P11.34** You are asked to consider a pump geometrically similar to the 9-in-diameter Taco pump of Fig. P11.34 to deliver 1200 gal/min at 1500 r/min. Determine the appropriate (a) impeller diameter, (b) BEP horsepower, (c) shutoff head, and (d) maximum efficiency. The fluid is kerosene, not water.

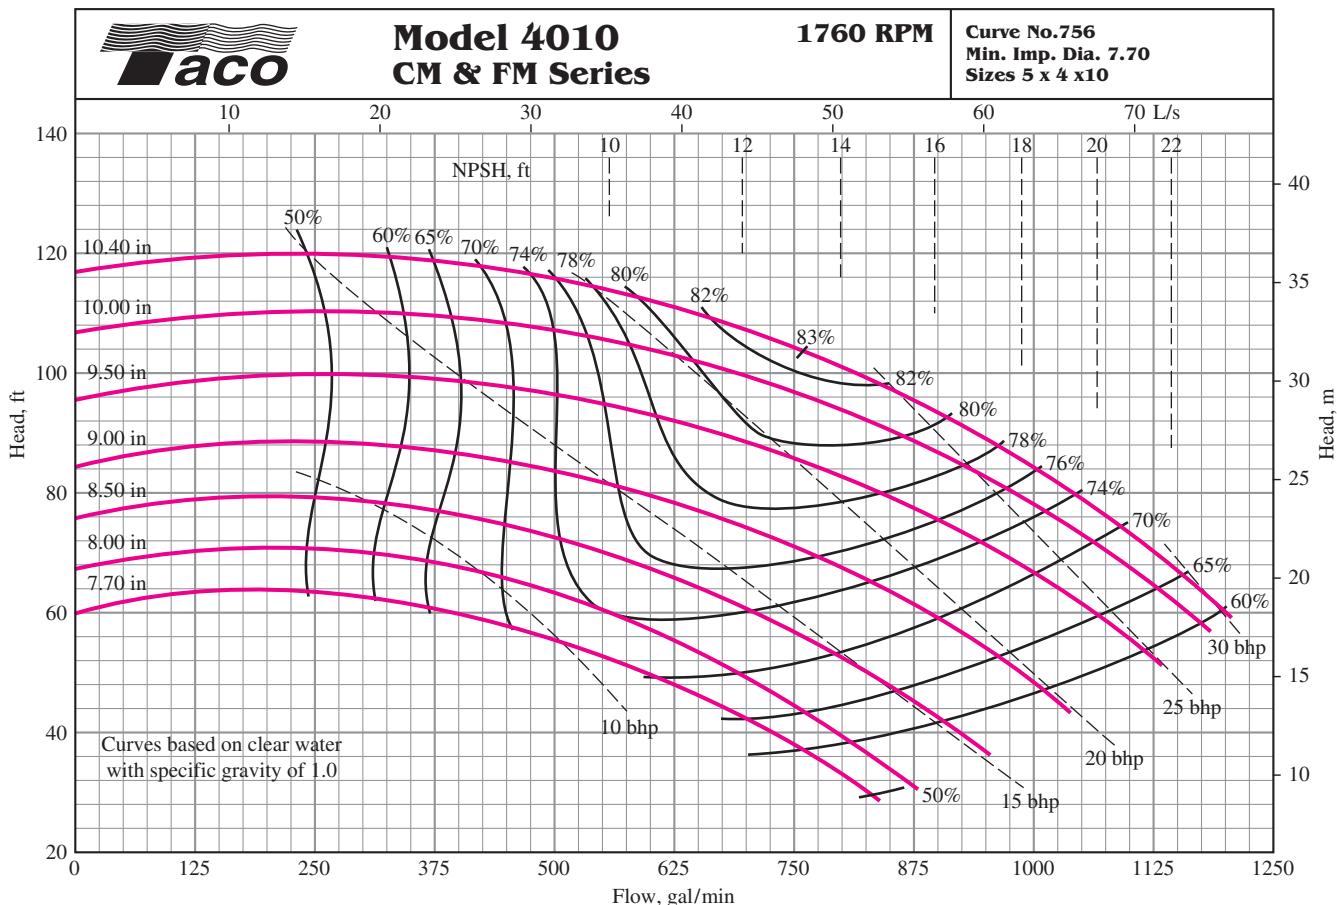

P11.34 Performance data for a family of centrifugal pump impellers. (Courtesy of Taco, Inc., Cranston, Rhode Island.)

**P11.35** An 18-in-diameter centrifugal pump, running at 880 r/min with water at 20°C, generates the following performance data:

$Q$ , gal/min	0.0	2000	4000	6000	8000	10,000
$H$ , ft	92	89	84	78	68	50
$P$ , hp	100	112	130	143	156	163

Determine (a) the BEP, (b) the maximum efficiency, and (c) the specific speed. (d) Plot the required input power versus the flow rate.

**P11.36** The pump of Prob. P11.35 has a maximum efficiency of 88 percent at 8000 gal/min. (a) Can we use this pump, at the same diameter but a different speed, to generate a BEP head of 150 ft and a BEP flow rate of 10,000 gal/min? (b) If not, what diameter is appropriate?

**P11.37** Consider the two pumps of Problems P11.28 and P11.35. If the diameters are not changed, which is better for delivering water at 3000 gal/min and a head of 400 ft? What is the appropriate rotation speed for the better pump?

**P11.38** A 6.85-in pump, running at 3500 r/min, has the following measured performance for water at 20°C:

$Q$ , gal/min	50	100	150	200	250	300	350	400	450
$H$ , ft	201	200	198	194	189	181	169	156	139
$\eta$ , %	29	50	64	72	77	80	81	79	74

(a) Estimate the horsepower at BEP. If this pump is rescaled in water to provide 20 bhp at 3000 r/min, determine the appropriate (b) impeller diameter, (c) flow rate, and (d) efficiency for this new condition.

**P11.39** The Allis-Chalmers D30LR centrifugal compressor delivers 33,000 ft<sup>3</sup>/min of SO<sub>2</sub> with a pressure change from 14.0 to 18.0 lbf/in<sup>2</sup> absolute using an 800-hp motor at 3550 r/min. What is the overall efficiency? What will the flow rate and  $\Delta p$  be at 3000 r/min? Estimate the diameter of the impeller.

**P11.40** The specific speed  $N_s$ , as defined by Eqs. (11.30), does not contain the impeller diameter. How then should we size the pump for a given  $N_s$ ? Logan [7] suggests a parameter called the *specific diameter*  $D_s$ , which is a dimensionless combination of  $Q$ ,  $gH$ , and  $D$ . (a) If  $D_s$  is proportional to  $D$ , determine its form. (b) What is the relationship, if any, of  $D_s$  to  $C_{Q^*}$ ,  $C_{H^*}$ , and  $C_{P^*}$ ? (c) Estimate  $D_s$  for the two pumps of Figs. 11.8 and 11.13.

**P11.41** It is desired to build a centrifugal pump geometrically similar to that of Prob. P11.28 to deliver 6500 gal/min of gasoline at 20°C at 1060 r/min. Estimate the resulting (a) impeller diameter, (b) head, (c) brake horsepower, and (d) maximum efficiency.

### Net positive-suction head

**P11.42** An 8-in model pump delivering 180°F water at 800 gal/min and 2400 r/min begins to cavitate when the inlet pressure and velocity are 12 lbf/in<sup>2</sup> absolute and 20 ft/s, respectively. Find the required NPSH of a prototype that is 4 times larger and runs at 1000 r/min.

**P11.43** The 28-in-diameter pump in Fig. 11.7a at 1170 r/min is used to pump water at 20°C through a piping system at 14,000 gal/min. (a) Determine the required brake horsepower. The average friction factor is 0.018. (b) If there is 65 ft of 12-in-diameter pipe upstream of the pump, how far below the surface should the pump inlet be placed to avoid cavitation?


**P11.44** The pump of Prob. P11.28 is scaled up to an 18-in diameter, operating in water at best efficiency at 1760 r/min. The measured NPSH is 16 ft, and the friction loss between the inlet and the pump is 22 ft. Will it be sufficient to avoid cavitation if the pump inlet is placed 9 ft below the surface of a sea-level reservoir?

### Specific speed: mixed- and axial-flow pumps

**P11.45** Determine the specific speeds of the seven Taco, Inc., pump impellers in Fig. P11.24. Are they appropriate for centrifugal designs? Are they approximately equal within experimental uncertainty? If not, why not?

**P11.46** The answer to Prob. P11.40 is that the dimensionless “specific diameter” takes the form  $D_s = D(gH^*)^{1/4}/Q^{*1/2}$ , evaluated at the BEP. Data collected by the author for 30 different pumps indicate, in Fig. P11.46, that  $D_s$  correlates well with specific speed  $N_s$ . Use this figure to

estimate the appropriate impeller diameter for a pump that delivers 20,000 gal/min of water and a head of 400 ft when running at 1200 r/min. Suggest a curve-fitted formula to the data. Hint: Use a hyperbolic formula.

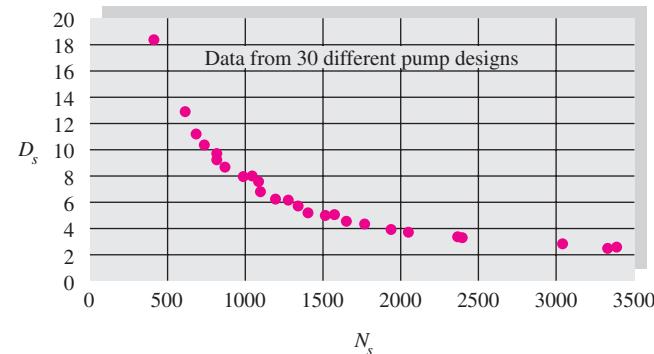


**P11.46** Specific diameter at BEP for 30 commercial pumps.

**P11.47** A pump must be designed to deliver 6 m<sup>3</sup>/s of water against a head of 28 m. The specified shaft speed is 20 r/s. What type of pump do you recommend?


**P11.48** A commercial pump runs at 1750 r/min and delivers, near BEP, a flow of 2300 gal/min and a head of 40 m. (a) What type of pump is this? (b) Estimate the impeller diameter using the data of Prob. P11.46. (c) Estimate  $C_Q^*$  and add another data point to Fig. P11.49.

**P11.49** Data collected by the author for flow coefficient at BEP for 30 different pumps are plotted versus specific speed in Fig. P11.49. Determine if the values of  $C_Q^*$  for the three pumps in Probs. P11.28, P11.35, and P11.38 also fit on this correlation. If so, suggest a curve-fitted formula for the data.

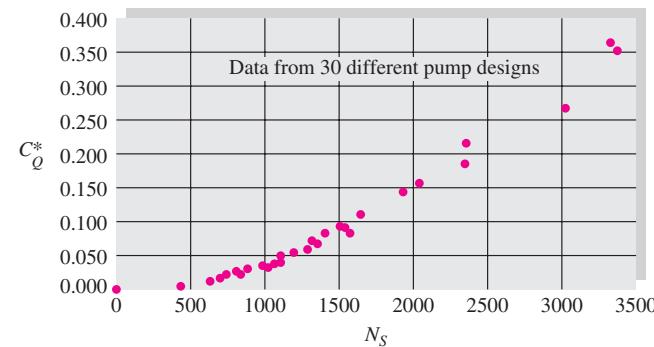

**P11.49** Flow coefficient at BEP for 30 commercial pumps.

- P11.50** Data collected by the author for power coefficient at BEP for 30 different pumps are plotted versus specific speed in Fig. P11.50. Determine if the values of  $C_p^*$  for the three pumps in Prob. P11.49 also fit on this correlation. If so, suggest a curve-fitted formula for the data.

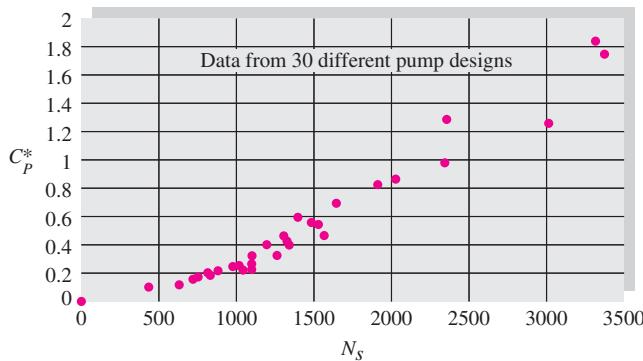

**P11.50** Power coefficient at BEP for 30 commercial pumps.

- P11.51** An axial-flow blower delivers  $40 \text{ ft}^3/\text{s}$  of air that enters at  $20^\circ\text{C}$  and 1 atm. The flow passage has a 10-in outer radius and an 8-in inner radius. Blade angles are  $\alpha_1 = 60^\circ$  and  $\beta_2 = 70^\circ$ , and the rotor runs at 1800 r/min. For the first stage compute (a) the head rise and (b) the power required.

- P11.52** An axial-flow fan operates in sea-level air at 1200 r/min and has a blade-tip diameter of 1 m and a root diameter of 80 cm. The inlet angles are  $\alpha_1 = 55^\circ$  and  $\beta_1 = 30^\circ$ , while at the outlet  $\beta_2 = 60^\circ$ . Estimate the theoretical values of the (a) flow rate, (b) horsepower, and (c) outlet angle  $\alpha_2$ .

- P11.53** Figure P11.46 is an example of a centrifugal pump correlation, where  $D_s$  is defined in the problem. Logan and Roy [3] suggest the following correlation for axial-flow pumps and fans:

$$D_s \approx \frac{130}{N_s^{0.485}} \quad \text{for } N_s > 8000$$

where  $N_s$  is the *dimensional* specific speed, Eq. (11.30b). Use this correlation to find the appropriate size for a fan that delivers  $24,000 \text{ ft}^3/\text{min}$  of air at sea-level conditions when running at 1620 r/min with a pressure rise of 2 inches of water. Hint: Express the fan head in feet of air, not feet of water.

- P11.54** It is desired to pump  $50 \text{ ft}^3/\text{s}$  of water at a speed of 22 r/s, against a head of 80 ft. (a) What type of pump would you recommend? Estimate (b) the required impeller diameter and (c) the brake horsepower.

- P11.55** Suppose that the axial-flow pump of Fig. 11.13, with  $D = 18 \text{ in}$ , runs at 1800 r/min. (a) Could it efficiently pump 25,000 gal/min of water? (b) If so, what head would

result? (c) If a head of 120 ft is desired, what values of  $D$  and  $n$  would be better?

- P11.56** A pump is needed to deliver 40,000 gal/min of gasoline at  $20^\circ\text{C}$  against a head of 90 ft. Find the impeller size, speed, and brake horsepower needed to use the pump families of (a) Fig. 11.8 and (b) Fig. 11.13. Which is the better design?

- P11.57** Performance data for a 21-in-diameter air blower running at 3550 r/min are as follows:


$\Delta p$ , in $\text{H}_2\text{O}$	29	30	28	21	10
$Q$ , $\text{ft}^3/\text{min}$	500	1000	2000	3000	4000
bhp	6	8	12	18	25

Note the fictitious expression of pressure rise in terms of water rather than air. What is the specific speed? How does the performance compare with Fig. 11.8? What are  $C_Q^*$ ,  $C_H^*$ , and  $C_B^*$ ?

- P11.58** Aircraft propeller specialists claim that dimensionless propeller data, when plotted as  $(C_P/J^2)$  versus  $(C_P/J^2)$ , form a nearly straight line,  $y = mx + b$ . (a) Test this hypothesis for the data of Fig. 11.16, in the high efficiency range  $J = V/(nD)$  equal to 0.6, 0.7, and 0.8. (b) If successful, try this straight line to predict the rotation rate, in r/min, for a propeller with  $D = 5 \text{ ft}$ ,  $P = 30 \text{ hp}$ ,  $T = 95 \text{ lbf}$ , and  $V = 95 \text{ mi/h}$ , for sea level standard conditions. Comment.

- P11.59** Suppose it is desired to deliver  $700 \text{ ft}^3/\text{min}$  of propane gas (molecular weight = 44.06) at 1 atm and  $20^\circ\text{C}$  with a single-stage pressure rise of 8.0 in  $\text{H}_2\text{O}$ . Determine the appropriate size and speed for using the pump families of (a) Prob. P11.57 and (b) Fig. 11.13. Which is the better design?

- P11.60** Performance curves for a certain free propeller, comparable to Fig. 11.16, can be plotted as shown in Fig. P11.60, for thrust  $T$  versus speed  $V$  for constant power  $P$ . (a) What is striking, at least to the writer, about these curves? (b) Can you deduce this behavior by rearranging, or replotting, the data of Fig. 11.16?

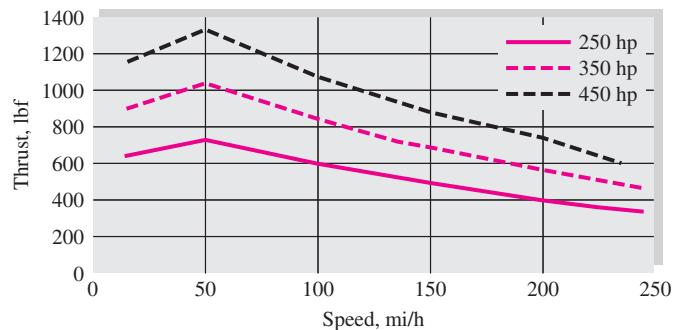

**P11.60**

**P11.61** A mine ventilation fan, running at 295 r/min, delivers 500  $\text{m}^3/\text{s}$  of sea-level air with a pressure rise of 1100 Pa. Is this fan axial, centrifugal, or mixed? Estimate its diameter in ft. If the flow rate is increased 50 percent for the same diameter, by what percentage will the pressure rise change?

**P11.62** The actual mine ventilation fan discussed in Prob. P11.61 had a diameter of 20 ft [Ref. 20, p. 339]. What would be the proper diameter for the pump family of Fig. 11.14 to provide 500  $\text{m}^3/\text{s}$  at 295 r/min and BEP? What would be the resulting pressure rise in Pa?

### Matching pumps to system characteristics

**P11.63** A good curve-fit to the head vs. flow for the 32-in pump in Fig. 11.7a is


$$H \text{ (in ft)} \approx 500 - (2.9E-7) Q^2 \quad Q \text{ in gal/min}$$

Assume the same rotation rate, 1170 r/min, and estimate the flow rate this pump will provide to deliver water from a reservoir, through 900 ft of 12-in pipe, to a point 150 ft above the reservoir surface. Assume a friction factor  $f = 0.019$ .

**P11.64** A leaf blower is essentially a centrifugal impeller exiting to a tube. Suppose that the tube is smooth PVC pipe, 4 ft long, with a diameter of 2.5 in. The desired exit velocity is 73 mi/h in sea-level standard air. If we use the pump family of Eqs. (11.27) to drive the blower, what approximate (a) diameter and (b) rotation speed are appropriate? (c) Is this a good design?

\***P11.65** An 11.5-in diameter centrifugal pump, running at 1750 rev/min, delivers 850 gal/min and a head of 105 ft at best efficiency (82 percent). (a) Can this pump operate efficiently when delivering water at 20°C through 200 m of 10-cm-diameter smooth pipe? Neglect minor losses. (b) If your answer to (a) is negative, can the speed  $n$  be changed to operate efficiently? (c) If your answer to (b) is also negative, can the impeller diameter be changed to operate efficiently and still run at 1750 rev/min?

**P11.66** It is proposed to run the pump of Prob. P11.35 at 880 r/min to pump water at 20°C through the system in Fig. P11.66. The pipe is 20-cm-diameter commercial steel. What flow rate in  $\text{ft}^3/\text{min}$  will result? Is this an efficient application?

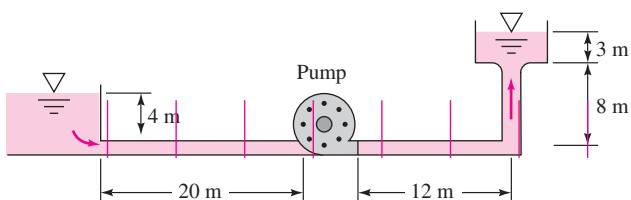


P11.66

**P11.67** The pump of Prob. P11.35, running at 880 r/min, is to pump water at 20°C through 75 m of horizontal galvanized iron pipe. All other system losses are neglected. Determine the flow rate and input power for (a) pipe diameter = 20 cm and (b) the pipe diameter found to yield maximum pump efficiency.

**P11.68** Suppose that we use the axial-flow pump of Fig. 11.13 to drive the leaf blower of Prob. P11.64. What approximate (a) diameter and (b) rotation speed are appropriate? (c) Is this a good design?

**P11.69** The pump of Prob. P11.38, running at 3500 r/min, is used to deliver water at 20°C through 600 ft of cast iron pipe to an elevation 100 ft higher. Determine (a) the proper pipe diameter for BEP operation and (b) the flow rate that results if the pipe diameter is 3 in.

**P11.70** The pump of Prob. P11.28, operating at 2134 r/min, is used with 20°C water in the system of Fig. P11.70. (a) If it is operating at BEP, what is the proper elevation  $z_2$ ? (b) If  $z_2 = 225$  ft, what is the flow rate if  $d = 8$  in.?

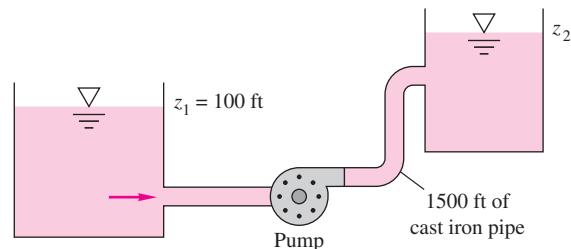

P11.70

**P11.71** The pump of Prob. P11.38, running at 3500 r/min, delivers water at 20°C through 7200 ft of horizontal 5-in-diameter commercial steel pipe. There are a sharp entrance, sharp exit, four 90° elbows, and a gate valve. Estimate (a) the flow rate if the valve is wide open and (b) the valve closing percentage that causes the pump to operate at BEP. (c) If the latter condition holds continuously for 1 year, estimate the energy cost at 10 ¢/kWh.

**P11.72** Performance data for a small commercial pump are as follows:

$Q, \text{ gal/min}$	0	10	20	30	40	50	60	70
$H, \text{ ft}$	75	75	74	72	68	62	47	24

This pump supplies 20°C water to a horizontal  $\frac{5}{8}$ -in-diameter garden hose ( $\epsilon \approx 0.01$  in) that is 50 ft long. Estimate (a) the flow rate and (b) the hose diameter that would cause the pump to operate at BEP.


\***P11.73** The Cessna 172 aircraft has a wing area of 174  $\text{ft}^2$ , an aspect ratio of 7.38, and a basic drag coefficient  $C_{D\infty} = 0.037$ . Its propeller, whose data is shown in Fig. 11.16, has a diameter of 6.25 ft. If the plane weighs 2300 lbf

and flies at 180 ft/s at 1500 m standard altitude, estimate (a) the appropriate propeller speed, in rev/min and (b) the power required. Is the propeller efficient? Hint: The efficiency is good, but not best.

### Pumps in parallel or series

**P11.74** The 32-in pump in Fig. 11.7a is used at 1170 r/min in a system whose head curve is  $H_s$  (ft) = 100 + 1.5 $Q^2$ , with  $Q$  in thousands of gallons of water per minute. Find the discharge and brake horsepower required for (a) one pump, (b) two pumps in parallel, and (c) two pumps in series. Which configuration is best?

**P11.75** Two 35-in pumps from Fig. 11.7b are installed in parallel for the system of Fig. P11.75. Neglect minor losses. For water at 20°C, estimate the flow rate and power required if (a) both pumps are running and (b) one pump is shut off and isolated.

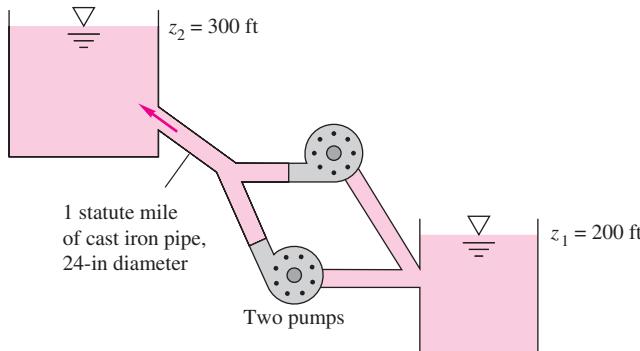

P11.75

**P11.76** Two 32-in pumps from Fig. 11.7a are combined in parallel to deliver water at 60°F through 1500 ft of horizontal pipe. If  $f = 0.025$ , what pipe diameter will ensure a flow rate of 35,000 gal/min for  $n = 1170$  r/min?

**P11.77** Two pumps of the type tested in Prob. P11.22 are to be used at 2140 r/min to pump water at 20°C vertically upward through 100 m of commercial steel pipe. Should they be in series or in parallel? What is the proper pipe diameter for most efficient operation?

**P11.78** Consider the axial-flow pump of Fig. 11.13, running at 4200 r/min, with an impeller diameter of 36 in. The fluid is propane gas (molecular weight 44.06). (a) How many pumps in series are needed to increase the gas pressure from 1 atm to 2 atm? (b) Estimate the mass flow of gas.


**P11.79** Two 32-in pumps from Fig. 11.7a are to be used in series at 1170 r/min to lift water through 500 ft of vertical cast iron pipe. What should the pipe diameter be for most efficient operation? Neglect minor losses.

**P11.80** Determine if either (a) the smallest or (b) the largest of the seven Taco pumps in Fig. P11.24, running in series at 1160 r/min, can efficiently pump water at 20°C through 1 km of horizontal 12-cm-diameter commercial steel pipe.

**P11.81** Reconsider the system of Fig. P6.62. Use the Byron Jackson pump of Prob. P11.28 running at 2134 r/min, no scaling, to drive the flow. Determine the resulting flow rate between the reservoirs. What is the pump efficiency?


### Pump instability

**P11.82** The S-shaped head-versus-flow curve in Fig. P11.82 occurs in some axial-flow pumps. Explain how a fairly flat system loss curve might cause instabilities in the operation of the pump. How might we avoid instability?

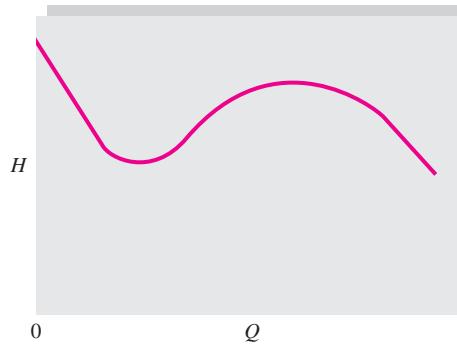

P11.82

**P11.83** The low-shutoff head-versus-flow curve in Fig. P11.83 occurs in some centrifugal pumps. Explain how a fairly flat system loss curve might cause instabilities in the operation of the pump. What additional vexation occurs when two of these pumps are in parallel? How might we avoid instability?

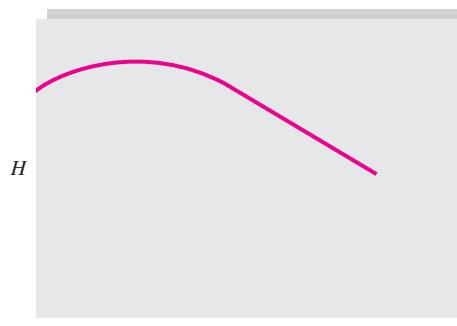

P11.83


### Reaction and impulse turbines

**P11.84** Turbines are to be installed where the net head is 400 ft and the flow rate 250,000 gal/min. Discuss the type, number, and size of turbine that might be selected if the generator selected is (a) 48-pole, 60-cycle ( $n = 150$  r/min) and (b) 8-pole ( $n = 900$  r/min). Why are at least two turbines desirable from a planning point of view?

**P11.85** For a high-flow site with a head of 45 ft, it is desired to design a single 7-ft-diameter turbine that develops 4000 bhp at a speed of 360 r/min and 88-percent efficiency. It is decided first to test a geometrically similar model of diameter 1 ft, running at 1180 r/min. (a) What likely type of turbine is in the prototype? What are the appropriate (b) head and (c) flow rate for the model test? (d) Estimate the power expected to be delivered by the model turbine.

**P11.86** The Tupperware hydroelectric plant on the Blackstone River has four 36-in-diameter turbines, each providing 447 kW at 200 r/min and 205 ft<sup>3</sup>/s for a head of 30 ft. What type of turbines are these? How does their performance compare with Fig. 11.22?

**P11.87** An idealized radial turbine is shown in Fig. P11.87. The absolute flow enters at 30° and leaves radially inward. The flow rate is 3.5 m<sup>3</sup>/s of water at 20°C. The blade thickness is constant at 10 cm. Compute the theoretical power developed.

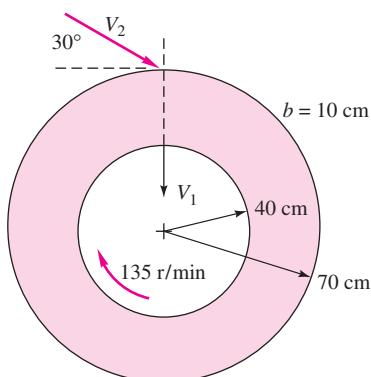

P11.87

**P11.88** Performance data for a very small ( $D = 8.25$  cm) model water turbine, operating with an available head of 49 ft, are as follows:


	18.7	18.7	18.5	18.3	17.6	16.7	15.1	11.5
RPM	0	500	1000	1500	2000	2500	3000	3500
$\eta$	0	14%	27%	38%	50%	65%	61%	11%

(a) What type of turbine is this likely to be? (b) What is so different about these data compared to the dimensionless performance plot in Fig. 11.22d? Suppose it is

desired to use a geometrically similar turbine to serve where the available head and flow are 150 ft and 6.7 ft<sup>3</sup>/s, respectively. Estimate the most efficient (c) turbine diameter, (d) rotation speed, and (e) horsepower.

**P11.89** A Pelton wheel of 12-ft pitch diameter operates under a net head of 2000 ft. Estimate the speed, power output, and flow rate for best efficiency if the nozzle exit diameter is 4 in.

**P11.90** An idealized radial turbine is shown in Fig. P11.90. The absolute flow enters at 25° with the blade angles as shown. The flow rate is 8 m<sup>3</sup>/s of water at 20°C. The blade thickness is constant at 20 cm. Compute the theoretical power developed.

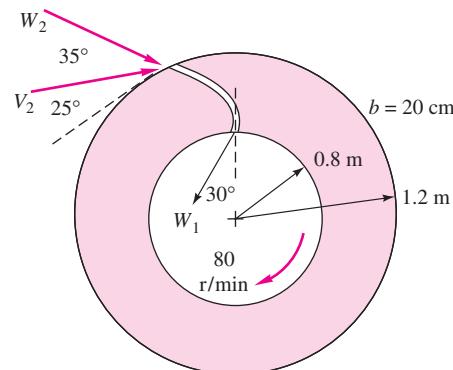


P11.90

**P11.91** The flow through an axial-flow turbine can be idealized by modifying the stator-rotor diagrams of Fig. 11.12 for energy absorption. Sketch a suitable blade and flow arrangement and the associated velocity vector diagrams.

**P11.92** A dam on a river is being sited for a hydraulic turbine. The flow rate is 1500 m<sup>3</sup>/h, the available head is 24 m, and the turbine speed is to be 480 r/min. Discuss the estimated turbine size and feasibility for (a) a Francis turbine and (b) a Pelton wheel.


**P11.93** Figure P11.93 shows a cutaway of a cross-flow or "Banki" turbine [55], which resembles a squirrel cage with slotted curved blades. The flow enters at about 2 o'clock and passes through the center and then again through the blades, leaving at about 8 o'clock. Report to the class on the operation and advantages of this design, including idealized velocity vector diagrams.

**P11.94** A simple cross-flow turbine, Fig. P11.93, was constructed and tested at the University of Rhode Island. The blades were made of PVC pipe cut lengthwise into three 120°-arc pieces. When it was tested in water at a head of 5.3 ft and a flow rate of 630 gal/min, the measured power output was 0.6 hp. Estimate (a) the efficiency and (b) the power specific speed if  $n = 200$  rev/min.

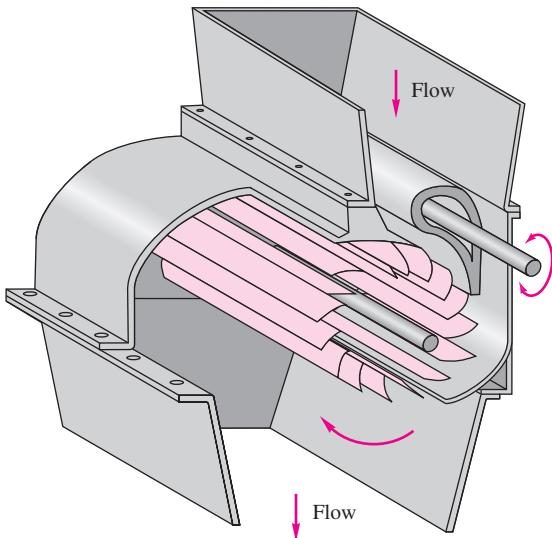

P11.93

**\*P11.95** One can make a theoretical estimate of the proper diameter for a penstock in an impulse turbine installation, as in Fig. P11.95. Let  $L$  and  $H$  be known, and let the turbine performance be idealized by Eqs. (11.38) and (11.39). Account for friction loss  $h_f$  in the penstock, but neglect minor losses. Show that (a) the maximum power is generated when  $h_f = H/3$ , (b) the optimum jet velocity is  $(4gH/3)^{1/2}$ , and (c) the best nozzle diameter is  $D_j = [D^5/(2fL)]^{1/4}$ , where  $f$  is the pipe friction factor.

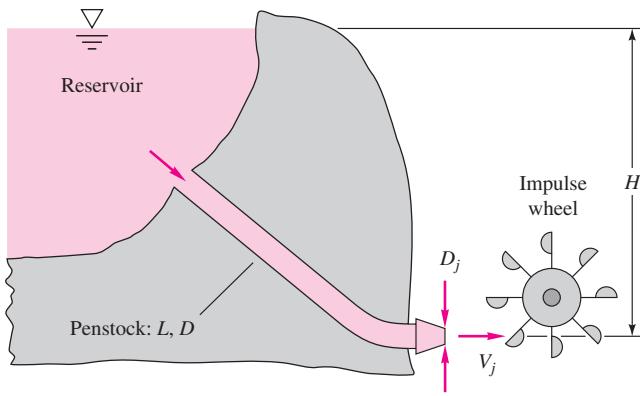


P11.95

**P11.96** Apply the results of Prob. P11.95 to determine the optimum (a) penstock diameter and (b) nozzle diameter for a head of 800 ft and a flow rate of 40,000 gal/min with a commercial steel penstock of length 1500 ft.

**P11.97** Consider the following nonoptimum version of Prob. EES P11.95:  $H = 450$  m,  $L = 5$  km,  $D = 1.2$  m,  $D_j = 20$  cm.

The penstock is concrete,  $\epsilon = 1$  mm. The impulse wheel diameter is 3.2 m. Estimate (a) the power generated by the wheel at 80 percent efficiency and (b) the best speed of the wheel in r/min. Neglect minor losses.

**P11.98** Francis and Kaplan turbines are often provided with *draft tubes*, which lead the exit flow into the tailwater region, as in Fig. P11.98. Explain at least two advantages in using a draft tube.

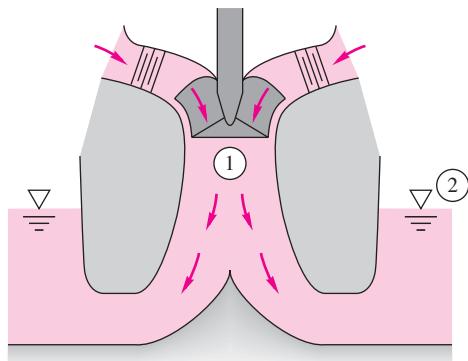

P11.98

**P11.99** Turbines can also cavitate when the pressure at point 1 in Fig. P11.98 drops too low. With NPSH defined by Eq. (11.20), the empirical criterion given by Wislicenus [4] for cavitation is

$$N_{ss} = \frac{(r/\text{min})(\text{gal}/\text{min})^{1/2}}{[\text{NPSH } (\text{ft})]^{3/4}} \geq 11,000$$

Use this criterion to compute how high  $z_1 - z_2$ , the impeller eye in Fig. P11.98, can be placed for a Francis turbine with a head of 300 ft,  $N_{sp} = 40$ , and  $p_a = 14$  lbf/in<sup>2</sup> absolute before cavitation occurs in 60°F water.

### Wind turbines

**P11.100** Consider the large wind turbine in the chapter-opener photo. Pretend that you do not know that 5M means five megawatts. Use the meager photo-caption data plus your knowledge of wind turbine theory and experiment to estimate the power delivered by the turbine for a rated wind speed of 12 m/s and a rotation rate of 10 rev/min.

**P11.101** A Darrieus VAWT in operation in Lumsden, Saskatchewan, that is 32 ft high and 20 ft in diameter sweeps out an area of 432 ft<sup>2</sup>. Estimate (a) the maximum power and (b) the rotor speed if it is operating in 16 mi/h winds.

**P11.102** An American 6-ft diameter multiblade HAWT is used to pump water to a height of 10 ft through 3-in-diameter cast iron pipe. If the winds are 12 mi/h, estimate the rate of water flow in gal/min.

**P11.103** The new three-blade HAWT municipal wind turbine in Portsmouth, RI has a tower 213 ft high, with a turbine diameter of 252 ft. The newspaper rates the turbine at 1.5 MW. (a) What wind velocity, and turbine rotation speed, would generate this power? (b) Estimate the annual power production for a steady wind speed of 12 mi/h.

**P11.104** The controversial Cape Cod Wind Project proposes 130 large wind turbines in Nantucket Sound, intended to provide 75 percent of the electric power needs of Cape Cod and the Islands. The turbine diameter is 328 ft. For an average wind velocity of 14 mi/h, what are the best rotation rate and total power output estimates for (a) a HAWT and (b) a VAWT?

**P11.105** In 2007, a wind-powered-vehicle contest, held in North Holland [64], was won with a design by students at the University of Stuttgart. A schematic of the winning three-wheeler is shown in Fig. P11.105. It is powered by a shrouded wind turbine, not a propeller, and, unlike a sailboat, can move directly into the wind. (a) How does it work? (b) What if the wind is off to the side? (c) Cite some design questions you might have.


**P11.106** Analyze the wind-powered-vehicle of Fig. P11.105 with the following data: turbine diameter  $D = 6$  ft, power coefficient (Fig. 11.32) = 0.3, vehicle  $C_{DA} = 4.5 \text{ ft}^2$ , and turbine rotation 240 r/min. The vehicle moves directly into a head wind,  $W = 25 \text{ mi/h}$ . The wind backward thrust on the turbine is approximately  $T \approx C_T(\rho/2)V_{\text{rel}}^2A_{\text{turbine}}$ , where  $V_{\text{rel}}$  is the air velocity relative to the turbine, and  $C_T \approx 0.7$ . Eighty percent of the turbine power is delivered

by gears to the wheels, to propel the vehicle. Estimate the sea-level vehicle velocity  $V$ , in mi/h.


**P11.107** Figure 11.32 showed the typical *power* performance of a wind turbine. The wind also causes a *thrust* force that must be resisted by the structure. The thrust coefficient  $C_T$  of a wind turbine may be defined as follows:

$$C_T = \frac{\text{Thrust force}}{(\rho/2)AV^2} = \frac{T}{(\rho/2)[(\pi/4)D^2]V^2}$$

Values of  $C_T$  for a typical horizontal-axis wind turbine are shown in Fig. P11.107. The abscissa is the same as in Fig. 11.32. Consider the turbine of Prob. P11.103. If the wind is 35 mi/h and the rotation rate 24 r/min, estimate the bending moment about the tower base.

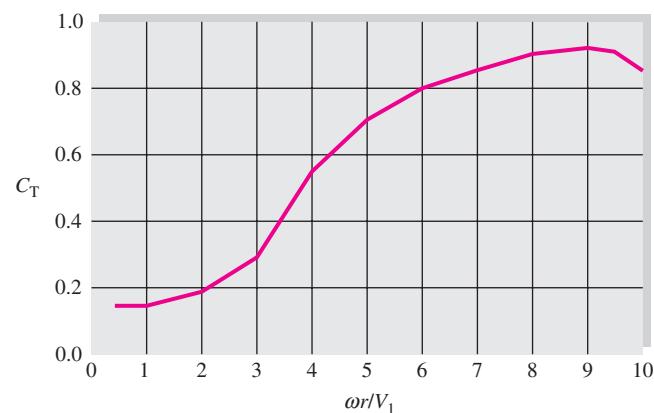

**P11.107** Thrust coefficient for a typical HAWT.

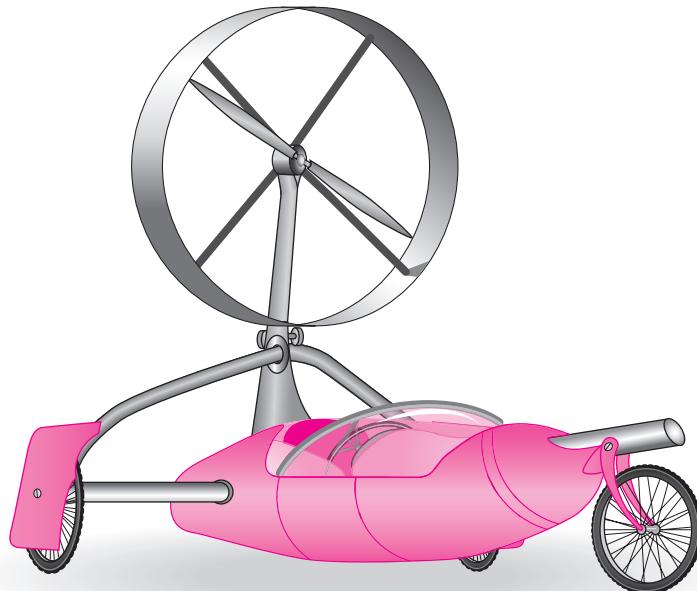

**P11.105**

## Word Problems

- W11.1** We know that an enclosed rotating bladed impeller will impart energy to a fluid, usually in the form of a pressure rise, but how does it actually happen? Discuss, with sketches, the physical mechanisms through which an impeller actually transfers energy to a fluid.
- W11.2** Dynamic pumps (as opposed to PDPs) have difficulty moving highly viscous fluids. Lobanoff and Ross [15] suggest the following rule of thumb:  $D$  (in)  $> 0.015\nu/\nu_{\text{water}}$ , where  $D$  is the diameter of the discharge pipe. For example, SAE 30W oil ( $\approx 300\nu_{\text{water}}$ ) should require at least a 4.5-in outlet. Can you explain some reasons for this limitation?
- W11.3** The concept of NPSH dictates that liquid dynamic pumps should generally be immersed below the surface. Can you explain this? What is the effect of increasing the liquid temperature?
- W11.4** For nondimensional fan performance, Wallis [20] suggests that the head coefficient should be replaced by  $\text{FTP}/(\rho n^2 D^2)$ , where FTP is the fan total pressure change. Explain the usefulness of this modification.
- W11.5** Performance data for centrifugal pumps, even if well scaled geometrically, show a decrease in efficiency with decreasing impeller size. Discuss some physical reasons why this is so.
- W11.6** Consider a dimensionless pump performance chart such as Fig. 11.8. What additional dimensionless parameters might modify or even destroy the similarity indicated in such data?
- W11.7** One parameter not discussed in this text is the *number of blades* on an impeller. Do some reading on this subject, and report to the class about its effect on pump performance.
- W11.8** Explain why some pump performance curves may lead to unstable operating conditions.
- W11.9** Why are Francis and Kaplan turbines generally considered unsuitable for hydropower sites where the available head exceeds 1000 ft?
- W11.10** Do some reading on the performance of the *free propeller* that is used on small, low-speed aircraft. What dimensionless parameters are typically reported for the data? How do the performance and efficiency compare with those for the axial-flow pump?


## Comprehensive Problems

- C11.1** The net head of a little aquarium pump is given by the manufacturer as a function of volume flow rate as listed below:

$Q$ , m <sup>3</sup> /s	H, mH <sub>2</sub> O
0	1.10
1.0 E-6	1.00
2.0 E-6	0.80
3.0 E-6	0.60
4.0 E-6	0.35
5.0 E-6	0.0

What is the maximum achievable flow rate if you use this pump to move water from the lower reservoir to the upper reservoir as shown in Fig. C11.1? Note: The tubing is smooth with an inner diameter of 5.0 mm and a total length of 29.8 m. The water is at room temperature and pressure. Minor losses in the system can be neglected.



- C11.2** Reconsider Prob. P6.62 as an exercise in pump selection. Select an impeller size and rotational speed from the Byron Jackson pump family of Prob. P11.28 to deliver a flow rate of 3 ft<sup>3</sup>/s to the system of Fig. P6.68 at minimum input power. Calculate the horsepower required.

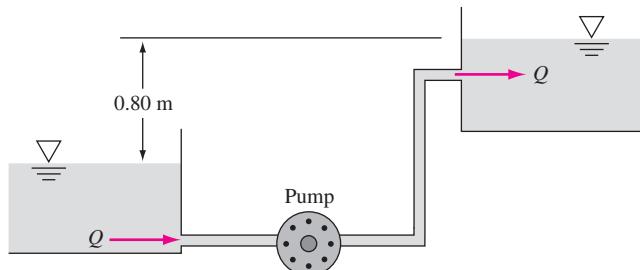

C11.1

- C11.3** Reconsider Prob. P6.77 as an exercise in turbine selection. Select an impeller size and rotational speed from the Francis turbine family of Fig. 11.22d to deliver maximum power generated by the turbine. Calculate the turbine power output and remark on the practicality of your design.

- C11.4** The system of Fig. C11.4 is designed to deliver water at 20°C from a sea-level reservoir to another through new cast iron pipe of diameter 38 cm. Minor losses are  $\Sigma K_1 = 0.5$  before the pump entrance and  $\Sigma K_2 = 7.2$  after the pump exit. (a) Select a pump from either Fig. 11.7a or 11.7b, running at the given speeds, that can perform this

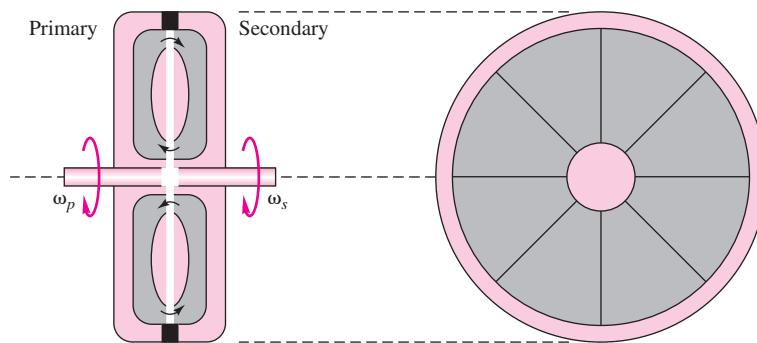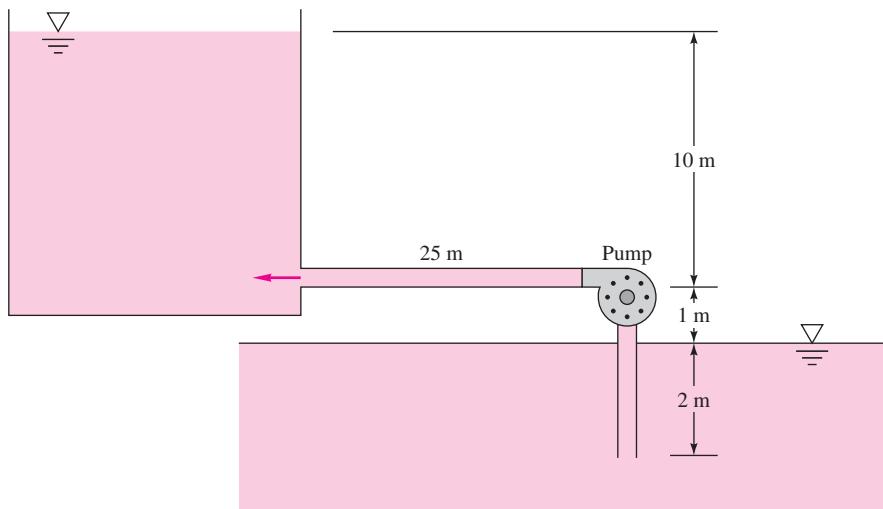

task at maximum efficiency. Determine (b) the resulting flow rate, (c) the brake horsepower, and (d) whether the pump as presently situated is safe from cavitation.

- C11.5** In Prob. P11.23, estimate the efficiency of the pump in two ways. (a) Read it directly from Fig. 11.7b (for the dynamically similar water pump); and (b) calculate it from Eq. (11.5) for the actual kerosene flow. Compare your results and discuss any discrepancies.

- C11.6** An interesting turbomachine [58] is the *fluid coupling* of Fig. C11.6, which circulates fluid from a primary pump rotor and thus turns a secondary turbine on a separate shaft. Both rotors have radial blades. Couplings are common in all types of vehicle and machine transmissions and drives. The *slip* of the coupling is defined as the dimensionless difference between shaft rotation rates,  $s = 1 - \omega_s/\omega_p$ . For a given volume of fluid, the torque  $T$  transmitted is a function of  $s$ ,  $\rho$ ,  $\omega_p$ , and impeller diameter  $D$ . (a) Nondimensionalize this function into two pi groups, with one pi proportional to  $T$ . Tests on a 1-ft-diameter coupling at 2500 r/min, filled

with hydraulic fluid of density 56 lbm/ft<sup>3</sup>, yield the following torque versus slip data:

Slip, $s$	0%	5%	10%	15%	20%	25%
Torque $T$ , ft-lbf	0	90	275	440	580	680

(b) If this coupling is run at 3600 r/min, at what slip value will it transmit a torque of 900 ft-lbf? (c) What is the proper diameter for a geometrically similar coupling to run at 3000 r/min and 5 percent slip and transmit 600 ft-lbf of torque?

- C11.7** Report to the class on the *Cordier method* [63] for optimal design of turbomachinery. The method is related to, and greatly expanded from, Prob. P11.46 and uses both software and charts to develop an efficient design for any given pump or compressor application.

- C11.8** A *pump-turbine* is a reversible device that uses a reservoir to generate power in the daytime and then pumps water back up to the reservoir at night. Let us reset Prob. P6.62

as a pump-turbine. Recall that  $\Delta z = 120$  ft, and the water flows through 2000 ft of 6-in-diameter cast iron pipe. For simplicity, assume that the pump operates at BEP (92%) with  $H_{p}^{*} = 200$  ft and the turbine operates at BEP (89%) with  $H_{t}^{*} = 100$  ft. Neglect minor losses.

## Design Project

- D11.1** To save on electricity costs, a town water supply system uses gravity-driven flow from five large storage tanks during the day and then refills these tanks from 10 P.M. to 6 A.M. at a cheaper night rate of 7 ¢/kWh. The total resupply needed each night varies from 5 E5 to 2 E6 gal, with no more than 5 E5 gallons to any one tank. Tank elevations vary from 40 to 100 ft. A single constant-speed pump, drawing from a large groundwater aquifer and valved into five different cast iron tank supply lines, does this job. Distances from the pump to the five tanks vary more or less evenly from 1 to 3 mi. Each line averages one elbow every 100 ft and has four butterfly valves that can be controlled at any desirable angle. Select a suitable pump family from one of the six

Estimate (a) the input power, in watts, required by the pump; and (b) the power, in watts, generated by the turbine. For further technical reading, consult the URL [www.usbr.gov/pmts/hydraulics\\_lab/pubs/EM/EM39.pdf](http://www.usbr.gov/pmts/hydraulics_lab/pubs/EM/EM39.pdf).

data sets in this chapter: Figs. 11.8, P11.24, and P11.34 plus Probs. P11.28, P11.35, and P11.38. Assume ideal similarity (no Reynolds number or pump roughness effects). The goal is to determine pump and pipeline sizes that achieve minimum total cost over a 5-year period. Some suggested cost data are

- (a) Pump and motor: \$2500 plus \$1500 per inch of pipe size
  - (b) Valves: \$100 plus \$100 per inch of pipe size
  - (c) Pipelines: 50¢ per inch of diameter per foot of length
- Since the flow and elevation parameters vary considerably, a random daily variation within the specified ranges might give a realistic approach.

## References

1. D. G. Wilson, "Turbomachinery—From Paddle Wheels to Turbojets," *Mech. Eng.*, vol. 104, Oct. 1982, pp. 28–40.
2. D. Japikse and N. C. Baines, *Introduction to Turbomachinery*, Concepts ETI Inc., Hanover, NH, 1997.
3. E. S. Logan and R. Roy (Eds.), *Handbook of Turbomachinery*, 2d ed., Marcel Dekker, New York, 2003.
4. G. F. Wislicenus, *Fluid Mechanics of Turbomachinery*, 2d ed., McGraw-Hill, New York, 1965.
5. S. L. Dixon, *Fluid Mechanics and Thermodynamics of Turbomachinery*, 5th ed., Elsevier, New York, 2005.
6. J. A. Schetz and A. E. Fuhs, *Handbook of Fluid Dynamics and Fluid Machinery*, Wiley, New York, 1996.
7. E. S. Logan, Jr., *Turbomachinery: Basic Theory and Applications*, 2d ed., Marcel Dekker, New York, 1993.
8. A. J. Stepanoff, *Centrifugal and Axial Flow Pumps*, 2d ed., Wiley, New York, 1957.
9. J. Tuzson, *Centrifugal Pump Design*, Wiley, New York, 2000.
10. P. Girdhar and O. Moniz, *Practical Centrifugal Pumps*, Elsevier, New York, 2004.
11. L. Nelik, *Centrifugal and Rotary Pumps*, CRC Press, Boca Raton, FL, 1999.
12. D. Japikse, R. Furst, and W. D. Marscher, *Centrifugal Pump Design and Performance*, Concepts ETI Inc., Hanover, NH, 1997.
13. R. K. Turton, *Rotodynamic Pump Design*, Cambridge University Press, Cambridge, UK, 2005.
14. I. J. Karassik and T. McGuire, *Centrifugal Pumps*, 2d ed., Springer-Verlag, New York, 1996.
15. V. L. Lobanoff and R. R. Ross, *Centrifugal Pumps: Design and Application*, 2d ed., Elsevier, New York, 1992.
16. H. L. Stewart, *Pumps*, 5th ed. Macmillan, New York, 1991.
17. A. B. McKenzie, *Axial Flow Fans and Compressors: Aerodynamic Design and Performance*, Ashgate Publishing, Brookfield, VT, 1997.
18. A. J. Wennerstrom, *Design of Highly Loaded Axial-Flow Fans and Compressors*, Concepts ETI Inc., Hanover, NH, 1997.
19. F. P. Bleier, *Fan Handbook: Selection, Application, and Design*, McGraw-Hill, New York, 1997.
20. R. A. Wallis, *Axial Flow Fans and Ducts*, Wiley, New York, 1983.
21. H. P. Bloch, *A Practical Guide to Compressor Technology*, 2d ed. McGraw-Hill, New York, 2006.
22. R. N. Brown, *Compressors: Selection and Sizing*, 3d ed., Gulf Professional Publishing, Burlington, MA, 2005.
23. Ronald H. Aungier, *Axial-Flow Compressors: A Strategy for Aerodynamic Design and Analysis*, ASME Press, New York, 2003.
24. H. I. H. Saravanamuttoo, H. Cohen, and G. F. C. Rogers, *Gas Turbine Theory*, Prentice Hall, Upper Saddle River, NJ, 2001.

25. P. P. Walsh and P. Fletcher, *Gas Turbine Performance*, ASME Press, New York, 2004.
26. M. P. Boyce, *Gas Turbine Engineering Handbook*, 3d ed., Gulf Professional Publishing, Burlington, MA, 2005.
27. Fluid Machinery Group, Institution of Mechanical Engineers, *Hydropower*, Wiley, New York, 2005.
28. Jeremy Thake, *The Micro-Hydro Pelton Turbine Manual*, Intermediate Technology Pub., Colchester, Essex, UK, 2000.
29. P. C. Hanlon (ed.), *Compressor Handbook*, McGraw-Hill, New York, 2001.
30. Hydraulic Institute, *Hydraulic Institute Pump Standards Complete*, 4th ed. New York, 1994.
31. P. Cooper, J. Messina, C. Heald, and I. J. Karassik (ed.), *Pump Handbook*, 4th ed., McGraw-Hill, New York, 2008.
32. J. S. Gulliver and R. E. A. Arndt, *Hydropower Engineering Handbook*, McGraw-Hill, New York, 1990.
33. R. L. Daugherty, J. B. Franzini, and E. J. Finnemore, *Fluid Mechanics and Engineering Applications*, 9th ed., McGraw-Hill, New York, 1997.
34. R. H. Sabersky, E. M. Gates, A. J. Acosta, and E. G. Hauptmann, *Fluid Flow: A First Course in Fluid Mechanics*, 4th ed., Pearson Education, Upper Saddle River, NJ, 1994.
35. J. P. Poynton, *Metering Pumps*, Marcel Dekker, New York, 1983.
36. Hydraulic Institute, *Reciprocating Pump Test Standard*, New York, 1994.
37. T. L. Henshaw, *Reciprocating Pumps*, Wiley, New York, 1987.
38. J. E. Miller, *The Reciprocating Pump: Theory, Design and Use*, Wiley, New York, 1987.
39. D. G. Wilson and T. Korakianitis, *The Design of High Efficiency Turbomachinery and Gas Turbines*, 2d ed., Pearson Education, Upper Saddle River, NJ, 1998.
40. S. O. Kraus et al., "Periodic Velocity Measurements in a Wide and Large Radius Ratio Automotive Torque Converter at the Pump/Turbine Interface," *J. Fluids Eng.*, vol. 127, no. 2, 2005, pp. 308–316.
41. E. M. Greitzer, "The Stability of Pumping Systems: The 1980 Freeman Scholar Lecture," *J. Fluids Eng.*, vol. 103, June 1981, pp. 193–242.
42. R. Elder et al. (eds.), *Advances of CFD in Fluid Machinery Design*, Wiley, New York, 2003.
43. L. F. Moody, "The Propeller Type Turbine," *ASCE Trans.*, vol. 89, 1926, p. 628.
44. H. H. Anderson, "Prediction of Head, Quantity, and Efficiency in Pumps—The Area-Ratio Principle," in *Performance Prediction of Centrifugal Pumps and Compressors*, vol. 100127, ASME Symp., New York, 1980, pp. 201–211.
45. M. Schobeiri, *Turbomachinery Flow Physics and Dynamic Performance*, Springer, New York, 2004.
46. D. J. Mahoney (ed.), *Proceedings of the 1997 International Conference on Hydropower*, ASCE, Reston, VA, 1997.
47. G. W. Koepll, *Putnam's Power from the Wind*, 2d ed., Van Nostrand Reinhold, New York, 1982.
48. P. Gipe, *Wind Energy Basics: A Guide to Small and Micro Wind Systems*, Chelsea Green Publishing, White River Junction, VT, 1999.
49. D. A. Spera, *Wind Turbine Technology: Fundamental Concepts of Wind Turbine Engineering*, ASME Press, New York, 1994.
50. E. Hau, *Wind Turbines: Fundamentals, Technologies, Application, Economics*, 2d ed., Springer-Verlag, New York, 2005.
51. R. Harrison, E. Hau, and H. Snel, *Large Wind Turbines*, Wiley, New York, 2000.
52. R. H. Aungier, *Turbine Aerodynamics: Axial-Flow and Radial-Flow Turbine Design and Analysis*, ASME Press, New York, 2006.
53. M. L. Robinson, "The Darrieus Wind Turbine for Electrical Power Generation," *Aeronaut. J.*, June 1981, pp. 244–255.
54. D. F. Warne and P. G. Calnan, "Generation of Electricity from the Wind," *IEE Rev.*, vol. 124, no. 11R, November 1977, pp. 963–985.
55. L. A. Haimerl, "The Crossflow Turbine," *Waterpower*, January 1960, pp. 5–13; see also *ASME Symp. Small Hydropower Fluid Mach.*, vol. 1, 1980, and vol. 2, 1982.
56. K. Eisele et al., "Flow Analysis in a Pump Diffuser: Part 1, Measurements; Part 2, CFD," *J. Fluids Eng.*, vol. 119, December 1997, pp. 968–984.
57. D. Japikse and N. C. Baines, *Turbomachinery Diffuser Design Technology*, Concepts ETI Inc., Hanover, NH, 1998.
58. B. Massey and J. Ward-Smith, *Mechanics of Fluids*, 7th ed., Nelson Thornes Publishing, Cheltenham, UK, 1998.
59. American Wind Energy Association, "Global Wind Energy Market Report," URL: <<http://www.awea.org/pubs/documents/globalmarket2004.pdf>>.
60. J. Carlton, *Marine Propellers and Propulsion*, 2d ed., Butterworth-Heinemann, New York, 2007.
61. M. Hollmann, *Modern Propeller and Duct Design*, Aircraft Designs, Inc., Monterey, CA, 1993.
62. C. L. Archer and M. Z. Jacobson, "Evaluation of Global Wind Power," *J. Geophys. Res.-Atm.*, vol. 110, 2005, doi:10.1029/2004JD005462.
63. M. Farinas and A. Garon, "Application of DOE for Optimal Turbomachinery Design," Paper AIAA-2004-2139, AIAA Fluid Dynamics Conference, Portland, OR, June 2004.
64. C. Crain, "Running Against the Wind," *Popular Science*, March 2009, pp. 69–70.

# Appendix A

## Physical Properties of Fluids

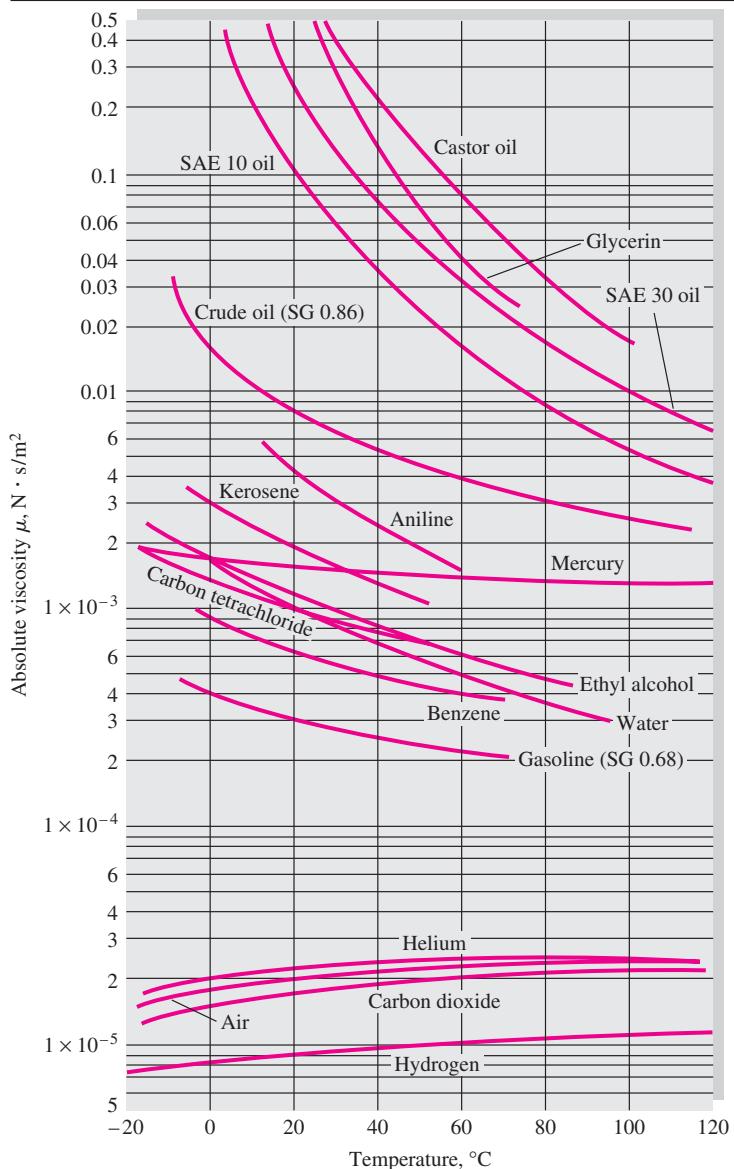


Fig. A.1 Absolute viscosity of common fluids at 1 atm.

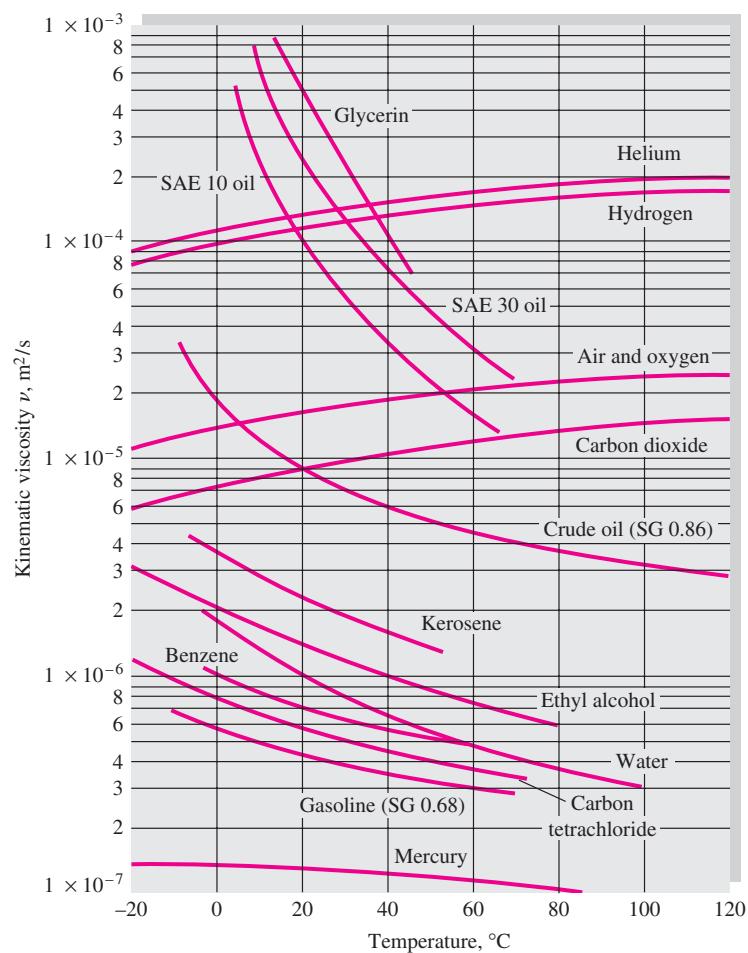


Fig. A.2 Kinematic viscosity of common fluids at 1 atm.

**Table A.1** Viscosity and Density of Water at 1 atm

<i>T, °C</i>	$\rho, \text{kg/m}^3$	$\mu, \text{N} \cdot \text{s/m}^2$	$\nu, \text{m}^2/\text{s}$	<i>T, °F</i>	$\rho, \text{slug/ft}^3$	$\mu, \text{lb} \cdot \text{s/ft}^2$	$\nu, \text{ft}^2/\text{s}$
0	1000	1.788 E-3	1.788 E-6	32	1.940	3.73 E-5	1.925 E-5
10	1000	1.307 E-3	1.307 E-6	50	1.940	2.73 E-5	1.407 E-5
20	998	1.003 E-3	1.005 E-6	68	1.937	2.09 E-5	1.082 E-5
30	996	0.799 E-3	0.802 E-6	86	1.932	1.67 E-5	0.864 E-5
40	992	0.657 E-3	0.662 E-6	104	1.925	1.37 E-5	0.713 E-5
50	988	0.548 E-3	0.555 E-6	122	1.917	1.14 E-5	0.597 E-5
60	983	0.467 E-3	0.475 E-6	140	1.908	0.975 E-5	0.511 E-5
70	978	0.405 E-3	0.414 E-6	158	1.897	0.846 E-5	0.446 E-5
80	972	0.355 E-3	0.365 E-6	176	1.886	0.741 E-5	0.393 E-5
90	965	0.316 E-3	0.327 E-6	194	1.873	0.660 E-5	0.352 E-5
100	958	0.283 E-3	0.295 E-6	212	1.859	0.591 E-5	0.318 E-5

Suggested curve fits for water in the range  $0 \leq T \leq 100^\circ\text{C}$ :

$$\rho(\text{kg/m}^3) \approx 1000 - 0.0178 |T^\circ\text{C} - 4^\circ\text{C}|^{1.7} \pm 0.2\%$$

$$\ln \frac{\mu}{\mu_0} \approx -1.704 - 5.306z + 7.003z^2$$

$$z = \frac{273 \text{ K}}{T \text{ K}} \quad \mu_0 = 1.788 \text{ E-3 kg/(m} \cdot \text{s)}$$

**Table A.2** Viscosity and Density of Air at 1 atm

<i>T, °C</i>	$\rho, \text{kg/m}^3$	$\mu, \text{N} \cdot \text{s/m}^2$	$\nu, \text{m}^2/\text{s}$	<i>T, °F</i>	$\rho, \text{slug/ft}^3$	$\mu, \text{lb} \cdot \text{s/ft}^2$	$\nu, \text{ft}^2/\text{s}$
-40	1.52	1.51 E-5	0.99 E-5	-40	2.94 E-3	3.16 E-7	1.07 E-4
0	1.29	1.71 E-5	1.33 E-5	32	2.51 E-3	3.58 E-7	1.43 E-4
20	1.20	1.80 E-5	1.50 E-5	68	2.34 E-3	3.76 E-7	1.61 E-4
50	1.09	1.95 E-5	1.79 E-5	122	2.12 E-3	4.08 E-7	1.93 E-4
100	0.946	2.17 E-5	2.30 E-5	212	1.84 E-3	4.54 E-7	2.47 E-4
150	0.835	2.38 E-5	2.85 E-5	302	1.62 E-3	4.97 E-7	3.07 E-4
200	0.746	2.57 E-5	3.45 E-5	392	1.45 E-3	5.37 E-7	3.71 E-4
250	0.675	2.75 E-5	4.08 E-5	482	1.31 E-3	5.75 E-7	4.39 E-4
300	0.616	2.93 E-5	4.75 E-5	572	1.20 E-3	6.11 E-7	5.12 E-4
400	0.525	3.25 E-5	6.20 E-5	752	1.02 E-3	6.79 E-7	6.67 E-4
500	0.457	3.55 E-5	7.77 E-5	932	0.89 E-3	7.41 E-7	8.37 E-4

Suggested curve fits for air:

$$\rho = \frac{p}{RT} \quad R_{\text{air}} \approx 287 \text{ J/(kg} \cdot \text{K)}$$

Power law: 
$$\frac{\mu}{\mu_0} \approx \left( \frac{T}{T_0} \right)^{0.7}$$

Sutherland law: 
$$\frac{\mu}{\mu_0} \approx \left( \frac{T}{T_0} \right)^{3/2} \left( \frac{T_0 + S}{T + S} \right) \quad S_{\text{air}} \approx 110.4 \text{ K}$$

with  $T_0 = 273 \text{ K}$ ,  $\mu_0 = 1.71 \text{ E-5 kg/(m} \cdot \text{s)}$ , and  $T$  in kelvins.

**Table A.3** Properties of Common Liquids at 1 atm and 20°C (68°F)

Liquid	$\rho$ , kg/m <sup>3</sup>	$\mu$ , kg/(m · s)	$\gamma$ , N/m*	$p_v$ , N/m <sup>2</sup>	Bulk modulus $K$ , N/m <sup>2</sup>	Viscosity parameter $C^\dagger$
Ammonia	608	2.20 E-4	2.13 E-2	9.10 E+5	1.82 E+9	1.05
Benzene	881	6.51 E-4	2.88 E-2	1.01 E+4	1.47 E+9	4.34
Carbon tetrachloride	1590	9.67 E-4	2.70 E-2	1.20 E+4	1.32 E+9	4.45
Ethanol	789	1.20 E-3	2.28 E-2	5.7 E+3	1.09 E+9	5.72
Ethylene glycol	1117	2.14 E-2	4.84 E-2	1.2 E+1	3.05 E+9	11.7
Freon 12	1327	2.62 E-4	—	—	7.95 E+8	1.76
Gasoline	680	2.92 E-4	2.16 E-2	5.51 E+4	1.3 E+9	3.68
Glycerin	1260	1.49	6.33 E-2	1.4 E-2	4.35 E+9	28.0
Kerosene	804	1.92 E-3	2.8 E-2	3.11 E+3	1.41 E+9	5.56
Mercury	13,550	1.56 E-3	4.84 E-1	1.1 E-3	2.85 E+10	1.07
Methanol	791	5.98 E-4	2.25 E-2	1.34 E+4	1.03 E+9	4.63
SAE 10W oil	870	1.04 E-1‡	3.6 E-2	—	1.31 E+9	15.7
SAE 10W30 oil	876	1.7 E-1‡	—	—	—	14.0
SAE 30W oil	891	2.9 E-1‡	3.5 E-2	—	1.38 E+9	18.3
SAE 50W oil	902	8.6 E-1‡	—	—	—	20.2
Water	998	1.00 E-3	7.28 E-2	2.34 E+3	2.19 E+9	Table A.1
Seawater (30%)	1025	1.07 E-3	7.28 E-2	2.34 E+3	2.33 E+9	7.28

\*In contact with air.

†The viscosity-temperature variation of these liquids may be fitted to the empirical expression

$$\frac{\mu}{\mu_{20^\circ\text{C}}} \approx \exp \left[ C \left( \frac{293 \text{ K}}{T \text{ K}} - 1 \right) \right]$$

with accuracy of  $\pm 6$  percent in the range  $0 \leq T \leq 100^\circ\text{C}$ .‡Representative values. The SAE oil classifications allow a viscosity variation of up to  $\pm 50$  percent, especially at lower temperatures.**Table A.4** Properties of Common Gases at 1 atm and 20°C (68°F)

Gas	Molecular weight	$R$ , m <sup>2</sup> /(s <sup>2</sup> · K)	$\rho g$ , N/m <sup>3</sup>	$\mu$ , N · s/m <sup>2</sup>	Specific-heat ratio	Power-law exponent $n^*$
H <sub>2</sub>	2.016	4124	0.822	9.05 E-6	1.41	0.68
He	4.003	2077	1.63	1.97 E-5	1.66	0.67
H <sub>2</sub> O	18.02	461	7.35	1.02 E-5	1.33	1.15
Ar	39.944	208	16.3	2.24 E-5	1.67	0.72
Dry air	28.96	287	11.8	1.80 E-5	1.40	0.67
CO <sub>2</sub>	44.01	189	17.9	1.48 E-5	1.30	0.79
CO	28.01	297	11.4	1.82 E-5	1.40	0.71
N <sub>2</sub>	28.02	297	11.4	1.76 E-5	1.40	0.67
O <sub>2</sub>	32.00	260	13.1	2.00 E-5	1.40	0.69
NO	30.01	277	12.1	1.90 E-5	1.40	0.78
N <sub>2</sub> O	44.02	189	17.9	1.45 E-5	1.31	0.89
Cl <sub>2</sub>	70.91	117	28.9	1.03 E-5	1.34	1.00
CH <sub>4</sub>	16.04	518	6.54	1.34 E-5	1.32	0.87

\*The power-law curve fit, Eq. (1.27),  $\mu/\mu_{293\text{K}} \approx (T/293)^n$ , fits these gases to within  $\pm 4$  percent in the range  $250 \leq T \leq 1000$  K. The temperature must be in kelvins.

**Table A.5** Surface Tension, Vapor Pressure, and Sound Speed of Water

T, °C	Y, N/m	p <sub>v</sub> , kPa	a, m/s
0	0.0756	0.611	1402
10	0.0742	1.227	1447
20	0.0728	2.337	1482
30	0.0712	4.242	1509
40	0.0696	7.375	1529
50	0.0679	12.34	1542
60	0.0662	19.92	1551
70	0.0644	31.16	1553
80	0.0626	47.35	1554
90	0.0608	70.11	1550
100	0.0589	101.3	1543
120	0.0550	198.5	1518
140	0.0509	361.3	1483
160	0.0466	617.8	1440
180	0.0422	1002	1389
200	0.0377	1554	1334
220	0.0331	2318	1268
240	0.0284	3344	1192
260	0.0237	4688	1110
280	0.0190	6412	1022
300	0.0144	8581	920
320	0.0099	11,274	800
340	0.0056	14,586	630
360	0.0019	18,651	370
374*	0.0*	22,090*	0*

\*Critical point.

**Table A.6** Properties of the Standard Atmosphere

z, m	T, K	p, Pa	ρ, kg/m <sup>3</sup>	a, m/s
-500	291.41	107,508	1.2854	342.2
0	288.16	101,350	1.2255	340.3
500	284.91	95,480	1.1677	338.4
1000	281.66	89,889	1.1120	336.5
1500	278.41	84,565	1.0583	334.5
2000	275.16	79,500	1.0067	332.6
2500	271.91	74,684	0.9570	330.6
3000	268.66	70,107	0.9092	328.6
3500	265.41	65,759	0.8633	326.6
4000	262.16	61,633	0.8191	324.6
4500	258.91	57,718	0.7768	322.6
5000	255.66	54,008	0.7361	320.6
5500	252.41	50,493	0.6970	318.5
6000	249.16	47,166	0.6596	316.5
6500	245.91	44,018	0.6237	314.4
7000	242.66	41,043	0.5893	312.3
7500	239.41	38,233	0.5564	310.2
8000	236.16	35,581	0.5250	308.1
8500	232.91	33,080	0.4949	306.0
9000	229.66	30,723	0.4661	303.8
9500	226.41	28,504	0.4387	301.7
10,000	223.16	26,416	0.4125	299.5
10,500	219.91	24,455	0.3875	297.3
11,000	216.66	22,612	0.3637	295.1
11,500	216.66	20,897	0.3361	295.1
12,000	216.66	19,312	0.3106	295.1
12,500	216.66	17,847	0.2870	295.1
13,000	216.66	16,494	0.2652	295.1
13,500	216.66	15,243	0.2451	295.1
14,000	216.66	14,087	0.2265	295.1
14,500	216.66	13,018	0.2094	295.1
15,000	216.66	12,031	0.1935	295.1
15,500	216.66	11,118	0.1788	295.1
16,000	216.66	10,275	0.1652	295.1
16,500	216.66	9496	0.1527	295.1
17,000	216.66	8775	0.1411	295.1
17,500	216.66	8110	0.1304	295.1
18,000	216.66	7495	0.1205	295.1
18,500	216.66	6926	0.1114	295.1
19,000	216.66	6401	0.1029	295.1
19,500	216.66	5915	0.0951	295.1
20,000	216.66	5467	0.0879	295.1
22,000	218.6	4048	0.0645	296.4
24,000	220.6	2972	0.0469	297.8
26,000	222.5	2189	0.0343	299.1
28,000	224.5	1616	0.0251	300.4
30,000	226.5	1197	0.0184	301.7
40,000	250.4	287	0.0040	317.2
50,000	270.7	80	0.0010	329.9
60,000	255.7	22	0.0003	320.6
70,000	219.7	6	0.0001	297.2

# Appendix B

## Compressible Flow Tables

**Table B.1**  
Isentropic Flow  
of a Perfect Gas,  
 $k = 1.4$

Ma	$p/p_0$	$\rho/\rho_0$	$T/T_0$	$A/A^*$	Ma	$p/p_0$	$\rho/\rho_0$	$T/T_0$	$A/A^*$
0.00	1.0000	1.0000	1.0000	$\infty$	2.10	0.1094	0.2058	0.5313	1.8369
0.10	0.9930	0.9950	0.9980	5.8218	2.20	0.0935	0.1841	0.5081	2.0050
0.20	0.9725	0.9803	0.9921	2.9635	2.30	0.0800	0.1646	0.4859	2.1931
0.30	0.9395	0.9564	0.9823	2.0351	2.40	0.0684	0.1472	0.4647	2.4031
0.40	0.8956	0.9243	0.9690	1.5901	2.50	0.0585	0.1317	0.4444	2.6367
0.50	0.8430	0.8852	0.9524	1.3398	2.60	0.0501	0.1179	0.4252	2.8960
0.60	0.7840	0.8405	0.9328	1.1882	2.70	0.0430	0.1056	0.4068	3.1830
0.70	0.7209	0.7916	0.9107	1.0944	2.80	0.0368	0.0946	0.3894	3.5001
0.80	0.6560	0.7400	0.8865	1.0382	2.90	0.0317	0.0849	0.3729	3.8498
0.90	0.5913	0.6870	0.8606	1.0089	3.00	0.0272	0.0762	0.3571	4.2346
1.00	0.5283	0.6339	0.8333	1.0000	3.10	0.0234	0.0685	0.3422	4.6573
1.10	0.4684	0.5817	0.8052	1.0079	3.20	0.0202	0.0617	0.3281	5.1210
1.20	0.4124	0.5311	0.7764	1.0304	3.30	0.0175	0.0555	0.3147	5.6286
1.30	0.3609	0.4829	0.7474	1.0663	3.40	0.0151	0.0501	0.3019	6.1837
1.40	0.3142	0.4374	0.7184	1.1149	3.50	0.0131	0.0452	0.2899	6.7896
1.50	0.2724	0.3950	0.6897	1.1762	3.60	0.0114	0.0409	0.2784	7.4501
1.60	0.2353	0.3557	0.6614	1.2502	3.70	0.0099	0.0370	0.2675	8.1691
1.70	0.2026	0.3197	0.6337	1.3376	3.80	0.0086	0.0335	0.2572	8.9506
1.80	0.1740	0.2868	0.6068	1.4390	3.90	0.0075	0.0304	0.2474	9.7990
1.90	0.1492	0.2570	0.5807	1.5553	4.00	0.0066	0.0277	0.2381	10.7188
2.00	0.1278	0.2300	0.5556	1.6875					

**Table B.2** Normal Shock Relations  
for a Perfect Gas,  $k = 1.4$

$\text{Ma}_{n1}$	$\text{Ma}_{n2}$	$p_2/p_1$	$V_1/V_2 = p_2/p_1$	$T_2/T_1$	$p_{02}/p_{01}$	$A_2^*/A_1^*$
1.00	1.0000	1.0000	1.0000	1.0000	1.0000	1.0000
1.10	0.9118	1.2450	1.1691	1.0649	0.9989	1.0011
1.20	0.8422	1.5133	1.3416	1.1280	0.9928	1.0073
1.30	0.7860	1.8050	1.5157	1.1909	0.9794	1.0211
1.40	0.7397	2.1200	1.6897	1.2547	0.9582	1.0436
1.50	0.7011	2.4583	1.8621	1.3202	0.9298	1.0755
1.60	0.6684	2.8200	2.0317	1.3880	0.8952	1.1171
1.70	0.6405	3.2050	2.1977	1.4583	0.8557	1.1686
1.80	0.6165	3.6133	2.3592	1.5316	0.8127	1.2305
1.90	0.5956	4.0450	2.5157	1.6079	0.7674	1.3032
2.00	0.5774	4.5000	2.6667	1.6875	0.7209	1.3872
2.10	0.5613	4.9783	2.8119	1.7705	0.6742	1.4832
2.20	0.5471	5.4800	2.9512	1.8569	0.6281	1.5920
2.30	0.5344	6.0050	3.0845	1.9468	0.5833	1.7144
2.40	0.5231	6.5533	3.2119	2.0403	0.5401	1.8514
2.50	0.5130	7.1250	3.3333	2.1375	0.4990	2.0039
2.60	0.5039	7.7200	3.4490	2.2383	0.4601	2.1733
2.70	0.4956	8.3383	3.5590	2.3429	0.4236	2.3608
2.80	0.4882	8.9800	3.6636	2.4512	0.3895	2.5676
2.90	0.4814	9.6450	3.7629	2.5632	0.3577	2.7954
3.00	0.4752	10.3333	3.8571	2.6790	0.3283	3.0456
3.10	0.4695	11.0450	3.9466	2.7986	0.3012	3.3199
3.20	0.4643	11.7800	4.0315	2.9220	0.2762	3.6202
3.30	0.4596	12.5383	4.1120	3.0492	0.2533	3.9483
3.40	0.4552	13.3200	4.1884	3.1802	0.2322	4.3062
3.50	0.4512	14.1250	4.2609	3.3151	0.2129	4.6960
3.60	0.4474	14.9533	4.3296	3.4537	0.1953	5.1200
3.70	0.4439	15.8050	4.3949	3.5962	0.1792	5.5806
3.80	0.4407	16.6800	4.4568	3.7426	0.1645	6.0801
3.90	0.4377	17.5783	4.5156	3.8928	0.1510	6.6213
4.00	0.4350	18.5000	4.5714	4.0469	0.1388	7.2069
4.10	0.4324	19.4450	4.6245	4.2048	0.1276	7.8397
4.20	0.4299	20.4133	4.6749	4.3666	0.1173	8.5227
4.30	0.4277	21.4050	4.7229	4.5322	0.1080	9.2591
4.40	0.4255	22.4200	4.7685	4.7017	0.0995	10.0522
4.50	0.4236	23.4583	4.8119	4.8751	0.0917	10.9054
4.60	0.4217	24.5200	4.8532	5.0523	0.0846	11.8222
4.70	0.4199	25.6050	4.8926	5.2334	0.0781	12.8065
4.80	0.4183	26.7133	4.9301	5.4184	0.0721	13.8620
4.90	0.4167	27.8450	4.9659	5.6073	0.0667	14.9928
5.00	0.4152	29.0000	5.0000	5.8000	0.0617	16.2032

**Table B.3** Adiabatic Frictional Flow in a Constant-Area Duct for  $k = 1.4$


Ma	$\bar{f}L/D$	$p/p^*$	$T/T^*$	$\rho^*/\rho = V/V^*$	$p_0/p_0^*$
0.00	$\infty$	$\infty$	1.2000	0.0000	$\infty$
0.10	66.9216	10.9435	1.1976	0.1094	5.8218
0.20	14.5333	5.4554	1.1905	0.2182	2.9635
0.30	5.2993	3.6191	1.1788	0.3257	2.0351
0.40	2.3085	2.6958	1.1628	0.4313	1.5901
0.50	1.0691	2.1381	1.1429	0.5345	1.3398
0.60	0.4908	1.7634	1.1194	0.6348	1.1882
0.70	0.2081	1.4935	1.0929	0.7318	1.0944
0.80	0.0723	1.2893	1.0638	0.8251	1.0382
0.90	0.0145	1.1291	1.0327	0.9146	1.0089
1.00	0.0000	1.0000	1.0000	1.0000	1.0000
1.10	0.0099	0.8936	0.9662	1.0812	1.0079
1.20	0.0336	0.8044	0.9317	1.1583	1.0304
1.30	0.0648	0.7285	0.8969	1.2311	1.0663
1.40	0.0997	0.6632	0.8621	1.2999	1.1149
1.50	0.1361	0.6065	0.8276	1.3646	1.1762
1.60	0.1724	0.5568	0.7937	1.4254	1.2502
1.70	0.2078	0.5130	0.7605	1.4825	1.3376
1.80	0.2419	0.4741	0.7282	1.5360	1.4390
1.90	0.2743	0.4394	0.6969	1.5861	1.5553
2.00	0.3050	0.4082	0.6667	1.6330	1.6875
2.10	0.3339	0.3802	0.6376	1.6769	1.8369
2.20	0.3609	0.3549	0.6098	1.7179	2.0050
2.30	0.3862	0.3320	0.5831	1.7563	2.1931
2.40	0.4099	0.3111	0.5576	1.7922	2.4031
2.50	0.4320	0.2921	0.5333	1.8257	2.6367
2.60	0.4526	0.2747	0.5102	1.8571	2.8960
2.70	0.4718	0.2588	0.4882	1.8865	3.1830
2.80	0.4898	0.2441	0.4673	1.9140	3.5001
2.90	0.5065	0.2307	0.4474	1.9398	3.8498
3.00	0.5222	0.2182	0.4286	1.9640	4.2346
3.10	0.5368	0.2067	0.4107	1.9866	4.6573
3.20	0.5504	0.1961	0.3937	2.0079	5.1210
3.30	0.5632	0.1862	0.3776	2.0278	5.6286
3.40	0.5752	0.1770	0.3623	2.0466	6.1837
3.50	0.5864	0.1685	0.3478	2.0642	6.7896
3.60	0.5970	0.1606	0.3341	2.0808	7.4501
3.70	0.6068	0.1531	0.3210	2.0964	8.1691
3.80	0.6161	0.1462	0.3086	2.1111	8.9506
3.90	0.6248	0.1397	0.2969	2.1250	9.7990
4.00	0.6331	0.1336	0.2857	2.1381	10.7187

**Table B.4** Frictionless Duct Flow with Heat Transfer for  $k = 1.4$ 


<b>Ma</b>	<b><math>T_0/T_0^*</math></b>	<b><math>p/p^*</math></b>	<b><math>T/T^*</math></b>	<b><math>\rho^*/\rho = V/V^*</math></b>	<b><math>p_0/p_0^*</math></b>
0.00	0.0000	2.4000	0.0000	0.0000	1.2679
0.10	0.0468	2.3669	0.0560	0.0237	1.2591
0.20	0.1736	2.2727	0.2066	0.0909	1.2346
0.30	0.3469	2.1314	0.4089	0.1918	1.1985
0.40	0.5290	1.9608	0.6151	0.3137	1.1566
0.50	0.6914	1.7778	0.7901	0.4444	1.1141
0.60	0.8189	1.5957	0.9167	0.5745	1.0753
0.70	0.9085	1.4235	0.9929	0.6975	1.0431
0.80	0.9639	1.2658	1.0255	0.8101	1.0193
0.90	0.9921	1.1246	1.0245	0.9110	1.0049
1.00	1.0000	1.0000	1.0000	1.0000	1.0000
1.10	0.9939	0.8909	0.9603	1.0780	1.0049
1.20	0.9787	0.7958	0.9118	1.1459	1.0194
1.30	0.9580	0.7130	0.8592	1.2050	1.0437
1.40	0.9343	0.6410	0.8054	1.2564	1.0777
1.50	0.9093	0.5783	0.7525	1.3012	1.1215
1.60	0.8842	0.5236	0.7017	1.3403	1.1756
1.70	0.8597	0.4756	0.6538	1.3746	1.2402
1.80	0.8363	0.4335	0.6089	1.4046	1.3159
1.90	0.8141	0.3964	0.5673	1.4311	1.4033
2.00	0.7934	0.3636	0.5289	1.4545	1.5031
2.10	0.7741	0.3345	0.4936	1.4753	1.6162
2.20	0.7561	0.3086	0.4611	1.4938	1.7434
2.30	0.7395	0.2855	0.4312	1.5103	1.8860
2.40	0.7242	0.2648	0.4038	1.5252	2.0451
2.50	0.7101	0.2462	0.3787	1.5385	2.2218
2.60	0.6970	0.2294	0.3556	1.5505	2.4177
2.70	0.6849	0.2142	0.3344	1.5613	2.6343
2.80	0.6738	0.2004	0.3149	1.5711	2.8731
2.90	0.6635	0.1879	0.2969	1.5801	3.1359
3.00	0.6540	0.1765	0.2803	1.5882	3.4245
3.10	0.6452	0.1660	0.2650	1.5957	3.7408
3.20	0.6370	0.1565	0.2508	1.6025	4.0871
3.30	0.6294	0.1477	0.2377	1.6088	4.4655
3.40	0.6224	0.1397	0.2255	1.6145	4.8783
3.50	0.6158	0.1322	0.2142	1.6198	5.3280
3.60	0.6097	0.1254	0.2037	1.6247	5.8173
3.70	0.6040	0.1190	0.1939	1.6293	6.3488
3.80	0.5987	0.1131	0.1848	1.6335	6.9256
3.90	0.5937	0.1077	0.1763	1.6374	7.5505
4.00	0.5891	0.1026	0.1683	1.6410	8.2268

**Table B.5** Prandtl-Meyer Supersonic Expansion Function for  $k = 1.4$

Ma	$\omega$ , deg						
1.00	0.00	3.10	51.65	5.10	77.84	7.10	91.49
1.10	1.34	3.20	53.47	5.20	78.73	7.20	92.00
1.20	3.56	3.30	55.22	5.30	79.60	7.30	92.49
1.30	6.17	3.40	56.91	5.40	80.43	7.40	92.97
1.40	8.99	3.50	58.53	5.50	81.24	7.50	93.44
1.50	11.91	3.60	60.09	5.60	82.03	7.60	93.90
1.60	14.86	3.70	61.60	5.70	82.80	7.70	94.34
1.70	17.81	3.80	63.04	5.80	83.54	7.80	94.78
1.80	20.73	3.90	64.44	5.90	84.26	7.90	95.21
1.90	23.59	4.00	65.78	6.00	84.96	8.00	95.62
2.00	26.38	4.10	67.08	6.10	85.63	8.10	96.03
2.10	29.10	4.20	68.33	6.20	86.29	8.20	96.43
2.20	31.73	4.30	69.54	6.30	86.94	8.30	96.82
2.30	34.28	4.40	70.71	6.40	87.56	8.40	97.20
2.40	36.75	4.50	71.83	6.50	88.17	8.50	97.57
2.50	39.12	4.60	72.92	6.60	88.76	8.60	97.94
2.60	41.41	4.70	73.97	6.70	89.33	8.70	98.29
2.80	45.75	4.80	74.99	6.80	89.89	8.80	98.64
2.90	47.79	4.90	75.97	6.90	90.44	8.90	98.98
3.00	49.76	5.00	76.92	7.00	90.97	9.00	99.32

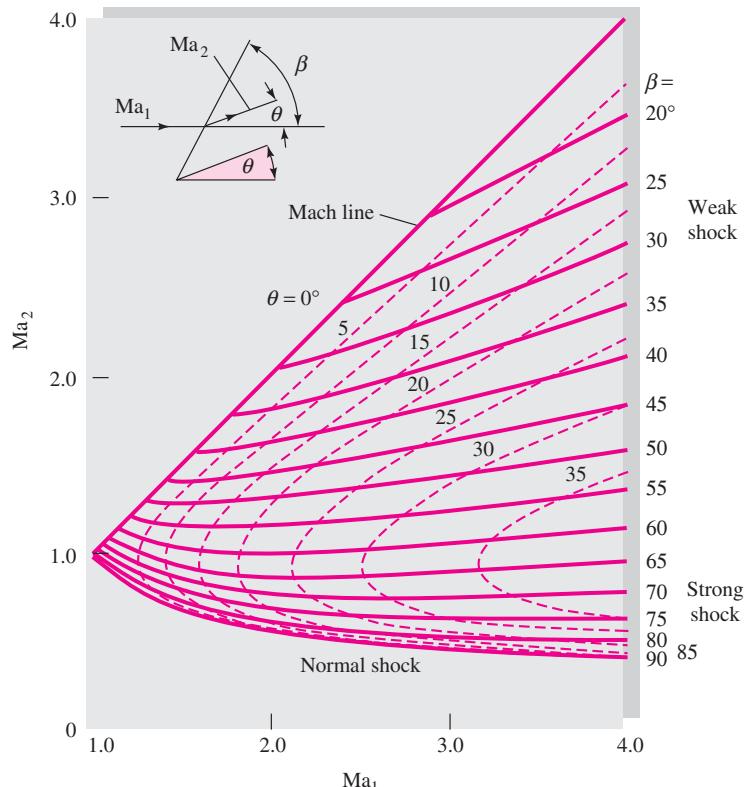

**Fig. B.1** Mach number downstream of an oblique shock for  $k = 1.4$ .

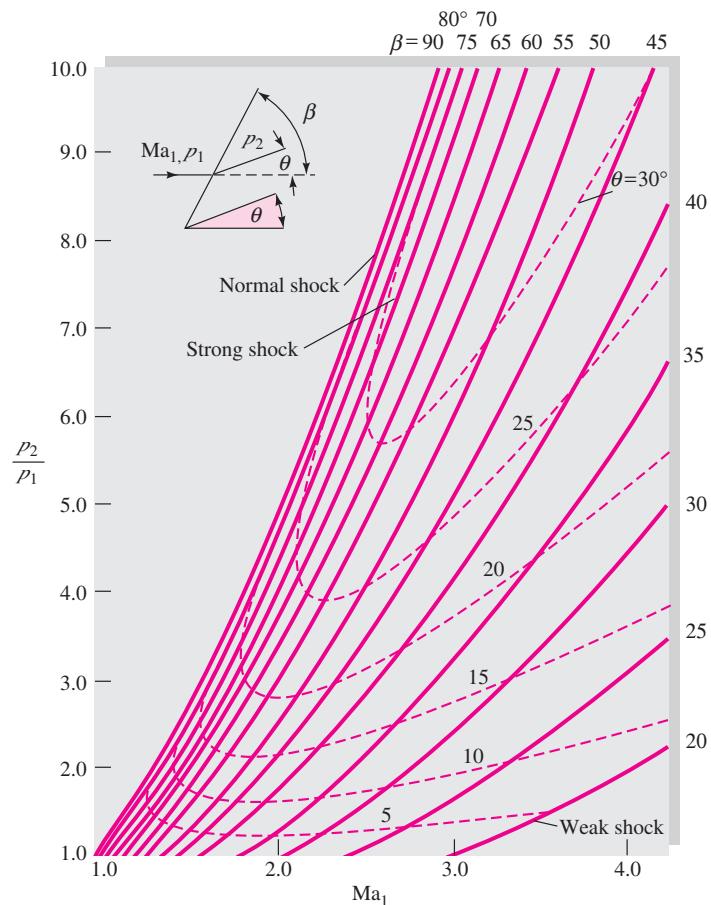

**Fig. B.2** Pressure ratio downstream of an oblique shock for  $k = 1.4$ .

# Appendix C

## Conversion Factors

During this period of transition there is a constant need for conversions between BG and SI units (see Table 1.2). Some additional conversions are given here. Conversion factors are given inside the front cover.

Length	Volume
$1 \text{ ft} = 12 \text{ in} = 0.3048 \text{ m}$ $1 \text{ mi} = 5280 \text{ ft} = 1609.344 \text{ m}$ $1 \text{ nautical mile (nmi)} = 6076 \text{ ft} = 1852 \text{ m}$ $1 \text{ yd} = 3 \text{ ft} = 0.9144 \text{ m}$ $1 \text{ angstrom (\AA)} = 1.0 \text{ E-}10 \text{ m}$	$1 \text{ ft}^3 = 0.028317 \text{ m}^3$ $1 \text{ U.S. gal} = 231 \text{ in}^3 = 0.0037854 \text{ m}^3$ $1 \text{ L} = 0.001 \text{ m}^3 = 0.035315 \text{ ft}^3$ $1 \text{ U.S. fluid ounce} = 2.9574 \text{ E-}5 \text{ m}^3$ $1 \text{ U.S. quart (qt)} = 9.4635 \text{ E-}4 \text{ m}^3$
Mass	Area
$1 \text{ slug} = 32.174 \text{ lbm} = 14.594 \text{ kg}$ $1 \text{ lbm} = 0.4536 \text{ kg}$ $1 \text{ short ton} = 2000 \text{ lbm} = 907.185 \text{ kg}$ $1 \text{ tonne} = 1000 \text{ kg}$	$1 \text{ ft}^2 = 0.092903 \text{ m}^2$ $1 \text{ mi}^2 = 2.78784 \text{ E7 ft}^2 = 2.59 \text{ E6 m}^2$ $1 \text{ acre} = 43,560 \text{ ft}^2 = 4046.9 \text{ m}^2$ $1 \text{ hectare (ha)} = 10,000 \text{ m}^2$
Velocity	Acceleration
$1 \text{ ft/s} = 0.3048 \text{ m/s}$ $1 \text{ mi/h} = 1.466666 \text{ ft/s} = 0.44704 \text{ m/s}$ $1 \text{ kn} = 1 \text{ nmi/h} = 1.6878 \text{ ft/s} = 0.5144 \text{ m/s}$	$1 \text{ ft/s}^2 = 0.3048 \text{ m/s}^2$
Mass fw	Volume fw
$1 \text{ slug/s} = 14.594 \text{ kg/s}$ $1 \text{ lbm/s} = 0.4536 \text{ kg/s}$	$1 \text{ gal/min} = 0.002228 \text{ ft}^3/\text{s} = 0.06309 \text{ L/s}$ $1 \times 10^6 \text{ gal/day} = 1.5472 \text{ ft}^3/\text{s} = 0.04381 \text{ m}^3/\text{s}$
Pressure	Force
$1 \text{ lbf/ft}^2 = 47.88 \text{ Pa}$ $1 \text{ lbf/in}^2 = 144 \text{ lbf/ft}^2 = 6895 \text{ Pa}$ $1 \text{ atm} = 2116.2 \text{ lbf/ft}^2 = 14.696 \text{ lbf/in}^2 = 101,325 \text{ Pa}$ $1 \text{ inHg (at } 20^\circ\text{C)} = 3375 \text{ Pa}$ $1 \text{ bar} = 1.0 \text{ E5 Pa}$	$1 \text{ lbf} = 4.448222 \text{ N} = 16 \text{ oz}$ $1 \text{ kgf} = 2.2046 \text{ lbf} = 9.80665 \text{ N}$ $1 \text{ U.S. (short) ton} = 2000 \text{ lbf}$ $1 \text{ dyne} = 1.0 \text{ E-}5 \text{ N}$ $1 \text{ ounce (avoirdupois) (oz)} = 0.27801 \text{ N}$

Energy	Power
$1 \text{ ft} \cdot \text{lbf} = 1.35582 \text{ J}$ $1 \text{ Btu} = 252 \text{ cal} = 1055.056 \text{ J} = 778.17 \text{ ft} \cdot \text{lbf}$ $1 \text{ kilowatt hour (kWh)} = 3.6 \times 10^6 \text{ J}$	$1 \text{ hp} = 550 \text{ ft} \cdot \text{lbf/s} = 745.7 \text{ W}$ $1 \text{ ft} \cdot \text{lbf/s} = 1.3558 \text{ W}$
Specifi weight	Density
$1 \text{ lbf/ft}^3 = 157.09 \text{ N/m}^3$	$1 \text{ slug/ft}^3 = 515.38 \text{ kg/m}^3$ $1 \text{ lbm/ft}^3 = 16.0185 \text{ kg/m}^3$ $1 \text{ g/cm}^3 = 1000 \text{ kg/m}^3$
Viscosity	Kinematic viscosity
$1 \text{ slug/(ft} \cdot \text{s)} = 47.88 \text{ kg/(m} \cdot \text{s)}$ $1 \text{ poise (P)} = 1 \text{ g/(cm} \cdot \text{s)} = 0.1 \text{ kg/(m} \cdot \text{s)}$	$1 \text{ ft}^2/\text{h} = 0.000025806 \text{ m}^2/\text{s}$ $1 \text{ stokes (St)} = 1 \text{ cm}^2/\text{s} = 0.0001 \text{ m}^2/\text{s}$
Temperature scale readings	
$T_F = \frac{9}{5}T_C + 32$ $T_C = \frac{5}{9}(T_F - 32)$ $T_R = T_F + 459.69$ $T_K = T_C + 273.16$ where subscripts F, C, K, and R refer to readings on the Fahrenheit, Celsius, Kelvin, and Rankine scales, respectively.	
Specifi heat or gas constant*	Thermal conductivity*
$1 \text{ ft} \cdot \text{lbf}/(\text{slug} \cdot {}^\circ\text{R}) = 0.16723 \text{ N} \cdot \text{m}/(\text{kg} \cdot \text{K})$ $1 \text{ Btu}/(\text{lbm} \cdot {}^\circ\text{R}) = 4186.8 \text{ J}/(\text{kg} \cdot \text{K})$	$1 \text{ Btu}/(\text{h} \cdot \text{ft} \cdot {}^\circ\text{R}) = 1.7307 \text{ W}/(\text{m} \cdot \text{K})$

\*Although the absolute (Kelvin) and Celsius temperature scales have different starting points, the intervals are the same size: 1 kelvin = 1 Celsius degree. The same holds true for the nonmetric absolute (Rankine) and Fahrenheit scales: 1 Rankine degree = 1 Fahrenheit degree. It is customary to express temperature differences in absolute temperature units.

# Appendix D

## Equations of Motion in Cylindrical Coordinates

The equations of motion of an incompressible newtonian fluid with constant  $\mu$ ,  $k$ , and  $c_p$  are given here in cylindrical coordinates  $(r, \theta, z)$ , which are related to cartesian coordinates  $(x, y, z)$  as in Fig. 4.2:

$$x = r \cos \theta \quad y = r \sin \theta \quad z = z \quad (\text{D.1})$$

The velocity components are  $v_r$ ,  $v_\theta$ , and  $v_z$ . Here are the equations:

Continuity:

$$\frac{1}{r} \frac{\partial}{\partial r} (r v_r) + \frac{1}{r} \frac{\partial}{\partial \theta} (v_\theta) + \frac{\partial}{\partial z} (v_z) = 0 \quad (\text{D.2})$$

Convective time derivative:

$$\mathbf{V} \cdot \nabla = v_r \frac{\partial}{\partial r} + \frac{1}{r} v_\theta \frac{\partial}{\partial \theta} + v_z \frac{\partial}{\partial z} \quad (\text{D.3})$$

Laplacian operator:

$$\nabla^2 = \frac{1}{r} \frac{\partial}{\partial r} \left( r \frac{\partial}{\partial r} \right) + \frac{1}{r^2} \frac{\partial^2}{\partial \theta^2} + \frac{\partial^2}{\partial z^2} \quad (\text{D.4})$$

The  $r$ -momentum equation:

$$\frac{\partial v_r}{\partial t} + (\mathbf{V} \cdot \nabla) v_r - \frac{1}{r} v_\theta^2 = -\frac{1}{\rho} \frac{\partial p}{\partial r} + g_r + \nu \left( \nabla^2 v_r - \frac{v_r}{r^2} - \frac{2}{r^2} \frac{\partial v_\theta}{\partial \theta} \right) \quad (\text{D.5})$$

The  $\theta$ -momentum equation:

$$\frac{\partial v_\theta}{\partial t} + (\mathbf{V} \cdot \nabla) v_\theta + \frac{1}{r} v_r v_\theta = -\frac{1}{\rho r} \frac{\partial p}{\partial \theta} + g_\theta + \nu \left( \nabla^2 v_\theta - \frac{v_\theta}{r^2} + \frac{2}{r^2} \frac{\partial v_r}{\partial \theta} \right) \quad (\text{D.6})$$

The  $z$ -momentum equation:

$$\frac{\partial v_z}{\partial t} + (\mathbf{V} \cdot \nabla) v_z = -\frac{1}{\rho} \frac{\partial p}{\partial z} + g_z + \nu \nabla^2 v_z \quad (\text{D.7})$$

The energy equation:

$$\rho c_p \left[ \frac{\partial T}{\partial t} + (\mathbf{V} \cdot \nabla) T \right] = k \nabla^2 T + \mu [2(\epsilon_{rr}^2 + \epsilon_{\theta\theta}^2 + \epsilon_{zz}^2) + \epsilon_{\theta z}^2 + \epsilon_{rz}^2 + \epsilon_{r\theta}^2] \quad (\text{D.8})$$

where  $\epsilon_{rr} = \frac{\partial v_r}{\partial r}$        $\epsilon_{\theta\theta} = \frac{1}{r} \left( \frac{\partial v_\theta}{\partial \theta} + v_r \right)$

$$\epsilon_{zz} = \frac{\partial v_z}{\partial z} \quad \epsilon_{\theta z} = \frac{1}{r} \frac{\partial v_z}{\partial \theta} + \frac{\partial v_\theta}{\partial z} \quad (\text{D.9})$$

$$\epsilon_{rz} = \frac{\partial v_r}{\partial z} + \frac{\partial v_z}{\partial r} \quad \epsilon_{r\theta} = \frac{1}{r} \left( \frac{\partial v_r}{\partial \theta} - v_\theta \right) + \frac{\partial v_\theta}{\partial r}$$

Viscous stress components:

$$\begin{aligned} \tau_{rr} &= 2\mu \epsilon_{rr} & \tau_{\theta\theta} &= 2\mu \epsilon_{\theta\theta} & \tau_{zz} &= 2\mu \epsilon_{zz} \\ \tau_{r\theta} &= \mu \epsilon_{r\theta} & \tau_{\theta z} &= \mu \epsilon_{\theta z} & \tau_{rz} &= \mu \epsilon_{rz} \end{aligned} \quad (\text{D.10})$$

Angular velocity components:

$$\begin{aligned} 2\omega_r &= \frac{1}{r} \frac{\partial v_z}{\partial \theta} - \frac{\partial v_\theta}{\partial z} \\ 2\omega_\theta &= \frac{\partial v_r}{\partial z} - \frac{\partial v_z}{\partial r} \\ 2\omega_z &= \frac{1}{r} \frac{\partial}{\partial r} (r v_\theta) - \frac{1}{r} \frac{\partial v_r}{\partial \theta} \end{aligned} \quad (\text{D.11})$$

# Answers to Selected Problems

## Chapter 1

P1.2 5.7E18 kg; 1.2E44 molecules

P1.6 (a) The formula is inconsistent.

P1.8  $\sigma \approx 1.00 \text{ My/l}$

P1.10 Yes, all terms are  $\{ML/T^2\}$

P1.12  $\{B\} = \{L^{-1}\}$

P1.14  $Q = \text{Const } B g^{1/2} H^{3/2}$

P1.16 All terms are  $\{ML^{-2}T^{-2}\}$

P1.18  $V = V_0 e^{-mt/K}$

P1.20 (b) 2080

P1.24 (a) 41 kPa; (b)  $0.65 \text{ kg/m}^3$

P1.26  $W_{\text{air}} = 0.71 \text{ lbf}$

P1.28  $\rho_{\text{wet}} = 1.10 \text{ kg/m}^3, \rho_{\text{dry}} = 1.13 \text{ kg/m}^3$

P1.30  $W_{1-2} = 21 \text{ ft} \cdot \text{lbf}$

P1.32 (a) 76 kN; (b) 501 kN

P1.34 (a)  $\rho_1 = 5.05 \text{ kg/m}^3$ ; (b)  $\rho_2 = 2.12 \text{ kg/m}^3$  (ideal gas)

P1.36 (b) 1.36E6 Pa

P1.38  $\tau = 1380 \text{ Pa}, Re_L = 28$

P1.40  $A = 0.0016 \text{ kg/(m} \cdot \text{s}), B = 1903 \text{ K}$

P1.42  $\mu/\mu_{200\text{K}} \approx (T \text{ K}/200 \text{ K})^{0.68}$

P1.44 720 W

P1.46 (d) 3.0 m/s; (e) 0.79 m/s; (f) 22 m/s

P1.48  $F \approx (\mu_1/h_1 + \mu_2/h_2)AV$

P1.50 (a) Yes; (b)  $\mu \approx 0.40 \text{ kg/(m-s)}$

P1.52  $P \approx 73 \text{ W}$

P1.54  $M \approx \pi \mu \Omega R^4/h$

P1.56  $\mu = 3M \sin \theta / (2\pi \Omega R^3)$

P1.58  $\mu = 0.040 \text{ kg/(m} \cdot \text{s}),$  last 2 points are turbulent flow

P1.60 39,500 Pa

P1.62 28,500 Pa

P1.64 4.1 mm

P1.66  $F = 0.014 \text{ N}$

P1.68  $h = (Y/\rho g)^{1/2} \cot \theta$

P1.70  $h = 2Y \cos \theta / (\rho g W)$

P1.72  $z \approx 4800 \text{ m}$

P1.74 8.6 km

P1.76 (a) 539 m/s; (b) 529 m/s

P1.78 (a) 25°C; (b) 4°C

P1.80  $Ma = 1.20$

P1.82  $y = x \tan \theta + \text{constant}$

P1.86 Approximately 5.0 percent

P1.88 (a) 0.29 kg/(m-s); (b) 4.4 percent

P1.90 5.6%

## Chapter 2

P2.2  $\sigma_{xy} = -289 \text{ lb/ft}^2, \tau_{AA} = -577 \text{ lb/ft}^2$

P2.4 Approximately 100 degrees

P2.6 (a) 26.9 ft; (b) 30.0 in; (c) 10.35 m; (d) 13,100 mm

P2.8 (a) 140 kPa; (b)  $\pm 10 \text{ m}$

P2.10 10,500 Pa

P2.12 8.0 cm

P2.14  $h_1 = 6.0 \text{ cm}, h_2 = 52 \text{ cm}$

P2.16 (a) 1885 lbf/ft<sup>2</sup>; (b) 2165 lbf/ft<sup>2</sup>

P2.18 1.56

P2.20 14 lbf

P2.22 0.94 cm

P2.24  $p_{\text{sealevel}} \approx 115 \text{ kPa}, m_{\text{exact}} = 5.3 \text{ E18 kg}$

P2.28 (a) 421 ft; (b) 452 ft

P2.30 (a) 29.6 kPa; (b)  $K = 0.98$

P2.32 22.6 cm

P2.34  $\Delta p = \Delta h [\gamma_{\text{water}}(1 + d^2/D^2) - \gamma_{\text{oil}}(1 - d^2/D^2)]$

P2.36 25°

P2.38  $p_B = 131 \text{ kPa}$

P2.40 Left leg drops 19.3 cm, right leg rises 5 cm vertically

P2.42  $p_A - p_B = (\rho_2 - \rho_1)gh$

P2.44 (a) 171 lb/ft<sup>2</sup>; (b) 392 lb/ft<sup>2</sup>; manometer reads friction loss

P2.46	1.45	P2.146	Leans to the right at $\theta = 27^\circ$
P2.48	(a) 132 kPa; (b) 1.38 m	P2.148	(a) backward; (b) forward
P2.50	(a) 220 ft; (b) 110,000 lbf	P2.150	5.5 cm; linear scale OK
P2.52	(a) 38,400 lbf; (b) 5.42 ft from A	P2.152	(a) 224 r/min; (b) 275 r/min
P2.56	16.08 ft	P2.154	552 r/min
P2.58	0.40 m	P2.156	420 r/min
P2.60	332 N	P2.158	10.57 r/min
P2.62	10.6 ft		
P2.64	1.35 m		
P2.66	$F = 1.18 \text{ E9 N}$ , $M_C = 3.13 \text{ E9 N} \cdot \text{m}$ counterclockwise, no tipping	<b>Chapter 3</b>	
P2.68	18,040 N	P3.2	$\mathbf{r}$ = position vector from point $O$
P2.70	0.79 m	P3.4	1.73 in
P2.72	$h \approx 1.12 \text{ m}$	P3.6	$Q = (2b/3)(2g)^{1/2}[(h+L)^{3/2} - (h-L)^{3/2}]$
P2.74	$H = R[\pi/4 + \{(\pi/4)^2 + 2/3\}^{1/2}]$	P3.8	(a) 5.45 m/s; (b) 5.89 m/s; (c) 5.24 m/s
P2.76	(a) 239 kN; (c) 388 kN · m	P3.10	(a) 3 m/s; (b) 18 m/s; (c) 5 cm/s out
P2.78	(b) $F_{AB} = 4390 \text{ N}$ , $F_{CD} = 4220 \text{ N}$	P3.12	$\Delta t = 46 \text{ s}$
P2.80	$\theta > 77.4^\circ$	P3.14	$dh/dt = (Q_1 + Q_3 - Q_2)/(\pi d^2/4)$
P2.82	$F_H = 97.9 \text{ MN}$ , $F_V = 153.8 \text{ MN}$	P3.16	$Q_{\text{top}} = 3U_0 b \delta/8$
P2.84	(a) $F_V = 2940 \text{ N}$ ; $F_H = 6880 \text{ N}$	P3.18	(b) $Q = 16bh u_{\max}/9$
P2.86	$P = 59 \text{ kN}$	P3.20	(a) 7.8 mL/s; (b) 1.24 cm/s
P2.88	$F_H = 176 \text{ kN}$ , $F_V = 31.9 \text{ kN}$ , yes	P3.22	(a) 0.06 kg/s; (b) 1060 m/s; (c) 3.4
P2.90	$F_V = 22,600 \text{ N}$ ; $F_H = 16,500 \text{ N}$	P3.24	$h = [3Kt^2 d^2/(8 \tan^2 \theta)]^{1/3}$
P2.92	$F_{\text{one bolt}} \approx 11,300 \text{ N}$	P3.26	$Q = 2U_0 b h/3$
P2.94	Forces on each panel are equal.	P3.28	(a) 0.131 kg/s; (b) 115 kPa
P2.96	$F_H = 336 \text{ kN}$ ; $F_V = 162 \text{ kN}$	P3.30	20 minutes
P2.98	$F_H = 7987 \text{ lbf}$ , $F_V = 2280 \text{ lbf}$	P3.32	$V_{\text{hole}} = 6.1 \text{ m/s}$
P2.100	$F_H = 0$ , $F_V = 297 \text{ kN}$	P3.34	$V_2 = 4660 \text{ ft/s}$
P2.102	(a) 238 kN; (b) 125 kN	P3.36	$U_3 = 6.33 \text{ m/s}$
P2.104	5.0 N	P3.38	$V = V_0 r/(2h)$
P2.106	$z \approx 4000 \text{ m}$	P3.40	500 N to the left
P2.108	(a) 0.0427 m; (b) 1592 kg/m <sup>3</sup>	P3.42	$F = (p_1 - p_a)A_1 - \rho_1 A_1 V_1^2 [(D_1/D_2)^2 - 1]$
P2.110	(a) 14.95 N, SG = 0.50	P3.44	$F = \rho U^2 L b/3$
P2.112	(a) 39 N; (b) 0.64	P3.46	$\alpha = (1 + \cos \theta)/2$
P2.114	0.636	P3.48	$V_0 \approx 2.27 \text{ m/s}$
P2.116	(a) Yes; (b) Yes; (c) 3.51 in	P3.50	102 kN
P2.118	6.14 ft	P3.52	$F = \rho Wh V_1^2 [1/(1 - \sin \theta) - 1]$ to the left
P2.120	34.3°	P3.54	163 N
P2.122	$a/b \approx 0.834$	P3.56	(a) 18.5 N to left; (b) 7.1 N up
P2.124	6850 m	P3.58	40 N
P2.126	3130 Pa (vacuum)	P3.60	2100 N
P2.128	Yes, stable if $S > 0.789$	P3.62	3100 N
P2.130	Slightly unstable, $MG = -0.007 \text{ m}$	P3.64	980 N
P2.132	Stable if $R/h > 3.31$	P3.66	8800 N
P2.134	(a) unstable; (b) stable	P3.70	91 lbf
P2.136	$MG = L^2/(3\pi R) - 4R/(3\pi) > 0$ if $L > 2R$	P3.72	Drag $\approx 4260 \text{ N}$
P2.138	2.77 in deep; volume = 10.8 fluid ounces	P3.74	$F_x = 0$ , $F_y = -17 \text{ N}$ , $F_z = 126 \text{ N}$
P2.140	$a_x = (a) -1.96 \text{ m/s}^2$ (deceleration); (b) $-5.69 \text{ m/s}^2$ (deceleration)	P3.76	(a) 1670 N/m; (b) 3.0 cm; (c) 9.4 cm
P2.142	(a) 16.3 cm; (b) 15.7 N	P3.80	$F = (\rho/2)gb(h_1^2 - h_2^2) - \rho h_1 b V_1^2 (h_1/h_2 - 1)$
P2.144	(a) $a_x \approx 319 \text{ m/s}^2$ ; (b) no effect, $p_A = p_B$	P3.82	25 m/s
		P3.84	23 N
		P3.86	274 kPa
		P3.88	$V = \zeta + [\zeta^2 + 2\zeta V_j]^{1/2}$ , $\zeta = \rho Q/2k$

- P3.90  $dV/dt = g$   
 P3.92  $dV/dt = gh/(L + h)$   
 P3.94  $V_{\text{jet}} = 23.7 \text{ ft/s}$   
 P3.96  $d^2Z/dt^2 + 2gZ/L = 0$   
 P3.100 (a) 507 m/s and 1393 m; (b) 14.5 km  
 P3.102  $h_2/h_1 = -\frac{1}{2} + \frac{1}{2}[1 + 8V_1^2/(gh_1)]^{1/2}$   
 P3.104  $\Omega = (-V_e/R) \ln(1 - \dot{m}/M_0)$   
 P3.106  $F = (\pi/8)\rho D^2 V^2$   
 P3.108 (a)  $V = V_0/(1 + CV_0 t/M)$ ,  $C = \rho b h(1 - \cos \theta)$   
 P3.110  $F_{\text{bolts}} = 1340 \text{ lbf}$   
 P3.112 (a) 10.3 kg/s; (b) 760 kPa  
 P3.114 (a)  $V_2 = 9.96 \text{ m/s}$ ; (b)  $h = 40 \text{ cm}$   
 P3.116  $X = 2[h(H - h)]^{1/2}$   
 P3.120 (a) 0.495 ft<sup>3</sup>/s; (b) 12.3 ft<sup>3</sup>/s  
 P3.122  $h_{\max} = 25.4 \text{ cm}$   
 P3.126 (a) 0.197 ft<sup>3</sup>/s; (b) 0.089 ft<sup>3</sup>/s  
 P3.130 104 kPa (gage)  
 P3.132  $Q = 127 \text{ cm}^3/\text{s}$   
 P3.134 (a) 15 m; (b) 25 mm  
 P3.136 0.037 kg/s  
 P3.140 5.93 m (subcritical); 0.432 m (supercritical)  
 P3.142  $t_0 = [2(\alpha - 1)h_0/g]^{1/2}$ ,  $\alpha = (D/d)^4$   
 P3.144 635 N  
 P3.150  $T_0 = -305 \text{ kN-m}$   
 P3.154  $T_B = 40 \text{ ft-lbf}$   
 P3.156 2.44 kg/s  
 P3.158  $P = \rho Q \omega R V_n (\cot \alpha_1 + \cot \alpha_2)$   
 P3.160  $T_B = -2400 \text{ kN-m}$   
 P3.162 197 hp; max power at 179 r/min  
 P3.164  $T_0 = \rho Q V_w (R + L/2) \text{ k}$   
 P3.166  $Q_0 = 2.5 \text{ m}^3/\text{s}$ ;  $T_0 = 23.15^\circ\text{C}$   
 P3.168  $\Delta T \approx 0.7^\circ\text{F}$   
 P3.170 (a) 699 kJ/kg; (b) 7.0 MW  
 P3.172 8.7 m  
 P3.174 (a) 410 hp; (b) 540 hp  
 P3.176 97 hp  
 P3.178 8.4 kW  
 P3.180 112 hp  
 P3.182 3.2 °C/s  
 P3.184 76.5 m<sup>3</sup>/s and 138 m<sup>3</sup>/s
- Chapter 4**
- P4.2 (a)  $du/dt = (2V_0^2/L)(1 + 2x/L)$   
 P4.4 (b)  $a_x = (U_0^2/L)(1 + x/L)$ ;  $a_y = (U_0^2/L)(y/L)$   
 P4.6 (b)  $a_x = 16x$ ;  $a_y = 16y$   
 P4.8 (a) 0.0196 V<sup>2</sup>/L; (b) at  $t = 1.05 L/U$   
 P4.10 (a)  $v_r = U \cos \theta + V \sin \theta$ ; (b) Yes.  
 P4.12 If  $v_\theta = v_\phi = 0$ ,  $v_r = r^{-2} \text{ fcn}(\theta, \phi)$   
 P4.14  $v_\theta = \text{fcn}(r)$  only  
 P4.16 (a) Yes, continuity is satisfied.  
 P4.18  $\rho = \rho_0 L_0/(L_0 - Vt)$
- P4.20  $v = v_0 = \text{const}$ ,  $\{K\} = \{L/T\}$ ,  $\{a\} = \{L^{-1}\}$   
 P4.22  $v_r = -B r/2 + f(z)/r$   
 P4.24 (b)  $B = 3v_w/(2h^3)$   
 P4.28 (b)  $p = p_0 - 8\rho(x^2 + y^2)$   
 P4.30 (a, b) Yes, continuity and Navier-Stokes are satisfied.  
 P4.32  $f_1 = C_1 r$ ;  $f_2 = C_2/r$   
 P4.36  $C = \rho g \sin \theta/(2\mu)$   
 P4.40  $T = T_w + (\mu U^2/3k)(1 - y^4/h^4)$   
 P4.48  $\psi = U_0 r \sin \theta - V_0 r \cos \theta + \text{const}$   
 P4.50 (a) Yes,  $\psi$  exists.  
 P4.52  $\psi = -4Q\theta/(\pi b)$   
 P4.54  $Q = ULb$   
 P4.60 Irrotational,  $z_C = H - \omega^2 R^2/(2g)$   
 P4.62  $\psi = Vy^2/(2h) + \text{const}$   
 P4.66  $\psi = -K \sin \theta/r$   
 P4.68 (a) Yes, a velocity potential exists.  
 P4.70  $V \approx 2.33 \text{ m/s}$ ,  $\alpha \approx -16.5^\circ$   
 P4.72 (a)  $\psi = -0.0008\theta$ ; (b)  $\phi = -0.0008 \ln(r)$   
 P4.74  $\psi = B r \sin \theta + B L \ln r + \text{const}$   
 P4.76 Yes,  $\psi$  exists.  
 P4.78  $y = A r^n \cos(n\theta) + \text{const}$   
 P4.80 (a)  $w = (\rho g/2\mu)(2\delta x - x^2)$   
 P4.82 Obsessive result:  $v_\theta = \Omega R^2/r$   
 P4.84  $v_z = (\rho g b^2/2\mu) \ln(r/a) - (\rho g/4\mu)(r^2 - a^2)$   
 P4.86  $Q = 0.0031 \text{ m}^3/(\text{s} \cdot \text{m})$   
 P4.88  $v_z = U \ln(r/b)/[\ln(a/b)]$   
 P4.90 (a) 54 kg/h; (b) 7 mm  
 P4.92  $h = h_0 \exp[-\pi D^4 \rho g t/(128\mu L A_0)]$   
 P4.94  $v_\theta = \Omega R^2/r$   
 P4.96 (a) 531 Pa; (b) 943 W
- Chapter 5**
- P5.2 Prototype  $V = 22.8 \text{ mi/h}$   
 P5.4  $V = 1.55 \text{ m/s}$ ,  $F = 1.3 \text{ N}$   
 P5.6 (a) 118 mi/h; (b) 950 lbf  
 P5.8  $Mo = g\mu^4/(\rho Y^3)$   
 P5.10 (a)  $\{ML^{-2}T^{-2}\}$ ; (b)  $\{MLT^{-2}\}$   
 P5.12  $St = \mu U/(\rho g D^2)$   
 P5.14 One possible group is  $hL/k$ .  
 P5.16 Stanton number =  $h/(\rho V c_p)$   
 P5.18  $Q\mu/[(\Delta p/L)b^4] = \text{const}$   
 P5.20 One possible group is  $\Omega D/U$ .  
 P5.22  $\Omega D/V = \text{fcn}(N, H/L)$   
 P5.24  $F/(\rho V^2 L^2) = \text{fcn}(\alpha, \rho VL/\mu, L/D, V/a)$   
 P5.26 (a) Indeterminate; (b)  $T = 2.75 \text{ s}$   
 P5.28  $\delta/L = \text{fcn}[L/D, \rho V D/\mu, E/(\rho V^2)]$   
 P5.30  $\dot{m}(RT_o)^{1/2}/(p_o D^2) = \text{fcn}(c_p/R)$   
 P5.32  $Q/(bg^{1/2} H^{3/2}) = \text{const}$   
 P5.34  $k_{\text{hydrogen}} \approx 0.182 \text{ W/(m} \cdot \text{K)}$   
 P5.36 (a)  $Q_{\text{loss}} R/(A\Delta T) = \text{constant}$   
 P5.38  $d/D = \text{fcn}(\rho UD/\mu, \rho U^2 D/Y)$

- P5.42 Halving  $m$  increases  $f$  by about 41 percent.
- P5.44 (a)  $\{\sigma\} = \{L^2\}$
- P5.48  $F \approx 0.17 \text{ N}$ ; (doubling  $U$  quadruples  $F$ )
- P5.50 Approximately 2000 lbf (on earth)
- P5.52 (a) 0.44 s; (b) 768,000
- P5.54 Power  $\approx 7 \text{ hp}$
- P5.56  $F_{\text{air}} \approx 25 \text{ N/m}$
- P5.58  $V \approx 2.8 \text{ m/s}$
- P5.60 (b) 4300 N
- P5.62 (a) Yes; (b) 0.425 kg/s
- P5.64  $\omega_{\text{aluminum}} = 0.77 \text{ Hz}$
- P5.66 (a)  $V = 27 \text{ m/s}$ ; (b)  $z = 27 \text{ m}$
- P5.68 (b) Approximately 1800 N
- P5.70  $F = 87 \text{ lbf}$  (extrapolated)
- P5.72 About 44 kN (extrapolated)
- P5.74 Prototype moment =  $88 \text{ kN} \cdot \text{m}$
- P5.76 Drag = 107,000 lbf
- P5.78 Weber no.  $\approx 100$  if  $L_m/L_p = 0.0090$
- P5.80 (a) 1.86 m/s; (b) 42,900; (c) 254,000
- P5.82 561 kN
- P5.84  $V_m = 39 \text{ cm/s}$ ;  $T_m = 3.1 \text{ s}$ ;  $H_m = 0.20 \text{ m}$
- P5.88 At 340 W,  $D = 0.109 \text{ m}$
- Chapter 6**
- P6.2 About 5600 barrels per day
- P6.4 (a)  $106 \text{ m}^3/\text{h}$ ; (b)  $3.6 \text{ m}^3/\text{h}$
- P6.6 (a) hydrogen,  $x = 43 \text{ m}$
- P6.8 (a)  $-3600 \text{ Pa/m}$ ; (b)  $-13,400 \text{ Pa/m}$
- P6.10 (a) From A to B; (b)  $h_f = 7.8 \text{ m}$
- P6.12  $\mu = 0.29 \text{ kg/m-s}$
- P6.14  $Q = 0.0067 \text{ m}^3/\text{h}$  if  $H = 50 \text{ cm}$
- P6.16 19 mm
- P6.18  $\mu = 0.0026 \text{ kg/m-s}$  (laminar flow)
- P6.20 4500 cc/h
- P6.22  $F = 4.0 \text{ N}$
- P6.24 (a)  $0.019 \text{ m}^3/\text{h}$ , laminar; (b)  $d = 2.67 \text{ mm}$
- P6.26 (a)  $D_2 = 5.95 \text{ cm}$
- P6.28  $\Delta p = 65 \text{ Pa}$
- P6.30 (a)  $19.3 \text{ m}^3/\text{h}$ ; (b) flow is up
- P6.32 (a) flow is up; (b)  $1.86 \text{ m}^3/\text{h}$
- P6.36 (a)  $0.029 \text{ lbf/ft}^2$ ; (b)  $70 \text{ ft/s}$
- P6.38  $5.72 \text{ m/s}$
- P6.42 16.7 mm
- P6.44  $h_f = 10.4 \text{ m}$ ,  $\Delta p = 1.4 \text{ MPa}$
- P6.46 1340 gal/min
- P6.48  $r/R = 1 - e^{-3/2}$
- P6.50 (a)  $-4000 \text{ Pa/m}$ ; (b) 50 Pa; (c) 46 percent
- P6.52  $p_1 = 2.38 \text{ MPa}$
- P6.54  $t_{\text{drain}} = [4WY/(\pi D^2)][2h_0(1 + f_{\text{av}}L/D)/g]^{1/2}$
- P6.56 (a) 2680 lbf/in $^2$ ; (b) 5300 hp
- P6.58  $80 \text{ m}^3/\text{h}$
- P6.60 (a) Not identical to Haaland
- P6.62 204 hp
- P6.64  $Q = 19.6 \text{ m}^3/\text{h}$  (laminar,  $Re = 1450$ )
- P6.66 (a) 56 kPa; (b)  $85 \text{ m}^3/\text{h}$ ; (c)  $u = 3.3 \text{ m/s}$  at  $r = 1 \text{ cm}$
- P6.70  $Q = 31 \text{ m}^3/\text{h}$
- P6.72  $D \approx 9.2 \text{ cm}$
- P6.74  $L = 205 \text{ m}$
- P6.76  $Q = 15 \text{ m}^3/\text{h}$  or  $9.0 \text{ m}^3/\text{h}$
- P6.78  $Q = 25 \text{ m}^3/\text{h}$  (to the left)
- P6.80  $Q = 0.905 \text{ m}^3/\text{s}$
- P6.82 (a)  $10.9 \text{ m}^3/\text{h}$ ; (b)  $100 \text{ m}^3/\text{h}$
- P6.84  $D \approx 0.104 \text{ m}$
- P6.86 (a)  $3.0 \text{ m/s}$ ; (b)  $0.325 \text{ m/m}$ ; (c)  $2770 \text{ Pa/m}$
- P6.88 About 17 passages
- P6.90  $H = 36 \text{ in}$
- P6.92 (a)  $1530 \text{ m}^3/\text{h}$ ; (b)  $6.5 \text{ Pa}$  (vacuum)
- P6.94  $a = 18.3 \text{ cm}$
- P6.96 (b)  $12,800 \text{ Pa}$
- P6.98 Approximately 128 squares
- P6.100 A maximum of 17 elbows
- P6.102 (a)  $5.55 \text{ hp}$ ; (b)  $5.31 \text{ hp}$  with  $6^\circ$  cone
- P6.104 (a)  $5400 \text{ Pa}$ ; (b)  $h/D \approx 0.35$
- P6.106  $Q = 0.0296 \text{ ft}^3/\text{s}$
- P6.108 (a)  $K \approx 9.7$ ; (b)  $Q \approx 0.48 \text{ ft}^3/\text{s}$
- P6.110 840 W
- P6.112  $Q = 0.0151 \text{ ft}^3/\text{s}$
- P6.114 Short duct:  $Q = 6.92 \text{ ft}^3/\text{s}$
- P6.116  $Q = 0.027 \text{ m}^3/\text{s}$
- P6.118  $\Delta p = 131 \text{ lbf/in}^2$
- P6.120  $Q_1 = 0.0281 \text{ m}^3/\text{s}$ ,  $Q_2 = 0.0111 \text{ m}^3/\text{s}$ ,  $Q_3 = 0.0164 \text{ m}^3/\text{s}$
- P6.122 Increased  $\epsilon/d$  and  $L/d$  are the causes
- P6.124  $Q_1 = -2.09 \text{ ft}^3/\text{s}$ ,  $Q_2 = 1.61 \text{ ft}^3/\text{s}$ ,  $Q_3 = 0.49 \text{ ft}^3/\text{s}$
- P6.126  $\theta_{\text{opening}} = 35^\circ$
- P6.128  $Q_{AB} = 3.47$ ,  $Q_{BC} = 2.90$ ,  $Q_{BD} = 0.58$ ,  $Q_{CD} = 5.28$ ,  $Q_{AC} = 2.38 \text{ ft}^3/\text{s}$  (all)
- P6.130  $Q_{AB} = 0.95$ ,  $Q_{BC} = 0.24$ ,  $Q_{BD} = 0.19$ ,  $Q_{CD} = 0.31$ ,  $Q_{AC} = 1.05 \text{ ft}^3/\text{s}$  (all)
- P6.132  $2\theta = 6^\circ$ ,  $D_e = 2.0 \text{ m}$ ,  $p_e = 224 \text{ kPa}$
- P6.134  $2\theta = 10^\circ$ ,  $W_e = 8.4 \text{ ft}$ ,  $p_e = 2180 \text{ lbf/ft}^2$
- P6.136 (a)  $25.5 \text{ m/s}$ , (b)  $0.109 \text{ m}^3/\text{s}$ , (c)  $1.23 \text{ Pa}$
- P6.138  $46.7 \text{ m/s}$
- P6.140  $\Delta p = 273 \text{ kPa}$
- P6.142  $Q = 18.6 \text{ gal/min}$ ,  $d_{\text{reducer}} = 0.84 \text{ cm}$
- P6.144 (a)  $h = 58 \text{ cm}$
- P6.146 (a)  $0.00653 \text{ m}^3/\text{s}$ ; (b)  $100 \text{ kPa}$
- P6.148 (a)  $1.58 \text{ m}$ ; (b)  $1.7 \text{ m}$
- P6.150  $\Delta p = 27 \text{ kPa}$
- P6.152  $D = 4.12 \text{ cm}$
- P6.154 106 gal/min
- P6.156  $Q = 0.924 \text{ ft}^3/\text{s}$
- P6.158 (a)  $49 \text{ m}^3/\text{h}$ ; (b)  $6200 \text{ Pa}$

**Chapter 7**

- P7.2 This is probably helium.  
 P7.4 (a)  $4 \mu\text{m}$ ; (b) 1 m  
 P7.6  $H = 2.5$  (versus 2.59 for Blasius)  
 P7.8 Approximately 0.073 N per meter of width  
 P7.12 Does not satisfy  $\partial^2 u / \partial y^2 = 0$  at  $y = 0$   
 P7.14  $C = \rho v_0 / \mu = \text{const} < 0$  (wall suction)  
 P7.16 (a)  $F = 181 \text{ N}$ ; (b) 256 N  
 P7.18 (a) 1.54 m/s; (b) 0.0040 Pa  
 P7.20  $x \approx 0.91 \text{ m}$   
 P7.22  $\psi = (\nu x U)^{1/2} f(\eta)$   
 P7.24  $h_1 = 9.2 \text{ mm}$ ;  $h_2 = 5.5 \text{ mm}$   
 P7.26  $F_a = 2.83 F_1$ ,  $F_b = 2.0 F_1$   
 P7.28 (a)  $F_{\text{drag}} = 2.66 N^2 (\rho \mu L)^{1/2} U^{3/2} a$   
 P7.30 Predicted thickness is about 10 percent higher  
 P7.32  $F = 0.0245 \rho v^{1/7} L^{6/7} U_0^{13/7} \delta$   
 P7.34 45 percent  
 P7.36 7.2 m/s = 14 kn  
 P7.38 (a) 7.6 m/s; (b) 6.2 m/s  
 P7.40  $L = 3.51 \text{ m}$ ,  $b = 1.14 \text{ m}$   
 P7.42 (a) 5.2 N/m  
 P7.44 Accurate to about  $\pm 6$  percent  
 P7.46  $\varepsilon \approx 9 \text{ mm}$ ,  $U = 11.1 \text{ m/s} = 22 \text{ kn}$   
 P7.48 Separation at  $x/L = 0.158$  (1 percent error)  
 P7.50 Separation at  $\theta \approx 2.3$  degrees  
 P7.52 (a)  $\text{Re}_b = 0.84 < 1$ ; (b)  $2a = 30 \text{ mm}$   
 P7.54  $z^* = T_0/[B(n+1)]$ ,  $n = g/(RB) - 1$   
 P7.56 (a) 14 N; (b) crosswind creates a very large side force  
 P7.60 Tow power = 140 hp  
 P7.62 Square side length  $\approx 0.83 \text{ m}$   
 P7.64  $\Delta t_{1000-2000\text{m}} = 202 \text{ s}$   
 P7.68 69 m/s  
 P7.70 40 ft  
 P7.72 (a)  $L = 6.3 \text{ m}$ ; (b) 120 m  
 P7.74 About 130 mi/h  
 P7.76 (a) 343 hp  
 P7.78 28,400 hp  
 P7.80  $\theta = 72^\circ$   
 P7.82 (a) 46 s  
 P7.84  $V = 9 \text{ m/s}$   
 P7.86 Approximately 2.9 m by 5.8 m  
 P7.88 (a) 62 hp; (b) 86 hp  
 P7.90  $V_{\text{overturn}} \approx 145 \text{ ft/s} = 99 \text{ mi/h}$   
 P7.94 Torque  $\approx (C_D/4)\rho \Omega^2 D R^4$ ,  $\Omega_{\text{max}} = 85 \text{ r/min}$   
 P7.96  $\Omega_{\text{avg}} \approx 0.21 \text{ U/D}$   
 P7.98 (b)  $h \approx 0.18 \text{ m}$   
 P7.100 (a) 73 mi/h; (b) 79 mi/h  
 P7.104 29.5 knots  
 P7.106  $1130 \text{ m}^2$   
 P7.108  $\Delta x_{\text{ball}} \approx 13 \text{ m}$   
 P7.110  $\Delta y \approx 1.9 \text{ ft}$

- P7.114  $V_{\text{down}} \approx 25 \text{ m/min}$ ;  $V_{\text{up}} \approx 30 \text{ m/min}$   
 P7.116 (a) 87 mi/h; (b) 680 hp  
 P7.118 (a) 27 m/s; (b) 360 m  
 P7.120  $(L/D)_{\text{max}} = 21$ ;  $\alpha = 4.8^\circ$   
 P7.122 (a) 6.7 m/s; (b) 13.5 m/s = 26 kn  
 P7.124  $\Omega_{\text{crude theory}} \approx 340 \text{ r/s}$   
 P7.126 Approximately 850 ft

**Chapter 8**

- P8.2  $\Gamma = \pi \Omega (R_2^2 - R_1^2)$   
 P8.4 No,  $1/r$  is not a proper two-dimensional potential  
 P8.6  $\psi = B r^2 \sin(2\theta)$   
 P8.8  $\Gamma = 4B$   
 P8.10 (a) 1.27 cm  
 P8.12  $\Gamma = 0$   
 P8.14 Irrotational outer, rotational inner; minimum  $p = p_\infty - \rho \omega^2 R^2$  at  $r = 0$   
 P8.16 (a) 0.106 m to the left of  $A$   
 P8.18 From afar: a single source 4m  
 P8.20 Vortex near a wall (see Fig. 8.17b)  
 P8.22 Stagnation flow toward a bump  
 P8.24  $C_p = -\{2(x/a)/[1 + (x/a)^2]\}^2$ ,  $C_{p,\min} = -1.0$  at  $x = a$   
 P8.26 (a) 8.75 m; (b) 27.5 m on each side  
 P8.28 Creates a source in a square corner  
 P8.30  $r = 25 \text{ m}$   
 P8.32 14 m/s to the right  
 P8.34 Two stagnation points, at  $x = \pm a/\sqrt{3}$   
 P8.36  $U_\infty = 12.9 \text{ m/s}$ ,  $2L = 53 \text{ cm}$ ,  $V_{\text{max}} = 22.5 \text{ m/s}$   
 P8.40 1.47 m  
 P8.42 111 kPa  
 P8.44  $K = 3.44 \text{ m}^2/\text{s}$ ; (a) 218 kPa; (b) 205 kPa  
 upper, 40 kPa lower  
 P8.46  $F_{1\text{-bolt}} = 5060 \text{ N}$   
 P8.50  $h = 3a/2$ ,  $U_{\text{max}} = 5U/4$   
 P8.52  $V_{\text{boat}} = 10.4 \text{ ft/s}$  with wind at  $58^\circ$   
 P8.54  $F_{\text{parallel}} = 6700 \text{ lbf}$ ,  $F_{\text{normal}} = 2700 \text{ lbf}$ , power  $\approx 560 \text{ hp}$  (very approximate)  
 P8.60 This is Fig. 8.18a, flow in a  $60^\circ$  corner  
 P8.62 Stagnation flow near a “bump”  
 P8.66  $\lambda = 0.45m/(5m + 1)$  if  $U = Cx^m$   
 P8.68 Flow past a Rankine oval  
 P8.70 Applied to wind tunnel “blockage”  
 P8.72 Adverse gradient for  $x > a$   
 P8.74  $V_{B,\text{total}} = (8K_i + 4K_j)/(15a)$   
 P8.78 Need an infinite array of images  
 P8.82 (a) 4.5 m/s; (b) 1.13; (c) 1.26 hp  
 P8.84 (a) 0.21; (b) 1.9°  
 P8.86 (a) 26 m; (b) 8.7; (c) 1600 N  
 P8.88  $\alpha \approx 2.1^\circ$   
 P8.92 (a) 0.77 m; (b)  $V = 4.5 \text{ m/s}$  at  $(r, \theta) = (1.81, 51^\circ)$  and  $(1.11, 88^\circ)$

- P8.94 Yes, they are orthogonal  
 P8.96 (a)  $0.61 U_\infty^2/a$   
 P8.98 Yes, a closed teardrop shape appears  
 P8.100  $V = 14.1 \text{ m/s}$ ,  $p_A = 115 \text{ kPa}$   
 P8.102 (a) 1250 ft; (b) 1570 ft (crudely)

**Chapter 9**

- P9.2 (a)  $V_2 = 450 \text{ m/s}$ ,  $\Delta s = 515 \text{ J/(kg} \cdot \text{K)}$ ; (b)  $V_2 = 453 \text{ m/s}$ ,  
 $\Delta s = 512 \text{ J/(kg} \cdot \text{K)}$   
 P9.4 (a)  $+133 \text{ J/(kg}\cdot\text{K)}$   
 P9.6  $c_p = 1169 \text{ J/(kg} \cdot \text{K)}$ ;  $c_v = 980 \text{ J/(kg} \cdot \text{K)}$   
 P9.8 410 K  
 P9.10  $\text{Ma} = 0.78$   
 P9.12 (a) 2.13 E9 Pa and 1460 m/s; (b) 2.91 E9 Pa and 1670 m/s;  
 (c) 2645 m/s  
 P9.14 Approximately 1124 m/s  
 P9.18  $\text{Ma} \approx 0.24$   
 P9.20 (a) 41 kPa; (b) 421 m/s; (c) 1.27  
 P9.22 (a) 267 m/s; (b) 286 m/s  
 P9.24 (b) at  $\text{Ma} \approx 0.576$   
 P9.28 (a) 0.17 kg/s; (b) 0.90  
 P9.30 Deviation less than 1 percent at  $\text{Ma} = 0.3$   
 P9.32 (a) 141 kPa; (b) 101 kPa; (c) 0.706  
 P9.34 (a) 340 K  
 P9.36 (a) 0.142 kg/s  
 P9.40 (a) 0.192 kg/s  
 P9.42 (a)  $\text{Ma} = 0.90$ ,  $T = 260 \text{ K}$ ,  $V = 291 \text{ m/s}$   
 P9.44  $V_e = 5680 \text{ ft/s}$ ,  $p_e = 15.7 \text{ psia}$ ,  $T_e = 1587^\circ\text{R}$ , thrust = 4000 lbf  
 P9.46 (a)  $0.0020 \text{ m}^2$   
 P9.48 (a) 313 m/s; (b) 0.124 m/s; (c) 0.00331 kg/s  
 P9.50 (a) 0.126 kg/s; (b) 0.134 kg/s  
 P9.52 (a)  $5.9 \text{ cm}^2$ ; (b) 773 kPa  
 P9.54  $\text{Ma}_2 = 0.513$   
 P9.56 At about  $A_1 \approx 24.7 \text{ cm}^2$   
 P9.58 (a) 702 m/s; (b) 500 K  
 P9.60 Upstream:  $\text{Ma} = 1.92$ ,  $V = 585 \text{ m/s}$   
 P9.62  $C = 19,100 \text{ ft/s}$ ,  $V_{\text{inside}} = 15,900 \text{ ft/s}$   
 P9.64 (a)  $4.0 \text{ cm}^2$ ; (b) 325 kPa  
 P9.66  $h = 1.09 \text{ m}$   
 P9.68  $p_{\text{atm}} = 92.6 \text{ kPa}$ ; max flow = 0.140 kg/s  
 P9.70 119 kPa  
 P9.72  $D \approx 9.3 \text{ mm}$   
 P9.74 0.191 kg/s  
 P9.76  $\Delta t_{\text{shocks}} \approx 23 \text{ s}$ ;  $\Delta t_{\text{choking-stops}} \approx 39 \text{ s}$   
 P9.78 Case A: 0.071 kg/s; B: 0.068 kg/s  
 P9.80  $A^* = 2.4 \times 10^{-6} \text{ ft}^2$  or  $D_{\text{hole}} = 0.021 \text{ in}$   
 P9.82  $V_e = 110 \text{ m/s}$ ,  $\text{Ma}_e = 0.67$  (yes)  
 P9.84 (a) 0.96 kg/s; (b) 0.27; (c) 435 kPa  
 P9.86  $V_2 = 107 \text{ m/s}$ ,  $p_2 = 371 \text{ kPa}$ ,  $T_2 = 330 \text{ K}$ ,  $p_{02} = 394 \text{ kPa}$   
 P9.88 (a) 0.0646 kg/s

- P9.90 (a) 0.030; (b)  $16.5 \text{ lbf/in}^2$   
 P9.92 (a) 14.46 m  
 P9.96 (a) 128 m; (b) 80 m; (c) 105 m  
 P9.98 (a) 430; (b) 0.12; (c) 0.00243 kg/h  
 P9.100 (b) 101 kPa; (c) 61 m  
 P9.102 Flow is choked at 0.56 kg/s  
 P9.104  $p_{\text{tank}} = 190 \text{ kPa}$   
 P9.106 about 91 s  
 P9.108 Mass flow drops by about 32 percent  
 P9.112 (a) 105 m/s; (b) 215 kPa  
 P9.114 (a) 2.21; (b) 779 kPa; (c) 1146 K  
 P9.116  $V_{\text{plane}} \approx 2640 \text{ ft/s}$   
 P9.118  $V = 204 \text{ m/s}$ ,  $\text{Ma} = 0.6$   
 P9.120  $P$  is 3 m ahead of the small circle,  $\text{Ma} = 2.0$ ,  $T_{\text{stag}} = 518 \text{ K}$   
 P9.122  $\beta = 23.13^\circ$ ,  $\text{Ma}_2 = 2.75$ ,  $p_2 = 145 \text{ kPa}$   
 P9.124 (a) 1.87; (b) 293 kPa; (c) 404 K; (d) 415 m/s  
 P9.126 (a)  $25.9^\circ$ ; (b)  $26.1^\circ$   
 P9.128  $\delta_{\text{wedge}} \approx 15.5^\circ$   
 P9.132 (a)  $p_A = 18.0 \text{ psia}$ ; (b)  $p_B = 121 \text{ psia}$   
 P9.134  $\text{Ma}_3 = 1.02$ ,  $p_3 = 727 \text{ kPa}$ ,  $\phi = 42.8^\circ$   
 P9.136 (a)  $h = 0.40 \text{ m}$ ; (b)  $\text{Ma}_3 = 2.43$   
 P9.138  $p_r = 21.7 \text{ kPa}$   
 P9.140  $\text{Ma}_2 = 2.75$ ,  $p_2 = 145 \text{ kPa}$   
 P9.142 (a)  $\text{Ma}_2 = 2.641$ ,  $p_2 = 60.3 \text{ kPa}$ ; (b)  $\text{Ma}_2 = 2.299$ ,  
 $p_2 = 24.1 \text{ kPa}$   
 P9.144 (a) 10.34 degrees  
 P9.146 (a) 2.385; (b) 47 kPa  
 P9.148 (a) 4.44; (b) 9.6 kPa  
 P9.150 (a)  $\alpha = 4.10^\circ$ ; (b) drag = 2150 N/m  
 P9.152 Approximately 53 lbf
- Chapter 10**
- P10.2 (a)  $\text{Fr} = 2.69$   
 P10.4 These are piezometer tubes (no flow)  
 P10.6 (a)  $\text{Fr} = 3.8$ ; (b)  $V_{\text{current}} = 7.7 \text{ m/s}$   
 P10.8  $\Delta t_{\text{travel}} = 6.3 \text{ h}$   
 P10.10  $\lambda_{\text{crit}} = 2\pi(Y/\rho g)^{1/2}$   
 P10.14 Flow must be fully rough turbulent (high Re) for Chézy to be valid  
 P10.16 (a)  $0.553 \text{ m}^3/\text{s}$   
 P10.18 (a)  $12.4 \text{ m}^3/\text{s}$ ; (b) about 22 Pa  
 P10.20  $Q = 74 \text{ ft}^3/\text{s}$   
 P10.22  $S_0 = 0.00038$  (or  $0.38 \text{ m/km}$ )  
 P10.24 (a)  $n \approx 0.027$ ; (b) 2.28 ft  
 P10.30  $\Delta t \approx 32 \text{ min}$   
 P10.32  $A = 4.39 \text{ m}^2$ , 10% larger  
 P10.34 If  $b = 4 \text{ ft}$ ,  $y = 9.31 \text{ ft}$ ,  $P = 22.62 \text{ ft}$ ; if  $b = 8 \text{ ft}$ ,  
 $y = 4.07 \text{ ft}$ ,  $P = 16.14 \text{ ft}$   
 P10.36  $y_2 = 3.6 \text{ m}$   
 P10.38 Maximum flow at  $\theta = 60^\circ$   
 P10.42 The two are equally efficient.

- P10.44 Hexagon side length  $b = 2.12 \text{ ft}$   
 P10.46  $h_0/b \approx 0.49$   
 P10.48 (a) 0.00634; (b) 0.00637  
 P10.50 (a) 2.37; (b) 0.62 m; (c) 0.0023  
 P10.52  $W = 2.06 \text{ m}$   
 P10.54 (a) 1.98 m; (b) 3.11 m/s; (c) 0.00405  
 P10.56 (a) 7.11 ft/s; (b) 0.70  
 P10.58 (a) 0.0033; (b) 0.0016  
 P10.60  $y_2 = 0.679 \text{ m}; V_2 = 3.53 \text{ m/s}$   
 P10.64  $\Delta h = 15.94 \text{ cm}$   
 P10.66 (a) 1.47; (b)  $y_2 = 1.19 \text{ m}$   
 P10.70  $2600 \text{ m}^3/\text{s}$   
 P10.72 (a) 0.046 m; (b) 4.33 m/s; (c) 6.43  
 P10.76 (a)  $379 \text{ ft}^3/\text{s}$   
 P10.78  $H \approx 1.01 \text{ ft}$   
 P10.80 (a) 3.83 m; (b)  $4.83 \text{ m}^3/(\text{s} \cdot \text{m})$   
 P10.82 (a) 1.46 ft; (b) 15.5 ft/s; (c) 2.26; (d) 13%; (e) 2.52 ft  
 P10.84  $y_2 = 0.82 \text{ ft}; y_3 = 5.11 \text{ ft}; 47 \text{ percent}$   
 P10.86 (a) 1.18 ft; (b) 4.58 ft/s  
 P10.88 (a)  $2.22 \text{ m}^3/\text{s}/\text{m}$ ; (b) 0.79 m; (c) 5.17 m; (d) 60%; (e) 0.37 m  
 P10.90 (a)  $y_2 = 1.83 \text{ ft}; y_3 = 7.86 \text{ ft}$   
 P10.92  $y_1 = 1.71 \text{ mm}; V_1 = 0.310 \text{ m/s}$   
 P10.94 (a) 5.32; (b) 0.385 m/s; (c) 18.7 cm  
 P10.96  $R \approx 4.92 \text{ cm}$   
 P10.98 (a) steep S-3; (b) S-2; (c) S-1  
 P10.106 No entry depth leads to critical flow  
 P10.108 Approximately 6.6 m  
 P10.110 (a)  $y_{\text{crest}} \approx 0.782 \text{ m}$ ; (b)  $y(L) \approx 0.909 \text{ m}$   
 P10.112 M-1 curve, with  $y = 2 \text{ m}$  at  $L \approx 214 \text{ m}$   
 P10.114 11.5 ft  
 P10.120  $Y = 0.64 \text{ m}, \alpha = 34^\circ$   
 P10.122 5500 gal/min  
 P10.124 M-1 curve,  $y = 10 \text{ ft}$  at  $x = -3040 \text{ ft}$   
 P10.126 At  $x = -100 \text{ m}, y = 2.81 \text{ m}$   
 P10.128 At 300 m upstream,  $y = 2.37 \text{ m}$

**Chapter 11**

- P11.6 This is a diaphragm pump  
 P11.8 (a)  $H = 112 \text{ ft}$  and  $\Delta p = 49 \text{ lb/in}^2$ ; (b)  $H = 112 \text{ ft}$  (of gasoline);  $P = 15 \text{ hp}$   
 P11.10 (a) 12 gal/min; (b) 12 gal/min; (c) 87%  
 P11.12 (a) 11.3 m; (b) 1520 W  
 P11.14 1870 W

- P11.16  $Q \approx 7100 \text{ gal/min}; H \approx 38 \text{ m}$   
 P11.18  $V_{\text{vane}} = (1/3)V_{\text{jet}}$  for max power  
 P11.20 (a) 2 roots:  $Q = 7.5$  and  $38.3 \text{ ft}^3/\text{s}$ ; (b) 2 roots;  $H = 180 \text{ ft}$  and  $35 \text{ ft}$   
 P11.22 (a) BEP = 92 percent at  $Q = 0.20 \text{ m}^3/\text{s}$   
 P11.26 Both are fine, the largest is more efficient.  
 P11.28 BEP at about  $6 \text{ ft}^3/\text{s}$ ;  $N_s \approx 1430$ ,  $Q_{\max} \approx 12 \text{ ft}^3/\text{s}$   
 P11.30 (a) 1080 r/min; (b) 208 ft; (c) 7700 gal/min  
 P11.32 (a)  $D \approx 15.5 \text{ in}$ ; (c)  $n \approx 2230 \text{ r/min}$   
 P11.34 (a) 11.5 in; (b) 28 hp; (c) 100 ft; (d) 78 percent  
 P11.36 (a) No; (b) 24.5 in at 960 r/min  
 P11.38 (a) 18.5 hp; (b) 7.64 in; (c) 415 gal/min; (d) 81 percent  
 P11.40 (a)  $D_s = D(gH^*)^{1/4}/Q^{*1/2}$   
 P11.42  $\text{NPSH}_{\text{proto}} \approx 23 \text{ ft}$   
 P11.44 No cavitation, required depth is only 5 ft  
 P11.46  $D_s \approx C/N_s, C = 7800 \pm 7 \text{ percent}$   
 P11.48 (b) about 12 in  
 P11.52 (a)  $6.56 \text{ m}^3/\text{s}$ ; (b) 12.0 kW; (c)  $28.3^\circ$   
 P11.54 (a) 21 in; (b) 490 bhp  
 P11.56 (a)  $D = 5.67 \text{ ft}, n = 255 \text{ r/min}, P = 700 \text{ hp}$ ;  
      (b)  $D = 1.76 \text{ ft}, n = 1770 \text{ r/min}, P = 740 \text{ hp}$   
 P11.58 (b) Approximately 2500 r/min  
 P11.60 (b) No.  
 P11.62  $D = 18.7 \text{ ft}, \Delta p = 1160 \text{ Pa}$   
 P11.64 (a) 15.4 in; (b) 900 r/min  
 P11.66 720 ft $^3/\text{min}$ , non-BEP efficiency 78 percent  
 P11.68 (a) 4.8 in; (b) 6250 r/min  
 P11.70 (a) 212 ft; (b)  $5.8 \text{ ft}^3/\text{s}$   
 P11.72 (a) 10 gal/min; (b) 1.3 in  
 P11.74 (a) 14.9; (b) 15.9; (c) 20.7 kgal/min (all)  
 P11.76  $D_{\text{pipe}} \approx 1.70 \text{ ft}$   
 P11.78 Approximately 10 stages  
 P11.80 Both pumps work with three each in series, the largest being more efficient.  
 P11.84 Two turbines: (a)  $D \approx 9.6 \text{ ft}$ ; (b)  $D \approx 3.3 \text{ ft}$   
 P11.86  $N_{\text{sp}} \approx 70$ , hence Francis turbines  
 P11.88 (a) Francis; (c) 16 in; (d) 900 r/min; (e) 87 hp  
 P11.90  $P \approx 800 \text{ kW}$   
 P11.94 (a) 71 percent; (b)  $N_{\text{sp}} \approx 19$   
 P11.96 (a) 1.68 ft; (b) 0.78 ft  
 P11.100 About 5.7 MW  
 P11.102  $Q \approx 29 \text{ gal/min}$   
 P11.104 (a) 69 MW  
 P11.106 Approximately 15 mi/h

# Index

## A

absolute pressure, 68  
absolute temperature scales, 19  
absolute terms, 68  
accelerating coordinate system, 166–171  
acceleration field, 18, 230–231  
acceleration of gravity, 69–70  
Ackeret, Jacob, 676  
Ackeret drag theory, 676, 678  
Ackeret linearized theory, 677  
acoustics, 611  
active flow control, 496  
actuator disk, 802  
added mass, 578  
adiabatic and isentropic steady flow  
    about, 616–617  
    air, useful numbers for, 620–622  
    critical values at the sonic point, 619–620  
    isentropic pressure and density relations, 618–619  
    Mach number relations, 618  
        relationship to Bernoulli's equation, 619  
    adiabatic flow, 644–648  
    adiabatic frictional flow, 645  
    adiabatic process, 615  
    adiabatic relations, 653  
    adverse pressure gradient, 460, 476, 540  
*Aerocar* (car-plane), 507  
aerodynamic forces on road vehicles, 492–496  
aerodynamics, 457  
aeronautics, trends in, 680–681  
air, useful numbers, 620–622  
aircraft trailing vortices, 573–574  
airfoils  
    designs, 503  
    forces on, 160  
    lift efficiency, 565  
    shape, 562  
airfoil theory  
    aircraft trailing vortices, 573–574  
    flat-plate airfoil vortex sheet theory, 563–566  
    Kutta condition, 562–563  
    potential theory for thick cambered airfoils, 566–569  
    supersonic, 673–678  
    wings of finite span, 569–573  
air microbubbles, 496  
alternate states, 715  
alternative implicit approach, 588–589  
*Analytical Theory of Heat* (Fourier), 296

Anderson's formula, 777  
Andrade's equation, 52  
angle of attack, 500  
angles, 297  
angle valve, 389  
angular momentum relation, 141  
angular momentum theorem, 178–184  
annular strip of water, 496  
annulus, hydraulic diameter for, 385  
Anselmet, Fabien, 354  
apparent viscosity, 30  
arbitrary fixed control volume, 144–146  
arbitrary flow pattern, 144  
arbitrary moving and deformable control volume, 147–148  
Archimedes, 4, 92  
Archimedes' laws, 92, 93  
area ratio, 405, 406  
aspect ratio (AR), 406, 504, 569  
atmospheric fluid pressure, 166  
available head, 188  
average velocity, 152  
axial-flow pump performance, 782  
axial-flow pumps, 779  
axial-flow pump theory, 781–782  
axisymmetric flow, 279  
axisymmetric potential flow  
    the concept of hydrodynamic mass, 578–579  
    point doublet, 575  
    point source or sink, 575  
    spherical polar coordinates, 574–575  
uniform stream plus a point source, 575–577

## B

back pressure, 637  
backward-curved impeller blades, 762  
backwater curves, 739–741  
Banki turbines, 817  
basic plane flow, 574  
Bazin, Henri-Émile, 4, 707  
below-water area, 497  
Bernoulli, Daniel, 4, 13, 140, 169  
Bernoulli constant, 265  
Bernoulli equation  
    about, 139  
    adiabatic and isentropic steady flow, 619

Bernoulli equation—*Cont.*  
 diffuser performance, 404  
 as energy equation, 171  
 free surface, 531  
 frictionless flow, 169  
 in frictionless unsteady flow, 264  
 for incompressible flow, 297  
 origins of, 4–5  
 restrictions on, 171–172  
 in rotating coordinates, 766  
 for steady frictionless incompressible flow, 171  
 unsteady irrotational, 264  
 velocity potential, 530  
 Bernoulli obstruction theory, 419  
 Bernoulli relation, 13  
 best efficiency point (BEP), 767, 774  
 Betz, A., 802  
 Betz number, 805  
 Bingham plastic, 31  
 biological drag reduction, 499–500  
 Blasius, H., 366, 467  
 Blasius equation, 467  
 blast wave number, 51  
 blockage factor, 406  
 blowers, defined, 759  
 blunt-body flow, 459  
 body drag at high mach numbers, 497–499  
 body forces, 67, 239  
 Borda, J.-C., 4  
 boundaries, 140, 249  
 boundary conditions, 37, 229, 250  
 boundary conditions for the basic equations  
     about, 249–250  
     incompressible flow with constant properties,  
         251–252  
     inviscid flow approximations, 252–253  
     simplified free surface conditions, 251  
 boundary element method (BEM), 585–586  
 boundary layer, 5, 26, 163  
 boundary layer analysis, 457  
 boundary layer equations, 464–467  
 boundary layer flows, 457, 529  
 boundary layer patching, 457  
 boundary layer separation on a half-body, 540–541  
 boundary layers with pressure gradient, 478–482  
 boundary layer theory, 163, 465  
 boundary-layer x-momentum equation, 50  
 bourdon tube, 106  
 Boussinesq, T. V., 434  
 bow shock, 634  
 bow shock wave, 498  
 brake horsepower, 763  
 break point section, 732  
 Bridgman, P. W., 296  
 Brinell hardness, 302  
 Brinkman number, 334  
 British gravitational (BG) units, 10  
 Buckingham, E., 140, 296  
 Buckingham Pi Theorem, 296, 302  
 bulbous bow, 497  
 bulge in a duct, 623  
 bulk modulus, 616  
 buoyancy  
     center of, 92  
     neutral, 94  
     specific weight of fluid and, 89  
     and stability, 91–97  
 buoyant particles, 410  
 buoyant rising light spheres, 492  
 butterfly valve, 390

## C

cambered airfoil, 500  
 Cannon-Ubbelohde viscometer, 60  
 capacitive sensors, 107  
 capillary viscometer, 55, 431  
 cars, drag coefficients of, 493  
 Cartesian vector form of velocity field, 230  
 Cauchy-Riemann equations, 265  
 cavitation, 34, 770  
 cavitation number, 34  
 center of buoyancy, 92  
 center of pressure (CP), 79–81, 566, 676  
 centrifugal pump head, 341  
 centrifugal pumps, 182  
     about, 762  
     basic output parameters, 763–764  
     effect of blade angle on pump head, 767–768  
         elementary pump theory, 764–767  
 centripetal acceleration, 168  
 centroidal moments of inertia, 83  
 CGS system, 11  
 channel control point, 739  
 channels  
     constant flow around, 702  
     geometry and velocity, 702  
     Reynolds number of, 704  
 channel slope, 728  
 Chaplygin, S., 563  
 characteristic area, 484  
 Chézy, Antoine, 4, 707  
 Chézy coefficient, 707  
 chimney flow, 171  
 choking  
     about, 625–626  
     defined, 609  
     due to friction, 648–650  
     effects due to simple heating, 657–658  
     maximum mass flow, 626  
     sonic exit, 626  
     sonic flow, 682  
 choking point, 651  
 circular cylinder, inviscid pressure distribution, 485  
 circulation, 538–539  
 circulation flow, 535  
 circulation loss, 764  
 classification of pumps, 759–762  
 closed blades, 763  
 Coanda effect, 496  
 coefficient of surface tension, 31  
 Colebrook, C. F., 369  
 collinear forces, 93  
 combination car and airplane, 507–509  
 commercial CFD codes, 590–593  
 compound weir, 755  
 compressibility effects, 39  
 compressibility parameters, 314–315  
 compressible duct flow with friction  
     about, 642–643  
     adiabatic flow, 644–648  
     choking due to friction, 648–650  
     isothermal flow with friction, 650–651  
     long pipelines, 650–651  
     mass flow for a given pressure drop,  
         651–653  
     minor losses in compressible flow, 650  
 compressible flow  
     adiabatic and isentropic steady flow, 616–620  
     compressible duct flow with friction, 642–653

- converging and diverging nozzles operation, 637–642  
 defined, 609  
 frictionless duct flow with heat transfer, 654–659  
 isentropic flow with area changes, 622–629  
 isentropic process, 614–616  
 normal shock wave, 629–637  
 Prandtl-Meyer expansion waves, 669–681  
 thermodynamics review, 609–614  
 thin-airfoil theory, 670–678  
 three-dimensional supersonic flow, 679–680  
 two-dimensional supersonic flow, 659–669  
 compressible gas flow correction factor, 426  
 compressible laminar flow, 252, 689  
 compressors, 790–793  
 computational fluid dynamics (CFD), 3, 5, 140, 229, 464, 494, 587, 590, 611, 764, 785  
 concentric annulus, 385  
 concept of hydrodynamic mass, 578–579  
 cone-plate viscometer, 54  
 conformal mapping, 555  
 conical diffuser, 406  
 conjugate depths, 745  
 conservation of mass, 140, 150–155, 232, 355, 361  
 consistent units, 14  
 constant area duct flow, 682  
 constant gas density, 74  
 contact angle, 33  
 continuity equation, 359, 466  
 continuity relation. *See* conservation of mass  
 continuum, 9  
 contraction flow, 585  
 contractions, 396  
 control points in a channel, 739  
 control volume, 141, 150  
 control volume analysis, 40, 195  
 control volume method, 139  
 control volume moving at constant velocity, 146  
 control volume of constant shape but variable velocity, 146  
 convective acceleration, 230  
 converging and diverging nozzles, 682  
 converging-diverging nozzles, 639–642  
 converging nozzles, 637–639  
 conversion factors, 836–837  
 Coriolis acceleration, 167  
 Coriolis effects, 103  
 Coriolis mass flowmeter, 418  
 corner flow, 556  
 corner separated flow, 394  
 correlations of fluctuating velocities, 361  
 corresponding states principle, 27  
 Couette, M., 275  
 Couette flow, 268–269  
 Couette flow solution, 275  
 Coulomb, Charles A., 367  
 counting numbers, 298  
 coupling slip, 821  
 creeping flow, 319, 487–490, 586  
 creeping motion, 28, 515  
 critical area ratio, 639  
 critical conditions for Froude number, 741  
 critical depth  
     about, 714–715  
     critical slope, 717–718  
     critical uniform flow, 717–718  
     frictionless flow over a bump, 718–720  
     nonrectangular channels, 716–717  
     open-channel flow, 707  
     rectangular channels, 715–716  
 critical-depth flume, 754  
 critical flow, 705  
 critical point, 7, 26  
 critical properties, 619  
 critical slope, 716  
 critical sonic throat, 625  
 critical values at the sonic point, 619–620  
 critical velocity, 620  
 cross-flow turbines, 817  
 Crump weir, 753  
 cup anemometer meters, 410  
 curl function, 254  
 curved shock wave, 265, 267  
 cylinder drag, 403, 550  
     rotating, 550  
 cylindrical polar coordinates, 233–234
- D**
- d'Alembert, Jean, 4, 140, 549  
 d'Alembert's paradox, 549, 676  
 Darcy, Henry, 4, 356  
 Darcy-Forscheheimer law, 449  
 Darcy friction factor, 356, 366, 643  
 Darcy's formula, 379  
 Darcy's law of porous flow, 449  
 Darrieus, G. J. M., 802  
 Darrieus rotor, 805  
 da Vinci, Leonardo, 4, 153  
 deadwater region, 394  
 deformable control volume, 179  
 deforming control volume, 144  
 density, 8–9, 19–20  
 density gradients, 265  
 dependent variables, 304  
 derivation for two-dimensional flow, 465–467  
 design condition, 721  
 design flow rate, 767  
 design pressure, 639  
 deviations from ideal pump theory, 771–772  
 diamond foil, 674  
 diaphragm, 106  
 diastolic pressure, 116  
 differential analysis, 40, 229  
 differential equations of angular momentum, 244–245  
 differential equations of energy, 246–249  
 differential equations of fluid motion, 229, 249  
 differential equations of linear momentum, 238–244  
     Euler's equation, 242  
     Navier-Stokes equations, 242–244  
 differential equations of mass conservation, 232–237  
     cylindrical polar coordinates, 233–234  
     incompressible flow, 235–237  
     steady compressible flow, 234  
 differential manometer, 105  
 differential relations for fluid flow  
     about, 229  
     acceleration field of a fluid, 230–231  
     boundary conditions for the basic equations, 249–253  
     Couette flow between a fixed and a moving plate, 268–269  
 differential equation of angular momentum, 244–245  
 differential equation of energy, 246–249  
 differential equation of linear momentum, 238–244  
 differential equation of mass conservation, 232–237  
 flow between long concentric cylinders, 274–275  
 flow due to pressure gradient between two fixed plates, 269–272

- differential relations for fluid flow—*Cont.*  
 frictionless irrotational flow, 263–268  
 fully developed laminar pipe flow, 272–274  
 incompressible viscous flow examples, 268–277  
 instability of rotating inner cylinder flow, 275–277  
 stream function, 253–261  
 vorticity and irrotationality, 261–263
- diffuser angle, 477  
 diffuser flow patterns, 406  
 diffuser parameters, 406  
 diffuser performance, 404–408  
 diffuser stall, 478  
 dilatant, 30  
 dimensional analysis, 9, 15, 20, 40, 309  
 dimensional analysis and similarity  
   about, 293–296  
   dimensional homogeneity principle, 296–302  
   modeling and its pitfalls, 321–333  
   nondimensionalization of the basic equations, 312–321  
   Pi theorem, 302–312  
     principle of dimensional homogeneity, 296–302  
 dimensional constants, 297  
 dimensional homogeneity principle, 11, 296–302  
 dimensionally consistent units, 13  
 dimensionally inconsistent equations vs. homogeneous  
   equations, 15  
 dimensional matrix, 335  
 dimensional variables, 297  
 dimensionless drag vs. dimensionless viscosity, 331  
 dimensionless force coefficient, 294  
 dimensionless force vs. dimensionless viscosity, 301  
 dimensionless form, 293  
 dimensionless groups in fluid mechanics, 317  
 dimensionless loss coefficient, 113  
 dimensionless parameters, 313–314, 315–318  
 dimensionless pressure change vs. dimensionless viscosity,  
   341  
 dimensionless pressure coefficient, 585  
 dimensionless pump performance, 772–775  
 dimensionless variables, 293  
 dimensionless viscosity  
   vs. dimensionless drag, 331  
   vs. dimensionless force, 301  
   vs. dimensionless pressure change, 341  
 dimensions, 9  
 dimensions of fluid-mechanics properties, 304  
 direct numerical simulation (DNS), 3, 5, 494  
 discharge coefficient ( $C_d$ ), 15, 175, 421  
 discontinuous boundary conditions, 9  
 disk valve, 389  
 displacement thickness, 463–464  
 divergence angle, 406  
 Doppler anemometry (LDA), 785  
 Doppler shift, 412  
 doublets, 543–545  
 downstream pressure, 637  
 downward pressure, 75–76  
 draft tubes, 818  
 drag, 482  
   and lift coefficients on rotating sphere, 522  
   of supersonic airfoils, 676  
   of two-dimensional bodies, 489  
 drag coefficients  
   buoyant rising light spheres, 492  
   of cars, 493  
   characteristic area, 484  
   defined, 57, 468  
   induced, 572  
   laminar boundary layer, 472  
   of three-dimensional bodies, 490–491
- turbulent boundary layer, 472  
 drag force, 163  
 drag force vs. velocity, 301  
 drag function, 309  
 drag of immersed bodies, 482–484  
 drag of surface ships, 496–497  
 drag reduction methods, 496  
 dropdown flow pattern, 750  
 drowned nappes, 734  
 drowned outflow, 747  
 drowned sluice gate, 721  
 ducted propeller meters, 410  
 duct flow, 355  
 duct Mach number, 644  
 Dutch-type windmill, 802  
 dynamic pressure, 172  
 dynamic pumps, 760  
 dynamic similarity, 325–326
- ## E
- Eckert number, 315  
 eddy viscosity, 364  
 eddy viscosity model, 364  
 effective diameter, 382  
 efficiency  
   airfoil lift, 565  
   best efficiency point (BEP), 767, 774  
   hydraulic, 764  
   mechanical, 764  
   pump, 763  
   total, 764  
   of turbine designs, optimum, 800  
   volumetric, 764  
 efficient uniform-flow channels, 712–714  
 eighteenth-century mathematicians, 4  
 Ekman number, 51, 343  
 elastic deformation instruments/instrumentation, 105  
 electric-output instruments/instrumentation, 105  
 electric-output sensors, 107  
 electromagnetic motor, 411  
 elementary plane flow solutions  
   circulation, 538–539  
   line irrotational vortex, 533–534  
   line source or sink at the origin, 533  
   Rankine half-body, 536–537  
   sink plus a vortex at the origin, 535  
   source plus an equal sink, 534–535  
   superposition, 534–535  
   uniform stream at an angle, 538  
   uniform stream in the x direction, 532–533  
   uniform stream plus a sink at the origin, 536–537
- energy equation  
   about, 184–185  
   friction and staff work in low-speed flow, 188–191  
   kinetic energy correction factor, 191–194  
   one-dimensional energy flux terms, 186–188  
   steady flow energy equation, 188  
 energy extraction, 759  
 energy grade line (EGL), 173, 715  
 engineering equations, peculiar, 301–302  
 Engineering Equation Solver (EES), 23–24, 46, 370,  
   374–378, 398  
 enthalpy flux, 188  
 entrance losses, 392  
 entrance region, 352  
 entropy gradients, 265

- equation of continuity. *See* conservation of mass  
 equation of motion, 251  
 equilibrium of a fluid, 67–68  
     gage pressure, 68  
     vacuum pressure, 68  
 equivalent Froude number, 326  
 equivalent Reynolds number, 326  
 Euler, Leonhard, 4, 140, 169, 296, 314  
 Eulerian and Lagrangian descriptions, 17–18  
 Eulerian frame of reference, 230  
 Euler number, 314  
 Euler's equation, 242, 252  
 Euler's turbine formula, 182  
 Euler's turbine relation, 782  
 Euler turbomachine equations, 765  
 exit losses, 392  
 exits, one-dimensional, 148  
 expansion factor, 426  
 experimental analysis, 40  
 experimental duct flows  
     diffuser performance, 404–408  
     local velocity measurements, 408–413  
     volume flow measurements, 413–429  
 experimental external flows  
     aerodynamic forces on road vehicles, 492–496  
     biological drag reduction, 499–500  
     body drag at high mach numbers, 497–499  
     buoyant rising light spheres, 492  
     characteristic area, 484  
     combination car and airplane, 507–509  
     creeping flow, 487–490  
     drag of immersed bodies, 482–484  
     drag of surface ships, 496–497  
     drag reduction methods, 496  
     forces on lifting bodies, 500–506  
     friction drag and pressure drag, 484–487  
     Kline-Fogelman airfoil, 506  
     three-dimensional bodies, 490–492  
     two-dimensional bodies, 487  
     wing inspired by the humpback whale, 506  
 experimentalism, 4  
 explicit viscous flow model, 588  
 external flows, 352, 355, 529. *See also* experimental external flows

## F

- Falkner-Skan flows, 599  
 Fanno, Gino G., 643  
 Fanno flow, 642–643  
 fans, 759  
 favorable pressure gradient, 476, 540  
 finite aspect ratio, 569  
 finite difference method (FDM), 579–580  
 finite differences, 581  
 finite element method (FEM), 579, 580  
 finite region, 229  
 finite-span airfoils, 504  
 first law of thermodynamics, 141  
 fixed control volume, 144  
 flat-plate airfoil vortex sheet theory, 563–566  
 flat-plate boundary layer  
     laminar flow, 467–470  
     transition to turbulence, 470–471  
     turbulent flow, 471–475  
 flat-plate boundary layer flow, 462  
 flat-plate flow formula, 457

- flat-walled diffuser, 405, 406  
 Flettner rotor ship, 550  
 floats, 410  
 flow along a streamline, 171  
 flow around a corner of arbitrary angle, 556–557  
 flow between long concentric cylinders, 274–275  
 flow between parallel plates, 381  
 flow coefficient, 306, 421  
 flow due to pressure gradient between two fixed plates, 269–272  
 flow in noncircular ducts  
     about, 379  
     flow between parallel plates, 381  
     flow through a concentric annulus, 384–387  
     hydraulic diameter, 380–381  
     laminar flow solution, 381–382  
     other noncircular cross sections, 387–388  
     turbulent flow solution, 382–384  
 flow normal to a flat plate, 557–559  
 flow nozzle, 423  
 flow past a circular cylinder with circulation, 546–548  
 flow past a vortex, 541–542  
 flow past immersed bodies  
     boundary layer equations, 464–467  
     boundary layers with pressure gradient, 476–482  
     experimental external flows, 482–509  
     flat-plate boundary layer, 467–475  
     momentum integral estimates, 461–464  
     Reynolds number and geometry effects, 457–460  
 flow properties, 364  
 flow rate changes, 777  
 flow rate effect from size changes, 777  
 flow rate problems, 374–376  
 flow separation, 405, 465. *See also* stalls  
 flow states, 715  
 flow through a concentric annulus, 384–387  
 flow velocity in open-channel flow, 707  
 flow visualization, 44–45  
 fluctuating velocities, correlations of, 361  
 fluctuation, 361  
 fluid circulation, 538  
 fluid coupling slip, 821  
 fluid density, 7  
 fluid line, 540  
 fluid mechanics  
     about, 3–4  
     dimensions and units, 9–16  
     fluid as a concept, 6–8  
     fluid as a continuum, 8–9  
     fluids vs. solids, 6–8  
     history of, 4–5  
     problem solving techniques, 6  
     secondary dimensions, 11  
     thermodynamic properties, 18–25  
     velocity field properties, 17–18  
     viscosity and other secondary properties, 24–40  
 fluid-mechanics properties dimensions, 304  
 fluid pressure, 7, 65  
     atmospheric, 166  
 fluids  
     pressure and density, 8–9  
     vs. solids, 6–8  
 fluid statics, 3  
 Fogelman, F. F., 506  
 forces on lifting bodies, 500–506  
 Forscheheimer, P. H., 449  
 Fourier, Joseph, 296  
 Fourier's law, 246–249  
 Francis, James B., 4, 793  
 Francis turbine, 793

free-body concept, 144  
 free discharge, 721  
 free overfall, 732  
 free propeller meters, 410  
 free propeller thrust per unit area, 784  
 free stream, 163  
 free-stream angle of attack and airfoil shape, 563  
 free-streamline solution, 558  
 free surface, 531  
 free vortex, 533  
 frictional effect, 172  
 friction and staff work in low-speed flow, 188–191  
 friction drag, 484  
 friction drag and pressure drag, 484–487  
 friction factors, 356, 380  
 frictionless duct flow with heat transfer  
     about, 654–655  
     choking effects due to simple heating, 657–658  
     Mach number relations, 656–657  
     relationship to normal shock wave, 658–659  
 frictionless flows, 171, 324  
 frictionless irrotational flow  
     about, 263  
     generation of rotationality, 265–268  
     orthogonality of streamlines and potential lines, 264–265  
     velocity potential, 264  
 frictionless momentum equation, 619, 622  
 frictionless unsteady flow, 264  
 friction losses, 771  
 friction loss meters, 414  
 friction velocity, 362  
 frontal area, 484  
 Froude, Robert, 5, 314  
 Froude, William, 5, 314  
 Froude number, 294, 314, 324, 326, 705  
     critical conditions for, 741  
 Froude number denominator, 705  
 Froude-scaling kinematic relations, 325  
 fully developed conditions, 59  
 fully developed flow, 353  
 fully developed laminar pipe flow, 272–274  
 fully rough flow, 368–369  
 fully turbulent flow, 348  
 fully viscous computational fluid dynamics (CFD), 590  
 Fundamentals of Engineering (FE) Examination, 48  
 fused quartz, force-balanced bourdon tube, 106

## G

gage pressure, 51, 68, 76  
 gage pressure formulas, 81–85  
 gas behavior instruments/instrumentation, 105  
 gas constants, 612  
 gas dynamics, 609, 681  
 gases, 6  
     hydrostatic pressure on, 72–73  
     linear formula adequacy for, 74–75  
     state relations, 21  
 gas molecular weights, 612  
 gas turbines, 790–791  
 gate valve, 389  
 generation of rotationality, 265–268  
 geometric interpretation of streamlines of the flow, 255–258  
 geometric parameters, 406  
 geometric similarity, 322–323  
 geothermal atmosphere, 73

global properties, 408  
 Götler, H., 514  
 gradients, 19, 239  
 gradual expansion, 395–397  
 gradually varied theory, 750  
 gradually varying flow (GVF), 704  
 graphical method of superposition, 539  
 Grashof number, 57, 315  
 gravity-based instruments/instrumentation, 105

## H

Haaland, S. E., 370  
 Hagen, Gotthilf Heinrich Ludwig, 4, 351  
 Hagen-Poiseuille flow, 272  
 half-body of revolution, 578  
 half-body shape, 536  
 Hanna, Keith, 228  
 Hazen, G., 272  
 Hazen-Williams hydraulics formula, 51  
 head, 188, 341  
 head loss (friction factor), 355–356  
 head loss chart, 373  
 heat, internal sources of, 248  
 heat conduction equation, 249  
 heat transfer, 19, 188  
 heat transfer coefficient, 335  
 heat transfer Mach number, 655  
 Hele-Shaw apparatus, 552–553  
 Helmholtz, Hermann von, 558  
 Helmholtz-Kirchoff theory, 559  
 Hero of Alexandria, 4  
 Herschel, Clemens, 424  
 high-molecular-weight polymer additive, 496  
 high-specific-speed pumps, 784  
 high specific speeds, 782  
 historical outline, 4, 351–352  
 hodograph, 664  
 Holloway, Gordon, 395, 431  
 homogeneous equations vs. dimensionally inconsistent equations, 15  
 homologous points, 322  
 horizontal-axis wind turbine (HAWT), 802  
 hot-film anemometer, 411  
 hot-wire anemometer, 411  
 Hugoniot, A., 630  
 hull shape, 497  
 Hunsacker, J., 140  
 hydraulically smooth walls, 369  
 hydraulic and energy grade lines, 173–175  
 hydraulic diameter, 380–381, 382, 385  
 hydraulic efficiency, 764  
 hydraulic grade line (HGL), 173, 356, 701  
 hydraulic jumps  
     approximate solution for irregular channels, 731–732  
     backwater curves, 739–741  
     basic differential equation, 726–727  
     broad-crested weirs analysis, 735  
     classification of, 722–723  
     classification of solutions, 727–729  
     composite-flow transitions, 732–734  
     experimental weir discharge coefficients, 735–737  
     flow under a sluice gate, 721–722  
     normal shock wave, 706  
     numerical solution, 729–731  
     sharp-crested weirs analysis, 734–735  
     theory for, 723–726

- theory for horizontal, 723–726  
 thin-plate weir designs, 737–739  
 hydraulic models, 328–329, 403  
 hydraulic radius, 380  
 hydraulic radius and velocity, 702  
 hydraulics, 4  
 hydrodynamic mass, 578  
 hydrodynamics, 5, 457  
 hydrostatic condition, 65, 66, 69  
 hydrostatic forces on curved surfaces, 86–89  
 hydrostatic forces on layered surfaces, 89–91  
 hydrostatic forces on plane surfaces, 78–85  
 hydrostatic paradox, 132  
 hydrostatic pressure  
     distribution, 68–75  
     in gases, 71, 72–73  
     linear approximation, 74–75  
     in liquids, 70–71  
     standard atmosphere, 73–74  
     variable gravity effects, 69–70  
 hydrostatic pressure difference, 175  
 hypersonic airplanes, 680  
 hypersonic flow, 610, 611
- I**
- ideal frictionless mass flux, 177  
 idealized radial turbine theory, 794  
 idealized wind turbine theory, 802–807  
 images, 559–562  
 immersed-body flows, 457, 476  
 impeller recirculation loss, 771  
 impulse turbines, 793, 796–801  
 incompressible axisymmetric flow, 259–261  
 incompressible Bernoulli equation, 404  
 incompressible flow  
     analysis for, 610  
     axisymmetric, 259–261  
     Bernoulli equation for, 297  
     conservation of mass, 152–155  
     with constant properties, 251–252  
     equation of continuity, 574  
     inviscid, 532  
     linear equations for, 235–237  
     nearly incompressible flow, 152, 497, 609, 759  
     negligible density, 235–237  
     plane, 531  
     steady, 171  
     two-dimensional, 466  
 incompressible flow continuity equation with constant viscosity, 312  
 incompressible flow with constant properties, 251–252  
 incompressible plane flow in polar coordinates, 259  
 incompressible viscous flow examples  
     Couette flow between a fixed and a moving plate, 268–269  
     flow between long concentric cylinders, 274–275  
     flow due to pressure gradient between two fixed plates, 269–272  
     fully developed laminar pipe flow, 272–274  
     instability of rotating inner cylinder flow, 275–277  
     induced drag coefficient, 572  
 inertial coordinate system, 155, 179  
 infinite row of vortices, 542–543  
 infinitesimal region, 229  
 infinitesimal system analysis, 40
- initial conditions, 249  
 inlet cavitation, 780  
 inlet flow  
     subsonic, 644  
     supersonic, 644  
 inlet Mach number, 406  
 inlet Reynolds number, 406  
 inlets, 185  
 inlets, one-dimensional, 148  
 inner wall law, 364  
 instability of rotating inner cylinder flow, 275–277  
 instruments/instrumentation, 105  
 integral analysis, 40  
 integral volume, 150  
 integrated properties, 408  
 intensive value, 145  
 interfaces, 31  
 internal energy, 20  
 internal flow, 529  
 internal versus external viscous flows, 352–355  
 International System (SI) units, 10  
 inviscid flow  
     analysis, 38  
     approximations, 252–253  
     Euler's equation, 242  
 inviscid incompressible flow, 532  
 inviscid pressure distribution from circular cylinder, 485  
 inviscid theory, 529, 549, 550  
 inward pressure force, 157  
 Ipsen alternate step-by-step method, 309–312  
 irrotational flows, 244, 254, 262  
 irrotational frictionless flow region, 171  
 irrotational function, 533  
 isentropic bulk modulus, 39  
 isentropic flow, 610, 619  
 isentropic flow with area changes  
     about, 622–623  
     choking, 625–626  
     local mass flow function, 626–629  
     perfect-gas area change, 624–625  
 isentropic perfect gas, power law relationship for, 613  
 isentropic pressure and density relations, 618–619  
 isentropic process, 612–616  
 isentropic-ratio formula vs. Mach number formula, 620  
 isothermal flow with friction, 650–651
- J**
- jet exit pressure conditions, 158–165  
 jet exit pressure equals atmospheric pressure, 172  
 jet flow, 406  
 Joukowski, N. E., 502, 549, 563  
 jump. *See* hydraulic jumps
- K**
- Kaplan turbine, 793  
 Kármán, Theodore von, 5, 165, 315, 362, 364, 434, 468, 502  
 Kármán's analysis of the flat plate, 461–463  
 Kármán's momentum integral theory, 462  
 Kármán vortex street, 315  
 Keenan, J. H., 140  
 Kelvin oval, 552

- kinematic boundary conditions, 250  
 kinematic similarity, 323–325  
 kinematic velocity, 27  
 kinetic energy, 20  
 kinetic energy correction factor, 191–194  
 kinetic energy flux, 188  
 King, L. V., 411  
 King’s law, 411  
 Kirchhoff, Gustav R., 558  
 Kline, R. F., 506  
 Kline-Fogelman airfoil, 506  
 Knudsen number, 39  
 Kutta, W. M., 549  
 Kutta condition, 562–563  
 Kutta-Joukowski lift theorem, 548–550
- L**
- Lagrange, Joseph Louis, 4, 256  
 lagrangian field description, 17  
 laminar boundary layer drag coefficient, 472  
 laminar flow, 165, 192, 273–274, 347, 467–470  
 laminar flow element, 419, 433  
 laminar flow scaling law, 351  
 laminar flow solution, 381–382  
 laminar fully developed pipe flow, 357–359  
 laminar integral theory, 478–482  
 laminar-plate-flow solution, 462  
 laminar separation, 486  
 laminar shear, 362  
 laminar theories, 480  
 Laplace, Pierre-Simon, 4  
 Laplace equations, 255, 530–531  
 lapse rate, 73  
 large-eddy breakup devices (LEBUS), 496  
 large eddy simulation (LES), 494  
 laser Doppler anemometer (LDA), 412  
 laser particle tracking velocimetry (LPTV), 785  
 layered fluid (LF), 93  
 “least-squares” error, 51  
 lift, 482, 503
  - and drag of rotating cylinders, 550–552
  - inviscid theory for, 550
  - of supersonic airfoils, 676
 lift coefficient, 501, 676  
 lift-drag polar plot, 504  
 lift efficiency of airfoil, 565  
 Lilienthal, Gustav, 502  
 Lilienthal, Otto, 502  
 linear differential equations, 235  
 linear formula adequacy, 74–75  
 linearizers, 411  
 linear momentum equation
  - about, 155
  - Bernoulli as energy equation, 171
  - Bernoulli equation restrictions, 171–172
  - hydraulic and energy grade lines, 173–175
  - jet exit pressure equals atmospheric pressure, 172
  - linear momentum tips, 166
  - momentum flux correction factor, 165
  - net pressure force on a closed control surface, 156–158
  - noninertial reference frame, 166–171
  - one-dimensional momentum flux, 156
  - pressure conditions at jet exit, 158–165
  - stagnation, static and dynamic pressure, 172–173
  - steady incompressible flow, 171
  - surface velocity condition for a large tank, 175–178
 linear momentum tips, 166  
 line doublet, 261  
 line irrotational vortex, 533–534  
 line sink, 533  
 line source, 533  
 line source at a point, 556  
 line source or sink at the origin, 533  
 line vortex at a point, 556  
 liquids, 6, 70–71, 827  
 local acceleration, 230  
 local losses, 388  
 local mass flow function, 626–629  
 local properties, 408  
 local Reynolds number, 459  
 local velocity measurements, 408–413  
 logarithmic law, 365  
 logarithmic law modified by roughness, 369  
 logarithmic overlap law, 362–364  
 logarithmic overlap layer, 363  
 long pipelines, 650–651  
 long-throated weir, 754  
 loss coefficient, 389  
 losses, 771  
 low-speed flows, 530  
 low-speed flows and roughness ratio, 501  
 luminescent coatings instruments/instrumentation, 105
- M**
- Mach, Ernst, 315, 660  
 Mach cone, 660  
 Mach number, 235, 294, 314–315, 411, 609, 610  
 Mach number formula vs. isentropic-ratio formula, 620  
 Mach number relations, 618, 631–634, 656–657  
 Mach waves, 659–662  
 Magnus, Gustav, 548  
 Magnus, Heinrich, 228  
 Magnus effect, 228  
 Magnus-Robins force, 548  
 Manning, Robert, 4, 16, 708  
 Manning’s formula, 16, 704  
 Manning’s formula for uniform flow velocity, 709  
 Manning’s open-channel formula, 302  
 Manning’s roughness correlation, 707, 709  
 manometer formula, 77  
 manometry applications
  - downward pressure, 75–76
  - pressure distribution, 75–78
  - simple manometer applications, 76–78
 mappings, 557  
 Mariotte, Edme, 4  
 mass, sources or sinks of, 151  
 mass flow, 156  
 mass flow for a given pressure drop, 651–653  
 mass flow function, 626  
 mass flowmeter, 418  
 mass measurement, 413  
 material derivative, 230–231  
 matrix rank, 335  
 maximum mass flow, 626  
 Maxwell, James Clerk, 39  
 mean free path, 49  
 mean velocity gradient and turbulent shear, 434  
 measured performance curves, 769–770  
 mechanical efficiency, 764  
 meniscus, 78

- mercury barometer, 71–72  
 metacenter, 94  
 metacentric height, 94  
 meters, 410  
 microbubbles, 496  
 Millikan, C. B., 363  
 minor duct loss coefficient, 403  
 minor losses, 388  
 minor losses in compressible flow, 650  
 minor or local losses in pipe systems, 388–397  
     gradual expansion—the diffuser, 395–397  
 mixed- and axial-flow pumps  
     axial-flow pump theory, 781–782  
     computational fluid dynamics, 785  
     performance of an axial-flow pump, 782  
     pump performance versus specific speed, 782–784  
     specific speed, 780  
     suction specific speed, 780–781  
     turbomachinery, 778–785  
 mixed-flow pumps, 779  
 mixing-length constant, 434  
 mixing-length eddy velocity, 434  
 model analysis, 295  
 modeling and its pitfalls, 321–333  
     dynamic similarity, 325–326  
     geometric similarity, 322–323  
     kinematic similarity, 323–325  
     water and air testing discrepancies, 326–333  
 modeling concepts, advanced, 364–365  
 modular flow, 753  
 molecular dynamic model, 611  
 momentum along wall equation, 466  
 momentum deficit, 165  
 momentum equation, 359  
 momentum equation with constant viscosity, 312  
 momentum flux correction factor, 165  
 momentum flux term, 156  
 momentum flux terms, 166  
 momentum integral estimates, 461–464  
     displacement thickness, 463–464  
     Kármán analysis of the flat plate, 461–463  
 momentum integral theory, 165  
 momentum relation, 361  
 momentum thickness, 461  
 Moody, L. F., 369  
 Moody chart, 369–373, 646  
 Moody pipe friction factor, 47  
 Moody-type pipe friction, 341  
 Morton number ( $Mo$ ), 334  
 moving normal shocks, 634–637  
 moving shock, 636  
 multiphase forces, 7  
 multiple-pipe systems, 397–403  
     pipe networks, 402–403  
     pipes in parallel, 400–401  
     pipes in series, 397–400  
     three-reservoir junction, 401–402  
 multistage pumps, 790
- N**
- NACA airfoils, 566–569  
 nappes, 734  
 natural convection, 611  
 Navier, Claude-Louis, 5  
 Navier-Stokes equations, 5, 465, 531, 587  
 nearly incompressible flow, 152, 497, 609, 759
- net circulation, 562  
 net positive-suction head, 770–771  
 net pressure force on a closed control surface, 156–158  
 neutral buoyancy, 94  
 Newton, Isaac, 615  
 Newtonian fluids, 26, 242–244  
 Newton's laws, 67  
     in noninertial coordinates, 167  
     second law, 140, 155  
 Nikuradse, J., 368  
 nodes, 580  
 noflow head, 782  
 noncircular ducts, 387–388  
 nondeformable inertial coordinate system, 179  
 nondimensionalization of the basic equations  
     about, 312  
     applications, 318–321  
     compressibility parameters, 314–315  
     dimensionless parameters, 313–314, 315–318  
     oscillating flows, 315  
 noninertial coordinates, 167  
 noninertial effects, 265  
 noninertial reference frame, 166–171  
 non-Newtonian fluids, 30–31, 287  
 nonwetting liquid, 33  
 norias, 759  
 normal depth, 704  
 normal power, 799  
 normal shock wave, 629–637, 682  
     hydraulic jumps, 706  
     Mach number relations, 631–634  
     moving normal shocks, 634–637  
 no-slip boundary conditions, 466  
 no-slip conditions, 26, 37–39, 172  
 no-temperature jump conditions, 37–39  
 nozzle flow, 477  
 nozzles  
     design pressure, 639  
     geometry, 638  
 numerical analysis  
     about, 579  
     alternative implicit approach, 588–589  
     boundary element method, 585–586  
     commercial CFD codes, 590–593  
     finite difference method, 580–585  
     finite element method, 580  
     one-dimensional unsteady flow, 587–588  
     steady two-dimensional laminar flow, 589–590  
 viscous flow computer models, 587  
 nutating disc meters, 414–415
- O**
- oblique recompression shock, 634  
 oblique shock polar hodograph, 664  
 oblique shock relations, 634  
 oblique shock wave, 662–667  
 ocean engineering, 457  
 one-dimensional approximation, 166  
 one-dimensional energy flux terms, 186–188  
 one-dimensional flux term approximation, 148–150  
 one-dimensional inlets and exits, 148  
 one-dimensional momentum flux, 156  
 one-dimensional unsteady flow, 587–588  
 one-seventh-power law, 472

- onset point, 368  
 open blades, 763  
 open-channel flow  
     about, 701–702  
     Chézy formula, 707–712  
     critical depth, 712–720  
     efficient uniform-flow channels, 712–714  
     flow classification by depth variation, 704–705  
     flow classification by Froude number, 705  
     flow velocity in, 707  
     geometry and notation for, 703  
     hydraulic jumps, 721–741  
     one-dimensional approximation, 702–704  
     specific energy, 712–714  
     surface wave speed, 705–707  
         uniform flow, 707–712  
     orifice flow, 420–424  
     orthogonal flow set, 531  
     orthogonality of streamlines and potential lines, 264–265  
     oscillating flows, 315  
     oscillating jump, 722  
     outer layer, 362  
     outer streamline displacement, 463  
     outer wall layer, 364  
     outlet, 185  
     output variables, 304  
     outside pressure, 637  
     outward normal unit vector, 146  
     outward unit vector, 157  
     overlap layer, 362
- P**
- paint, 31  
 parallel pipe flow, 398  
 parameters, 298  
 Parshall flume, 752  
 partially-drowned sluice gate, 721  
 particle image velocimetry (PIV), 412  
 Pascal’s law, 76  
 patching boundary conditions, 466  
 pathlines, 42  
 payback time, 437  
 Pelton, Lester A., 796  
 Pelton wheels, 796  
 perfect-fluid, 229  
 perfect gas, 611–612  
 perfect-gas area change, 624–625  
 perfect gas law, 21, 72  
 periodic small-amplitude surface waves, 742  
 permeability, 337, 449  
 Phillips, Horatio Frederick, 502  
 physical laws, 139–143  
     system vs. control volumes, 140–142  
     volume and mass rate of flow, 142–143  
 piezoelectric transducers, 107  
 pigs, 55  
 pipe diameter problems, 376–378  
 pipe flow problems, types of  
     about, 373  
     flow rate, 374–376  
     pipe diameter, 376–378  
     pipe length, 378–379  
 pipe flow transition, 352  
 pipe friction vs. Reynolds number, 366  
 pipe length problems, 378–379  
 pipe networks, 402–403  
 pipes, 352  
     average velocity, 391  
 pipes in parallel, 400–401  
 pipes in series, 397–400  
 pitching moment, 482  
 Pi theorem, 302–312  
     Ipsen alternate step-by-step method, 309–312  
 Pitot, Henri de, 4, 411  
 Pitot formula, 411  
 pitot-static tubes, 172, 410  
 plane flow past closed-body shapes, 545–554  
     flow past a circular cylinder with circulation, 546–548  
     Kelvin oval, 552  
     Kutta-Joukowski lift theorem, 548–550  
     lift and drag of rotating cylinders, 550–552  
     potential flow analogs, 552–554  
     Rankine oval, 545–546  
 plane flow types, 574  
 plane polar coordinates, 532  
 plane potential flows  
     about, 555  
     flow around a corner of arbitrary angle, 556–557  
     flow normal to a flat plate, 557–559  
     line source at a point, 556  
     line vortex at a point, 556  
     uniform stream at an angle of attack, 556  
 plastic fluids, 31  
 planform area, 484  
 Pode, L., 520  
 Pode’s angle, 520  
 point doublet, 575  
 point source or sink, 575  
 poise, 12  
 Poiseuille, 4  
 Poiseuille, J. L. M., 12, 272  
 Poiseuille flow, 271, 357  
 Poiseuille flow friction factor, 357  
 Poiseuille parabola, 270  
 Poisson’s ratio, 616  
 positive displacement pumps (PDPs), 759  
 potential energy, 20  
 potential flow analogs, 552–554  
 potential flow and computational fluid dynamics  
     airfoil theory, 562–573  
     axisymmetric potential flow, 574–579  
     elementary plane flow solutions, 532–539  
     images, 559–562  
     introduction and review, 529–532  
     numerical analysis, 579–593  
     other plane potential flows, 555–559  
     plane flow past closed-body shapes, 545–554  
     plane polar coordinates, 532  
     review of stream function concepts, 531–532  
     review of velocity potential concepts, 530–531  
     summary, 593  
     superposition of plane flow solutions, 539–555  
 potential lines, 264  
 potential theory, 531, 585  
 potential theory for thick cambered airfoils, 566–569  
 pound of mass, 11  
 power coefficient, 306, 805  
     wind turbine, 805  
 power laws, 30, 53  
     relationship for isentropic perfect gas, 613  
 power specific speed, 794–796  
 Prandtl, Ludwig, 5, 140, 352, 362, 364, 366, 465, 502, 549, 572  
 Prandtl-Meyer angle, 671  
 Prandtl-Meyer expansion function, 671

- Prandtl-Meyer expansion waves  
new trends in aeronautics, 680–681  
Prandtl-Meyer perfect-gas function, 669–673  
supersonic airfoils application, 673–676  
thin-airfoil theory, 676–678  
three-dimensional supersonic flow, 679–680  
Prandtl-Meyer perfect-gas function, 669–673  
Prandtl number, 315  
pressure, 19  
pressure and pressure gradient, 65–67  
    pressure forces on a fluid element, 66–67  
pressure coefficient, dimensionless, 585  
pressure conditions at jet exit, 158–165  
pressure differential, 68  
pressure distribution, 84, 86–97  
    equilibrium of a fluid, 67–68  
    hydrostatic forces on plane surfaces, 78–85  
    hydrostatic pressure distribution, 68–75  
    manometry applications, 75–78  
    mean values, 360  
    pressure and pressure gradient, 65–67  
    pressure measurement, 105–109  
    in rigid-body motion, 97–105  
pressure drag, 484  
pressure drop law, 351  
pressure equation, 590  
pressure forces on a fluid element, 66–67  
pressure gradient, 67  
pressure gradient surfaces, 103  
pressure gradient vector, 241  
pressure head, 70, 188  
pressure measurement, 105–109  
pressure-recovery coefficient, 404  
pressure sensors, 108  
primary dimensions, 10  
primary thermodynamic variables, 25  
priming, 761  
principal chord line of the body, 483  
principle of dimensional homogeneity (PDH)  
    about, 296  
    engineering equations, peculiar, 301–302  
    scaling (repeating) variables selections, 301  
    variables and constants, 297–298  
    variables and scaling parameters selections,  
        298–301  
problem solving techniques, 6  
propeller meters, 415  
propeller thrust per unit area, 784  
propeller turbine, 793  
prototype, 295  
pseudoplastic fluids, 31  
pump curves, 782  
pump efficiency, 763  
pump head, 341  
pump operating points, 787  
pump parameters, 773  
pump performance, 762  
pump performance curves and similarity rules  
    about, 768  
    deviations from ideal pump theory, 771–772  
    dimensionless pump performance, 772–775  
    effect of viscosity, 777–778  
    measured performance curves, 769–770  
    net positive-suction head, 770–771  
    similarity rules, 776–777  
pump performance versus specific speed, 782–784  
pumps, 188. *See also* centrifugal pumps; mixed- and axial-  
    flow pumps; pump performance curves and  
    similarity rules; pumps, matching to system  
    characteristics
- classification of, 759–762  
combined in parallel, 789–790  
combined in series, 790  
defined, 759  
deviations from ideal pump theory, 771–772  
dimensionless pump performance, 772–775  
effect of blade angle on head, 767–768  
matching to system characteristics, 785–793  
multistage pumps, 790  
operating singly and parallel, 789  
pump performance versus specific speed,  
    782–784  
pump theory, 764–767  
specific speed pumps, 778–785  
viscosity effect on pump performance curves and  
    similarity rules, 777–778  
pumps, matching to system characteristics  
    about, 785–788  
    compressors, 790–793  
    gas turbines, 790–791  
    multistage pumps, 790  
    pumps combined in parallel, 789–790  
    pumps combined in series, 790  
pump surge, 767  
pump theory, 764–767  
pump-turbine, 821  
pure constants, 297
- Q**
- quasi-steady assumption, 289  
quicksand, 30
- R**
- random error, 47  
rank of a matrix, 335  
Rankine, W. J. M., 536, 630  
Rankine half-body, 536–537  
Rankine-Hugoniot relation, 630  
Rankine oval, 545–546  
rapidly varying flow (RVF), 704, 732  
rarefaction shock, 631  
rarefied gas, 49  
rated power, 799  
ratio-type ideal-gas formula, 622  
Rayleigh, Lord (John W. Strutt), 5, 140, 296, 654  
Rayleigh flow, 654, 690  
Rayleigh line, 654, 690  
reaction turbines, 793–794  
real (imperfect) gas flows, 620  
real gases, specific heat of, 611  
rectangular weir, 736  
relaminarization region, 350  
relationship to normal shock wave, 658–659  
relative terms, 68  
relative velocity, 147  
repeating variable method of dimensional analysis, 309  
repeating variables. *See* scaling parameters  
resistance coefficients, 391–395  
resonance, 315  
reversible adiabatic flow, 610  
reversible potential theory, 585  
revolutions, 297  
Reynolds, Osborne, 5, 314, 352

- Reynolds and Mach number effects, 498  
 Reynolds number  
     of channel, 704  
     dimensionless, for laminar flow, 27–28, 273  
     force coefficient, 294  
     and geometry effects, 457–460  
     historical outline, 351–352  
     local, 458  
     low-speed viscous flows with no free surface, 314  
     vs. pipe friction, 366  
     regimes, 347–352  
     roughness ratio and, 773  
     source of, 313–314  
     transition, 470  
 Reynolds number ranges, 350  
 Reynolds' time-averaging concept, 360–362  
 Reynolds transport theorem  
     about, 143  
     arbitrary fixed control volume, 144–146  
     arbitrary moving and deformable control volume, 147–148  
     control volume moving at constant velocity, 146  
     control volume of constant shape but variable velocity, 146  
     defined, 139  
     for deformable control volume, 179  
     as energy equation, 184  
     one-dimensional flux term approximation, 148–150  
 rheology, 8, 30  
 rheoplectic fluids, 31  
 Riabouchinsky, D., 296  
 Richardson number, 334  
 Rightmire, B., 140  
 rigid-body motion  
     pressure distribution in, 97–105  
     relative motion between particles, 100–105  
     rotation, 100–105  
     shear stress, 65  
     uniform linear acceleration, 98–100  
 rigid-body rotation, 100–105  
 Robins, Benjamin, 548  
 rocket dynamics, 169  
 rolling moment, 482  
 Rossby number, 317  
 rotameters, 418  
 rotating-cylinder viscometer, 59  
 rotating disk viscometer, 57  
 rotating sensors, 410  
 rotational flow, 267, 535  
 rotodynamic pumps, 760  
 rotor blades, 781  
 roughness, 316  
 roughness ratio  
     and low-speed flows, 501  
     Reynolds number and, 773  
     in turbulent flow, 294  
     turbulent friction and, 368  
     values of commercial ducts, 371  
     wall, 316  
 rough wall pipe flow, 403  
 rough walls effect, 367–369  
 Runge-Kutta method, 739  
 scaling (repeating) variables selection, 301  
 scaling laws, 295  
 scaling parameters, 298  
 Schlichting, H., 472  
 scramjets, 680  
 scroll section, 762  
 secondary dimensions in fluid mechanics, 11  
 secondary flow, 403  
 secondary turbulent flow, 387  
 second law of thermodynamics, 141  
 separated flow, 460  
 separation bubble, 502  
 separation point, 476  
 series pipe flow, 397  
 shaft work, 185  
 shape-factor, 469  
 sharp-crested weirs, 734–735  
 shear-free condition, 66  
 shear layer thickness, 465  
 shear strain rate, 262  
 shear stress, 6, 360  
 shear-thickening fluid, 30  
 shear-thinning fluid, 31  
 shear work, 186  
 shock. *See also* normal shock wave  
     angle of, 662  
     bow shock, 634  
     expansion theory, 673  
     oblique recompression shock, 634  
     polar, 664  
     rarefaction shock, 631  
     strong shock, 664  
     weak shock, 664  
 shock loss, 771  
 shock tube wind tunnel, 637  
 shock waves, 609  
     bow shock wave, 498  
     curved shock wave, 265, 267  
     oblique shock wave, 662–667  
 short-crested weir nappes, 734  
 short duct, 529  
 shoulder velocity, 554  
 shutoff head, 782  
 side force, 482  
 similarity, 295  
 similarity rules, 776–777  
 simple manometer applications, 76–78  
 simplified free surface conditions, 251  
 sink plus a vortex at the origin, 535  
 siphoning, 175  
 size changes, flow rate effect from, 777  
 skin friction coefficient, 462  
 skin friction law for turbulent flat-plate flow, 472  
 slender-body flow, 459  
 slip, fluid coupling, 821  
 slip flow, 52  
 slip flow in gases, 39  
 slip velocity, 39  
 sluice gate flow, 721  
 Smith-Putnam wind turbine, 802  
 solid surface, 185  
 solvers, 46  
 solver software, 374. *See also* Engineering Equation Solver (EES)  
 sonic barrier, 498  
 sonic boom, 660  
 sonic-flow choking, 682  
 sonic length, 646  
 sonic motion, 660  
 sonic point critical values, 619–620

**S**

- Savonius rotor, 410, 805  
 Saybolt universal seconds, 49  
 Saybolt viscosity, 302

- sonic properties, 619
- sonic throat, 623, 628
- sound speed, 615
- sound speed relation, 622
- source plus an equal sink, 534–535
- sources or sinks of mass, 151
- specific diameter, 813
- specific energy, 715. *See also* critical depth
- specific gravity, 20
- specific heat, 22
- specific-heat ratio, 314, 611
- specific heats for real gases, 611
- specific speed, 780
- specific speed pumps, 778–785
- specific weight
  - buoyant force and, 93–94
  - of common fluids, 70
  - defined, 20, 70
  - of fluid and buoyancy, 89
  - of human beings, 93
- speed of sound, 39–40, 615
- sphere drag formula, 488
- spherical polar coordinates, 234, 282, 574–575
- sphygmomanometer, 116
- spin-up problem, 282
- stability
  - about, 94–95
  - and buoyancy, 91–97
  - and waterline area, 95–96
- stability map of diffuser flow patterns, 406
- stable jump, 722
- stagnation, static and dynamic pressure, 172–173
- stagnation density, 632
- stagnation enthalpy, 188, 617
- stagnation point, 44, 536
- stagnation pressure, 172, 410, 632
- stagnation temperature, 632
- stalled airfoil, 502
- stall point, 505
- stalls, 506
- stall speed, 505
- standard atmosphere, 73–74
- starting vortex, 501
- state, equation of, 18
- state relations for gases, 21
- state relations for liquids, 24
- statically unstable body, 94
- static equilibrium of floating body, 93
- static hole, 105
- static loss coefficient, 650
- static pressure, 172
- static systems, 19
- stator blades, 781
- steady compressible flow, 234
- steady compressible laminar flow, 252
- steady flow, 171
- steady flow energy equation, 188
- steady incompressible flow, 171
- steady jump, 722
- steady plane compressible flow, 258–259
- steady two-dimensional laminar flow, 589–590
- steam properties, 22
- Stokes, George G., 5, 12, 282, 487
- Stokes flow, 487, 586
- Stokes number, 334
- Stokes-Oseen formula, 50, 51
- stopping vortex, 501
- Stormer viscometer, 60
- stratification, 265
- streaklines, 42
- stream function, 236
  - about, 253–254
  - geometric interpretation of streamlines of the flow, 255–258
  - incompressible axisymmetric flow, 259–261
  - incompressible plane flow in polar coordinates, 259
  - steady plane compressible flow, 258–259
- stream function concepts, 531–532
- streamline form of frictionless momentum equation, 619
- streamline of the flow, 170
- streamlines, 41–42, 255, 496
- streamline surface, 185
- streamtubes, 41
- strong jump, 722
- strong shock, 664
- Strouhal, V., 315
- Strouhal number, 315
- Strutt, John W. (Lord Rayleigh), 5, 140, 296, 654
- subcritical flow, 705
- subcritical flow states, 715–716
- submerged exits, 394
- subsonic diffuser, 640
- subsonic flow, 610, 627
- subsonic inlet, 648
- subsonic inlet flow, 644
- subsonic motion, 660
- substantial derivative, 230–231
- successive overrelaxation (SOR) method, 582
- suction specific speed, 780–781
- sudden contraction (SC), 394
- sudden expansion (SE), 394
- supercritical flow, 705
- supercritical flow states, 715–716
- superposition, 534–535
- superposition of plane flow solutions
  - boundary layer separation on a half-body, 540–541
  - doublets, 543–545
  - flow past a vortex, 541–542
  - graphical method of superposition, 539
  - infinite row of vortices, 542–543
  - the vortex sheet, 543
- supersonic airfoils
  - center of pressure of, 676
  - lift of, 676
- supersonic airfoils application, 673–676
- supersonic expansion and compression, 670
- supersonic flow, 610, 628
- supersonic inlet, 648
- supersonic jet, 158
- supersonic Mach number, 639
- supersonic motion, 660
- surface forces, 67, 239
- surface of a machine, 185
- surface roughness, 367
- surface shape, 157
- surface tension, 31–34, 158, 701
- surface tension coefficient, 31
- surface velocity condition for a large tank, 175–178
- surge, 767
- surroundings, 140
- Sutherland law, 30, 52
- swing-check valve, 389
- symmetry condition, 253
- system, 140
- systematic error, 47
- system state, 19
- system vs. control volumes, 140–142
- systolic pressure, 116

**T**

- target flowmeter, 448  
 Taylor, Geoffrey I., 5, 334  
 Taylor, Moulton, 507  
 Taylor number, 275  
 Taylor vortices, 275  
 temperature, 19  
 temperature sensor, 108  
 tensors, 239  
 terminal fall velocity, 52  
*Theory of Sound* (Rayleigh), 296  
 thermal conductivity, 246–249  
 thermodynamic laws, 141  
 thermodynamic properties of fluid, 18  
 thermodynamics review  
     about, 609  
     isentropic process, 612–614  
     Mach number, 610  
     perfect gas, 611–612  
     specific-heat ratio, 611  
 thick-shear layer flows, 457  
 thin-airfoil theory, 676–678  
 thin-plate orifice, 423  
 thin-plate weir nappes, 734  
 thixotropic fluids, 31  
 Thom, A., 5  
 three-dimensional bodies, 490–492  
 three-dimensional flow, 275  
 three-dimensional supersonic flow, 679–680  
 three-reservoir junction, 398, 401–402  
 throat, 623  
 throat choking, 637  
 throat flow, 477  
 thrust, 784  
 thrust force, 819  
 Thwaites, B., 479  
 Thwaites's method (laminar boundary layer), 479–481, 540, 565  
 tidal bore, 748  
 timelines, 42  
 Torricelli, Evangelista, 175  
 total efficiency, 764  
 total head, 188  
 trailing-edge Reynolds number, 464  
 trailing vortices, 573  
*Transition®* (car-plane), 507  
 transitional roughness, 369  
 transition Reynolds number, 470  
 transition to turbulence, 470–471  
 transonic flow, 610  
 transportation, 457  
 transport properties, 18  
 tree drag coefficients, 499  
 triangular coefficient matrix, 588  
 triagonal matrix algorithm (TDMA), 588  
 troposkein curve, 802  
 troposphere, 73  
 turbine formula, 182  
 turbine meters, 415  
 turbine parameters, 794  
 turbines  
     about, 793  
     idealized radial turbine theory, 794  
     idealized wind turbine theory, 802–807  
     impulse turbines, 796–801  
     incompressible steady flow energy equation, 494  
     optimum efficiency of designs, 800  
     power specific speed, 794–796  
     reaction turbines, 793–794  
     wind turbines, 457, 801–802  
 turbomachinery. *See also* turbines  
     about, 759  
     centrifugal pump, 762–768  
     classification of pumps, 759–762  
     matching pumps to system characteristics, 785–793  
     mixed- and axial-flow pumps, 778–785  
     pump performance curves and similarity rules, 768–778  
     specific speed, 778–785  
 turbomachines, 180  
 turbulence, 3  
 turbulence formation model, 785  
 turbulence modeling/models  
     about, 3, 359  
     advanced modeling concepts, 364–365  
     logarithmic overlap law, 362–364  
     Reynolds' time-averaging concept, 360–362  
     software for, 593  
 turbulence shear and mean velocity gradient, 434  
 turbulent boundary layer drag coefficient, 472  
 turbulent correction factors, 165  
 turbulent flat-plate flow skin friction law, 472  
 turbulent flat-plate shape factor, 472  
 turbulent flow, 28, 165, 192, 347, 471–475  
 turbulent flow parallel-plate solution, 382–384  
 turbulent flow theory, 352  
 turbulent friction, 385  
 turbulent friction formula, 369  
 turbulent pipe flow  
     about, 365–366  
     effect of rough walls, 367–369  
     Moody chart, 369–373  
 turbulent secondary flow, 387  
 turbulent separation, 486  
 turbulent smooth-wall condition, 373  
 turbulent stresses, 361  
 two-dimensional bodies, 487  
 two-dimensional bodies drag, 489  
 two-dimensional fluid flow, 466  
 two-dimensional supersonic flow  
     Mach waves, 659–662  
     oblique shock wave, 662–667  
     very weak shock waves, 667–669  
 two-phase flow, 233

**U**

- ultrasonic flowmeters, 417  
 uncertainty in experimental data, 46–48  
 undular jump, 722  
 uniform flow  
     about, 707  
     Manning roughness correlation, 708–710  
     normal depth estimates, 710–711  
     in partly full circular pipe, 711–712  
 uniform flow velocity, 709  
 uniform linear acceleration, 98–100  
 uniform stream  
     at an angle, 538  
     at an angle of attack, 556  
     plus a point source, 575–577  
     plus a sink at the origin, 536–537  
     in the x direction, 532–533  
 uniform pressure subtraction, 157  
 units, 9

- universal Bernoulli constant, 265  
 unstable model, 588  
 unstable pressure gradient, 460  
 unsteady frictionless flow along a streamline, 170  
 unventilated nappes, 734  
 upwind flow, 590
- V**
- vacuum pressure, 68  
 valve flow coefficient, 15  
 valves  
     resistance coefficients, 391  
     types of, 389  
 vapor pressure, 34–37  
 variable gravity effects, 69–70  
 variables  
     about, 298  
     and constants, 297–298  
     and scaling parameters selections, 298–301  
 varied open-channel flow, 704  
 Vaschy, A., 296  
 vector equations, 241  
 vector relationships, 67  
 vectors, three-component, 239  
 vee-groove microriblets, 496  
 velocity  
     and channel geometry, 702  
     critical, 620  
     vs. drag force, 301  
     friction, 362  
     hydraulic radius and, 702  
     initial, 300  
     kinematic, 27  
     local measurements, 408–413  
     mean values, 360  
     mixing-length eddy, 434  
     relative, 147  
     shoulder, 554  
     slip, 39  
     surface, 175–178  
     terminal fall, 52  
     uniform flow, 709  
     volume-average, 152  
     zero, 175  
 velocity defect law, 363  
 velocity field, 17, 230  
 velocity field properties, 17–18  
 velocity head, 188  
 velocity meters, 409  
 velocity-of-approach factor, 421  
 velocity potential, 264  
 velocity potential concepts, 530–531  
 velocity potential function, 264  
 vena contracta, 394  
 Venturi, Giovanni, 424  
 venturi flume, 750  
 venturi meter, 424, 425  
 venturi tube, 176  
 vertical-axis wind turbine (VAWT), 802  
 very weak shock waves, 667–669  
 virtual mass, 578  
 viscosity, 25–27  
 viscosity and other secondary properties  
     about, 24  
     basic flow analysis techniques, 40–41  
     flow between plates, 28–30
- flow patterns, 41–45  
 flow visualization, 44–45  
 non-Newtonian fluids, 30–31  
 no-slip conditions, 37–39  
 no-temperature jump conditions, 37–39  
 Reynolds number, 27–28  
 slip flow in gases, 39  
 speed of sound, 39–40  
 surface tension, 31–34  
 uncertainty in experimental data, 46–48  
 vapor pressure, 34–37  
 variation of viscosity with temperature, 30  
 viscosity, 25–27
- viscosity effect on pump performance curves and similarity rules, 777–778  
 viscosity variation with temperature, 30  
 viscous-dissipation function, 248  
 viscous flow, regimes of, 351  
 viscous flow computer models, 587  
 viscous flow in ducts  
     about, 346  
     diffuser performance, 404–429  
     experimental duct flows, 404–429  
     flow in noncircular ducts, 379–388  
     four types of pipe flow problems, 373–379  
     friction factor, 355–356  
     head loss, 355–356  
     internal versus external viscous flows, 352–355  
     laminar fully developed pipe flow, 357–359  
     minor or local losses in pipe systems, 388–397  
     multiple-pipe systems, 397–403  
     Reynolds number regimes, 347–352  
     turbulence modeling, 359–365  
     turbulent pipe flow, 365–373  
 viscous flow model, explicit, 588  
 viscous stresses, 287  
 volume and mass rate of flow, 142–143  
 volume-average velocity, 152  
 volume flow, 152, 259  
 volume flow measurements, 413–429  
 volume measurement, 413  
 volume rate of flow, 143  
 volumetric efficiency, 764  
 vortex flowmeter, 338, 416  
 vortex function, 254  
 vortex shedding, 403  
 vortex sheet, 542, 543  
 vortex strength, 534  
 vorticity, 262  
 vorticity and irrotationality, 261–263
- W**
- wall law, 364  
 wall layer, 362  
 wall oscillation, 496  
 wall roughness ratio, 316  
 wall shear. *See* boundary layer  
 wall temperature ratio, 315  
 water and air testing discrepancies, 326–333  
 water horsepower, 763  
 waterline area, 95–96  
 waterline footprint, 96  
 wave drag, 676  
 wave-making drag, 497  
 wave motion, 702  
 wave propagation speed, 706

wave trough, 497  
weak jump, 722  
weak shock, 664  
Weber, Moritz, 4, 314  
Weber number, 314  
weir, 336  
weir discharge coefficient, 736  
weir nappes, 734  
weirs, 734–739  
Weisbach, Julius, 4, 356, 735  
wetted area, 484, 497  
wetted perimeter, 380, 704  
width changes and gradually varied theory, 750  
wind engineering, 457  
wind tunnels, 680  
wind turbine power coefficient, 805  
wind turbines, 457, 801–802  
wing inspired by the humpback whale, 506  
wings of finite span, 569–573  
Wislicenus, G. F., 782–783

## Y

yaw, 482  
Young's modulus of elasticity, 616

## Z

zero body drag paradox, 676  
zero pressure gradient, 476  
zero velocity, 175  
zone of action, 660  
zone of silence, 660

*This page intentionally left blank*

