



Step 1: Pan/Tilt Platform Block

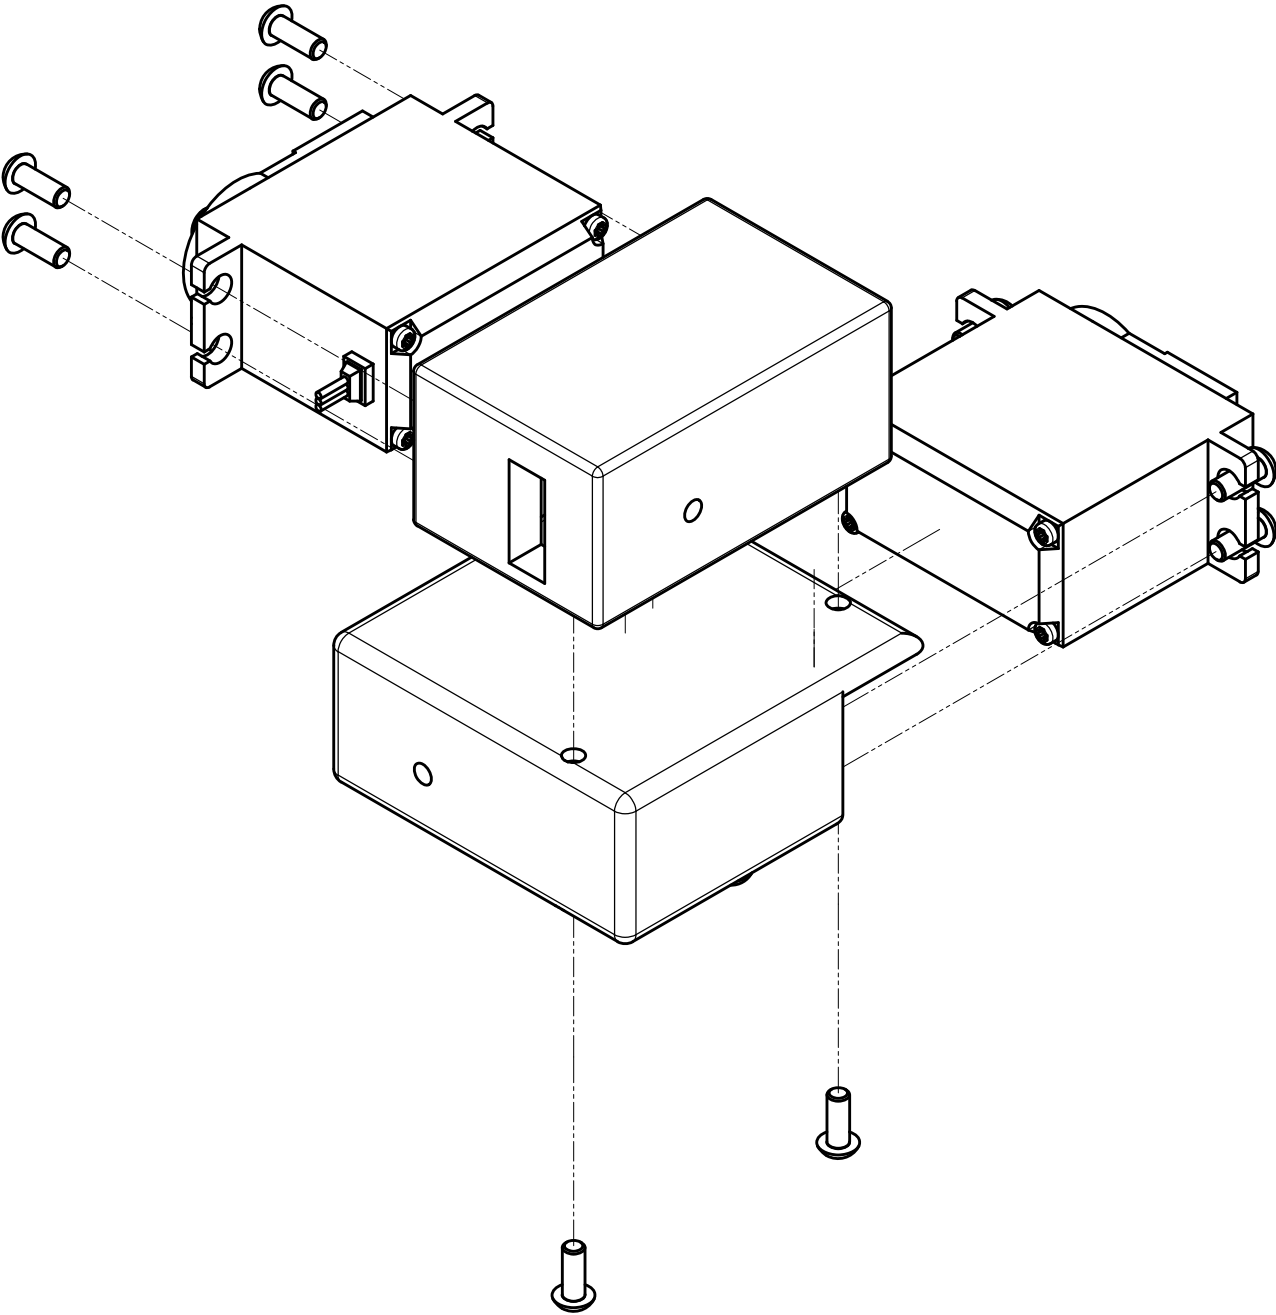

Tap all holes that receive bolts

Item	Quantity	Part number
1	1	tilting-plate-lower
2	1	tilting-plate-upper
3	11	m3x8mm bolts
4	2	MG995 Servo Motor


Step 2: Nod Arch

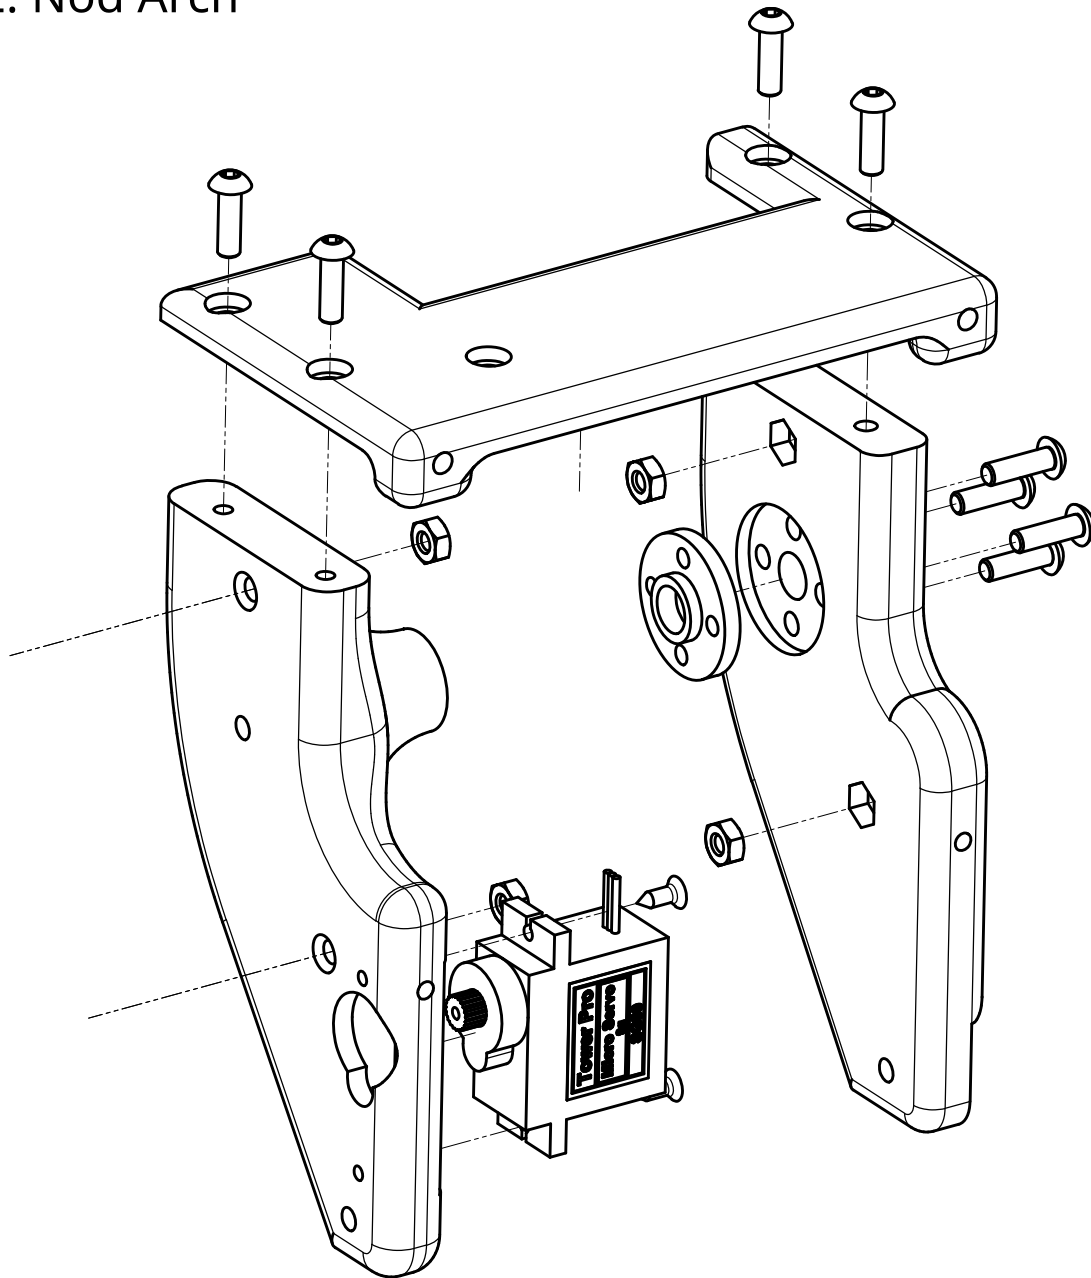

Tap all holes that receive bolts

Item	Quantity	Part number
1	1	left-side-panel
2	1	right-side-panel
3	1	top-panel
4	1	20mm round servo arm
5	8	m3x10mm bolts
6	4	m3 nuts
7	1	SG90 or MG90 servo
8	2	servo mounting screws

Step 3: Pan / Tilt / Nod

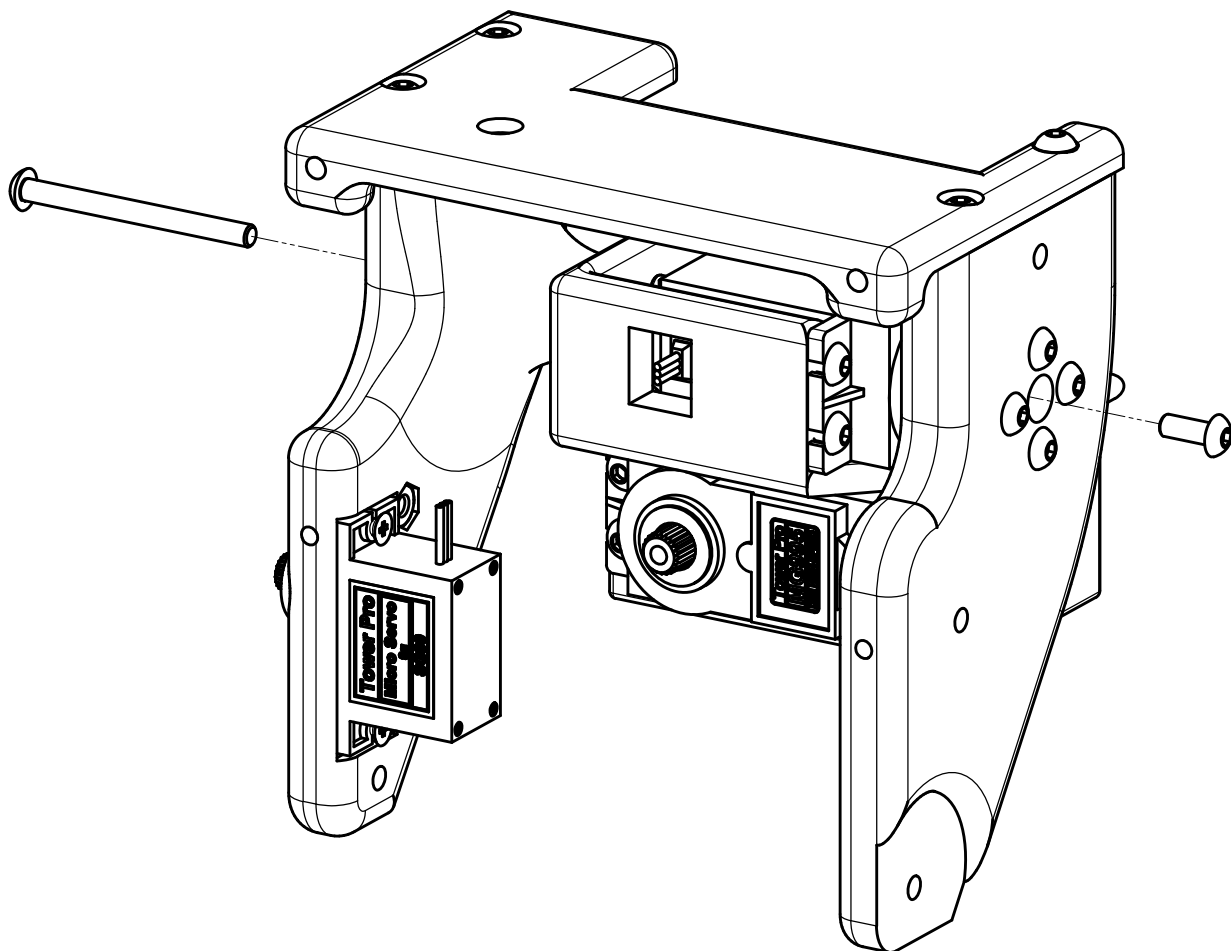


Center the nod servo before attaching the horn.
Attach at roughly level nod position.

The 35mm bolt just sits in the hole but you can try to
slide a nut down there if you have problems with it
dislocating.

Item	Quantity	Part number
1	1	m3x35mm bolts
2	1	m3x8mm bolts
3	1	nod arch assembly
4	1	pan tilt assembly

Step 4: Rotation Arm

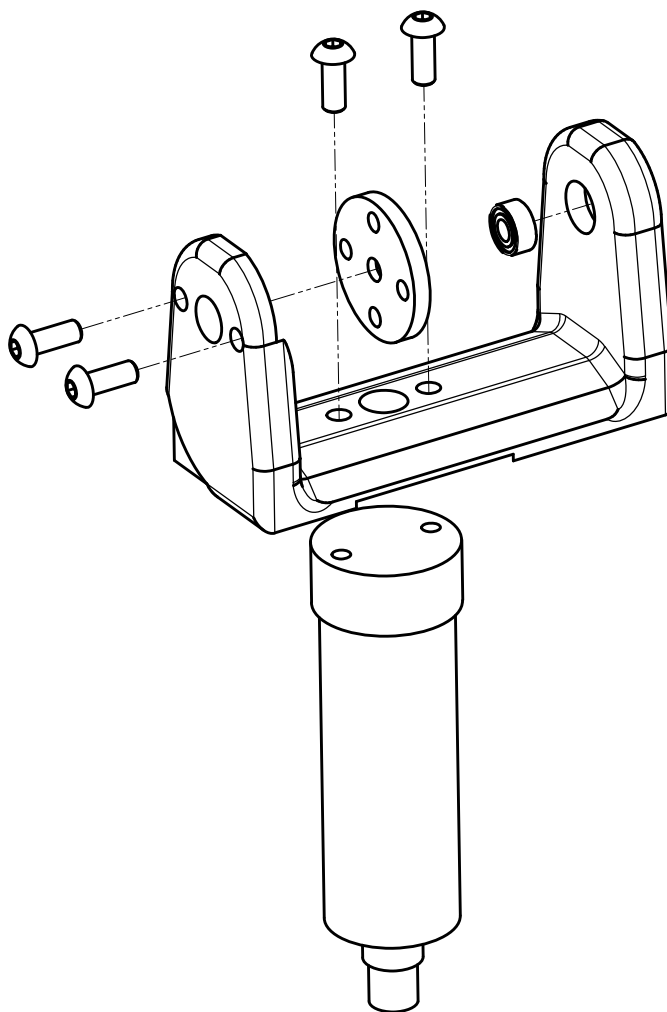


Holes in the rotation shaft should be tapped, all others should be sliding fit.

The bearing is technically optional but you should include it for better alignment and rigidity.

Item	Quantity	Part number
1	1	20mm round servo arm
2	1	rotating-plate
3	4	m3x8mm bolts
4	1	683zzbearing
5	1	rotation-shaft

Step 5: Main Platform Assembly

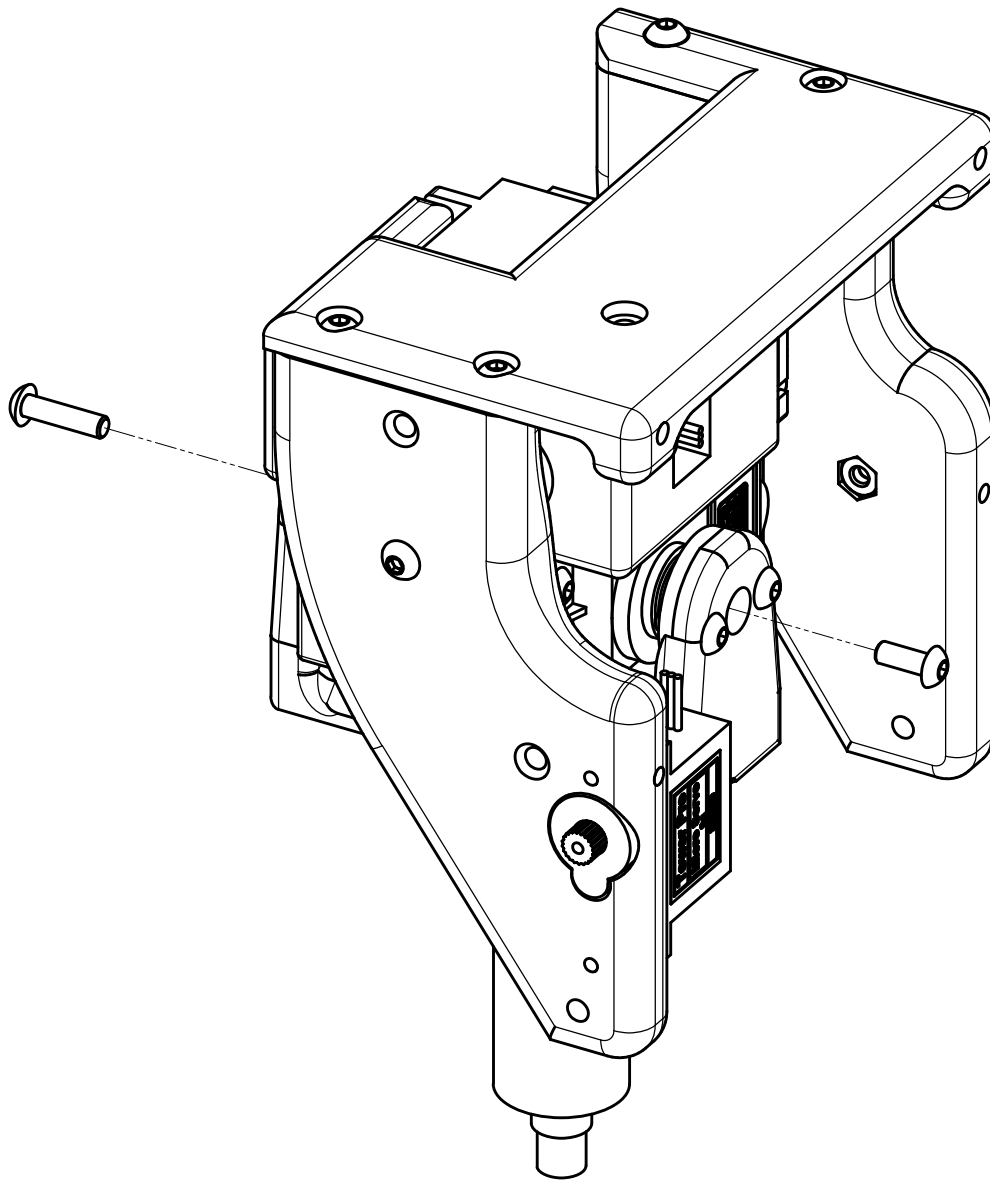


The bolt on the backside doesn't really tap into anything, you could try to slide a nut back in there but it's a little difficult to do so.

Align the tilt servo to center and set the servo arm so the tilt is level.

Item	Quantity	Part number
1	1	pan tilt nod assembly
2	1	rotation arm assembly
3	1	m3x8mm bolts
4	1	m3x12mm bolts


Step 6: Spine Adapter

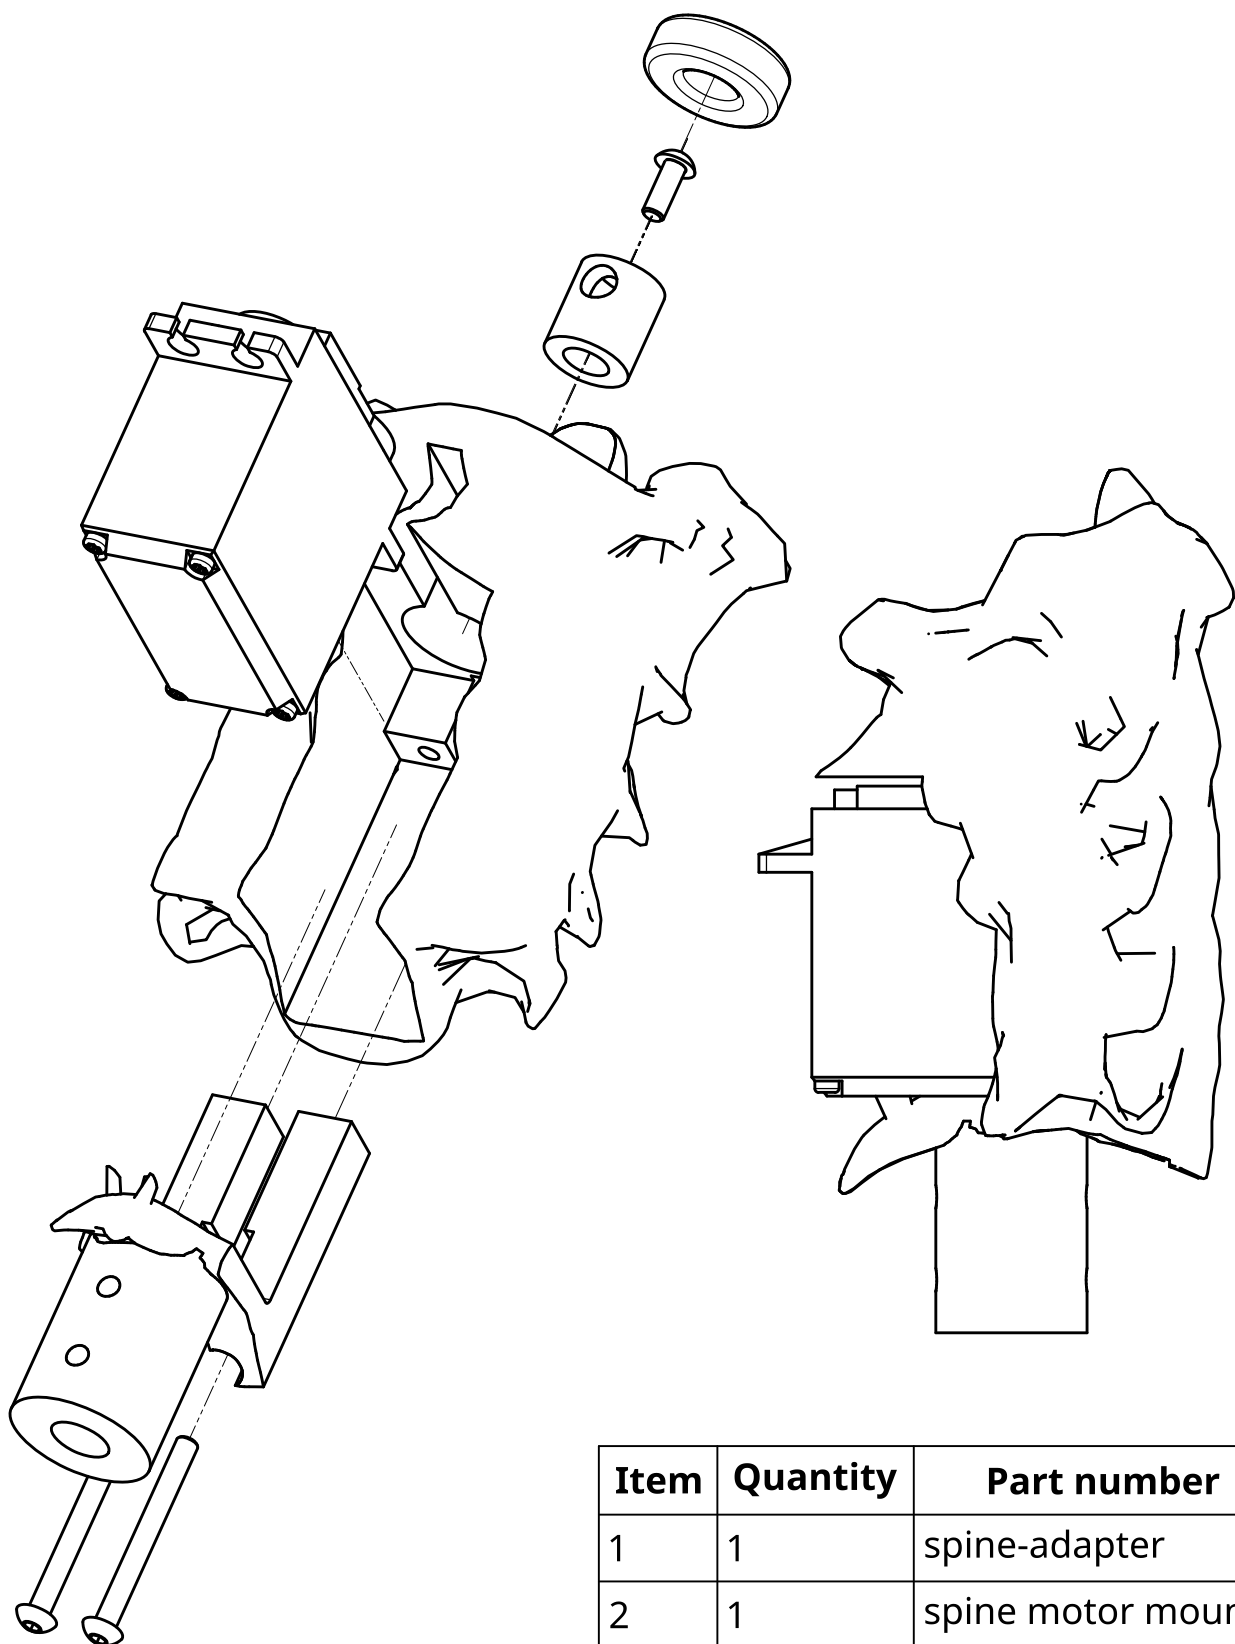

Tap the holes in the main spine adapter.
Align the rotation servo to the center and put the shaft coupling so the set screw hole is straight to the back. It should be visible through the slot in the back of the spine adapter.

Item	Quantity	Part number
1	1	spine-adapter
2	1	spine motor mount
3	1	MG995 Servo Motor
4	1	698 bearing
5	2	m3x30mm bolts
6	1	servo shaft coupling
7	1	m3x8mm bolts


Step 7: Spine to Main Platform

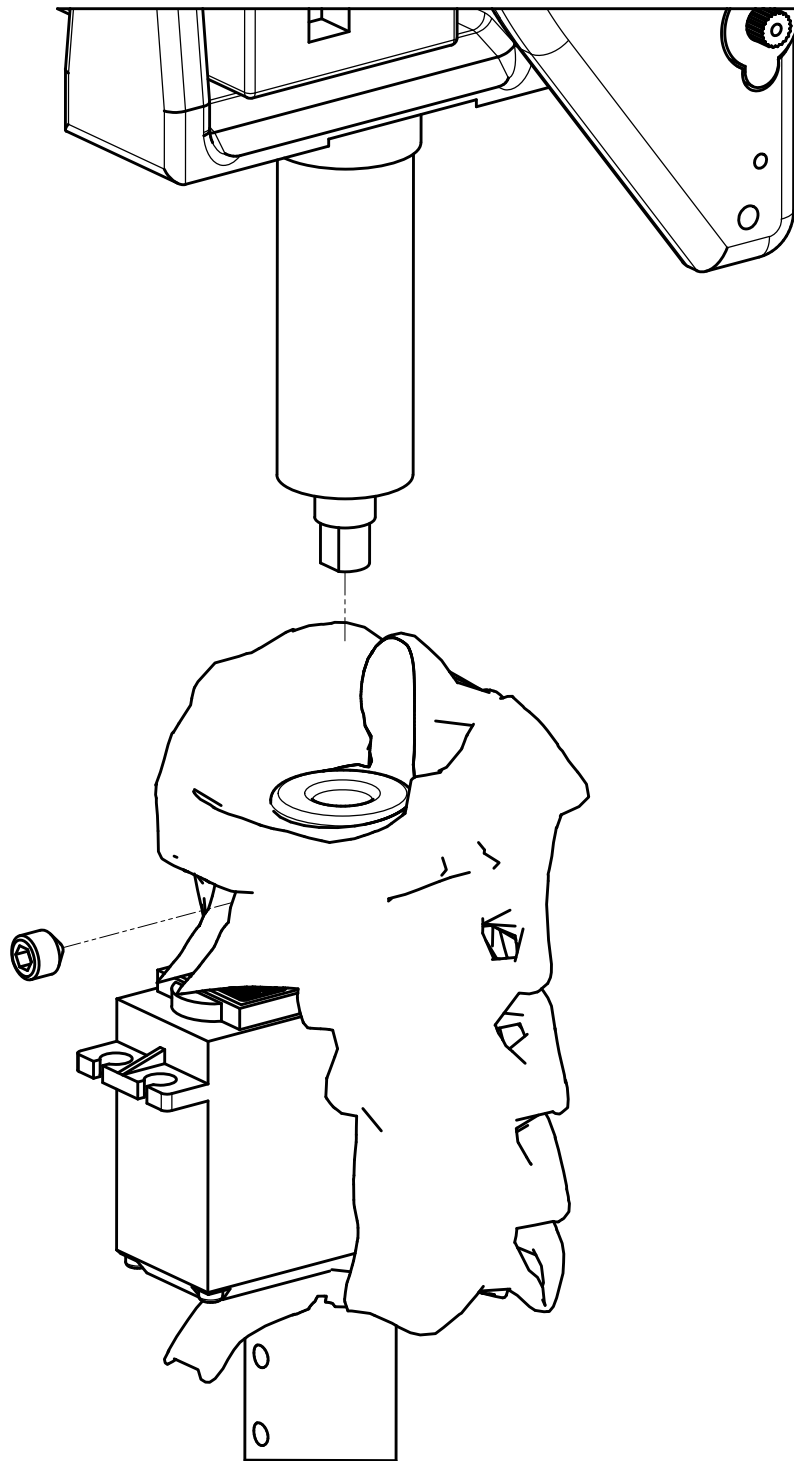

Align the rotation servo to the center so you can
access the set screw hole

Item	Quantity	Part number	Description
1	1	spine adapter assembly	
2	1	main platform assembly	
3	1	M6 Set Screw	comes with servo coupling


Step 8: Main PCB Mounting

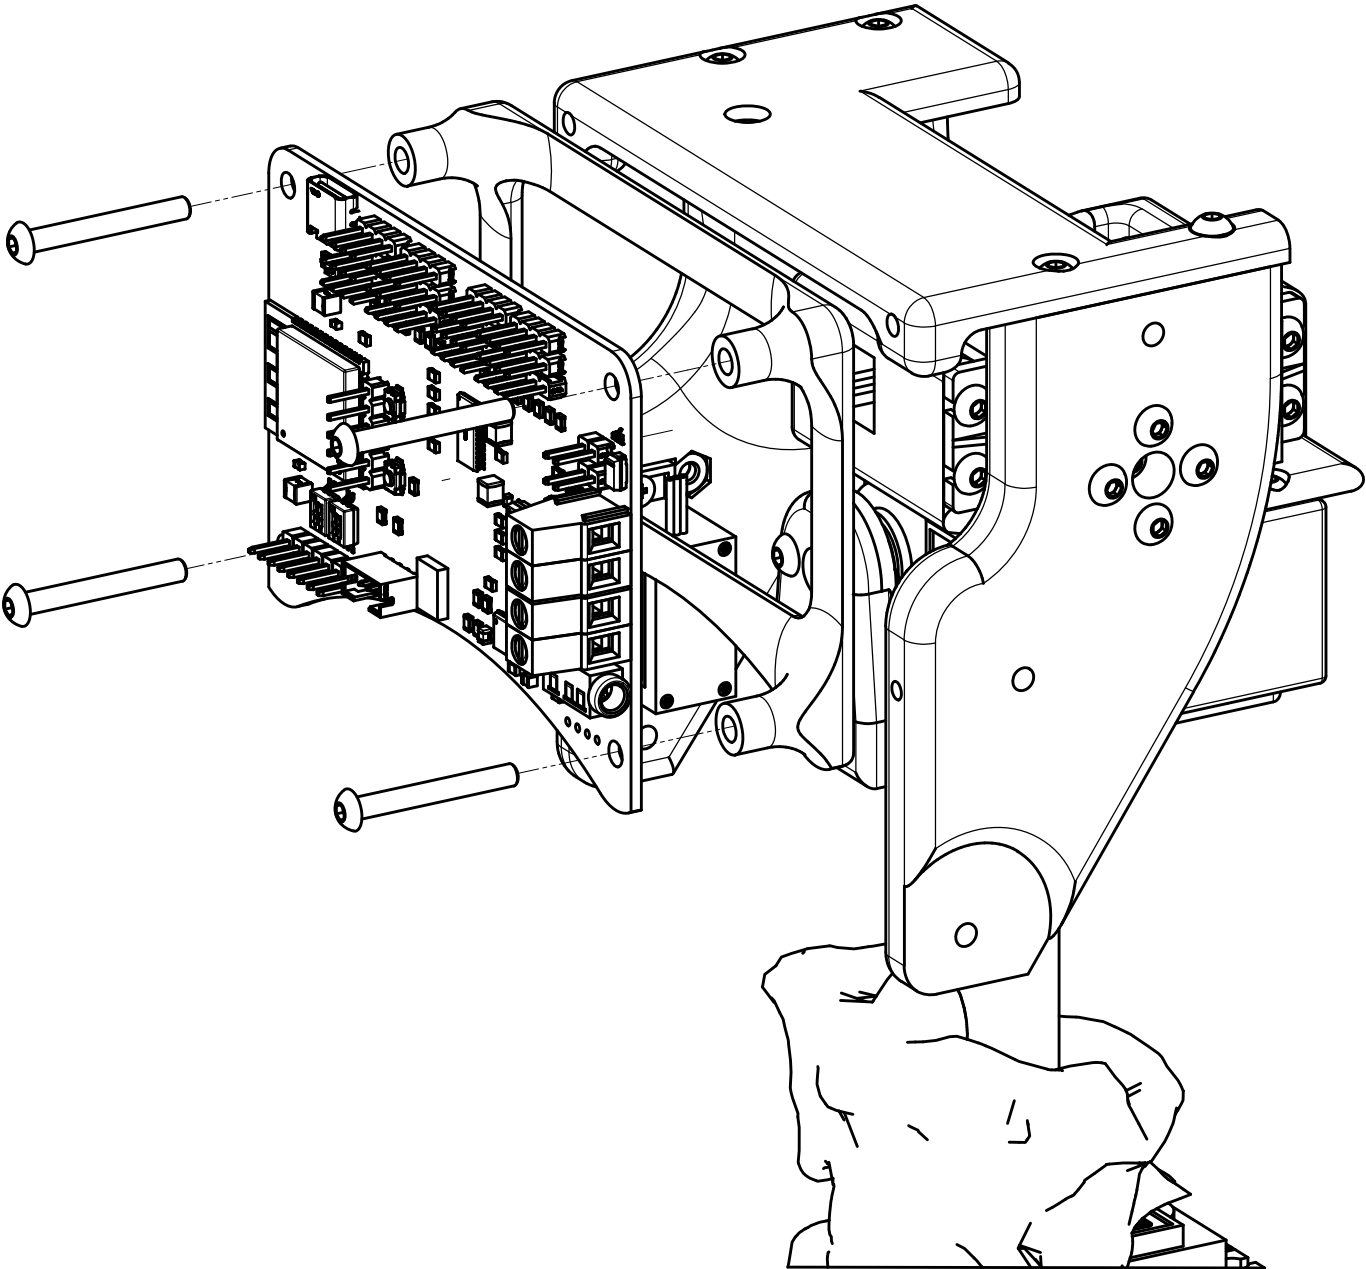

Tap the holes in the main assembly.

Item	Quantity	Part number
1	1	Main Assembly (07)
2	1	front-bridge pcb mount
3	1	DeadfordManor main animatronic control board
4	4	m3x25mm bolt


Step 9: Jaw Attachment

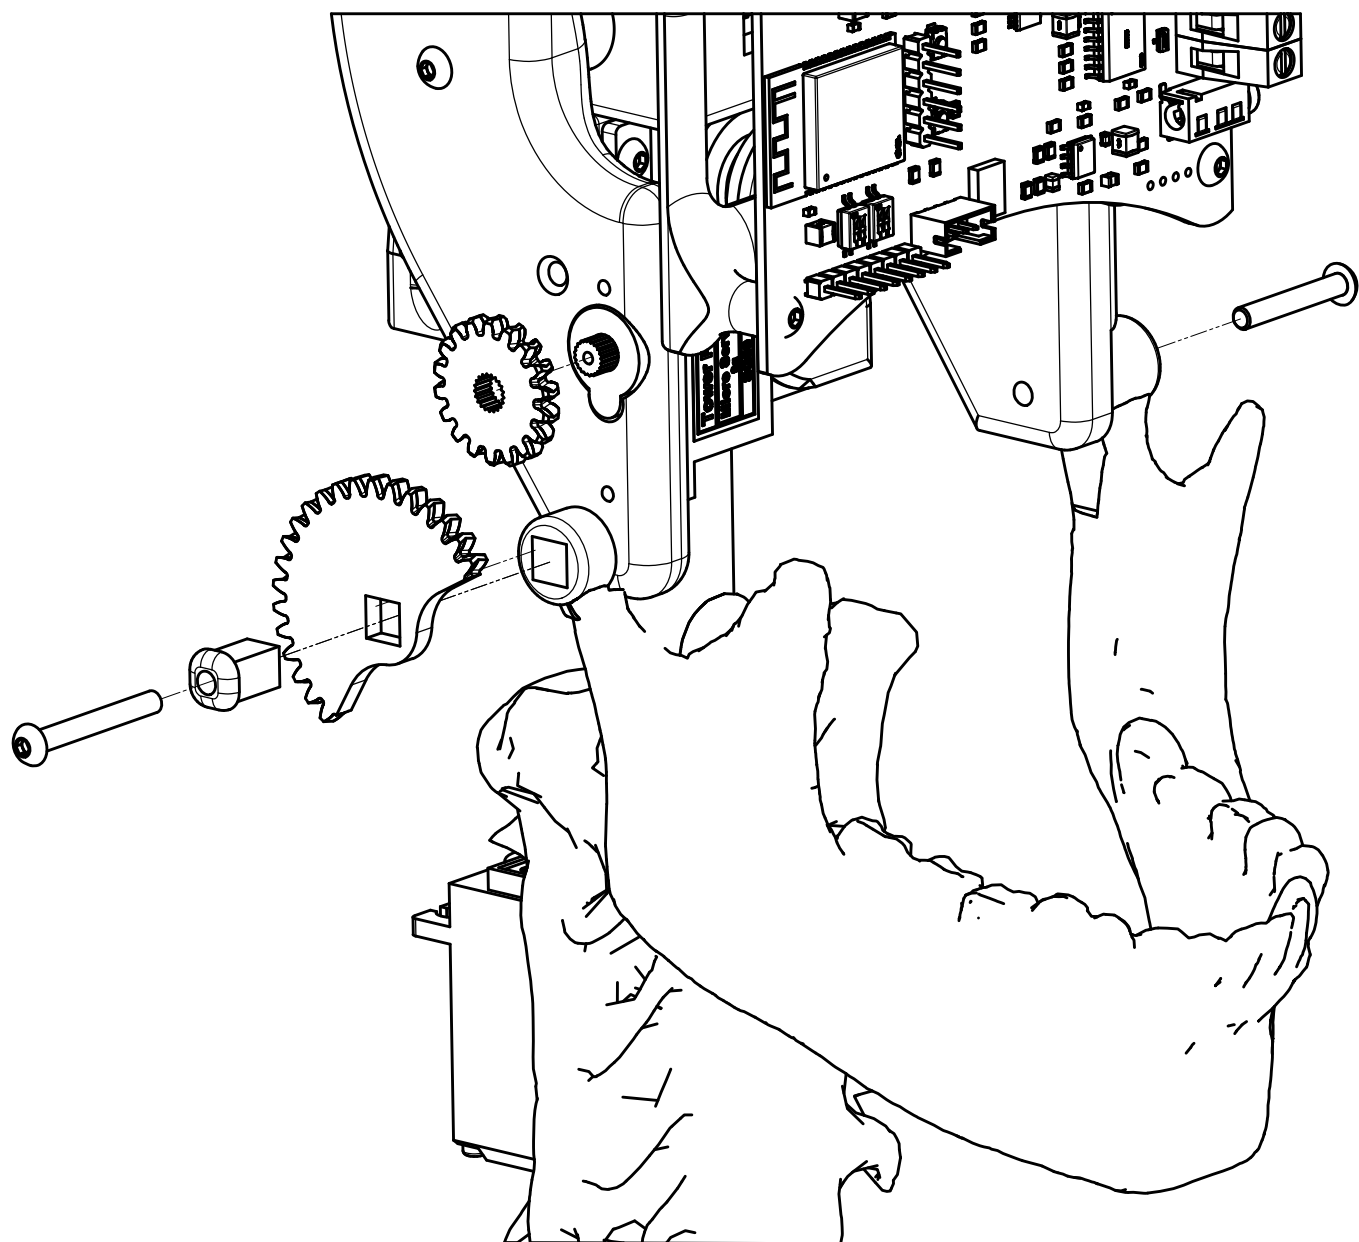

Turn the servo all the way clockwise and align the jaw so its a little past fully closed (you have to kind of anticipate the location of the rest of the skull, its better to over compensate to closed, we can aldjust the limits in the firmware later).

Item	Quantity	Part number
1	1	Main Assembly
2	1	Jaw
3	1	Servo Gear
4	1	Jaw Gear
5	1	Jaw Gear Pin
6	1	m3x25mm bolt
7	1	m3x20mm bolt


Step 10: Eye Assembly

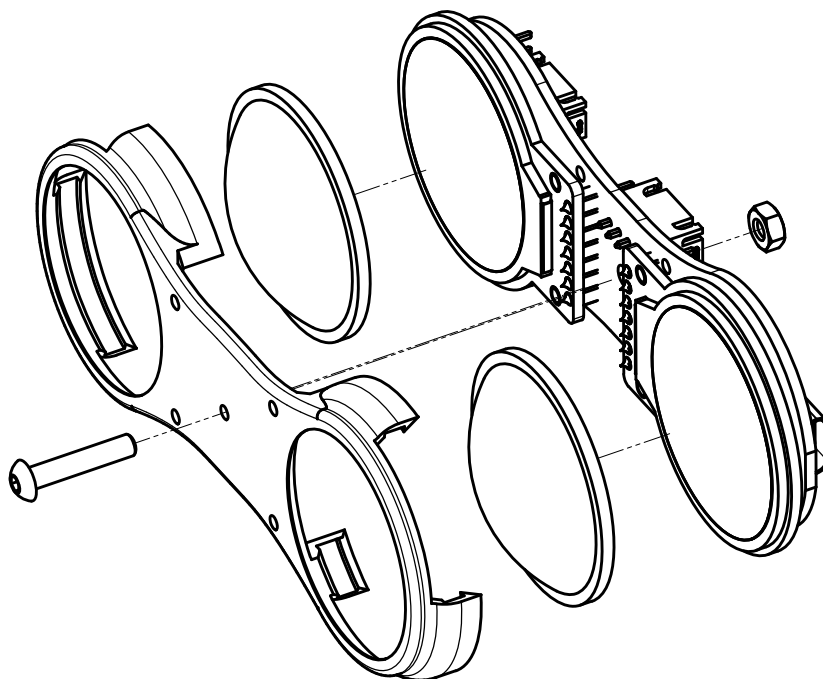

Just be mindful of the orientation of the
3D Printed frame.

Item	Quantity	Part number
1	2	34mm Lens
2	1	Lens Cover
3	1	v1.1 Deadford Manor Eye Board
4	1	m3x16mm bolt
5	1	m3 nuts

Step 11: Outer Skull Assembly

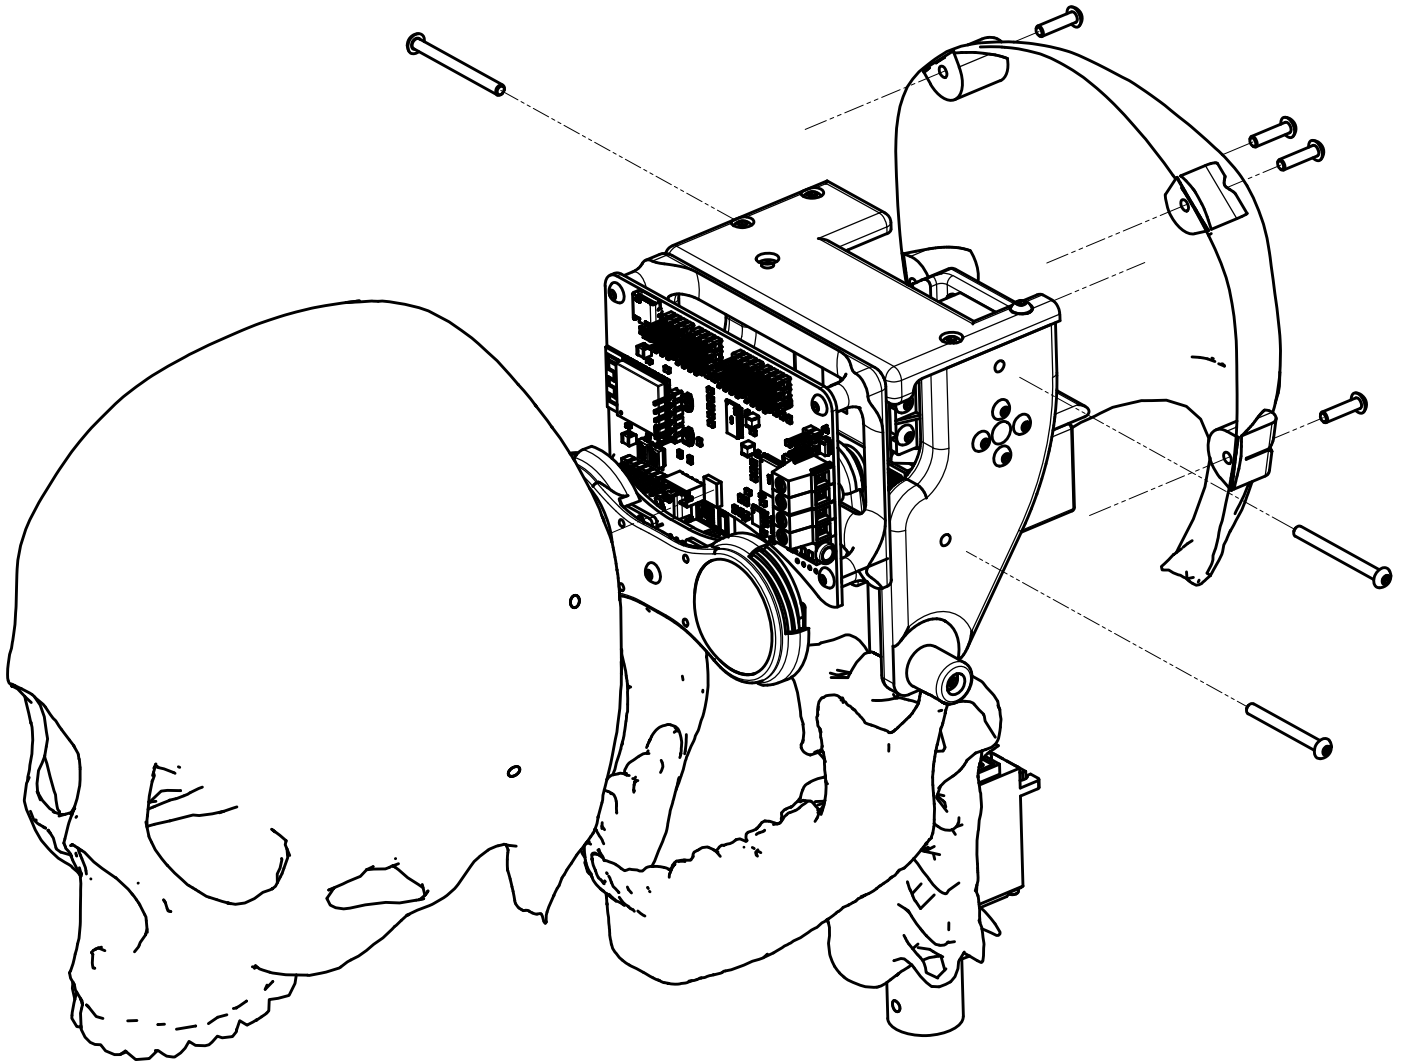



Make sure the eyes are oriented correctly, they should just snap in to the openings in the front of the skull.

Tap the holes carefully in the skull front for attaching the back.

The side screws can be adjusted slightly to adjust the lateral position of the skull as well as squeeze it slightly. Do not fully tighten any of the side screws, just get them to grab the inside and go around adjusting each one until its set well.

Item	Quantity	Part number
1	1	Main assembly
2	1	Skull front
3	1	Skull back
4	2	m3x35mm bolts
5	1	m3x30mm bolts
6	1	Eye assembly
7	4	m3x12mm bolts

Step 12: Assembly Complete

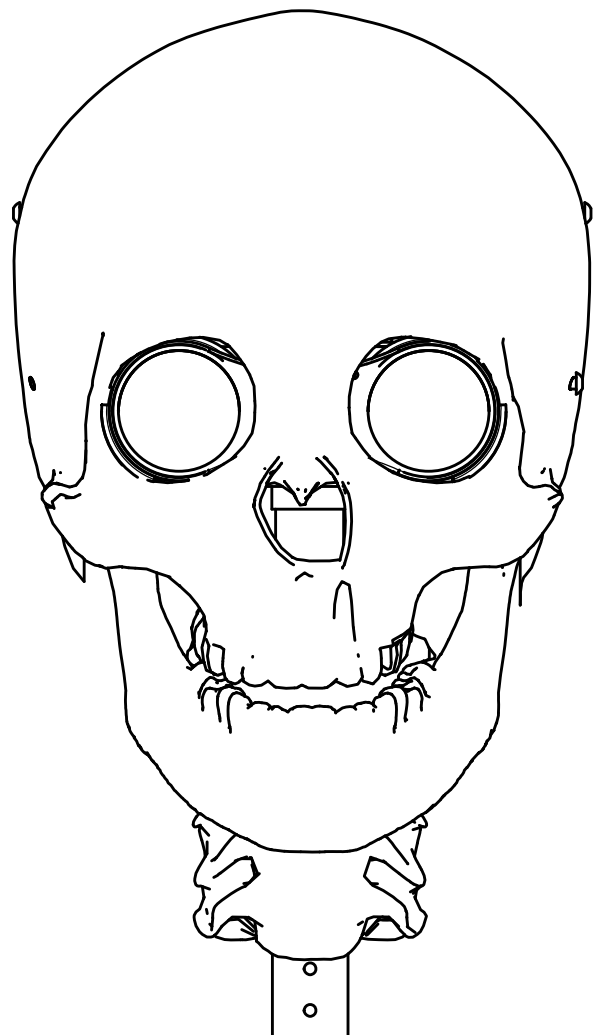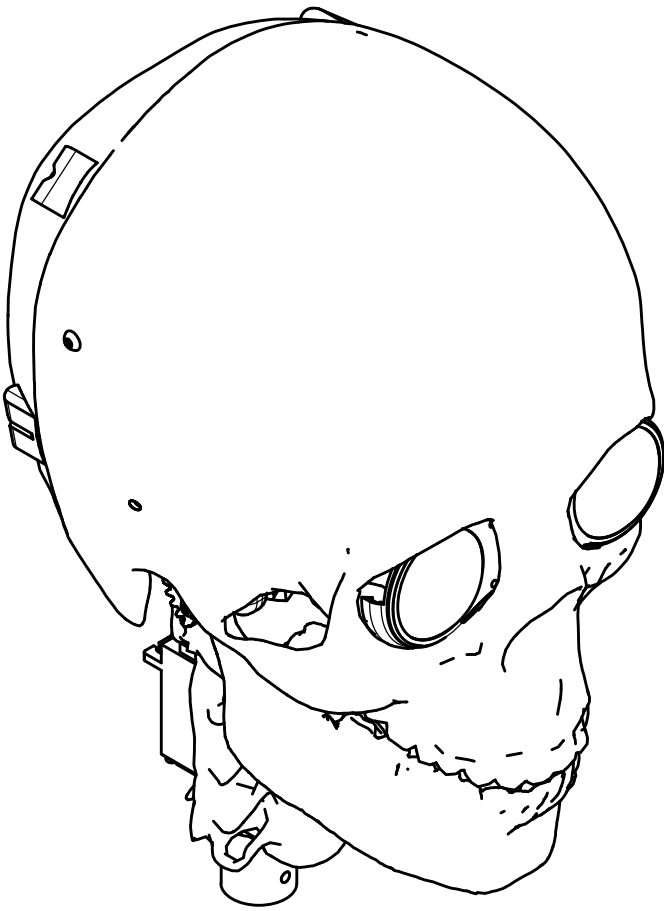

At this point, you can mount the skull to the fixture.

You should verify that all pieces can move unobstructed, final limits can be tweaked in the firmware.

Enjoy!