#X_KEY

EAO 82-6121 key switch
XH-2

J_KEY1

KEY

KEY_OUT

F_SYS1
2A PTC

VBAT_SW

VBAT_SW U1

MCP1640T-I/CHY

VBAT_SW

L1
3u3

SW

C_OUT1
22uF 25V

C_OUT2
22uF 25V

+5V

C_IN1
22uF 25V

FB

R_FB1
475k

R_FB2
24k

PWR_FLAG

VBAT_SW

PWR_FLAG

J_PWR1

PWR

#X_CARRIER

Carrier board (J_PWR1)
XH-6 to the carrier's J_PWR1

SYS

CELL1_F

USB-C input, BQ25601 charger

SYS
CHG_CE
CHG_INT
STAT
USB_DM
USB_DP
SCL_INT
SDA_INT

STM32L072 MCU, reset/boot, status LEDs

CHG_CE
CHG_INT
STAT
USB_DM
USB_DP
SCL_INT
SDA_INT
NTC1
NTC2
SW1_DRV
SW2_DRV
NRST
SWCLK
SWDIO
UART_TX
UART_RX

SDA_EXT
SCL_EXT
MON_ALERT
NTC3
NTC4
NTC_PWR
SW3_DRV
SW4_DRV

Diode-OR and 3V3 LDO

SYS
SCL_INT
SDA_INT
MON_ALERT
CELL1_F
CELL2_F
CELL3_F
CELL4_F

SCL_INT

Cell 1 branch + INA226

CELL1_F
NTC1
SW1_DRV
SCL_INT
SDA_INT
MON_ALERT
NTC_PWR

Cell 2 branch + INA226

CELL2_F
NTC2
SW2_DRV
SCL_INT
SDA_INT
MON_ALERT
NTC_PWR

Cell 3 branch + INA226

NTC3
SW3_DRV
SCL_INT
SDA_INT
MON_ALERT
NTC_PWR
CELL3_F

Cell 4 branch + INA226

NTC4
SW4_DRV
SCL_INT
SDA_INT
MON_ALERT
NTC_PWR
CELL4_F

H1
M3

H2
M3

H3
M3

H4
M3

Pack bring-up pads (SWD, UART, I2C)

J_UART1

UART

TP_SWDIO
SWDIO

TP_SWCLK
SWCLK/BOOT0

TP_NRST
NRST

TP_GND
GND

TP_SDA
SDA

TP_SCL
SCL

NTC_PWR

MON_ALERT


SDA_INT

SCL_EXT

SDA_EXT


Sheet: /		
File: pack_tme.kicad_sch		
Title: AirsoftCounter v2 pack (hand-build): system		
Size: A3	Date:	**Rev:**
KiCad E.D.A. 10.0.7		Id: 1/8

USB-C input, BQ25601 charger

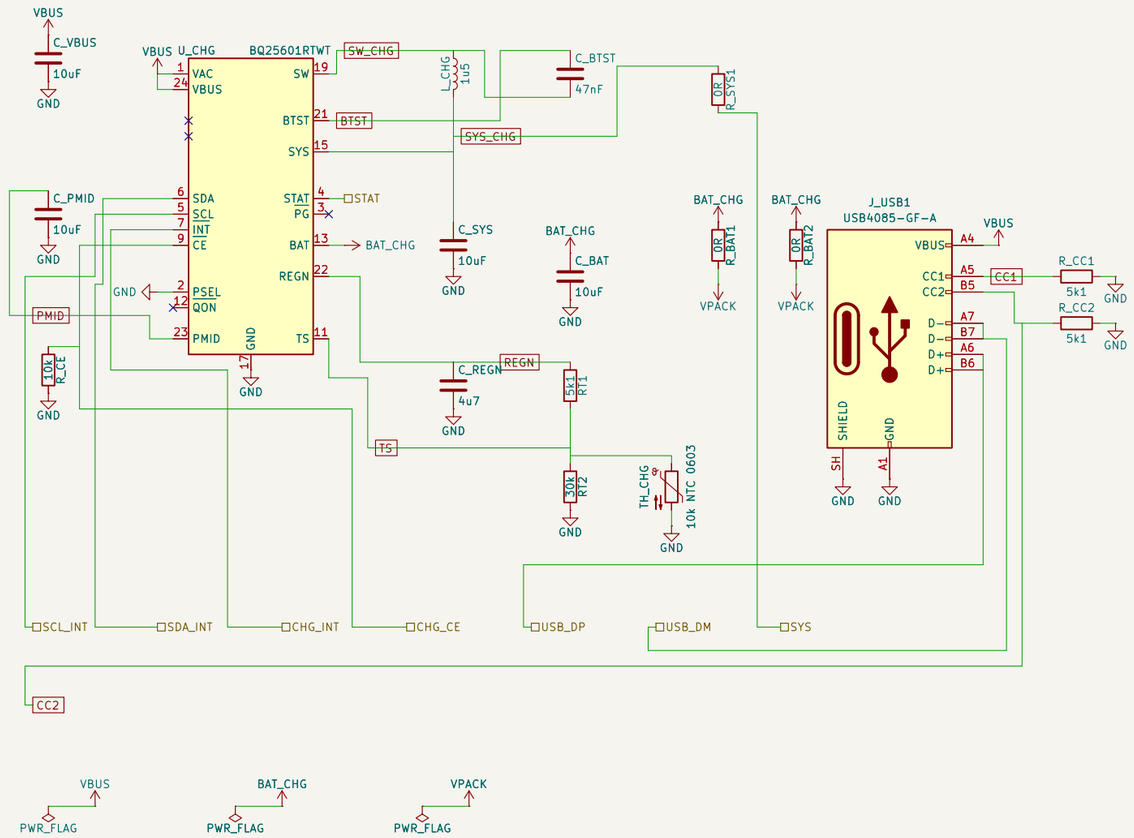

Title: AirsoftCounter v2 pack (hand-build): USB-C input, BQ25601 charger


Size: A3	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 2/8

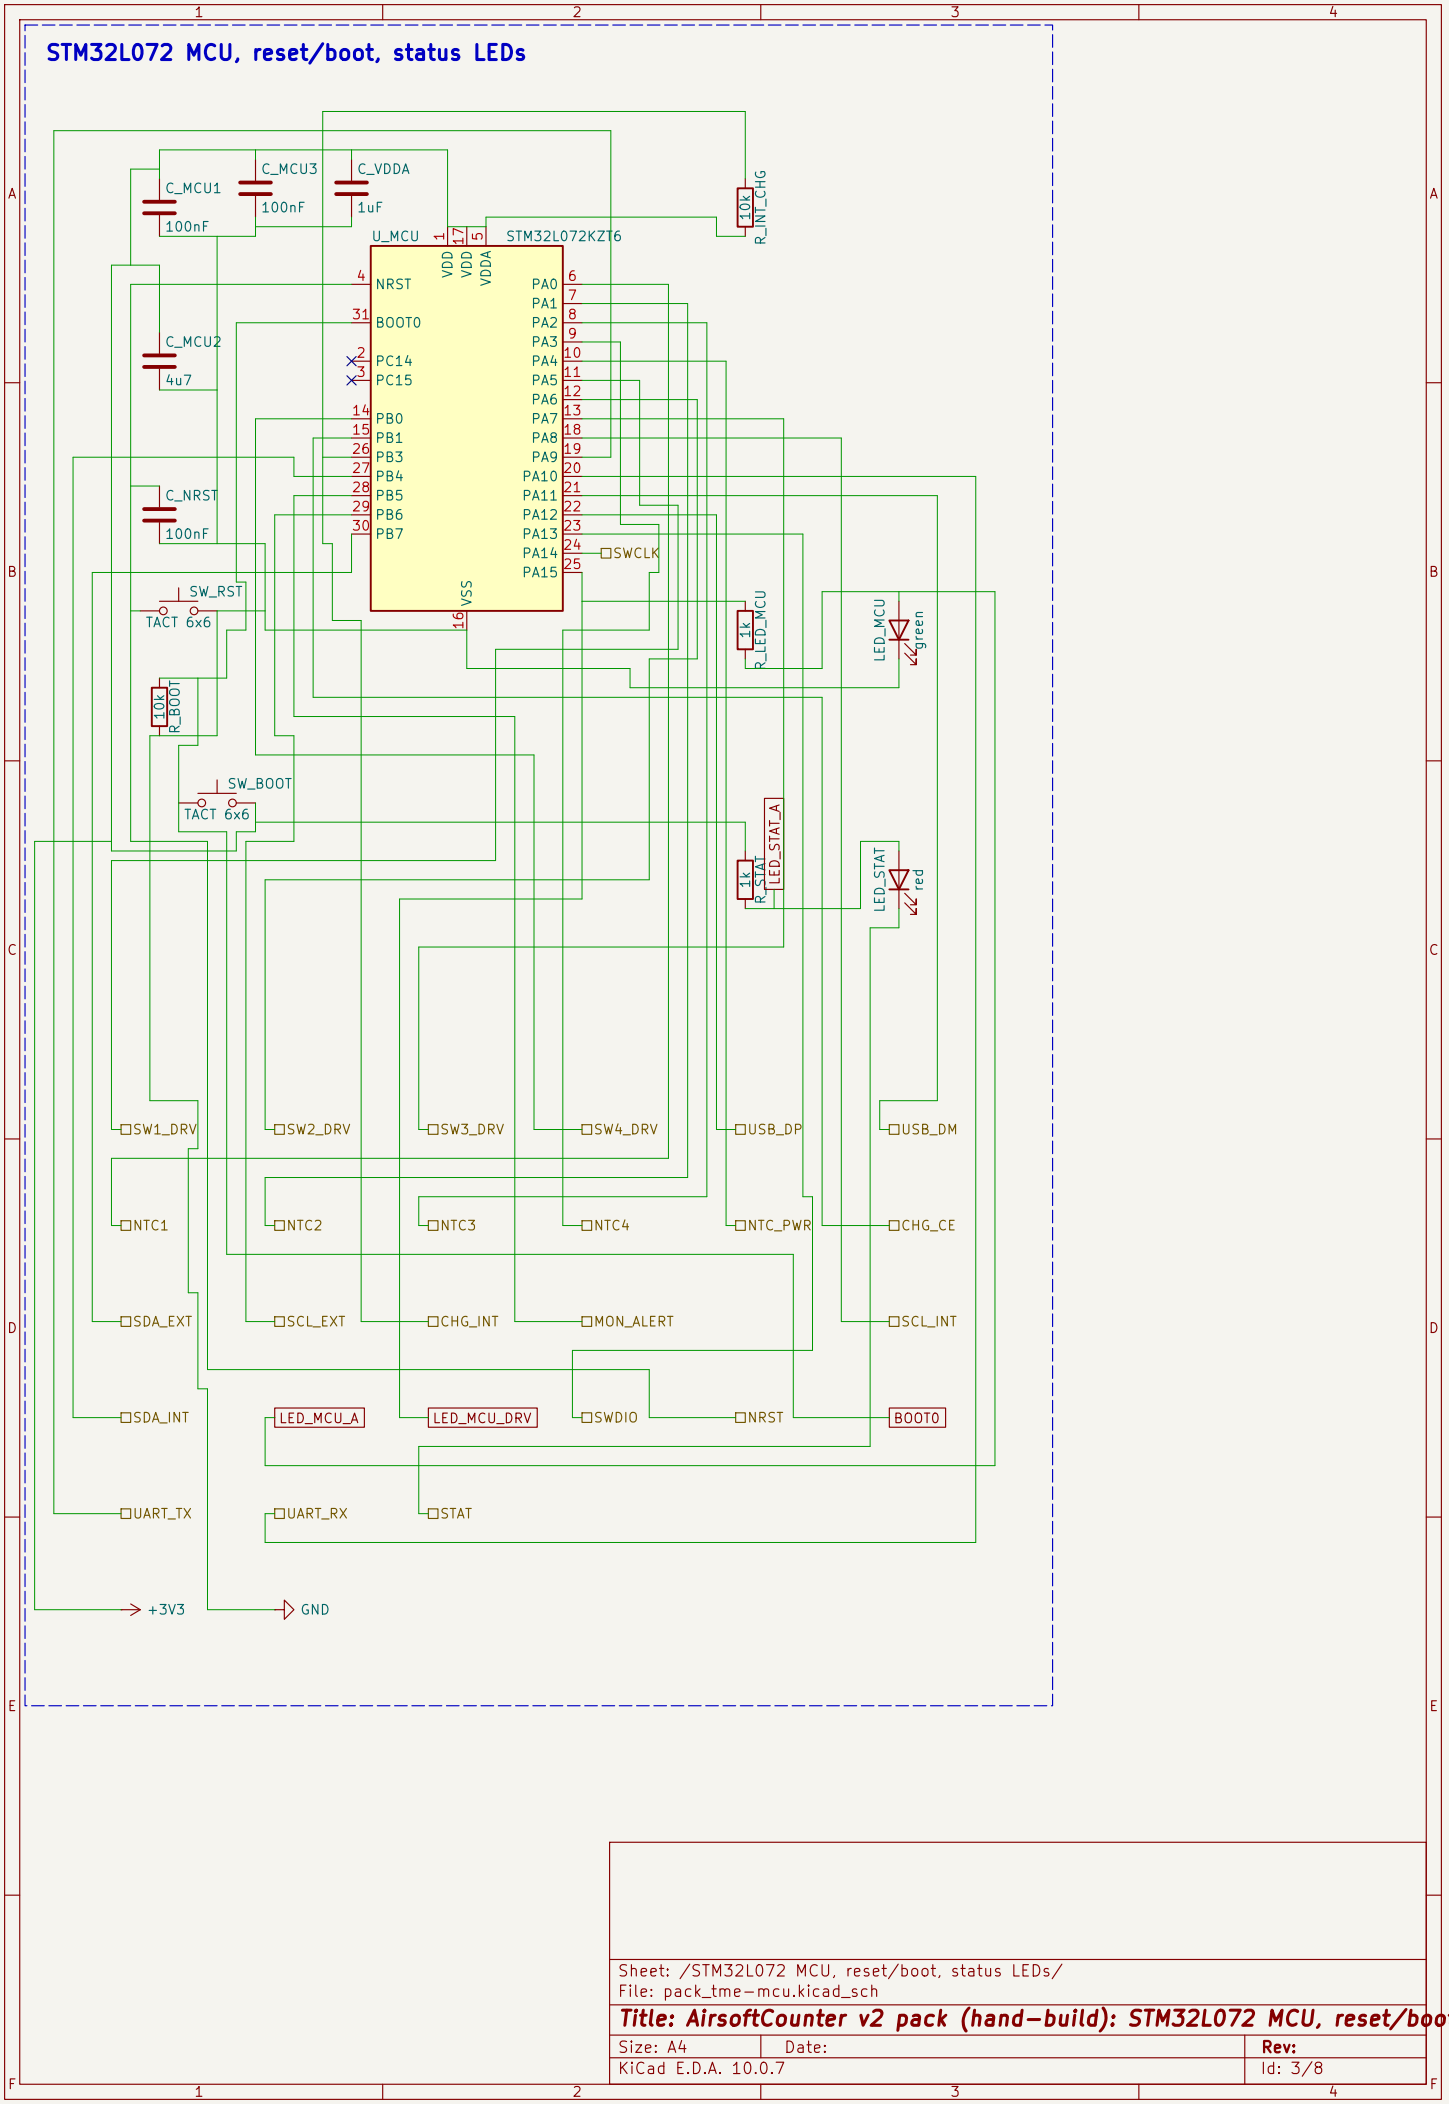


Sheet: /STM32L072 MCU, reset/boot, status LEDs/
File: pack_tme-mcu.kicad_sch

Title: AirsoftCounter v2 pack (hand-build): STM32L072 MCU, reset/boot, stat


Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 3/8

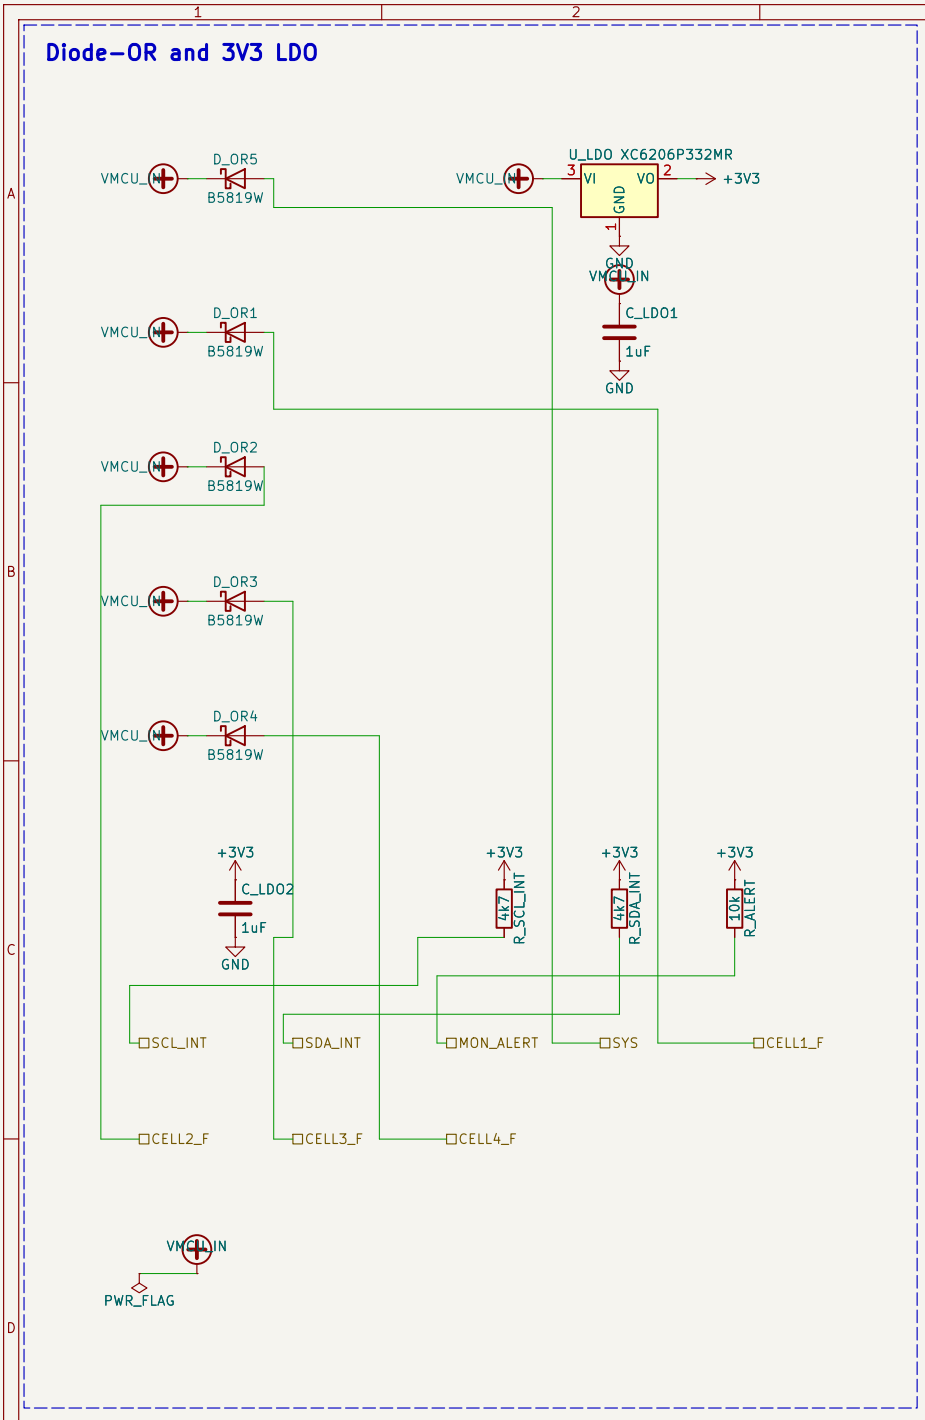


Sheet: /Diode–OR and 3V3 LDO/		
File: pack_tme–monitor.kicad_sch		
Title: AirsoftCounter v2 pack (hand–build): Diode–OR and 3V3 LDO		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.7		Id: 4/8

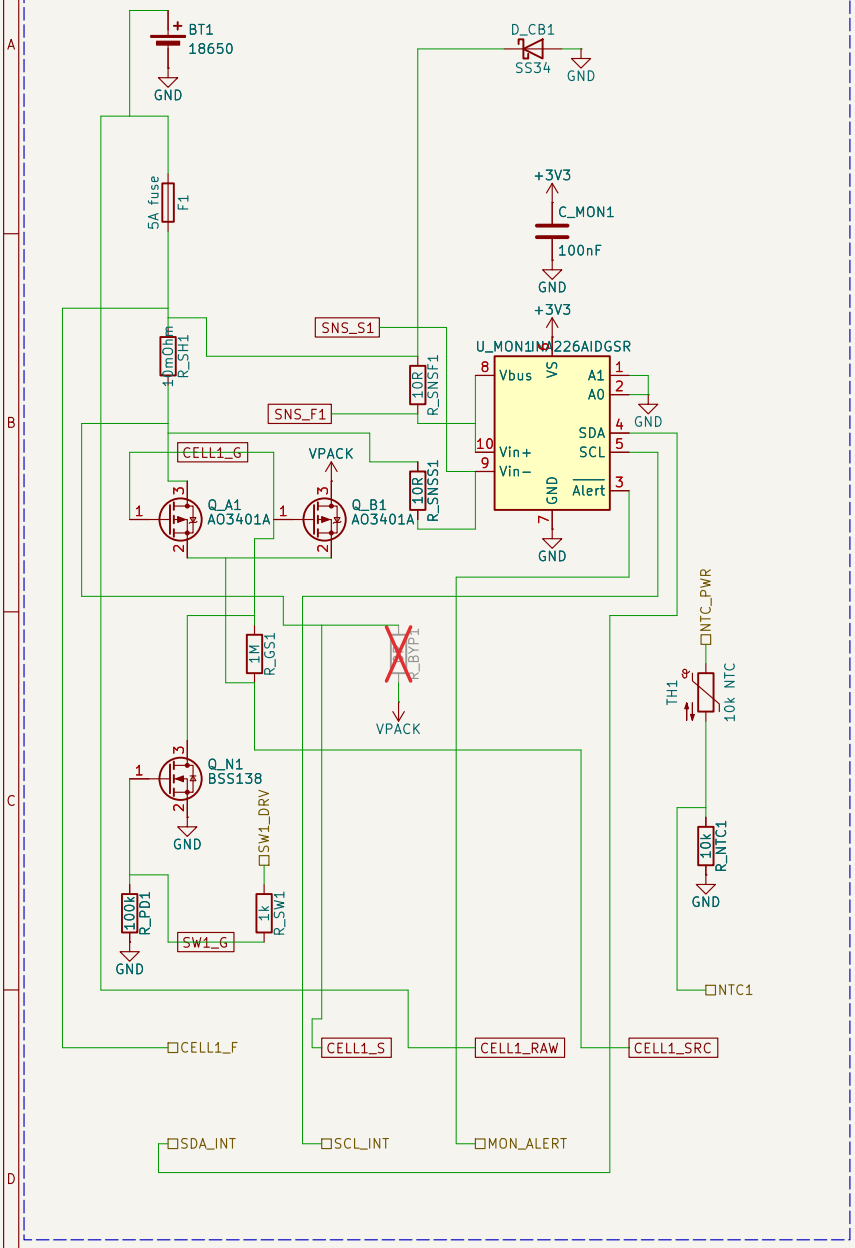


Sheet: /Cell 1 branch + INA226/		
File: pack_tme-cell1.kicad_sch		
Title: AirsoftCounter v2 pack (hand-build): Cell 1 branch + INA226		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.7		Id: 5/8

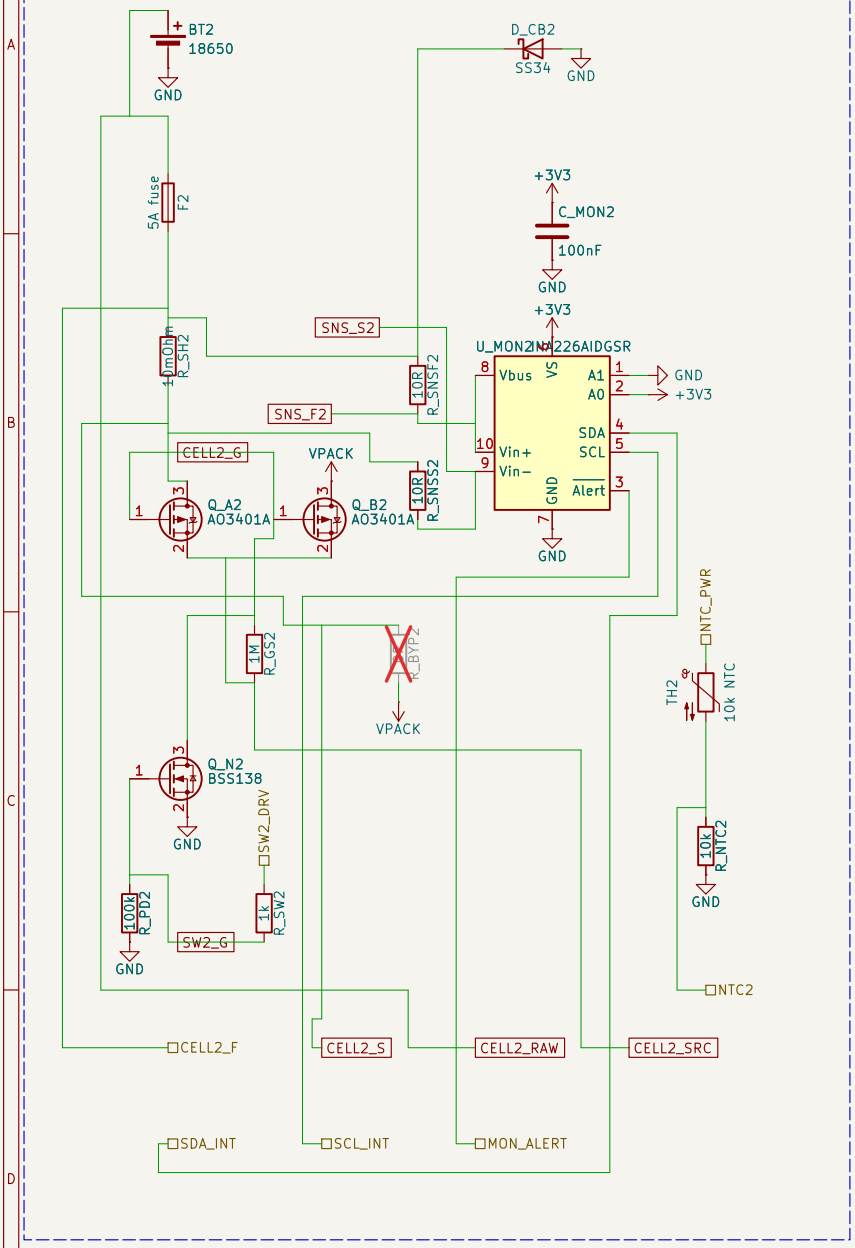

Sheet: /Cell 2 branch + INA226/		
File: pack_tme-cell2.kicad_sch		
Title: AirsoftCounter v2 pack (hand-build): Cell 2 branch + INA226		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.7		Id: 6/8

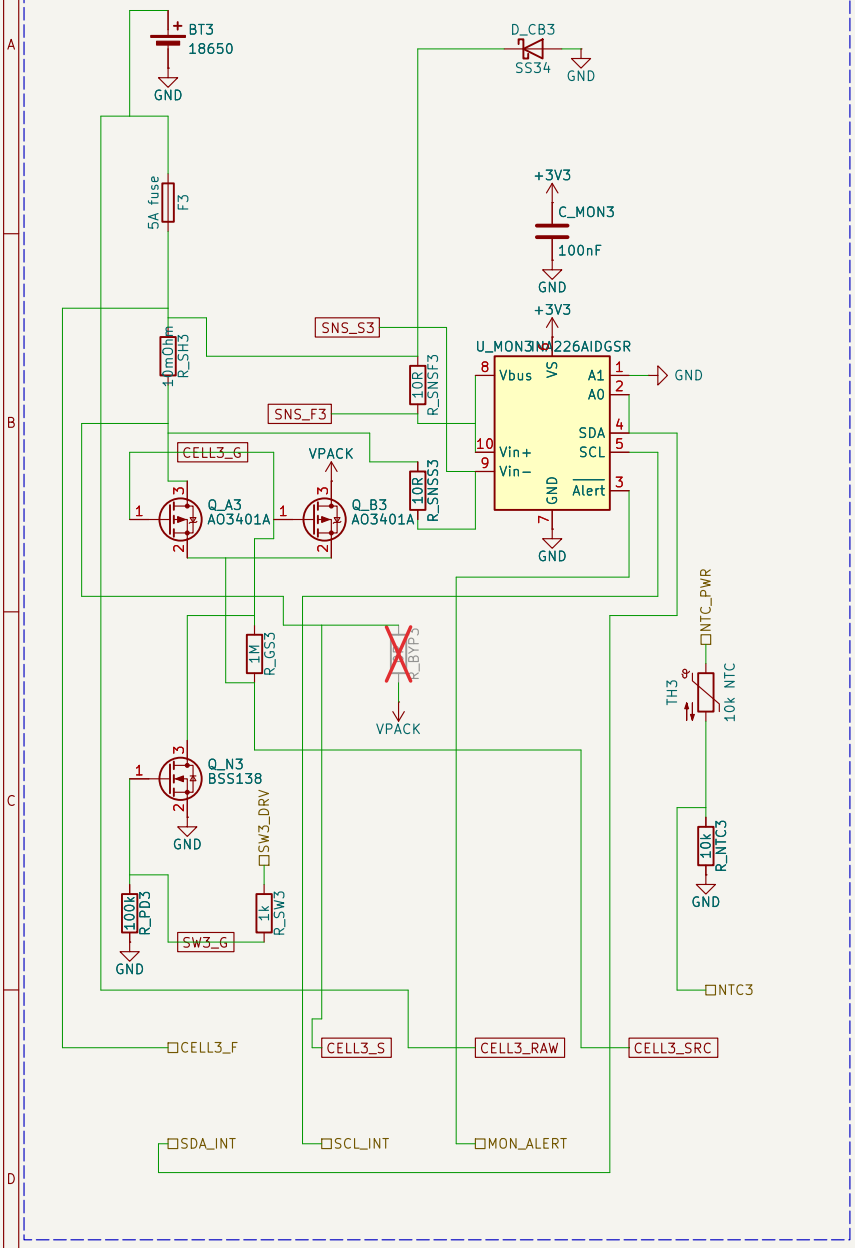

Sheet: /Cell 3 branch + INA226/		
File: pack_tme-cell3.kicad_sch		
Title: AirsoftCounter v2 pack (hand-build): Cell 3 branch + INA226		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.7		Id: 7/8

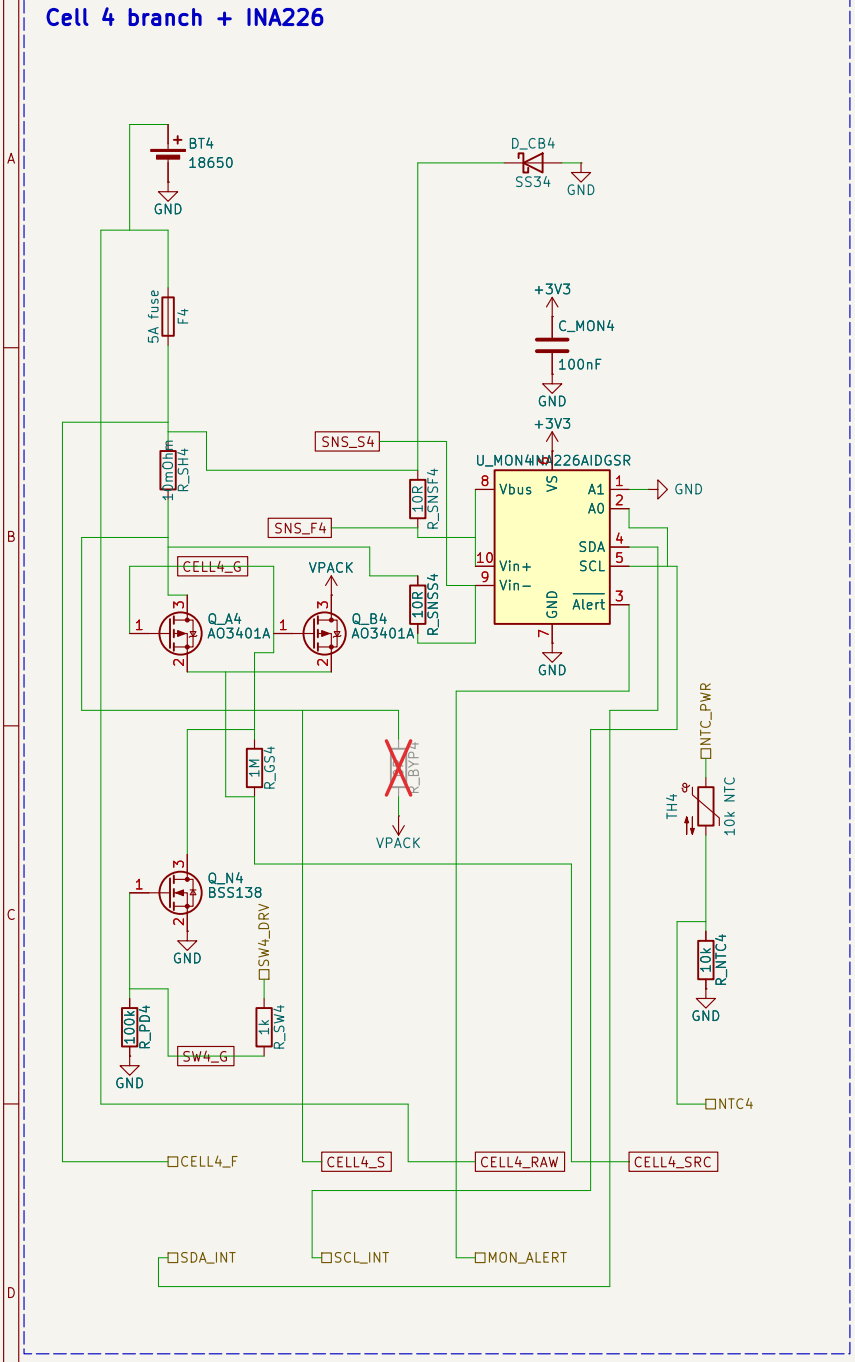

Sheet: /Cell 4 branch + INA226/		
File: pack_tme-cell4.kicad_sch		
Title: AirsoftCounter v2 pack (hand-build): Cell 4 branch + INA226		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.7		Id: 8/8